

HOW TO USE THIS MANUAL

GENERAL INFORMATION

IN00U-36

1. INDEX

An INDEX is provided on the first page of each section to guide you to the item to be repaired. To assist you in finding your way through the manual, the section title and major heading are given at the top of every page.

2. PRECAUTION

At the beginning of each section, a PRECAUTION is given that pertains to all repair operations contained in that section.

Read these precautions before starting any repair task.

3. TROUBLESHOOTING

TROUBLESHOOTING tables are included for each system to help you diagnose the problem and find the cause. The fundamentals of how to proceed with troubleshooting are described on page [IN-30](#).

Be sure to read this before performing troubleshooting.


4. PREPARATION

Preparation lists the SST (Special Service Tools), recommended tools, equipment, lubricant and SSM (Special Service Materials) which should be prepared before beginning the operation and explains the purpose of each one.

5. REPAIR PROCEDURES

Most repair operations begin with an overview illustration. It identifies the components and shows how the parts fit together.

Example:

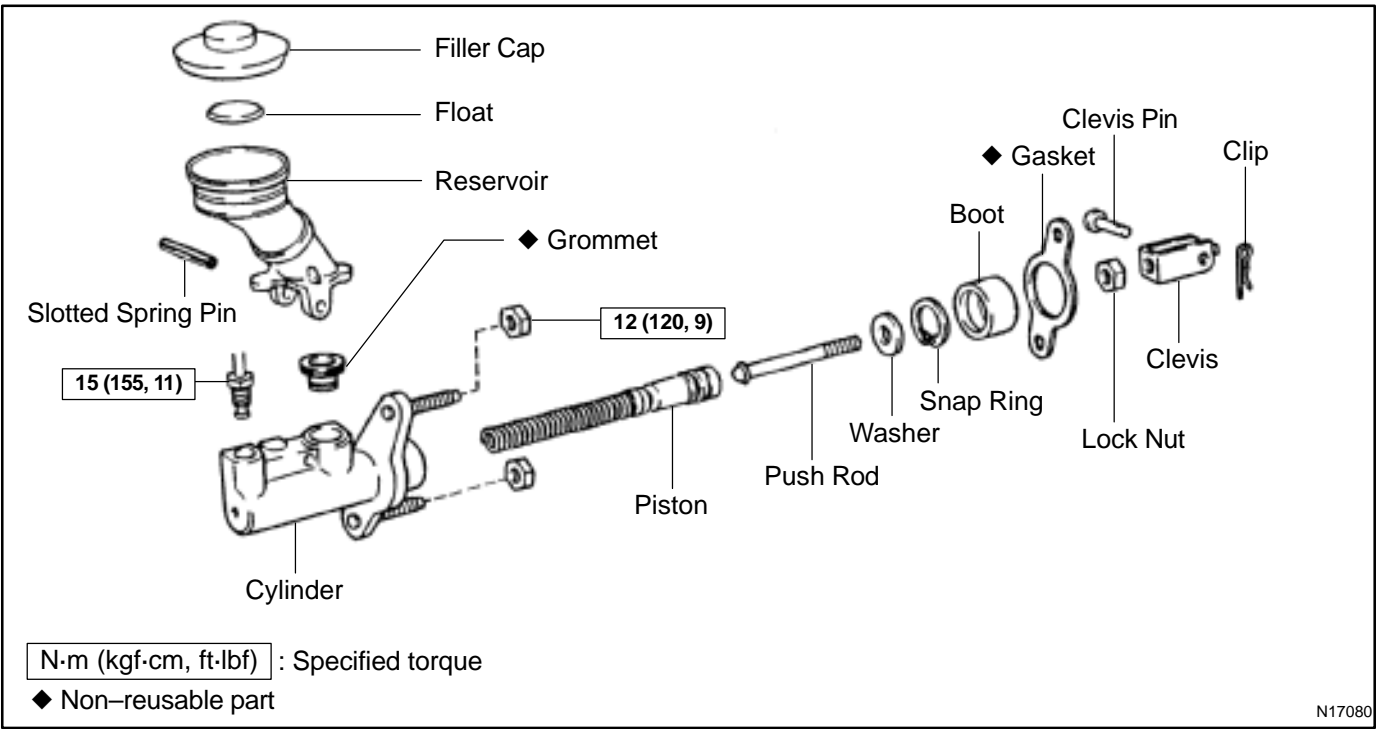

The procedures are presented in a step-by-step format:

- The illustration shows what to do and where to do it.
- The task heading tells what to do.
- The detailed text tells how to perform the task and gives other information such as specifications and warnings.

Example:

*Illustration:
what to do and where*

Task heading : what to do

21. CHECK PISTON STROKE OF OVERDRIVE BRAKE

(a) Place SST and a dial indicator onto the overdrive brake piston as shown in the illustration.

SST 09350-30020 (09350-06120)

Set part No.

Component part No.

Detailed text : how to do task

(b) Measure the stroke applying and releasing the compressed air (392 — 785 kPa, 4 — 8 kgf/cm² or 57 — 114 psi) as shown in the illustration.

Piston stroke: 1.40 — 1.70 mm (0.0551 — 0.0669 in.)

Specification

This format provides the experienced technician with a FAST TRACK to the information needed. The upper case task heading can be read at a glance when necessary, and the text below it provides detailed information. Important specifications and warnings always stand out in bold type.

6. REFERENCES

References have been kept to a minimum. However, when they are required you are given the page to refer to.

7. SPECIFICATIONS

Specifications are presented in bold type throughout the text where needed. You never have to leave the procedure to look up your specifications. They are also found in Service Specifications section for quick reference.

8. CAUTIONS, NOTICES, HINTS:

- CAUTIONS are presented in bold type, and indicate there is a possibility of injury to you or other people.
- NOTICES are also presented in bold type, and indicate the possibility of damage to the components being repaired.
- HINTS are separated from the text but do not appear in bold. They provide additional information to help you perform the repair efficiently.

9. SI UNIT

The UNITS given in this manual are primarily expressed according to the SI UNIT (International System of Unit), and alternately expressed in the metric system and in the English System.


Example:

Torque: 30 N·m (310 kgf·cm, 22 ft·lbf)

IDENTIFICATION INFORMATION

VEHICLE IDENTIFICATION AND ENGINE AND MOTOR SERIAL NUMBER


IN0HK-02

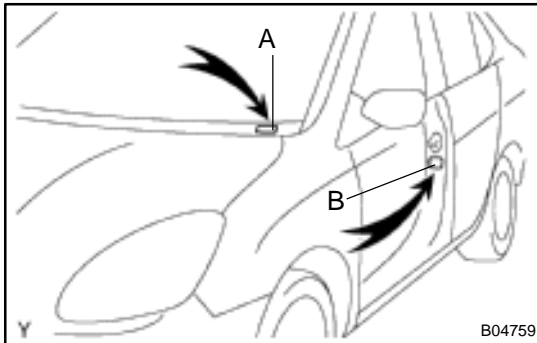

1. VEHICLE IDENTIFICATION NUMBER

The vehicle identification number is stamped on the vehicle identification number plate and the certification label, as shown in the illustration.


- A: Vehicle Identification Number Plate
B: Certification Label

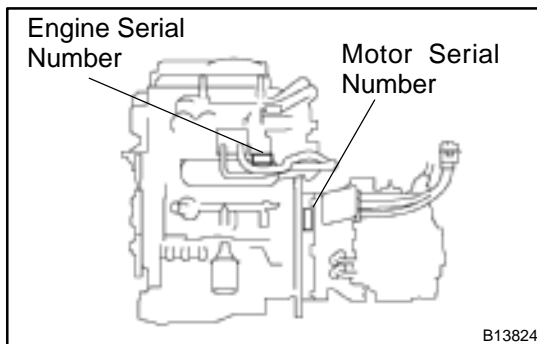

2. ENGINE AND MOTOR SERIAL NUMBER

- (a) The engine serial number is stamped on the engine block, as shown in the illustration.
- (b) The motor serial numbers is stamped, as shown in the illustration.

cardiagn.com

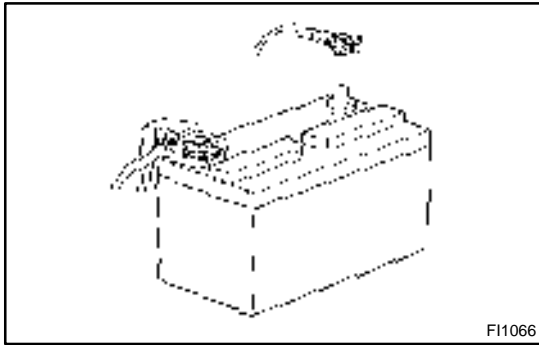


REPAIR INSTRUCTIONS

GENERAL INFORMATION

INOCO-17

BASIC REPAIR HINT

- (a) Use fender, seat and floor covers to keep the vehicle clean and prevent damage.
- (b) During disassembly, keep parts in the appropriate order to facilitate reassembly.
- (c) Installation and removal of battery terminal:
 - (1) Before performing electrical work, disconnect the negative (-) terminal cable from the battery.
 - (2) If it is necessary to disconnect the battery for inspection or repair, first disconnect the negative (-) terminal cable.
 - (3) When disconnecting the terminal cable, to prevent damage to battery terminal, loosen the cable nut and raise the cable straight up without twisting or prying it.
 - (4) Clean the battery terminals and cable ends with a clean shop rag. Do not scrape them with a file or other abrasive objects.
 - (5) Install the cable ends to the battery terminals after loosening the nut, and tighten the nut after installation. Do not use a hammer to tap the cable ends onto the terminals.
 - (6) Be sure the cover for the positive (+) terminal is properly in place.
- (d) Check hose and wiring connectors to make sure that they are connected securely and correctly.
- (e) Non-reusable parts
 - (1) Always replace cotter pins, gaskets, O-rings, oil seals, etc. with new ones.
 - (2) Non-reusable parts are indicated in the component illustrations by the "◆" symbol.

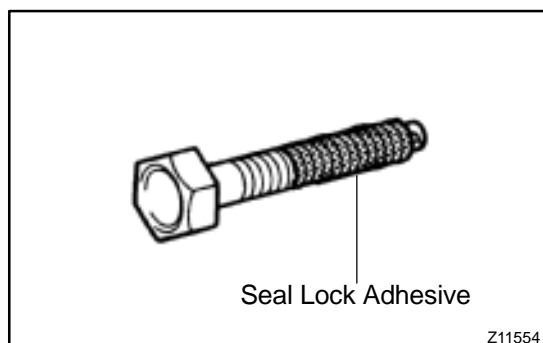


- (f) Precoated parts

Precoated parts are bolts, nuts, etc. that are coated with a seal lock adhesive at the factory.

 - (1) If a precoated part is retightened, loosened or caused to move in any way, it must be recoated with the specified adhesive.
 - (2) When reusing precoated parts, clean off the old adhesive and dry with compressed air. Then apply the specified seal lock adhesive to the bolt, nut or threads.





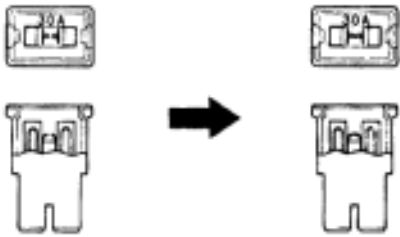





- (3) Precoated parts are indicated in the component illustrations by the "★" symbol.
- (g) When necessary, use a sealer on gaskets to prevent leaks.
- (h) Carefully observe all specifications for bolt tightening torques. Always use a torque wrench.
- (i) Use of special service tools (SST) and special service materials (SSM) may be required, depending on the nature of the repair. Be sure to use SST and SSM where specified and follow the proper work procedure. A list of SST and SSM can be found in Preparation section in this manual.

Medium Current Fuse and High Current Fuse
Equal Amperage Rating





BE1367


- (j) When replacing fuses, be sure the new fuse has the correct amperage rating. DO NOT exceed the rating or use one with a lower rating.

Illustration	Symbol	Part Name	Abbreviation
 BE5594	 IN0365	FUSE	FUSE
 BE5595	 IN0366	MEDIUM CURRENT FUSE	M-FUSE
 BE5596	 IN0367	HIGH CURRENT FUSE	H-FUSE
 BE5597	 IN0367	FUSIBLE LINK	FL
 BE5598	 IN0368	CIRCUIT BREAKER	CB

- (k) Care must be taken when jacking up and supporting the vehicle. Be sure to lift and support the vehicle at the proper locations (See page [IN-8](#)).
- Cancel the parking brake on the pedal plate and shift the transmission in N position.
 - When jacking up the front wheels of the vehicle at first place stoppers behind the rear wheels.
 - When jacking up the rear wheels of the vehicle at first place stoppers before the front wheels.
 - When either the front or rear wheels only should be jacked up, set rigid racks and place stoppers in front and behind the other wheels on the ground.
 - After the vehicle is jacked up, be sure to support it on rigid racks. It is extremely dangerous to do any work on a vehicle raised on a jack alone, even for a small job that can be finished quickly.
- (l) Observe the following precautions to avoid damage to the following parts:
- (1) Do not open the cover or case of the ECU unless absolutely necessary. (If the IC terminals are touched, the IC may be destroyed by static electricity.)

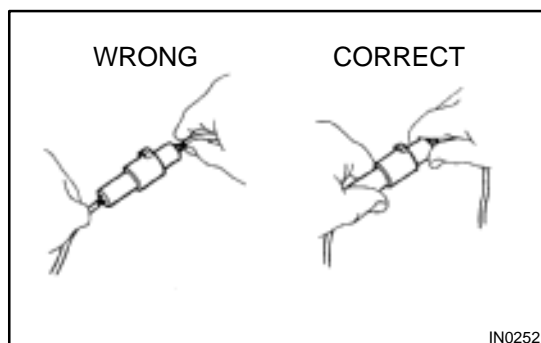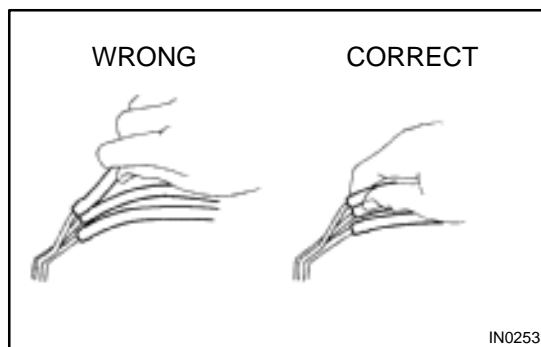

- (2) To disconnect vacuum hoses, pull off the end, not the middle of the hose.
- (3) To pull apart electrical connectors, pull on the connector itself, not the wires.
- (4) Be careful not to drop electrical components, such as sensors or relays. If they are dropped on a hard floor, they should be replaced and not reused.
- (5) When steam cleaning an engine, protect the electronic components, air filter and emission-related components from water.
- (6) Never use an impact wrench to remove or install temperature switches or temperature sensors.
- (7) When checking continuity at the wire connector, insert the tester probe carefully to prevent terminals from bending.
- (8) When using a vacuum gauge, never force the hose onto a connector that is too large. Use a step-down adapter for adjustment. Once the hose has been stretched, it may leak air.

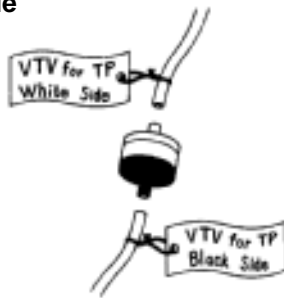
Example

IN0002

- (m) Installation and removal of vacuum hose:
 - (1) When disconnecting vacuum hoses, use tags to identify how they should be reconnected to.
 - (2) After completing a job, double check that the vacuum hoses are properly connected. A label under the hood shows the proper layout.
- (n) Bleeding of hydraulic brake booster system:

When repairing the hydraulic brake booster or ABS, bleeding the air out of the hydraulic brake booster (See page [BR-4](#)).
- (o) Unless otherwise stated, all resistance is measured at an ambient temperature of 20°C (68°F). Because the resistance may be outside specifications if measured at high temperatures immediately after the vehicle has been running, measurement should be made when the engine has cooled down.

VEHICLE LIFT AND SUPPORT LOCATIONS

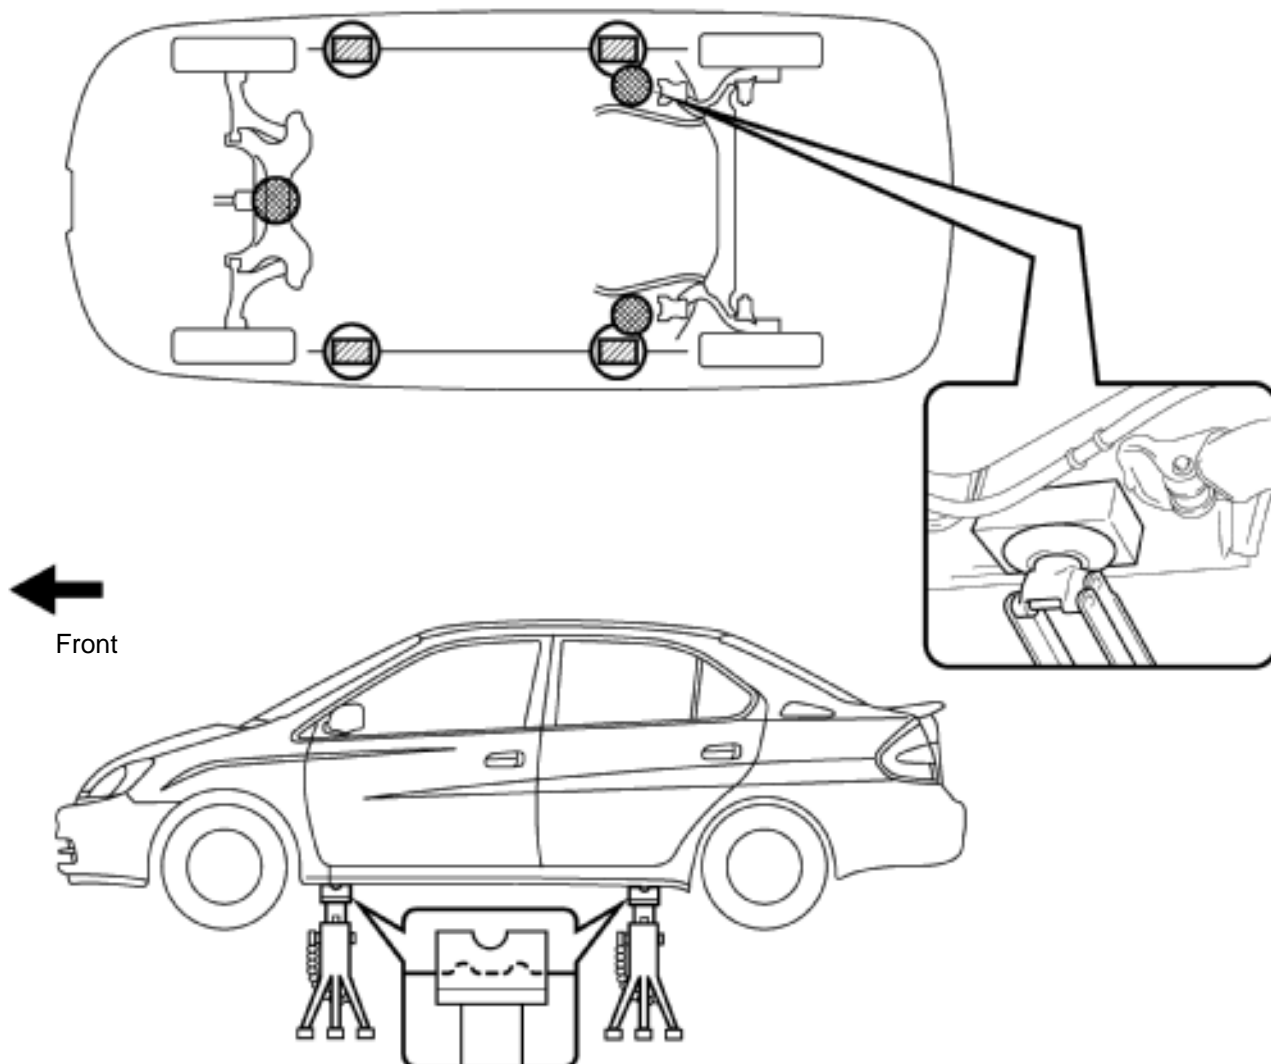

JACK POSITION

Front..... Front crossmember
 Rear..... Body (Position shown in the illustration)


CAUTION :

- When jacking-up the front and rear, make sure the vehicle is not carrying any extra weight.
- Do not position the jack at the center of the rear axle beam.

PANTOGRAPH JACK POSITION

SUPPORT POSITION

Safety stand and swing arm type lift.....

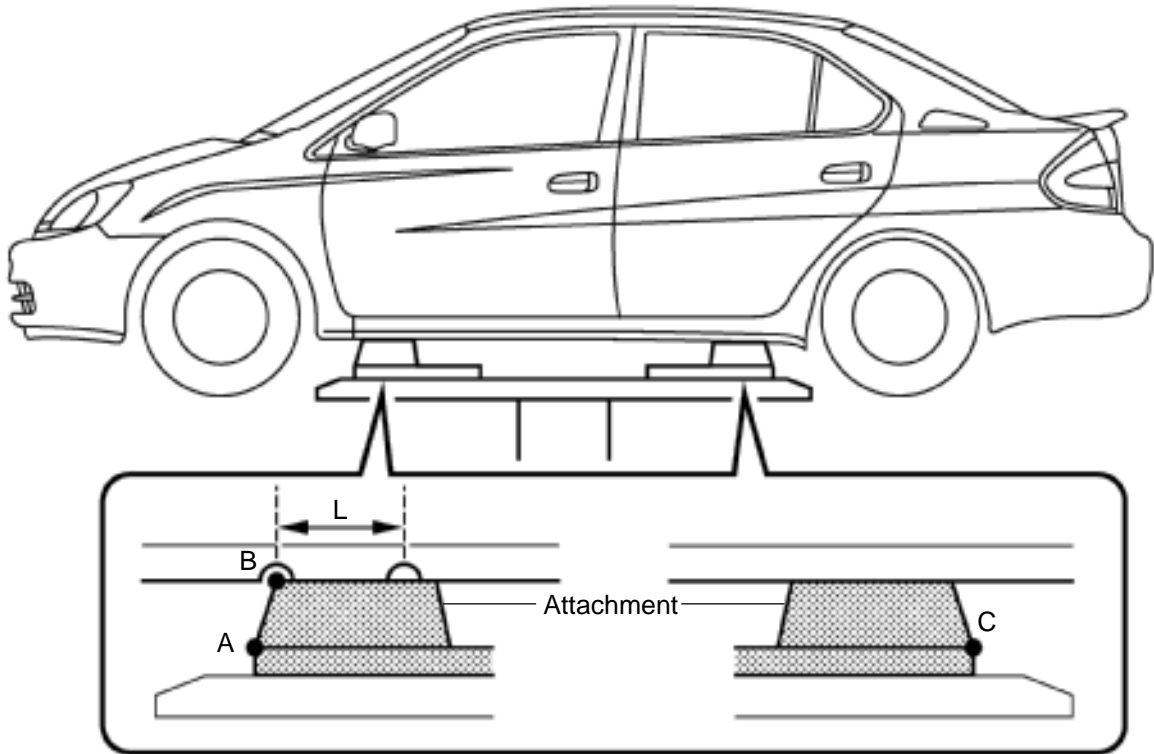PLATE TYPE LIFT**HINT :**


Left and right set position

Front and rear set position

Place the vehicle over the center of the lift.

- Align the cushion gum ends of the plate with the attachment lower ends (A, C).
- Align the attachment upper end (B) with the front jack supporting point (L).

Attachment dimensions

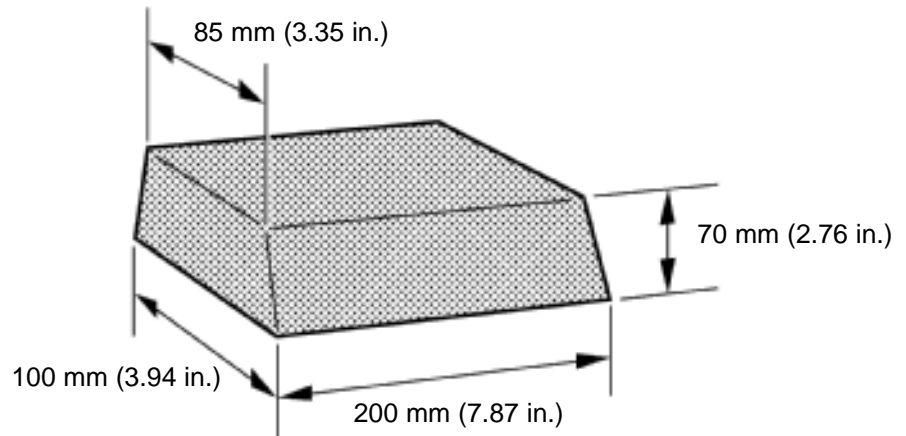

N


B04755

FOR ALL OF VEHICLES PRECAUTION

IN0HO-01

1. PRECAUTIONS FOR HIGH-VOLTAGE CIRCUIT INSPECTION AND SERVICE


- (a) Engineers to be engaged in inspection and servicing related to high-voltage systems should undergo special training.
- (b) All the high-voltage wire harness connectors are colored orange: the HV battery and other high-voltage components are identified by the "High Voltage" caution labels. Do not carelessly touch these wires and components.

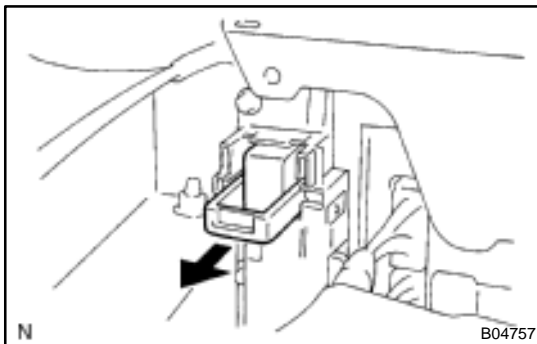

- (c) Before inspecting or servicing the high-voltage system, be sure to take measures such as wearing insulated gloves and removing the service plug to prevent electrocution. Carry the removed service plug in your pocket to prevent other technicians from reinstalling it while you are servicing the vehicle.
- (d) After removing the service plug, wait 5 minutes before touching any of the high-voltage connectors and terminals.

HINT:

The 5 minutes are required to discharge the high-voltage condenser inside the inverter.

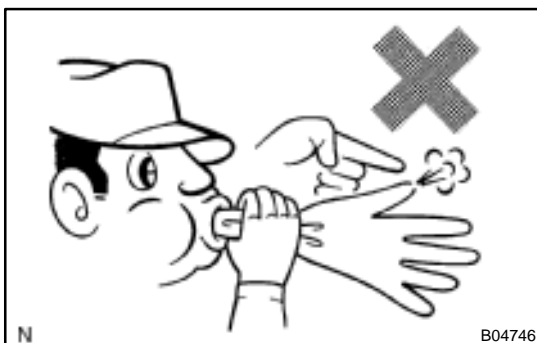

- (e) Before wearing insulated gloves, make sure that they are not cracked, ruptured, torn, or damaged in any other way. Do not wear wet insulated gloves.
- (f) When servicing the vehicle, do not wear a metal object like a mechanical pencil or scale that may drop accidentally and cause a short circuit.
- (g) Before touching a bare high-voltage terminal, wear insulated gloves and ensure that the terminal is not charged with electricity (approx. 0 V) using an electrical tester.



- (h) After disconnecting or exposing a high-voltage connector or terminal, insulate it immediately using insulation tape.
- (i) The screw of a high-voltage terminal should be tightened firmly to the specified torque. Both insufficient and excessive tightening torque can cause failure.
- (j) Call other engineers' attention to the vehicle which high-voltage system is being inspected or repaired by hanging a "High Voltage Operation in Progress. Do Not Touch" sign (See the next page).
- (k) After servicing the high-voltage system and before reinstalling the service plug, check again that you have not left a part or tool inside, that the high-voltage terminal screws are firmly tightened, and that the connectors are correctly engaged.

**CAUTION:
HIGH VOLTAGE. DO
NOT TOUCH DURING
OPERATION.**

Person in charge: _____

**CAUTION:
HIGH VOLTAGE. DO
NOT TOUCH DURING
OPERATION.**

Person in charge: _____

Copy this page and put it after folding on the roof of the vehicle in service.

B12120



Before inspecting or servicing the engine compartment, therefore, remove the ignition switch key.



3. ACTIONS TO BE TAKEN WHEN BATTERIES ARE DEPLETED

The following phenomena indicate that the auxiliary battery is depleted:

- No display appears on the instrument panel when you turn the ignition switch to the ON position.
- The hybrid system does not start.
- The headlights are dark.
- The sound from the horn is weak.

Never use a quick charger.

- (1) Move the shift lever to the P position, and engage the parking brake.
- (2) Remove the ignition key plate from the ignition switch.

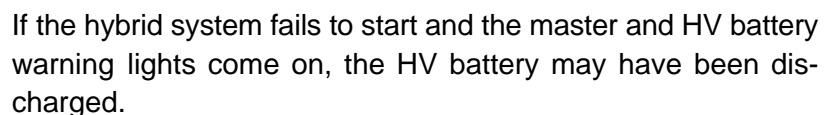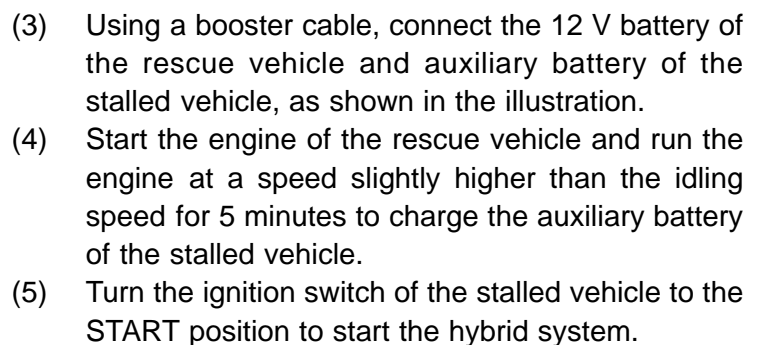

- (6) Disconnect the booster cable in the reverse way of the connection procedure.

If the auxiliary battery needs to be replaced, replace it only with a 12 V battery specially designed for the use of the PRIUS.

(b) Actions to be taken when HV battery is depleted

NOTICE:

Leaving a vehicle alone for 2 – 3 months may cause electric discharge from HV battery.

When this happens, replace the HV battery.


4. INSPECTION MODE

HINT:

- The PRIUS automatically stops the engine while the vehicle is stopped with the engine warmed up and battery well charged if the A/C compressor operation is not required. Therefore, even if the vehicle stops for any reason such as a check of ignition timing, the inspection mode should be activated when continuous operation of the engine is required.
- The PRIUS has a skid control as traction control function. When the wheel speed of the front wheels exceeds that of the rear wheels, this function restrains the wheel speed of the front wheels. It is necessary to activate the inspection mode and reset the skid control when turning only the front wheels using a speedometer tester.

Activation inspection mode (Without using a hand-held tester)

- (1) Perform the following (2) through (6) within 60 sec.
- (2) Turn the ignition switch ON from OFF.
- (3) With the shift lever in P position, fully depress the accelerator pedal 2 times.
- (4) With the shift lever in N position, fully depress the accelerator pedal 2 times.
- (5) With the shift lever in P position, fully depress the accelerator pedal 2 times.
- (6) Activate the inspecting mode and check that the hybrid system error warning light on the multi-center display flashes.
- (7) Turning the ignition switch to START starts the engine's continuous operation.

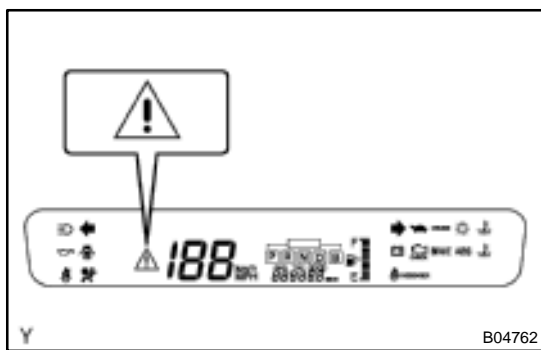

NOTICE:

- The idling speed in the inspection mode is approx. 1,000 rpm. The number of revolutions will increase up to 1,500 rpm if the accelerator pedal is depressed to a degree of less than 60%, and up to 2,250 rpm in a case of 60% or more.
- If a diagnosis code is recorded when entering the inspection mode, the master warning light and the error warning light on the multi-center display is lit.

- **When the master warning light is lit during operation in the inspection mode, deactivate the inspection mode and inspect the diagnosed area.**

HINT:

When continuous operation of the engine is required for such as an exhaust leakage inspection, it is advisable as an easier way to turn ON the FULL switch of the air conditioner.

5. SPECIAL NOTES FOR VEHICLE INSPECTION**(a) Vehicle conditions**

- (1) Before activating the service mode, turn the air conditioner off, start the engine with the shift lever at P position, and check that the engine stops within several seconds after starting. (Engine warm up check)
- (2) Activate the service mode and inspect the vehicle. The shift position for each test is as follows:

Test item	Shift lever position
1. Vehicle straight traveling test (side slip inspection)	D
2. Braking force test	N
3. Speedometer test	D
4. Exhaust gas test (idling)	P
5. Headlight test	P

- (3) Reset the service mode immediately after completion of inspection.

NOTICE:

Traveling on a road without resetting the service mode may damage the transaxle.

(b) Special notes for speedometer test**NOTICE:**

Rapid starting or quick acceleration/deceleration based on the speedometer tester without load setting may damage the transaxle.

- (1) Depress the accelerator pedal slowly and gradually accelerate at the time of measurement.
 - (2) After the measurement, use the brake to decelerate gradually and stop.
- (c) Special note for using the chassis dynamometer**
Always set an appropriate load before starting the test.

NOTICE:


Rapid starting or quick acceleration/deceleration with insufficient load may damage the transaxle.

6. ACTIONS TO BE TAKEN FOR VEHICLE DAMAGED BY IMPACT


- (a) Items to be prepared (For operation at the site of accident)
- Protective clothing (Insulated gloves, rubber gloves, goggles, and safety shoes)
 - Saturated boric acid solution 20 L (Procure 800 g of boric acid powder, put it into a container, and dissolve it in water.)
 - Red litmus paper
 - ABC fire extinguisher (Applicable to both oil flames and electrical flames)
 - Waste rags or old towels (For wiping off the electrolyte)
 - Vinyl tape (For insulating cable)
 - Electrical tester
- (b) Actions to be taken at the place of accident
- (1) Wear insulated or rubber gloves, goggles and safety shoes.
 - (2) Do not touch a bare cable that could be a high-voltage cable. If you need to touch it, or if you have a danger of making an accidental contact, wear insulated gloves, measure the voltage between the cable and body ground using an electrical tester, and insulate the cable using vinyl tape.
 - (3) If the vehicle catches fire, use a ABC fire extinguisher to extinguish the fire. Trying to extinguish the fire using only a small amount of water can be more dangerous than effective: either use a greater amount of water from a fire hydrant or wait for the fire fighters.
 - (4) If the vehicle is partially submerged in water, do not touch the service plug or any of the high-voltage components and cables because of the danger of electrocution. If you need to touch them, do so only after pulling the vehicle completely out of water.
 - (5) Check the HV battery and nearby area for any leakage of the electrolyte. Do not touch any leaking liquid because it could be the highly alkaline electrolyte. If you need to wipe it off (using rags etc.), do so only after completing the following procedure: wear the rubber gloves and goggles, neutralize the electrolyte with saturated boric acid solution, and finally apply a red litmus paper to make sure that it does not turn blue.

- (6) If a damage to any of the high-voltage components and cables is suspected, cut the high-voltage circuit using the procedure below.


High-voltage Part and Wiring

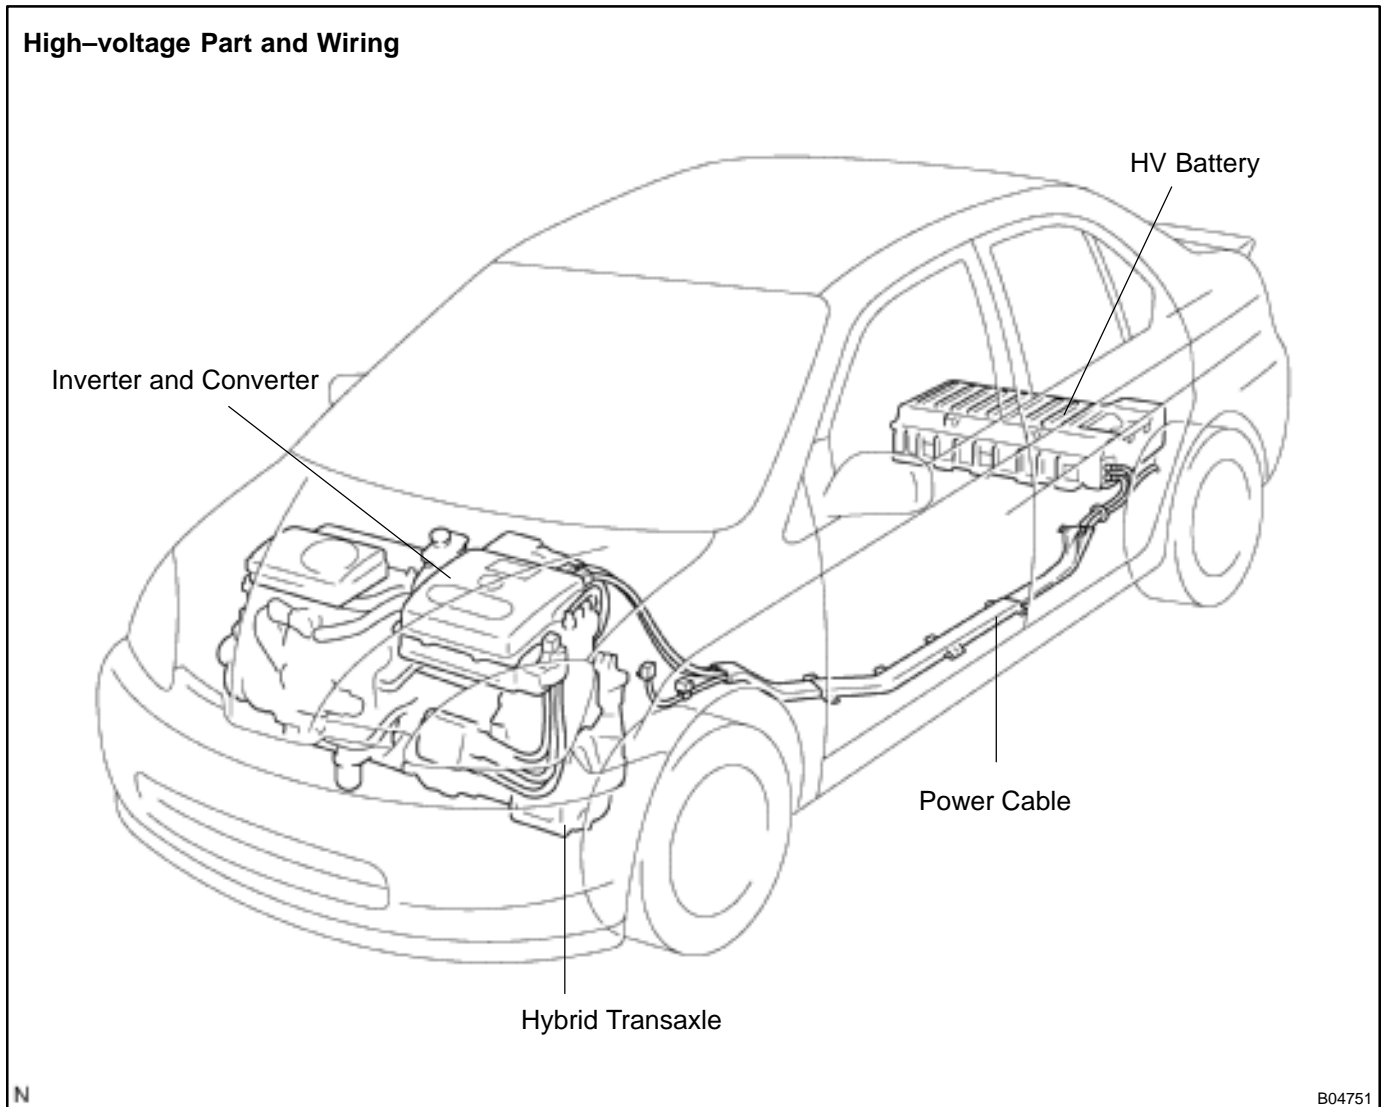

- Move the shift lever to the P position and engage the parking brake.
- Remove the ignition key. Then disconnect the cable from the negative (–) terminal of the auxiliary battery.

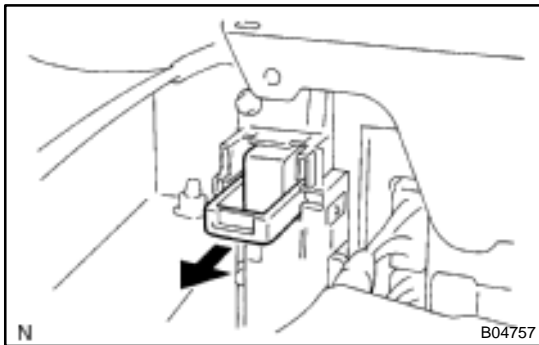

- Remove the service plug with the insulated gloves on.

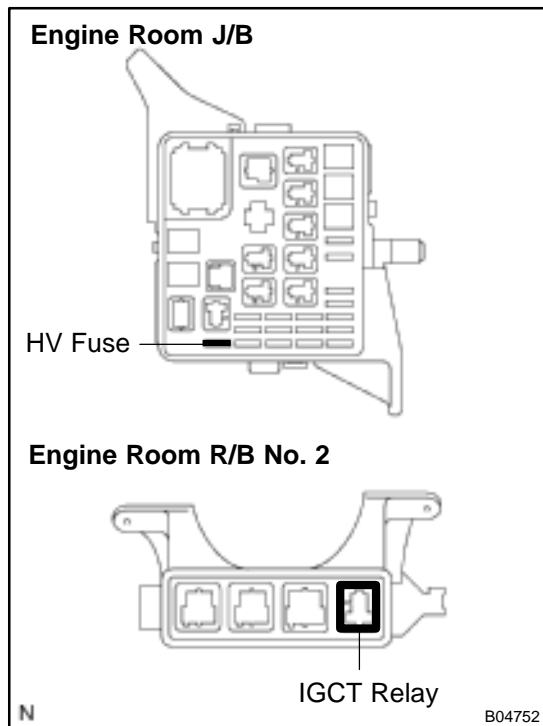


If the service plug cannot be removed due to damage to the rear portion of the vehicle, remove the HV fuse or IGCT relay instead.

(c) Moving the damaged vehicle

HINT:

If any of the following applies, tow the vehicle away using a tow truck lorry.

- One or more of the high-voltage components and cables is damaged.
- The driving, traction, or fuel system is damaged.

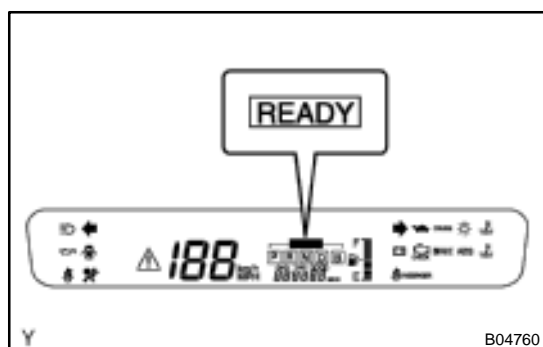

- The READY light is not lit when you turn ignition key to the ON position.

NOTICE:

- **Before towing the vehicle away using a break down lorry, disconnect the cable from the negative (–) terminal of the auxiliary battery and remove the service plug.**

Only if none of the above applies and you see no problems that might affect the driving operation, you are allowed to drive the vehicle away from the place of accident.

- **Perform the procedure below if the READY light goes off or you detect an abnormal noise, abnormal smell, or strong vibration while traveling:**
 - (1) Park the vehicle in a safe place.
 - (2) Move the shift lever to the P position and engage the parking brake.
 - (3) Disconnect the cable from the negative (–) terminal of the auxiliary battery.
 - (4) Remove the service plug with insulated gloves on.

(d) Actions required after moving the damaged vehicle
If you see any liquid on the road surface, it could be the leakage of the highly alkaline electrolyte.

Wearing rubber gloves and goggles, apply a red litmus paper to the liquid. If the litmus paper turns blue, neutralize the liquid using the saturated boric acid solution and reapply a red litmus paper to make sure that it does not turn blue. Then wipe the liquid off from the road surface using waste rags, etc.

(e) Items to be prepared (When repairing damaged vehicles)

- Protective clothing (Insulated gloves, rubber gloves, goggles, and safety shoes)
- Saturated boric acid solution 20 L (Procure 800 g of boric acid powder, put it into a container, and dissolve it in water.)
- Red litmus paper
- Waste rags or old towels (For wiping off the electrolyte)
- Vinyl tape (For insulating cable)
- Electrical tester

(f) Precautions to be observed when servicing the damaged vehicle:

- (1) Wear insulated or rubber gloves, goggles, and safety shoes.
- (2) Do not touch a bare cable that could be a high-voltage cable. If you need to touch it, or if you have a danger of making an accidental contact, wear insulated gloves, measure the voltage between the cable and the body ground using an electrical tester, and insulate the cable using a vinyl tape.
- (3) Check the HV battery and nearby area for leakage. If you find any liquid, it could be the leakage of the highly alkaline electrolyte. Wear rubber gloves and goggles, and then apply a red litmus paper to the leak. If the litmus paper turns blue, neutralize the liquid using the saturated boric acid solution and reapply a red litmus paper to make sure that it does not turn blue. Then wipe the liquid off using waste rags etc.
- (4) If the electrolyte adheres to your skin, wash the skin immediately using the saturated boric acid solution or large amounts of water. If the electrolyte adheres to an article of clothing, take it off immediately.
- (5) If the electrolyte comes into contact with your eyes, call out loudly for help. Do not rub your eyes but wash them with the saturated boric acid solution or large amounts of water and seek medical care.

- (6) If a damage to any of the high-voltage components and cables is suspected, cut the high-voltage circuit using the procedure below:
- Move the shift lever to the P position and engage the parking brake.
 - Remove the ignition key. Then disconnect the cable from the negative (–) terminal of the auxiliary battery.
 - Wear insulated gloves, and then remove the service plug.
 - If you cannot remove the service plug due to damage to the rear portion of the vehicle, remove the HV fuse or IGCT relay instead.
- (g) Precautions to be taken when disposing of the vehicle
When scrapping the vehicle, remove the HV battery from the vehicle and return it through the route specified by the manufacturer. The same applies to any damaged HV battery.
- (h) Precautions to be observed when towing
Tow the damaged vehicle with its front wheels or its front and rear wheels lifted off the ground.


NOTICE:

Towing the damaged vehicle with its front wheels on the ground may cause the motor to generate electricity. This electricity could, depending on the nature of the damage, leak and cause a fire.

- (i) Towing with 4 wheels on the ground

NOTICE:

- If you have to tow the damaged vehicle using a rope, do it at a speed below 30 km/h. Such towing operation is allowed only to cover very short distance, such as the distance to a tow truck lorry, for example.
- Set the ignition switch to the ACC position and shift lever to the N position.
- If you detect any abnormality in the damaged vehicle during the towing operation, stop the towing operation immediately.

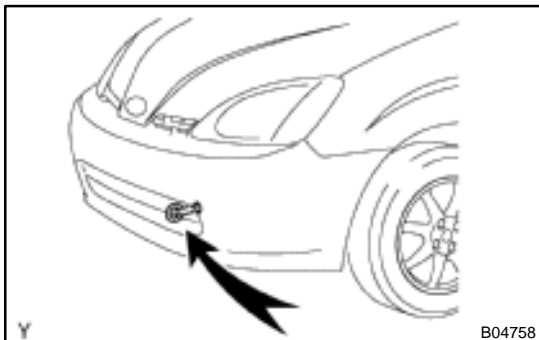


- (j) Towing eyelet
- (1) Install the hook.
 - (2) Hook a rope onto the illustrated point for towing.

7. FOR VEHICLES EQUIPPED WITH SRS AIRBAG AND SEAT BELT PRETENSIONER

- (a) The PRIUS is equipped with an SRS (Supplemental Restraint System), such as the driver airbag, front passenger airbag assembly, side airbag assembly and seat belt pretensioner.

Failure to carry out service operations in the correct sequence could cause the supplemental restraint system to unexpectedly deploy during servicing, possibly leading to a serious accident.

Further, if a mistake is made in servicing the supplemental restraint system, it is possible the SRS may fail to operate when required. Before servicing (including removal or installation of parts, inspection or replacement), be sure to read the following items carefully, then follow the correct procedure described in this manual.

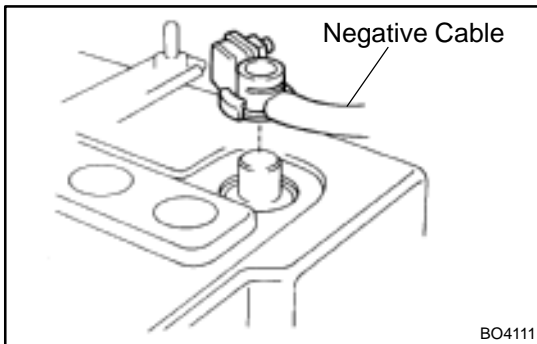

(b) GENERAL NOTICE


- (1) Malfunction symptoms of the supplemental restraint system are difficult to confirm, so the diagnostic trouble codes become the most important source of information when troubleshooting. When troubleshooting the supplemental restraint system, always inspect the diagnostic trouble codes before disconnecting the battery (See page [DI-497](#)).

- (2) Work must be started after 90 seconds from the time the ignition switch is turned to the "LOCK" position and the negative (–) terminal cable is disconnected from the battery.

(The supplemental restraint system is equipped with a back-up power source so that if work is started within 90 seconds of disconnecting the negative (–) terminal cable from the battery, the SRS may deploy.)

When the negative (–) terminal cable is disconnected from the battery, memory of the clock and audio systems will be cancelled. So before starting work, make a record of the contents memorized by the each memory system. Then when work is finished, reset the clock and audio systems as before. To avoid erasing the memory of each memory system, never use a back-up power supply from another battery.

- (3) Even in cases of a minor collision where the SRS does not deploy, the steering wheel pad, front passenger airbag assembly, side airbag assembly and seat belt pretensioner should be inspected (See page [RS-14](#), [RS-28](#), [RS-63](#) and [BO-92](#)).
- (4) Never use SRS parts from another vehicle. When replacing parts, replace them with new parts.
- (5) Before repairs, remove the airbag sensor if shocks are likely to be applied to the sensor during repairs.
- (6) Never disassemble and repair the airbag sensor assembly, steering wheel pad, front passenger airbag assembly, side airbag assembly or seat belt pretensioner.
- (7) If the airbag sensor assembly, steering wheel pad, front passenger airbag assembly, side airbag assembly or seat belt pretensioner has been dropped, or if there are cracks, dents or other defects in the case, bracket or connector, replace them with new ones.
- (8) Do not directly expose the airbag sensor assembly, steering wheel pad, front passenger airbag assembly or seat belt pretensioner to hot air or flames.
- (9) Use a volt/ohmmeter with high impedance (10 k Ω /V minimum) for troubleshooting of the electrical circuit.
- (10) Information labels are attached to the periphery of the SRS components. Follow the instructions on the notices.
- (11) After work on the supplemental restraint system is completed, check the SRS warning light (See page [DI-497](#)).

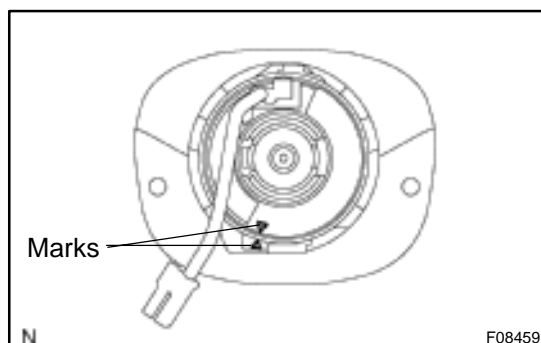

(c) SPIRAL CABLE (in Combination Switch)

The steering wheel must be fitted correctly to the steering column with the spiral cable at the neutral position, otherwise cable disconnection and other troubles may result. Refer to [SR-14](#) of this manual concerning correct steering wheel installation.

(d) STEERING WHEEL PAD (with Airbag)

- (1) When removing the steering wheel pad or handling a new steering wheel pad, it should be placed with the pad top surface facing up.
Storing the pad with its metallic surface facing upward may lead to a serious accident if the airbag deploys for some reason. In addition do not store a steering wheel pad on top of another one.
- (2) Never measure the resistance of the airbag squib. (This may cause the airbag to deploy, which is very dangerous.)
- (3) Grease should not be applied to the steering wheel pad and the pad should not be cleaned with detergents of any kind.
- (4) Store the steering wheel pad where the ambient temperature remains below 93°C (200°F), without high humidity and away from electrical noise.
- (5) When using electric welding, first disconnect the airbag connector (yellow color and 2 pins) under the steering column near the combination switch connector before starting work.
- (6) When disposing of a vehicle or the steering wheel pad alone, the airbag should be deployed using an SST before disposal (See page RS-16).
Carry out the operation in a safe place away from electrical noise.

Example:

Correct




Wrong



N

B04764

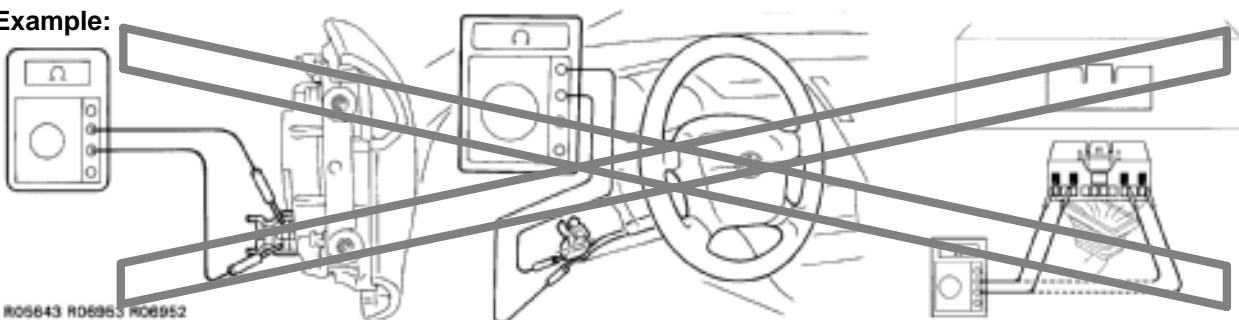Example:

R05643 R06953 R06952

Z13950

(e) FRONT PASSENGER AIRBAG ASSEMBLY

- (1) Always store a removed or new front passenger airbag assembly with the airbag deployment direction facing up.

Storing the airbag assembly with the airbag deployment direction facing down could cause a serious accident if the airbag inflates.


- (2) Never measure the resistance of the airbag squib. (This may cause the airbag to deploy, which is very dangerous.)
- (3) Grease should not be applied to the front passenger airbag assembly and the airbag door should not be cleaned with detergents of any kind.
- (4) Store the airbag assembly where the ambient temperature remains below 93°C (200°F), without high humidity and away from electrical noise.
- (5) When using electric welding, first disconnect the airbag connector (yellow color and 2 pins) installed on the assembly before starting work.
- (6) When disposing of a vehicle or the airbag assembly alone, the airbag should be deployed using an SST before disposal (See page RS-30).
Perform the operation in a safe place away from electrical noise.

Example:

Correct




Wrong

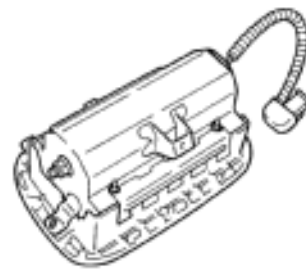

N

B02420

Example:

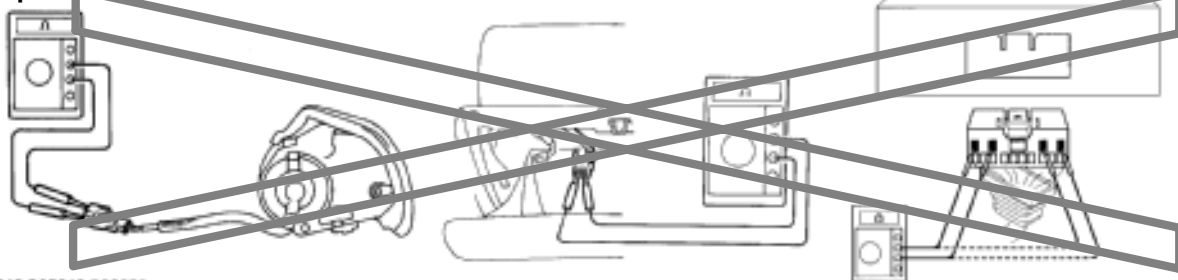

R05648 R05649 R06952

Z13951

(f) SIDE AIRBAG ASSEMBLY


- (1) Always store a removed or new side airbag assembly with the airbag deployment direction facing up. Storing the airbag assembly with the airbag deployment direction facing down could cause a serious accident if the airbag deploys.
- (2) Never measure the resistance of the airbag squib. (This may cause the airbag to deploy, which is very dangerous.)
- (3) Grease should not be applied to the side airbag assembly and the surface should not be cleaned with detergents of any kind.
- (4) Store the airbag assembly where the ambient temperature remains below 93°C (200°F), without high humidity and away from electrical noise.
- (5) When using electric welding, first disconnect the airbag connector (yellow color and 2 pins) under the seat before starting work.
- (6) When disposing of a vehicle or the side airbag assembly alone, the airbag should be deployed using an SST before disposal (See page RS-42). Perform the operation in a safe place away from electrical noise.

Example:

Correct




Wrong

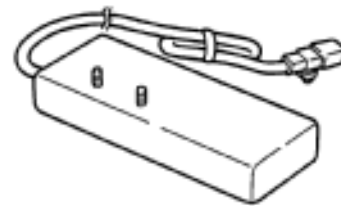

N


B04766

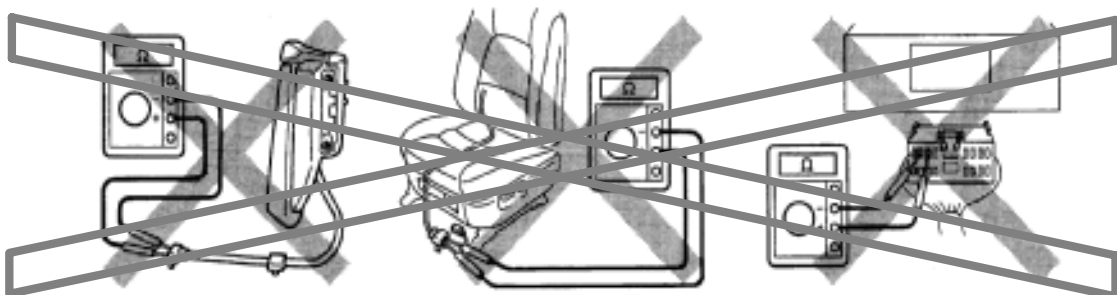Example:

N21642

(g) SEAT BELT PRETENSIONER

- (1) Never measure the resistance of the seat belt pretensioner. (This may cause the seat belt pretensioner to activate, which is very dangerous.)
- (2) Never disassemble the seat belt pretensioner.
- (3) Never install the seat belt pretensioner in another vehicle.
- (4) Store the seat belt pretensioner where the ambient temperature remains below 80°C (176°F) and away from electrical noise without high humidity.
- (5) When using electric welding, first disconnect the connector (yellow color and 2 pins) before starting work.
- (6) When disposing of a vehicle or the seat belt pretensioner alone, the seat belt pretensioner should be activated before disposal (See page [BO-93](#)). Perform the operation in a safe place away from electrical noise.
- (7) The seat belt pretensioner is hot after activation, so let it cool down sufficiently before the disposal. However never apply water to the seat belt pretensioner.

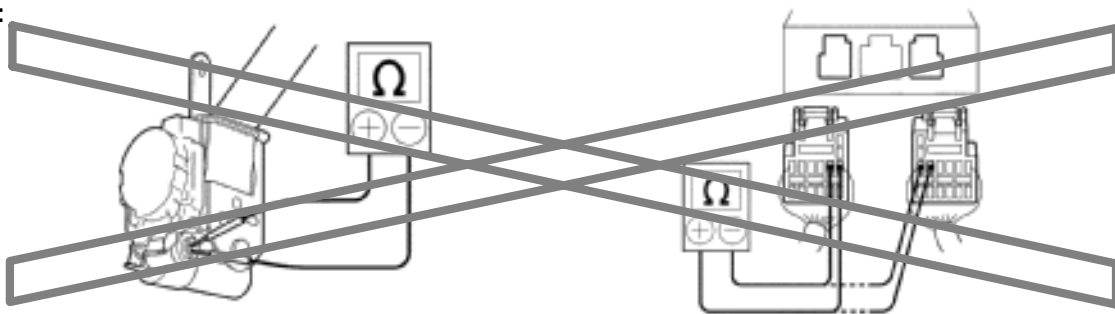Example:

B02121

(h) AIRBAG SENSOR ASSEMBLY

- (1) Never reuse the airbag sensor assembly involved in a collision when the SRS has deployed.
- (2) The connectors to the airbag sensor assembly should be connected or disconnected with the sensor mounted on the floor. If the connectors are connected or disconnected while the airbag sensor assembly is not mounted to the floor, it could cause undesired ignition of the supplemental restraint system.
- (3) Work must be started after 90 seconds from the time the ignition switch is turned to the "LOCK" position and the negative (–) terminal cable is disconnected from the battery, even if only loosening the set bolts of the airbag sensor assembly.

(i) WIRE HARNESS AND CONNECTOR

The SRS wire harness is integrated with the instrument panel wire harness assembly. All the connectors in the system are a standard yellow color. If the SRS wire harness becomes disconnected or the connector becomes broken due to an accident, etc., repair or replace it as shown on page [RS-66](#).

8. FOR VEHICLES EQUIPPED WITH A CATALYTIC CONVERTER**CAUTION:**

If large amount of unburned gasoline flows into the converter, it may overheat and create a fire hazard. To prevent this, observe the following precautions and explain them to your customer.

- (a) Use only unleaded gasoline.
- (b) Avoid prolonged idling.
Avoid running the engine at idle speed for more than 20 minutes.
- (c) Avoid spark jump test.
 - (1) Perform spark jump test only when absolutely necessary. Perform this test as rapidly as possible.
 - (2) While testing, never race the engine.
- (d) Avoid prolonged engine compression measurement.
Engine compression tests must be done as rapidly as possible.
- (e) Do not run engine when fuel tank is nearly empty.
This may cause the engine to misfire and create an extra load on the converter.
- (f) Avoid coasting with ignition turned off.
- (g) Do not dispose of used catalyst along with parts contaminated with gasoline or oil.

9. IF VEHICLE IS EQUIPPED WITH MOBILE COMMUNICATION SYSTEM

For vehicles with mobile communication systems such as two-way radios and cellular telephones, observe the following precautions.

- (1) Install the antenna as far as possible away from the ECU and sensors of the vehicle's electronic system.
- (2) Install the antenna feeder at least 20 cm (7.87 in.) away from the ECU and sensors of the vehicle's electronic systems. For details about ECU and sensors locations, refer to the section on the applicable component.
- (3) Avoid winding the antenna feeder together with other wiring as much as possible, and also avoid running the antenna feeder parallel with other wire harnesses.
- (4) Check that the antenna and feeder are correctly adjusted.
- (5) Do not install powerful mobile communications system.

10. FOR USING OBD II SCAN TOOL OR TOYOTA HAND-HELD TESTER**CAUTION:**

Observe the following items for safety reasons:

- Before using the OBD II scan tool or TOYOTA hand-held tester, the OBD II scan tool's instruction book or TOYOTA hand-held tester's operator manual should be read thoroughly.
- Be sure to route all cables securely when driving with the OBD II scan tool or TOYOTA hand-held tester connected to the vehicle. (i.e. Keep cables away from feet, pedals, steering wheel and shift lever.)
- Two persons are required when test driving with the OBD II scan tool or TOYOTA hand-held tester, one person to drive the vehicle and the other person to operate the OBD II scan tool or TOYOTA hand-held tester.

HOW TO TROUBLESHOOT ECU CONTROLLED SYSTEMS

GENERAL INFORMATION

IN05Y-22

A large number of ECU controlled systems are used in the PRIUS. In general, the ECU controlled system is considered to be a very intricate system requiring a high level of technical knowledge and expert skill to troubleshoot. However, the fact is that if you proceed to inspect the circuits one by one, troubleshooting of these systems is not complex. If you have adequate understanding of the system and a basic knowledge of electricity, accurate diagnosis and necessary repair can be performed to locate and fix the problem. This manual is designed through emphasis of the above standpoint to help service technicians perform accurate and effective troubleshooting, and is compiled for the following major ECU controlled systems:

The troubleshooting procedure and how to make use of it are described on the following pages.


System	Page
6. Engine	DI-1
7. Hybrid Vehicle Control System	DI-174
8. HV Battery Control System	DI-312
9. Anti-Lock Brake System With EBD & RBS	DI-351
10. Electric Motor Power Steering	DI-452
11. Supplemental Restraint System	DI-495
12. Cruise Control System	DI-640
13. Combination Meter System	DI-662
14. Body Control System	DI-678
15. Driver Door Control System	DI-730
16. Multiplex Communication System	DI-750
17. Navigation System	DI-789
18. Air Conditioning System	DI-864

FOR USING OBD II SCAN TOOL OR TOYOTA HAND-HELD TESTER

- Before using the scan tool or tester, the scan tool's instruction book or tester's operator manual should be read thoroughly.
- If the scan tool or tester cannot communicate with ECU controlled systems when you have connected the cable of the scan tool or tester to DLC3, turned the ignition switch ON and operated the scan tool, there is a problem on the vehicle side or tool side.
 - (1) If communication is normal when the tool is connected to another vehicle, inspect the diagnosis data link line (Bus \oplus line) or ECU power circuit of the vehicle.
 - (2) If communication is still not possible when the tool is connected to another vehicle, the problem is probably in the tool itself, so perform the Self Test procedures outline in the Tester Operator's Manual.

HOW TO PROCEED WITH TROUBLESHOOTING

Carry out troubleshooting in accordance with the procedure on the following page. Here, only the basic procedure is shown. Details are provided in Diagnostics section, showing the most effective methods for each circuit. Confirm the troubleshooting procedures first for the relevant circuit before beginning troubleshooting of that circuit.

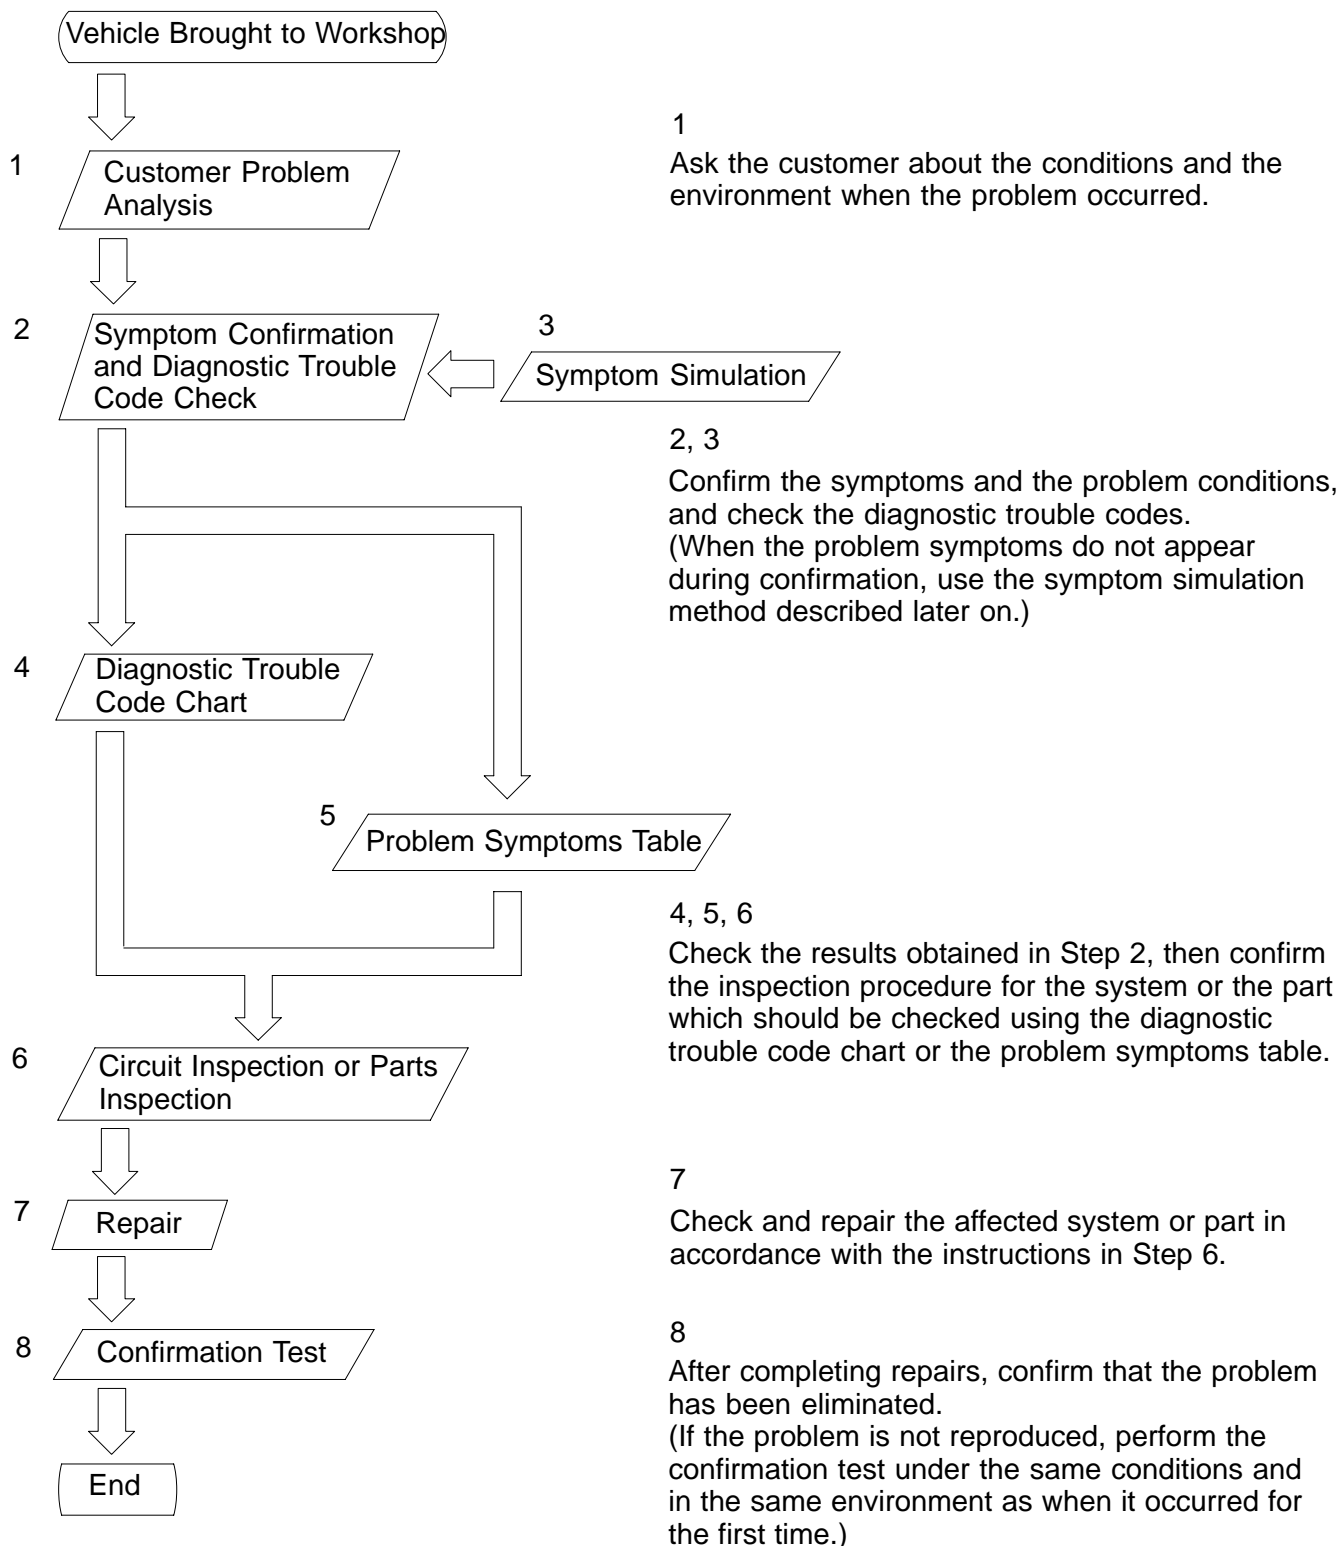

1. CUSTOMER PROBLEM ANALYSIS

In troubleshooting, the problem symptoms must be confirmed accurately and all preconceptions must be cleared away in order to give an accurate judgment. To ascertain just what the problem symptoms are, it is extremely important to ask the customer about the problem and the conditions at the time it occurred.

Important Point in the Problem Analysis:

The following 5 items are important points in the problem analysis. Past problems which are thought to be unrelated and the repair history, etc. may also help in some cases, so as much information as possible should be gathered and its relationship with the problem symptoms should be correctly ascertained for reference in troubleshooting. A customer problem analysis table is provided in Diagnostics section for each system for your use.

Important Points in the Customer Problem Analysis

- What ——— Vehicle model, system name
- When ——— Date, time, occurrence frequency
- Where ——— Road conditions
- Under what conditions? ——— Running conditions, driving conditions, weather conditions
- How did it happen? ——— Problem symptoms

(Sample) Engine control system check sheet.

ENGINE CONTROL SYSTEM Check Sheet				Inspector's Name
Customer's Name		Model and Model Year		
Driver's Name		Frame No.		
Data Vehicle Brought in		Engine Model		
License No.		Odometer Reading	km miles	

Problem Symptoms	<input type="checkbox"/> Engine does not Start	<input type="checkbox"/> Engine does not crank	<input type="checkbox"/> No initial combustion	<input type="checkbox"/> No complete combustion	
	<input type="checkbox"/> Difficult to Start	<input type="checkbox"/> Engine cranks slowly <input type="checkbox"/> Other _____			
	<input type="checkbox"/> Poor Idling	<input type="checkbox"/> Incorrect first idle <input type="checkbox"/> Idling rpm is abnormal <input type="checkbox"/> High (rpm) <input type="checkbox"/> Low (rpm) <input type="checkbox"/> Rough idling <input type="checkbox"/> Other _____			
	<input type="checkbox"/> Poor Drive ability	<input type="checkbox"/> Hesitation <input type="checkbox"/> Back fire <input type="checkbox"/> Muffler explosion (after-fire) <input type="checkbox"/> Surging <input type="checkbox"/> Knocking <input type="checkbox"/> Other _____			
	<input type="checkbox"/> Engine Stall	<input type="checkbox"/> Soon after starting <input type="checkbox"/> After accelerator pedal depressed <input type="checkbox"/> After accelerator pedal released <input type="checkbox"/> During A/C operation <input type="checkbox"/> Shifting from N to D <input type="checkbox"/> Other _____			
	<input type="checkbox"/> Others				

☐ Constant ☐ Sometimes (times per day/month)

2. SYMPTOM CONFIRMATION AND DIAGNOSTIC TROUBLE CODE CHECK

The diagnostic system in the PRIUS fulfills various functions. The first function is the Diagnostic Trouble Code Check in which a malfunction in the signal circuits to the ECU is stored in code in the ECU memory at the time of occurrence, to be output by the technician during troubleshooting. Another function is the Input Signal Check which checks if the signals from various switches are sent to the ECU correctly.

By using these check functions, the problem areas can be narrowed down quickly and troubleshooting can be performed effectively. Diagnostic functions are incorporated in the following systems in the PRIUS.


System	Diagnostic Trouble Code Check	Input Signal Check (Sensor Check)	Diagnostic Test Mode (Active Test)
Engine	<input type="radio"/> (with Check Mode)	<input type="radio"/>	<input type="radio"/>
Hybrid Vehicle Control System	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
HV Battery Control System	<input type="radio"/> (with Check Mode)	<input type="radio"/>	<input type="radio"/>
Anti-Lock Brake System With EBD & RBS	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Electric Motor Power Steering	<input type="radio"/>		
Supplemental Restraint System	<input type="radio"/>		
Cruise Control System	<input type="radio"/>	<input type="radio"/>	
Multiplex Communication System	<input type="radio"/>		
Navigation System	<input type="radio"/>		
Air Conditioning System	<input type="radio"/>	<input type="radio"/>	

In diagnostic trouble code check, it is very important to determine whether the problem indicated by the diagnostic trouble code is still occurring or occurred in the past but returned to normal at present. In addition, it must be checked in the problem symptom check whether the malfunction indicated by the diagnostic trouble code is directly related to the problem symptom or not. For this reason, the diagnostic trouble codes should be checked before and after the symptom confirmation to determine the current conditions, as shown in the table below. If this is not done, it may, depending on the case, result in unnecessary troubleshooting for normally operating systems, thus making it more difficult to locate the problem, or in repairs not pertinent to the problem. Therefore, always follow the procedure in correct order and perform the diagnostic trouble code check.

DIAGNOSTIC TROUBLE CODE CHECK PROCEDURE

Diagnostic Trouble Code Check (Make a note of and then clear)	Confirmation of Symptoms	Diagnostic Trouble Code Check	Problem Condition
Diagnostic Trouble Code Display	Problem symptoms exist →	Same diagnostic trouble code is displayed	Problem is still occurring in the diagnostic circuit
		Normal code is displayed	The problem is still occurring in a place other than in the diagnostic circuit (The diagnostic trouble code displayed first is either for a past problem or it is a secondary problem)
	No problem symptoms exist →		The problem occurred in the diagnostic circuit in the past
Normal Code Display	Problem symptoms exist →	Normal code is displayed	The problem is still occurring in a place other than in the diagnostic circuit
	No problem symptoms exist →	Normal code is displayed	The problem occurred in a place other than in the diagnostic circuit in the past

Taking into account the points on the previous page, a flow chart showing how to proceed with troubleshooting using the diagnostic trouble code check is shown below. This flow chart shows how to utilize the diagnostic trouble code check effectively, then by carefully checking the results, indicates how to proceed either to diagnostic trouble code troubleshooting or to troubleshooting of problem symptoms table.


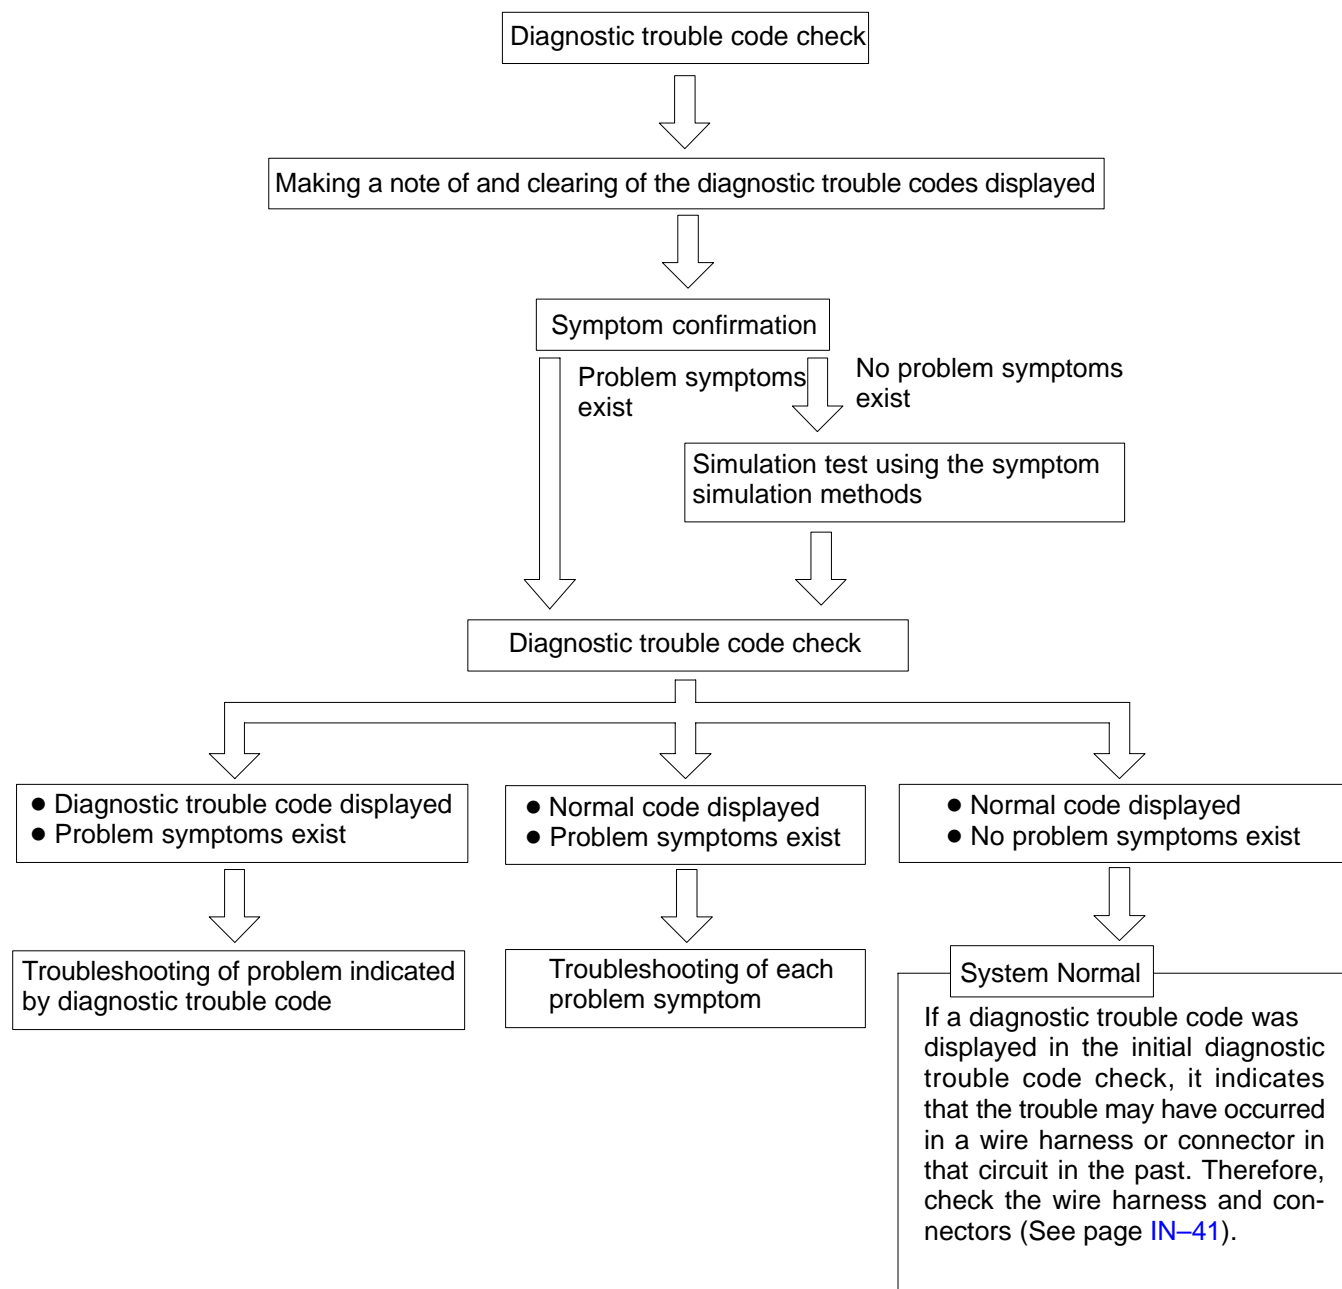


3. SYMPTOM SIMULATION



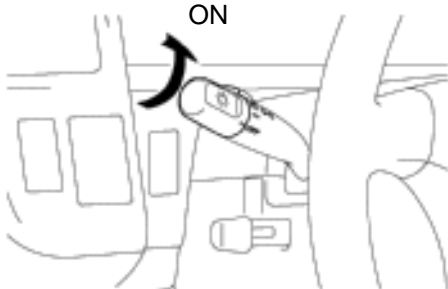
The most difficult case in troubleshooting is when there are no problem symptoms occurring. In such cases, a thorough customer problem analysis must be carried out, then simulate the same or similar conditions and environment in which the problem occurred in the customer's vehicle. No matter how much experience a technician has, or how skilled he may be, if he proceeds to troubleshoot without confirming the problem symptoms he will tend to overlook something important in the repair operation and make a wrong guess somewhere, which will only lead to a standstill. For example, for a problem which only occurs when the engine is cold, or for a problem which occurs due to vibration caused by the road during driving, etc., the problem can never be determined so long as the symptoms are confirmed with the engine hot condition or the vehicle at a standstill. Since vibration, heat or water penetration (moisture) is likely cause for problem which is difficult to reproduce, the symptom simulation tests introduced here are effective measures in that the external causes are applied to the vehicle in a stopped condition.

Important Points in the Symptom Simulation Test:

In the symptom simulation test, the problem symptoms should of course be confirmed, but the problem area or parts must also be found out. To do this, narrow down the possible problem circuits according to the symptoms before starting this test and connect a tester beforehand. After that, carry out the symptom simulation test, judging whether the circuit being tested is defective or normal and also confirming the problem symptoms at the same time. Refer to the problem symptoms table for each system to narrow down the possible causes of the symptom.

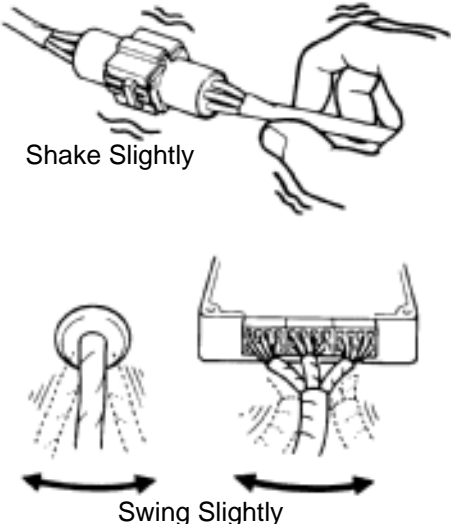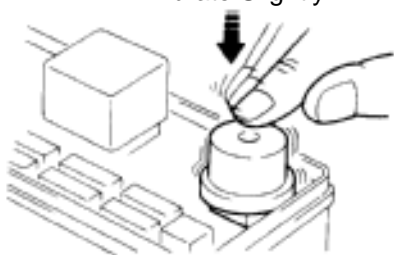1	VIBRATION METHOD: When vibration seems to be the major cause.	
<p>CONNECTORS Slightly shake the connector vertically and horizontally.</p> <p>WIRE HARNESS Slightly shake the wire harness vertically and horizontally. The connector joint, fulcrum of the vibration, and body through portion are the major areas to be checked thoroughly.</p>		 <p>FI2331 FI2332</p>
<p>PARTS AND SENSOR Apply slight vibration with a finger to the part of the sensor considered to be the problem cause and check that the malfunction occurs. HINT: Applying strong vibration to relays may result in open relays.</p>		 <p>FI2330</p>

V07268

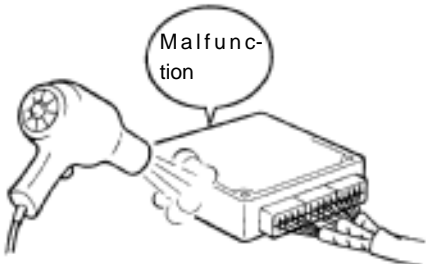2	HEAT METHOD: When the problem seems to occur when the suspect area is heated.
<p>Heat the component that is the likely cause of the malfunction with a hair dryer or similar object. Check to see if the malfunction occurs.</p> <p>NOTICE:</p> <p>(1) Do not heat to more than 60 °C (140 °F). (Temperature is limited not to damage the components.)</p> <p>(2) Do not apply heat directly to parts in the ECU.</p>	
 <p>F12334</p>	
3	WATER SPRINKLING METHOD: When the malfunction seems to occur on a rainy day or in a high-humidity condition.
<p>Sprinkle water onto the vehicle and check to see if the malfunction occurs.</p> <p>NOTICE:</p> <p>(1) Never sprinkle water directly into the engine compartment, but indirectly change the temperature and humidity by applying water spray onto the radiator front surface.</p> <p>(2) Never apply water directly onto the electronic components.</p> <p>HINT:</p> <p>If a vehicle is subject to water leakage, the leaked water may contaminate the ECU. When testing a vehicle with a water leakage problem, special caution must be taken.</p>	
 <p>F16649</p>	
4	OTHER: When a malfunction seems to occur when electrical load is excessive.
<p>Turn on all electrical loads including the heater blower, head lights, rear window defogger, etc. and check to see if the malfunction occurs.</p>	
 <p>B02389</p>	

4. DIAGNOSTIC TROUBLE CODE CHART

The inspection procedure is shown in the table below. This table permits efficient and accurate troubleshooting using the diagnostic trouble codes displayed in the diagnostic trouble code check. Proceed with troubleshooting in accordance with the inspection procedure given in the diagnostic chart corresponding to the diagnostic trouble codes displayed. The engine diagnostic trouble code chart is shown below as an example.

- DTC No.

Indicates the diagnostic trouble code.

- Page or Instructions

Indicates the page where the inspection procedure for each circuit is to be found, or gives instructions for checking and repairs.

- Trouble Area

Indicates the suspect area of the problem.

- Detection Item

Indicates the system of the problem or contents of the problem.

DTC CHART (SAE Controlled)

HINT:

Parameters listed in the chart may not be exactly the same as your reading due to the type of instrument or other factors.

If a malfunction code is displayed during the DTC check mode, check the circuit for that code listed in the table below. For details of each code, turn to the page referred to under the "See page" for the respective "DTC No." in the DTC chart.

DTC No. (See page)	Detection Item	Trouble Area	MIL*	Memory
P0100 (DI-24)	Mass Air Flow Circuit Malfunction	<ul style="list-style-type: none"> ● Open or short in mass air flow meter circuit ● Mass air flow meter ● ECM 	○	○
P0101 (DI-28)	Mass Air Flow Circuit Range/ Performance Problem	<ul style="list-style-type: none"> ● Mass air flow meter 	○	○
P0110 (DI-29)	Intake Air Temp. Circuit Malfunction	<ul style="list-style-type: none"> ● Open or short in intake air temp. sensor circuit ● Intake air temp. sensor ● ECM 	○	○
P0115 (DI-33)	Engine Coolant Temp. Circuit Malfunction	<ul style="list-style-type: none"> ● Open or short in engine coolant temp. sensor circuit ● Engine coolant temp. sensor ● ECM 	○	○
P0116 (DI-37)	Engine Coolant Temp. Circuit Range/ Performance Problem	<ul style="list-style-type: none"> ● Engine coolant temp. sensor ● Cooling system 	○	○
	Throttle Position Sensor/Switch Malfunction	<ul style="list-style-type: none"> ● Open or short in throttle position sensor circuit ● Throttle position sensor ● ECM 		
	Throttle Position Sensor/ Switch Range/ Performance Problem	<ul style="list-style-type: none"> ● Throttle position sensor 		

5. PROBLEM SYMPTOMS TABLE

The suspected circuits or parts for each problem symptom are shown in the table below. Use this table to troubleshoot the problem when a "Normal" code is displayed in the diagnostic trouble code check but the problem is still occurring. Numbers in the table indicate the inspection order in which the circuits or parts should be checked.

HINT:

When the problem is not detected by the diagnostic system even though the problem symptom is present, it is considered that the problem is occurring outside the detection range of the diagnostic system, or that the problem is occurring in a system other than the diagnostic system.

● Page
Indicates the page where the flow chart for each circuit is located.

● Circuit Inspection, Inspection Order
Indicates the circuit which needs to be checked for each problem symptom. Check in the order indicated by the numbers.

● Problem Symptom

● Circuit or Part Name
Indicates the circuit or part which needs to be checked.

PROBLEM SYMPTOMS TABLE

Symptom	Suspect Area	See page
Engine does not crank (Does not start)	1. Starter and starter relay	ST-2 ST-17
No initial combustion (Does not start)	1. ECM power source circuit 2. Fuel pump control circuit 3. Engine control module (ECM)	DI-147 DI-151 IN-29
No complete combustion (Does not start)	1. Fuel pump control circuit	DI-151
Engine cranks normally (Difficult to start)	1. Starter signal circuit 2. Fuel pump control circuit 3. Compression	DI-144 DI-151 EM-3
Cold engine (Difficult to start)	1. Starter signal circuit 2. Fuel pump control circuit	DI-144 DI-151
Hot engine	1. Starter signal circuit 2. Fuel pump control circuit	DI-144 DI-151
Engine idle speed (Poor idling)	1. A/C signal circuit (Compressor circuit) 2. ECM power source circuit	AC-88
Engine idle speed (Poor idling)	1. A/C signal circuit 2. Fuel pump control circuit	
Engine idle speed (Poor idling)	1. Compression 2. Fuel pump control circuit	

6. CIRCUIT INSPECTION

How to read and use each page is shown below.

• Diagnostic Trouble Code No. and Detection Item


• Circuit Description
The major role and operation, etc. of the circuit and its component parts are explained.

DTC	P0325	Knock Sensor 1 Circuit Malfunction
CIRCUIT DESCRIPTION Knock sensor is fitted to the cylinder block to detect engine knocking. This sensor contains a piezoelectric element which generates a voltage when it becomes deformed, which occurs when the cylinder block vibrates due to knocking. If engine knocking occurs, ignition timing is retarded to suppress it.		
DTC No.	DTC Detecting Condition	Trouble Area
P0325	No knock sensor 1 signal to ECM with engine speed 1,200 rpm or more.	<ul style="list-style-type: none"> • Open or short in knock sensor1 circuit • Knock sensor 1 (looseness) • ECM

If the ECM detects the above diagnosis conditions, it operates the fail safe function in which the corrective retard angle value is set to the maximum value.

• Indicates the diagnostic trouble code, diagnostic trouble code set parameter and suspect area of the problem.

WIRING DIAGRAM

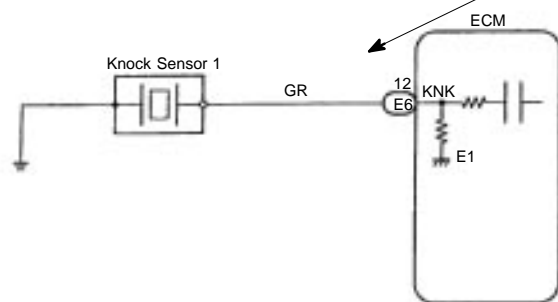

- Wiring Diagram
This shows a wiring diagram of the circuit. Use this diagram together with ELECTRICAL WIRING DIAGRAM to thoroughly understand the circuit.
Wire colors are indicated by an alphabetical code.
B = Black, L = Blue, R = Red, BR = Brown, LG = Light Green, V = Violet, G = Green, O = Orange, W = White, GR = Gray, P = Pink, Y = Yellow, SB = Sky Blue
The first letter indicates the basic wire color and the second letter indicates the color of the stripe.

cardiagn.com

- Indicates the position of the ignition switch during the check.




- Inspection Procedure

Use the inspection procedure to determine if the circuit is normal or abnormal, and, if it is abnormal, use it to determine whether the problem is located in the sensors, actuators, wire harness or ECU.

INSPECTION PROCEDURE

- 1 Check continuity between terminal KNK of ECM connector and body ground.

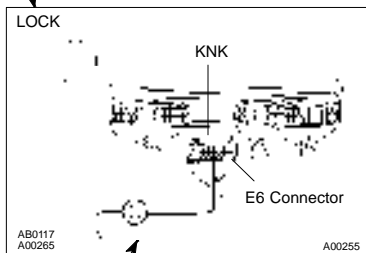

PREPARATION:

- Remove the glove compartment (See page SF-68).
- Disconnect the E6 connector of ECM.

CHECK:

Measure resistance between terminal KNK of ECM connector and body ground.

OK:

Resistance: 1 MΩ or higher

OK

Go to step 3.

NG

- 2 Check knock sensor (See page SF-61).

OK

Replace knock sensor.

- Indicates the place to check the voltage or resistance.
- Indicates the connector position to checked, from the front or back side.




Wire Harness

Check from the connector back side.
(with harness)




Check from the connector front side. (without harness)
In this case, care must be taken not to bend the terminals.




- Indicates the condition of the connector of ECU during the check.

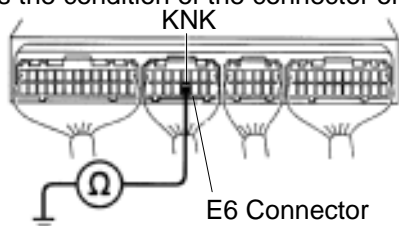

Connector being checked is connected.

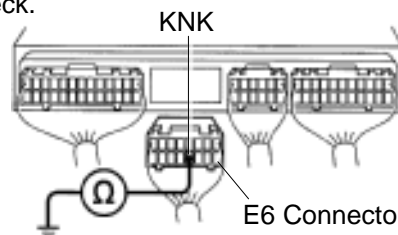

Connector being checked is disconnected.

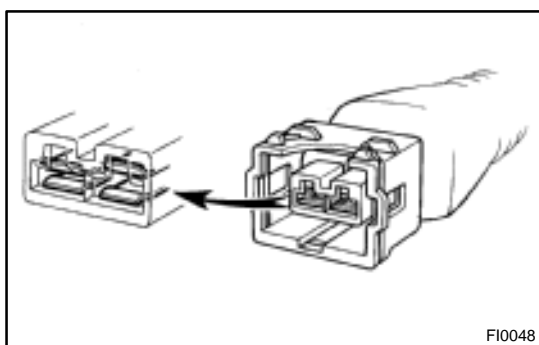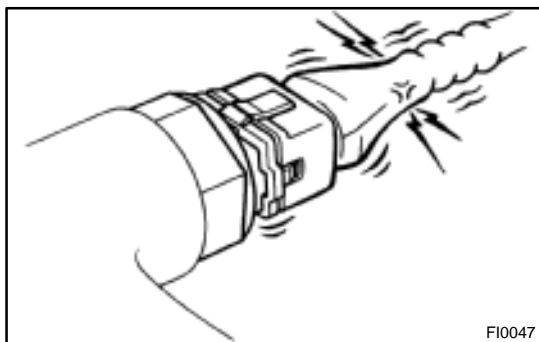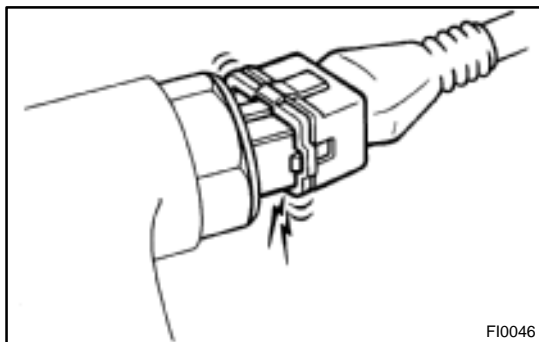

HOW TO USE THE DIAGNOSTIC CHART AND INSPECTION PROCEDURE

1. CONNECTOR CONNECTION AND TERMINAL INSPECTION

- For troubleshooting, diagnostic trouble code charts or problem symptom table are provided for each circuit with detailed inspection procedures on the following pages.
- When all the component parts, wire harnesses and connectors of each circuit except the ECU are found to be normal in troubleshooting, then it is determined that the problem is in the ECU. Accordingly, if diagnosis is performed without the problem symptoms occurring, refer to Step 8 to replace the ECU. So always confirm that the problem symptoms are occurring, or proceed with inspection while using the symptom simulation method.
- The instructions "Check wire harness and connector" and "Check and replace ECU" which appear in the inspection procedure, are common and applicable to all diagnostic trouble codes. Follow the procedure outlined below whenever these instructions appear.

OPEN CIRCUIT:

This could be due to a disconnected wire harness, faulty contact in the connector, and a connector terminal pulled out, etc.

HINT:


- It is rarely the case that a wire is broken in the middle of it. Most cases occur at the connector. In particular, carefully check the connectors of sensors and actuators
- Faulty contact could be due to rusting of the connector terminals, to foreign materials entering terminals or a deformation of connector terminals. Simply disconnecting and reconnecting the connectors once changes the condition of the connection and may result in a return to normal operation. Therefore, in troubleshooting, if no abnormality is found in the wire harness and connector check, but the problem disappears after the check, then the cause is considered to be in the wire harness or connectors.

SHORT CIRCUIT:

This could be due to a contact between wire harness and the body ground or to a short circuit occurred inside the switch, etc.


HINT:

When there is a short circuit between the wire harness and body ground, check thoroughly whether the wire harness is caught in the body or is clamped properly.

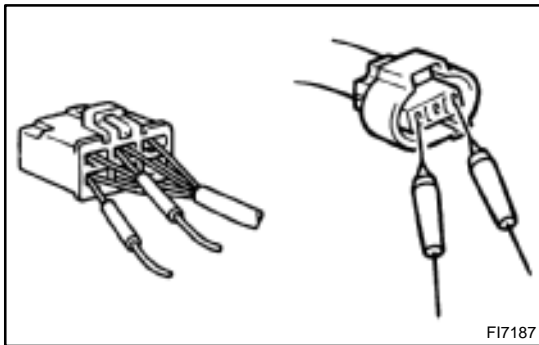


2. CONNECTOR HANDLING

When inserting tester probes into a connector, insert them from the rear of the connector. When necessary, use mini test leads. For water resistant connectors which cannot be accessed from behind, take good care not to deform the connector terminals.

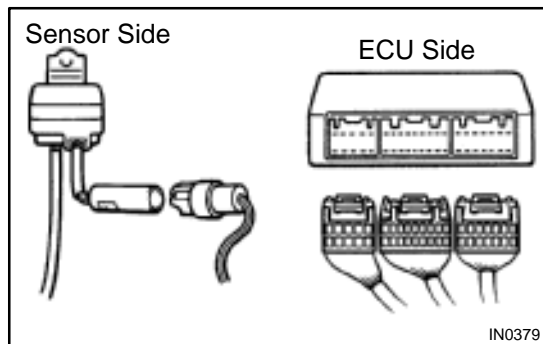

3. CONTINUITY CHECK (OPEN CIRCUIT CHECK)

- (a) Disconnect the connectors at both ECU and sensor sides.

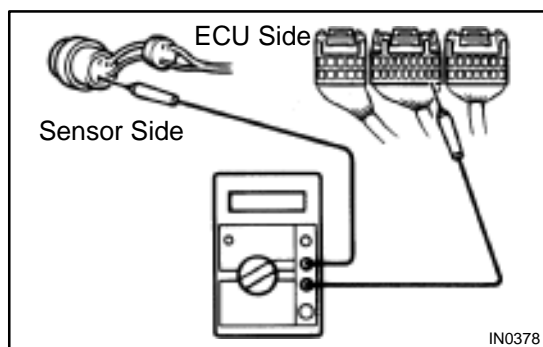


- (b) Measure the resistance between the applicable terminals of the connectors.

Resistance: 1 Ω or less

HINT:

Measure the resistance while lightly shaking the wire harness vertically and horizontally.

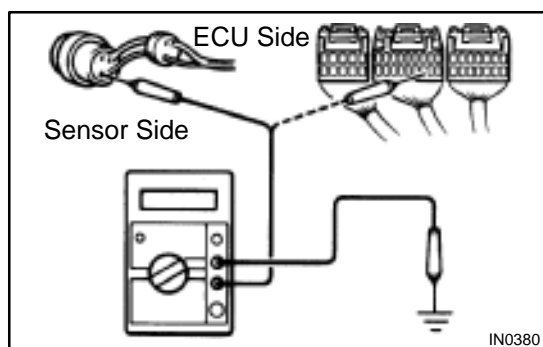


4. RESISTANCE CHECK (SHORT CIRCUIT CHECK)

- (a) Disconnect the connectors on both ends.
- (b) Measure the resistance between the applicable terminals of the connectors and body ground. Be sure to carry out this check on the connectors on both ends.

Resistance: 1 M Ω or higher

HINT:

Measure the resistance while lightly shaking the wire harness vertically and horizontally.

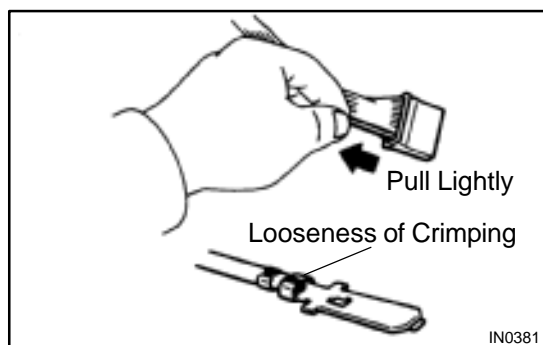

5. VISUAL CHECK AND CONTACT PRESSURE CHECK

- (a) Disconnect the connectors at both ends.
- (b) Check for rust or foreign material, etc. in the terminals of the connectors.
- (c) Check crimped portions for looseness or damage and check that the terminals are secured in lock portion.

HINT:

The terminals should not come out when pulled lightly from the back.


- (d) Prepare a test male terminal and insert it in the female terminal, then pull it out.

NOTICE:

When testing a gold-plated female terminal, always use a gold-plated male terminal.


HINT:

When the test terminal is pulled out more easily than others, there may be poor contact in that section.

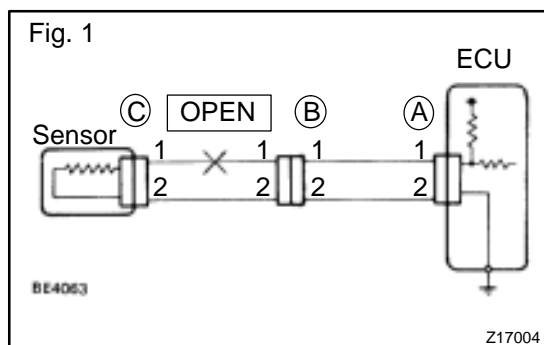


6. CHECK OPEN CIRCUIT


For the open circuit in the wire harness in Fig. 1, perform "(a) Continuity Check" or "(b) Voltage Check" to locate the section.

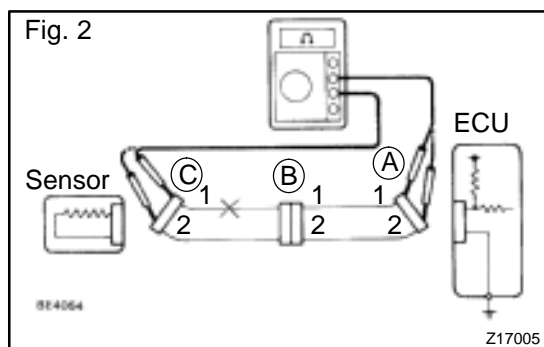

- (a) Check the continuity.
- (1) Disconnect connectors "A" and "C" and measure the resistance between them.
In the case of Fig. 2:
Between terminal 1 of connector "A" and terminal 1 of connector "C" → No continuity (open)
Between terminal 2 of connector "A" and terminal 2 of connector "C" → Continuity
Therefore, it is found out that there is an open circuit between terminal 1 of connector "A" and terminal 1 of connector "C".

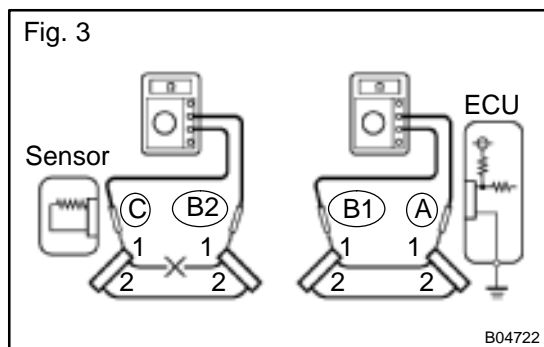

- (2) Disconnect connector "B" and measure the resistance between the connectors.
In the case of Fig. 3:
Between terminal 1 of connector "A" and terminal 1 of connector "B1" → Continuity
Between terminal 1 of connector "B2" and terminal 1 of connector "C" → No continuity (open)
Therefore, it is found out that there is an open circuit between terminal 1 of connector "B2" and terminal 1 of connector "C".

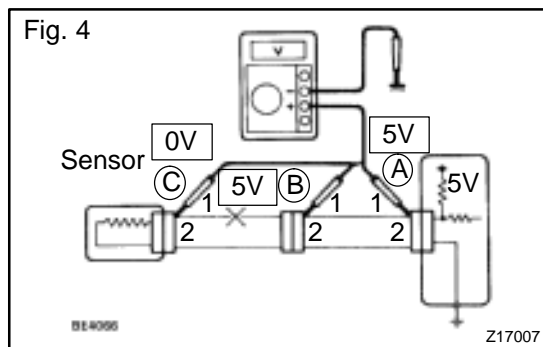

(b) Check the voltage.

In a circuit in which voltage is applied (to the ECU connector terminal), an open circuit can be checked for by conducting a voltage check.

As shown in Fig. 4, with each connector still connected, measure the voltage between body ground and terminal 1 of connector "A" at the ECU 5V output terminal, terminal 1 of connector "B", and terminal 1 of connector "C", in that order.


If the results are:

5V: Between Terminal 1 of connector "A" and Body Ground


5V: Between Terminal 1 of connector "B" and Body Ground

0V: Between Terminal 1 of connector "C" and Body Ground

Then it is found out that there is an open circuit in the wire harness between terminal 1 of "B" and terminal 1 of "C".

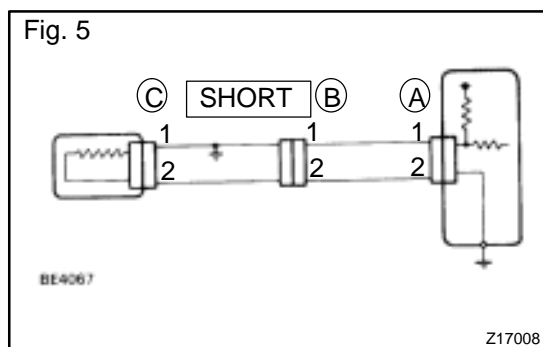**7. CHECK SHORT CIRCUIT**

If the wire harness is ground shorted as in Fig. 5, locate the section by conducting a "continuity check with ground".

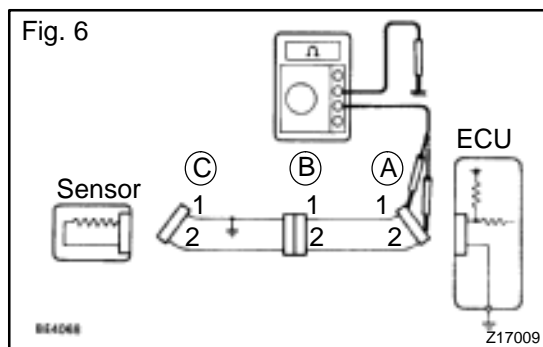

Check the continuity with ground.


- (1) Disconnect connectors "A" and "C" and measure the resistance between terminal 1 and 2 of connector "A" and body ground.

In the case of Fig. 6:

Between terminal 1 of connector "A" and body ground → Continuity (short)

Between terminal 2 of connector "A" and body ground → No continuity

Therefore, it is found out that there is a short circuit between terminal 1 of connector "A" and terminal 1 of connector "C".

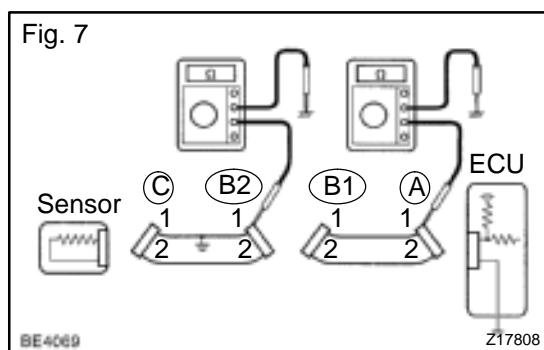

- (2) Disconnect connector "B" and measure the resistance between terminal 1 of connector "A" and body ground, and terminal 1 of connector "B2" and body ground.

In the case of Fig. 7:


Between terminal 1 of connector "A" and body ground → No continuity

Between terminal 1 of connector "B2" and body ground → Continuity (short)

Therefore, it is found out that there is a short circuit between terminal 1 of connector "B2" and terminal 1 of connector "C".


8. CHECK AND REPLACE ECU

First check the ECU ground circuit. If it is faulty, repair it. If it is normal, the ECU could be faulty, so replace the ECU with a normal functioning one and check that the symptoms appear.

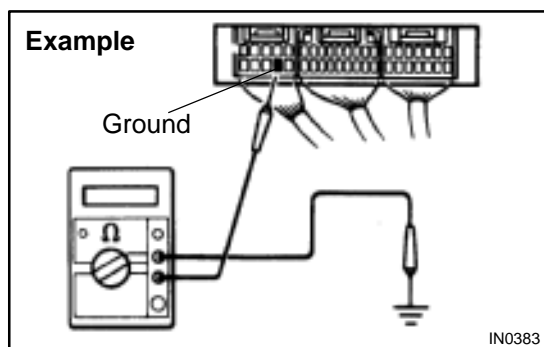

- (1) Measure the resistance between the ECU ground terminal and the body ground.

Resistance: 1 Ω or less

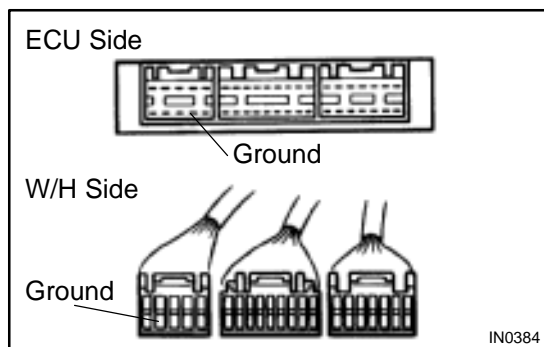

- (2) Disconnect the ECU connector, check the ground terminals on the ECU side and the wire harness side for bend and check the contact pressure.

TERMS

ABBREVIATIONS USED IN THIS MANUAL

IN04Q-11

Abbreviations	Meaning
ABS	Anti-Lock Brake System
AC	Alternating Current
ACC	Accessory
ACIS	Acoustic Control Induction System
ACSD	Automatic Cold Start Device
A.D.D.	Automatic Disconnecting Differential
A/F	Air-Fuel Ratio
AHC	Active Height Control Suspension
ALR	Automatic Locking Retractor
ALT	Alternator
AMP	Amplifier
ANT	Antenna
APPROX.	Approximately
A/T	Automatic Transmission (Transaxle)
ATF	Automatic Transmission Fluid
AUTO	Automatic
AUX	Auxiliary
AVG	Average
AVS	Adaptive Variable Suspension
BA	Brake Assist
BACS	Boost Altitude Compensation System
BAT	Battery
BDC	Bottom Dead Center
B/L	Bi-Level
B/S	Bore-Stroke Ratio
BTDC	Before Top Dead Center
BVSV	Bimetallic Vacuum Switching Valve
Calif.	California
CB	Circuit Breaker
CCo	Catalytic Converter For Oxidation
CD	Compact Disc
CF	Cornering Force
CG	Center Of Gravity
CH	Channel
COMB.	Combination
CPE	Coupe
CPS	Combustion Pressure Sensor
CPU	Central Processing Unit
CRS	Child Restraint System
CTR	Center
C/V	Check Valve
CV	Control Valve

2001 PRIUS (RM778U)

INTRODUCTION – TERMS

CW	Curb Weight
DC	Direct Current
DEF	Defogger
DFL	Deflector
DIFF.	Differential
DIFF. LOCK	Differential Lock
D/INJ	Direct Injection
DLI	Distributorless Ignition
DOHC	Double Over Head Cam
DP	Dash Pot
DS	Dead Soak
DSP	Digital Signal Processor
EBD	Electronic Brake Force Distribution
ECAM	Engine Control And Measurement System
ECD	Electronic Controlled Diesel
ECDY	Eddy Current Dynamometer
ECU	Electronic Control Unit
ED	Electro-Deposited Coating
EDIC	Electric Diesel Injection Control
EDU	Electronic Driving Unit
EFI	Electronic Fuel Injection
E/G	Engine
EGR-VM	Egr-Vacuum Modulator
ELR	Emergency Locking Retractor
EMPS	Electric Motor Power Steering
ENG	Engine
ESA	Electronic Spark Advance
ETCS	Electronic Throttle Control System
EVP	Evaporator
E-VRV	Electric Vacuum Regulating Valve
EXH	Exhaust
FE	Fuel Economy
FF	Front-Engine Front-Wheel-Drive
F/G	Fuel Gage
FIPG	Formed In Place Gasket
FL	Fusible Link
F/P	Fuel Pump
FPU	Fuel Pressure Up
Fr	Front
FR	Front-Engine Rear-Wheel-Drive
F/W	Flywheel
FW/D	Flywheel Damper
FWD	Front-Wheel-Drive
GAS	Gasoline
GND	Ground
HAC	High Altitude Compensator

2001 PRIUS (RM778U)

H/B	Hatchback
H-FUSE	High Current Fuse
HI	High
HID	High Intensity Discharge (Head Lamp)
HSG	Housing
HT	Hard Top
HV	Hybrid Vehicle
HWS	Heated Windshield System
IAC	Idle Air Control
IC	Integrated circuit
IDI	Indirect Diesel Injection
IFS	Independent Front Suspension
IG	Ignition
IIA	Integrated Ignition Assembly
IN	Intake (Manifold, Valve)
INT	Intermittent
I/P	Instrument Panel
IRS	Independent Rear Suspension
J/B	Junction Block
J/C	Junction Connector
KD	Kick-Down
LAN	Local Area Network
LB	Liftback
LCD	Liquid Crystal Display
LED	Light Emitting Diode
LH	Left-Hand
LHD	Left-Hand Drive
L/H/W	Length, Height, Width
LLC	Long-Life Coolant
LNG	Liquified Natural Gas
LO	Low
LPG	Liquified Petroleum Gas
LSD	Limited Slip Differential
LSP & PV	Load Sensing Proportioning And Bypass Valve
LSPV	Load Sensing Proportioning Valve
MAX.	Maximum
MG1	Motor Generator No. 1
MG2	Motor Generator No. 2
MIC	Microphone
MIL	Malfunction Indicator Lamp
MIN.	Minimum
MP	Multipurpose
MPX	Multiplex Communication System
M/T	Manual Transmission
MT	Mount
MTG	Mounting

2001 PRIUS (RM778U)

INTRODUCTION – TERMS

N	Neutral
NA	Natural Aspiration
No.	Number
O/D	Overdrive
OEM	Original Equipment Manufacturing
OHC	Overhead Camshaft
OHV	Overhead Valve
OPT	Option
O/S	Oversize
P & BV	Proportioning And Bypass Valve
PCS	Power Control System
PCV	Positive Crankcase Ventilation
PKB	Parking Brake
PPS	Progressive Power Steering
PS	Power Steering
PTO	Power Take-Off
R & P	Rack And Pinion
R/B	Relay Block
RBS	Recirculating Ball Type Steering
R/F	Reinforcement
RFS	Rigid Front Suspension
RH	Right-Hand
RHD	Right-Hand Drive
RLY	Relay
ROM	Read Only Memory
Rr	Rear
RR	Rear-Engine Rear-Wheel Drive
RRS	Rigid Rear Suspension
RWD	Rear-Wheel Drive
SDN	Sedan
SEN	Sensor
SICS	Starting Injection Control System
SOC	State Of Charge
SOHC	Single Overhead Camshaft
SPEC	Specification
SPI	Single Point Injection
SRS	Supplemental Restraint System
SSM	Special Service Materials
SST	Special Service Tools
STD	Standard
STJ	Cold-Start Fuel Injection
SW	Switch
SYS	System
T/A	Transaxle
TACH	Tachometer
TBI	Throttle Body Electronic Fuel Injection

2001 PRIUS (RM778U)

TC	Turbocharger
TCCS	TOYOTA Computer-Controlled System
TCV	Timing Control Valve
TDC	Top Dead Center
TEMP.	Temperature
TEMS	TOYOTA Electronic Modulated Suspension
TIS	Total Information System For Vehicle Development
T/M	Transmission
TMC	TOYOTA Motor Corporation
TMMK	TOYOTA Motor Manufacturing Kentucky, Inc.
TRAC	Traction Control System
TURBO	Turbocharge
U/D	Underdrive
U/S	Undersize
VCV	Vacuum Control Valve
VENT	Ventilator
VIN	Vehicle Identification Number
VPS	Variable Power Steering
VSC	Vehicle Skid Control
VSV	Vacuum Switching Valve
VTV	Vacuum Transmitting Valve
w/	With
WGN	Wagon
W/H	Wire Harness
w/o	Without
1st	First
2nd	Second
2WD	Two Wheel Drive Vehicle (4x2)
4WD	Four Wheel Drive Vehicle (4x4)

GLOSSARY OF SAE AND TOYOTA TERMS

This glossary lists all SAE–J1930 terms and abbreviations used in this manual in compliance with SAE recommendations, as well as their TOYOTA equivalents.

SAE ABBREVIATIONS	SAE TERMS	TOYOTA TERMS ()—ABBREVIATIONS
A/C	Air Conditioning	Air Conditioner
ACL	Air Cleaner	Air Cleaner, A/CL
AIR	Secondary Air Injection	Air Injection (AI)
AP	Accelerator Pedal	—
B+	Battery Positive Voltage	+B, Battery Voltage
BARO	Barometric Pressure	HAC
CAC	Charge Air Cooler	Intercooler
CARB	Carburetor	Carburetor
CFI	Continuous Fuel Injection	—
CKP	Crankshaft Position	Crank Angle
CL	Closed Loop	Closed Loop
CMP	Camshaft Position	Cam Angle
CPP	Clutch Pedal Position	—
CTOX	Continuous Trap Oxidizer	—
CTP	Closed Throttle Position	LL ON, Idle ON
DFI	Direct Fuel Injection (Diesel)	Direct Injection (DI)
DI	Distributor Ignition	—
DLC1 DLC2 DLC3	Data Link Connector 1 Data Link Connector 2 Data Link Connector 3	1: Check Connector 2: Total Diagnosis Communication Link (TDCL) 3: OBD II Diagnostic Connector
DTC	Diagnostic Trouble Code	Diagnostic Code
DTM	Diagnostic Test Mode	—
ECL	Engine Control Level	—
ECM	Engine Control Module	Engine ECU (Electronic Control Unit)
ECT	Engine Coolant Temperature	Coolant Temperature, Water Temperature (THW)
EEPROM	Electrically Erasable Programmable Read Only Memory	Electrically Erasable Programmable Read Only Memory (EEPROM), Erasable Programmable Read Only Memory (EPROM)
EFE	Early Fuel Evaporation	Cold Mixture Heater (CMH), Heat Control Valve (HCV)
EGR	Exhaust Gas Recirculation	Exhaust Gas Recirculation (EGR)
EI	Electronic Ignition	TOYOTA Distributorless Ignition (TDI)
EM	Engine Modification	Engine Modification (EM)
EPROM	Erasable Programmable Read Only Memory	Programmable Read Only Memory (PROM)
EVAP	Evaporative Emission	Evaporative Emission Control (EVAP)
FC	Fan Control	—
FEEPROM	Flash Electrically Erasable Programmable Read Only Memory	—
FEPROM	Flash Erasable Programmable Read Only Memory	—
FF	Flexible Fuel	—
FP	Fuel Pump	Fuel Pump
GEN	Generator	Alternator
GND	Ground	Ground (GND)

HO2S	Heated Oxygen Sensor	Heated Oxygen Sensor (HO ₂ S)
IAC	Idle Air Control	Idle Speed Control (ISC)
IAT	Intake Air Temperature	Intake or Inlet Air Temperature
ICM	Ignition Control Module	–
IFI	Indirect Fuel Injection	Indirect Injection (IDL)
IFS	Inertia Fuel-Shutoff	–
ISC	Idle Speed Control	–
KS	Knock Sensor	Knock Sensor
MAF	Mass Air Flow	Air Flow Meter
MAP	Manifold Absolute Pressure	Manifold Pressure Intake Vacuum
MC	Mixture Control	Electric Bleed Air Control Valve (EBCV) Mixture Control Valve (MCV) Electric Air Control Valve (EACV)
MDP	Manifold Differential Pressure	–
MFI	Multiport Fuel Injection	Electronic Fuel Injection (EFI)
MIL	Malfunction Indicator Lamp	Check Engine Lamp
MST	Manifold Surface Temperature	–
MVZ	Manifold Vacuum Zone	–
NVRAM	Non-Volatile Random Access Memory	–
O2S	Oxygen Sensor	Oxygen Sensor, O ₂ Sensor (O ₂ S)
OBD	On-Board Diagnostic	On-Board Diagnostic System (OBD)
OC	Oxidation Catalytic Converter	Oxidation Catalyst Convert (OC), CCo
OP	Open Loop	Open Loop
PAIR	Pulsed Secondary Air Injection	Air Suction (AS)
PCM	Powertrain Control Module	–
PNP	Park/Neutral Position	–
PROM	Programmable Read Only Memory	–
PSP	Power Steering Pressure	–
PTOX	Periodic Trap Oxidizer	Diesel Particulate Filter (DPF) Diesel Particulate Trap (DPT)
RAM	Random Access Memory	Random Access Memory (RAM)
RM	Relay Module	–
ROM	Read Only Memory	Read Only Memory (ROM)
RPM	Engine Speed	Engine Speed
SC	Supercharger	Supercharger
SCB	Supercharger Bypass	E-ABV
SFI	Sequential Multiport Fuel Injection	Electronic Fuel Injection (EFI), Sequential Injection
SPL	Smoke Puff Limiter	–
SRI	Service Reminder Indicator	–
SRT	System Readiness Test	–
ST	Scan Tool	–
TB	Throttle Body	Throttle Body
TBI	Throttle Body Fuel Injection	Single Point Injection Central Fuel Injection (Ci)
TC	Turbocharger	Turbocharger
TCC	Torque Converter Clutch	Torque Converter

INTRODUCTION – TERMS

TCM	Transmission Control Module	Transmission ECU, ECT ECU
TP	Throttle Position	Throttle Position
TR	Transmission Range	–
TVV	Thermal Vacuum Valve	Bimetallic Vacuum Switching Valve (BVSV) Thermostatic Vacuum Switching Valve (TVSV)
TWC	Three-Way Catalytic Converter	Three-Way Catalytic (TWC) Manifold Converter CC _{RO}
TWC+OC	Three-Way + Oxidation Catalytic Converter	CC _R + CCo
VAF	Volume Air Flow	Air Flow Meter
VR	Voltage Regulator	Voltage Regulator
VSS	Vehicle Speed Sensor	Vehicle Speed Sensor
WOT	Wide Open Throttle	Full Throttle
WU-OC	Warm Up Oxidation Catalytic Converter	–
WU-TWC	Warm Up Three-Way Catalytic Converter	–
3GR	Third Gear	–
4GR	Fourth Gear	–

OUTSIDE VEHICLE

GENERAL MAINTENANCE

MA02E-02

These are maintenance and inspection items which are considered to be the owner's responsibility. They can be done by the owner or they can have them done at a service shop.

These items include those which should be checked on a daily basis, those which, in most cases, do not require (special) tools and those which are considered to be reasonable for the owner to do.

Items and procedures for general maintenance are as follows.

1. GENERAL NOTES

- Maintenance items may vary from country to country. Check the owner's manual supplement in which the maintenance schedule is shown.
- Every service item in the periodic maintenance schedule must be performed.
- Periodic maintenance service must be performed according to whichever interval in the periodic maintenance schedule occurs first, the odometer reading (miles) or the time interval (months).
- Maintenance service after the last period should be performed at the same interval as before unless otherwise noted.
- Failure to do even one item can cause the engine to run poorly and increase exhaust emissions.

2. TIRES

- (a) Check the pressure with a gauge. If necessary, adjust.
- (b) Check for cuts, damage or excessive wear.

3. WHEEL NUTS

When checking the tires, check the nuts for looseness or for missing nuts. If necessary, tighten them.

4. TIRE ROTATION

Check the owner's manual supplement in which the maintenance schedule is shown.

5. WINDSHIELD WIPER BLADES

Check for wear or cracks whenever they do not wipe clean. If necessary, replace.

6. FLUID LEAKS

Check underneath for leaking fuel, oil, water or other fluid.

7. DOORS AND ENGINE HOOD

- (a) Check that all doors including the trunk lid operate smoothly, and that all latches lock securely.
- (b) Check that the engine hood secondary latch secures the hood from opening when the primary latch is released.

cardiagn.com

INSIDE VEHICLE

GENERAL MAINTENANCE

These are maintenance and inspection items which are considered to be the owner's responsibility. They can be done by the owner or they can have them done at a service shop.

These items include those which should be checked on a daily basis, those which, in most cases, do not require (special) tools and those which are considered to be reasonable for the owner to do.

Items and procedures for general maintenance are as follows.

1. GENERAL NOTES

- Maintenance items may vary from country to country. Check the owner's manual supplement in which the maintenance schedule is shown.
- Every service item in the periodic maintenance schedule must be performed.
- Periodic maintenance service must be performed according to whichever interval in the periodic maintenance schedule occurs first, the odometer reading (miles) or the time interval (months).
- Maintenance service after the last period should be performed at the same interval as before unless otherwise noted.

2. LIGHTS

- (a) Check that the headlights, stop lights, taillights, turn signal lights, and other lights are all working.
- (b) Check the headlight aim.

3. WARNING LIGHTS AND BUZZERS

Check that all warning lights and buzzers function properly.

4. HORN

Check that it is working.

5. WINDSHIELD GLASS

Check for scratches, pits or abrasions.

6. WINDSHIELD WIPER AND WASHER

- (a) Check operation of the wipers and washer.
- (b) Check that the wipers do not streak.

7. WINDSHIELD DEFROSTER

Check that air comes out from the defroster outlet when operating the heater or air conditioner.

8. REAR VIEW MIRROR

Check that it is mounted securely.

9. SUN VISORS

Check that they move freely and are mounted securely.

10. STEERING WHEEL

Check that it has the specified freeplay. Be alert for changes in steering condition, such as hard steering, excessive freeplay or strange noises.

11. SEATS

- (a) Check that the seat adjusters operate smoothly.
- (b) Check that all latches lock securely in any position.
- (c) Check that the head restraints move up and down smoothly and that the locks hold securely in any latch position.
- (d) For fold-down seat backs, check that the latches lock securely.

12. SEAT BELTS

- (a) Check that the seat belt system such as the buckles, retractors and anchors operate properly and smoothly.
- (b) Check that the belt webbing is not cut, frayed, worn or damaged.

13. ACCELERATOR PEDAL

Check the pedal for smooth operation and uneven pedal effort or catching.

14. BRAKE PEDAL (See page BR-7)

- (a) Check the pedal for smooth operation.
- (b) Check that the pedal has the proper reserve distance and freeplay.

15. BRAKES

At a safe place, check that the brakes do not pull to one side when applied.

16. PARKING BRAKE (See page BR-9)

- (a) Check that the pedal has the proper travel.
- (b) On a safe incline, check that the vehicle is held securely with only the parking brake applied.

17. TRANSAXLE "PARK" MECHANISM

- (a) Check the lock release button of the selector lever for proper and smooth operation.
- (b) On a safe incline, check that the vehicle is held securely with the selector lever in "P" position and all brakes released.

UNDER HOOD

MA02G-02

GENERAL MAINTENANCE

1. GENERAL NOTES

- Maintenance items may vary from country to country. Check the owner's manual supplement in which the maintenance schedule is shown.
- Every service item in the periodic maintenance schedule must be performed.
- Periodic maintenance service must be performed according to whichever interval in the periodic maintenance schedule occurs first, the odometer reading (miles) or the time interval (months).
- Maintenance service after the last period should be performed at the same interval as before unless otherwise noted.

2. WINDSHIELD WASHER FLUID

Check that there is sufficient fluid in the tank.

3. ENGINE COOLANT LEVEL

Check that the coolant level is between the "FULL" and "LOW" lines on the see-through reservoir.

4. RADIATOR AND HOSES

- (a) Check that the front of the radiator is clean and not blocked with leaves, dirt or bugs.
- (b) Check the hoses for cracks, kinks, rot or loose connections.

5. BRAKE FLUID LEVELS

Check that the brake fluid levels are near the upper level line on the see-through reservoirs.

6. CHECK TRANSAXLE OIL (FLUID)

- Visually check the transaxle for oil (fluid) leakage.
- If leakage is found, check for the cause and repair.

HINT:

Wait until the engine and motor cools down (approx. 30 min.) before checking the fluid level after extended driving at high speeds, in hot weather, in heavy traffic or pulling a trailer.

ENGINE INSPECTION

HINT:

Inspect these items when the engine is cold.

1. **INSPECT DRIVE BELT**
(See page [CO-4](#))
2. **REPLACE SPARK PLUGS**
(See page [IG-1](#))



3. **INSPECT AIR FILTER**

- (a) Visually check that the air filter is not excessively dirty or oily.

HINT:

Oiliness may indicate a stuck PCV valve.


If necessary, replace the air cleaner element.

- (b) Clean the air filter with compressed air.
First blow from the inside thoroughly, then blow off the outside of the element.

4. **REPLACE AIR FILTER**

Replace the air filter with a new one.

5. **REPLACE ENGINE OIL AND OIL FILTER**
(See page [LU-3](#))
6. **REPLACE ENGINE COOLANT**
(See page [CO-2](#))
7. **INSPECT CHARCOAL CANISTER**
(See page [EC-7](#))
8. **REPLACE GASKET IN FUEL TANK CAP**
(See page [SF-19](#))
9. **INSPECT FUEL LINES AND CONNECTIONS**
(See page [SF-19](#))
10. **INSPECT EXHAUST PIPES AND MOUNTINGS**
(See page [EC-13](#))
11. **ADJUST VALVE CLEARANCE**
(See page [EM-5](#))

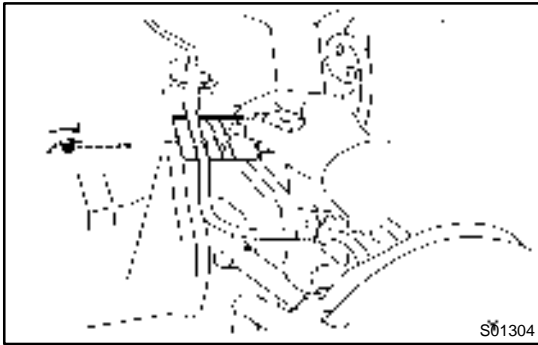

BRAKE INSPECTION

MA02H-03

1. INSPECT BRAKE LINE PIPES AND HOSES

HINT:

Check in a well lighted area. Check the entire circumference and length of the brake hoses using a mirror as required. Turn the front wheels fully right or left before checking the front brake.

- (a) Check all brake lines and hoses for:
 - Damage
 - Wear
 - Deformation
 - Cracks
 - Corrosion
 - Leaks
 - Bends
 - Twists
- (b) Check all clamps for tightness and connections for leakage.
- (c) Check that the hoses and lines are clear of sharp edges, moving parts and the exhaust system.
- (d) Check that the lines installed in grommets pass through the center of the grommets.

2. INSPECT FRONT BRAKE PADS AND DISCS

(See page [BR-29](#))

HINT:

If a squealing or scraping noise comes from the brake during, check the pad wear indicator to see if it is contacting the disc rotor. If so, the disc pad should be replaced.

3. INSPECT BRAKE LININGS AND DRUMS

(See page [BR-35](#))

CHASSIS INSPECTION

MA048-01

1. INSPECT STEERING LINKAGE

- (a) Check the steering wheel freeplay. (See page [SR-3](#))
- (b) Check the steering linkage for looseness or damage.

Check that:

- Tie rod ends do not have excessive play.
- Dust seals and boots are not damaged.
- Boot clamps are not loose.


2. INSPECT SRS AIRBAG (See page [RS-2](#))

3. INSPECT STEERING GEAR HOUSING OIL

Check the steering gear housing for oil leakage.

4. INSPECT DRIVE SHAFT BOOTS

Check the drive shaft boots for clamp looseness, leakage or damage.

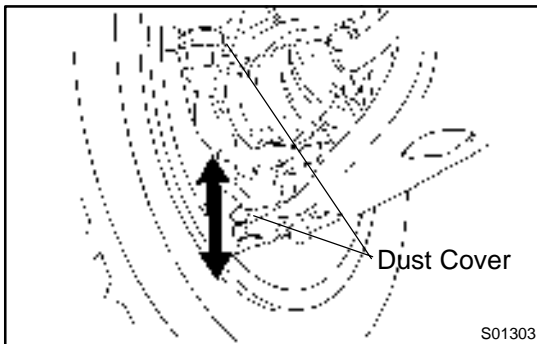

5. INSPECT BALL JOINTS AND DUST COVERS

- (a) Inspect the ball joints for excessive looseness.
 - Jack up the front of the vehicle and place wooden blocks with a height of 180 – 200 mm (7.09 – 7.87 in.) under the front tires.
 - Lower the jack until there is about half a load on the front coil spring. Place stands under the vehicle for safety.
 - Check that the front wheels are pointing straight ahead, and block them with chocks.
 - Using a lever, pry up the end of the lower arm, and check the amount of play.

Maximum ball joint vertical play: 0 mm (0 in.)

If there is play, replace the ball joint.

- (b) Check the dust cover for damage.

6. CHECK TRANSAXLE OIL (FLUID)

Visually check the transaxle for oil (fluid) leakage.

If leakage is found, check for the cause and repair.

7. REPLACE TRANSAXLE OIL (FLUID)

Replace the transaxle oil (See page [HT-26](#)).



BODY INSPECTION


MA049-01

1. TIGHTEN BOLTS AND NUTS ON CHASSIS AND BODY

Tighten these parts:

- Front seat mount bolts

Torque: 37 N·m (375 kgf·cm, 27 ft·lbf)

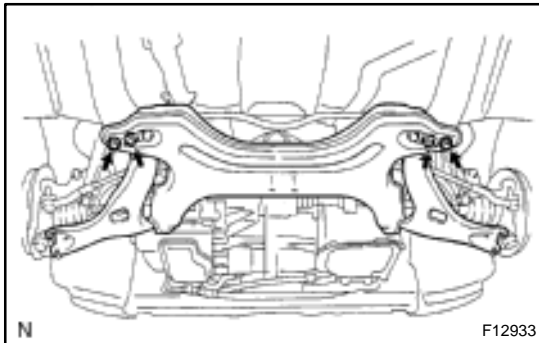


- Front suspension member-to-body mounting bolts

Torque:

Bolt A: 113 N·m (1,150 kgf·cm, 83 ft·lbf)

Bolt B: 157 N·m (1,600 kgf·cm, 116 ft·lbf)

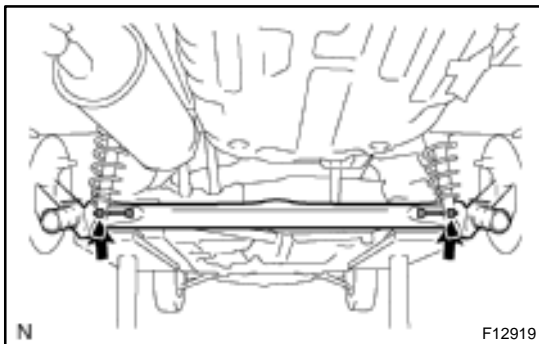

- Rear suspension member-to-body mounting nuts

Torque: 90 N·m (918 kgf·cm, 66 ft·lbf)

2. FINAL INSPECTION

(a) Check the operation of the body parts:

- Hood:
Auxiliary catch operate properly
Hood locks securely when closed
- Front and rear doors:
Door lock operates properly
Doors close properly
- Luggage compartment door:
Door lock operates properly
- Seats:
Seat adjusts easily and locks securely in any position
Front seat back locks securely in any position
Folding-down rear seat backs lock securely

(b) Road test:

- Check the engine and chassis for abnormal noises.
- Check that the vehicle does not wander or pull to one side.
- Check that the brake work properly and do not drag.

(c) Be sure to deliver a clean car. especially check:

- Steering wheel
- Shift lever knob
- All switch knobs
- Door handles
- Seats

MAINTENANCE EQUIPMENT













PP0E6-02

Mirror	Brake hose
Torque wrench	







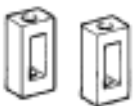





ENGINE MECHANICAL

SST (Special Service Tools)

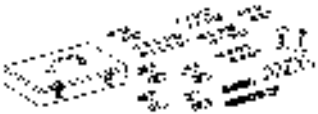


PP3AW-01

	09032-00100 Oil Pan Seal Cutter	
	09201-01055 Valve Guide Bushing Remover & Replacer 5.5	
	09201-41020 Valve Stem Oil Seal Replacer	
	09202-70020 Valve Spring Compressor	
	(09202-00010) Attachment	
	09213-70010 Crankshaft Pulley Holding Tool	
	09221-25026 Piston Pin Remover & Replacer	
	(09221-00021) Body	
	(09221-00030) Spring	
	(09221-00141) Guide H	
	(09221-00150) Bushing "D"	
	(09221-00190) Guide "K"	

PREPARATION – ENGINE MECHANICAL

	09222-30010	Connecting Rod Bushing Remover & Replacer	
	09223-15030	Oil Seal & Bearing Replacer	
	09330-00021	Companion Flange Holding Tool	
	09612-22011	Tilt Handle Bearing Replacer	
	09950-50012	Puller C Set	
	(09951-05010)	Hanger 150	
	(09952-05010)	Slide Arm	
	(09953-05020)	Center Bolt 150	
	(09954-05020)	Claw No.2	
	09950-70010	Handle Set	
	(09951-07100)	Handle 100	
	09301-00110	Clutch Guide Tool	

RECOMMENDED TOOLS

	09090-04020 Engine Sling Device	
	09200-00010 Engine Adjust Kit .	
	09258-00030 Hose Plug Set .	

EQUIPMENT

Abrasive compound	Valve
Caliper gauge	
CO/HC meter	
Compression gauge	
Connecting rod aligner	
Cylinder gauge	
Dial indicator	
Dye penetrant	
Engine tune-up tester	
Groove cleaning tool	Piston ring groove
Heater	
Magnetic finger	
Micrometer	
Pin hole grinder	Piston pin hole of piston
Piston ring compressor	
Piston ring expander	
Plastigage	
Precision straight edge	
Press	
Ridge reamer	Cylinder
Soft brush	
Solvent	
Spring tester	Valve spring
Steel square	Valve spring
Thermometer	
Torque wrench	
Torx wrench socket set	Stud bolt
TOYOTA hand held tester or OBDII scan tool	
Valve seat cutter	
V-block	
Vernier calipers	
Wire brush	Valve

SSM (Special Service Materials)

08826-00080	Seal Packing Black or equivalent (FIPG)	
08826-00100	Seal Packing 1282B, THREE BOND 1282B or equivalent (FIPG)	
08833-00070	Adhesive 1324, THREE BOND 1324 or equivalent	

EMISSION CONTROL EQUIPMENT


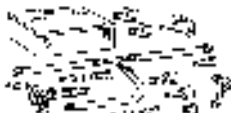








PP2FE-03

Torque wrench	
Vacuum gauge	
Pressure gauge	
Hose clipper	
MITYVAC (Hand-held vacuum pump)	
TOYOTA hand held tester or OBDII scan tool	




SFI

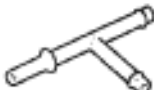SST (Special Service Tools)

PP3AX-02

	09268-21010 Fuel Hose Puller	
	09268-41047 Injection Measuring Tool Set	
	(95336-08070) Hose	
	09268-45014 EFI Fuel Pressure Gauge	
	(09268-41200) Gauge	
	(09268-41220) Hose	
	(09268-41250) T Joint	
	09816-30010 Oil Pressure Switch Socket	
	09842-30080 EFI Inspection Wire "H"	
	09843-18020 Diagnosis Check Wire	

RECOMMENDED TOOLS

	09082-00040 TOYOTA Electrical Tester.	
	09200-00010 Engine Adjust Kit .	
	09258-00030 Hose Plug Set .	Plug for the vacumm hose, fuel hose etc.





EQUIPMENT

Carburetor cleaner	Throttle body
Graduated cylinder	Injector
TOYOTA hand held tester or OBD II scan tool	
Soft brush	Throttle body
Sound scope	Injector
Torque wrench	
Vacuum gauge	


COOLING

SST (Special Service Tools)

PP3AY-01

	09960-10010 Variable Pin Wrench Set	
	(09962-01000) Variable Pin Wrench Arm Assy	
 	(09963-00600) Pin 6	

RECOMMENDED TOOLS

	09082-00040 TOYOTA Electrical Tester.	
---	---------------------------------------	--

EQUIPMENT

Belt tension gauge	
Heater	Thermostat
Radiator cap tester	
Thermometer	Thermostat
Torque wrench	
Vernier calipers	

COOLANT


Item	Capacity	Classification
Engine coolant	4.9 liters (5.2 US qts, 4.3 Imp. qts)	Ethylene-glycol base

cardiagn.com

LUBRICATION

SST (Special Service Tools)

PP3AZ-01

	09228-06501 Oil Filter Wrench	
---	-------------------------------	--

EQUIPMENT

Oil pressure gauge	
Torque wrench	
Feeler gauge	
Straight edge	

LUBRICANT

Item	Capacity	Classification
Engine oil		
Drain and refill	3.7 liters (3.9 US qts, 3.3 Imp.qts)	API grade SJ, Energy-Conserving or ILSAC multigrade engine oil. SAE 5W-30 is the best choice for your vehicle, for good fuel economy, and good starting in cold weather.
w/ Oil filter change	3.4 liters (3.6 US qts, 3.0 Imp.qts)	
w/o Oil filter change	4.1 liters (4.3 US qts, 3.6 Imp.qts)	
Dry fill		



SSM (Special Service Materials)

08833-00080	Adhesive 1344 THREE BOND 1344 LOCTITE 242 or equivalent	Oil pressure switch
-------------	---	---------------------

IGNITION

RECOMMENDED TOOLS

PP2FN-02


	09082-00040 TOYOTA Electrical Tester.	
	09200-00010 Engine Adjust Kit .	

EQUIPMENT

Spark plug cleaner	
--------------------	--

HYBRID VEHICLE CONTROL RECOMMENDED TOOLS

PP3AS-01

	09082-00040 TOYOTA Electrical Tester.
---	---------------------------------------













EQUIPMENT

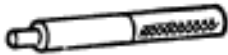



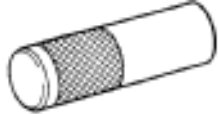


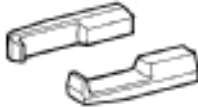

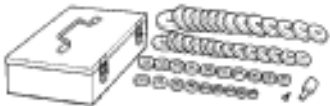



Insulated gloves	
Insulated tools	
Vinyl tape	
Megger (500V)	
Megger (1000V)	

HYBRID TRANSAXLE


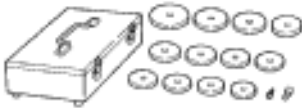






SST (Special Service Tools)

PP3AM-01



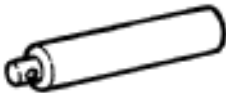


	09308-00010 Oil Seal Puller	
	09350-32014 TOYOTA Automatic Transmission Tool Set	
	(09351-32130) Handle	
	(09351-32150) Oil Seal Replacer	
	09388-40010 Input Oil Seal Replacer	
	09527-10011 Rear Axle Shaft Bearing Remover	
	09564-32011 Differential Preload Adaptor	
	09608-06041 Front Hub Inner Bearing Cone Replacer	
	09612-30012 Steering Worm Bearing Puller	
	09710-20011 Front Suspension Bushing Tool Set	
	(09710-06071) Replacer	
	09710-22021 Front Suspension Bushing Tool Set	

	(09710-01031) Upper Arm Bushing Replacer	
	09950-00020 Bearing Remover	
	09950-40011 Puller B Set	
	(09951-04010) Hanger 150	
	(09952-04010) Slide Arm	
	(09953-04020) Center Bolt 150	
	(09954-04010) Arm 25	
	(09955-04061) Claw No.6	
	(09958-04011) Holder	
	09950-60010 Replacer Set	
	(09951-00230) Replacer 23	
	(09951-00330) Replacer 33	
	(09951-00370) Replacer 37	

PREPARATION – HYBRID TRANSAXLE

	(09951-00460) Replacer 46	
	09950-60020 Replacer Set No.2	
	(09951-00680) Replacer 68	
	09950-70010 Handle Set	
	(09951-07100) Handle 100	
	09992-00095 Automatic Transmission Oil Pressure Gauge Set	
	(09992-00112) Adaptor A	
	(09992-00271) Gauge Assy	

RECOMMENDED TOOLS

	09025-00010 Torque Wrench (30 kgf-cm)	
	09031-00030 Pin Punch .	
	09040-00011 Hexagon Wrench Set .	
	09082-00040 TOYOTA Electrical Tester.	
	09090-04020 Engine Sling Device	

EQUIPMENT

Dial indicator	
Pin punch	
Straight edge	
Torque wrench	

LUBRICANT

Item	Capacity	Classification
Hybrid transaxle oil	4.6 liters (4.9 US qts, 4.0 Imp. qts)	ATF Type T-IV

cardiagn.com






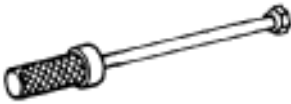






SSM (Special Service Materials)

08826-00080	Seal Packing Black or equivalent (FIPG)	
08826-00090	Seal Packing 1281, THREE BOND 1281 or equivalent (FIPG)	
08833-00070	Adhesive 1324, THREE BOND 1324 or equivalent	
08833-00080	Adhesive 1344 THREE BOND 1344 LOCTITE 242 or equivalent	














SUSPENSION AND AXLE














SST (Special Service Tools)

PP3A9-01






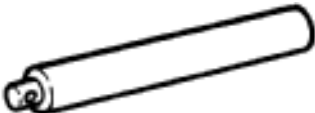
	09214-76011 Crankshaft Pulley Replacer	Rear axle
	09240-00020 Wire Gauge Set	Front drive shaft
	09520-00031 Rear Axle Shaft Puller	
	(09520-00040) Shocker	Front axle Rear axle
	(09521-00010) Attachment	Front axle
	(09521-00020) Rod with Grip	Front axle Rear axle
	09520-01010 Drive Shaft Remover Attachment	Front drive shaft
	09520-24010 Differential Side Gear Shaft Puller	Front drive shaft
	(09520-32040) Shocker Set	
	09521-24010 Drive Shaft Boot Clamping Tool	Front drive shaft
	09527-17011 Rear Axle Shaft Bearing Remover	Front axle
	09608-16042 Front Hub Bearing Adjusting Tool	Front drive shaft

PREPARATION – SUSPENSION AND AXLE





	(09608-02021) Bolt & Nut	
	(09608-02041) Retainer	
	09608-32010 Steering Knuckle Oil Seal Replacer	Front axle
	09628-10011 Ball Joint Puller	Front axle Rear axle
	09628-62011 Ball Joint Puller	Front axle Front drive shaft Front suspension
	09710-40010 Toe Control Link Replacer Arm	Rear suspension
	(09711-40010) Toe Control Link Replacer Arm No.1	
	(09712-40010) Toe Control Link Replacer Arm No.2	
	09727-30021 Coil Spring Compressor	Front suspension Rear suspension
	(09727-00010) Bolt Set	
	(09727-00021) Arm Set	
	(09727-00031) Compressor	
	09729-22031 Front Spring Upper Seat Holder	Front suspension

	09751-36011 Brake Line Union Nut 10 x 12 mm Wrench	Rear suspension
	09930-00010 Drive Shaft Nut Chisel	Front axle Front drive shaft
	09950-00020 Bearing Remover	Front drive shaft Rear axle
	09950-40011 Puller B Set	Front axle
	(09951-04020) Hanger 200	
	(09952-04010) Slide Arm	
	(09953-04020) Center Bolt 150	
	(09954-04010) Arm 25	
	(09955-04011) Claw No.1	
	(09957-04010) Attachment	
	(09958-04011) Holder	
	09950-60010 Replacer Set	Front axle
	(09951-00370) Replacer 37	

PREPARATION – SUSPENSION AND AXLE

	(09951-00550) Replacer 55	
	(09951-00650) Replacer 65	
	09950-60020 Replacer Set No.2	Front axle
	(09951-00730) Replacer 73	
	09950-70010 Handle Set	Front axle
	(09951-07150) Handle 150	

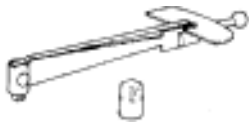RECOMMENDED TOOLS

	09025-00010 Torque Wrench (30 kgf-cm)	
	09042-00010 Torx Socket T30 .	
	09905-00012 Snap Ring No.1 Expander .	
	09905-00013 Snap Ring Pliers .	

EQUIPMENT

Dial indicator with magnetic base	
Drill	
Torque wrench	













LUBRICANT






Item	Capacity	Application
Front drive shaft		
Inboard joint grease Color=Yellow ocher	180 – 190 g (6.3 – 6.7 oz.)	
Outboard joint grease Color=Yellow ocher	110 – 120 g (3.9 – 4.2 oz.)	

BRAKE



SST (Special Service Tools)

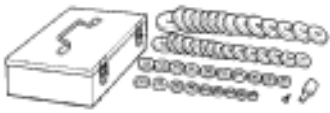PP3BD-01

	09023-00100 Union Nut Wrench 10 mm	
	09214-76011 Crankshaft Pulley Replacer	
	09318-12010 Transfer Bearing Adjusting Nut Wrench	
	09520-00031 Rear Axle Shaft Puller	
	(09520-00040) Shocker	
	(09521-00020) Rod with Grip	
	09950-00020 Bearing Remover	
	09703-30010 Brake Shoe Return Spring Tool	
	09709-29018 LSPV Gauge Set	
	09718-00010 Shoe Hold Down Spring Driver	
	09751-36011 Brake Line Union Nut 10 x 12 mm Wrench	
	09843-18040 Diagnosis Check Wire No.2	

	09630-00014 Power Steering Gear Housing Overhaul Tool Set	
	(09631-00142) Overhaul Stand	
	09950-60010 Replacer Set	
	(09951-00180) Replacer 18	
	(09951-00190) Replacer 19	

RECOMMENDED TOOLS

	09082-00040 TOYOTA Electrical Tester.	
	09905-00013 Snap Ring Pliers .	Master cylinder

EQUIPMENT

Torque wrench	
Micrometer	Brake disc
Dial indicator	Brake disc
Vernier calipers	Brake disc
Brake drum gauge	
Effort gauge	






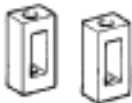


LUBRICANT

Item	Capacity	Classification
Brake fluid	–	SAE J1703 or FMVSS No. 116 DOT 3



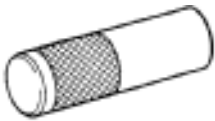

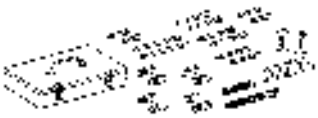
STEERING

SST (Special Service Tools)

PP3BA-01

	09608-06041 Front Hub Inner Bearing Cone Replacer	Tilt steering column
	09612-00012 Rack & Pinion Steering Rack Housing Stand	Electric motor power steering
	09922-10010 Variable Open Wrench	Electric motor power steering
	09950-50012 Puller C Set	Tilt steering column
	(09951-05010) Hanger 150	
	(09952-05010) Slide Arm	
	(09953-05020) Center Bolt 150	
	(09954-05020) Claw No.2	

RECOMMENDED TOOLS

	09042-00010 Torx Socket T30 .	Tilt steering column
	09904-00010 Expander Set .	
	(09904-00050) No. 4 Claw	
	09905-00012 Snap Ring No.1 Expander .	
	09905-00013 Snap Ring Pliers .	





EQUIPMENT

Torque wrench	
---------------	--


SUPPLEMENTAL RESTRAINT SYSTEM

SST (Special Service Tools)

PP0SY-02

	09082-00700 SRS Airbag Deployment Tool	
	09082-00750 Airbag Deployment Wire Sub-harness No.3	for Side Airbag Assembly
	09082-00760 Airbag Deployment Wire Sub-harness No.4	for Driver's and Front Passenger Airbag Assembly
	09843-18040 Diagnosis Check Wire No.2	

RECOMMENDED TOOLS

	09082-00040 TOYOTA Electrical Tester.	
---	---------------------------------------	--


EQUIPMENT

Torque wrench	
Bolt: Length: 35 mm (1.38 in.) Pitch: 1.0 mm (0.039 in.) Diam: 6.0 mm (0.236 in.)	Airbag disposal
Tire Width: 185 mm (7.28 in.) Inner diam: 360 mm (14.17 in.)	Airbag disposal
Tire with disc wheel Width: 185 mm (7.28 in.) Inner diam: 360 mm (14.17 in.)	Airbag disposal
Vinyl bag	Airbag disposal

BODY ELECTRICAL




SST (Special Service Tools)

PP26C-02

	09843-18040 Diagnosis Check Wire No.2	
---	--	--

cardiagn.com

RECOMMENDED TOOLS

	09082-00040 TOYOTA Electrical Tester.	
	09041-00030 Torx Driver T30 .	Steering wheel pad
	09042-00010 Torx Socket T30 .	Steering wheel pad

EQUIPMENT

Voltmeter	
Ammeter	
Ohmmeter	
Test lead	
Syphon	Brake fluid level warning switch
Bulb (3.4W)	Fuel sender gauge, Fuel level warning switch
Dry cell battery	Wireless door lock transmitter
Torque wrench	
Masking tape	Rear window defogger wire
Tin foil	Rear window defogger wire

SSM (Special Service Materials)

08888-88888	DuPont Paste No. 4817 or equivalent	Rear window defogger
-------------	-------------------------------------	----------------------






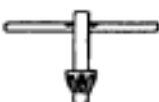


BODY

SST (Special Service Tools)

PP3B4-01

	09812-00010 Door Hinge Set Bolt Wrench	
	09804-24010 Luggage Compartment Door Torsion Bar Tool	
	09082-00700 SRS Airbag Deployment Tool	
	09082-00730 Airbag Deployment Wire Sub-Harness No.1	
	09082-00740 Airbag Deployment Wire Sub-harness No.2	

RECOMMENDED TOOLS

	09050-20010 Air Riveter.	
	(09050-02010) Dust Cap.	
	(09050-02020) Nose Piece No.1.	
	09050-00032 Air Drill	
	(09050-00210) Chuck Set	
	(09050-00220) Handle	
	09060-60350 Revet Cutter.	
	09070-20010 Moulding Remover .	

EQUIPMENT

Clip remover	
Torque wrench	
Hexagon wrench (6 mm)	
Torx driver	
Hog ring pliers	
Hand riveter	
Tape	To avoid surface damage
Adhesive tape	To avoid surface damage
Double-stick tape	
Adhesive	
Cleaner	
Shop rag	
Knife	
Sealer gun	
Brush	
Putty spatula	
Glass plate or similar object	
Wooden block or similar object	
Heat light	
Piano wire	
Rope (no projections, difficult to break)	Seat belt pretensioner
Tire with disk wheel Width: 185 mm (7.28 in.) Inner diam: 360 mm (14.17 in.)	Seat belt pretensioner
Vinyl bag	Seat belt pretensioner

LUBRICANT

Item	Capacity	classification
MP grease	–	–













SSM (Special Service Materials)



08833-00070	Adhesive 1324, THREE BOND 1324 or equivalent	
08833-00070	Adhesive 1324, THREE BOND 1324 or equivalent	
08850-00801	Windshield Glass Adhesive Set or equivalent	

AIR CONDITIONING







SST (Special Service Tools)

PP3AD-01

	07110-58060 Air Conditioner Service Tool Set	
	(07117-78050) Refrigerant Charging Gauge	
	(07117-88060) Refrigerant Charging Hose	Discharge (Red)
	(07117-88070) Refrigerant Charging Hose	Suction (Blue)
	(07117-88080) Refrigerant Charging Hose	Utility (Green)
	(07117-58060) Refrigerant Drain Service Valve	
	(07117-58080) Quick Disconnect Adapter	Discharge (diam. 16 mm)
	(07117-58090) Quick Disconnect Adapter	Suction (diam. 13 mm)
	(07117-58070) T-Joint	
	07116-38360 Gas Leak Detector Assembly	
	07112-76050 Magnetic Clutch Stopper	
	07112-66040 Magnetic Clutch Remover	

	09870-00015 A/C Quick Joint Puller No.1	Suction tube
	09870-00025 A/C Quick Joint Puller No.2	Liquid tube

RECOMMENDED TOOLS

	09040-00011 Hexagon Wrench Set .	
	(09043-20050) Socket Hexagon Wrench 5.	Expansion valve 5.0 mm (0.20 in.)
	(09043-20100) Socket Hexagon Wrench 10.	Radiator & condenser module 10 mm (0.39 in.)
	09082-00040 TOYOTA Electrical Tester.	
	09216-00021 Belt Tension Gauge .	
	09905-00013 Snap Ring Pliers .	

EQUIPMENT

Voltmeter	
Ammeter	
Ohmmeter	
Test lead	
Thermometer	Sensor, ECT switch
Torque wrench	
Dial indicator	Magnetic clutch
Plastic hammer	Magnetic clutch



















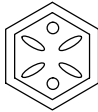

LUBRICANT

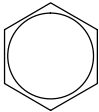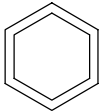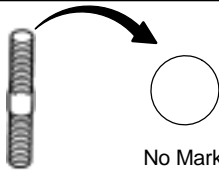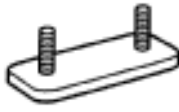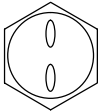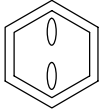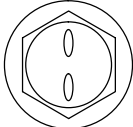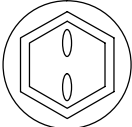Item	Capacity	Classification
Compressor oil	–	ND-OIL 8 or equivalent
When replacing condenser	40 cc (1.4 fl.oz.)	
When replacing evaporator	40 cc (1.4 fl.oz.)	
When replacing compressor	120 cc (4.1 fl.oz.)	

STANDARD BOLT

HOW TO DETERMINE BOLT STRENGTH

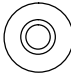SS02S-01





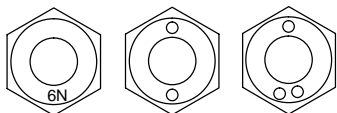
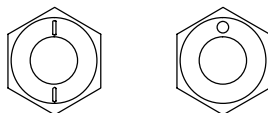
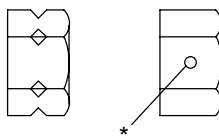
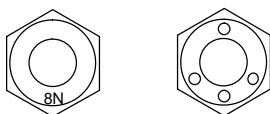
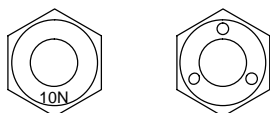
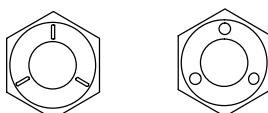

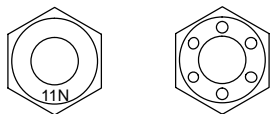
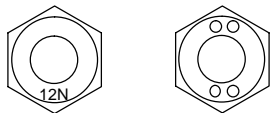
Bolt Type				Class
Hexagon Head Bolt		Stud Bolt	Weld Bolt	
Normal Recess Bolt	Deep Recess Bolt			
<div><div>4</div><div></div><div>No Mark</div></div>	<div><div></div><div>No Mark</div></div>	<div><div></div><div>No Mark</div></div>	<div></div>	4T
<div><div>5</div><div></div></div>	<div><div></div></div>			5T
<div><div>6</div><div></div><div>w/ Washer</div></div>	<div><div></div><div>w/ Washer</div></div>	<div><div></div></div>		6T
<div><div>7</div><div></div></div>	<div><div></div></div>			7T
<div><div>8</div></div>	<div><div></div></div>	<div><div></div></div>		8T
<div><div>9</div></div>	<div><div></div></div>			9T
<div><div>10</div></div>	<div><div></div></div>			10T
<div><div>11</div></div>	<div><div></div></div>			11T

B06431

SPECIFIED TORQUE FOR STANDARD BOLTS

Class	Diameter mm	Pitch mm	Specified torque					
			Hexagon head bolt			Hexagon flange bolt		
			N·m	kgf·cm	ft·lbf	N·m	kgf·cm	ft·lbf
4T	6	1	5	55	48 in.·lbf	6	60	52 in.·lbf
	8	1.25	12.5	130	9	14	145	10
	10	1.25	26	260	19	29	290	21
	12	1.25	47	480	35	53	540	39
	14	1.5	74	760	55	84	850	61
	16	1.5	115	1,150	83	–	–	–
5T	6	1	6.5	65	56 in.·lbf	7.5	75	65 in.·lbf
	8	1.25	15.5	160	12	17.5	175	13
	10	1.25	32	330	24	36	360	26
	12	1.25	59	600	43	65	670	48
	14	1.5	91	930	67	100	1,050	76
	16	1.5	140	1,400	101	–	–	–
6T	6	1	8	80	69 in.·lbf	9	90	78 in.·lbf
	8	1.25	19	195	14	21	210	15
	10	1.25	39	400	29	44	440	32
	12	1.25	71	730	53	80	810	59
	14	1.5	110	1,100	80	125	1,250	90
	16	1.5	170	1,750	127	–	–	–
7T	6	1	10.5	110	8	12	120	9
	8	1.25	25	260	19	28	290	21
	10	1.25	52	530	38	58	590	43
	12	1.25	95	970	70	105	1,050	76
	14	1.5	145	1,500	108	165	1,700	123
	16	1.5	230	2,300	166	–	–	–
8T	8	1.25	29	300	22	33	330	24
	10	1.25	61	620	45	68	690	50
	12	1.25	110	1,100	80	120	1,250	90
9T	8	1.25	34	340	25	37	380	27
	10	1.25	70	710	51	78	790	57
	12	1.25	125	1,300	94	140	1,450	105
10T	8	1.25	38	390	28	42	430	31
	10	1.25	78	800	58	88	890	64
	12	1.25	140	1,450	105	155	1,600	116
11T	8	1.25	42	430	31	47	480	35
	10	1.25	87	890	64	97	990	72
	12	1.25	155	1,600	116	175	1,800	130

HOW TO DETERMINE NUT STRENGTH

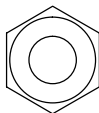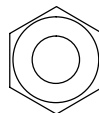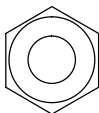Nut Type			Class
Present Standard Hexagon Nut	Old Standard Hexagon Nut		
	Cold Forging Nut	Cutting Processed Nut	
 No Mark			4N
 No Mark (w/ Washer)	 No Mark (w/ Washer)	 No Mark	5N (4T)
			6N
			7N (5T)
			8N
		 No Mark	10N (7T)
			11N
			12N

*: Nut with 1 or more marks on one side surface of the nut.

HINT:

Use the nut with the same number of the nut strength classification or the greater than the bolt strength classification number when tightening parts with a bolt and nut.

Example: Bolt = 4T

Nut = 4N or more

2001 PRIUS (RM778U)

MAINTENANCE
SERVICE DATA

SS0MG-01

Front axle and suspension	
Ball joint vertical play	Maximum 0 mm (0 in.)

cardiagn.com

TORQUE SPECIFICATION

Part tightened		N·m	kgf·cm	ft·lbf
Front seat x Body		37	375	27
Front suspension member x Body (See page MA-7)	Bolt A	113	1,152	83
	Bolt B	157	1,600	116
Rear suspension member x Body		90	918	66

ENGINE MECHANICAL

SERVICE DATA

SS174-03

Compression pressure	at 250 rpm STD Minimum Difference between each cylinder	728 kPa (7.4 kgf/cm ² , 106 psi) 534 kPa (5.4 kgf/cm ² , 77 psi) 98 kPa (1.0 kgf/cm ² , 14 psi)
Valve clearance	Valve lifter for repair part at cold Intake Exhaust No. 06 No. 08 No. 10 No. 12 No. 14 No. 16 No. 18 No. 20 No. 22 No. 24 No. 26 No. 28 No. 30 No. 32 No. 34 No. 36 No. 38 No. 40 No. 42 No. 44 No. 46 No. 48 No. 50 No. 52 No. 54 No. 56 No. 58 No. 60 No. 62 No. 64 No. 66 No. 68 No. 70 No. 72 No. 74	0.17 – 0.23 mm (0.007 – 0.009 in.) 0.27 – 0.33 mm (0.011 – 0.013 in.) 5.060 mm (0.1992 in.) 5.080 mm (0.2000 in.) 5.100 mm (0.2008 in.) 5.120 mm (0.2016 in.) 5.140 mm (0.2024 in.) 5.160 mm (0.2031 in.) 5.180 mm (0.2039 in.) 5.200 mm (0.2047 in.) 5.220 mm (0.2055 in.) 5.240 mm (0.2063 in.) 5.260 mm (0.2071 in.) 5.280 mm (0.2079 in.) 5.300 mm (0.2087 in.) 5.320 mm (0.2094 in.) 5.340 mm (0.2102 in.) 5.360 mm (0.2110 in.) 5.380 mm (0.2118 in.) 5.400 mm (0.2126 in.) 5.420 mm (0.2134 in.) 5.440 mm (0.2142 in.) 5.460 mm (0.2150 in.) 5.480 mm (0.2157 in.) 5.500 mm (0.2165 in.) 5.520 mm (0.2173 in.) 5.540 mm (0.2181 in.) 5.560 mm (0.2189 in.) 5.580 mm (0.2197 in.) 5.600 mm (0.2205 in.) 5.620 mm (0.2213 in.) 5.640 mm (0.2220 in.) 5.660 mm (0.2228 in.) 5.680 mm (0.2236 in.) 5.700 mm (0.2244 in.) 5.720 mm (0.2252 in.) 5.740 mm (0.2260 in.)
Ignition timing		7 – 15° BTDC @ idle
Idle speed	w/ Cooling fan off	1,000 ± 50 rpm (A/C OFF) 1,200 ± 50 rpm (A/C ON)
Chain and timing sprocket	Chain length at 16 links Camshaft timing sprocket wear (w/ chain) Crankshaft timing sprocket wear (w/ chain)	Maximum Minimum Minimum 123.2 mm (4.850 in.) 96.2 mm (3.787 in.) 50.5 mm (1.988 in.)
Chain tensioner slipper and vibration damper	Wear Maximum	1.0 mm (0.039 in.)

SERVICE SPECIFICATIONS – ENGINE MECHANICAL

Cylinder head	Warpage		
	Cylinder block side	Maximum	0.05 mm (0.0020 in.)
	Intake manifold side	Maximum	0.01 mm (0.0394 in.)
	Exhaust manifold side	Maximum	0.01 mm (0.0394 in.)
	Valve seat		20°, 45°, 75°
	Refacing angle		45°
	Contacting angle		1.0 – 1.4 mm (0.039 – 0.055 in.)
	Contacting width		9.685 – 9.706 mm (0.38130 – 0.38213 in.)
Valve guide bushing	Valve guide bushing bore diameter	STD	9.735 – 9.756 mm (0.38327 – 0.38493 in.)
		O/S 0.05	
Valve guide bushing	Inside diameter		5.010 – 5.030 mm (0.19724 – 0.19803 in.)
	Protrusion height		9.0 – 9.4 mm (0.354 – 0.370 in.)
Valve	Valve overall length	STD Intake	89.25 mm (3.5138 in.)
		Exhaust	87.90 mm (3.4606 in.)
		Minimum Intake	88.95 mm (3.5020 in.)
		Exhaust	87.60 mm (3.4488 in.)
	Valve face angle		44.5°
	Stem diameter	Intake	4.970 – 4.985 mm (0.19567 – 0.19626 in.)
		Exhaust	4.965 – 4.980 mm (0.19547 – 0.19606 in.)
	Stem oil clearance	STD Intake	0.025 – 0.060 mm (0.00098 – 0.00236 in.)
		Exhaust	0.030 – 0.065 mm (0.00118 – 0.00256 in.)
		Maximum Intake	0.08 mm (0.0031 in.)
		Exhaust	0.10 mm (0.0039 in.)
Valve spring	Deviation	Maximum	1.6 mm (0.063 in.)
	Angle (Reference)	Maximum	2°
	Free length		59.77 mm (2.353 in.)
	Installed tension at 32.5 mm (1.280 in.)		140 – 154 N (14.3 – 15.7 kgf, 31.5 – 34.6 lbf)
	Maximum working tension at 23.9 mm (0.941 in.)		180 – 198 N (18.4 – 20.2 kgf, 40.4 – 44.8 lbf)
Valve lifter	Lifter diameter		30.966 – 30.976 mm (1.21913 – 1.21952 in.)
	Lifter bore diameter		31.009 – 31.025 mm (1.22082 – 1.22145 in.)
	Oil clearance	STD	0.031 – 0.059 mm (0.00122 – 0.00232 in.)
		Maximum	0.1 mm (0.004 in.)
Camshaft	Thrust clearance	STD	0.040 – 0.095 mm (0.0016 – 0.0037 in.)
		Maximum	0.11 mm (0.0043 in.)
	Journal oil clearance	STD	0.040 – 0.095 mm (0.00157 – 0.00374 in.)
		Maximum	0.115 mm (0.00453 in.)
	Journal diameter	No. 1	34.449 – 34.465 (1.35626 – 1.35689 in.)
		Others	22.949 – 22.965 (0.90350 – 0.90413 in.)
	Circle run out	Maximum	0.03 mm (0.0012 in.)
	Cam lobe height	STD Intake	42.310 – 42.410 mm (1.62637 – 1.66968 in.)
		Exhaust	44.046 – 44.146 mm (1.73409 – 1.73803 in.)
		Minimum Intake	42.16 mm (1.6598 in.)
		Exhaust	43.90 mm (1.7283 in.)
Intake manifold	Warpage	Maximum	0.10 mm (0.0039 in.)
Exhaust manifold	Warpage	Maximum	0.70 mm (0.0276 in.)

Cylinder block	Cylinder head surface warpage	Maximum	0.05 mm (0.0020 in.)
	Cylinder bore diameter	STD	75.000 – 75.013 mm (2.95275 – 2.95326 in.)
		Maximum	75.013 mm (2.95326 in.)
	Main journal bore diameter	Mark 0	50.000 – 50.003 mm (1.96850 – 1.96862 in.)
		Mark 1	50.003 – 50.005 mm (1.96862 – 1.96870 in.)
		mark 2	50.005 – 50.007 mm (1.96870 – 1.96878 in.)
		Mark 3	50.007 – 50.010 mm (1.96878 – 1.96889 in.)
		Mark 4	50.010 – 50.012 mm (1.96889 – 1.96897 in.)
		Mark 5	50.012 – 50.014 mm (1.96897 – 1.96905 in.)
		Mark 6	50.014 – 50.016 mm (1.96905 – 1.96913 in.)
Piston and Piston ring	12 pointed head bearing cap sub-assembly bolt diameter		
	at tension portion	STD	7.3 – 7.5 mm (0.287 – 0.295 in.)
		Minimum	7.3 mm (0.287 in.)
	Piston diameter		
	at 27 mm (1.063 in.) from the piston head		74.945 – 74.955 mm (2.95058 – 2.95098 in.)
	Piston oil clearance	STD	0.045 – 0.068 mm (0.00177 – 0.00268 in.)
		Maximum	0.08 mm (0.0031 in.)
	Piston ring groove clearance		0.030 – 0.070 mm (0.0012 – 0.0028 in.)
	Piston ring end gap		
		STD No. 1	0.22 – 0.32 mm (0.0087 – 0.0126 in.)
Connecting rod		No. 2	0.32 – 0.47 mm (0.0126 – 0.0185 in.)
		Oil	0.15 – 0.45 mm (0.0059 – 0.0177 in.)
		Maximum No. 1	0.88 mm (0.0346 in.)
		No. 2	1.03 mm (0.0406 in.)
		Oil	0.92 mm (0.0362 in.)
	Thrust clearance	STD	0.16 – 0.36 mm (0.0063 – 0.0142 in.)
		Maximum	0.36 mm (0.0142 in.)
	Connecting rod thickness		19.788 – 19.840 mm (0.779 – 0.781 in.)
	Connecting rod bearing center wall thickness		
	Reference	Mark 1	1.488 – 1.492 mm (0.0586 – 0.0587 in.)
		Mark 2	1.492 – 1.496 mm (0.0587 – 0.0589 in.)
		Mark 3	1.496 – 1.500 mm (0.0589 – 0.0591 in.)
	Connecting rod oil clearance	STD	0.016 – 0.040 mm (0.0006 – 0.0016 in.)
		Maximum	0.06 mm (0.0024 in.)
	Rod out-of-alignment	Maximum per 100 mm (3.94 in.)	0.05 mm (0.0020 in.)
	Rod twist	Maximum per 100 mm (3.94 in.)	0.05 mm (0.0020 in.)
Connecting rod	Bushing inside diameter		18.010 – 18.019 mm (0.7091 – 0.7094 in.)
	Piston pin diameter		17.988 – 18.007 mm (0.7086 – 0.7089 in.)
	Bushing oil clearance	STD	0.009 – 0.015 mm (0.0003 – 0.0006 in.)
		Maximum	0.05 mm (0.0020 in.)
	Connecting rod bolt diameter		
	at tension portion	STD	6.6 – 6.7 mm (0.260 – 0.264 in.)
		Minimum	6.4 mm (0.252 in.)

SERVICE SPECIFICATIONS – ENGINE MECHANICAL

Crankshaft	Thrust clearance	STD	0.090 – 0.190 mm (0.00354 – 0.00748 in.)
		Maximum	0.30 mm (0.012 in.)
	Thrust washer thickness		2.430 – 2.480 mm (0.09567 – 0.09764 in.)
	Main journal oil clearance	STD	0.010 – 0.023 mm (0.0004 – 0.0009 in.)
		Maximum	0.07 mm (0.0028 in.)
	Main journal diameter		
	Reference	Mark 0	45.988 – 45.990 mm (1.81054 – 1.81062 in.)
		Mark 1	45.990 – 45.992 mm (1.81062 – 1.81071 in.)
		Mark 2	45.992 – 45.994 mm (1.81071 – 1.81078 in.)
		Mark 3	45.994 – 45.996 mm (1.81078 – 1.81086 in.)
		Mark 4	45.996 – 45.998 mm (1.81086 – 1.81094 in.)
		Mark 5	45.998 – 46.000 mm (1.81094 – 1.81102 in.)
	Main bearing center wall thickness		
	Reference	Mark 1	1.992 – 1.995 mm (0.07843 – 0.07854 in.)
		Mark 2	1.995 – 1.998 mm (0.07854 – 0.07866 in.)
		Mark 3	1.998 – 2.001 mm (0.07866 – 0.07878 in.)
		Mark 4	2.001 – 2.004 mm (0.07878 – 0.07890 in.)
	Crank pin diameter		39.992 – 40.000 mm (1.5745 – 1.5748 in.)
	Circle run out	Maximum	0.03 mm (0.0012 in.)
	Main journal taper and out-of round	Maximum	0.02 mm (0.0008 in.)
	Crank pin taper and out-of round	Maximum	0.02 mm (0.0008 in.)

TORQUE SPECIFICATION

Part tightened		N·m	kgf·cm	ft·lbf
Plug x Timing chain cover		15	150	11
Chain vibration damper x Cylinder block		9.0	92	80 in .lbf
Chain tensioner		9.0	92	80 in .lbf
Timing chain cover	Bolt A	11	112	8
	Bolt B	24	245	18
	Bolt C	11	112	8
	Bolt D	24	245	18
	Bolt E	11	112	8
	Nut F	24	245	18
	Nut G	11	112	8
RH engine mounting bracket x Timing chain cover		55	561	41
Crankshaft position sensor x Timing chain cover	Bolt A	7.5	76	66 in .lbf
	Bolt B	11	112	8
Oil control valve		8.0	82	71 in .lbf
Crankshaft pulley x Crankshaft		128	1,300	94
Cylinder head cover x Cylinder		10	100	7
RH engine mounting insulator	Bolt A	45	459	33
	Bolt B	52	530	38
	Nut	52	530	38
Cylinder head x Cylinder block	1st	29.4	300	22
	2nd	Turn 90°	Turn 90°	Turn 90°
	3rd	Turn 90°	Turn 90°	Turn 90°
Water bypass pipe x Cylinder head		9.0	92	80 in .lbf
No. 1 camshaft bearing cap x Cylinder head		23	235	17
No. 2 camshaft bearing cap x Cylinder head		12.7	130	10
Camshaft timing sprocket x Camshaft		64	650	47
Valve timing controller assembly x Camshaft		64	650	47
Intake manifold x Cylinder head		20	204	15
Exhaust manifold x Cylinder head		27	275	20
Upper heat insulator x Exhaust manifold		8.0	82	71 in .lbf
Exhaust manifold stay x Cylinder block		27	275	20
Front exhaust pipe x Tailpipe	Bolt A	62	630	46
	Bolt B	32	330	24
Connecting rod cap x Connecting rod	1st	15	150	11
	2nd	Turn 90°	Turn 90°	Turn 90°
Bearing cap x Cylinder block	1st	22	220	16
	2nd	Turn 90°	Turn 90°	Turn 90°
Oil pan No. 1 x Cylinder block		24	245	18
Oil strainer x Oil pan No. 1		11	112	8
Oil pan No. 2 x Oil pan No. 1		9.0	92	80 in .lbf
Oil filter union x Oil pan No. 1		30	306	21
Engine coolant drain plug x Cylinder block		12.7	130	9
Knock sensor x Cylinder block		44	450	33
Water bypass pipe x Cylinder block		9.0	90	80 in .lbf
Flywheel x Crankshaft		84	857	62
Damper spring x Flywheel		16	163	12

EMISSION CONTROL

TORQUE SPECIFICATION

SS17E-01

Part tightened	N·m	kgf·cm	ft·lbf
PCV valve x Cylinder head cover	27	275	20

SFI

SERVICE DATA

SS102-07

Fuel pump	Resistance at 20°C (68°F)	0.2 – 3.0 Ω
Injector	Resistance Injection volume Difference between each cylinder Fuel leakage at 21 °C (68 °F)	13.4 – 14.2 Ω 36 – 46 cm ³ (2.1 – 2.8 cu in.) per 15 sec. 10 cm ³ (0.7 cu in.) or less 1 drop or less per 12 minutes
Mass air flow meter	Resistance at –20°C (–4°F) at 20°C (68°F) at 60°C (140°F) THA – E2 THA – E2 THA – E2	13.6 – 18.4 kΩ 2.21 – 2.69 kΩ 0.49 – 0.67 kΩ
Throttle control motor	Resistance at 20°C (68°F) M+ – M–	0.3 – 100 Ω
Throttle position sensor	Resistance at 20°C (68°F) VC – E2	1.2 – 3.2 kΩ
VSV for EVAP	Resistance at 20°C (68°F)	27 – 33 Ω
VSV for CCV	Resistance at 20°C (68°F)	25 – 30 Ω
VSV for Purge flow switching valve	Resistance at 20°C (68°F)	33 – 39 Ω
VSV for HCAC	Resistance at 20°C (68°F)	33 – 39 Ω
ECT sensor	Resistance at –20°C (–4°F) at 0°C (32°F) at 20°C (68°F) at 40°C (104°F) at 60°C (140°F) at 80°C (176°F)	10 – 20 kΩ 4 – 7 kΩ 2 – 3 kΩ 0.9 – 1.3 kΩ 0.4 – 0.7 kΩ 0.2 – 0.4 kΩ
Vacuum sensor for HCAC	Power source voltage	4.5 – 5.5 V
Vapor pressure sensor	Power source voltage Output voltage	4.5 – 5.5 V 3.0 – 3.6 V
Heated oxygen sensor	Heater coil resistance at 20°C (68°F)	11 – 16 Ω
Accelerator pedal position sensor	Resistance at 20°C (68°F) Vcp ₁ – Ep ₁ Vcp ₂ – Ep ₂	1.5 – 6.0 kΩ
Fuel cut rpm	Fuel return rpm	1,400 rpm

TORQUE SPECIFICATION

Part tightened	N·m	kgf·cm	ft·lbf
Fuel pump assembly x Fuel tank	4.0	40	35 in·lbf
Delivery pipe x Cylinder head	19	194	14
Throttle body x Intake manifold	20	204	15
Camshaft timing oil control valve x Cylinder head	7.5	76	66 in·lbf
Knock sensor x Cylinder block	44	450	33
Heated oxygen sensor (Bank1 sensor1) x Exhaust manifold	44	440	31
Heated oxygen sensor (Bank1 sensor2) x Exhaust pipe	44	440	31

COOLING

SERVICE DATA

SS176-03

Drive belt	Tension (Reference)	New belt Used belt	110 ± 11 lbf 67 ± 10 lbf
Thermostat	Valve opening temperature at 90°C (199°F)		80.0 – 84.0°C (176 – 183°F) 8.5 mm (0.345 in.) or more
Radiator cap	Relief valve opening pressure	STD Minimum	74 – 103 kPa (0.75 – 1.05 kgf/cm ² , 10.7 – 14.9 psi) 79 kPa (0.8kgf/cm ² , 11.5 psi)
Electric cooling fan	Amperage	STD	9.2 – 11.0 A

TORQUE SPECIFICATION

Part tightened	N·m	kgf·cm	ft·lbf
Drain plug	12.7	130	9
Water pump x Timing chain cover	11	110	8
Pump pulley x Water pump	15	150	11
Water inlet x Cylinder block	9.0	90	80 in.·lbf
Electric cooling fan assembly x Radiator	7.5	76	66 in.·lbf
Fan motor x Fan shroud	2.65	27	23 in.·lbf
Fan x Fan motor	6.4	66	57 in.·lbf

LUBRICATION

SERVICE DATA

SS178-01

Oil pressure		at idle speed at 3,000 rpm	29 kPa (0.3 kgf/cm ² , 4.3 psi) or more 150 – 550 kPa (1.5 – 5.6 kgf/cm ² , 22 – 80 psi)
Oil pump	Side clearance	STD	0.03 – 0.09 mm (0.0012 – 0.0035 in.)
		Maximum	0.15 mm (0.0059 in.)
	Tip clearance	STD	0.060 – 0.180 mm (0.0024 – 0.0071 in.)
		Maximum	0.28 mm (0.0110 in.)
	Body clearance	STD	0.250 – 0.325 mm (0.00984 – 0.01280 in.)
		Maximum	0.425 mm (0.01673 in.)

TORQUE SPECIFICATION

Part tightened	N·m	kgf·cm	ft·lbf
Oil pressure switch x Cylinder block	13	130	9
Oil drain plug x Oil pan	38	387	28
Plug x Oil pump body	25	255	18
Oil pump cover x Timing chain cover	Bolt	8.8	90
	Screw	10.3	105
			78 in·lbf 8

IGNITION

SS17A-03

SERVICE DATA

Spark plug	Recommended spark plug	DENSO	SK16R11
		NGK	IFR5A11
	Electrode gap	STD	1.0 – 1.1 mm (0.039 – 0.043 in.)
		Maximum	1.2 mm (0.047 in.)
Camshaft position sensor	Resistance	at cold	1,630 – 2,740 Ω
		at hot	2,065 – 3,225 Ω
Crankshaft position sensor	Resistance	at cold	985 – 1,600 Ω
		at hot	1,265 – 1,890 Ω

TORQUE SPECIFICATION

Part tightened	N·m	kgf·cm	ft·lbf
Spark plug x Cylinder head	18	184	13
Ignition coil x Cylinder head	9.0	92	80 in·lbf
Camshaft position sensor x Cylinder head	8.0	82	71 in·lbf
Crankshaft position sensor x Cylinder block	7.5	76	66 in·lbf

HYBRID VEHICLE CONTROL

SS1HH-02

SERVICE DATA

HV battery thermistor	Resistance	at 25 °C (77 °F)	
		1 ↔ 2	9 – 11 kΩ
		3 ↔ 4	9 – 11 kΩ
		5 ↔ 6	9 – 11 kΩ
		7 ↔ 8	9 – 11 kΩ
		9 ↔ 10	9 – 11 kΩ
Converter	Output current		100 A or less
Water temperature switch		at 48 °C (118.4 °F) or less	No continuity
		at more than 55 °C (131 °F)	Continuity
Service plug	Service plug lever	Close	Continuity
		Stand up	No continuity
Auxiliary battery	Voltage	at 20 °C (68 °F)	12.5 – 12.9 V

TORQUE SPECIFICATION

Part tightened		N·m	kgf·cm	ft·lbf
Battery module x Battery carrier		4.0	40	35 in.·lbf
Battery clamp bolt x Battery carrier		23	230	16
RH battery bracket x Battery carrier		23	230	16
Battery ECU x Battery carrier		3.3	33	29 in.·lbf
Busbar module x Battery module		6.0	61	53 in.·lbf
Power cable x SMR		5.0	50	44 in.·lbf
Service plug assembly x Battery carrier		6.0	61	53 in.·lbf
Battery cover x Battery carrier (See page HV-9)	Bolt A	18	185	13
	Bolt B	8.0	80	71 in.·lbf
	Bolt C	7.0	70	62 in.·lbf
	Screw	6.0	61	53 in.·lbf
Battery bracket		18	185	13
HV battery x Body		18	185	13
Battery carrier catch bracket x Battery bracket		8.0	80	71 in.·lbf
Bracket x Converter & Inverter assembly		25	255	18
Upper inverter cover x Converter & inverter assembly		2.5	25	22 in.·lbf
Inverter reservoir tank x Converter & inverter assembly		8.0	82	71 in.·lbf
Converter & inverter assembly x Body		21	214	15
Ground cable x Radiator upper support		8.0	82	71 in.·lbf
Power cable for MG1 x Converter & inverter assembly		7.0	71	62 in.·lbf
Connector cover x Converter & inverter assembly		20	204	15
Power cable for MG2 x Converter & inverter assembly (See page HV-22)	Bolt A	19.5	199	14
	Bolt B	8.0	82	71 in.·lbf
Inverter terminal cover x Converter & inverter assembly		8.0	82	71 in.·lbf
HV water pump x Body		7.0	70	62 in.·lbf
Inverter radiator x Body		8.0	82	71 in.·lbf
Water temperature switch x Inverter radiator		7.4	75	65 in.·lbf
Blower assembly x Body		5.0	51	44 in.·lbf
Lower quarter ventilator duct x Body		4.0	41	35 in.·lbf
Inner ventilator duct x Body		4.0	41	35 in.·lbf
HV ECU x Body		6.0	60	53 in.·lbf

HYBRID TRANSAXLE

SERVICE DATA

SS1HE-01

Differential case side bearing preload		New bearing: 0.98 – 1.57 N·m (9.99 – 16.01 kgf·cm, 8.67 – 13.90 in.-lbf) Reused bearing: 0.49 – 0.78 N·m (5.00 – 7.95 kgf·cm, 4.43 – 6.90 in.-lbf) 0.78 – 1.37 N·m (7.95 – 13.97 kgf·cm, 6.90 – 12.13 in.-lbf)
(Starting torque)		
		(Turning torque 60 rpm)
Differential preload adjusting shim thickness		
	Mark 1	1.80 mm (0.0709 in.)
	Mark 2	1.83 mm (0.0720 in.)
	Mark 3	1.86 mm (0.0732 in.)
	Mark 4	1.89 mm (0.0744 in.)
	Mark 50	1.92 mm (0.0756 in.)
	Mark 51	1.94 mm (0.0764 in.)
	Mark 52	1.96 mm (0.0772 in.)
	Mark 53	1.98 mm (0.0780 in.)
	Mark 54	2.00 mm (0.0787 in.)
	Mark 55	2.02 mm (0.0795 in.)
	Mark 56	2.04 mm (0.0803 in.)
	Mark 57	2.06 mm (0.0811 in.)
	Mark 58	2.08 mm (0.0819 in.)
	Mark 59	2.10 mm (0.0827 in.)
	Mark 60	2.12 mm (0.0835 in.)
	Mark 61	2.14 mm (0.0843 in.)
	Mark 62	2.16 mm (0.0850 in.)
	Mark 63	2.18 mm (0.0858 in.)
	Mark 64	2.20 mm (0.0866 in.)
	Mark 65	2.22 mm (0.0874 in.)
	Mark 66	2.24 mm (0.0882 in.)
	Mark 67	2.26 mm (0.0890 in.)
	Mark 68	2.28 mm (0.0898 in.)
	Mark 69	2.30 mm (0.0906 in.)
	Mark 70	2.32 mm (0.0913 in.)
	Mark 19	2.34 mm (0.0921 in.)
	Mark 20	2.37 mm (0.0933 in.)
	–	2.40 mm (0.0945 in.)
	Mark 22	2.43 mm (0.0957 in.)
	Mark 23	2.46 mm (0.0969 in.)
Counter driven gear side bearing preload		New bearing: 3.81 – 6.10 N·m (38.85 – 62.20 kgf·cm, 33.72 – 53.99 in.-lbf) Reused bearing: 1.91 – 3.03 N·m (19.48 – 30.90 kgf·cm, 16.91 – 26.82 in.-lbf) 3.29 – 6.66 N·m (33.55 – 67.91 kgf·cm, 29.12 – 58.95 in.-lbf)
(Starting torque)		
		(Turning torque 60 rpm)

SERVICE SPECIFICATIONS – HYBRID TRANSAXLE

Counter driven gear preload adjusting shim thickness		Mark 1 1.25 mm (0.0492 in.) Mark 2 1.28 mm (0.0504 in.) Mark 3 1.31 mm (0.0516 in.) Mark 50 1.34 mm (0.0528 in.) Mark 51 1.36 mm (0.0535 in.) Mark 52 1.38 mm (0.0543 in.) Mark 53 1.40 mm (0.0551 in.) Mark 54 1.42 mm (0.0559 in.) Mark 55 1.44 mm (0.0567 in.) Mark 56 1.46 mm (0.0575 in.) Mark 57 1.48 mm (0.0583 in.) Mark 58 1.50 mm (0.0591 in.) Mark 59 1.52 mm (0.0598 in.) Mark 60 1.54 mm (0.0606 in.) Mark 61 1.56 mm (0.0614 in.) Mark 62 1.58 mm (0.0622 in.) Mark 63 1.60 mm (0.0630 in.) Mark 64 1.62 mm (0.0638 in.) Mark 65 1.64 mm (0.0646 in.) Mark 66 1.66 mm (0.0654 in.) Mark 67 1.68 mm (0.0661 in.) Mark 68 1.70 mm (0.0669 in.) Mark 69 1.72 mm (0.0677 in.) Mark 70 1.74 mm (0.0685 in.) Mark 18 1.76 mm (0.0693 in.) Mark 19 1.79 mm (0.0705 in.) Mark 20 1.82 mm (0.0717 in.) Mark 21 1.85 mm (0.0728 in.) Mark 22 1.88 mm (0.0740 in.)
Input shaft shim thickness		Mark 1 1.00 mm (0.0394 in.) Mark 2 1.20 mm (0.0472 in.) Mark 3 1.40 mm (0.0551 in.) Mark 4 1.60 mm (0.0630 in.) Mark 5 1.80 mm (0.0709 in.) Mark 6 2.00 mm (0.0787 in.) Mark 7 2.20 mm (0.0866 in.) Mark 8 2.40 mm (0.0945 in.) Mark 9 2.60 mm (0.1024 in.) Mark 10 2.80 mm (0.1102 in.) Mark 11 3.00 mm (0.1181 in.) Mark 12 3.20 mm (0.1260 in.)
Counter drive gear shim thickness		Mark A 1.35 mm (0.0531 in.) Mark B 1.40 mm (0.0551 in.) Mark C 1.45 mm (0.0571 in.) Mark D 1.50 mm (0.0591 in.) Mark E 1.55 mm (0.0610 in.) Mark F 1.60 mm (0.0630 in.) Mark G 1.65 mm (0.0650 in.) Mark H 1.70 mm (0.0669 in.) Mark J 1.75 mm (0.0689 in.) Mark K 1.80 mm (0.0709 in.) Mark L 1.85 mm (0.0728 in.)
Differential oil seal LH and RH drive in depth		2.7 ± 0.5 mm (0.11 ± 0.02 in.)
Oil pressure		39.2 – 78.4 kPa (0.4 – 0.8 kgf/cm ² , 5.7 – 11.4 psi)

Differential side gear backlash	Standard	0.05 – 0.20 mm (0.0020 – 0.0079 in.)
Differential side gear washer thickness		0.95 mm (0.0374 in.) 1.00 mm (0.0394 in.) 1.05 mm (0.0414 in.) 1.10 mm (0.0433 in.) 1.15 mm (0.0453 in.) 1.20 mm (0.0472 in.)
Sun gear bush diameter	Standard	25.525 – 25.546 mm (1.00492 – 1.00575 in.)
	Maximum	25.596 mm (1.00771 in.)

TORQUE SPECIFICATION

Part tightened	N·m	kgf·cm	ft·lbf
Oil pump cover x MG2 assembly	5.5	56	49 in.·lbf
Transaxle oil drain plug	49	498	36
Hybrid transaxle assembly x Engine	33	332	24
Coolant drain plug x MG1 assembly	39	400	29
Screw plug x MG1 assembly	12.7	130	9
Screw plug x MG2 assembly	24.5	250	18
Filler plug x MG2 assembly	39	400	29
MG1 assembly x MG2 assembly	25	250	18
Sleeve bracket x MG1 assembly	13	130	9
Lock clamp x MG1 assembly	5.4	55	48 in.·lbf
Oil strainer x MG2 assembly	5.5	56	49 in.·lbf
Oil pan x MG2 assembly	7.6	77	67 in.·lbf
Parking shaft cover x MG2 assembly	13	130	10
Motor water jacket cover x MG2 assembly	5.5	56	49
Housing tube x MG1 assembly	15	152	11
Detent spring set bolt	10	100	7
Parking cover x MG2 assembly	5.5	56	49 in.·lbf
Oil pump cover x plug	7.35	75	65 in.·lbf
Wiring harness connector x MG2 assembly	5.5	56	49 in.·lbf
Wiring harness connector x MG1 assembly	5.5	56	49 in.·lbf
Water jacket union	50	510	37
High-voltage cable set bolt (3 under power cable cover)	18	183	13
High-voltage cable set bolt (3 outside)	5.5	56	49 in.·lbf
Power cable cover x MG1 assembly	4.8	48	42 in.·lbf
Mounting bracket x MG2 assembly	52	530	38
Shift lever assembly x Steering column	8	80	71 in.·lbf
Differential case x Ring gear	87	90	64

SUSPENSION AND AXLE

SERVICE DATA

SS13W-06

Cold tire inflation pressure	Tire size: P175/65R14 84S	Front Rear	240 kPa (2.4 kgf/cm ² , 35 psi) 230 kPa (2.3 kgf/cm ² , 33 psi)
Front wheel alignment	Vehicle height P175/65R14	Front*1 Rear*2	191 mm (7.52 in.) 239 mm (9.41 in.)
	Camber	Right-left error	-0°26' ± 45' (-0.43° ± 0.75°) 45' (0.75°) or less
	Caster	Right-left error	1°02' ± 45' (1.03° ± 0.75°) 45' (0.75°) or less
	Steering axis inclination	Right-left error	9°52' ± 45' (9.87° ± 0.75°) 45' (0.75°) or less
	Toe-in (total)	Rack end length difference	0°06' ± 12' (0.1° ± 0.2°, 1 ± 2 mm, 0.04 ± 0.08 in.) 1.5 mm (0.059 in.) or less
	Wheel angle	Inside wheel Outside wheel: Reference	42°42' ± 2° (42.70° ± 2°) 35°54' (35.90°)
Rear wheel alignment	Camber	Right-left error	-1°30' ± 45' (-0.93° ± 0.75°) 45' (0.75°) or less
	Toe-in (total)		0°06' ± 20' (0.1° ± 0.33°) 1 ± 3.0 mm (0.04 ± 0.12 in.)
Front axle	Axle bearing backlash	Maximum	0.05 mm (0.0020 in.)
	Axle hub deviation	Maximum	0.07 mm (0.0028 in.)
Front drive shaft	Drive shaft standard length	LH	579.9 ± 5.0 mm (22.831 ± 0.197 in.)
		RH	836.9 ± 5.0 mm (32.949 ± 0.197 in.)
Front suspension	Lower suspension arm ball joint turning torque		1.0 – 4.9 N·m (10 – 50 kgf·cm, 8.7 – 43 in.-lbf)
	Stabilizer bar link ball joint turning torque		0.05 – 1.0 N·m (0.5 – 10 kgf·cm, 0.4 – 8.7 in.-lbf)
Rear axle	Axle bearing backlash	Maximum	0.05 mm (0.0020 in.)
	Axle hub deviation	Maximum	0.07 mm (0.0028 in.)

*1: Front measuring point

Measure the distance from the ground to the head center of the front side lower suspension arm mounting bolt.

*2: Rear measuring point

Measure the distance from the ground to the center of the rear axle beam mounting bolt.

TORQUE SPECIFICATION

Part tightened	N·m	kgf·cm	ft·lbf
FRONT AXLE			
Hub nut	103	1,050	76
Tie rod end lock nut	74	750	55
Steering knuckle x Shock absorber	153	1,560	113
Steering knuckle x Brake caliper	107	1,090	79
Steering knuckle x Tie rod end	49	500	36
Axle hub x Drive shaft	216	2,200	159
Lower ball joint x Lower suspension arm	142	1,450	105
Lower ball joint x Steering knuckle	103	1,050	76
Steering knuckle x Dust cover	8.3	85	74 in·lbf
ABS speed sensor set bolt	8.0	82	71 in·lbf
FRONT SUSPENSION			
Suspension support x Body	39	400	29
Suspension support x Piston rod	47	475	34
Flexible hose x Shock absorber	29	300	22
ABS speed sensor wire harness x Shock absorber	5.4	55	48 in·lbf
Lower suspension arm set bolt	137	1,397	101
Suspension member set bolt	Front side	113	83
	Rear side	157	116
Torque rod x Suspension member	100	1,030	74
Stabilizer bar bracket x Suspension member	19	194	14
Stabilizer bar link set nut	74	755	55
REAR AXLE			
Hub nut	103	1,050	76
Axle hub set bolt	52	525	38
REAR SUSPENSION			
Shock absorber x Axle Beam	80	816	59
ABS speed sensor wire harness x Axle Beam	5.4	55	48 in·lbf
Spring bracket x Body	80	816	59
Shock absorber center nut	56	571	41
Parking brake cable set bolt	5.4	55	48 in·lbf
Toe control link x Body	90	918	66
Toe control link x Axle beam	90	918	66
Stabilizer bar set bolt	149	1,519	110

BRAKE

SERVICE DATA

SSOLM-06

BRAKE PEDAL		
Brake pedal height from asphalt sheet		127 – 137 mm (5.08 – 5.48 in.)
Brake pedal freeplay		1 – 6 mm (0.04 – 0.24 in.)
Brake pedal reserve distance at 200 N (20 kgf, 45 lbf)		More than 85 mm (3.35 in.)
PARKING BRAKE PEDAL		
Parking brake pedal travel at 294N (30 Kgf, 66.1 lbf)		5 – 8 clicks
FRONT BRAKE		
Front brake pad thickness	STD	11.0 mm (0.433 in.)
Front brake pad thickness	Minimum	1.0 mm (0.039 in.)
Front brake disc thickness	STD	22.0 mm (0.984 in.)
Front brake disc thickness	Minimum	20.0 mm (0.906 in.)
Front brake disc runout	Maximum	0.05 mm (0.0020 in.)
REAR BRAKE		
Drum brake shoe lining thickness	STD	4.0 mm (0.157 in.)
Drum brake shoe lining thickness	Minimum	1.0 mm (0.039 in.)
Rear brake drum inside diameter	STD	200.0 mm (7.874 in.)
Rear brake drum inside diameter	Maximum	201.0 mm (7.913 in.)
Rear brake drum to shoe clearance		0.6 mm (0.024 in.)

TORQUE SPECIFICATION

Part tightened	N·m	kgf·cm	ft·lbf
BRAKE PEDAL			
Pedal bracket x Reinforcement	14	143	10
Brake pedal x Pedal bracket	37	375	27
PARKING BRAKE PEDAL			
Pedal bracket x Reinforcement	14	143	10
Pedal bracket x Body	13	130	9
Brake pedal x Pedal bracket	32	327	24
BRAKE MASTER CYLINDER			
Master cylinder x Pedal bracket	13	130	9
Master cylinder clevis lock nut	26	265	19
HYDRAULIC BRAKE BOOSTER			
Hydraulic brake booster assembly x Body	19	194	14
Sub-bracket x Body	19	194	14
Reservoir bracket x Body	18	184	13
Reservoir x Bracket	7.5	77	66 in.·lbf
Accumulator x Booster pump	54	550	36
Pressure switch assembly x Brake power supply bracket	7.8	80	69 in.·lbf
Booster pump x Brake booster pump bracket No. 2	7.8	80	69 in.·lbf
Pressure switch assembly x Brake booster pump bracket No. 1	7.8	80	69 in.·lbf
Connector bracket x Pressure switch assembly	7.8	80	69 in.·lbf
Pressure switch assembly x Brake booster pump bracket No. 2	7.8	80	69 in.·lbf
FRONT BRAKE			
Front disc brake caliper installation bolt	34	350	25
Bleeder plug	8.3	85	74 in.·lbf
Front disc brake caliper x Flexible hose	30	310	22
Front disc brake torque plate x Steering knuckle	107	1,090	79
REAR BRAKE			
Bleeder plug	8.5	87	75 in.·lbf
Rear drum brake wheel cylinder x Backing plate	10	100	7
BRAKE ACTUATOR			
Brake actuator assembly x Body	19	195	14
Brake actuator x Actuator bracket	11	120	8
SPEED SENSOR			
Front speed sensor installation bolt	8.0	82	71 in.·lbf
Front speed sensor harness clamp bolt	5.5	56	49 in.·lbf
Rear speed sensor harness clamp bolt	5.5	56	49 in.·lbf
BRAKE LINE			
Brake line union nut	15	155	11

STEERING

SERVICE DATA

SS16Y-09

STEERING WHEEL		
Steering wheel freeplay	Maximum	30 mm (1.18 in.)
Steering effort at idle speed	Reference	6.5 N·m (65 kgf·cm, 58 in.-lbf)

TORQUE SPECIFICATION

Part tightened	N·m	kgf·cm	ft·lbf
TILT STEERING COLUMN			
Adjusting nut	13	130	9
No. 2 tilt lever lock bolt	5.4	55	48 in.·lbf
Tilt steering support lock nut	9.5	100	87 in.·lbf
Main shaft lower dust seal	4.9	50	43 in.·lbf
Column assembly set bolt and nut	25	260	19
No. 2 intermediate shaft assembly x Main shaft assembly	35	360	26
No. 2 intermediate shaft assembly x Intermediate extension	35	360	26
Shift lock computer sub-assembly	4.0	40	35 in.·lbf
Steering wheel set nut	50	510	37
Steering wheel pad set screw (Torx screw)	8.8	90	78 in.·lbf
POWER STEERING GEAR			
Rack end x Steering rack	62 (83)	630 (850)	46 (61)
Tie rod end lock nut	56	570	41
PS gear assembly set bolt	83	850	61
Stabilizer bar set bolt	19	190	14
Suspension member	137	1,400	101
	142	1,450	105
Torque rod set nut	100	1,020	74
EMPS bracket set bolt	5.5	60	52 in.·lbf
Lower suspension arm x Lower ball joint	142	1,450	105
Stabilizer bar link set nut	74	760	55
Tie rod end x Steering knuckle	49	500	36

(): For use without SST

BODY ELECTRICAL

SERVICE DATA

SS02V-05

DAYTIME RUNNING RELAY (MAIN) (Wire harness side)	
12 – Ground (Ignition switch OFF)	No voltage
12 – Ground (Ignition switch ON)	Battery voltage
9 – Ground (Engine Running)	Battery voltage
3 – Ground (Constant)	Battery voltage
6 – Ground (Constant)	Battery voltage
SPEEDOMETER (ON-VEHICLE)	
Standard indication (mph)	Allowable range (mph)
20	18 – 22
40	38 – 42
60	59 – 63
80	79 – 83
100	99 – 104
120	119 – 125
Standard indication (km/h)	Allowable range (km/h)
20	18 – 22
40	38 – 42
60	58 – 62
80	78 – 82
100	97 – 103
120	117 – 123
140	137 – 143
160	157 – 163
FUEL SENDER GAUGE	
Float position mm (in.)	Resistance (Ω)
F: Approx. 25.2 (0.99)	Approx. 430
1/2: Approx. 92.6 (3.65)	Approx. 1000 – 2000
E: Approx. 169 (6.65)	Approx. 5000
DEFOGER SWITCH (Wire harness side)	
1 – Ground (Ignition switch LOCK or ACC)	No voltage
1 – Ground (Ignition switch ON)	Battery voltage
8 – Ground (Constant)	Battery voltage
WIRELESS DOOR LOCK CONTROL RECEIVER (Wire harness side)	
5 – Ground (Constant)	Battery voltage
POWER MIRROR SWITCH (Wire harness side)	
8 – Ground (Ignition switch LOCK)	No voltage
8 – Ground (Ignition switch ACC or ON)	Battery voltage
RADIO RECEIVER (Wire harness side)	
3 – Ground (Ignition switch LOCK)	No voltage
3 – Ground (Ignition switch ACC or ON)	Battery voltage
4 – Ground (Constant)	Battery voltage
CENTER CLUSTER SWITCH (Wire harness side)	
1 – Ground (Ignition switch ACC or ON)	Battery voltage

2001 PRIUS (RM778U)

1 – Ground (Ignition switch LOCK)	No voltage
2 – Ground (Constant)	Battery voltage
TRANSPONDER KEY ECU (Wire harness side)	
1 – Ground (Constant)	Battery voltage
2 – Ground (Ignition switch ON)	Battery voltage

BODY

TORQUE SPECIFICATION

SS1HM-01

Part tightened	N·m	kgf·cm	ft·lbf
FRONT BUMPER	–	–	–
Side marker x Bumper	1.7	17	15 in·lbf
HOOD	–	–	–
Hood x Hinge	13	130	9
Hood lock x Body	8.3	85	74 in·lbf
FRONT DOOR	–	–	–
Outside view mirror x Door	7.8	80	69 in·lbf
Window regulator arm x Door	4.9	50	43 in·lbf
Window regulator body x Door	8.3	85	74 in·lbf
Door lock x Door Bolt:	4.9	50	43 in·lbf
Door lock x Door Screw:	4.9	50	43 in·lbf
Outside handle x Door	5.4	55	48 in·lbf
Hinge x Body	43	440	32 in·lbf
Hinge x Door	43	440	32 in·lbf
Door lock striker x Body	23	230	17 in·lbf
REAR DOOR	–	–	–
Window regulator x Door	5.4	55	48 in·lbf
Door lock x Door	4.9	50	43 in·lbf
Outside handle x Body	5.4	55	48 in·lbf
Hinge x Body	25	260	19
Hinge x Door	30	310	22
Door lock striker x Body	23	230	17
LUGGAGE COMPARTMENT DOOR AND HINGE	–	–	–
Door lock x Door	5.4	55	48 in·lbf
Hinge x Door	8.3	85	74 in·lbf
Door lock striker x Body	5.4	55	48 in·lbf
FRONT WIPER AND WASHER	–	–	–
Wiper arm x Wiper link	26	270	20
Wiper motor x Wiper link Bolt:	5.4	55	48 in·lbf
Wiper motor x Wiper link Nut:	17	175	13
Wiper link x Outer front cowl top panel	7.4	75	65 in·lbf
Outer front cowl top panel x Body	5.4	55	48 in·lbf
ROOF HEADLINING	–	–	–
Inner rear view mirror x Body	2.9	30	26 in·lbf
INSTRUMENT PANEL	–	–	–
Front passenger airbag assembly x Reinforcement	20	204	15
FRONT SEAT	–	–	–
Seat cushion frame x Body	37	380	27
Seatback assembly x Seat cushion frame	43	440	32
REAR SEAT	–	–	–
Seatback assembly x Body	7.9	81	70 in·lbf

SEAT BELT	–	–	–
Outer belt shoulder anchor x Anchor adjuster	42	430	31
Anchor adjuster x Body	42	430	31
Seat belt floor anchor x Body	42	430	31
Retractor x Body Upper bolt:	4.9	50	43 in.·lbf
Retractor x Body Lower bolt:	42	430	31
Inner belt x Seat cushion frame	41	420	30
Rear seat belt retractor x Body	42	430	31
Rear seat inner belt x Body	42	430	31
CRS Tether anchor bracket x Body	20	200	14
CRS Anchor bracket sub-assembly x Body	31	320	23
SPOILER	–	–	–
Rear spoiler x Body	5.0	51	44 in.·lbf

PRE-CHECK


1. DIAGNOSIS SYSTEM

(a) Description

- When troubleshooting OBDII vehicles, the only difference from the usual troubleshooting procedure is that you connect to the vehicle the OBDII scan tool complying with SAE J1978 or TOYOTA hand-held tester, and read off various data output from the vehicle's ECM.
- OBDII regulations require that the vehicle's on-board computer lights up the Malfunction Indicator Lamp (MIL) on the instrument panel when the computer detects a malfunction in the emission control system/components or in the powertrain control components which affect vehicle emissions, or a malfunction in the computer. In addition to the MIL lighting up when a malfunction is detected, the applicable Diagnostic Trouble Code (DTC) prescribed by SAE J2012 are recorded in the ECM memory (See page [DI-14](#)).

If the malfunction does not reoccur in 3 consecutive trips, the MIL goes off automatically but the DTCs remain recorded in the ECM memory.

- When DTC P3190, P3191 are detected and the remain of the fuel is little, the computer judges the cause as a fuel shortage, and after the next trip, when the supply of fuel is confirmed, it turns off MIL, but the memory of DTC still remains.
- To check the DTCs, connect the TOYOTA hand-held tester or OBDII scan tool to Data Link Connector 3 (DLC3) on the vehicle. The TOYOTA hand-held tester or OBDII scan tool also enables you to erase the DTCs and check frozen frame data and various forms of engine data. (For operating instructions, see the OBDII scan tool's instruction book.)
- DTCs include SAE controlled codes and manufacturer controlled codes. SAE controlled codes must be set as prescribed by the SAE, while manufacturer controlled codes can be set freely by the manufacturer within the prescribed limits (See DTC chart on page [DI-14](#)).

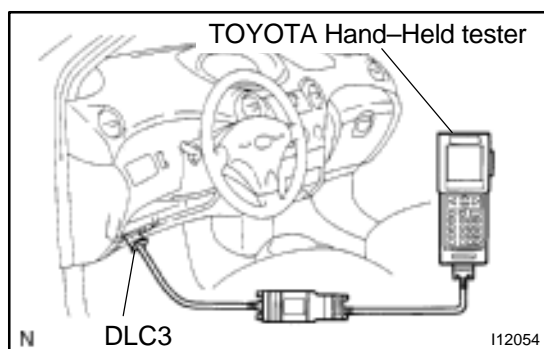

- The diagnosis system operates in normal mode during normal vehicle use. It also has a check mode for technicians to simulate malfunction symptoms and troubleshoot. Most DTCs use 2 trip detection logic* to prevent erroneous detection, and ensure thorough malfunction detection. By switching the ECM to check mode when troubleshooting, the technician can cause the MIL to light up for a malfunction that is only detected once or momentarily (TOYOTA hand-held tester only). (See step 2)
- *2 trip detection logic:
When a malfunction is first detected, the malfunction is temporarily stored in the ECM memory (1st trip).

If the same malfunction is first detected again during the second drive test, this second detection causes the MIL to light up (2nd trip). (However, the IG switch must be turned OFF between the 1st trip and the 2nd trip.)


- Freeze frame data:
Freeze frame data records the engine condition when a misfire (DTC P0300 – P0304) or fuel trim malfunction (DTC P0171, P0172) or other malfunction (first malfunction only), is detected.
- Because freeze frame data records the engine conditions (fuel system, calculated load, engine coolant temperature, fuel trim, engine speed, vehicle speed, etc.) when the malfunction is detected, when troubleshooting it is useful for determining whether the vehicle was running or stopped, the engine warmed up or not, the air-fuel ratio lean or rich, etc. at the time of the malfunction.

Priorities for troubleshooting:

If troubleshooting priorities for multiple DTCs are given in the applicable DTC chart, these should be followed.

If no instructions are given troubleshoot DTCs according to the following priorities.

- (1) DTCs other than fuel trim malfunction (DTC P0171, P0172), and misfire (DTC P0300 – P0304).
- (2) Fuel trim malfunction (DTC P0171, P0172).
- (3) Misfire (DTC P0300 – P0304).

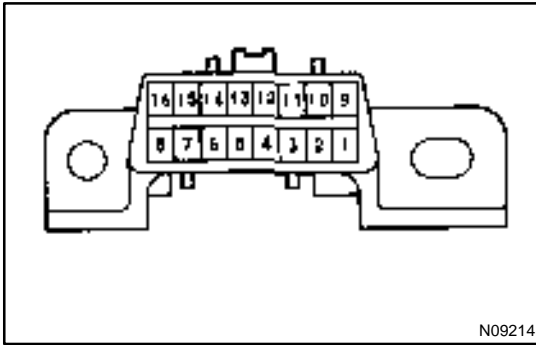

(b) Check the DLC3.


The vehicle's ECM uses ISO 9141–2 for communication. The terminal arrangement of DLC3 complies with SAE J1962 and matches the ISO 9141–2 format.

Terminal No.	Connection / Voltage or Resistance	Condition
7	Bus ⊕ Line / Pulse generation	During transmission
4	Chassis Ground / ↔ Body Ground 1 Ω or less	Always
5	Signal Ground / ↔ Body Ground 1 Ω or less	Always
16	Battery Positive / ↔ Body Ground 9 – 14 V	Always

HINT:

If your display shows "UNABLE TO CONNECT TO VEHICLE" when you have connected the cable of the TOYOTA hand-held tester or OBDII scan tool to DLC3, turned the ignition switch ON and operated the scan tool, there is a problem on the vehicle side or tool side.

- If communication is normal when the tool is connected to another vehicle, inspect DLC3 on the original vehicle.
- If communication is still not possible when the tool is connected to another vehicle, the problem is probably in the tool itself, so consult the Service Department listed in the tool's instruction manual.

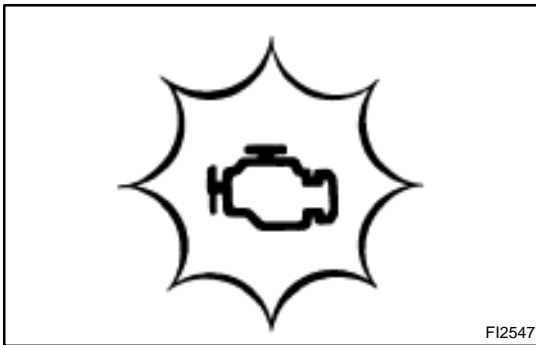**2. INSPECT DIAGNOSIS (Normal Mode)**

(a) Check the MIL

- (1) The MIL comes on when the ignition switch is turned ON and the engine is not running.

HINT:

If the MIL does not light up, troubleshoot the combination meter (See page [BE-42](#)).

- (2) When the engine started, the MIL should go off. If the lamp remains on, the diagnosis system has detected a malfunction or abnormality in the system.

(b) Check the DTC.

NOTICE:

- If there is no DTC in the normal mode, check the 1st trip DTC using Continuous Test Result function (Mode 7 for SAE J1979) or the TOYOTA hand-held tester or OBDII scan tool.

- **TOYOTA hand-held tester only:**
When the diagnosis system is switched from normal mode to check mode, it erases all DTCs and freezed frame data recorded in normal mode. So before switching modes, always check the DTCs and freezed frame data, and note them down.
 - (1) Prepare the TOYOTA hand-held tester or OBDII scan tool (complying with SAE J1978).
 - (2) Connect the TOYOTA hand-held tester or OBDII scan tool to DLC3 under the instrument panel lower pad.
 - (3) Turn the ignition switch ON and turn the TOYOTA hand-held tester or OBDII scan tool switch ON.
 - (4) Use the TOYOTA hand-held tester or OBDII scan tool to check the DTCs and freezed frame data; note them down. (For operating instructions, see the OBDII scan tool's instruction book.)
 - (5) See step 4 to confirm the details of the DTCs.

NOTICE:

- **When simulating symptoms with an OBDII scan tool (excluding TOYOTA hand-held tester) to check the DTCs, use normal mode. For code on the DTC chart subject to "2 trip detection logic", perform the following either action.**
- **Turn the ignition switch OFF after the symptom is simulated the first time. Then repeat the simulation process again. When the problem has been simulated twice, the MIL lights up and the DTCs are recorded in the ECM.**
- **Check the 1st trip DTC using Mode 7 (Continuous Test Results) for SAE J1979.**

(c) Clear the DTC.

The DTCs and freezed frame data will be erased by either action.

- (1) Operating the TOYOTA hand-held tester or OBDII scan tool (complying with SAE J1978) to erase the codes. (See the OBDII scan tool's instruction book for operating instructions.)
- (2) Disconnecting the battery terminals or EFI fuse.

NOTICE:

If the TOYOTA hand-held tester switches the ECM from the normal mode to the check mode or vice-versa, or if the ignition switch is turned from ON to ACC or OFF during check mode, the DTCs and freezed frame data will be erased.

3. INSPECT DIAGNOSIS (Check Mode)

TOYOTA hand-held tester only:

Compared to the normal mode, the check mode has an increased sensitivity to detect malfunctions.

Furthermore, the same diagnostic items which are detected in the normal mode can also be detected in the check mode.

(a) Check the DTC

(1) Initial conditions:

- Battery positive voltage 11 V or more.
- Throttle valve fully closed.
- Transmission in "P" or "N" position.
- A/C switched OFF.

(2) Turn the ignition switch OFF.

(3) Prepare the TOYOTA hand-held tester.

(4) Connect the TOYOTA hand-held tester to DLC3 under the instrument panel lower pad.

(5) Turn the ignition switch ON and switch the TOYOTA hand-held tester ON.

(6) Switch the TOYOTA hand-held tester normal mode to check mode. (Check that the MIL flashes.)

NOTICE:

If the TOYOTA hand-held tester switches the ECM from the normal mode to the check mode or vice-versa, or if the ignition switch is turned from ON to ACC or LOCK during check mode, the DTCs and freeze frame data will be erased.

(7) Switch the engine. (The MIL goes out after the engine start.)

(8) Simulate the conditions of the malfunction described by the customer.

NOTICE:


Leave the ignition switch ON until you have checked the DTC, etc.

(9) After simulating the malfunction conditions, use the TOYOTA hand-held tester diagnosis selector to check the DTCs and freeze frame data, etc.

HINT:

Take care not to turn the ignition switch OFF. Turning the ignition switch OFF switches the diagnosis system from check mode to normal mode. so all DTCs, etc. are erased.

(10) After checking the DTC, inspect the applicable circuit.

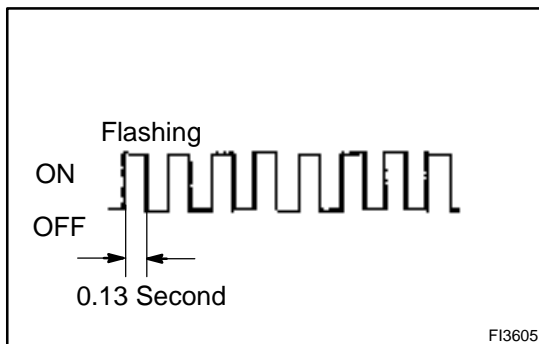

4. FAIL–SAFE CHART

If any of the following codes is recorded, the ECM enters fail–safe mode.

DTC No.	Fail–Safe Operation	Fail–Safe Deactivation Conditions
P0100	Ignition timing fixed at 5° BTDC	Returned to normal condition
P0110	Intake air temp. is fixed at 20°C (68°F)	Returned to normal condition
P0115	Engine coolant temp. is fixed at 80°C (176°F)	Returned to normal condition
P0120	VTA is fixed at 0°	The following condition must be repeated at least 2 times consecutively $0.1\text{ V} \leq \text{VTA} \leq 0.95\text{ V}$
P0135 P0141	The heater circuit in which an abnormality is detected is turned off	Ignition switch OFF
P0325	Max. timing retardation	Ignition switch OFF
P1300 P1305 P1310 P1315	Fuel cut	IGF signal is detected for 2 consecutive ignitions

5. CHECK FOR INTERMITTENT PROBLEMS


TOYOTA hand–held tester only:

By putting the vehicle's ECM in check mode, 1 trip detection logic is possible instead of 2 trip detection logic and sensitivity to detect open circuits is increased. This makes it easier to detect intermittent problems.


- (1) Clear the DTC (See step 3).
- (2) Set the check mode (See step 3).
- (3) Perform a simulation test (See page [IN-30](#)).
- (4) Check the connector and terminal (See page [IN-41](#)).
- (5) Handle the connector (See page [IN-41](#)).

6. BASIC INSPECTION

When the malfunction code is not confirmed in the DTC check, troubleshooting should be performed in the order for all possible circuits to be considered as the causes of the problems. In many cases, by carrying out the basic engine check shown in the following flow chart, the location causing the problem can be found quickly and efficiently. Therefore, use of this check is essential in engine troubleshooting.

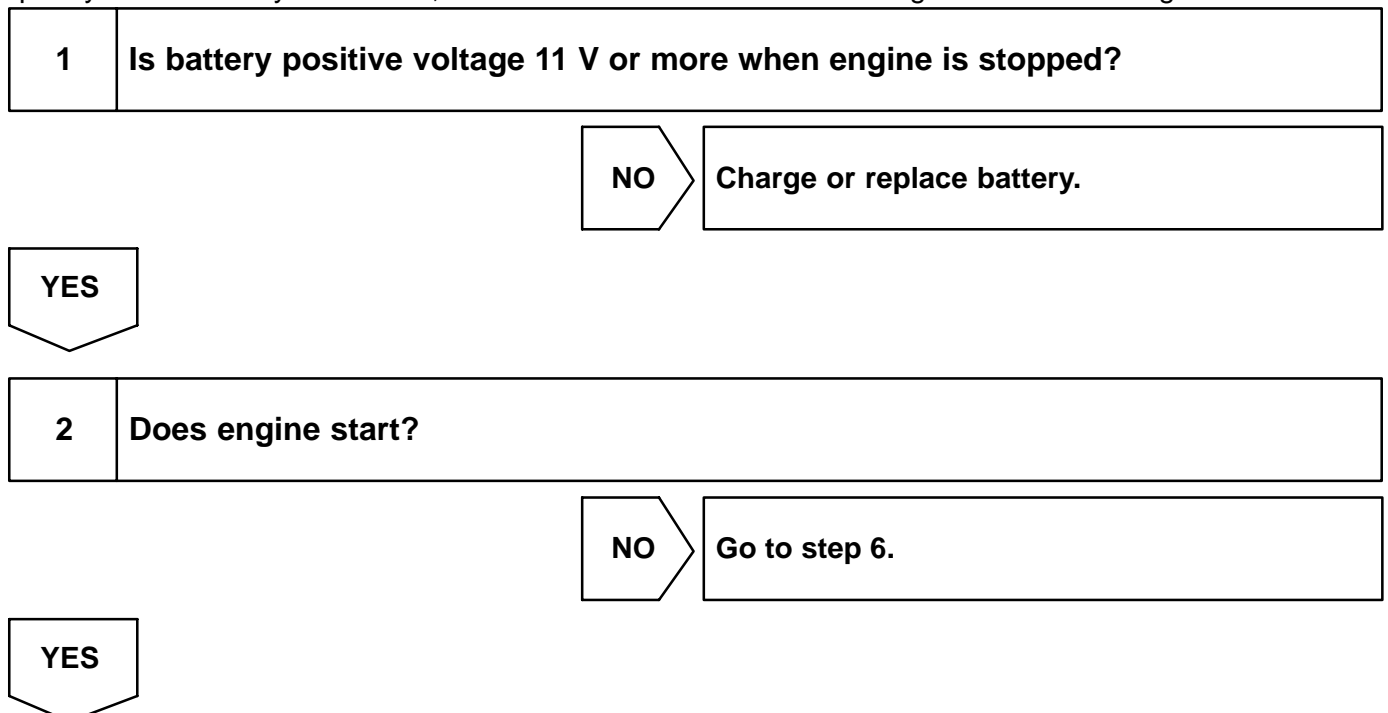

3 Check air filter.

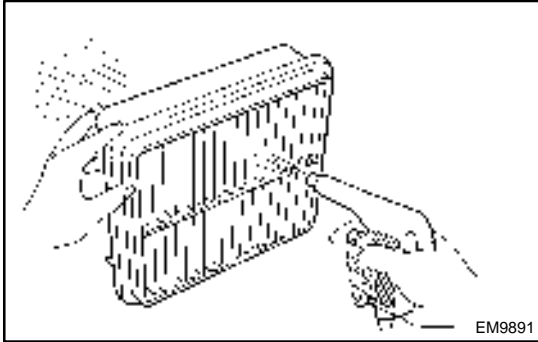

PREPARATION:

Remove the air filter.

CHECK:

Visual check that the air filter is not dirty or excessive oily.

HINT:

If necessary, clean the air filter with compressed air. First blow from inside thoroughly, then blow from outside of the air filter.

NG

Repair or replace.

OK

4 Check engine idle speed.

PREPARATION:

- Warm up engine to normal operating temperature.
- Switch off all accessories.
- Switch off A/C.
- Shift transmission into P position.
- Connect the TOYOTA hand-held tester or OBDII scan tool to DLC3 on the vehicle.
- Transit to inspection mode.

CHECK:

Use CURRENT DATA to check the idle speed.

OK:


Idle speed: 950 – 1,050 rpm

NG

Proceed to problem symptoms table on page [DI-22](#).

OK

5 Check ignition timing.

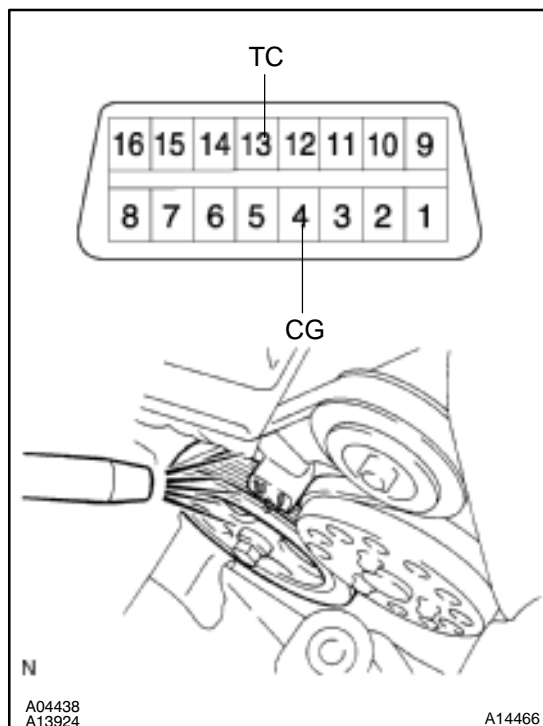

PREPARATION:

- Warm up engine to normal operating temperature.
- Shift transmission into P position.
- Keep the engine speed at idle.
- Using SST, connect terminals TE1 and E1 of DLC1.
SST 09843-18020
- Using a timing light, connect the tester to the ignition coil connector wire (See page EM-11).
- Transit to inspection mode.

CHECK:

Check ignition timing.

OK:

Ignition timing: 7 – 15° BTDC at idle

NG

Proceed to page IG-1 and continue to trouble-shoot.

OK

Proceed to problem symptoms table on page DI-22.

6 Check fuel pressure.



PREPARATION:

- Be sure that enough fuel is in the tank.
- Connect the TOYOTA hand-held tester to the DLC3.
- Turn the ignition switch ON and push the TOYOTA hand-held tester main switch ON.
- Use the ACTIVE TEST mode to operate the fuel pump.
- Please refer to the TOYOTA hand-held tester operator's manual for further details.
- If you have no TOYOTA hand-held tester, connect the positive (+) and negative (–) leads from the battery to the fuel pump connector (See page SF-6).

CHECK:

Check for fuel pressure in the fuel inlet hose when it is pinched off.

HINT:

At this time, you will hear a fuel flowing noise.

NG**Proceed to page [SF-6](#) and continue to trouble-shoot.****OK****7****Check for spark.****PREPARATION:**

- (a) Remove the ignition coil (See page [IG-5](#)).
- (b) Remove the spark plug.
- (c) Install the spark plug to ignition coil and connect the ignition coil connector to ignition coil.
- (d) Disconnect the injector connector.
- (e) Be sure to ground the screw of the spark plug securely.

CHECK:

Check if spark occurs while engine is being cranked.

NOTICE:

- **Do not crash the electrode gap.**
- **To prevent excess fuel being injected from the injectors during this test, don't crank the engine for more than 5 – 10 seconds at a time.**

NG**Proceed to page [IG-1](#) and continue to trouble-shoot.****OK****Proceed to problem symptoms table on page [DI-22](#).**

7. ENGINE OPERATING CONDITION

NOTICE:

The values given below for "Normal Condition" are representative values, so a vehicle may still be normal even if its value varies from those listed here. So do not decide whether a part is faulty or not solely according to the "Normal Condition" here.

(a) CARB mandated signals.

TOYOTA hand-held tester display	Measurement Item	Normal Condition*
FUEL SYS #1	Fuel System Bank 1 OPEN: Air-fuel ratio feedback stopped CLOSED: Air-fuel ratio feedback operating	Idling after warming up: CLOSED
CALC LOAD	Calculator Load: Current intake air volume as a proportion of max. intake air volume	Idling: 5.4 – 19.2 % Racing without load (2,250rpm): 6.9 – 16.2 %
COOLANT TEMP.	Engine Coolant Temp. Sensor Value	After warming up: 80 – 95°C (176 – 203°F)
SHORT FT #1	Short-term Fuel Trim Bank 1	0 ± 20%
LONG FT #1	Long-term Fuel Trim Bank 1	0 ± 20%
ENGINE SPD	Engine Speed	Idling: 1,000 rpm
VEHICLE SPD	Vehicle Speed	Vehicle Stopped: 0 km/h (0 mph)
IGN ADVANCE	Ignition Advance: Ignition Timing of Cylinder No. 1	Idling: BTDC 7 – 15°
INTAKE AIR	Intake Air Temp. Sensor Value	Equivalent to Ambient Temp.
MAF/AFM	Air Flow Rate Through Mass Flow Meter	Idling: 1.11 – 4.38 gm/sec. Racing without load (2,250 rpm): 3.38 – 7.88 gm/sec.
THROTTLE POS	Voltage Output of Throttle Position Sensor Calculated as a percentage: 0 V → 0%, 5 V → 100%	Throttle Fully Closed: 0 – 5 % Throttle Fully Open: 90 – 100 %
O2S B1, S1	Voltage Output of Heated Oxygen Sensor Bank 1, Sensor 1	Idling: 0.1 – 0.9 V
O2FT B1, S1	Heated Oxygen Sensor Fuel Trim Bank 1, Sensor 1 (Same as SHORT FT #1)	0 ± 20 %
O2S B1, S2	Voltage Output of Heated Oxygen Sensor Bank 1, Sensor 2	Driving at 50 km/h (31 mph): 0.1 – 0.9 V

*: If no conditions are specifically stated for "Idling", it means the shift lever is at P position, the A/C switch is OFF and all accessory switches are OFF.

(b) TOYOTA Enhanced Signals.

TOYOTA hand-held tester display	Measurement Item	Normal Condition*
MISFIRE RPM	Engine RPM for first misfire range	Misfire 0: 0 rpm
MISFIRE LOAD	Engine load for first misfire range	Misfire 0: 0 g/r
INJECTOR	Fuel injection time for cylinder No.1	Idling: 1.0 – 3.0 ms
CYL#1, CYL#2, CYL#3, CYL#4	Abnormal revolution variation for each cylinder	0 %
IGNITION	Total number of ignition for every 1,000 revolutions	0 – 2,000
FUEL PUMP	Fuel Pump Signal	Idling: ON
EVAP (PURGE) VSV	EVAP VSV Signal	VSV operating: ON
VAPOR PRESS VSV	Vapor Pressure VSV Signal	VSV operating: ON
TOTAL FT B1	Total Fuel Trim Bank 1: Average value for fuel trim system of bank 1	Idling: 0.8 – 1.2 V

DIAGNOSTICS – ENGINE

O2 LR B1, S1 *	Heated Oxygen Sensor Lean Rich Bank 1, Sensor 1 Response time for oxygen sensor output to switch from lean to rich	Idling after warmed up: 0 – 1,000 msec.
O2 RL B1, S1 *	Heated Oxygen Sensor Rich Lean Bank 1, Sensor 1 Response time for oxygen sensor output to switch from rich to lean	Idling after warmed up: 0 – 1,000 msec.

*: If no conditions are specifically stated for "Idling", it means the shift lever is at P position, the A/C switch is OFF and all accessory switches are OFF.

DIAGNOSTIC TROUBLE CODE CHART

HINT:

- Parameters listed in the chart may not be exactly the same as your reading due to the type of instrument or other factors.

If a malfunction code is displayed during the DTC check in check mode, check the circuit for that code listed in the table below. For details of each code, turn to the page referred to under the "See page" for the respective "DTC No." in the DTC chart.

- When the ignition switch is ON and "READY" indicator light is OFF, the bulb check of the "MIL" is performed ("MIL" is ON).

When "MIL" is ON, but the DTC of the engine is not memorized, it may be because of HV control system abnormality, so check HV control system beforehand.

SAE CONTROLLED:

DTC No.	Detection Item	Trouble Area	MIL*1	Memory
P0100 (DI-23)	Mass Air Flow Circuit Malfunction	<ul style="list-style-type: none"> Open or short in mass air flow meter circuit Mass air flow meter ECM 	○	○
P0101 (DI-27)	Mass Air Flow Circuit Range/Performance Problem	<ul style="list-style-type: none"> Mass air flow meter 	○	○
P0110 (DI-28)	Intake Air Temp. Circuit Malfunction	<ul style="list-style-type: none"> Open or short in intake air temp. sensor circuit Intake air temp. sensor (built into mass air flow meter) ECM 	○	○
P0115 (DI-32)	Engine Coolant Temp. Circuit Malfunction	<ul style="list-style-type: none"> Open or short in engine coolant temp. sensor circuit Engine coolant temp. sensor ECM 	○	○
P0116 (DI-36)	Engine Coolant Temp. Circuit Range/Performance Problem	<ul style="list-style-type: none"> Cooling system Engine coolant temp. sensor 	○	○
P0120 (DI-38)	Throttle/Pedal Position Sensor/Switch "A" Circuit Malfunction	<ul style="list-style-type: none"> Open or short in throttle position sensor circuit Throttle position sensor ECM 	○	○
P0121 (DI-43)	Throttle/Pedal Position Sensor/Switch "A" Circuit Range/Performance Problem	<ul style="list-style-type: none"> Throttle position sensor ECM 	○	○
P0125 (DI-44)	Insufficient Coolant Temp. for Closed Loop Fuel Control	<ul style="list-style-type: none"> Open or short in heated oxygen sensor (bank 1 sensor 1) circuit Heated oxygen sensor (bank 1 sensor 1) Air induction system Fuel pressure Injector Gas leakage on exhaust system ECM 	○	○
P0128 (DI-49)	Thermostat Malfunction	<ul style="list-style-type: none"> Thermostat Cooling system Water temperature ECM 	○	○
P0130 (DI-50)	Heated Oxygen Sensor Circuit Malfunction (Bank 1 Sensor 1) (Except Calif.)	<ul style="list-style-type: none"> Open or short in heated oxygen sensor circuit Heated oxygen sensor Air induction system EGR system Fuel pressure Injector ECM 	○	○

DIAGNOSTICS – ENGINE

P0133 (DI-54)	Oxygen Sensor Circuit Slow Response (Bank 1 Sensor 1)	<ul style="list-style-type: none"> • Open or short in heated oxygen sensor circuit • Heated oxygen sensor • Air induction system • EGR system • Fuel pressure • Injector • ECM 	○	○
P0135 (DI-57)	Oxygen Sensor Heater Circuit Malfunction (Bank 1 Sensor 1)	<ul style="list-style-type: none"> • Open or short in heater circuit of heated oxygen sensor • Heated oxygen sensor heater • ECM 	○	○
P0136 (DI-59)	Oxygen Sensor Circuit Malfunction (Bank 1 Sensor 2)	<ul style="list-style-type: none"> • Open or short in heated oxygen sensor circuit • Heated oxygen sensor 	○	○
P0141 (DI-57)	Oxygen Sensor Heater Circuit Malfunction (Bank 1 Sensor 2)	<ul style="list-style-type: none"> • Same as DTC No. P0135 	○	○
P0171 (DI-61)	System too Lean (Fuel Trim)	<ul style="list-style-type: none"> • Air induction system • Injector blockage • Mass air flow meter • Engine coolant temp. sensor • Fuel pressure • Gas leakage on exhaust system • Open or short in heated oxygen sensor (bank 1 sensor 1) circuit • Heated oxygen sensor (bank 1 sensor 1) 	○	○
P0172 (DI-61)	System too Rich (Fuel Trim)	<ul style="list-style-type: none"> • Injector leak, blockage • Mass air flow meter • Engine coolant temp. sensor • Ignition system • Fuel pressure • Gas leakage on exhaust system • Open or short in heated oxygen sensor (bank 1, 2 sensor 1) circuit • Heated oxygen sensor (bank 1, 2 sensor 1) • ECM 	○	○
P0300 (DI-65)	Random/Multiple Cylinder Misfire Detected	<ul style="list-style-type: none"> • Open or short in engine wire • Connector connection 	○	○
P0301 (DI-65)	Cylinder 1 Misfire Detected	<ul style="list-style-type: none"> • Vacuum hose connection • Ignition system • Injector 		
P0302 (DI-65)	Cylinder 2 Misfire Detected	<ul style="list-style-type: none"> • Fuel pressure • EGR system • Manifold absolute pressure sensor 		
P0303 (DI-65)	Cylinder 3 Misfire Detected	<ul style="list-style-type: none"> • Engine coolant temp. sensor • Compression pressure 		
P0304 (DI-65)	Cylinder 4 Misfire Detected	<ul style="list-style-type: none"> • Valve clearance • Valve timing • ECM 		
P0325 (DI-71)	Knock Sensor 1 Circuit Malfunction (Bank 1)	<ul style="list-style-type: none"> • Open or short in knock sensor 1 circuit • Knock sensor 1 (looseness) • ECM 	○	○
P0335 (DI-74)	Crankshaft Position Sensor "A" Circuit Malfunction	<ul style="list-style-type: none"> • Open or short in crankshaft position sensor circuit • Crankshaft position sensor • Signal plate (Timing belt guide) • Crankshaft timing pulley • ECM 	○	○

P0340 (DI-76)	Camshaft Position Sensor Circuit Malfunction	<ul style="list-style-type: none"> • Open or short in camshaft position sensor circuit • Camshaft position sensor • Camshaft timing pulley • ECM 	○	○
P0420 (DI-78)	Catalyst System Efficiency Below Threshold (Bank 1)	<ul style="list-style-type: none"> • Gas leakage on exhaust system • Open or short in heated oxygen sensor circuit • Heated oxygen sensor • Three-way catalytic converter 	○	○
P0440 (DI-81)	Evaporative Emission Control System Malfunction	<ul style="list-style-type: none"> • Hose or tube cracked, hole, damaged or loose seal • Fuel tank cap incorrectly installed • Fuel tank cap cracked or damaged • Vacuum hose cracked, hole, blocked, damaged or disconnected • Fuel tank cracked, hole or damaged • Charcoal canister cracked, hole or damaged • Open or short in vapor pressure sensor circuit • Vapor pressure sensor • Fuel tank over fill check valve cracked or damaged • ECM 	○	○
P0441 (DI-87)	Evaporative Emission Control System Incorrect Purge Flow	<ul style="list-style-type: none"> • Vacuum hose cracked, hole, blocked damaged or disconnected • Open or short in vapor pressure sensor circuit • Vapor pressure sensor • Open or short in VSV circuit for EVAP • VSV for EVAP 	○	○
P0446 (DI-87)	Evaporative Emission Control System Vent Control Malfunction	<ul style="list-style-type: none"> • Open or short in VSV circuit for vapor pressure sensor • VSV for vapor pressure sensor • Charcoal canister cracked, hole or damaged • Fuel tank over fill check valve cracked or damaged • ECM 	○	○
P0450 (DI-103)	Evaporative Emission Control System Pressure Sensor Malfunction	<ul style="list-style-type: none"> • Open or short in vapor pressure sensor circuit • Vapor pressure sensor • ECM 	○	○
P0451 (DI-103)	Evaporative Emission Control System Pressure Sensor Range/Performance			
P0500 (DI-105)	Vehicle Speed Sensor Malfunction	<ul style="list-style-type: none"> • Combination meter • Open or short in vehicle speed sensor circuit • Vehicle speed sensor • ECM 	○	○
P0505 (DI-107)	Idle Control System Malfunction	<ul style="list-style-type: none"> • Electric throttle control system • Air induction system 	○	○

*1: ○ . . . MIL lights up


MANUFACTURER CONTROLLED:

DTC No. (See Page)	Detection Item	Trouble Area	MIL*1	Memory
P1125 (DI-108)	Throttle Control Motor Circuit Malfunction	<ul style="list-style-type: none"> • Open or short in throttle control motor circuit • Throttle control motor • ECM 	○	○
P1127 (DI-110)	ETCS Actuator Power Source Circuit Malfunction	<ul style="list-style-type: none"> • Open in ETCS power source circuit • ECM 	○	○
P1128 (DI-112)	Throttle Control Motor Lock Malfunction	<ul style="list-style-type: none"> • Throttle control motor • Throttle body 	○	○
P1129 (DI-114)	Electric Throttle Control System Malfunction	<ul style="list-style-type: none"> • Electric throttle control system • ECM 	○	○
P1300 (DI-115)	Igniter Circuit Malfunction (No.1)	<ul style="list-style-type: none"> • Ignition system • Open or short in IGF1 and IGT1 circuit from No.1 ignition coil with igniter to ECM • No.1 ignition coil with igniter • ECM 	○	○
P1305 (DI-115)	Igniter Circuit Malfunction (No.2)	<ul style="list-style-type: none"> • Ignition system • Open or short in IGF2 and IGT2 circuit from No.2 ignition coil with igniter to ECM • No.2 ignition coil with igniter • ECM 	○	○
P1310 (DI-115)	Igniter Circuit Malfunction (No.3)	<ul style="list-style-type: none"> • Ignition system • Open or short in IGF2 and IGT3 circuit from No.3 ignition coil with igniter to ECM • No.3 ignition coil with igniter • ECM 	○	○
P1315 (DI-115)	Igniter Circuit Malfunction (No.4)	<ul style="list-style-type: none"> • Ignition system • Open or short in IGF1 and IGT4 circuit from No.4 ignition coil with igniter to ECM • No.4 ignition coil with igniter • ECM 	○	○
P1346 (DI-120)	VVT Sensor/Camshaft Position Sensor Circuit Range/Performance Problem (Bank 1)	<ul style="list-style-type: none"> • Mechanical system (Jumping teeth of timing belt, belt stretched) • ECM 	○	○
P1349 (DI-121)	VVT System Malfunction (Bank 1)	<ul style="list-style-type: none"> • Valve timing • OCV • VVT controller assembly • ECM 	○	○
P1430 (DI-127)	Vacuum Sensor for Adsorber and Catalyst System Circuit Malfunction	<ul style="list-style-type: none"> • Open or short circuit in vacuum sensor circuit • Vacuum sensor for HC adsorber and catalyst system • ECM 	○	○
P1431 (DI-131)	Vacuum Sensor for Adsorber and Catalyst System Circuit Range/Performance Problem	<ul style="list-style-type: none"> • Vacuum sensor for HC adsorber and catalyst system • Vacuum line 	○	○
P1436 (DI-133)	Variable Value Malfunction	<ul style="list-style-type: none"> • Vacuum line • Actuator for HC adsorber and catalyst system • Front exhaust pipe 	○	○
P1437 (DI-135)	Vacuum Line Malfunction	<ul style="list-style-type: none"> • Vacuum line • VSV for HC adsorber and catalyst system • Check valve 	○	○

P1455 (DI-140)	Vapor Reducing Fuel Tank System Leak Detected (Small Leak)	<ul style="list-style-type: none"> • Hose and pipe • Heated oxygen sensor • Fuel system • VVT system • Ignition system • Mass air flow meter • ECM 	○	○
P1525 (DI-141)	Resolver Circuit Malfunction	<ul style="list-style-type: none"> • HV ECU • Engine ECU 	—	○
P1600 (DI-143)	ECM BATT Malfunction	<ul style="list-style-type: none"> • Open in back up power source circuit • ECM 	○	○
P1633 (DI-145)	ECU Malfunction (ETCS Circuit)	<ul style="list-style-type: none"> • ECM 	○	○
P1636 (DI-146)	HV ECU Malfunction	<ul style="list-style-type: none"> • HV ECU • Engine ECU 	○	○
P1637 (DI-148)	EGSTP Signal Malfunction	<ul style="list-style-type: none"> • HV ECU • Engine ECU 	—	○
P1656 (DI-150)	OCV Circuit Malfunction (for VVT-i)	<ul style="list-style-type: none"> • Open or short in OCV circuit • OCV • ECM 	○	○
P3190 (DI-153)	Poor Engine Power	<ul style="list-style-type: none"> • Air induction system • Throttle body • Fuel pressure • Engine • Mass air flow meter 	○	○
P3191 (DI-153)	Engine dose not start	<ul style="list-style-type: none"> • Out of fuel • Engine coolant temp. sensor • Crankshaft position sensor • Camshaft position sensor • ECM 	○	○

*1: ○ . . . MIL lights up

TERMINALS OF ECM

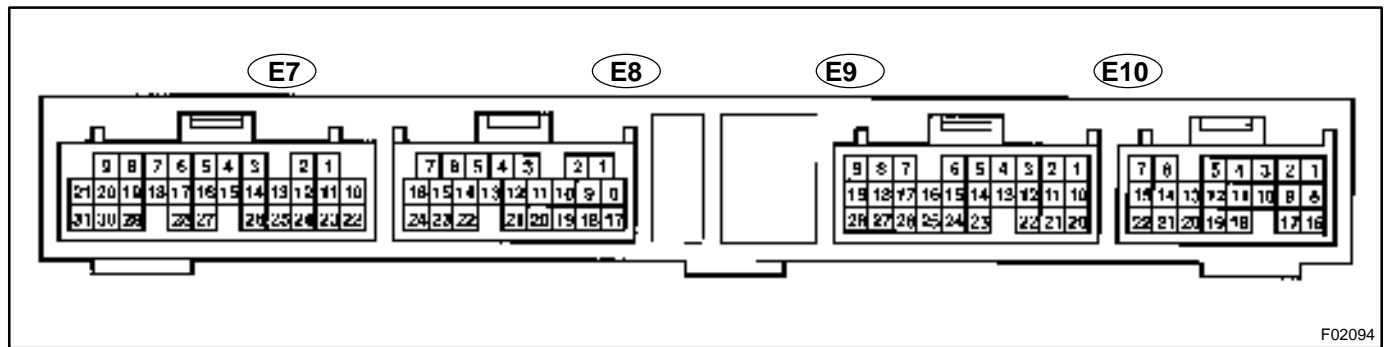

F02094

Symbols (Terminal No.)	Wiring Color	Condition	STD Voltage (V)
BATT (E8 – 3) – E1 (E8 – 17)	R-W ↔ BR	Always	9 – 14
+B (E8 – 4) – E1 (E8 – 17)	B ↔ BR	IG switch ON	9 – 14
+BM (E7 – 6) – E1 (E8 – 17)	GR ↔ BR	Always	9 – 14
IGSW(E10 – 9) – E1(E8 – 17)	B-W ↔ BR	IG switch ON	9 – 14
MREL (E9 – 25) – E1(E8 – 17)	G-R ↔ BR	IG switch ON	9 – 14
VC (E8 – 2) – E2 (E8 – 18)	Y-R ↔ BR	IG switch ON	4.5 – 5.5
VTA (E8 – 23) – E2 (E8 – 18)	P ↔ BR	IG switch ON Throttle valve fully closed	0.4 – 1.0
		IG switch ON Throttle valve fully open	3.2 – 4.8
VTA2 (E8 – 21) – E2 (E8 – 18)	L ↔ BR	IG switch ON Accelerator pedal released	2.0 – 2.9
		IG switch ON Accelerator pedal depressed	4.6 – 5.1
VG (E8 – 10) – EVG (E8 – 19)	G ↔ R	Idling, A/C switch OFF, Shift position in N or P position	0.5 – 3.0
THA (E8 – 22) – E2 (E8 – 18)	R-B ↔ BR	Idling, Intake air temp. 20°C (68°F)	0.5 – 3.4
THW (E8 – 14) – E2 (E8 – 18)	W ↔ BR	Idling, Engine coolant temp. 80°C (176°F)	0.2 – 1.0
#10 (E8 – 5) – E01 (E7 – 21)	Y ↔ W-B	IG switch ON	9 – 14
		Idling	Pulse generation (See page DI-65)
#20 (E8 – 6) – E01 (E7 – 21)	B-R ↔ W-B	IG switch ON	9 – 14
		Idling	Pulse generation (See page DI-65)
#30 (E7 – 1) – E01 (E7 – 21)	L-W ↔ W-B	IG switch ON	9 – 14
		Idling	Pulse generation (See page DI-65)
#40 (E7 – 2) – E01 (E7 – 21)	R-W ↔ W-B	IG switch ON	9 – 14
		Idling	Pulse generation (See page DI-65)
IGT1 (E7 – 11) – E1 (E8 – 17)	Y-G ↔ BR	Idling	Pulse generation (See page DI-115)
IGT2 (E7 – 12) – E1 (E8 – 17)	W ↔ BR	Idling	Pulse generation (See page DI-115)
IGT3 (E7 – 13) – E1 (E8 – 17)	G ↔ BR	Idling	Pulse generation (See page DI-115)

DIAGNOSTICS – ENGINE

IGT4 (E7 – 14) – E1 (E8 – 17)	Y ↔ BR	Idling	Pulse generation (See page DI-115)
IGF (E7 – 25) – E1 (E8 – 17)	B–R ↔ BR	IG switch ON	4.5 – 5.5
		Idling	Pulse generation (See page DI-115)
G2 (E7 – 10) – NE \ominus (E8 – 24)	R ↔ G	Idling	Pulse generation (See page DI-74)
NE+ (E8 – 16) – NE– (E8 – 24)	R ↔ G	Idling	Pulse generation (See page DI-74)
FC (E8 – 9) – E01 (E7 – 21)	G–R ↔ W–B	IG switch ON	9 – 14
EVP1 (E7 – 29) – E1 (E8 – 17)	R–L ↔ BR	IG switch ON	9 – 14
OX1A (E10 – 12) – E2 (E8 – 18)	W ↔ BR	Maintain engine speed at 2,500 rpm for 2 min. after warming up	Pulse generation (See page DI-44)
OX1B (E10 – 11) – E2 (E8 – 18)	Y ↔ BR	Maintain engine speed at 2,500 rpm for 2 min. after warming up	Pulse generation (See page DI-44)
HT1A (E10 – 1) – E1 (E8 – 17)	P–L ↔ BR	Idling	Below 3.0
		IG switch ON	9 – 14
HT1B (E10 – 7) – E1 (E8 – 17)	G–Y ↔ BR	Idling	Below 3.0
		IG switch ON	9 – 14
KNK1 (E7 – 28) – E2 (E8 – 18)	B ↔ BR	Idling	Pulse generation (See page DI-71)
SPD (E10 – 5) – E1 (E8 – 17)	V–W ↔ BR	IG switch ON Rotate driving wheel slowly	Pulse generation
SPHV (E9 – 10) – E1 (E8 – 17)	O ↔ BR	IG switch ON Rotate driving wheel slowly	Pulse generation (See page DI-105)
ESTP (E9 – 16) – E1 (E8 – 17)	R–Y ↔ BR	Idling	9 – 14
TAM (E9 – 23) – E2 (E8 – 18)	W–G ↔ BR	Outer air temp. –30 – 50°C	0.7 – 3.2
W (E10 – 6) – E1 (E8 – 17)	G–R ↔ BR	Idling	9 – 14
		IG switch ON	Below 3.0
ACT (E10 – 22) – E1 (E8 – 17)	P–G ↔ BR	A/C switch OFF	Below 2.0
		A/C switch ON at idling	9 – 14
OCV+ (E7 – 23) – OCV – (E7 – 24)	Y–R ↔ W–G	IG switch ON	Pulse generation (See page DI-121)
M+ (E7 – 8) – E1 (E8 – 17) M– (E7 – 7) – E1 (E8 – 17)	L ↔ BR P ↔ BR	Idling	Pulse generation (See page DI-108)
TC (E9 – 6) – E1 (E8 – 17)	P–B ↔ BR	IG switch ON	9 – 14
HCC (E9 – 20) – E1 (E8 – 17)	B–W ↔ BR	IG switch ON	9 – 14
PTNK (E9 – 22) – E1 (E8 – 17)	L–R ↔ BR	IG switch ON	9 – 14
		Apply vacuum 4.0 kPa (30 mmHg, 1.2 in.Hg)	Below 0.5
HCLS (E9 – 14) – E1 (E8 – 17)	V–W ↔ BR	IG switch ON	3.3 – 3.9
		Apply vacuum 67 kPa (500 mmHg, 19.7 in.Hg)	1.3 – 1.9

CIRCUIT INSPECTION


DTC	P0100	Mass Air Flow Circuit Malfunction
------------	--------------	--

CIRCUIT DESCRIPTION

The mass air flow meter uses a platinum hot wire. The hot wire air flow meter consists of a platinum hot wire, temperature sensor and a control circuit installed in a plastic housing. The hot wire air flow meter works on the principle that the hot wire and temperature sensor located in the intake air bypass of the housing detect any changes in the intake air temp.

The hot wire is maintained at the set temp. by controlling the current flow through the hot wire. This current flow is then measured as the output voltage of the air flow meter.

The circuit is constructed so that the platinum hot wire and temperature sensor provide a bridge circuit, with the power transistor controlled so that the potential of A and B remains equal to maintain the set temp.

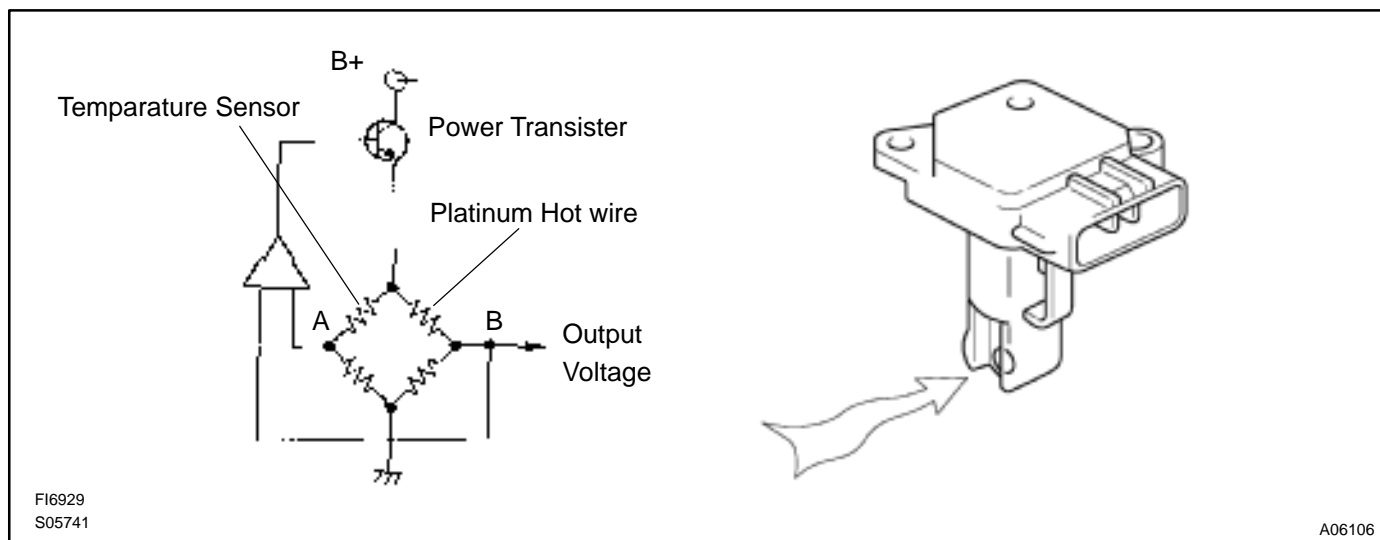

DTC No.	DTC Detecting Condition	Trouble Area
P0100	Open or short in mass air flow meter circuit with more than 3 sec. engine speed 3,000 rpm or less	<ul style="list-style-type: none"> • Open or short in mass air flow meter circuit • Mass air flow meter • ECM


If the ECM detects DTC "P0100" it operates the fail-safe function, keeping the ignition timing and injection volume constant and making it possible to drive the vehicle.

HINT:

After confirming DTC P0100 use the OBD II scan tool or TOYOTA hand-held tester to confirm the mass air flow ratio from "CURRENT DATA".

Mass Air Flow Value (gm/sec.)	Malfunction
0.0	<ul style="list-style-type: none"> • Mass air flow meter power source circuit open • VG circuit open or short
271.0 or more	<ul style="list-style-type: none"> • E2G circuit open

WIRING DIAGRAM

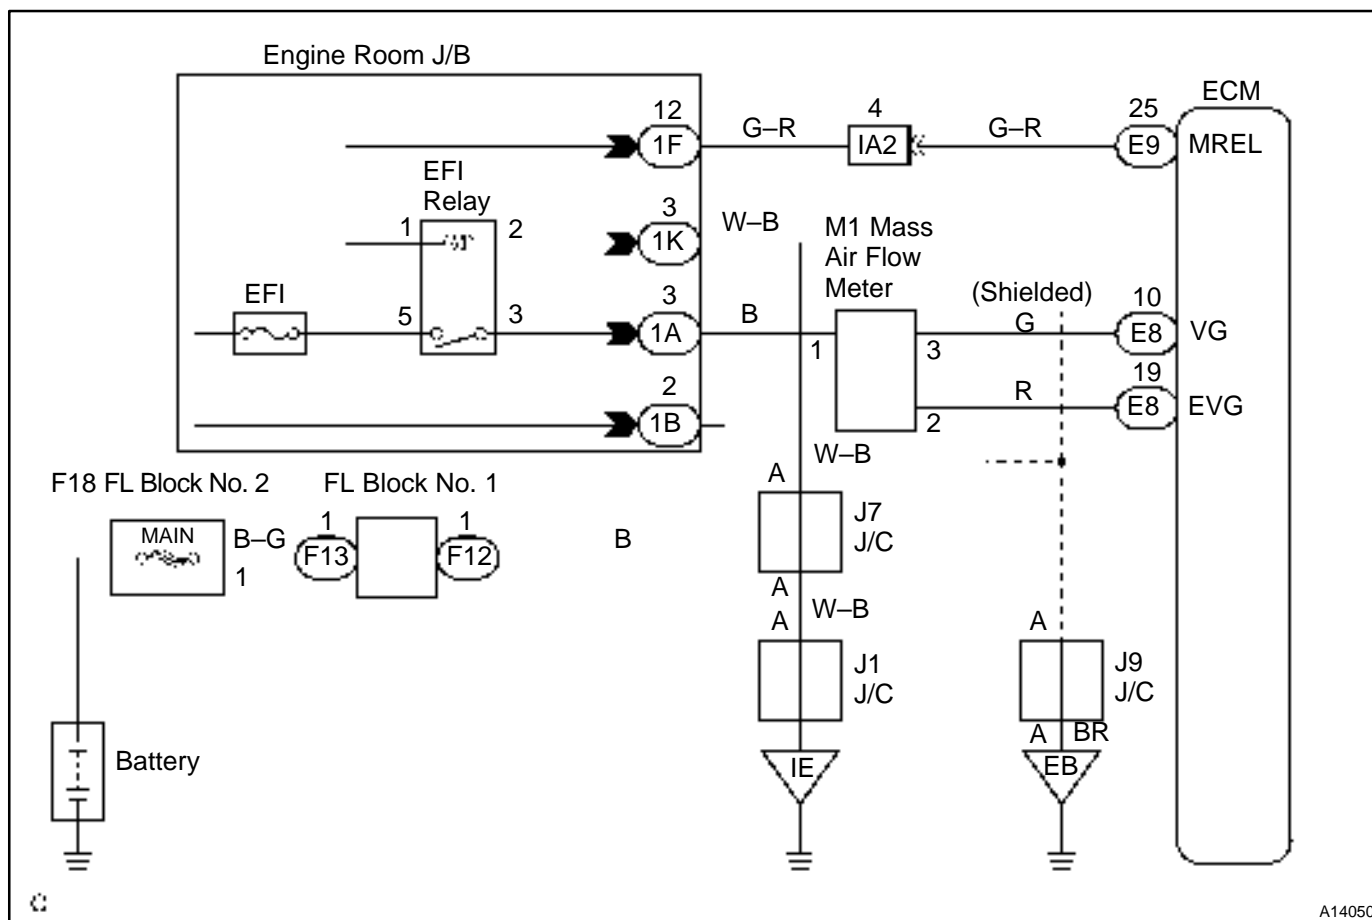

INSPECTION PROCEDURE

HINT:

Read freeze frame data using TOYOTA hand-held tester or OBD II scan tool. Because freeze frame records the engine conditions when the malfunction is detected, when troubleshooting it is useful for determining whether the vehicle was running or stopped, the engine warmed up or not, the air-fuel ratio lean or rich, etc. at the time of the malfunction.

1	Connect OBD II scan tool or TOYOTA hand-held tester, and read value of mass air flow rate.
---	--

PREPARATION:

- Connect the OBD II scan tool or TOYOTA hand-held tester to the DLC3.
- Turn ignition switch ON and push the OBD II scan tool or TOYOTA hand-held tester main switch ON.
- Start the engine.

CHECK:


Read mass air flow rate on the OBD II scan tool or TOYOTA hand-held tester.

RESULT:

	Type I	Type II
Mass air flow rate (gm/sec.)	0.0	271.0 or more

Type I	Go to step 2.
Type II	Go to step 5.

2	Check voltage of mass air flow meter power source.
---	--

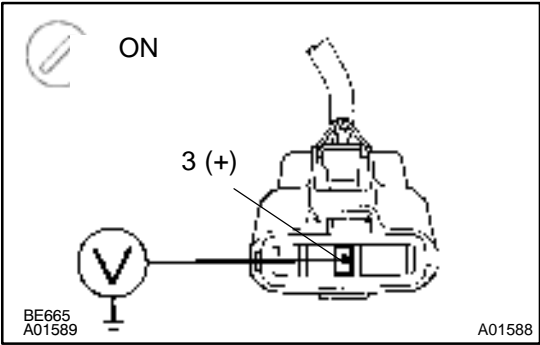

PREPARATION:

- (a) Disconnect the mass air flow meter connector.
- (b) Turn ignition switch ON.

CHECK:

Measure voltage between terminal 4 of mass air flow meter connector and body ground.


OK:

Voltage: 9 – 14 V

NG	Check for open in harness and connector between EFI main relay (Marking: EFI) and mass air flow meter (See page IN-41).
----	--

OK

3	Check voltage between terminal VG of ECM connector and body ground.
---	---

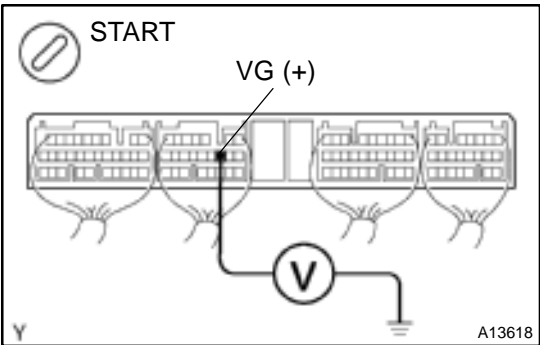

PREPARATION:

- (a) Remove the ECM with connector still connected (See page [SF-62](#)).
- (b) Start the engine.

CHECK:

Measure voltage between terminal VG of ECM and body ground while engine is idling.

OK:

Voltage:
1.1 – 1.5 V (P position and A/C switch OFF)

OK	Check and replace ECM (See page IN-41).
----	--

NG

- 4** Check for open and short in harness and connector between mass air flow meter and ECM (See page [IN-41](#)).


NG

Repair or replace harness or connector.

OK

Replace mass air flow meter.

- 5** Check continuity between terminal EVG of ECM connector and body ground.

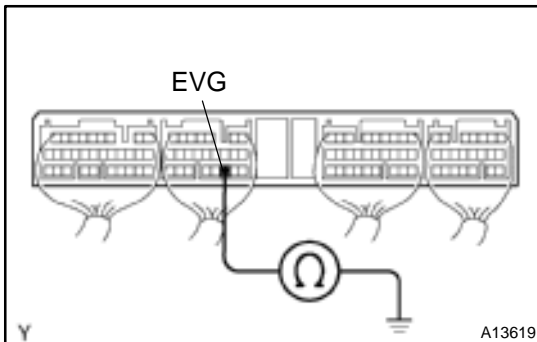

PREPARATION:

Remove the ECM with connector still connected (See page [SF-62](#)).

CHECK:

Check continuity between terminal EVG of ECM connector and body ground.

OK:

Continuity (1 Ω or less)

NG

Check and replace ECM (See page [IN-41](#)).

OK

- 6** Check for open in harness and connector between mass air flow meter and ECM (See page [IN-41](#)).

NG


Repair or replace harness or connector.

OK

Replace mass air flow meter.

DTC	P0110	Intake Air Temp. Circuit Malfunction
------------	--------------	---

CIRCUIT DESCRIPTION

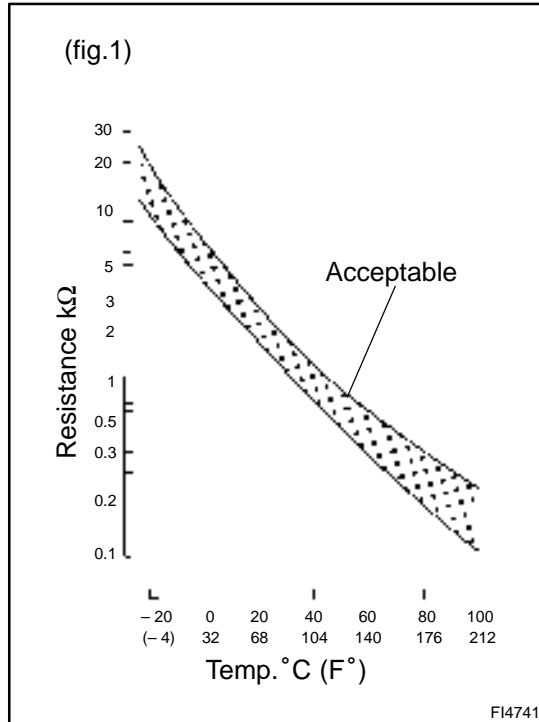

The intake air temp. sensor is built into the mass air flow meter and senses the intake air temperature.

A thermistor built in the sensor changes the resistance value according to the intake air temperature, the lower the intake air temperature, the greater the thermistor resistance value, and the higher the intake air temperature, the lower the thermistor resistance value (See fig.1).

The air intake temperature sensor is connected to the ECM (See below). The 5V power source voltage in the ECM is applied to the intake air temp. sensor from the terminal THA via a resistor R.

That is, the resistor R and the intake air temp. sensor are connected in series. When the resistance value of the intake air temp. sensor changes in accordance with changes in the intake air temperature, the potential at terminal THA also changes. Based on this signal, the ECM increases the fuel injection volume to improve driveability during cold engine operation.

If the ECM detects the DTC "P0110", it operates the fail safe function in which the intake air temperature is assumed to be 20°C (68°F).


DTC No.	DTC Detecting Condition	Trouble Area
P0110	Open or short in intake air temp. sensor circuit	<ul style="list-style-type: none"> • Open or short in intake air temp. sensor circuit • Intake air temp. sensor (built into mass air flow meter) • ECM

HINT:

After confirming DTC P0110, use the OBD II scan tool or TOYOTA hand-held tester to confirm the intake air temperature from CURRENT DATA.

Temperature Displayed	Malfunction
-40°C (-40°F)	Open circuit
140°C (284°F) or more	Short circuit

WIRING DIAGRAM

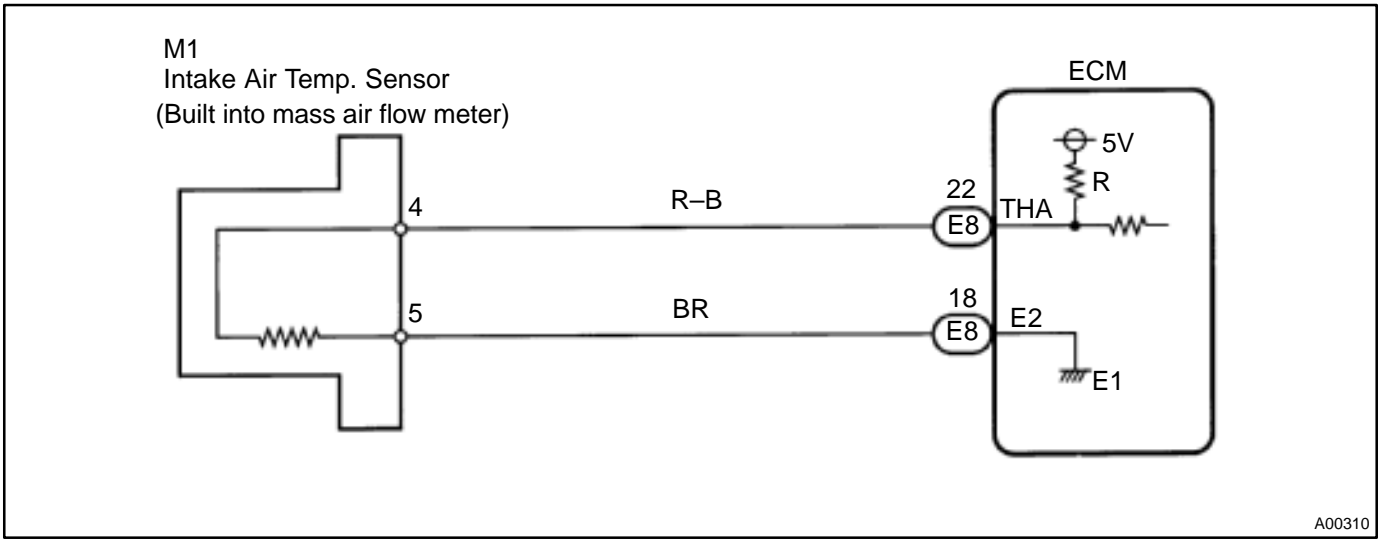

A00310

INSPECTION PROCEDURE

HINT:

- If DTC P0110 , P0115 and P0120 are output simultaneously, E2 (sensor ground) may be open.
- Read freeze frame data using TOYOTA hand-held tester or OBD II scan tool. Because freeze frame records the engine conditions when the malfunction is detected, when troubleshooting it is useful for determining whether the vehicle was running or stopped, the engine warmed up or not, the air-fuel ratio lean or rich, etc. at the time of the malfunction.

1	Connect OBD II scan tool or TOYOTA hand-held tester, and read value of intake air temperature.
---	---

PREPARATION:

- Connect the OBD II scan tool or TOYOTA hand-held tester to DLC3.
- Turn the ignition switch ON and push the OBD II scan tool or TOYOTA hand-held tester main switch ON.

CHECK:

Read temperature value on the OBD II scan tool or TOYOTA hand-held tester.

OK:

Same as actual air intake temperature.

HINT:

- If there is open circuit, OBD II scan tool or TOYOTA hand-held tester indicates -40°C (-40°F).
- If there is short circuit, OBD II scan tool or TOYOTA hand-held tester indicates 140°C (284°F) or more.


NG

**-40°C (-40°F)Go to step 2.
 140°C (284°F) or moreGo to step 4.**

OK

**Check for intermittent problems
(See page DI-3).**

2 Check for open in harness or ECM.

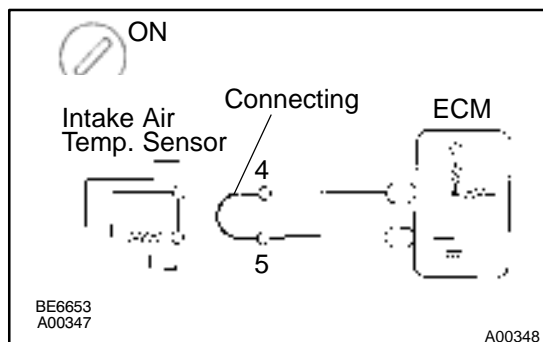

PREPARATION:

- Disconnect the intake temp. sensor connector.
- Connect sensor wire harness terminals together.
- Turn the ignition switch ON.

CHECK:

Read temp. value on the OBD II scan tool or TOYOTA hand-held tester.

OK:


Temp. value: 140°C (284°F) or more

OK

Confirm good connection at sensor. If OK, replace intake air temp. sensor.

NG

3 Check for open in harness or ECM.

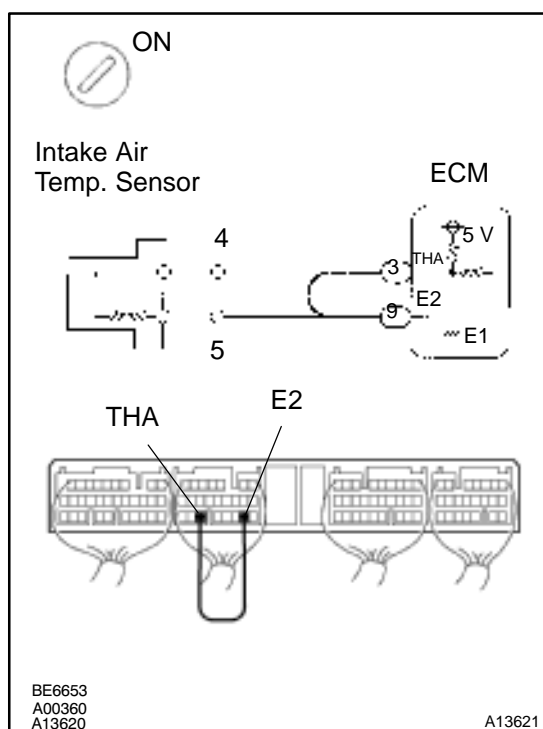

PREPARATION:

- Remove the ECM with connector still connected (See page [SF-62](#)).
- Connect between terminals THA and E2 of the ECM connector.

HINT:

In take air temp. sensor connector is disconnected.

Before checking, do a visual and contact pressure check for the ECM connector (See page [IN-41](#)).

- Turn the ignition switch ON.

CHECK:

Read temperature value on the OBD II scan tool or TOYOTA hand-held tester.

OK:

Temperature value: 140°C (284°F) or more

OK


Open in harness between terminals E2 or THA, repair or replace harness.

NG

Confirm good connection at ECM. If OK, check and replace ECM (See page [IN-41](#)).

4

Check for short in harness and ECM.

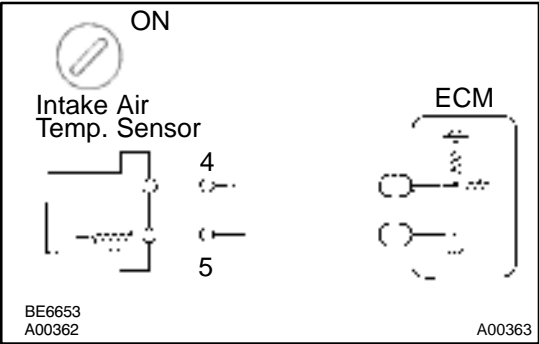

PREPARATION:

- (a) Disconnect the mass air flow meter connector.
- (b) Turn the ignition switch ON.

CHECK:

Read temperature value on the OBD II scan tool or TOYOTA hand-held tester.

OK:

Temperature value: -40°C (-40°F)


OK

Replace mass air flow meter.

NG

5

Check for short in harness or ECM.

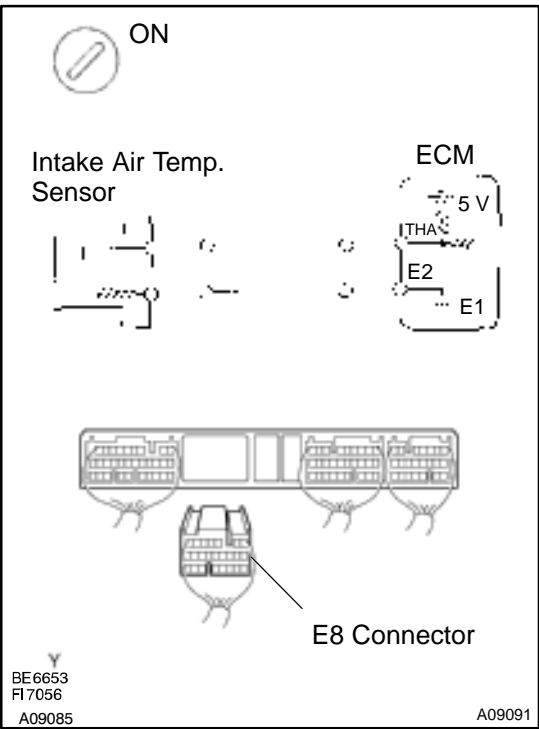

PREPARATION:

- (a) Remove the ECM with connector still connected (See page [SF-62](#)).

- (b) Disconnect the E8 connector of the ECM.

HINT:

Intake air temp. sensor connector is disconnected.

- (c) Turn the ignition switch ON.

CHECK:

Read temperature value on the OBD II scan tool or TOYOTA hand-held tester.

OK:

Temperature value: -40°C (-40°F)

OK

Repair or replace harness or connector.

NG

Check and replace ECM (See page [IN-41](#)).

DTC	P0115	Engine Coolant Temp. Circuit Malfunction
------------	--------------	---

CIRCUIT DESCRIPTION

A thermistor built into the engine coolant temp. sensor changes the resistance value according to the engine coolant temp.

The structure of the sensor and connection to the ECM is the same as in the intake air temp. circuit malfunction shown on page [DI-28](#).

If the ECM detects the DTC P0115, it operates fail safe function in which the engine coolant temperature is assumed to be 80°C (176°F).


DTC No.	Detection Item	Trouble Area
P0115	Open or short in engine coolant temp. sensor circuit	<ul style="list-style-type: none"> • Open or short in engine coolant temp. sensor circuit • Engine coolant temp. sensor • ECM

HINT:

After confirming DTC P0115, use the OBD II scan tool or TOYOTA hand-held tester to confirm the engine coolant temp. from "CURRENT DATA".

Temp. Displayed	Malfunction
-40°C (-40°F)	Open circuit
140°C (284°F) or more	Short circuit

WIRING DIAGRAM

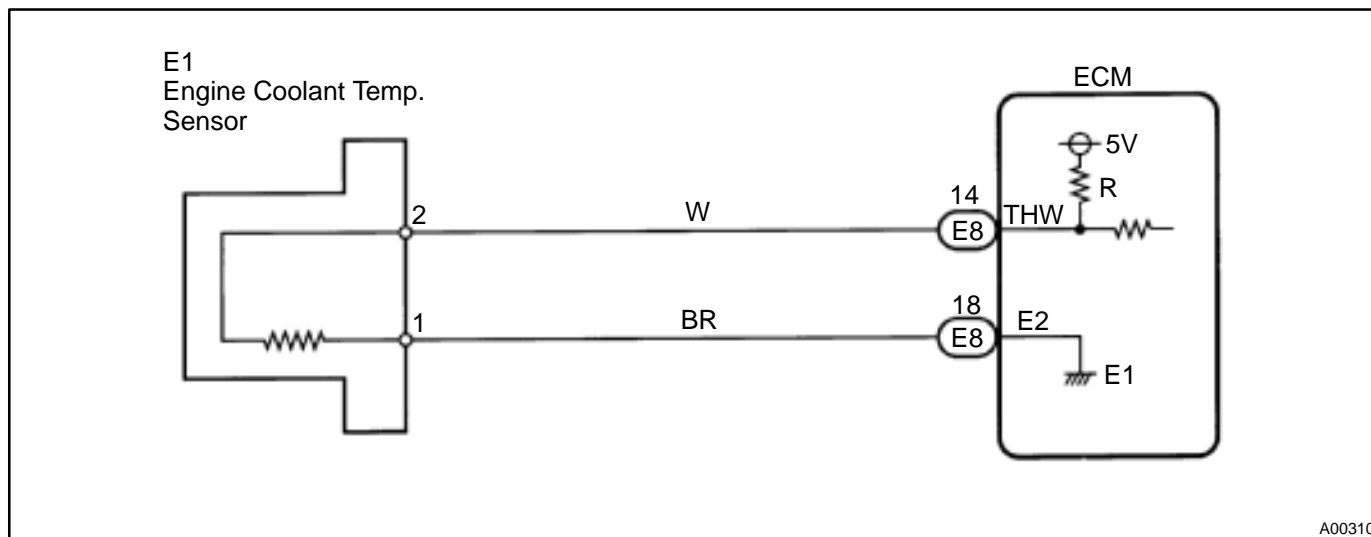

INSPECTION PROCEDURE

HINT:

- If DTC P0110, P0115 and P0120 are output simultaneously, E2 (sensor ground) may be open.
- Read freeze frame data using TOYOTA hand-held tester or OBD II scan tool. Because freeze frame records the engine conditions when the malfunction is detected, when troubleshooting it is useful for determining whether the vehicle was running or stopped, the engine warmed up or not, the air-fuel ratio lean or rich, etc. at the time of the malfunction.

- | | |
|----------|---|
| 1 | Connect OBD II scan tool or TOYOTA hand-held tester, and read value of engine coolant temperature. |
|----------|---|

PREPARATION:

- (a) Connect the OBD II scan tool or TOYOTA hand-held tester to the DLC3.
- (b) Turn the ignition switch ON and push the OBD II scan tool or TOYOTA hand-held tester main switch ON.

CHECK:

Read temperature value on the OBD II scan tool or TOYOTA hand-held tester.

OK:

Same as actual engine coolant temperature

HINT:

- If there is open circuit, OBD II scan tool or TOYOTA hand-held tester indicates -40°C (-40°F).
- If there is open circuit, OBD II scan tool or TOYOTA hand-held tester indicates 140°C (284°F) or more.


NG

-40°C (-40°F) ... Go to step 2.
 140°C (284°F) or more ... Go to step 4.

OK

Check for intermittent problems
 (See page [DI-3](#)).

- | | |
|----------|--|
| 2 | Check for open in harness or ECM. |
|----------|--|

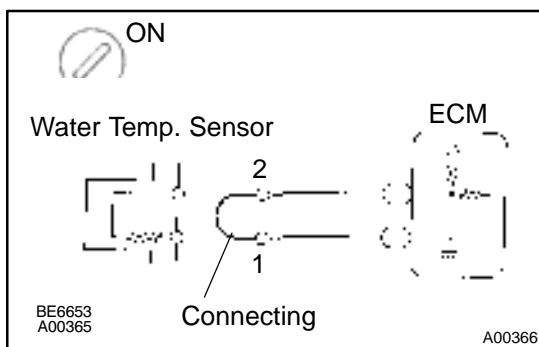**PREPARATION:**

- (a) Disconnect the engine coolant temp. sensor connector.
- (b) Connect the sensor wire harness terminals together.
- (c) Turn the ignition switch ON.

CHECK:

Read temperature value on the OBD II scan tool or TOYOTA hand-held tester.

OK:


Temperature value: 140°C (284°F) or more

OK

Confirm good connection at sensor. If OK, replace engine coolant temp. sensor.

NG

3 Check for open in harness or ECM.

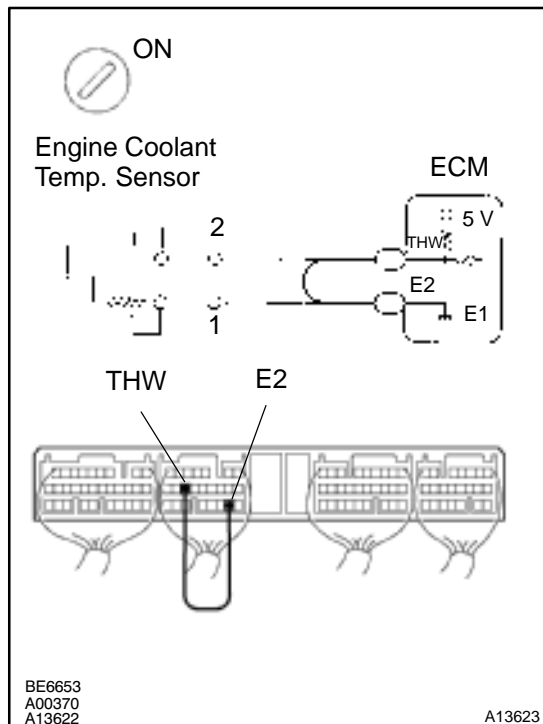

PREPARATION:

- Remove the ECM with connector still connected (See page [SF-62](#)).
- Connect between terminals THW and E2 of the ECM connector.

HINT:

Engine coolant temp. sensor connector is disconnected. Before checking, do a visual and contact pressure check for the ECM connector (See page [IN-41](#)).

- Turn the ignition switch ON.

CHECK:

Read temperature value on the OBD II scan tool or TOYOTA hand-held tester.

OK:

Temperature value: 140°C (284°F) or more


OK

Open in harness between terminals E2 or THW, repair or replace harness.

NG

Confirm good connection at ECM. If OK, check and replace ECM (See page [IN-41](#)).

4 Check for short in harness and ECM.

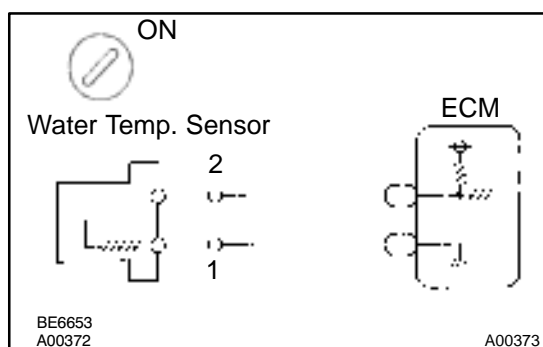

PREPARATION:

- Disconnect the engine coolant temp. sensor connector.
- Turn the ignition switch ON.

CHECK:

Read temperature value on the OBD II scan tool or TOYOTA hand-held tester.

OK:


Temperature value: – 40°C (– 40°F)

OK

Replace engine coolant temp. sensor.

NG

5 Check for short in harness or ECM.

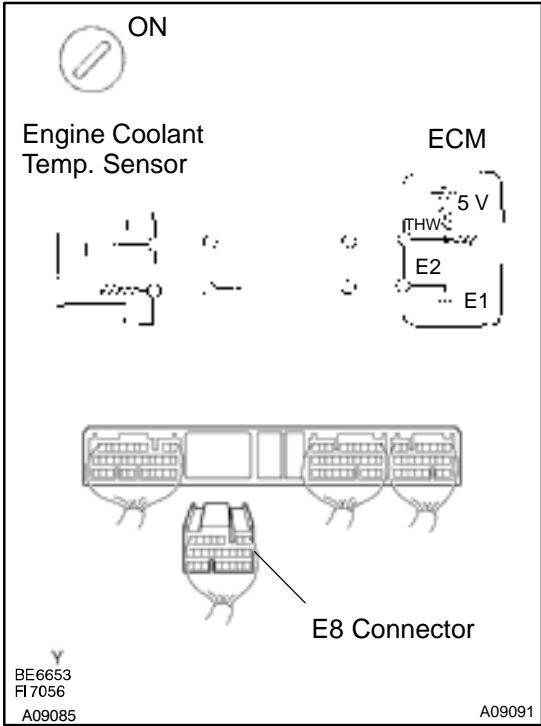

PREPARATION:

- (a) Remove the ECM with connector still connected (See page [SF-62](#)).
 - (b) Disconnect the E8 connector of the ECM.
- HINT:
Engine coolant temp. sensor connector is disconnected.
- (c) Turn the ignition switch ON.

CHECK:

Read temperature value on the OBD II scan tool or TOYOTA hand-held tester.

OK:

Temperature value: -40°C (-40°F)

OK

Repair or replace harness or connector.

NG

Check and replace ECM (See page [IN-41](#)).

DTC	P0116	Engine Coolant Temp. Circuit Range/ Performance Problem
------------	--------------	--

CIRCUIT DESCRIPTION

Refer to DTC P0115 on page [DI-32](#).

DTC No.	DTC Detecting Condition	Trouble Area
P0116	When the engine starts, the water temp. is -7°C (20°F) or less. And, 20 min. or more after the engine starts, the engine temp. sensor value is 5°C (41°F) or less (2 trip detection logic)	<ul style="list-style-type: none"> • Engine coolant temp. sensor • Cooling system
	When the engine starts, the water temp. is between -7°C (20°F) and 10°C (50°F). And, 5 min. or more after the engine starts, the engine coolant temp. sensor value is 5°C (41°F) or less. (2 trip detection logic)	
	When the fluctuations in the engine coolant temperature are within 3°C (37°F) before and after the following conditions are met: 1. IDL OFF time ≥ 250 sec. 2. Vehicle speed change of 30 km/h (19 mph) or more occurs 10 times or more. 3. 35°C (95°F) \leq Engine coolant temperature when the ignition switch is turned ON $< 60^{\circ}\text{C}$ (140°F) 4. Intake air temperature after starting the engine $\geq -6.7^{\circ}\text{C}$ (20°F)	

INSPECTION PROCEDURE

HINT:

- If DTC P0115 and P0116 are output simultaneously, engine coolant temp. sensor circuit may be open. Perform troubleshooting of DTC P0115 first.
- Read freeze frame data using TOYOTA hand-held tester or OBD II scan tool. Because freeze frame records the engine conditions when the malfunction is detected, when troubleshooting it is useful for determining whether the vehicle was running or stopped, the engine warmed up or not, the air-fuel ratio lean or rich, etc. at the time of the malfunction.

1	Are there any other codes (besides DTC P0116) being output?
----------	--

YES

Go to relevant DTC chart.

NO

2	Check thermostat (See page CO-9).
---	--

NG	Replace thermostat.
----	---------------------

OK

Replace engine coolant temp. sensor.

DTC	P0120	Throttle/Pedal Position Sensor/Switch "A" Circuit Malfunction
------------	--------------	--


CIRCUIT DESCRIPTION

Throttle position sensor is mounted on the throttle body and it have the 2 sensors to detect the throttle opening angle and the malfunction of the throttle position sensor's own.

The voltage applied to the terminals VTA and VTA2 of the ECM changes between 0 V and 5 V in proportion to the opening angle of the throttle valve.

The ECM judges the current opening angle of the throttle valve from these signals input from terminals VTA and VTA2, and the ECM controls the throttle motor to make the throttle valve angle properly in response to driving condition.

If this DTC is stored, the ECM shuts down the power for the throttle motor, and the throttle valve is fully closed by the return spring.

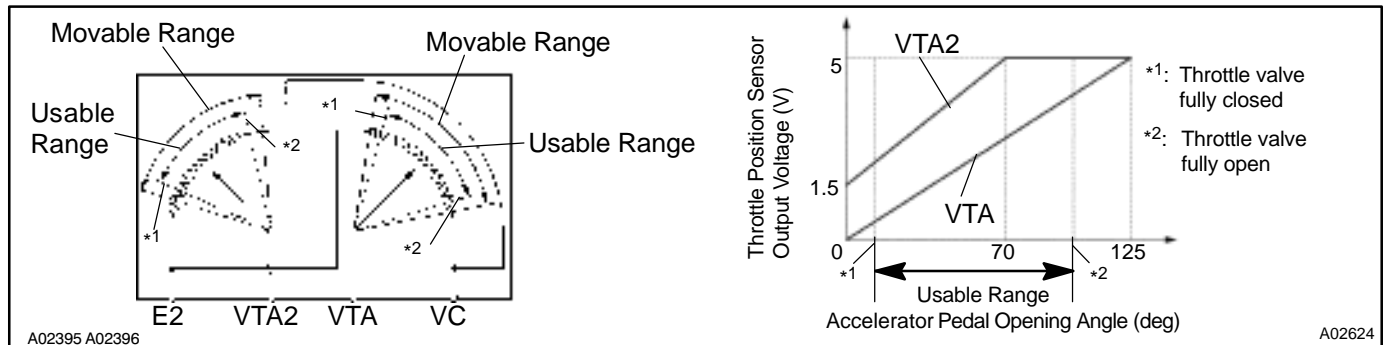


DTC No.	DTC Detecting Condition	Trouble Area
P0120	Condition (a), (b), (c), (d) or (e) continues for 2.0 seconds: (a) $VTA \leq 0.2 \text{ V}$ (b) $VTA2 \leq 0.625 \text{ V}$ (c) $VTA \geq 4.8 \text{ V}$ (d) When $VTA \geq 0.2 \text{ V}$ and $\leq 2.0 \text{ V}$, and $VTA2 \geq 4.97 \text{ V}$ (e) $VTA - VTA2 \leq 0.02 \text{ V}$	<ul style="list-style-type: none"> • Open or short in throttle position sensor circuit • Throttle position sensor • ECM
	Condition (a) continues for 0.4 seconds: (a) $VTA \leq 0.2 \text{ V}$ and $VTA2 \leq 0.5 \text{ V}$	

HINT:

After confirming DTC P0120, use the OBD II scan tool or TOYOTA hand-held tester to confirm the accelerator pedal opening position percentage.

Accelerator pedal opening position expressed as percentage and voltage				Trouble area
Accelerator pedal released		Accelerator pedal depressed		
THROTTLE POS	THROTTLE POS #2	THROTTLE POS	THROTTLE POS #2	
0 %	0 V	0 %	0 V	VC circuit open
0 %	2.0 – 2.9 V	0 %	4.6 – 5.1 V	VTA circuit open or ground short
8 – 20 %	0 V	64 – 96 %	0 V	VTA2 circuit open or ground short
100 %	5 V	100 %	5 V	E2 circuit open

WIRING DIAGRAM

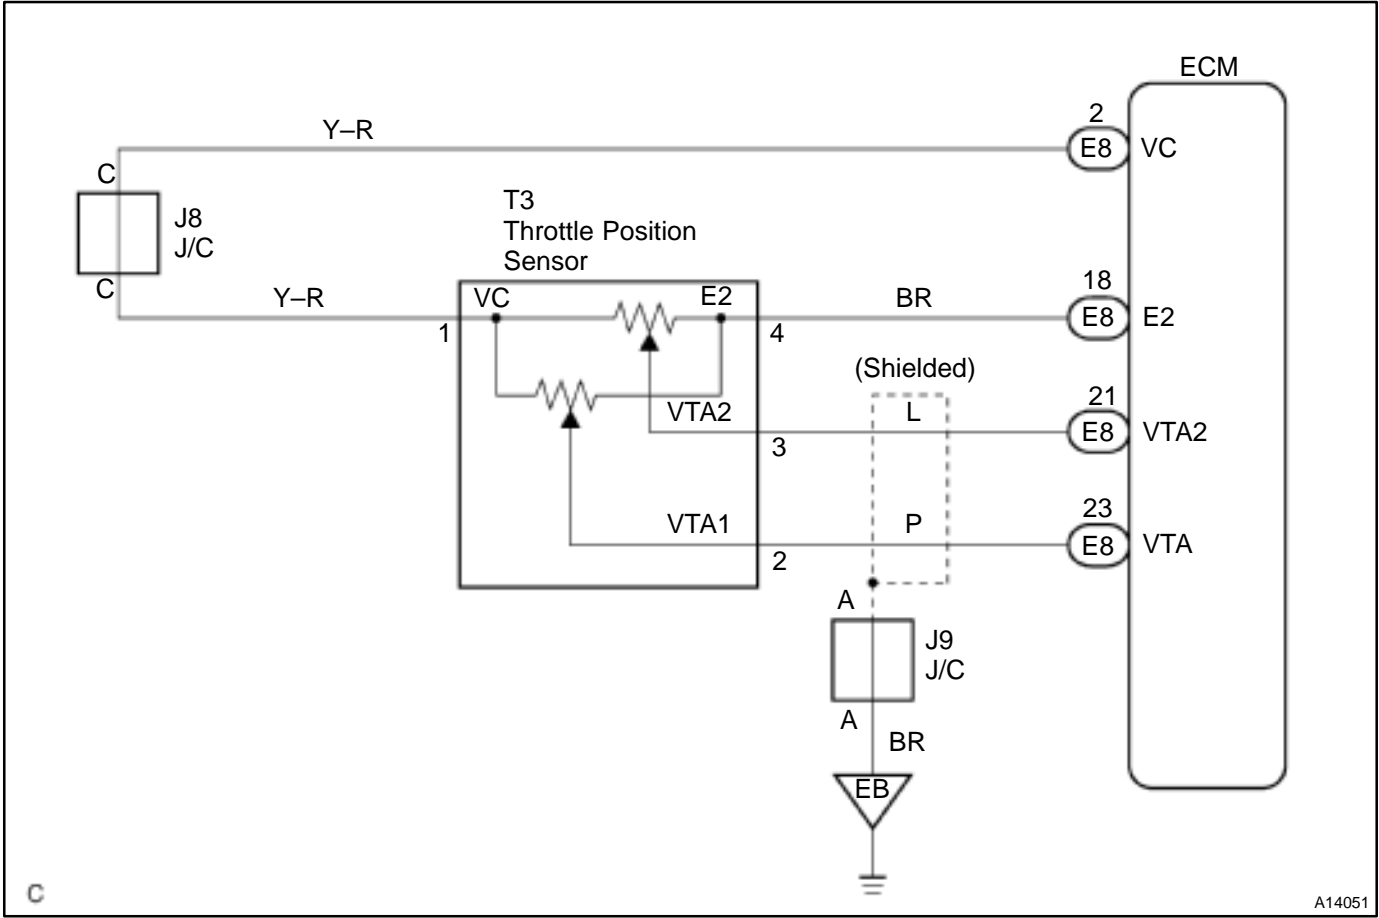


INSPECTION PROCEDURE

HINT:

- If DTCs P0110, P0115, P0120, P0450 and P1120 are output simultaneously, E2 (sensor ground) may be open.
- Read freeze frame data using TOYOTA hand-held tester or OBD II scan tool. Because freeze frame records the engine conditions when the malfunction is detected. When troubleshooting, it is useful for determining whether the vehicle was running or stopped, the engine was warmed up or not, the air-fuel ratio was lean or rich, etc. at the time of the malfunction.

LEXUS hand-held tester:

1	Connect LEXUS hand-held tester, and read throttle valve opening percentage.
---	---

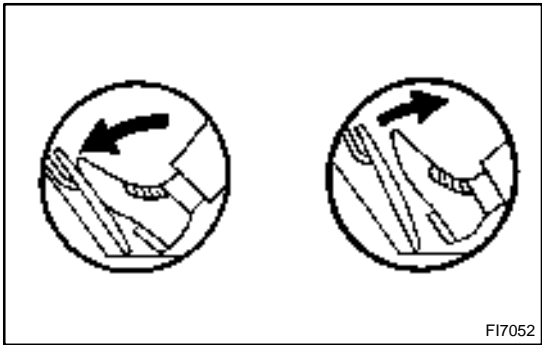

PREPARATION:


- Connect the TOYOTA hand-held tester to the DLC3.
- Turn the ignition switch ON and push the TOYOTA hand-held tester main switch ON.

CHECK:

Read the throttle valve opening percentage for VTA circuit and read the voltage for VTA2 circuit.

OK:


Accelerator Pedal	Throttle valve opening position expressed as percentage (VTA)	Voltage (VTA2)
Released	64 – 96 %	4.6 – 5.1 V
Depressed	8 – 20 %	2.0 – 2.9 V

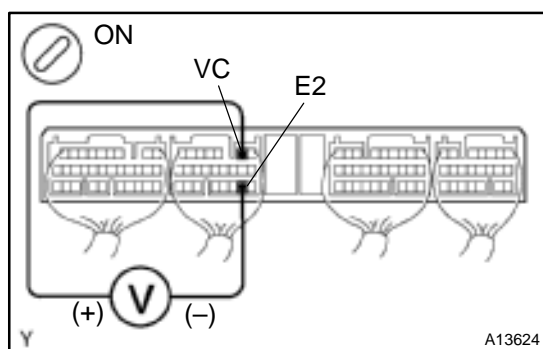OK**Check and replace ECM (See page IN-41).****NG****2****Check voltage between terminals VC and E2 of ECM connector.****PREPARATION:**

- (a) Remove the ECM with connector still connected (See page SF-62).
- (b) Turn the ignition switch ON.

CHECK:

Measure the voltage between terminals VC and E2 of the ECM connector.

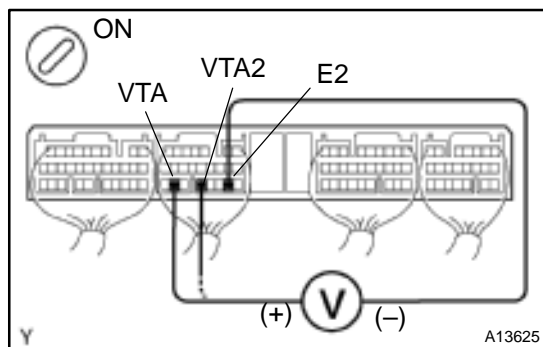OK:**Voltage: 4.5 – 5.5 V****NG****Check and replace ECM (See page IN-41).****OK****3****Check voltage between terminals VTA and E2, and VTA2 and E2 of ECM connector.****PREPARATION:**

- (a) Remove the ECM with connector still connected (See page SF-62).
- (b) Turn the ignition switch ON.

CHECK:

Measure the voltage between terminals VTA and E2, and VTA2 and E2 of the ECM connector.

OK:

Accelerator pedal	Voltage	
	VTA – E2	VTA2 – E2
Released	0.4 – 1.0 V	2.0 – 2.9 V
Depressed	3.2 – 4.8 V	4.6 – 5.1 V

OK

Check and replace ECM (See page [IN-41](#)).

NG

4

Check throttle position sensor (See page [SF-24](#)).

NG

Replace throttle position sensor (See page [SF-29](#)).


OK

Check for open and short in harness and connector in VC, VTA, VTA2 and E2 circuits between ECM and throttle position sensor (See page [IN-41](#)).

OBD II scan tool (excluding TOYOTA hand-held tester):

1

Check voltage between terminals VC and E2 of ECM connector.

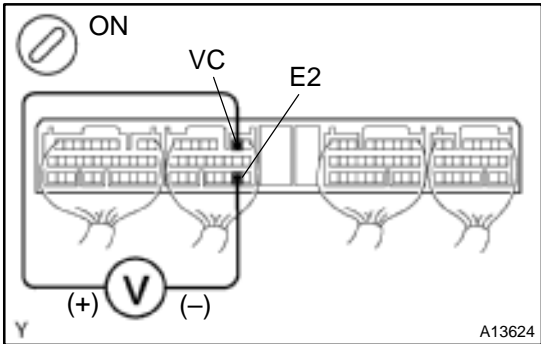

PREPARATION:

- (a) Remove the ECM with connector still connected (See page [SF-62](#)).
- (b) Turn the ignition switch ON.

CHECK:

Measure the voltage between terminals VC and E2 of the ECM connector.

OK:


Voltage: 4.5 – 5.5 V

NG

Check and replace ECM (See page [IN-41](#)).

OK

2 Check voltage between terminals VTA and E2, and VTA2 and E2 of ECM connector.

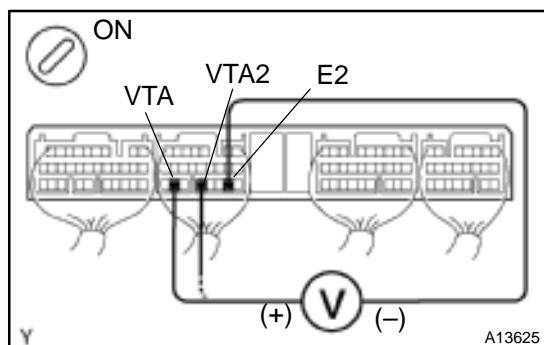

PREPARATION:

- Remove the ECM with connector still connected (See page [SF-62](#)).
- Turn the ignition switch ON.

CHECK:

Measure the voltage between terminals VTA and E2, and VTA2 and E2 of the ECM connector.

OK:

Accelerator pedal	Voltage	
	VTA – E2	VTA2 – E2
Released	0.4 – 1.0 V	2.0 – 2.9 V
Depressed	3.2 – 4.8 V	4.6 – 5.1 V

OK

Check and replace ECM (See page [IN-41](#)).

NG

3 Check throttle position sensor (See page [SF-24](#)).

NG

Replace throttle position sensor (See page [SF-29](#)).

OK

Check for open and short in harness and connector in VC, VTA, VTA2 and E2 circuits between ECM and throttle position sensor (See page [IN-41](#)).

DTC	P0125	Insufficient Temp. for Closed Loop Fuel Control
------------	--------------	--

CIRCUIT DESCRIPTION

To obtain a high purification rate for the CO, HC and NO_x components of the exhaust gas, a three-way catalytic converter is used, but for the most efficient use of the three-way catalytic converter, the air–fuel ratio must be precisely controlled so that it is always close to the stoichiometric air–fuel ratio.


The oxygen sensor has the characteristic whereby its output voltage changes suddenly in the vicinity of the stoichiometric air–fuel ratio. This is used to detect the oxygen concentration in the exhaust gas and provide feedback to the computer for control of the air–fuel ratio.

When the air–fuel ratio becomes LEAN, the oxygen concentration in the exhaust increases and the oxygen sensor informs the ECM of the LEAN condition (small electromotive force: < 0.45 V).

When the air–fuel ratio is RICHER than the stoichiometric air–fuel ratio the oxygen concentration in the exhaust gas is reduced and the oxygen sensor informs the ECM of the RICH condition (large electromotive force: > 0.45V).

The ECM judges by the electromotive force from the oxygen sensor whether the air–fuel ratio is RICH or LEAN and controls the injection time accordingly. However, if malfunction of the oxygen sensor causes output of abnormal electromotive force, the ECM is unable to perform accurate air–fuel ratio control.

The oxygen sensors include a heater which heats the zirconia element. The heater is controlled by the ECM. When the intake air volume is low (the temp. of the exhaust gas is low) current flows to the heater to heat the sensor for accurate oxygen concentration detection.

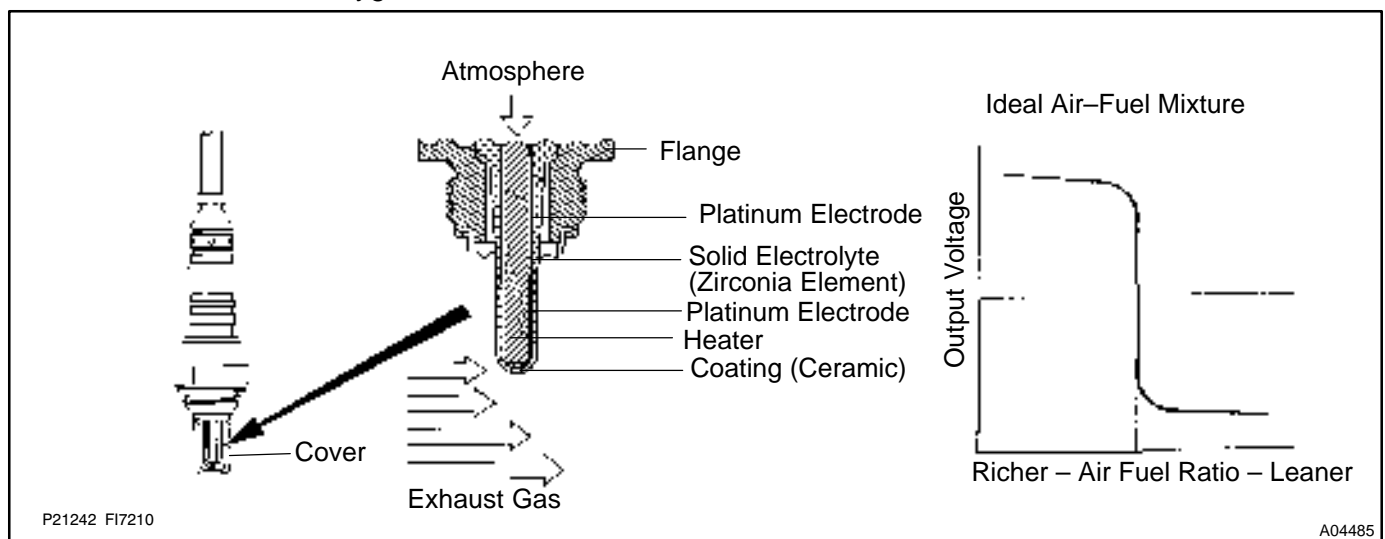


DTC No.	DTC Detecting Condition	Trouble Area
P0125	<p>After the engine is warmed up, oxygen sensor (bank 1 sensor 1) output does not indicate RICH (≥ 0.45 V) even once when conditions (a), (b), and (c) continue for at least 50 sec.</p> <p>(a) Engine speed: 800 rpm or more</p> <p>(b) Vehicle speed: 40 – 100 km/h (25 – 62 mph)</p> <p>(c) 20 sec. or more after starting engine</p>	<ul style="list-style-type: none"> • Fuel system • Air induction system • Injector • Ignition system • Gas leakage on exhaust system • Open or short in heated oxygen sensor (bank 1 sensor 1) circuit • Heated oxygen sensor (bank 1 sensor 1) • ECM

HINT:

After confirming DTC P0125, use the OBD II scan tool or TOYOTA hand-held tester to confirm voltage output of oxygen sensor (bank 1 sensor 1) from "CURRENT DATA".

If voltage output of oxygen sensor (bank 1 sensor 1) is less than 0.1 V, oxygen sensor (bank 1 sensor 1) circuit may be open or short.

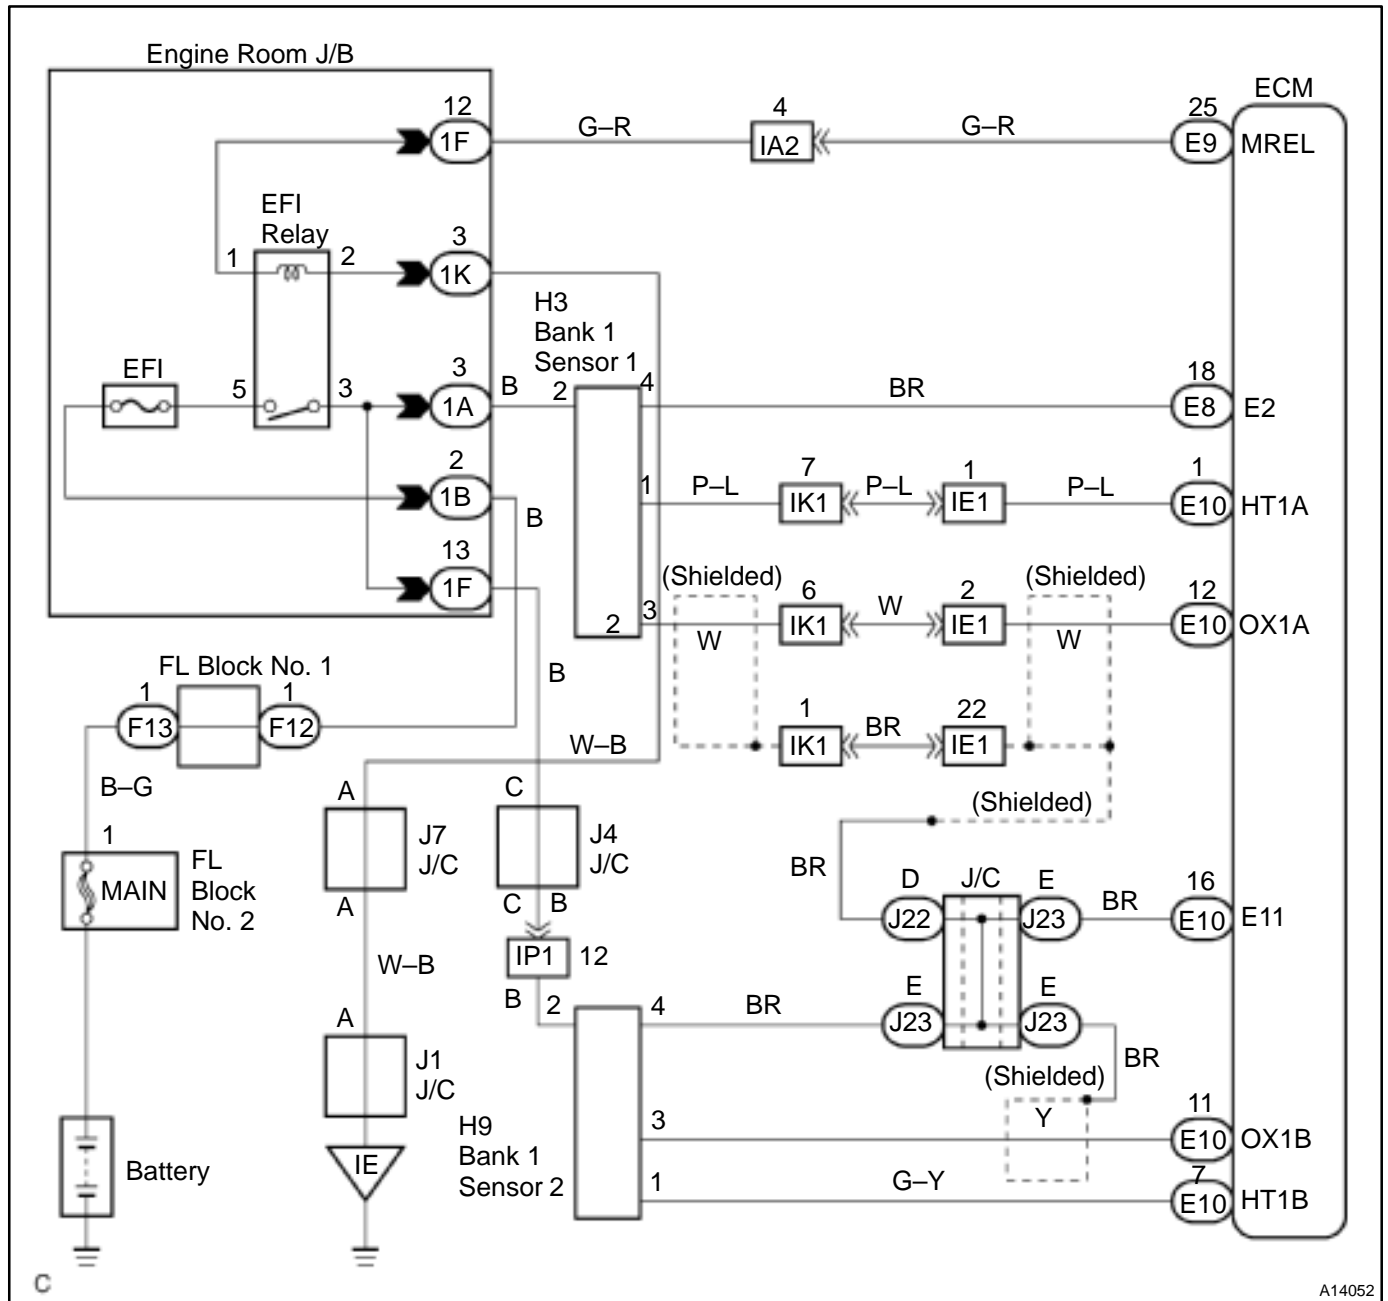WIRING DIAGRAM

INSPECTION PROCEDURE

HINT:

- If the vehicle run out of fuel, the air–fuel ratio is LEAN and DTC P0125 will be recorded . The MIL then comes on.
- Read freeze frame data using TOYOTA hand–held tester or OBD II scan tool. Because freeze frame records the engine conditions when the malfunction is detected, when troubleshooting it is useful for determining whether the vehicle was running or stopped, the engine warmed up or not, the air–fuel ratio lean or rich, etc at the time of the malfunction.
- There is a possibility that P0125 is detected because of abnormal fuel system, so, when P0125 is memorized, check P0171 and P0172 even if P0171 and P0172 are memorized.

1	Are there any other codes (besides DTC P0125) being output ?
----------	---

YES

Go to relevant DTC chart.

NO

2	Connect the OBD II scan tool or TOYOTA hand–held tester and read value for voltage output of oxygen sensor (bank 1 sensor 1).
----------	--

PREPARATION:

- Connect the OBD II scan tool or TOYOTA hand–held tester to the DLC3.
- Warm up engine to normal operating temp (above 75°C).

CHECK:

Read voltage output of the oxygen sensor (bank 1 sensor 1) when engine is suddenly raced.

HINT:

Perform quick racing to 4,000 rpm 3 times using accelerator pedal.

OK:

Both oxygen sensor (bank 1 sensor 1) output a RICH signal (0.45 V or more) at least once.

OK

Go to step 9.

NG

3	Check for open and short in harness and connector between ECM and oxygen sensor (bank 1 sensor 1) (See page IN-41).
----------	--

NG

Repair or replace harness or connector.

OK

4 Check whether misfire is occurred or not by monitoring DTC and data list.

NG

Perform troubleshooting for misfire (See page [DI-65](#)).

OK

5 Check air induction system (See page [SF-1](#)).

NG

Repair or replace induction system.

OK

6 Check fuel pressure (See page [SF-6](#)).

NG

Check and repair fuel pump and fuel pipe line (See page [SF-1](#)).

OK

7 Check injector injection (See page [SF-12](#)).

NG

Replace injector.

OK

8 Check gas leakade on exhaust system.

NG

Repair or replace.

OK

Replace oxygen sensor (bank 1 sensor 1).

9 Perform confirmation driving pattern (See page [DI-50](#)).

Go

10 Is there DTC P0125 being output again?

YES

Check and replace ECM.

NO

11 Did vehicle runs out of fuel in the past?

NO

Check for intermittent problems
(See page [DI-3](#)).

YES

DTC P0125 is caused by running out of fuel.

DTC	P0130	Oxygen Sensor Circuit Malfunction (Bank 1 Sensor 1)
------------	--------------	--

CIRCUIT DESCRIPTION

Refer to DTC P0125 on page [DI-44](#).

DTC No.	DTC Detecting Condition	Trouble Area
P0130	Voltage output of oxygen sensor remains at 0.42 V or more, or 0.48 V or less, during idling after the engine is warmed up (2 trip detection logic)	<ul style="list-style-type: none"> • Open or short in heated oxygen sensor circuit • Heated oxygen sensor • Air induction system • Fuel pressure • Injector • ECM

HINT:


Sensor 1 refers to the sensor closer to the engine body.

The oxygen sensor's output voltage and the short-term fuel trim value can be read using the OBD II scan tool or TOYOTA hand-held tester.

WIRING DIAGRAM

Refer to DTC P0125 on page [DI-44](#).

CONFIRMATION DRIVING PATTERN

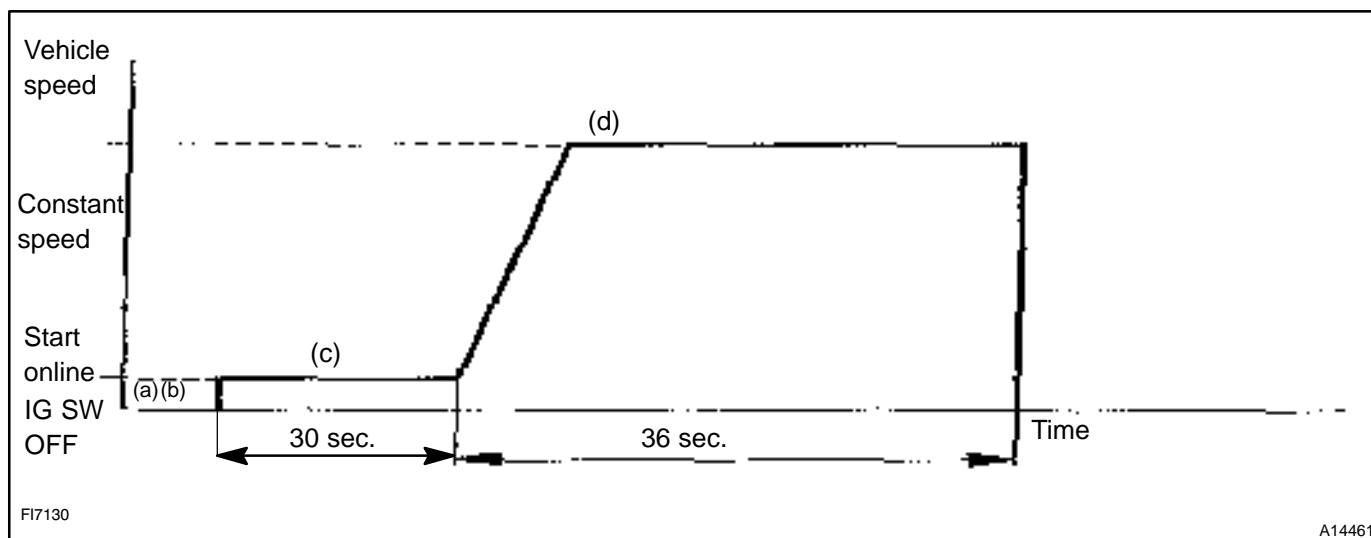

- Connect the TOYOTA hand-held tester to the DLC3.
- Switch the TOYOTA hand-held tester from normal mode to check mode (See page [DI-3](#)).
- Start the engine and pass for 30 sec. or more.
- Drive the vehicle at constant speed for 36 sec. or more.

HINT:

If a malfunction exists, the MIL will light up during step (d).

NOTICE:

If the conditions in this test are not strictly followed, detection of the malfunction will not be possible. If you do not have a TOYOTA hand-held tester, turn the ignition switch OFF after performing steps (c) to (d), then perform steps (c) to (d) again.

INSPECTION PROCEDURE

HINT:
Read freeze frame data using TOYOTA hand-held tester or OBD II scan tool. Because freeze frame records the engine conditions when the malfunction is detected, when troubleshooting it is useful for determining whether the vehicle was running or stopped, the engine warmed up or not, the air-fuel ratio lean or rich, etc. at the time of the malfunction.

1

Are there any other codes (besides DTC P0130) being output?

YES

Go to relevant DTC chart.

NO


2

Check the output voltage of oxygen sensor during idling.

PREPARATION:
Warm up the oxygen sensor the engine at 2,500 rpm for approx. 90 sec.

CHECK:
Use the OBD II scan tool or TOYOTA hand-held tester read the output voltage of the oxygen sensor during idling.

OK:
Oxygen sensor output voltage:
Alternates repeatedly between less than 0.42 V and more than 0.48 V (See the Following table).

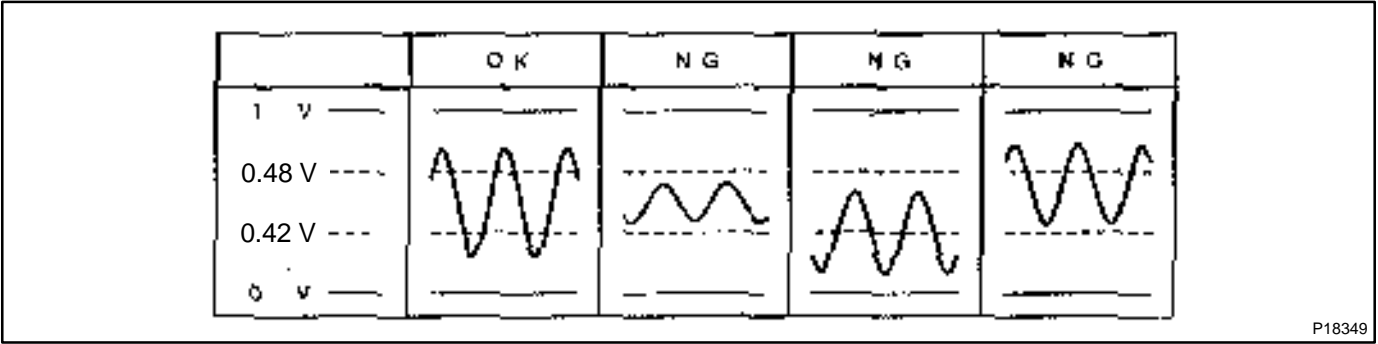

OK

Go to step 7.

NG

3 Check for open and short in harness and connector between ECM and oxygen sensor (bank 1 sensor 1) (See page [IN-30](#)).

NG

Repair or replace harness or connector.

OK

4 Check air induction system (See page [SF-1](#)).

NG

Repair or replace induction system.

OK

5 Check fuel pressure (See page [SF-6](#)).

NG

Check and repair fuel pump, fuel pipe line and filter (See page [SF-1](#)).

OK

6 Check injector injection (See page [SF-12](#)).

NG

Replace injector.

OK

Replace oxygen sensor (bank 1 sensor 1).

7 Perform confirmation driving pattern (See page [DI-50](#)).

Go

8	Are there DTC P0130 being output again?
---	---

YES

Check for intermittent problems (See page [DI-3](#)).

NO

Check and replace ECM.

DTC	P0133	Oxygen Sensor Circuit Slow Response (Bank 1 Sensor 1)
------------	--------------	--

CIRCUIT DESCRIPTION

Refer to DTC P0125 on page [DI-44](#).

DTC No.	DTC Detecting Condition	Trouble Area
P0133	Response time for the oxygen sensor's voltage output to change from rich to lean, or from lean to rich, is 0.4 sec. or more during constant vehicle speed after the engine is warmed up (2 trip detection logic)	<ul style="list-style-type: none"> • Open or short in heated oxygen sensor circuit • Heated oxygen sensor • Air induction system • Fuel pressure • Injector • ECM

HINT:

Sensor 1 refers to the sensor closer to the engine body.

INSPECTION PROCEDURE

HINT:

Read freeze frame data using TOYOTA hand-held tester or OBD II scantool. Because freeze frame records the engine conditions when the malfunction is detected, when troubleshooting it is useful for determining whether the vehicle was running or stopped, the engine warmed up or not, the air-fuel ratio lean or rich, etc. at the time of the malfunction.

1	Are there any other codes (besides DTC P0133) being output?
----------	--

YES

Go to relevant DTC chart.

NO

2

Check the output voltage of heated oxygen sensor during idling.

PREPARATION:

Warm up the heated oxygen sensor the engine at 2,500 rpm for approx. 90 sec.


CHECK:

Use the OBD II scan tool or TOYOTA hand-held tester read the output voltage of the heated oxygen sensor during idling.

OK:

Oxygen sensor output voltage:

Alternates repeatedly between less than 0.42 V and more than 0.48 V (See the Following table).

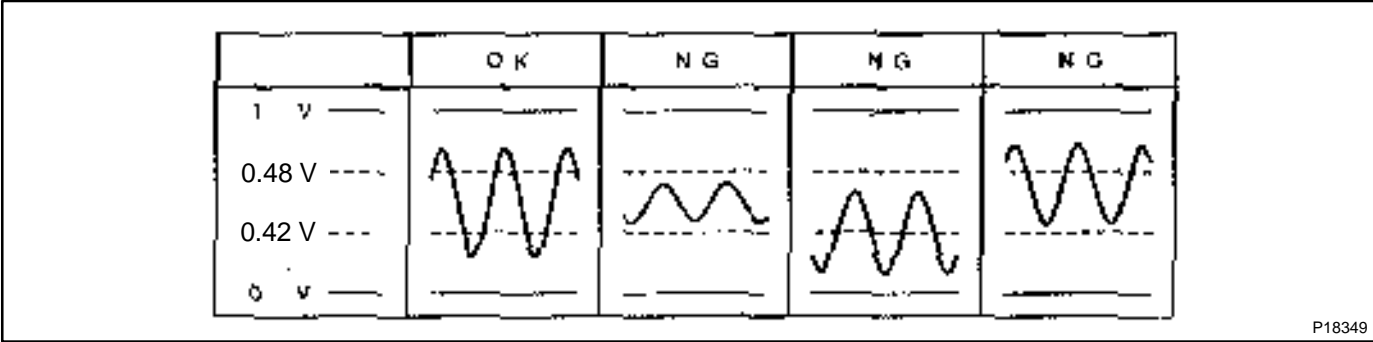

OK

Go to step 7.

NG

3

Check for open and short in harness and connector between ECM and heated oxygen sensor (bank 1 sensor 1) (See page [IN-30](#)).

NG

Repair or replace harness or connector.

OK

4

Check air induction system (See page [SF-1](#)).

NG

Repair or replace induction system.

OK

5	Check fuel pressure (See page SF-6).
---	---

NG

Check and repair fuel pump and fuel pipe line
(See page [SF-1](#)).

OK

6	Check injector injection (See page SF-12).
---	---

NG

Replace injector.

OK

Replace oxygen sensor (bank 1 sensor 1).

7	Perform confirmation driving pattern (See page DI-50).
---	---

Go

8	Are there DTC P0133 being output again?
---	---

YES

Check for intermittent problems
(See page [DI-3](#)).

NO

Check and replace ECM.

DTC	P0135	Heated Oxygen Sensor Heater Circuit Malfunction (Bank1 Sensor1)
------------	--------------	--

DTC	P0141	Heated Oxygen Sensor Heated Circuit Malfunction (Bank1 Sensor2)
------------	--------------	--

CIRCUIT DESCRIPTION

Refer to DTC P0125 on page [DI-44](#).

DTC No.	DTC Detecting Condition	Trouble Area
P0135	When the heater operates, heater current exceeds 2 A (2 trip detection logic)	<ul style="list-style-type: none"> • Open or short in heater circuit of heated oxygen sensor • Heated oxygen sensor heater • ECM
P0141	Heater current of 0.2 A or less when the heater operates (2 trip detection logic)	

HINT:

- Bank 1 refers to the bank that includes cylinder No.1.
- Sensor 1 refers to the sensor closer to the engine body.
- Sensor 2 refers to the sensor farther away from the engine body.


WIRING DIAGRAM

Refer to DTC P0125 on page [DI-44](#).

INSPECTION PROCEDURE

HINT:

Read freeze frame data using TOYOTA hand-held tester or OBD II scan tool. Because freeze frame records the engine conditions when the malfunction is detected, when troubleshooting it is useful for determining whether the vehicle was running or stopped, the engine warmed up or not, the air-fuel ratio lean or rich, etc. at the time of the malfunction.

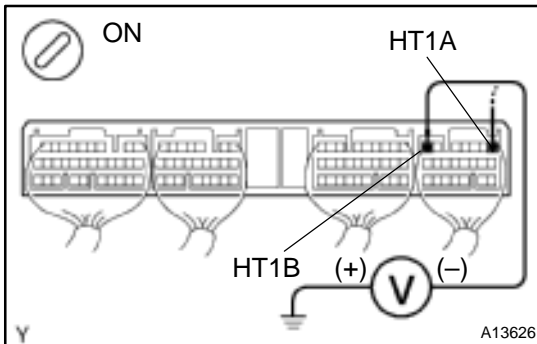1 Check voltage between terminals HT1A, HT1B of ECM connectors and body ground.**PREPARATION:**

- (a) Remove the ECM with connector still connected (See page [SF-62](#)).
- (b) Turn the ignition switch ON.

CHECK:

Measure voltage between terminals HT1A, HT1B of ECM connectors and body ground.

HINT:

- Connect terminal HT1A to bank 1 sensor 1.
- Connect terminal HT1B to bank 1 sensor 2.

OK:

Voltage: 9 – 14 V

OK**Check and replace ECM (See page [IN-41](#)).****NG****2 Check resistance of heated oxygen sensor heater (See page [SF-58](#)).****NG****Replace heated oxygen sensor.****OK**

Check and repair harness or connector between EFI relay (Marking: EFI), heated oxygen sensor and ECM (See page [IN-41](#)).

DTC	P0136	Oxygen Sensor Circuit Malfunction (Bank 1 Sensor 2)
-----	-------	--

CIRCUIT DESCRIPTION

Refer to DTC P0125 on page [DI-44](#).

DTC No.	DTC Detecting Condition	Trouble Area
P0136	Voltage output of the heated oxygen sensor remains at 0.45 V or more, or 0.55 V or less when the vehicle is driven at 40 km/h (25 mph) or more after the engine is warmed up. (2 trip detection logic).	<ul style="list-style-type: none">• Open or short in heated oxygen sensor circuit• Heated oxygen sensor


HINT:

Sensor 2 refers to the sensor farther away from the engine body.

WIRING DIAGRAM

Refer to DTC P0125 on page [DI-44](#).

CONFIRMATION DRIVING PATTERN

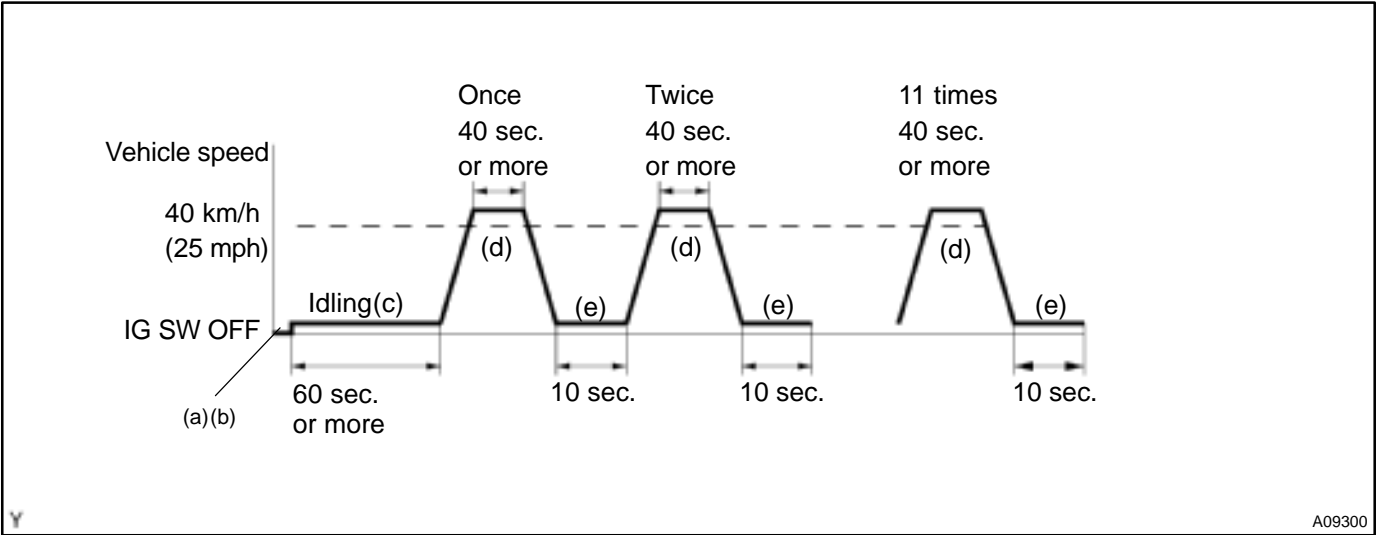

- (a) Connect the hand-held tester to the DLC3.
- (b) Switch the hand-held tester from the Normal Mode to the Check (Test) Mode (See page [DI-3](#)).
- (c) Start the engine and let the engine idle for 60 seconds or more.
- (d) Drive the vehicle at 40 km/h (25 mph) or more for 40 seconds or more.
- (e) Let the engine idle for 10 seconds or more.
- (f) Preform steps (d) to (e) 11 times.

HINT:

- During performing the steps (d) to (e) 11 times, drive the vehicle at over 65 km and make the fuel cut happen for over 3 sec.
- If a malfunction exists, the MIL will be indicated on the multi information display during step (f).

NOTICE:

If the conditions in this test are not strictly followed, detection of the malfunction will not be possible. If you do not have a hand-held tester, turn the ignition switch OFF after performing steps (c) to (f), then perform steps (c) to (f) again.

INSPECTION PROCEDURE

HINT:

Read freeze frame data using TOYOTA hand-held tester or OBD II scan tool. Because freeze frame records the engine conditions when the malfunction is detected, when troubleshooting it is useful for determining whether the vehicle was running or stopped, the engine warmed up or not, the air-fuel ratio lean or rich, etc. at the time of the malfunction.

1	Are there any other codes (besides DTC P0136) being output?
----------	--

YES**Go to relevant DTC chart.****NO**

2	Check for open and short in harness and connector between ECM and oxygen sensor (See page IN-41).
----------	--

NG**Repair or replace harness or connector.****OK**

3	Check output voltage of oxygen sensor.
----------	---

PREPARATION:

- (a) Connect the OBD II scan tool or TOYOTA hand-held tester to the DLC3.
- (b) Warm up the engine to normal operating temp.

CHECK:

Read voltage output of oxygen sensor when engine suddenly raced.

HINT:

Perform a quick racing of 2,000 rpm or more 3 times by using the accelerator pedal.

OK:

Oxygen sensor output voltage: Alternates from 0.40 V or less to 0.50 V or more.

OK**Check that each connector is properly connected.****NG****Replace oxygen sensor.**

DTC	P0171	System too Lean (Fuel Trim)
------------	--------------	------------------------------------

DTC	P0172	System too Rich (Fuel Trim)
------------	--------------	------------------------------------

CIRCUIT DESCRIPTION

Fuel trim refers to the feedback compensation value compared against the basic injection time. Fuel trim includes short-term fuel trim and long-term fuel trim.

Short-term fuel trim is the short-term fuel compensation used to maintain the air-fuel ratio at its ideal theoretical value. The signal from the oxygen sensor indicates whether the air-fuel ratio is RICH or LEAN compared to the ideal theoretical value, triggering a reduction in fuel volume if the air-fuel ratio is rich, and an increase in fuel volume if it is lean.

Long-term fuel trim is overall fuel compensation carried out long-term to compensate for continual deviation of the short-term fuel trim from the central value due to individual engine differences, wear over time and changes in the usage environment.

If both the short-term fuel trim and long-term fuel trim are LEAN or RICH beyond a certain value, it is detected as a malfunction and the MIL lights up.

DTC No.	DTC Detecting Condition	Trouble Area
P0171	When the air-fuel ratio feedback is stable after engine warming up, the fuel trim is considerably in error on the RICH side (2 trip detection logic)	<ul style="list-style-type: none"> • Air induction system • Injector blockage • Mass air flow meter • Engine coolant temp. sensor • Fuel pressure • Gas leakage on exhaust system • Open or short in heated oxygen sensor (bank 1 sensor 1) circuit • Heated oxygen sensor (bank 1 sensor 1)
P0172	When air fuel ratio feedback is stable after warming up engine, the fuel trim is considerably in error on LEAN side (2 trip detection logic)	<ul style="list-style-type: none"> • Injector leak, blockage • Mass air flow meter • Engine coolant temp. sensor • Ignition system • Fuel pressure • Gas leakage on exhaust system • Open or short in heated oxygen sensor (bank 1, 2 sensor 1) circuit • Heated oxygen sensor (bank 1, 2 sensor 1) • ECM

HINT:

- When DTC P0171 is recorded, the actual air-fuel ratio is on the LEAN side. When DTC P0172 is recorded, the actual air-fuel ratio is on the RICH side.
- If the vehicle runs out of fuel, the air-fuel ratio is LEAN and DTC P0171 is recorded. The MIL then comes on.
- If the total of the short-term fuel trim value and long-term fuel trim value is within $\pm 38\%$, the system is functioning normally.
- The oxygen sensor output voltage and the short-term fuel trim value can be read using the OBD II scan tool or TOYOTA hand-held tester.

INSPECTION PROCEDURE

HINT:

Read freeze frame data using TOYOTA hand-held tester or OBD II scan tool. Because freeze frame records the engine conditions when the malfunction is detected, when troubleshooting it is useful for determining whether the vehicle was running or stopped, the engine warmed up or not, the air-fuel ratio lean or rich, etc. at the time of the malfunction.

1 Check air induction system (See page [SF-1](#)).

NG

Repair or replace.

OK

2 Check injector injection (See page [SF-12](#)).

NG

Replace injector.

OK

**3 Check mass air flow meter and engine coolant temp. sensor
(See page [SF-22](#) and [SF-49](#)).**

NG

Repair or replace.

OK

4 Check for spark and ignition (See page [IG-1](#)).

NG

Repair or replace.

OK

5

Check fuel pressure (See page [SF-6](#)).

NG

Check and repair fuel pump and fuel pipe line.

OK

6

Check gas leakade on exhaust system.

NG

Repair or replace.

OK

7

Check the output voltage of heated oxygen sensor during idling.

PREPARATION:


Warm up the oxygen sensor the engine at 2,500 rpm for approx. 90 sec.

CHECK:

Use the OBD II scan tool or TOYOTA hand-held tester read the output voltage of the heated oxygen sensor during idling.

OK:

Oxygen sensor output voltage:
Alternates repeatedly between less than 0.4 V and more than 0.55 V (See the following table).

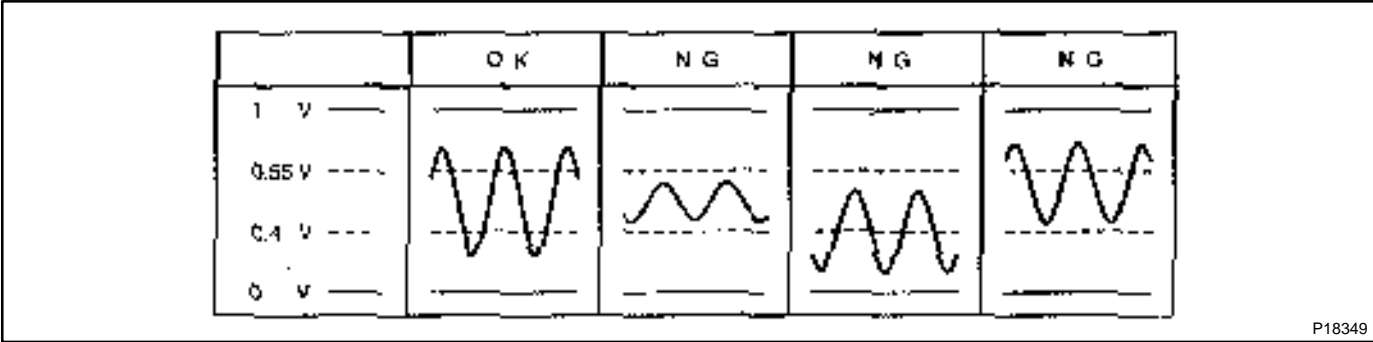

OK

Go to step 9.

NG

8	Check for open and short in harness and connector between ECM and heated oxygen sensor (See page IN-30).
OK	
NG	Repair or replace harness or connector.
Replace heated oxygen sensor.	
9	Perform confirmation driving pattern (See page DI-50).
GO	
10	Is there DTC P0171 being output again?
YES	Check and replace ECM.
NO	
11	Did vehicle runs out of fuel in the past?
NO	Check for intermittent problems.
YES	
DTC P0171 or P0172 is caused by running out of fuel.	

DTC	P0300	Random/Multiple Cylinder Misfire Detected
------------	--------------	--

DTC	P0301	Cylinder 1 Misfire Detected
------------	--------------	------------------------------------

DTC	P0302	Cylinder 2 Misfire Detected
------------	--------------	------------------------------------

DTC	P0303	Cylinder 3 Misfire Detected
------------	--------------	------------------------------------

DTC	P0304	Cylinder 4 Misfire Detected
------------	--------------	------------------------------------

CIRCUIT DESCRIPTION

Misfire: The ECM uses the crankshaft position sensor and camshaft position sensor to monitor changes in the crankshaft rotation for each cylinder.

The ECM counts the number of times the engine speed change rate indicates that misfire has occurred. And when the misfire rate equals or exceeds the count indicating that the engine condition has deteriorated, the MIL lights up.


If the misfire rate is high enough and the driving conditions will cause catalyst overheating, the MIL blinks when misfiring occurs.

DTC No.	DTC Detecting Condition	Trouble Area
P0300 P0301 P0302 P0303 P0304	Misfiring of random cylinders is detected during any particular 200 or 1,000 revolutions For any particular 200 revolutions for the engine, misfiring is detected which can cause catalyst overheating (This causes MIL to blink)	<ul style="list-style-type: none"> • Open or short in engine wire • Connector connection • Vacuum hose connection • Ignition system • Injector • Fuel pressure • Manifold absolute pressure sensor • Engine coolant temp. sensor • Compression pressure • Valve clearance • Valve timing • ECM

HINT:

- When the 2 or more codes for a misfiring cylinder are recorded repeatedly but no random misfire code is recorded, it indicates that the misfires were detected and recorded at different times.
- There is a case where the cylinder other than memorized has an accidental fire (the cylinder which is one ahead of fired cylinder), so. at the time of checking all the checking items and if there is no abnormality, check the cylinder which is different from the recorded cylinder as fired.

WIRING DIAGRAM

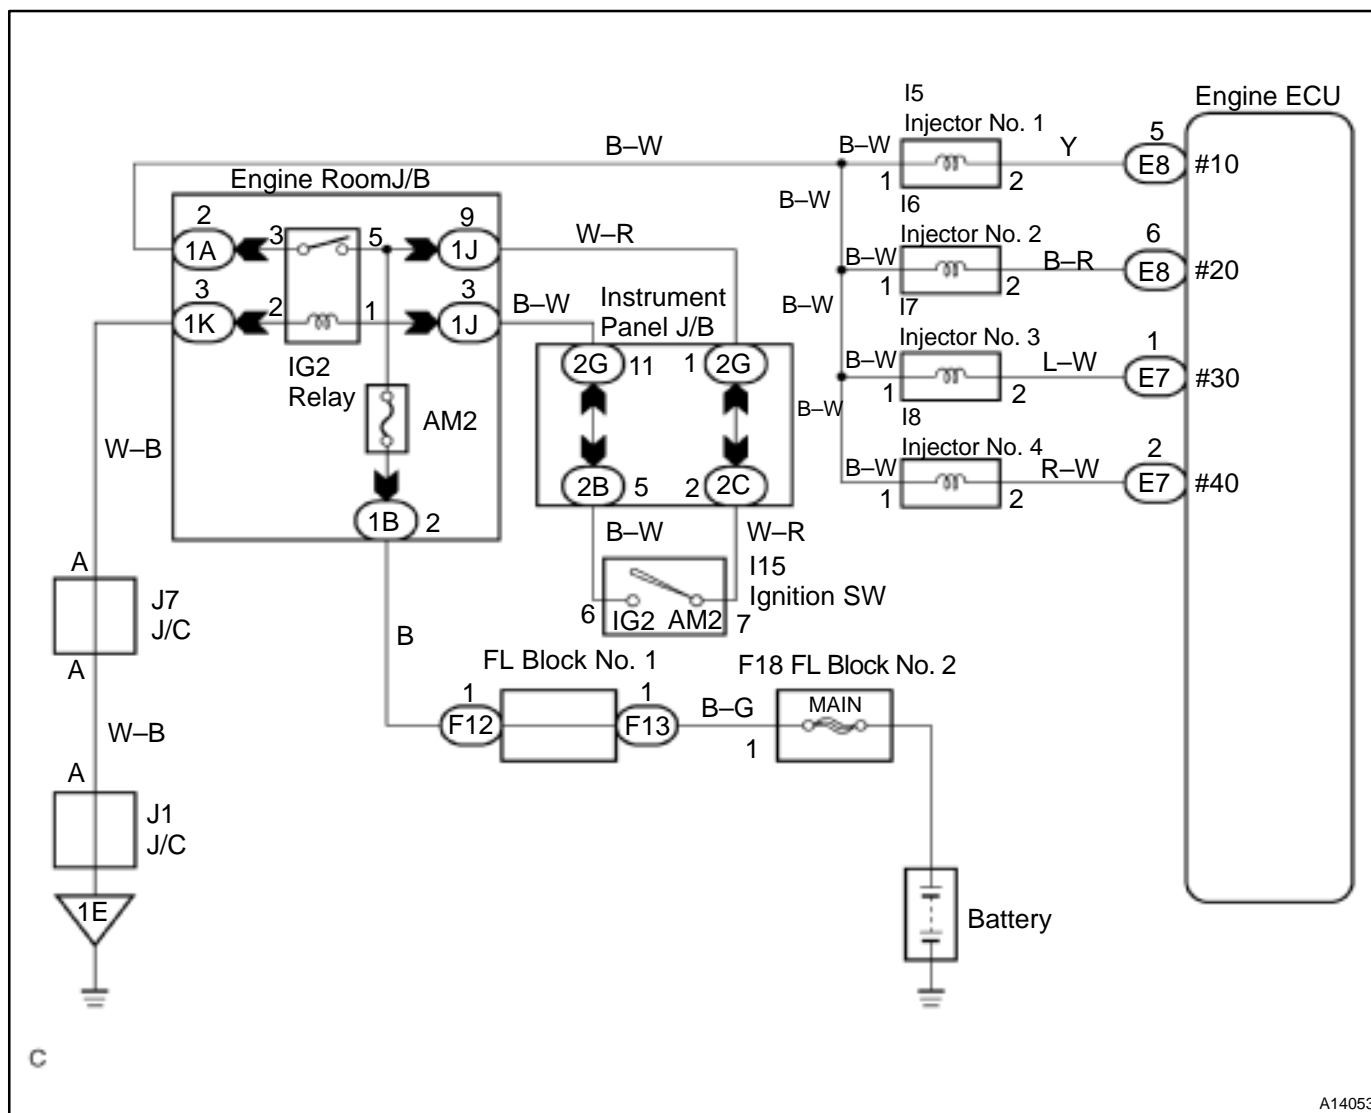

CONFIRMATION DRIVING PATTERN

- Connect the TOYOTA hand-held tester or OBD II scan tool.
- Record DTC and the freeze frame data.
- Use the TOYOTA hand-held tester to set to Check Mode. (See page DI-3)
- Drive the vehicle several times with the engine speed, load and its surrounding range shown with ENGINE SPD, CALC LOAD in the freeze frame data or MISFIRE RPM, MISFIRE LOAD in the data list. If you have no TOYOTA hand-held tester, turn the ignition switch OFF after the symptom is simulated the first time. Then repeat the simulation process again.

HINT:

In order to memorize DTC of misfire, it is necessary to drive around MISFIRE RPM, MISFIRE LOAD in the data list for the following period of time.

Engine Speed	Time
1000 rpm	3 minutes or more
2000 rpm	1 minute 30 seconds or more
3000 rpm	1 minute or more

- Check whether there is misfire or not by monitoring DTC and the freeze frame data. After that, record them.

- (f) Turn ignition switch OFF and wait at least 5 seconds.

INSPECTION PROCEDURE

HINT:

- If is the case that DTC besides misfire is memorized simultaneously, first perform the troubleshooting for them.
- Read freeze frame data using TOYOTA hand-held tester or OBD II scan tool. Because freeze frame data records the engine conditions when the malfunction is detected, when troubleshooting it is useful for determining whether the vehicle was running or stopped, the engine warmed up or not, the air-fuel ratio lean or rich, etc. at the time of the malfunction.
- When the vehicle is brought to the workshop and the misfire is not occurred, misfire can be confirmed by reproducing the condition or freeze frame data. Also, after finishing the repair, confirm that there is no misfire. (See the confirmation driving pattern)
- When either of SHORT FT #1, LONG FT #1, SHORT FT #2 or LONG FT #2 in the freeze frame data is besides the range of $\pm 20\%$, there is a possibility that the air-fuel ratio is inclining either to "rich" (-20% or less) or "lean" ($+20\%$ or more).
- When COOLANT TEMP in the freeze frame data is less than 80°C (176°F), there is a possibility or misfire only during warming up.
- In the case that misfire cannot be reproduced, the reason may be because of the driving with lack or fuel, the use of improper fuel, a stain of ignition plug, and etc.

1	Check wire harness, connector and vacuum hose in engine room.
----------	--

CHECK:


- (a) Check the connection conditions of wire harness and connector.
 (b) Check the disconnection, piping and break of vacuum hose.

NG

Repair or replace, then confirm that there is no misfire. (See the confirmation driving pattern)

OK

2	Check spark plug and spark of misfiring cylinder.
----------	--

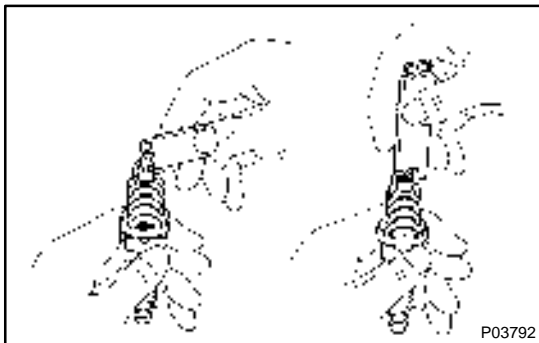

PREPARATION:

Remove the spark plug (See page IG-1).

CHECK:

- (a) Check for carbon deposits on electrode.
 (b) Check electrode gap.

OK:

(a) No large carbon deposit present.

Not wet with gasoline or oil.

(b) Electrode gap: 1.0 – 1.2 mm (0.039 – 0.047 in.)

PREPARATION:

- (a) Install the spark plug to ignition coil and connect the ignition coil connector to ignition coil.

- (b) Disconnect the injector connector.
- (c) Ground spark plug.

CHECK:

Check if spark occurs while engine is being cranked.

NOTICE:

To prevent excess fuel being injected from the injectors during this test, don't crank the engine for more than 5 – 10 seconds at a time.

OK:


Spark jumps across electrode gap.

NG

Replace or check ignition system
(See page IG-1).

OK

3 Check voltage of ECM terminal for injector of failed cylinder.

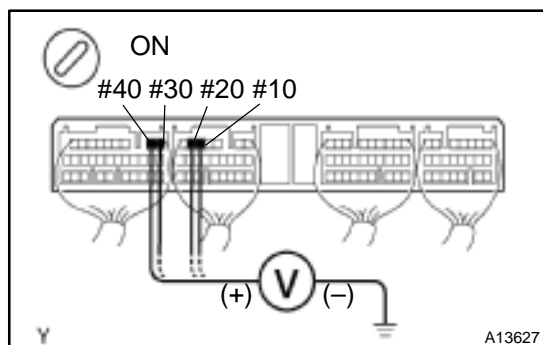**PREPARATION:**

- (a) Remove the ECM with connector still connected (See page SF-62).
- (b) Turn the ignition switch ON.

CHECK:

Measure voltage between applicable terminal of the ECM connector and body ground.

OK:

Voltage: 9 – 14 V


Reference: INSPECTION USING OSCILLOSCOPE

INJECTOR SIGNAL WAVEFORM

With the engine idling, measure between terminals #10 ~ #40 and E01 of the ECM connector.

HINT:

The correct waveforms are shown.

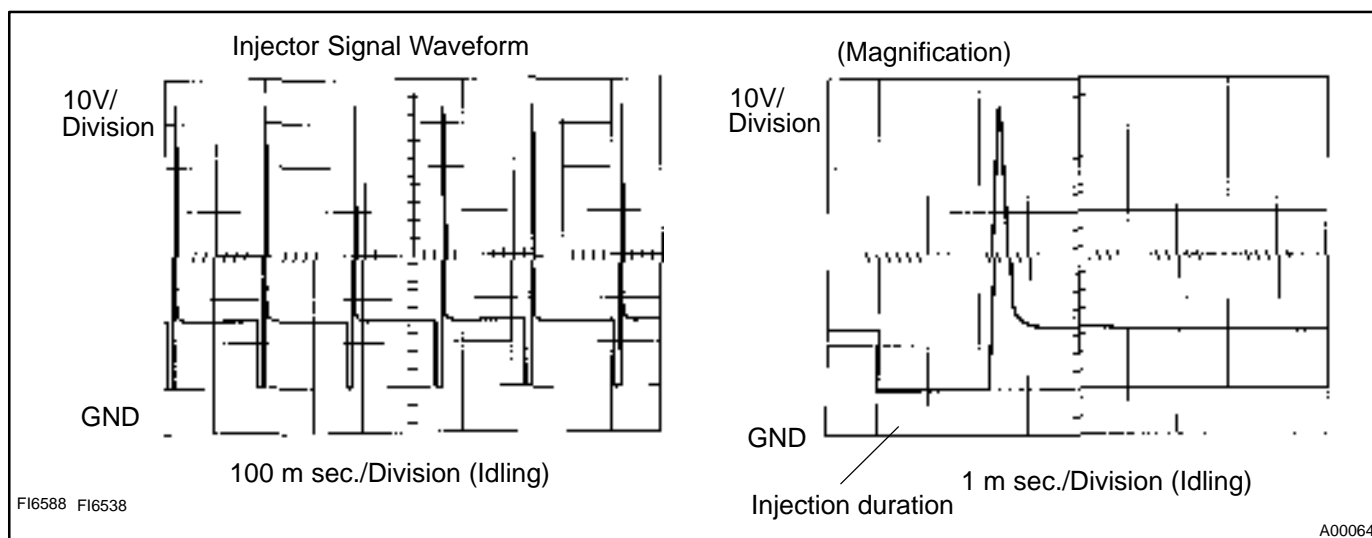

OK

Go to step 5.

NG

4

Check resistance of injector of misfiring cylinder (See page [SF-9](#)).NG

Replace injector.

OK

Check for open and short in harness and connector between injector and ECM (See page [IN-41](#)).

5

Check fuel pressure (See page [SF-6](#)).NGCheck and repair fuel pump and fuel pipe line (See page [SF-1](#)).OK

6

Check injector injection (See page [SF-12](#)).NG

Replace injector.

OK

7

Check mass air flow merer and engine coolant temp. sensor (See page [SF-22](#) and [SF-49](#)).NG

Repair or replace.

A rectangular button with a black border and a black downward-pointing arrow at the bottom. The text "OK" is centered in black.

Check compression pressure, valve clearance and valve timing
(See page [EM-3](#), [EM-5](#), [EM-21](#)).

DTC	P0325	Knock Sensor 1 Circuit Malfunction
-----	-------	------------------------------------

CIRCUIT DESCRIPTION


The knock sensor is fitted to the cylinder block to detect engine knocking. This sensor contains a piezoelectric element which generates a voltage when it becomes deformed, which occurs when the cylinder block vibrates due to knocking. If engine knocking occurs, ignition timing is retarded to suppress it.

DTC No.	DTC Detecting Condition	Trouble Area
P0325	No knock sensor 1 signal to ECM with engine speed, 2,000 rpm or more	<ul style="list-style-type: none">• Open or short in knock sensor 1 circuit• Knock sensor 1 (looseness)• ECM

HINT:

If the ECM detects above diagnosis conditions, it operates the fail safe function in which the corrective retard angle value is set to the maximum value.

WIRING DIAGRAM

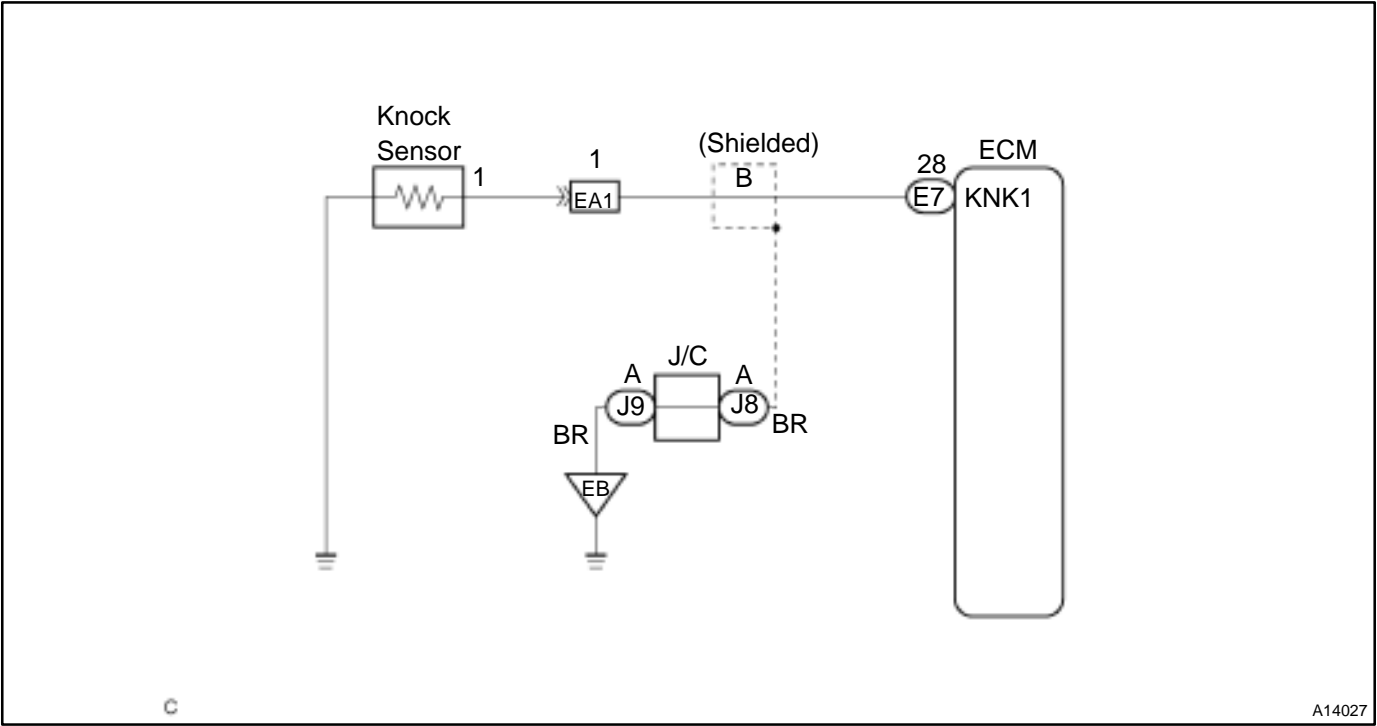


INSPECTION PROCEDURE

HINT:

Read freeze frame data using TOYOTA hand-held tester or OBD II scan tool. Because freeze frame records the engine conditions when the malfunction is detected, when troubleshooting it is useful for determining whether the vehicle was running or stopped, the engine warmed up or not, the air-fuel ratio lean or rich, etc. at the time of the malfunction.

1 Check continuity between terminal KNK1 of ECM connector and body ground.

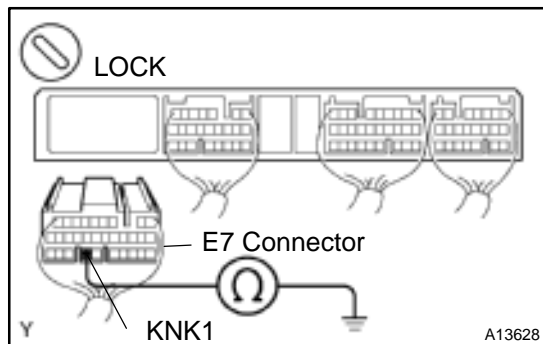

PREPARATION:

- (a) Remove the ECM with connector still connected (See page [SF-62](#)).
- (b) Disconnect the E7 connector of the ECM.

CHECK:

Measure resistance between terminal KNK1 of the ECM connector and body ground.

OK:

Resistance: 1 MΩ or higher

OK

Go to step 3.

NG

2 Check knock sensor (See page [SF-56](#)).

NG

Replace knock sensor.

OK

3 Check for open and short in harness and connector between ECM and knock sensor (See page [IN-41](#)).

NG

Repair or replace harness or connector.

OK

4

Does malfunction disappear when a good knock sensor is installed?

YES

Replace knock sensor.



NO

Check and replace ECM (See page [IN-41](#)).**Reference: INSPECTION USING OSCILLOSCOPE**

- With the engine racing (4,000 rpm) measure between terminal KNK of the ECM connector and body ground.

HINT:

The correct waveforms are as shown.

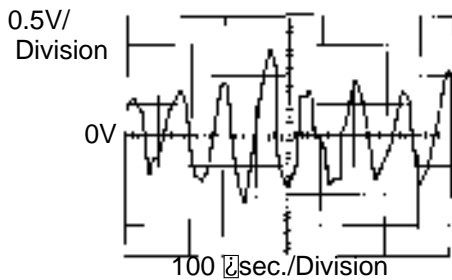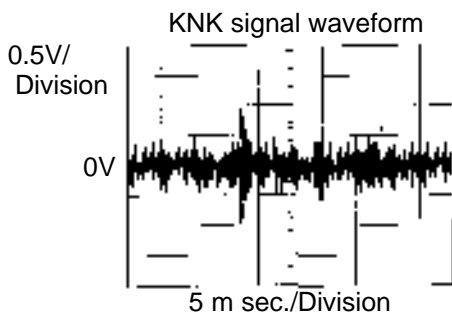FI6510
FI6675

A00406

- Spread the time on the horizontal axis, and confirm that period of the wave is 132 μ sec.
(Normal mode vibration frequency of knock sensor: 8.1 kHz)

HINT:

If normal mode vibration frequency is not 8.1 kHz the sensor is malfunctioning.

DTC	P0335	Crankshaft Position Sensor "A" Circuit Malfunction
------------	--------------	---


CIRCUIT DESCRIPTION

Crankshaft position sensor (NE signal) consist of a signal plate and pick up coil.

The NE signal plate has 34 teeth and is mounted on the crankshaft. The NE signal sensor generates 34 signals of every engine revolution. The ECM detects the standard crankshaft angle based on the G2 signals, and the actual crankshaft angle the engine speed by the NE signals.

DTC No.	DTC Detecting Condition	Trouble Area
P0335	No crankshaft position sensor signal to ECM during cranking. (2 trip detection logic)	<ul style="list-style-type: none"> • Open or short in crankshaft position sensor circuit. • Crankshaft position sensor • Signal plate (Timing belt guide) • Crankshaft timing pulley • ECM
	No crankshaft position sensor signal to ECM with engine speed 600 rpm or more (2 trip detection logic)	

WIRING DIAGRAM

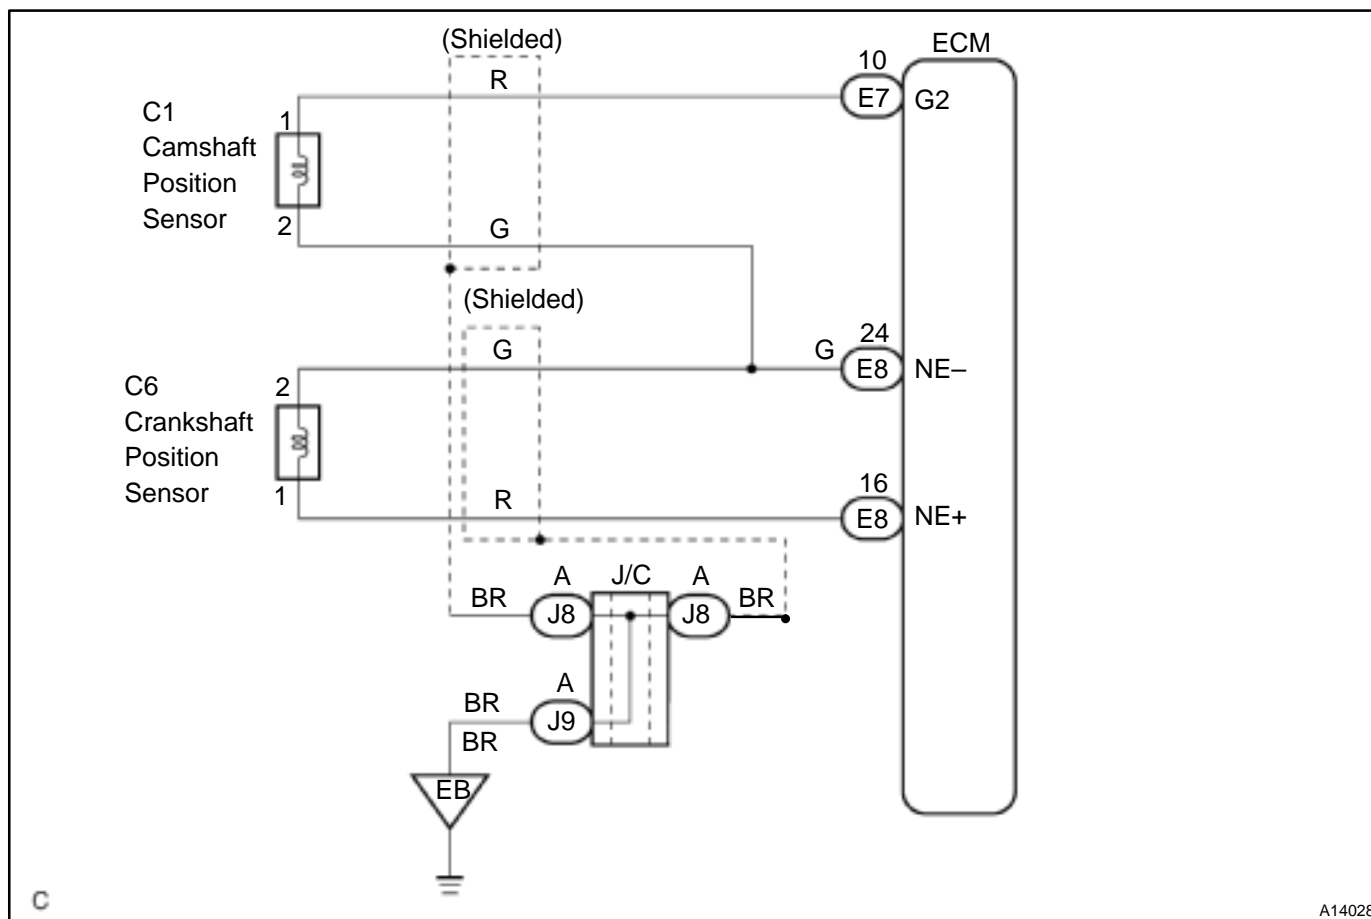


INSPECTION PROCEDURE

HINT:

- Perform troubleshooting of DTC 335 1st. If notrouble is found, troubleshoot the following mechanical system.
- Read freeze frame data using TOYOTA hand-held tester or OBD II scan tool. Because freeze frame records the engine conditions when the malfunction is detected, when troubleshooting it is useful for determining whether the vehicle was running or stopped, the engine warmed up or not, the air-fuel ratio lean or rich, etc. at the time of the malfunction.

1

Check resistance of crankshaft position sensor (See page IG-1).

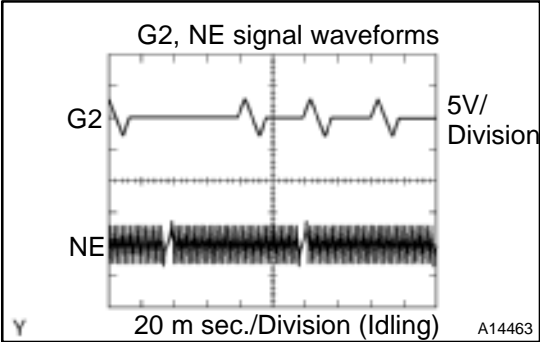

Reference: INSPECTION USING OSCILLOSCOPE
During cranking or idling, check between terminals G2 and NE-, NE and NE- of the ECM
HINT:
The correct waveforms are as shown.

NG

Replace crankshaft position sensor.

OK

2

Check for open and short in harness and connector between ECM and crankshaft position sensor (See page IN-41).

NG

Repair or replace harness or connector.

OK

3

Inspect crankshaft position sensor installation and teeth of crankshaft timing pulley (See page IG-11 and EM-13).

NG

Tighten the sensor.
Replace crankshaft timing pulley.

OK

Check and replace ECM (See page IN-41).

DTC	P0340	Camshaft Position Sensor Circuit Malfunction
------------	--------------	---

CIRCUIT DESCRIPTION

Camshaft position sensor (G22 signal) consist of signal plate and pick up coil.

The G22 signal plate has one tooth on its outer circumference and is mounted on the exhaust camshaft. When the camshafts rotate, the protrusion on the signal plate and the air gap on the pick up coil change, causing fluctuations in the magnetic field and generating an electromotive force in the pick up coil.

The NE signal plate has 34 teeth and is mounted on the crankshaft. The NE signal sensor generates 34 signals for every engine revolution. The ECM detects the standard crankshaft angle based on the G22 signals and the actual crankshaft angle and the engine speed by the NE signals.

DTC No.	DTC Detecting Condition	Trouble Area
P0340	No camshaft position sensor signal to ECM during cranking. (2 trip detection logic)	<ul style="list-style-type: none"> • Open or short in camshaft position sensor circuit • Camshaft position sensor
	No camshaft position sensor signal to ECM with engine speed 600 rpm or more	<ul style="list-style-type: none"> • Camshaft timing pulley • ECM

WIRING DIAGRAM

Refer to DTC P0335 on page [DI-74](#).

INSPECTION PROCEDURE

HINT:

Read freeze frame data using TOYOTA hand-held tester or OBD II scan tool. Because freeze frame records the engine conditions when the malfunction is detected, when troubleshooting it is useful for determining whether the vehicle was running or stopped, the engine warmed up or not, the air-fuel ratio lean or rich, etc. at the time of the malfunction.

1	Check resistance of camshaft position sensor (Signal generator) (See page IG-1).
----------	---

Reference: INSPECTION USING OSCILLOSCOPE

Refer to DTC P0335 on page [DI-74](#) for the INSPECTION USING OSCILLOSCOPE.

NG

Replace camshaft position sensor.

OK

2	Check for open and short in harness and connector between ECM and camshaft position sensor (See page IN-41).
---	---

NG

Repair or replace harness or connector.

OK

3	Inspect sensor installation and tooth of camshaft timing pulley (See page EM-15).
---	--

NG

Tighten the sensor.
Replace camshaft timing pulley.

OK

Check and replace ECM (See page [IN-41](#)).

DTC	P0420	Catalyst System Efficiency Below Threshold
------------	--------------	---


CIRCUIT DESCRIPTION

The ECM compares the waveform of the oxygen sensor located before the catalyst with the waveform of the oxygen sensor located behind the catalyst to determine whether or not catalyst performance has deteriorated.

Air–fuel ratio feedback compensation keeps the waveform of the oxygen sensor before the catalyst repeatedly changing back and forth from rich to lean.


If the catalyst is functioning normally, the waveform of the oxygen sensor behind the catalyst switches back and forth between rich and lean much more slowly than the waveform of the oxygen sensor before the catalyst.

But when both waveforms change at a similar rate, it indicates that catalyst performance has deteriorated.

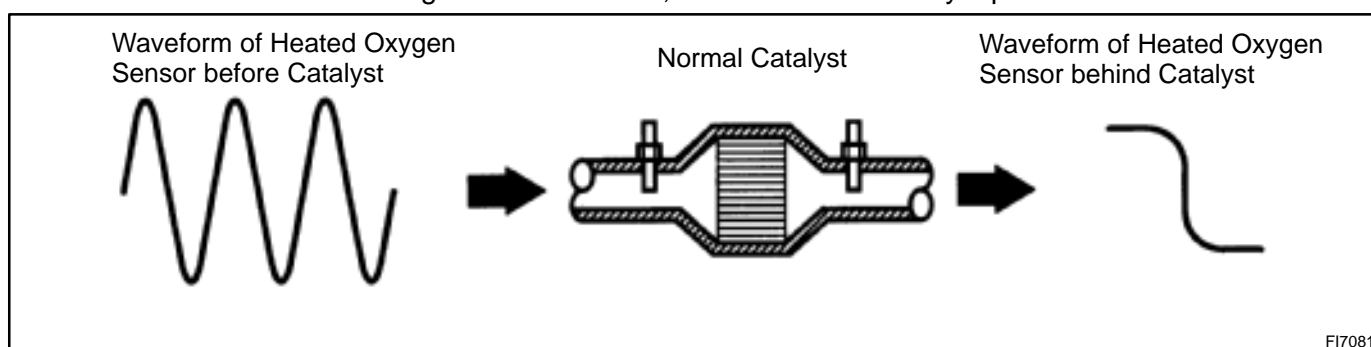


DTC No.	DTC Detecting Condition	Trouble Area
P0420	After the engine and the catalyst are warmed up, and while the vehicle is driven within the set vehicle and engine speed range, the waveforms of the oxygen sensors (bank 1 sensor 1 and bank 1 sensor 2) have the same amplitude (2 times detection logic)	<ul style="list-style-type: none"> • Gas leakage on exhaust system • Open or short in heated oxygen sensor circuit • Heated oxygen sensor • Three-way catalytic converter

CONFIRMATION DRIVING PATTERN

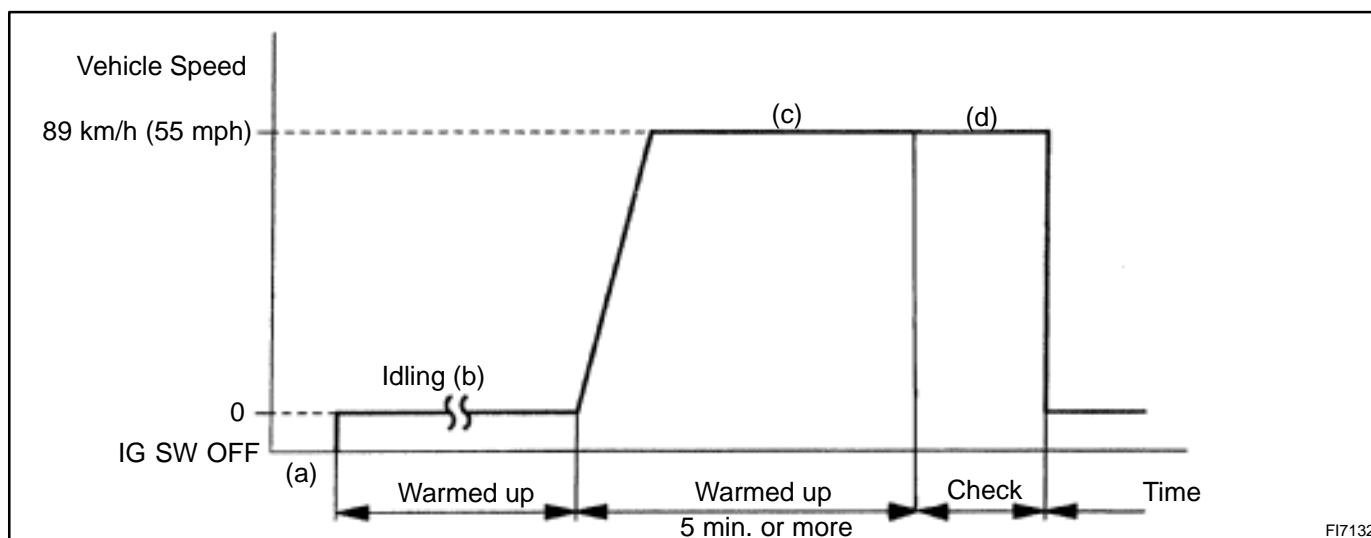

- Connect the TOYOTA hand-held tester to the DLC3, or connect the probe of the oscilloscope between terminals OX1, OX2 and E1 of the ECM connector.
- Start engine and warm it up with all accessories switched OFF until water temp. is stable.


- (c) Drive the vehicle at 89 km/h (55 mph) or more for 5 min. or more.
- (d) After confirming that the waveforms of the oxygen sensor, bank 1 sensor 1 (OX1), oscillate around 0.5 V during feedback to the ECM, check the waveform of the oxygen sensor, bank 1 sensor 2 (OX2).

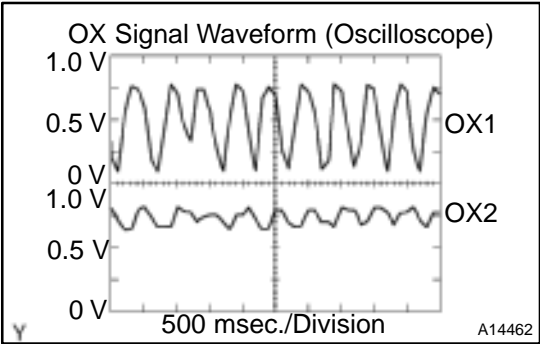

- HINT:
- If there is a malfunction in the system, the waveform of the oxygen sensor, bank 1 sensor 2 (OX2), is shown on the left.
 - There are some cases where, even though a malfunction exists, the MIL may either light up or not light up.
 - Normal waveform of OX2 is a smooth line of 0.6 to 0.7 V.

INSPECTION PROCEDURE

HINT:
Read freeze frame data using TOYOTA hand-held tester or OBD II scan tool. Because freeze frame records the engine conditions when the malfunction is detected, when troubleshooting it is useful for determining whether the vehicle was running or stopped, the engine warmed up or not, the air-fuel ratio lean or rich, etc. at the time of the malfunction.

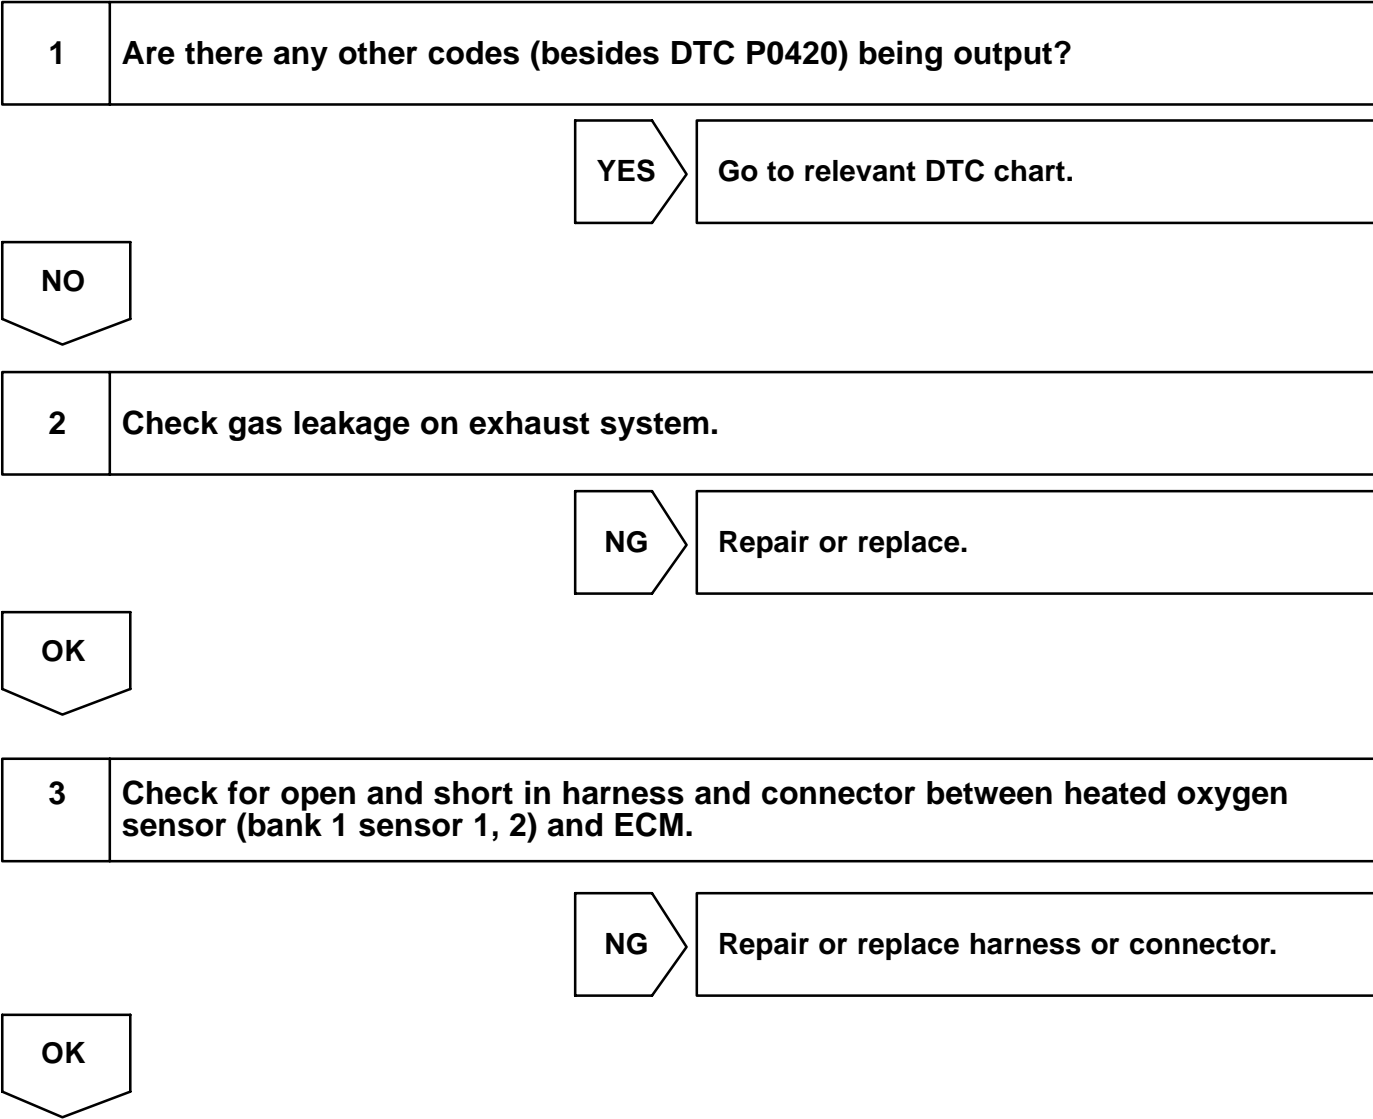

4	Check oxygen sensor (bank 1 sensor 1) (See page DI-50).
---	--

NG

Repair or replace.

OK

5	Check oxygen sensor (bank 1 sensor 2) (See page DI-59).
---	--

NG

Repair or replace.

OK

Replace three-way catalytic converter.


DTC	P0440	Evaporative Emission Control System Malfunction
-----	-------	---

CIRCUIT DESCRIPTION

The vapor pressure sensor, VSV for canister closed valve (CCV) and VSV for purge flow switching valve are used to detect abnormalities in the evaporative emission control system.


The ECM decides whether there is an abnormality in the evaporative emission control system based on the vapor pressure sensor signal.

DTC P0440 is recorded by the ECM when evaporative emissions leak from the components or when the vapor pressure sensor malfunctions.

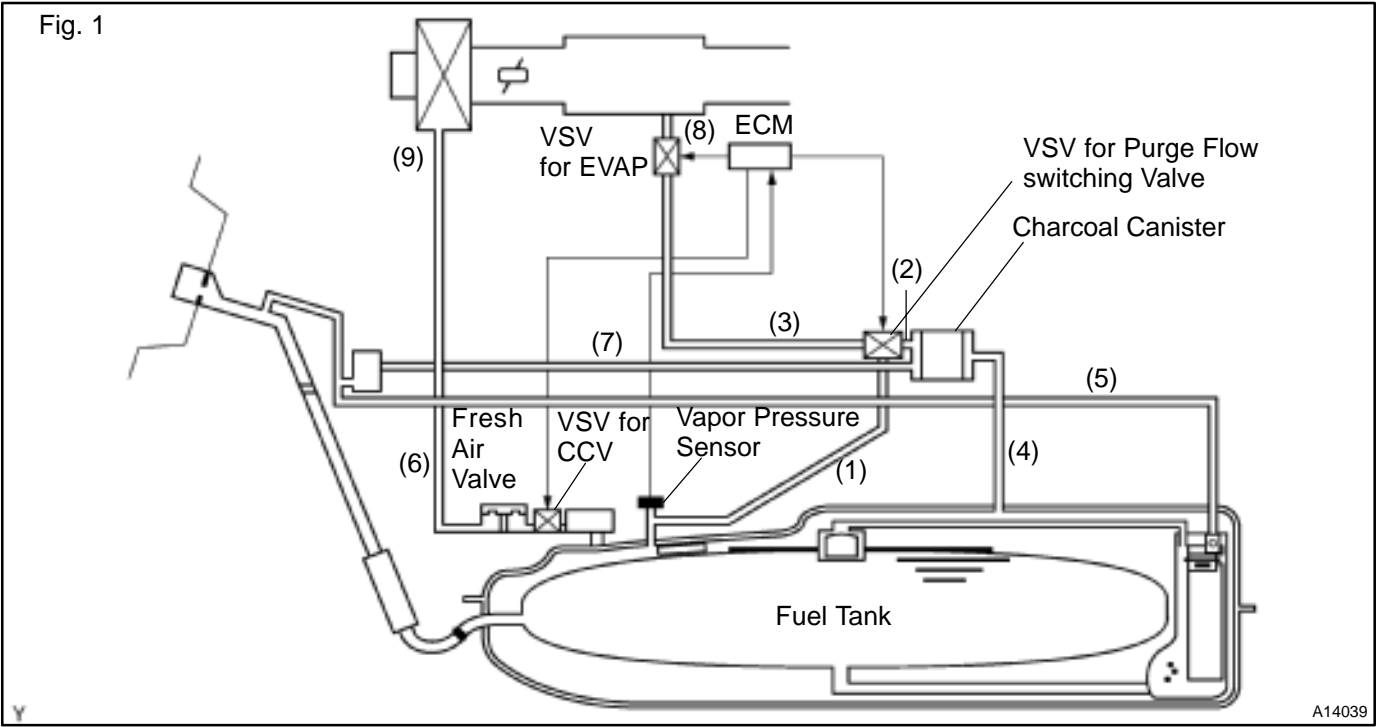

DTC No.	DTC Detecting Condition	Trouble Area
P0440	When the vacuum applied to the sealed tank cannot be kept for a fixed time.	<ul style="list-style-type: none">• Hose or tube cracked, hole, damaged or loose seal ((3) and (4) in Fig. 1)• Fuel tank cap incorrectly installed• Fuel tank cap cracked or damaged• Vacuum hose cracked, holed, blocked, damaged or disconnected ((1) (2) and (3) in Fig. 1)• Fuel tank cracked, holed or damaged• Charcoal canister cracked, holed or damaged• Open or short in vapor pressure sensor circuit• Vapor pressure sensor• ECM

WIRING DIAGRAM

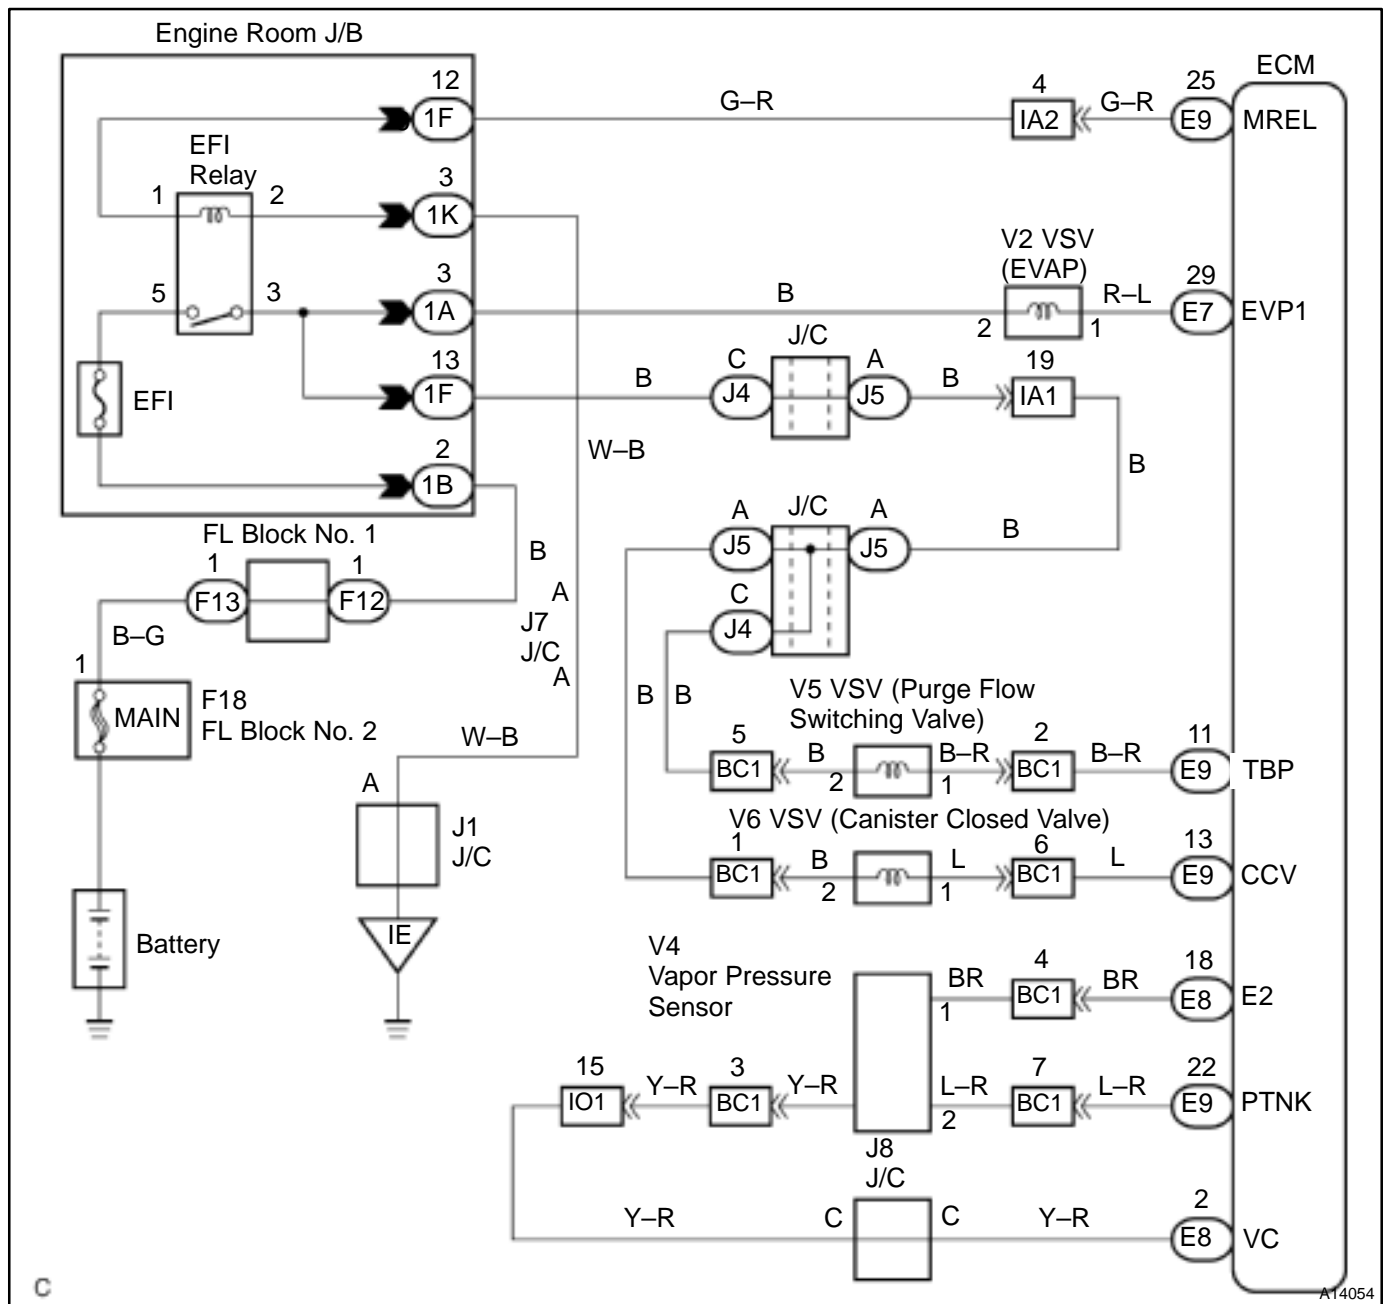

INSPECTION PROCEDURE

HINT:

- If DTC P0441, P0446, P0450 or P0451 is output after DTC P0440, first troubleshoot DTC P0441, P0446, P0450 or P0451. If no malfunction is detected, troubleshoot DTC P0440 next.
- Ask the customer whether, after the MIL came on, the customer found the fuel tank cap loose and tightened it. Also ask the customer whether the fuel tank cap was loose when refuelling. If the fuel tank cap was loose, it was the cause of the DTC. If the fuel tank cap was not loose or if the customer was not sure if it was loose, troubleshoot according to the following procedure.
- Read freeze frame data using TOYOTA hand-held tester or OBD II scan tool. Because freeze frame records the engine conditions when the malfunction is detected. When troubleshooting, it is useful for determining whether the vehicle was running or stopped, the engine was warmed up or not, the air-fuel ratio was lean or rich, etc. at the time of the malfunction.

- When the ENGINE RUN TIME in the freeze frame data is less than 200 seconds, carefully check the VSV for EVAP, charcoal canister and vapor pressure sensor.

1	Check whether hose close to fuel tank have been modified, and check whether there are signs of any accident near fuel tank or charcoal canister.
---	---

CHECK:

Check for cracks, deformation and loose connection of the following parts:

- Fuel tank
- Charcoal canister
- Fuel tank filler pipe
- Hoses and tubes around fuel tank and charcoal canister

NG

Repair or replace.

OK

2	Check that fuel tank cap is TOYOTA genuine parts.
---	--

NG

Replace to TOYOTA genuine parts.

OK

3	Check that fuel tank cap is correctly installed.
---	---

NG

Correctly install fuel tank cap.

OK

4	Check fuel tank cap (See page EC-7).
---	---

NG

Replace fuel tank cap.

OK

5 Check filler neck for damage.**PREPARATION:**

Remove the fuel tank cap.

CHECK:

Visually inspect the filler neck for damage.

NG**Replace filler pipe.****OK****6 Check vacuum hoses ((1), (2) and (3) in Fig. 1 in circuit description).****CHECK:**


- (a) Check that the vacuum hose is connected correctly.
- (b) Check the vacuum hose for looseness and disconnection.
- (c) Check the vacuum hose for cracks, hole and damage.

NG**Repair or replace.****OK****7 Check hose and tube around fuel tank and charcoal canister.****CHECK:**

- (a) Check for proper connection ((4), (5), (6) and (7) in Fig. 1 in circuit description).
- (b) Check the hose and tube for cracks, hole and damage.

NG**Repair or replace.****OK****8 Check charcoal canister for cracks, hole and damage (See page [EC-7](#)).****NG****Replace charcoal canister.****OK**

9 Check voltage between terminals VC and E2 of ECM connector.

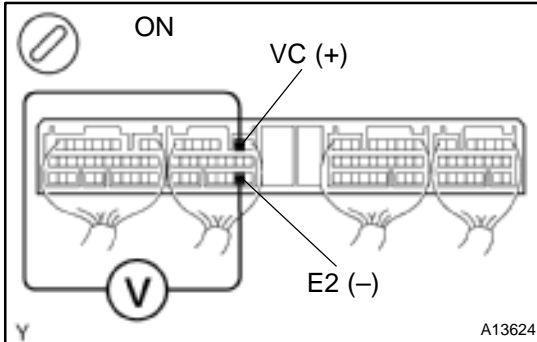**CHECK:**

- (a) Remove the ECM with connector still connected (See page [SF-62](#)).
- (b) Turn the ignition switch ON.

CHECK:

Measure the voltage between terminals VC and E2 of the ECM connector.

OK:


Voltage: 4.5 – 5.5 V

NG

Check and replace ECM (See page [IN-41](#)).

OK

10 Check voltage between terminals PTNK and E2 of ECM connectors.

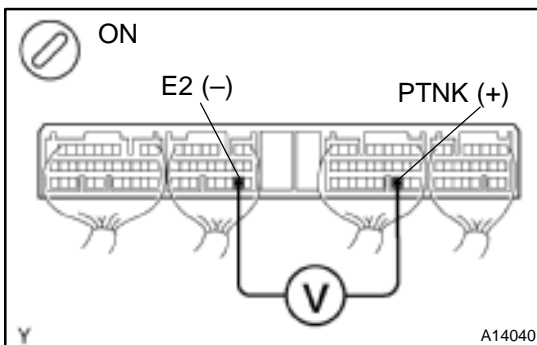**PREPARATION:**

- (a) Remove the ECM with connector still connected (See page [SF-62](#)).
- (b) Remove the fuel tank cap.
- (c) Turn the ignition switch ON.

CHECK:

Measure the voltage between terminals PTNK and E2 of the ECM connectors.

OK:

Voltage: 3.0 – 3.6 V

OK

Go to step 12.

NG

11 Check for open and short in harness and connector between vapor pressure sensor and ECM (See page [IN-41](#)).

NG

Repair or replace harness or connector.

OK

Replace vapor pressure sensor.

12

Check fuel tank and fuel tank over fill check valve for cracks and damage.

NG

Replace fuel tank or fuel tank over fill check valve.

OK

It is likely that vehicle user did not properly close fuel tank cap. Please explain to customer how to properly install fuel tank cap.

DTC	P0441	Evaporative Emission Control System Incorrect Purge Flow
------------	--------------	---


DTC	P0446	Evaporative Emission Control System Vent Control Malfunction
------------	--------------	---

CIRCUIT DESCRIPTION

The vapor pressure sensor, VSV for canister closed valve (CCV), VSV for purge flow switching valve are used to detect abnormalities in the evaporative emission control system.

The ECM decides whether there is an abnormality in the evaporative emission control system based on the vapor pressure sensor signal.

DTCs P0441 and P0446 are recorded by the ECM when evaporative emissions leak from the components. 1 below, or when there is a malfunction in either the VSV for EVAP, the VSV for purge flow switching valve, the VSV for CCV or in the vapor pressure sensor itself.

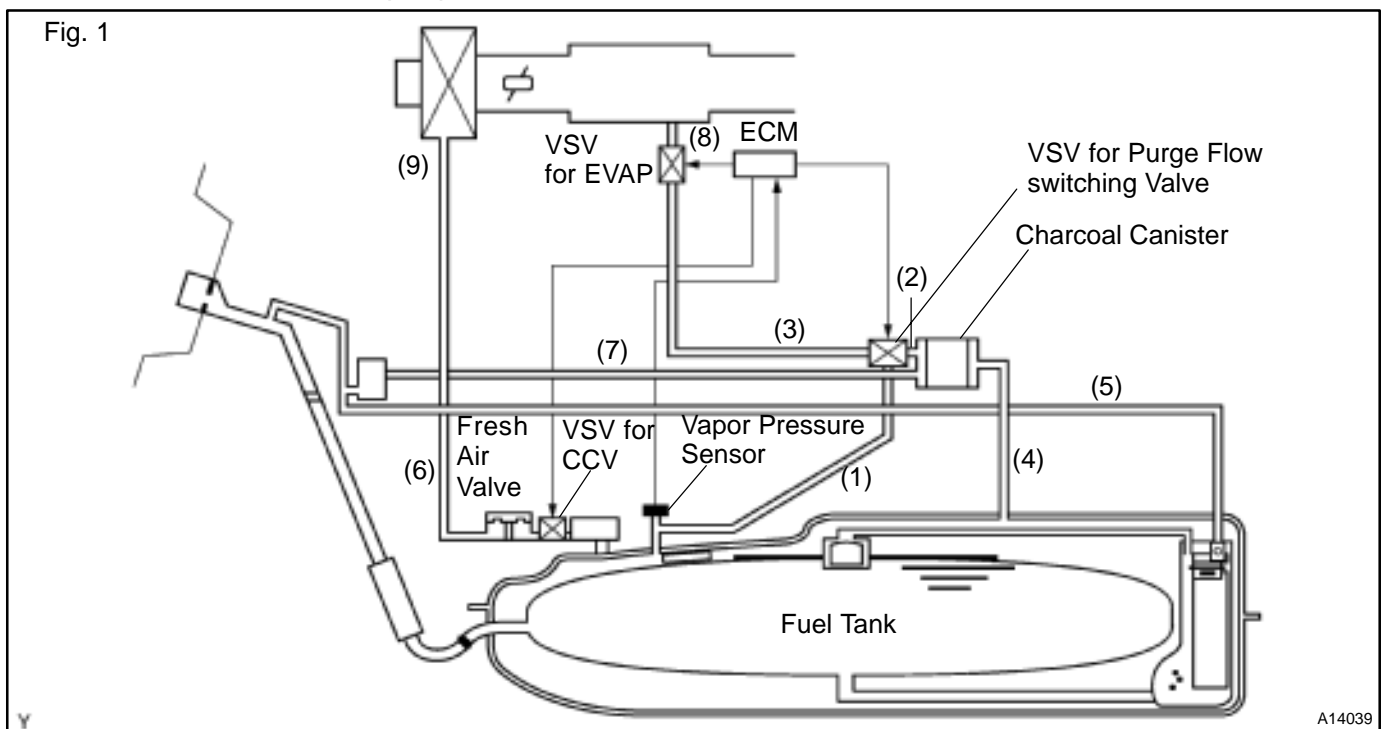

A14039

DTC No.	DTC Detecting Condition	Trouble Area
P0441	Pressure in fuel tank does not drop during purge control (2 trip detection logic)	<ul style="list-style-type: none"> • Open or short in vapor pressure sensor circuit • Vapor pressure sensor • Open or short in VSV circuit for EVAP • VSV for EVAP • Open or short in VSV circuit for purge flow switching valve • VSV for purge flow switching valve • Charcoal canister cracked, hole or damaged • Open or short in VSV circuit for CCV • VSV for CCV • ECM
	During purge cut-off, pressure in fuel tank is very low compared with atmospheric pressure (2 trip detection logic)	
P0446	When VSV for CCV is ON, pressure in fuel tank is maintained at atmospheric pressure (2 trip detection logic)	
	Turning the VSV for purge flow switching valve is ON does not lower the pressure sensor output.	
	Although the VSV for purge flow switching valve is OFF, fluctuation in the pressure sensor output is great.	
	Turning the VSV for CCV OFF does not charge the pressure sensor output.	

WIRING DIAGRAM

Refer to DTC P0440 on page [DI-81](#).

INSPECTION PROCEDURE

HINT:

- If DTC P0441, P0446, P0450 or P0451 is output after DTC P0440, first troubleshoot DTC P0441, P0446, P0450 or P0451. If no malfunction is detected, troubleshoot DTC P0440 next.
- Read freeze frame data using TOYOTA hand-held tester or OBD II scan tool. Because freeze frame records the engine conditions when the malfunction is detected. When troubleshooting, it is useful for determining whether the vehicle was running or stopped, the engine was warmed up or not, the air-fuel ratio was lean or rich, etc. at the time of the malfunction.
- When the ENGINE RUN TIME in the freeze frame data is less than 200 seconds, carefully check the VSV for EVAP, charcoal canister and vapor pressure sensor.

TOYOTA hand-held tester:

1	Check whether hose close to fuel tank have been modified, and check whether there are signs of any accident near fuel tank or charcoal canister (See page DI-81).
---	--

NG

Repair or replace.

OK

2	Check that fuel tank cap is TOYOTA genuine parts.
---	---

NG

Replace to TOYOTA genuine parts.

OK

3	Check that fuel tank cap is correctly installed.
---	--

NG	Correctly install fuel tank cap.
----	----------------------------------

OK

4	Check fuel tank cap (See page EC-7).
---	---

NG	Replace fuel tank cap.
----	------------------------

OK

5	Check filler neck for damage.
---	-------------------------------

NG	Replace filler pipe.
----	----------------------

OK

6	Check vacuum hoses ((1), (2) and (3) in Fig. 1 in circuit description.
---	--

NG	Repair or connect VSV or sensor connector.
----	--

OK

7	Check hose and tube around fuel tank and charcoal canister (See page DI-81).
---	---

NG	Repair or replace.
----	--------------------

OK

8	Check VSV connector for EVAP, VSV connector for CCV, VSV connector for purge flow switching valve and vapor pressure sensor connector for looseness and disconnection.
---	--

NG

Repair or connect VSV or sensor connector.

OK

9	Check vacuum hoses ((4), (5), (6) and (7) in Fig. 1 in circuit description).
---	--

CHECK:

- (a) Check that the vacuum hose is connected correctly.
- (b) Check the vacuum hose for looseness and disconnection.
- (c) Check the vacuum hose for cracks, hole, damage and blockage.

NG

Repair or replace.

OK

10	Check voltage between terminals VC and E2 of ECM connector (See page DI-81).
----	---

NG

Check and replace ECM (See page [IN-41](#)).

OK

11	Check voltage between terminals PTNK and E2 of ECM connectors (See page DI-81).
----	--

OK

Go to step 13.

NG

- | | |
|----|--|
| 12 | Check for open and short in harness and connector between vapor pressure sensor and ECM (See page IN-41). |
|----|--|


NG

Repair or replace harness or connector.

OK

Replace vapor pressure sensor.

- | | |
|----|-------------------|
| 13 | Check purge flow. |
|----|-------------------|

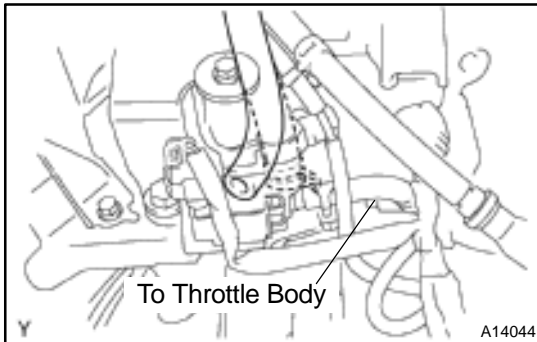**PREPARATION:**

- (a) Connect the TOYOTA hand-held tester to the DLC3.
- (b) Select the ACTIVE TEST mode on the TOYOTA hand-held tester.
- (c) Disconnect the vacuum hose from the VSV for the EVAP from the charcoal canister.
- (d) Start the engine.

CHECK:

When the VSV for the EVAP is operated by the TOYOTA hand-held tester, check whether the disconnected hose applies suction to your finger.

OK:**VSV is ON:**

Disconnected hose applies suction to your finger.

VSV is OFF:

Disconnected hose applies no suction to your finger.

OK

Go to step 16.

NG

- | | |
|----|---|
| 14 | Check vacuum hose between intake manifold and VSV for EVAP, and VSV for EVAP and charcoal canister. |
|----|---|

CHECK:

- (a) Check that the vacuum hose is connected correctly.
- (b) Check the vacuum hose for looseness and disconnection.
- (c) Check the vacuum hose for cracks, hole, damage and blockage.

NG

Repair or replace.

OK

- | | |
|----|--|
| 15 | Check operation of VSV for EVAP (See page SF-40). |
|----|--|

OK

Go to step 16.

NG

Replace VSV and charcoal canister, and then clean the vacuum hose between throttle body and VSV for EVAP, and VSV for EVAP and charcoal canister.


- | | |
|----|---|
| 16 | Check for open and short in harness and connector between EFI main relay (Marking: EFI) and VSV for EVAP, and VSV for EVAP and ECM (See page IN-41). |
|----|---|

NG

Repair or replace harness or connector.

OK

Check and replace ECM (See page [IN-41](#)).

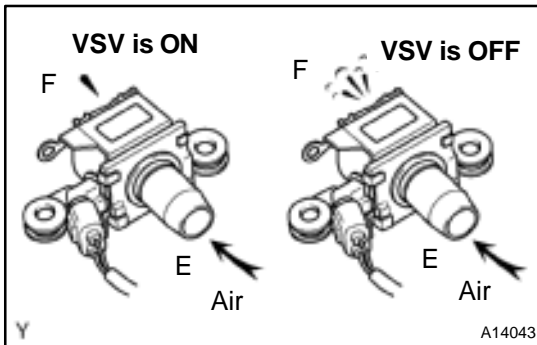17 Check VSV for CCV.

PREPARATION:

- Connect the TOYOTA hand-held tester to the DLC3.
- Remove the VSV for the CCV from the charcoal canister.
- Turn the ignition switch ON and push the TOYOTA hand-held tester main switch ON.
- Select the ACTIVE TEST mode on the TOYOTA hand-held tester.

CHECK:

Check the VSV operation when it is operated by the TOYOTA hand-held tester.

OK:

VSV is ON:

Air does not flow from port E to port F.

VSV is OFF:

Air from port E flows out through port F.

OK
Go to step 21.
NG
18 Check vacuum hose between VSV for CCV and fresh air valve.
CHECK:

- Check that the vacuum hose is connected correctly.
- Check the vacuum hose for looseness and disconnection.
- Check the vacuum hose for cracks, hole damage and blockage.

NG
Repair or replace.
OK
19 Check operation of VSV for CCV.
OK
Go to step 20.
NG

Replace VSV and charcoal canister, and then clean vacuum hose between charcoal canister and VSV for CCV.

- 20 Check for open and short in harness and connector between EFI main relay (Marking: EFI) and VSV for CCV, and VSV for CCV and ECM (See page [IN-41](#)).


NG

Repair or replace harness or connector.

OK

Check and replace ECM (See page [IN-41](#)).

- 21 Connect TOYOTA hand-held tester and check operation of VSV purge flow switching valve.

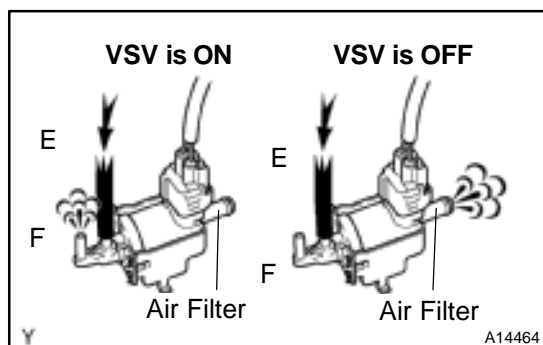

PREPARATION:

- Connect the TOYOTA hand-held tester to the DLC3.
- Turn the ignition switch ON and push the TOYOTA hand-held tester main switch ON.
- Select the ACTIVE TEST mode on the TOYOTA hand-held tester.

CHECK:

Check operation of VSV when VSV is operated by the TOYOTA hand-held tester.

OK:

VSV is ON:

Air from pipe E is flowing out through pipe F.

VSV is OFF:

Air from pipe E is flowing out through the air filter.

OK

Go to step 24.

NG

- 22 Check VSV for purge flow switching valve (See page [SF-45](#)).

NG

Go to step 23.

OK

Replace VSV and charcoal canister, and clean vacuum hoses ((1), (2) and (3) in Fig. 1 in circuit description.

- 23** Check for open and short in harness and connector between EFI main relay (Marking: EFI) and VSV for purge flow switching valve, and VSV for purge flow switching valve and ECU (See page [IN-41](#)).


NG

Repair or replace harness or connector.

OK

Check and replace ECM (See page [IN-41](#)).

- 24** Check fuel tank and charcoal canister.

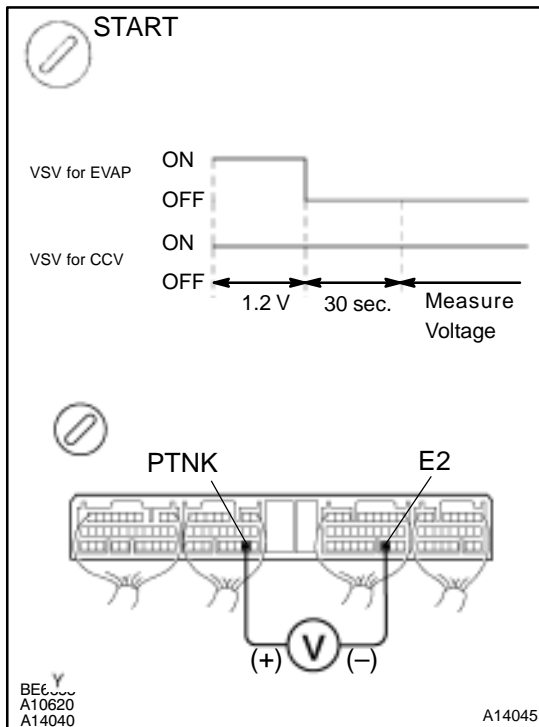

PREPARATION:

- Remove the connector cover from the ECM.
- Connect the TOYOTA hand-held tester to the DLC3.
- Select the ACTIVE TEST mode on the TOYOTA hand-held tester.
- Start the engine.
- The VSV for the CCV is ON by the TOYOTA hand-held tester.
- The VSV for the EVAP is ON by the TOYOTA hand-held tester and hold the VSV for EVAP until voltage between terminals PTNK and E2 becomes 1.2 V, then set VSV for EVAP OFF.

CHECK:

Measure the voltage between terminals PTNK and E2 of the ECM connectors 30 sec. after switching the VSV for the EVAP from ON to OFF.

OK:

Voltage: 2.3 V or less

OK

Check and replace ECM.

NG

25	Remove fuel tank and check it.
----	--------------------------------

NG

Replace fuel tank.

OK

26	Remove charcoal canister and check it (See page EC-7).
----	---

NG

Replace charcoal canister.

OK

Check and replace ECM (See page [IN-41](#)).**OBD II scan tool (excluding TOYOTA hand-held tester):**

1	Check whether hose close to fuel tank have been modified, and check whether there are signs of any accident near fuel tank or charcoal canister (See page DI-81).
---	--

NG

Repair or replace.

OK

2	Check that fuel tank cap is TOYOTA genuine parts.
---	---

NG

Replace to TOYOTA genuine parts.

OK

3	Check that fuel tank cap is correctly installed.
---	--

NG

Correctly install fuel tank cap.

OK

4	Check fuel tank cap (See page EC-7).
---	--------------------------------------

NG	Replace fuel tank cap.
----	------------------------

OK

5	Check filler neck for damage.
---	-------------------------------

NG	Replace filler pipe.
----	----------------------

OK

6	Check VSV connector for EVAP, VSV connector for CCV, VSV connector for purge flow switching valve and vapor pressure sensor connector for looseness and disconnection.
---	--

NG	Repair or connect VSV or sensor connector.
----	--

OK

7	Check vacuum hoses ((1), (2) , (3), (4), (5), (6), (7), (8) and (9) in Fig. 1 in circuit description).
---	--

CHECK:

- (a) Check that the vacuum hose is connected correctly.
- (b) Check the vacuum hose for looseness and disconnection.
- (c) Check the vacuum hose for cracks, hole damage and blockage.

NG	Repair or replace.
----	--------------------

OK

8	Check voltage between terminals VC and E2 of ECM connector (See page DI-81).
---	---

NG

Check and replace ECM (See page [IN-41](#)).

OK

9	Check voltage between terminals PTNK and E2 of ECM connectors (See page DI-81).
---	--

OK

Go to step 11.

NG

10	Check for open and short in harness and connector between vapor pressure sensor and ECM (See page IN-41).
----	--


NG

Repair or replace harness or connector.

OK

Replace vapor pressure sensor.

11 Check VSV for EVAP.

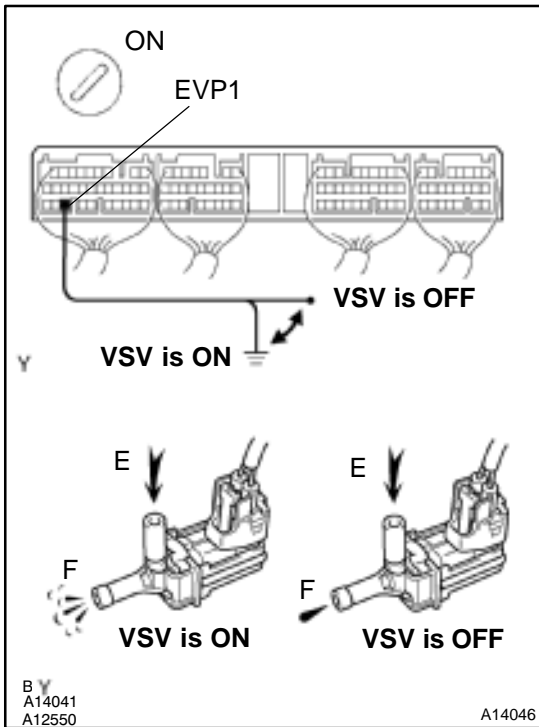

PREPARATION:

- Remove the ECM with connector still connected (See page [SF-62](#)).
- Turn the ignition switch ON.

CHECK:

Check VSV function.

- Connect between terminal EVP1 of the ECM connector and body ground (VSV ON).
- Disconnect between terminal EVP1 of the ECM connector and body ground (VSV OFF).

OK:

- VSV is ON:**
Air from port E flows out through port F.
- VSV is OFF:**
Air does not flow from port E to port F.

OK

Go to step 14.

NG

12 Check operation of VSV for EVAP (See page [SF-40](#)).

NG

Go to step 13.

NG

Replace VSV and clean vacuum hoses between throttle body and VSV for EVAP, and VSV for EVAP and charcoal canister, and then check charcoal canister.

13 Check for open and short in harness and connector between EFI main relay (Marking: EFI) and VSV for EVAP, and VSV for EVAP and ECM (See page [IN-41](#)).


NG

Repair or replace harness or connector.

OK

Check and replace ECM (See page [IN-41](#)).

14 Check VSV for CCV.

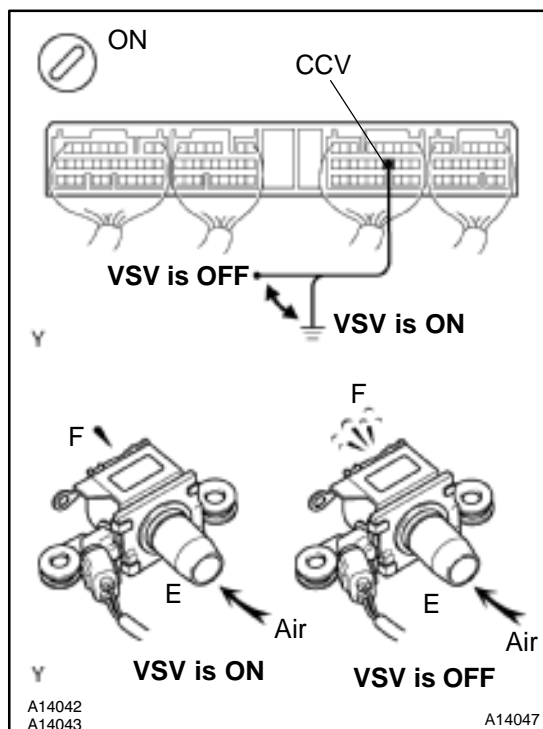

PREPARATION:

- Remove the ECM with connector still connected (See page [SF-62](#)).
- Turn the ignition switch ON.

CHECK:

Check the VSV function.

- Connect between terminal CCV of the ECM connector and body ground (VSV ON).
- Disconnect between terminal CCV of the ECM connector and body ground (VSV OFF).

OK:

VSV is ON:

Air does not flow from port E to port F.

VSV is OFF:

Air from port E flows out through port F.

OK

Go to step 17.

NG

15 Check operation of VSV for CCV (See page [SF-42](#)).

OK

Go to step 16.

NG


Replace VSV and charcoal canister, and then clean vacuum hoses between charcoal canister and VSV for CCV.

16 Check for open and short in harness and connector between EFI main relay (Marking: EFI) and VSV for CCV, and VSV for CCV and ECM (See page [IN-41](#)).

NG

Repair or replace harness or connector.

OK

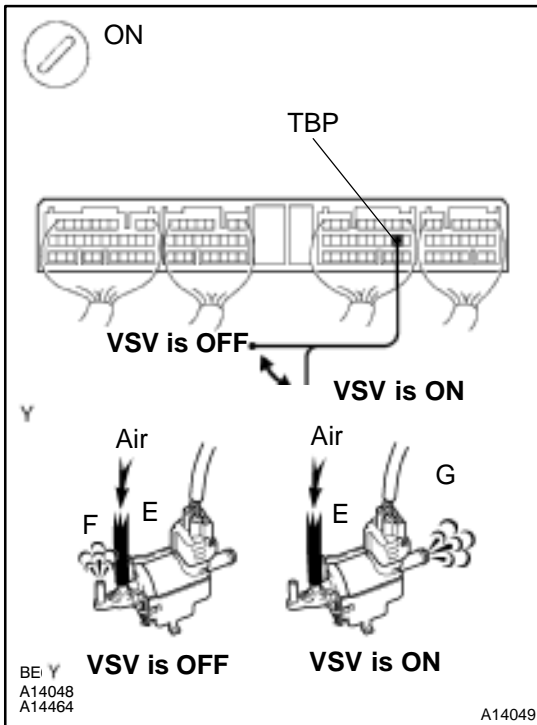Check and replace ECM (See page [IN-41](#)).**17 Check VSV for purge flow switching valve.****PREPARATION:**

- Remove the ECM with connector still connected (See page [SF-62](#)).
- Turn the ignition switch ON.

CHECK:

Check the VSV function.

- Connect between terminal TBP of the ECM connector and body ground (ON).
- Disconnect between terminal TBP of the ECM connector and body ground (OFF).

OK:**(1) VSV is ON:**

Air from pipe E is flowing out through pipe F.

(2) VSV is OFF:

Air from pipe E flows out through pipe G.

OK

Check and replace charcoal canister (See page [EC-7](#)).

NG

18 Check operation of VSV for purge flow switching valve (See page [SF-45](#)).

OK

Go to step 19.

NG

Replace VSV and charcoal canister, and then clean vacuum hoses ((1), (2) and (3) in Fig. 1 in circuit description).

19	Check for open and short in harness and connector between EFI main relay (Marking: EFI) and VSV for purge flow switching valve, and VSV for purge flow switching valve and ECM (See page IN-41).
----	---

NG

Repair or replace harness or connector.

OKCheck and replace ECM (See page [IN-41](#)).

DTC	P0450	Evaporative Emission Control System Pressure Sensor Malfunction
------------	--------------	--

DTC	P0451	Evaporative Emission Control System Pressure Sensor Range/Performance
------------	--------------	--

CIRCUIT DESCRIPTION

The vapor pressure sensor, VSV for canister closed valve (CCV) and VSV for pressure switching valve are used to detect abnormalities in the evaporative emission control system.

The ECM decides whether there is an abnormality in the evaporative emission control system based on the vapor pressure sensor signal.

DTC P0450 or P0451 is recorded by the ECM when the vapor pressure sensor malfunction.

DTC No.	DTC Detecting Condition	Trouble Area
P0450	10 seconds or less after engine starting condition (a) or (b) continues for 7 seconds or more: (2 trip detection logic) (a) Vapor pressure sensor value < -4.0 kPa (-30 mmHg, -1.2 in.Hg) (b) Vapor pressure sensor value \geq 2.0 kPa (15 mmHg, 0.6 in.Hg)	<ul style="list-style-type: none"> • Open or short in vapor pressure sensor circuit • Vapor pressure sensor • ECM
P0451	Vapor pressure sensor output extremely changes under condition: Vehicle speed: 0 km/h (0mph), Engine speed: Idling (2 trip detection logic)	

WIRING DIAGRAM

Refer to DTC P0440 on page [DI-81](#).

INSPECTION PROCEDURE

HINT:

- If DTC P0441, P0446, P0450 or P0451 is output after DTC P0440, first trouble shoot DTC P0441, P0446 P0450 or P0451. If no malfunction is detected, troubleshoot DTC P0440 next.
- Read freeze frame data using TOYOTA hand-held tester or OBD II scan tool. Because freeze frame records the engine conditions when the malfunction is detected. When troubleshooting, it is useful for determining whether the vehicle was running or stopped, the engine was warmed up or not, the air-fuel ratio was lean or rich, etc. at the time of the malfunction.
- When the ENGINE RUN TIME in the freeze frame data is less than 200 seconds, carefully check the VSV for EVAP, charcoal canister and vapor pressure sensor.

1	Check voltage between terminals VC and E2 of ECM connector (See page DI-81).
---	---

NG

Check and replace ECM (See page [IN-41](#)).

OK

2	Check voltage between terminals PTNK and E2 of ECM connectors (See page DI-81).
---	--

OK

Check and replace ECM (See page [IN-41](#)).

NG

3	Check for open and short in harness and connector between vapor pressure sensor and ECM (See page IN-41).
---	--

NG

Repair or replace harness or connector.


OK

Replace vapor pressure sensor.

DTC	P0500	Vehicle Speed Sensor Malfunction
------------	--------------	---


CIRCUIT DESCRIPTION

The speed sensor for ABS detects the wheel speed and sends the appropriate signals to the ABS ECU. The ECU converts these signals into a 4-pulse signal and output it to the combination meter. After this signal is converted into a more precise rectangular waveform by the waveform shaping circuit inside the combination meter, it is then transmitted to the ECM. The determines the vehicle speed based on the frequency of these pulse signals.

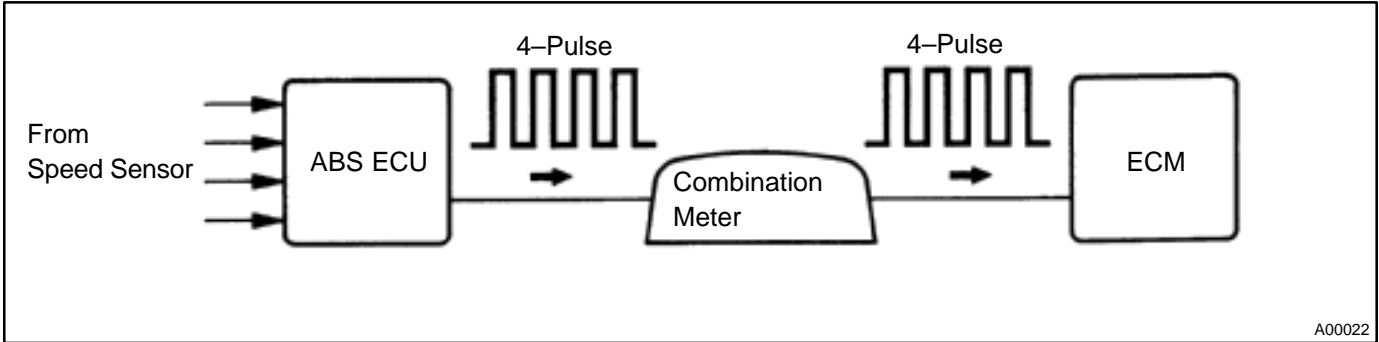

DTC No.	DTC Detecting Condition	Trouble Area
P0500	During vehicle is being driven, no vehicle speed sensor signal to ECM (2 trip detection logic)	<ul style="list-style-type: none"> • Combination meter • ABS ECU • Open or short in vehicle speed sensor circuit • Vehicle speed sensor • ECM

WIRING DIAGRAM

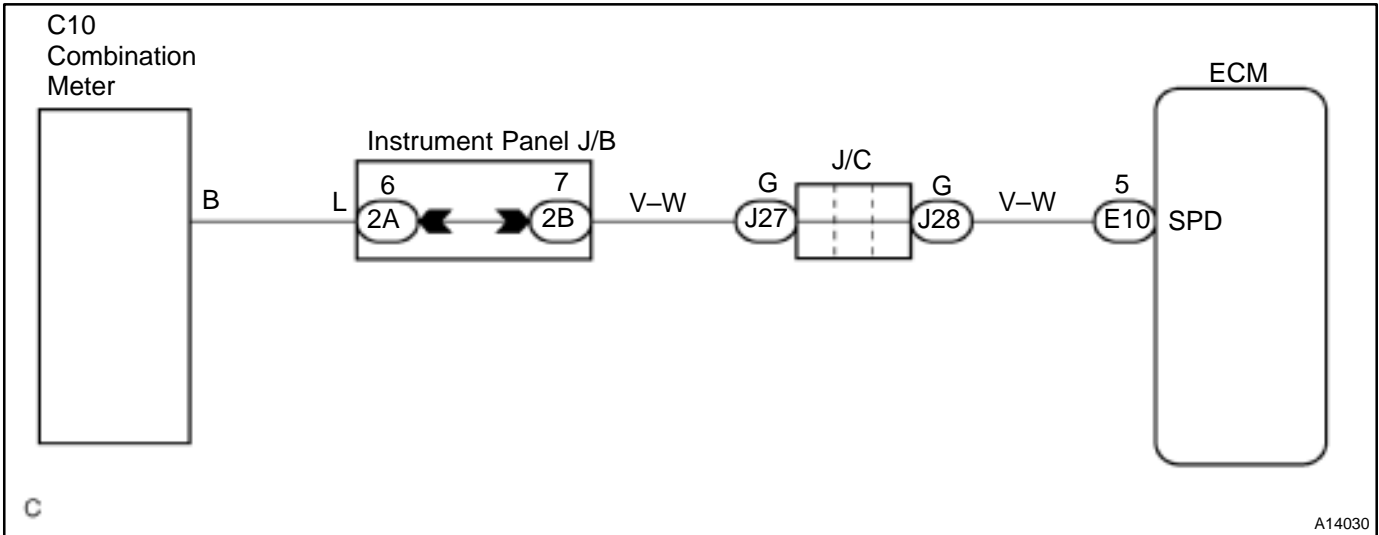

INSPECTION PROCEDURE

HINT:

Read freeze frame data using TOYOTA hand-held tester or OBD II scan tool. Because freeze frame records the engine conditions when the malfunction is detected, when troubleshooting it is useful for determining whether the vehicle was running or stopped, the engine warmed up or not, the air-fuel ratio lean or rich, etc. at the time of the malfunction.

1 Check operation of speedometer.

CHECK:

Drive the vehicle and check if the operation of the speedometer in the combination meter is normal.

HINT:


The ABS ECU is operating normally if the speedometer display is normal.

NG

Check and replace combination meter (See page [BE-2](#)) and ABS ECU (See page [IN-41](#)).

OK

2 Check voltage between terminal SPD of ECM connector and body ground.

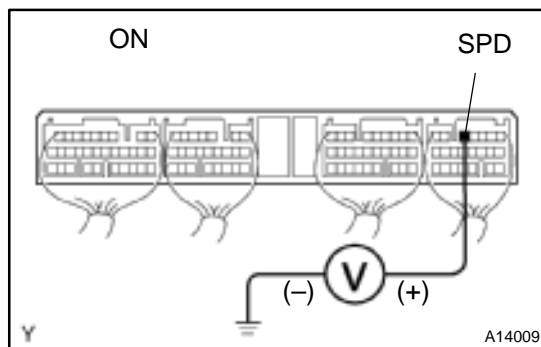

PREPARATION:

- Remove the ECM with connector still connected (See page [SF-62](#)).
- Drive the vehicle.

CHECK:

Measure voltage between terminal SPD of ECM connector and body ground when the wheel is turned slowly.

OK:

Voltage is generated intermittently.



AT7809

NG

Check and repair harness and connector between combination meter and ECM.

OK

Check and replace ECM (See page [IN-41](#)).

DTC	P1125	Throttle Control Motor Circuit Malfunction
-----	-------	--

CIRCUIT DESCRIPTION


Throttle motor is operated by the ECM and it opens and closes the throttle valve.

The opening angle of the throttle valve is detected by the throttle position sensor which is mounted on the throttle body and it provides feedback to the ECM to control the throttle motor in order to the throttle valve opening angle properly in response to driving condition.

If this DTC is stored, the ECM shuts down the power for the throttle motor, and the throttle valve is fully closed by the return spring.

DTC No.	DTC Detecting Condition	Trouble Area
P1125	Conditions (a) and (b) continue for 0.5 seconds: (a) Throttle control motor output duty $\geq 80\%$ (b) Throttle control motor current $< 0.5\text{ A}$	<ul style="list-style-type: none"> • Open or short in throttle control motor circuit • Throttle control motor • ECM
	Throttle control motor current $\geq 16\text{ A}$	
	Condition (a) continues for 0.6 seconds: (a) Throttle control motor current $\geq 7\text{ A}$	

WIRING DIAGRAM

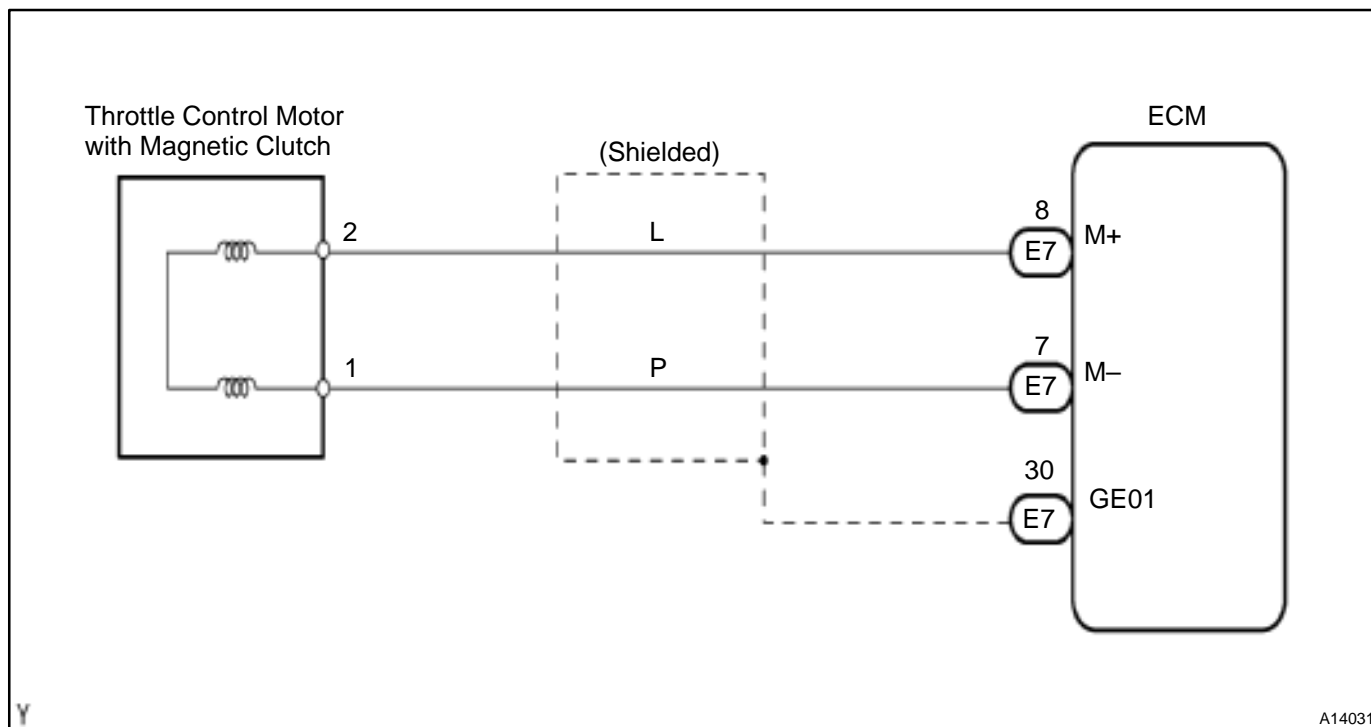


INSPECTION PROCEDURE

HINT:

Read freeze frame data using TOYOTA hand-held tester or OBD II scan tool. Because freeze frame records the engine conditions when the malfunction is detected. When troubleshooting, it is useful for determining whether the vehicle was running or stopped, the engine was warmed up or not, the air-fuel ratio was lean or rich, etc. at the time of the malfunction.

1 Check throttle control motor circuit.

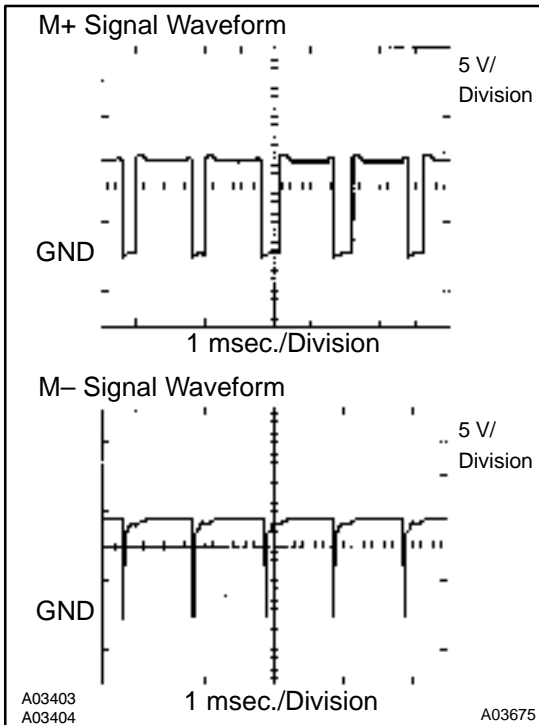

PREPARATION:

- Connect the oscilloscope between terminals M+ or M- and E1 of the ECM connectors.
- Start the engine.

CHECK:

Check the waveform between terminals M+ or M- and E1 of the ECM connectors when the engine is idling.

OK:

The correct waveforms are as shown.

HINT:

The waveform frequency varies depending on the throttle opening.

OK

Check and replace ECM (See page [IN-41](#)).

NG

2 Check throttle control motor (See page [SF-24](#)).

NG

Replace throttle control motor with magnetic clutch (See page [SF-29](#)).

OK

3 Check for open and short in harness and connector between throttle control motor and ECM (See page [IN-41](#)).

NG

Repair or replace harness or connector.

OK

Check and replace ECM (See page [IN-41](#)).

DTC	P1127	ETCS Actuator Power Source Circuit Malfunction
------------	--------------	---


CIRCUIT DESCRIPTION

Battery positive voltage is supplied to terminal BM of the ECM even once when the ignition switch is OFF for the electric throttle control system.

If this DTC is stored, the ECM shuts down the power for the throttle motor, and the throttle valve is fully closed by the return spring.

DTC No.	DTC Detecting Condition	Trouble Area
P1127	Open in ETCS power source circuit	<ul style="list-style-type: none"> • Open in ETCS power source circuit • ECM

WIRING DIAGRAM

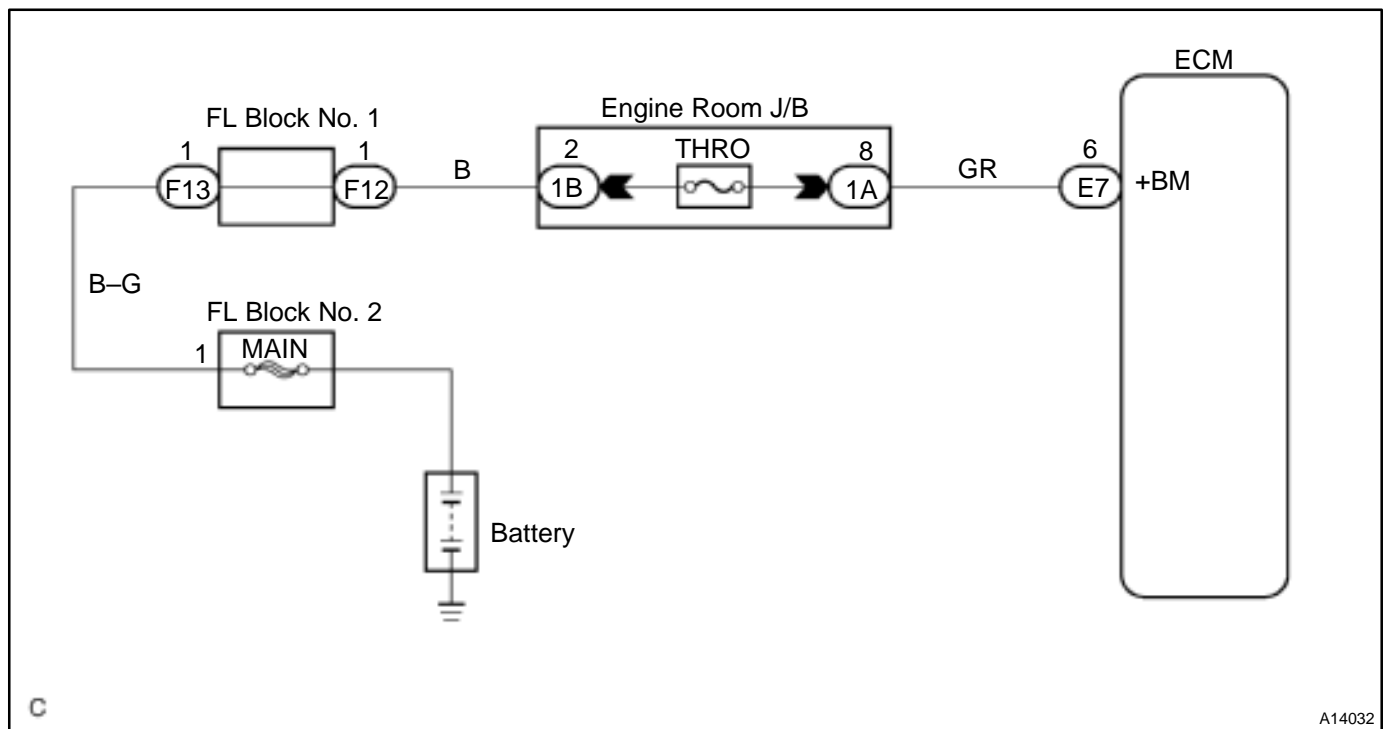


INSPECTION PROCEDURE

HINT:

Read freeze frame data using TOYOTA hand-held tester or OBD II scan tool. Because freeze frame records the engine conditions when the malfunction is detected. When troubleshooting, it is useful for determining whether the vehicle was running or stopped, the engine was warmed up or not, the air-fuel ratio was lean or rich, etc. at the time of the malfunction.

1 Check THRO fuse of R/B No.2.

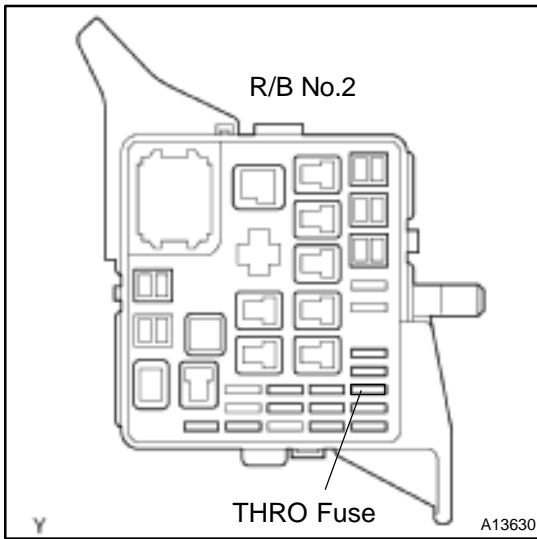

PREPARATION:

Remove the THRO fuse from the Engine room J/B.

CHECK:

Check the countinuity of the THRO fuse.

OK:


Continuity

NG

Check for short in all harness and components connected to THRO fuse.

OK

2 Check voltage between terminal +BM of ECM connector and body ground.

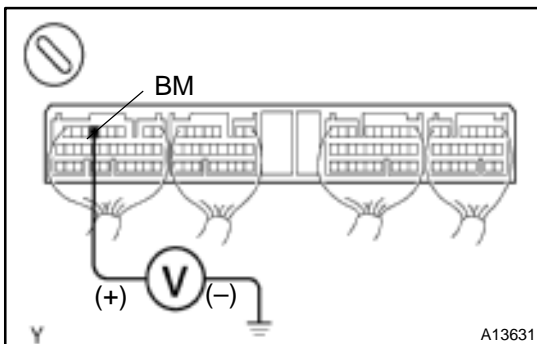

PREPARATION:

Remove the ECM with connector still connected (See page [SF-62](#)).

CHECK:

Measure the voltage between terminal BM of the ECM connector and body ground.

OK:

Voltage: 9 – 14 V

OK

Check and replace ECM (See page [IN-41](#)).

NG

Check and repair harness or connector between battery and ETCS fuse, and ETCS fuse and ECM (See page [IN-41](#)).

DTC	P1128	Throttle Control Motor Lock Malfunction
------------	--------------	--

CIRCUIT DESCRIPTION

Throttle motor is operated by the ECM and it opens and closes the throttle valve.

The opening angle of the throttle valve is detected by the throttle position sensor which is mounted on the throttle body and it provides feedback to the ECM to control the throttle motor in order the throttle valve opening angle properly in response to driving condition.

If this DTC is stored, the ECM shuts down the power for the throttle motor, and the throttle valve is fully closed by the return spring.

DTC No.	DTC Detecting Condition	Trouble Area
P1128	Lock throttle control motor during control throttle control motor	<ul style="list-style-type: none"> • Throttle control motor • Throttle body

WIRING DIAGRAM

Refer to DTC P1125 on page [DI-108](#).

INSPECTION PROCEDURE

HINT:

Read freeze frame data using TOYOTA hand-held tester or OBD II scan tool. Because freeze frame records the engine conditions when the malfunction is detected. When troubleshooting, it is useful for determining whether the vehicle was running or stopped, the engine was warmed up or not, the air-fuel ratio was lean or rich, etc. at the time of the malfunction.

1	Check throttle control motor (See page DI-108).
----------	--

NG

**Replace throttle control motor
(See page [SF-29](#)).**

OK

2	Visually check throttle valve.
----------	---------------------------------------

PREPARATION:

Remove the intake air resonator.

CHECK:

Check whether or not a foreign body is caught between the throttle valve and housing.

NG

Remove foreign body and clean throttle body.

OK

Replace throttle body.

DTC	P1300	Igniter Circuit Malfunction (No.1)
------------	--------------	---

DTC	P1305	Igniter Circuit Malfunction (No.2)
------------	--------------	---

DTC	P1310	Igniter Circuit Malfunction (No.3)
------------	--------------	---

DTC	P1315	Igniter Circuit Malfunction (No.4)
------------	--------------	---


CIRCUIT DESCRIPTION

A DIS (Direct Ignition System) has been adopted. The DIS improves the ignition timing accuracy, reduces high-voltage loss, and enhances the overall reliability of the ignition system by eliminating the distributor. The DIS is a 1-cylinder ignition system which ignites one cylinder with one ignition coil. In the 1-cylinder ignition system, the one spark plug is connected to the end of the secondary winding. High voltage generated in the secondary winding is applied directly to the spark plug. The spark of the spark plug pass from the center electrode to the ground electrode.

The ECM determines ignition timing and outputs the ignition signals (IGT) for each cylinder. Based on IGT signals, the power transistors in the igniter cuts off the current to the primary coil in the ignition coil is supplied to the spark plug that are connected to the end of the secondary coil. At the same time, the igniter also sends an ignition confirmation signal (IGF) as a fail-safe measure to the ECM.

DTC No.	DTC Detecting Condition	Trouble Area
P1300 P1305 P1310 P1315	No IGF signal to ECM while engine is running	<ul style="list-style-type: none"> • Ignition system • Open or short in IGF1 and IGT1 – 4 circuit from ignition coil with igniter • No.1 – No.4 ignition coil with igniter • ECM

WIRING DIAGRAM

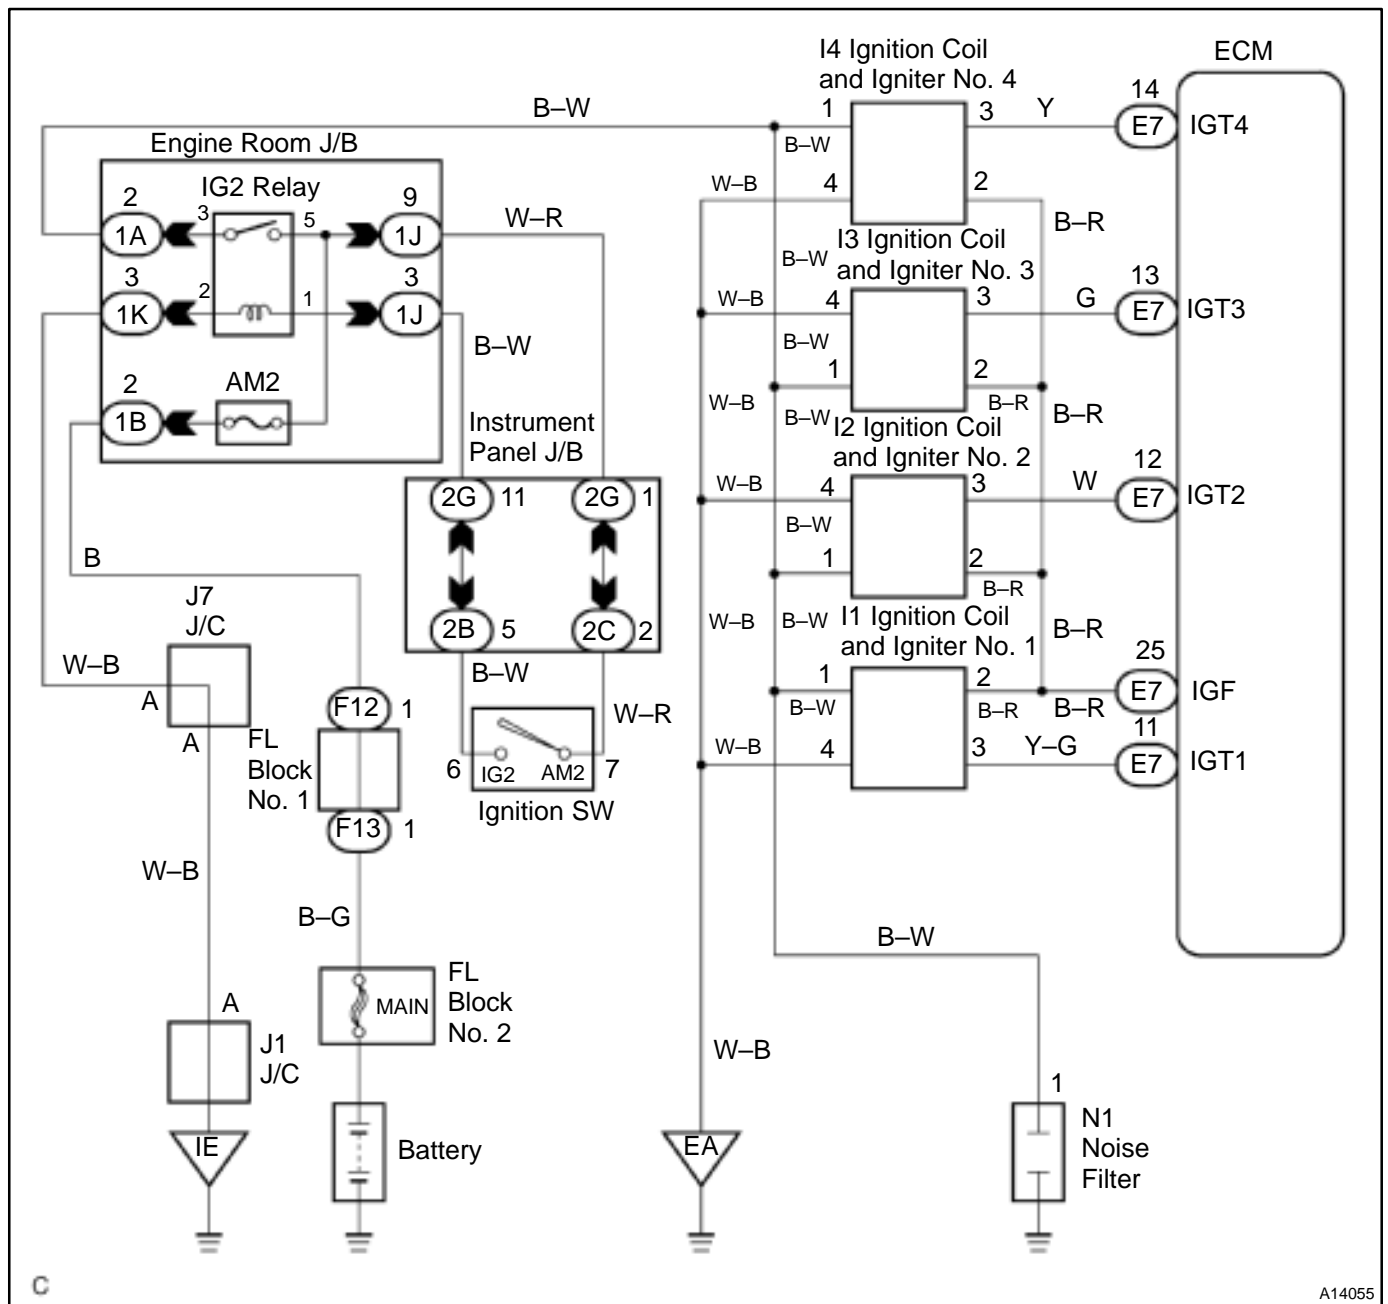

INSPECTION PROCEDURE

HINT:

- If DTC P1300 is displayed, check No.1 ignition coil with igniter circuit.
- If DTC P1305 is displayed, check No.2 ignition coil with igniter circuit.
- If DTC P1310 is displayed, check No.3 ignition coil with igniter circuit.
- If DTC P1315 is displayed, check No.4 ignition coil with igniter circuit.
- Read freeze frame data using TOYOTA hand-held tester or OBD II scan tool. Because freeze frame records the engine conditions when the malfunction is detected, when troubleshooting it is useful for determining whether the vehicle was running or stopped, the engine warmed up or not, the air-fuel ratio lean or rich, etc. at the time of the malfunction.

1 Check spark plug and spark (See page [DI-65](#)).

NG

Go to step 4.

OK


2 Check for open and short in harness and connector in IGF and IGT signal circuit between ECM and ignition coil with igniter (See page [IN-41](#)).

NG

Repair or replace harness or connector.

OK

3 Disconnect ignition coil with igniter connector and check voltage between terminals IGF of ECM connector and body ground.

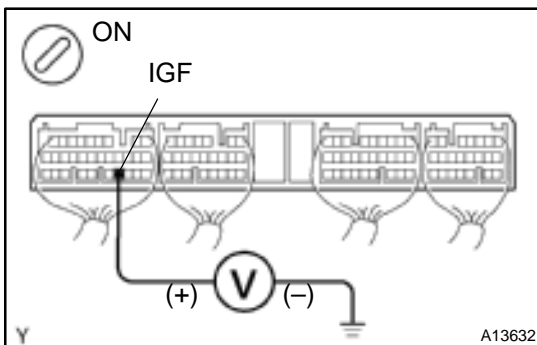

PREPARATION:

- (a) Remove the ECM with connector still connected (See page [SF-62](#)).
- (b) Disconnect the ignition coil with igniter connector.
- (c) Turn the ignition switch ON.

CHECK:

Measure voltage between terminals IGF of the ECM connector and body ground.

OK:

Voltage: 4.5 – 5.5 V

OK

Replace ignition coil with igniter.

NG


Check and replace ECM (See page [IN-41](#)).

4 Check for open and short in harness and connector in IGT signal circuit between ECM and ignition coil with igniter (See page [IN-41](#)).

NG

Repair or replace harness or connector.

OK

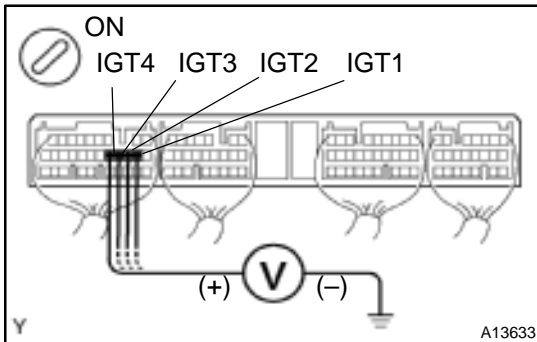5 Check voltage between terminals IGT1 – 4 of ECM connector and body ground.**PREPARATION:**


Remove the ECM with connector still connected (See page [SF-62](#)).

CHECK:

Measure voltage between terminals IGT1 – 4 of the ECM connector and body ground when engine is cranked.

OK:

Voltage: More than 0.1 V and less than 4.5 V

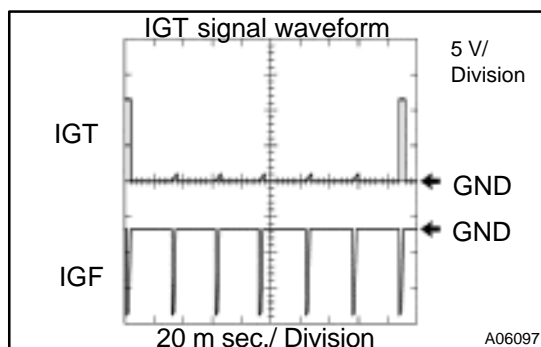**Reference: INSPECTION USING OSCILLOSCOPE**

During cranking or idling, check waveform between terminals IGT1 – 4 and E1 of the ECM connector.


HINT:

Correct waveform appears as shown, with rectangle waves.

NG

Check and replace ECM (See page [IN-41](#)).

OK

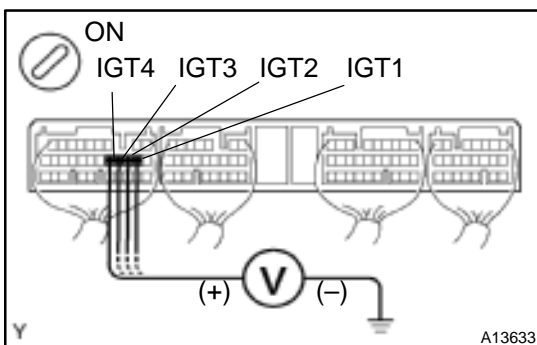6 Disconnect ignition coil with igniter connector and check voltage between terminals IGT1 – 4 of ECM connector and body ground.**PREPARATION:**

(a) Remove the ECM with connector still connected (See page [SF-62](#)).

(b) Disconnect the ignition coil with igniter connector.

CHECK:

Measure voltage between terminals IGT1 – 4 of the ECM connector and body ground when engine is cranked.

OK:

Voltage: More than 0.1 V and less than 4.5 V


NG

Check and replace ECM (See page [IN-41](#)).

OK

7

Check ignition coil with igniter power source circuit.

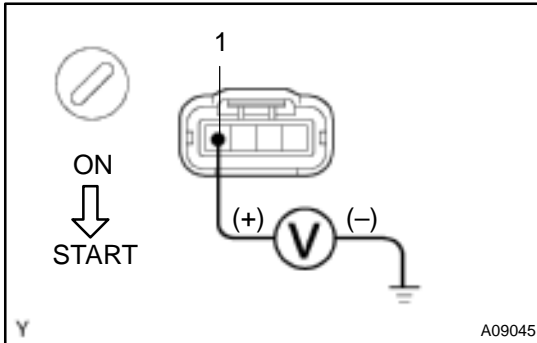**PREPARATION:**

Disconnect the ignition coil with igniter connector.

CHECK:

Measure voltage between terminal 1 of ignition coil with igniter connector and body ground, when ignition switch is turned to "ON" and "START" position.

OK:

Voltage: 9 – 14 V

NG

Repair ignition coil with igniter power source-circuit.

OK

8

Check for open and short in harness and connector between ignition switch and ignition coil with igniter (See page [IN-41](#)).

NG

Repair or replace harness or connector.

OK

9

Check EFI main relay (Marking: EFI) (See page [SF-37](#)).

NG

Replace EFI main relay (marking: EFI).

OK

Replace ignition coil with igniter.

DTC	P1349	VVT System Malfunction
------------	--------------	-------------------------------


CIRCUIT DESCRIPTION

VVT system controls the intake valve timing to proper timing in response to driving condition.

ECM controls OCV (Oil Control Valve) to make the intake valve timing properly, and, oil pressure controlled with OCV is supplied to the VVT controller, and then, VVT controller changes relative position between the camshaft and the crankshaft.

DTC No.	DTC Detecting Condition	Trouble Area
P1349	Condition (a) or (b) continues for after the engine is warmed up and engine speed at 400 – 4,000 rpm : (a) Valve timing does not change from of current valve timing (b) Current valve timing is fixed.	<ul style="list-style-type: none"> • Valve timing • Oil control valve • VVT controller assembly • ECM

WIRING DIAGRAM

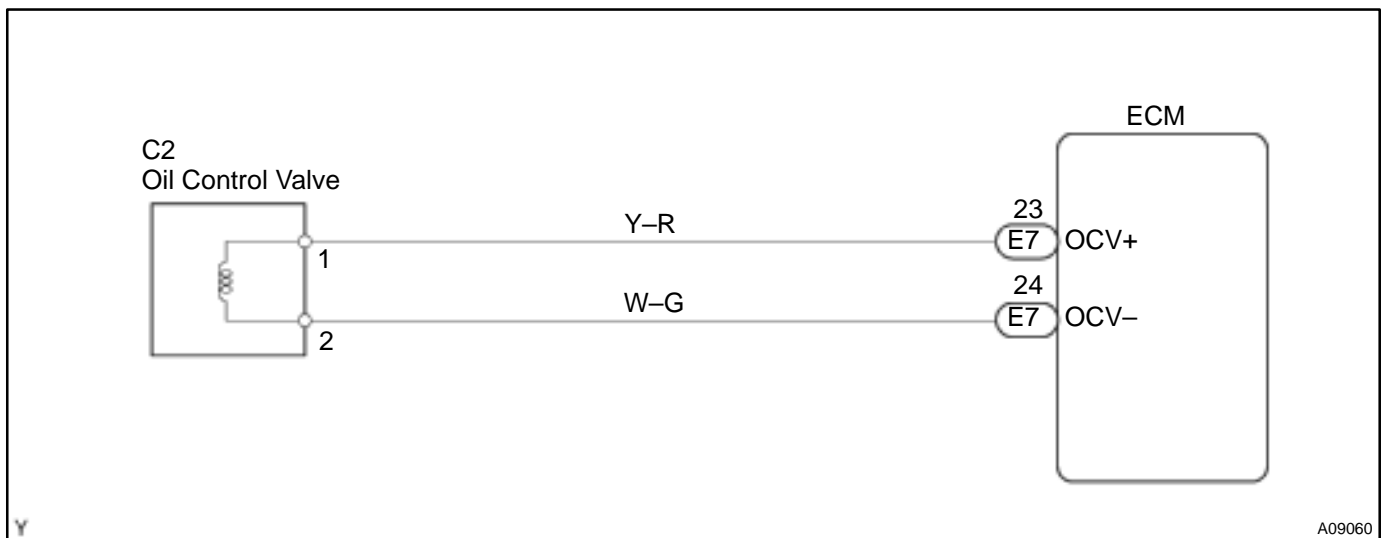

INSPECTION PROCEDURE

HINT:

Read freeze frame data using TOYOTA hand-held tester or OBD II scan tool. Because freeze frame records the engine conditions when the malfunction is detected, when troubleshooting it is useful for determining whether the vehicle was running or stopped, the engine warmed up or not, the air-fuel ratio lean or rich, etc. at the time of the malfunction.

TOYOTA hand-held tester

1	Check valve timing (See page EM-21).
----------	---

NG

Repair valve timing.

OK

2 Check operation of OCV.

PREPARATION:

- Start the engine and warmed it up.
- Connect the TOYOTA hand-held tester and select VVT from ACTIVE TEST menu.

CHECK:

Check the engine speed when operate the OCV by the TOYOTA hand-held tester.

OK:

VVT system OFF to ON (OCV OFF to ON):

Engine speed increases.

VVT system ON to OFF (OCV ON to OFF):

Engine is stalled.

HINT:

The change of engine speed lasts only few seconds.

OK


VVT system is OK.*

*: DTC P1349 is also output after the foreign object is caught in some part of the system in the engine oil and the system returns to normal in a short time. As ECM controls so that foreign objects are ejected, there is no problem about VVT. There is also no problem since the oil filter should get the foreign object in the engine oil.

NG

3 Check voltage between terminals OCV+ and OCV– of ECM connector.

OCV Signal Waveform

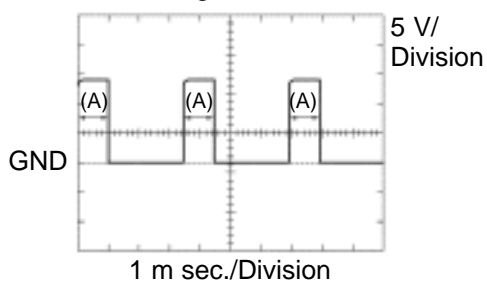

Reference: INSPECTION USING OSCILLOSCOPE

Turn the ignition switch ON, check waveform between terminals OCV+ and OCV– of the ECM connector.

HINT:

- The correct waveform is as shown.
- The waveform frequency (A) is lengthened as the engine speed becomes higher.

NG

Check and replace ECM (See page [IN-41](#)).

OK

4 Check VVT controller assembly (See page [EM-33](#)).

NG

Replace VVT controller assembly, and then go to step 5.

OK

5 Check oil control valve (See page [SF-35](#)).

NG

Replace oil control valve, and then go to step 6.

OK

6 Check blockage of oil control valve, oil check valve and oil pipe No.1.

NG

Repair or replace.

OK

7 Check whether or not DTC P1349 is stored.

PREPARATION:

- (a) Clear the DTC (See page [DI-3](#)).
- (b) Perform simulation test.

CHECK:

Check whether or not DTC P1349 is stored (See page [DI-3](#)).

OK:

DTC P1349 is not stored

OK

VVT system is OK.*

*: DTC P1349 is also output after the foreign object is caught in some part of the system in the engine oil and the system returns to normal in a short time. As ECM controls so that foreign objects are ejected, there is no problem about VVT. There is also no problem since the oil filter should get the foreign object in the engine oil.

NG

Replace ECM.


OBD II scan tool (excluding TOYOTA hand-held tester)1 Check valve timing (See page [EM-21](#)).

NG

Repair valve timing.

OK

2 Check operation of OCV.

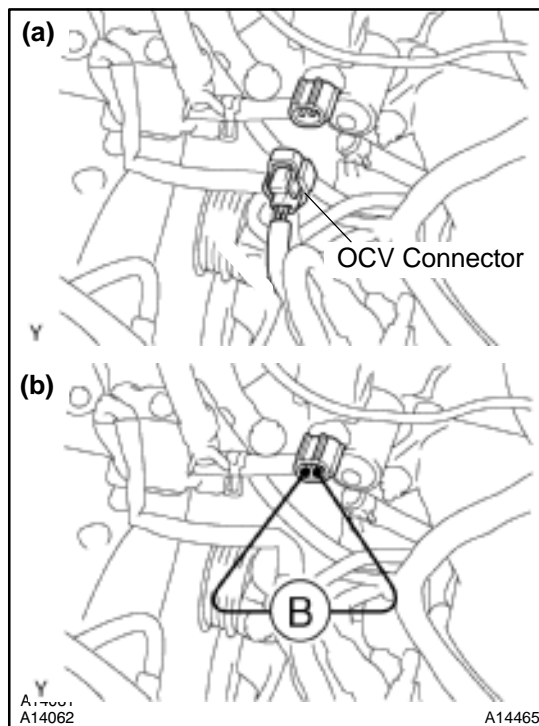**PREPARATION:**

Start the engine.

CHECK:

- (a) Check the engine speed when disconnect the OCV connector.
- (b) Check the engine speed when apply battery positive voltage between terminals of OCV.

RESULT:


Result	Check (a)	Check (b)
1	Normal engine speed	Rough idle or engine stall
2	Except 1	

2

Go to step 4.

1

3 Check voltage between terminals OCV+ and OCV– of ECM connector.

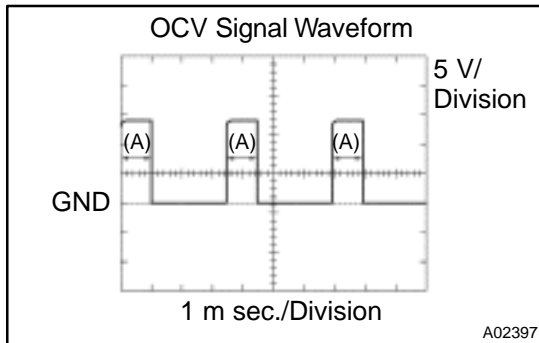

Reference: INSPECTION USING OSCILLOSCOPE

Turn the ignition switch ON, check waveform between terminals OCV+ and OCV– of the ECM connector.

HINT:

- The correct waveform is as shown.
- The waveform frequency (A) is lengthened as the engine speed becomes higher.

OK

VVT system is OK.*

*: DTC P1349 is also output after the foreign object is caught in some part of the system in the engine oil and the system returns to normal in a short time. As ECM controls so that foreign objects are ejected, there is no problem about VVT. There is also no problem since the oil filter should get the foreign object in the engine oil.

NG

Check and replace ECM (See page [IN-41](#)).

4 Check VVT controller assembly (See page [EM-33](#)).

NG

Replace VVT controller assembly, and then go to step 5.

OK

5 Check oil control valve (See page [SF-35](#)).

NG

Replace oil control valve, and then go to step 6.

OK

6	Check blockage of oil control valve, oil check valve and oil pipe No.1.
---	---

NG

Repair or replace.

OK

7	Check whether or not DTC P1349 is stored.
---	---

PREPARATION:

- (a) Clear the DTC (See page [DI-3](#)).
- (b) Perform simulation test.

CHECK:

Check whether or not DTC P1349 is stored (See page [DI-3](#)).

OK:

DTC P1349 is not stored

OK

VVT system is OK.*

*: DTC P1349 is also output after the foreign object is caught in some part of the system in the engine oil and the system returns to normal in a short time. As ECM controls so that foreign objects are ejected, there is no problem about VVT. There is also no problem since the oil filter should get the foreign object in the engine oil.

NG

Replace ECM.

DTC	P1430	Vacuum Sensor for HC Adsorber and Catalyst System Circuit Malfunction
------------	--------------	--

CIRCUIT DESCRIPTION


DTC No.	DTC Detecting Condition	Trouble Area
P1430	Open or short in vacuum sensor circuit	<ul style="list-style-type: none"> • Open or short in vacuum sensor circuit • Vacuum sensor for HC adsorber and catalyst system • ECM

HINT:

After confirming DTC P1430, use the hand-held tester to confirm the manifold absolute pressure from the CURRENT DATA.

Manifold Absolute Pressure (kPa)	Malfunction
Approx. 0	<ul style="list-style-type: none"> • HCLS circuit short
130 or more	<ul style="list-style-type: none"> • VC circuit open or short • HCLS circuit open • E2 circuit open

WIRING DIAGRAM

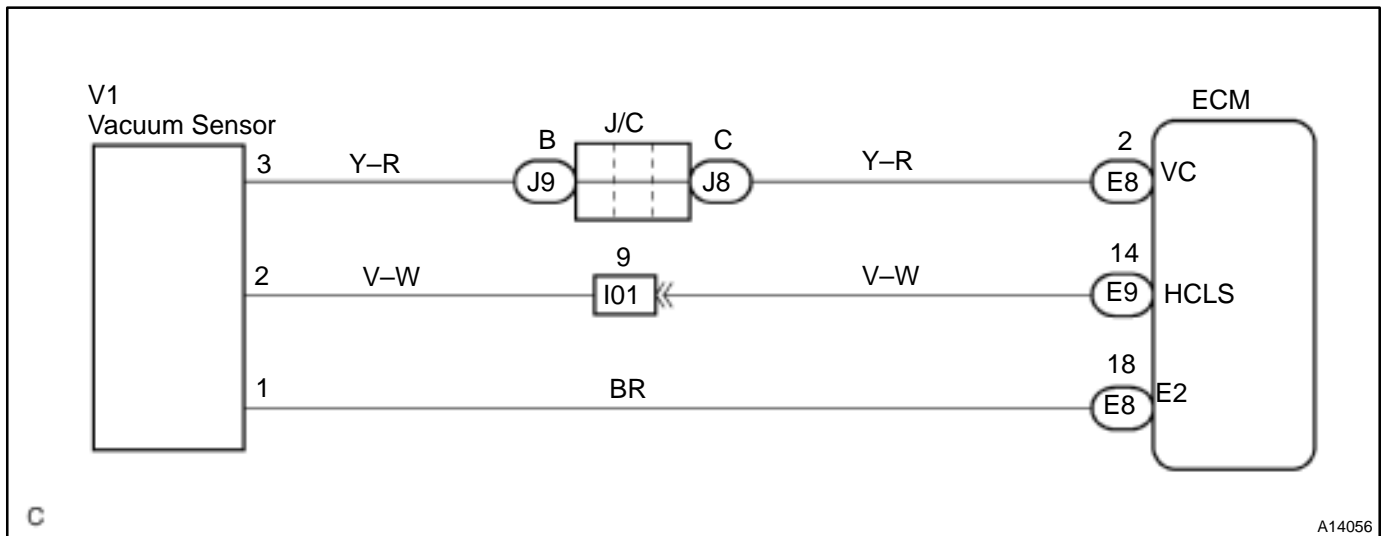

INSPECTION PROCEDURE

HINT:

- If DTCs P1430, P1431, P0110, P0115, P0120 and P0121 are output simultaneously, E2 (sensor ground) may be open.
- Read freeze frame data using hand-held tester. Because freeze frame records the engine conditions when the malfunction is detected. When troubleshooting it is useful for determining whether the vehicle was running or stopped, the engine was warmed up or not, the air-fuel ratio was lean or rich, etc. at the time of the malfunction.

When using hand-held tester:

1	Connect hand-held tester, and read value.
---	---

PREPARATION:

- (a) Connect the hand-held tester to the DLC3.
- (b) Turn the ignition switch ON and push the hand-held tester main switch ON.

CHECK:

Read the value of the manifold absolute pressure on the hand-held tester.

OK:


Same as atmospheric pressure.

OK

Check for intermittent problems
(See page [DI-3](#)).

NG

2	Check voltage between terminals VC and E2 of engine ECU Connector.
---	--

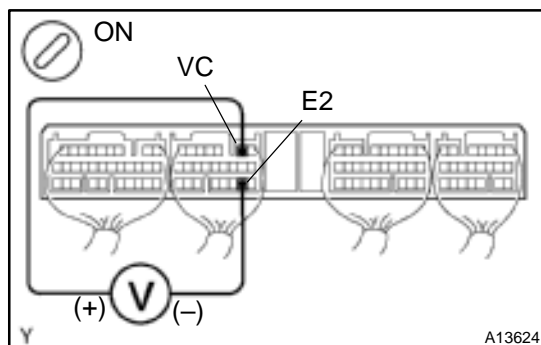**PREPARATION:**

- (a) Remove the ECM with connector still connected (See page [SF-62](#)).
- (b) Turn the ignition switch ON.

CHECK:

Measure the voltage between terminals VC and E2 of the engine ECU connector.

OK:


Voltage: 4.5 – 5.5 V

NG

Check and replace engine ECU
(See page [IN-41](#)).

OK

3 Check voltage between terminals HCLS and E2 of engine ECU connector.

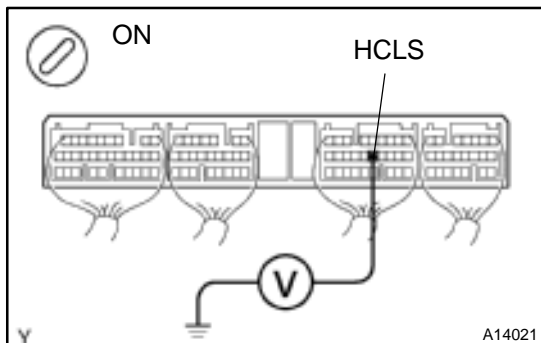

PREPARATION:

- (a) Remove the ECM with connector still connected (See page [SF-62](#)).
- (b) Turn the ignition switch ON.

CHECK:

Measure the voltage between terminals HCLS and E2 of the engine ECU connector.

OK:

Voltage: 3.3 – 3.9 V

OK

Check and replace engine ECU
(See page [IN-41](#)).

NG

4 Check for open and short in harness and connector between vacuum sensor and engine ECU.

NG


Repair and replace harness or connector.

OK

Replace vacuum sensor (See page [SF-50](#)).

When not using hand-held tester:

1 Check voltage between terminals VC and E2 of engine ECU connector.

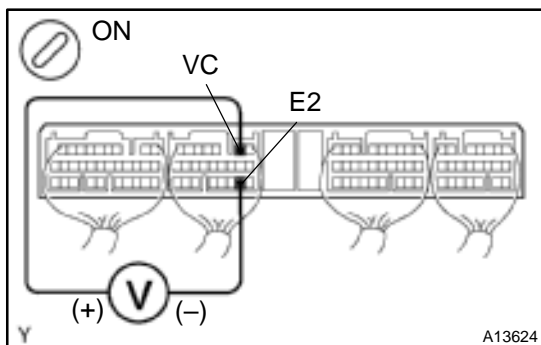

PREPARATION:

- (a) Remove the ECM with connector still connected (See page [SF-62](#)).
- (b) Turn the ignition switch ON.

CHECK:

Measure the voltage between terminals VC and E2 of the engine ECU connector.

OK:


Voltage: 4.5 – 5.5 V

NG

Check and replace engine ECU
(See page [IN-41](#)).

OK

2 Check voltage between terminals HCLS and E2 of engine ECU connector.

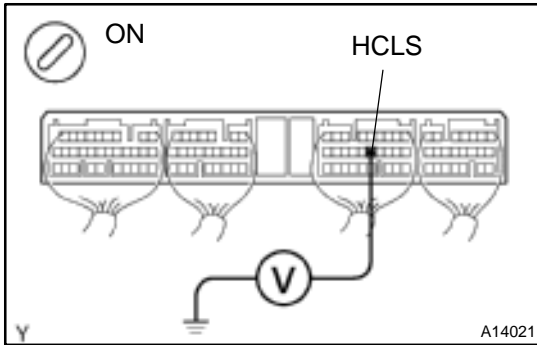**PREPARATION:**

- (a) Remove the ECM with connector still connected (See page [SF-62](#)).
- (b) Turn the ignition switch ON.

CHECK:

Measure the voltage between terminals HCLS and E2 of the engine ECU connector.

OK:

Voltage: 3.3 – 3.9 V

OK

**Check and replace engine ECU
(See page [IN-41](#)).**

NG

3 Check for open and short in harness and connector between engine ECU and vacuum sensor (See page [IN-41](#)).

NG

Repair or replace harness or connector.

OK

Replace vacuum sensor.

DTC	P1431	Vacuum Sensor for HC Adsorber and Catalyst System Circuit Range/Performance Problem
------------	--------------	--

CIRCUIT DESCRIPTION

Refer to DTC P1430 on page [DI-127](#).

DTC No.	DTC Detecting Condition	Trouble Area
P1431	Conditions (a), (b), (c) and (d) continue with more than 10 seconds: (2 trip detection logic) (b) PIM > 3.96 V (c) VSV for HC Adsorber and Catalyst System is ON (d) Engine speed is 1,000 rpm or more (e) THW \geq 0°C (32°F)	<ul style="list-style-type: none"> • Vacuum sensor for HC adsorber and catalyst system • Vacuum line
	Conditions (a), (b) and (c) continue with more than 10 second: (2 trip detection logic) (a) PIM < 1.2 V (b) Engine stopped (c) VSV for HC Adsorber and Catalyst System is OFF (d) THW \geq 0°C (32°F)	

INSPECTION PROCEDURE

HINT:

- If DTCs P1430, P1431, P0110, P0115, P0116, P0120, P0121 are output simultaneously, E2 (sensor ground) may be open.
- Read freeze frame data using hand-held tester. Because freeze frame records the engine conditions when the malfunction is detected. When troubleshooting it is useful for determining whether the vehicle was running or stopped, the engine was warmed up or not, the air-fuel ratio was lean or rich, etc. at the time of the malfunction.
- When a bypass valve has a trouble, it is possible that DTC P1341 will be detected ahead of DTC P1436, and P1437, so in case that P1431 even if they are not memorized.

1	Are there any other codes (besides DTC P1431) being output?
----------	--

YES

Go to relevant DTC chart.

NO

2	Check vacuum sensor for HC adsorber and catalyst system (See page SF-51).
---	--

NG

Replace vacuum sensor.

OK

Check vacuum line for vacuum sensor for blockage.

DTC	P1436	Bypass Valve Malfunction
------------	--------------	---------------------------------

CIRCUIT DESCRIPTION

Before the engine is started, the bypass valve remains open. When the engine is cold started, the ECM outputs a signal to the VSV (for HC adsorber and catalyst system), which open the passage between the intake manifold and the actuator, thus applying a vacuum to the actuator. As a result, the bypass valve closes. Immediately after the engine has started, the exhaust gases pass through the adsorber material in with HC becomes adsorbed and stored for a certain length of time (until the temperature of the front TWC rises). Thus, the release of HC into the atmosphere is prevented when the temperature of the TWC is low. After the TWC has warmed up, the VSV closes the passage between the intake manifold and the actuator, causing the bypass valve to open. Then, as the temperature of the rear TWC rises, the temperature of the adsorber material that surrounds it also rises, and the HC starts to desorb, and becomes cleaned by the TWC.

Furthermore, this system activates the VSV when decelerating and the HC adsorber has become the specified temperature, allowing the vacuum from the intake manifold to close the bypass valve in order to scavenge the HC that remains in the adsorber material.

DTC No.	DTC Detecting Condition	Trouble Area
P1436	With cold start when the water temperature and intake air temperature were -10°C (14°F) to 40°C (104°F), and when the water temperature has reached 45°C (113°F) or more and the engine load factor has become more than 30 %, the valve operation is not preformed normally.	<ul style="list-style-type: none"> • Vacuum line • Actuator • Front exhaust pipe

INSPECTION PROCEDURE

1	Check vacuum hose and tube between VSV and actuator for HC adsorber and catalyst system.
----------	---

CHECK:

Check that the vacuum hose and tube for clog and deformation.

NG

Repair or replace.

OK

2	Check actuator operation (See page EC-13).
----------	---

OK

Recheck after assembly.

NG

3	Check that dirt such as mud is deposited on lever and shaft of bypass valve.
	<div>YES</div> Remove dirt and check again.
NO	
4	Check that actuator's rod and bracket is deformed.
	<div>YES</div> Repair or replace actuator.
NO	
5	Check bypass valve operation (See page EC-13).
	<div>NG</div> Replace front exhaust pipe.
OK	
6	Check actuator operation (See page EC-13).
	<div>NG</div> Replace actuator.
OK	
Repair or replace front exhaust pipe.	

DTC	P1437	Vacuum Line Malfunction
------------	--------------	--------------------------------

CIRCUIT DESCRIPTION

Refer to DTC P1436 on page [DI-133](#).

DTC No.	DTC Detecting Condition	Trouble Area
P1437	With cold start when the water temperature and intake air temperature were – 10 °C (14 °F) to 40 °C (104 °F), and when the water temperature has reached 45 °C (113 °F) or more and the engine load factor has become more than 30 %, the negative pressure has abnormality.	<ul style="list-style-type: none"> • Vacuum line • VSV for HC adsorber and catalyst system • Vacuum sensor for HC adsorber and catalyst system • Check valve

INSPECTION PROCEDURE

TOYOTA hand-held tester:

1	Check vacuum hoses and tube between intake manifold and actuator.
----------	--

CHECK:

- Check that the vacuum hoses is connected correctly.
- Check the vacuum hose for looseness and disconnection.
- Check the vacuum hose and tube for cracks, holes and damage.
- Check the vacuum hose for clog.

NG

Repair or replace.

OK

2	Check for open and short in harness and connector between VSV (for HC adsorber and catalyst system) and ECM (See page IN-41).
----------	--

NG

Repair or replace harness or connector.

OK

3	Check VSV (for HC adsorber and catalyst system) (See page SF-47).
----------	--

NG

Replace VSV.

OK

4	Check vacuum stored in vacuum hose between check valve and actuator.
----------	---

PREPARATION:

- (a) Disconnect the vacuum hose from the pressure sensor for HC adsorber and catalyst system.
- (b) Connect the MITYVAC (Hand-held vacuum pump) to the vacuum hose.
- (c) Connect the TOYOTA hand-held tester to the DLC3.

CHECK:

- (a) VSV (for HC adsorber and catalyst system) is operate by TOYOTA hand-held tester.
- (b) Apply vacuum of 55 kPa (420 mmHg, 16.24 in.Hg).
- (c) Check that the vacuum after 30 sec.

OK:

The vacuum is 25 Kpa (188 mmHg, 7.38 in.Hg) or more.

OK

Check and replace vacuum hose between intake manifold and actuator.

NG

5	Check check valve.
----------	---------------------------

NG

Replace check valve.

OK

6	Check stored vacuum of VSV.
----------	------------------------------------

NG

Replace VSV (for HC adsorber and catalyst system).

OK

7	Check stored vacuum of actuator(See page EC-13).
----------	---

NG

Replace actuator.

OK

Check and replace vacuum hose and tube between check valve and actuator.

OBD II scan tool (excluding TOYOTA hand-held tester):

1 Check vacuum hoses and tube between intake manifold and actuator.

CHECK:

- (a) Check that the vacuum hoses is connected correctly.
- (b) Check the vacuum hose for looseness and disconnection.
- (c) Check the vacuum hose and tube for cracks, holes and damage.
- (d) Check the vacuum hose and tube for clog.

NG

Repair or replace.

OK

2 Check for open and short in harness and connector between VSV (for HC adsorber and catalyst system) and ECM (See page [IN-41](#)).

NG

Repair or replace harness or connector.

OK


3 Check VSV (for HC adsorber and catalyst system) (See page [SF-47](#)).

NG

Replace VSV.

OK

4 Check vacuum stored in vacuum hose between check valve and actuator.

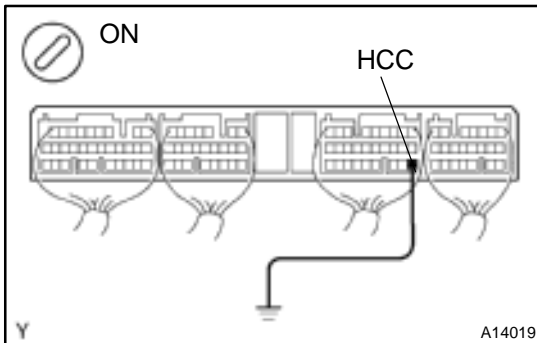

PREPARATION:

- Remove the ECM with connector still connected (See page [SF-62](#)).
- Disconnect the vacuum hose from the vacuum sensor (for HC adsorber and catalyst system).
- Connect the MITYVAC (Hand-held vacuum pump) to the vacuum hose.

CHECK:

- Connect the terminal HCC of the ECM and body ground.
- Apply a vacuum of 55 kPa (420 mmHg, 16.24 in.Hg).
- Check that the vacuum after 30 sec.

OK:

The vacuum is 25 Kpa (188 mmHg, 7.38 in.Hg) or more.

OK

Check and replace vacuum hose between check valve and actuator.

NG

5 Check check valve.

NG

Replace check valve.

OK

6 Check stored vacuum of VSV (See page [SF-47](#)).

NG

Replace VSV for HC adsorber and catalyst system.

OK

7	Check stored vacuum of actuator (See page EC-13).
---	--

NG**Replace actuator.****OK**


**Check and replace vacuum hose and tube
between check valve and actuator.**

DTC	P1525	Resolver Vehicle Malfunction
------------	--------------	-------------------------------------

CIRCUIT DESCRIPTION


DTC No.	DTC Detecting Condition	Trouble Area
P1525	When signals of vehicle speed is not input from the resolver for 16 sec. or more while running at a speed of 20 km/h or more	<ul style="list-style-type: none">• ECM• HV ECU• Wire harness

WIRING DIAGRAM

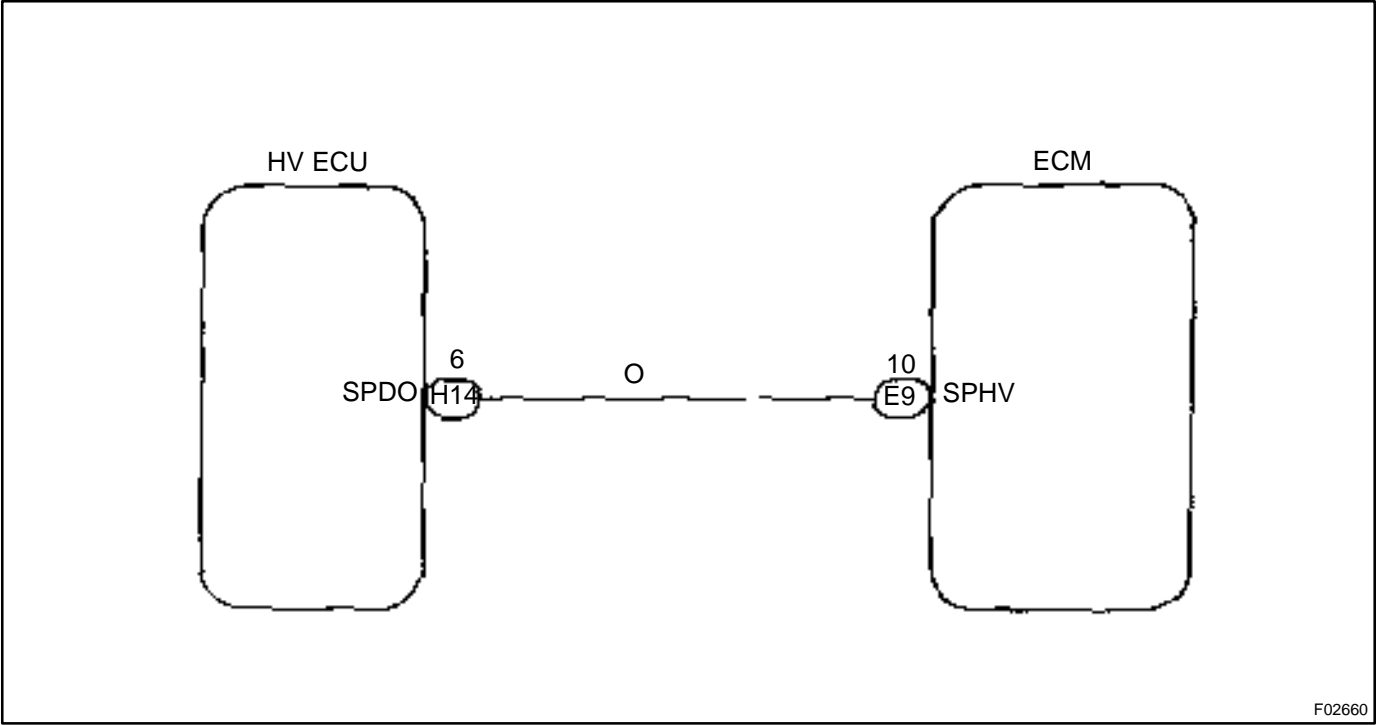

INSPECTION PROCEDURE

1 Check voltage between terminal SPHV of ECM and body ground.

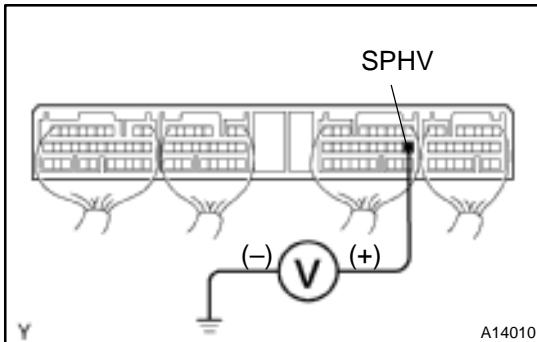**PREPARATION:**


- (a) Remove the ECM with connector still connected (See page [SF-62](#)).
- (b) Drive the vehicle at 20 km/h (12 mph).

CHECK:

Measure the voltage between SPHV of engine ECU connector and body ground.

OK:

Voltage is generated intermittently.

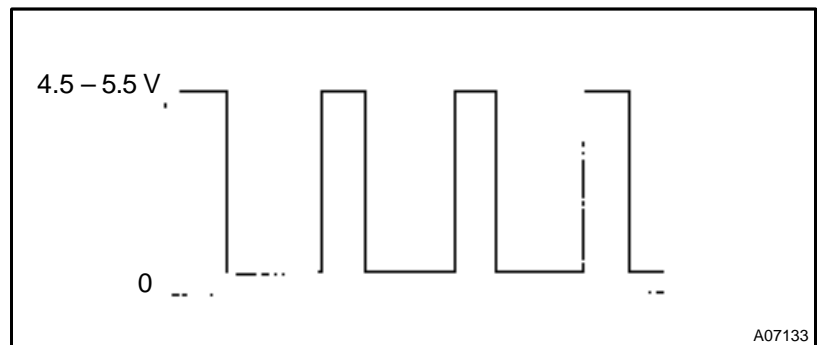

OK

Replace engine ECU.

NG

2 Check for open and short in harness and connector between SPHV of ECM and SPDO of HV ECU.

NG

Repair or replace harness or connector.

OK

Replace HV ECU.

DTC	P1600	ECM BATT Malfunction
------------	--------------	-----------------------------

CIRCUIT DESCRIPTION


Battery positive voltage is supplied to terminal BATT of the ECM even when the ignition switch is OFF for use by the DTC memory and air–fuel ratio adaptive control value memory, etc.

DTC No.	DTC Detecting Condition	Trouble Area
P1600	Open in back up power source circuit	<ul style="list-style-type: none"> • Open in back up power source circuit • ECM

HINT:

If DTC P1600 appear, the ECM does not store another DTC.

WIRING DIAGRAM

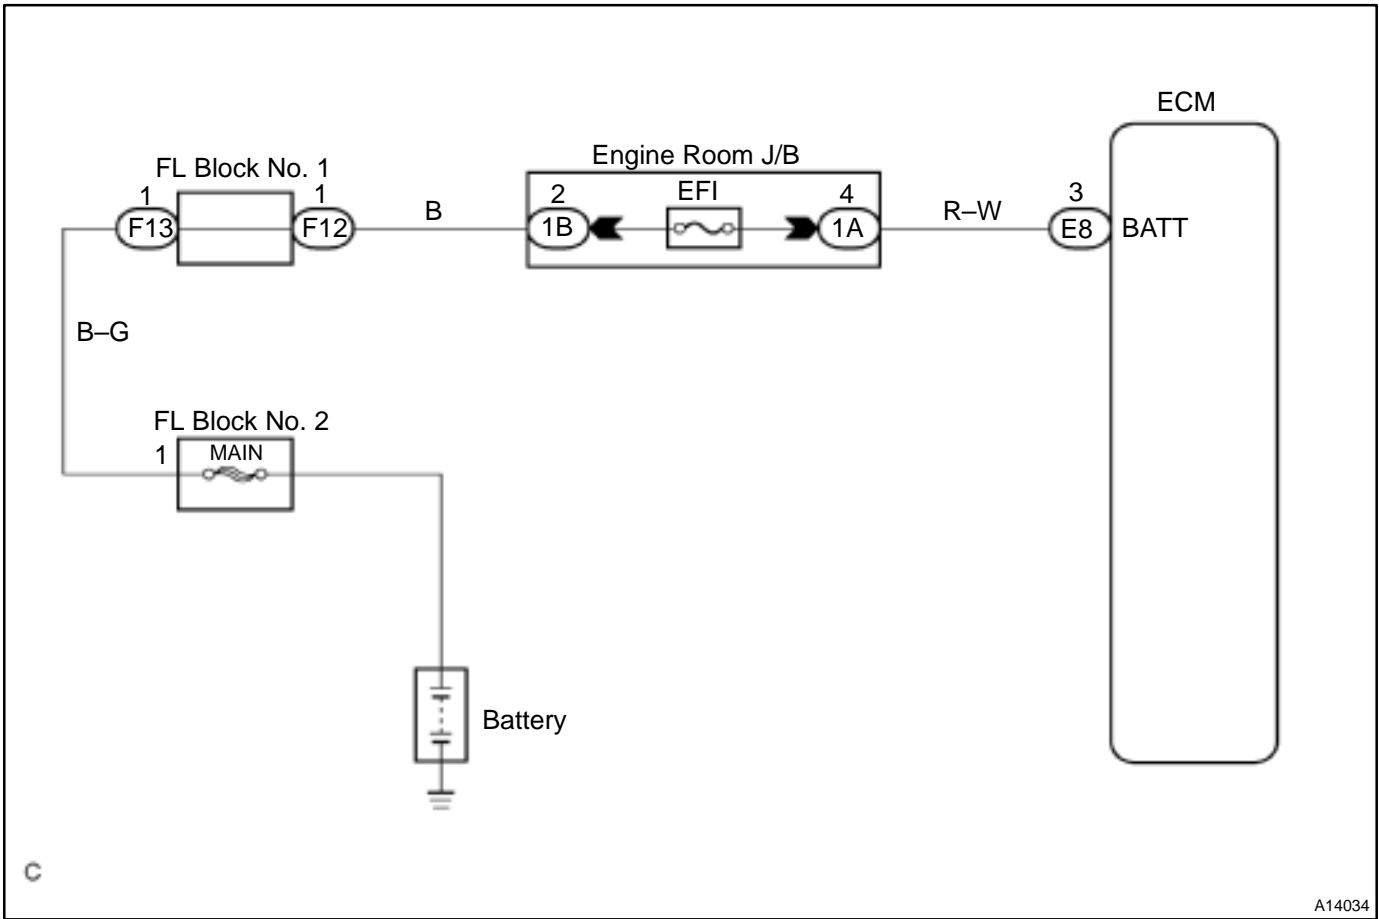


INSPECTION PROCEDURE

HINT:

Read freeze frame data using TOYOTA hand–held tester or OBD II scan tool. Because freeze frame records the engine conditions when the malfunction is detected, when troubleshooting it is useful for determining whether the vehicle was running or stopped, the engine warmed up or not, the air–fuel ratio lean or rich, etc. at the time of the malfunction.

1 Check voltage between terminal BATT of ECM connector and body ground.

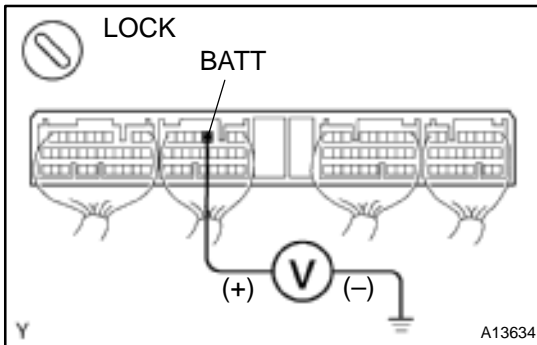

PREPARATION:

Remove the ECM with connector still connected (See page [SF-62](#)).

CHECK:

Measure voltage between terminal BATT of the ECM connector and body ground.

OK:


Voltage: 9 – 14 V

OK

Check and replace ECM (See page [IN-41](#)).

NG

2 Check EFI fuse.

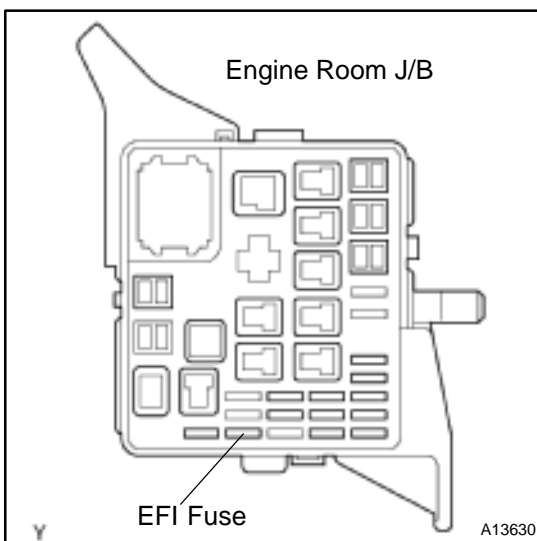

PREPARATION:

Remove the EFI fuse from the engine room J/B.

CHECK:

Check continuity of EFI fuse.

OK:

Continuity

NG

Check for short in all the harness and components connected to EFI fuse.

OK


Check and repair harness or connector between battery and EFI fuse and ECM (See page [IN-41](#)).

DTC	P1636	HV ECU Malfunction
-----	-------	--------------------

CIRCUIT DESCRIPTION

DTC No.	DTC Detecting Condition	Trouble Area
P1636	When communication with HV ECU is interrupted for 1.5 sec. or more	• Wire harness • HV ECU • ECM


WIRING DIAGRAM

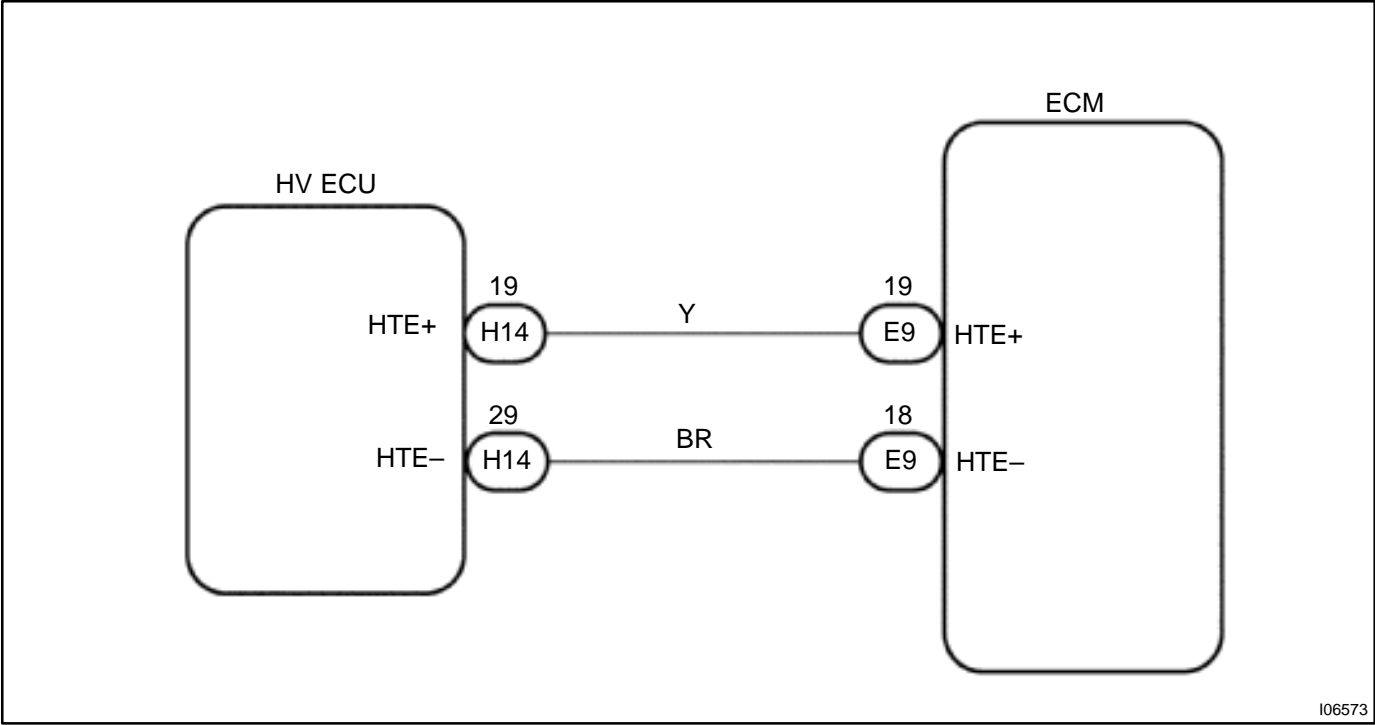

cardiagn.com

INSPECTION PROCEDURE


1	Check voltage between terminal HTE+ and HTE– of ECM.
---	---

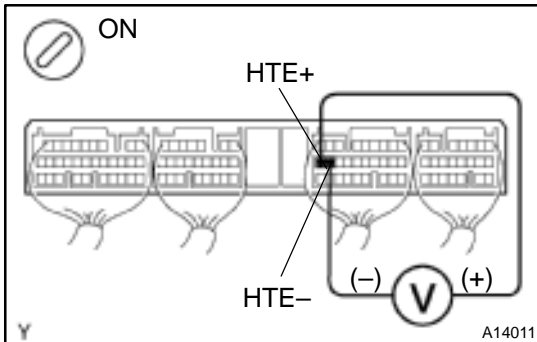**PREPARATION:**

- (a) Remove the ECM with connector still connected (See page [SF-62](#)).
- (b) Turn the ignition switch ON.

CHECK:

Measure voltage between terminal HTE+ and HTE– of the ECM.

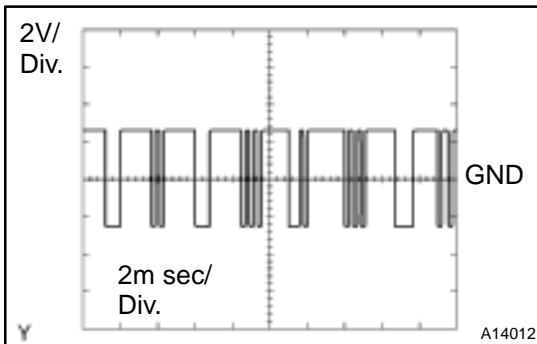OK:**Reference: INSPECTION USING OSCILLOSCOPE**

Turn the ignition switch ON, check waveform between terminals HTE+ and HTE– of the ECM.

HINT:

The correct waveform is as shown.

OK

Replace ECM.

NG

2	Check for open and short in harness and connector between HTE+ and HTE– of ECM and HTE+ and HTE– of HV ECU (See page IN-41).
---	---

OK

Replace HV ECU.

NG


Repair or replace harness or connector.

DTC	P1637	ESTP Signal Malfunction
-----	-------	-------------------------

CIRCUIT DESCRIPTION


DTC No.	DTC Detecting Condition	Trouble Area
P1637	When signal of ESTP is not input from the HV ECU for 2 sec. or more	<ul style="list-style-type: none">• Wire harness• HV ECU• ECM

WIRING DIAGRAM

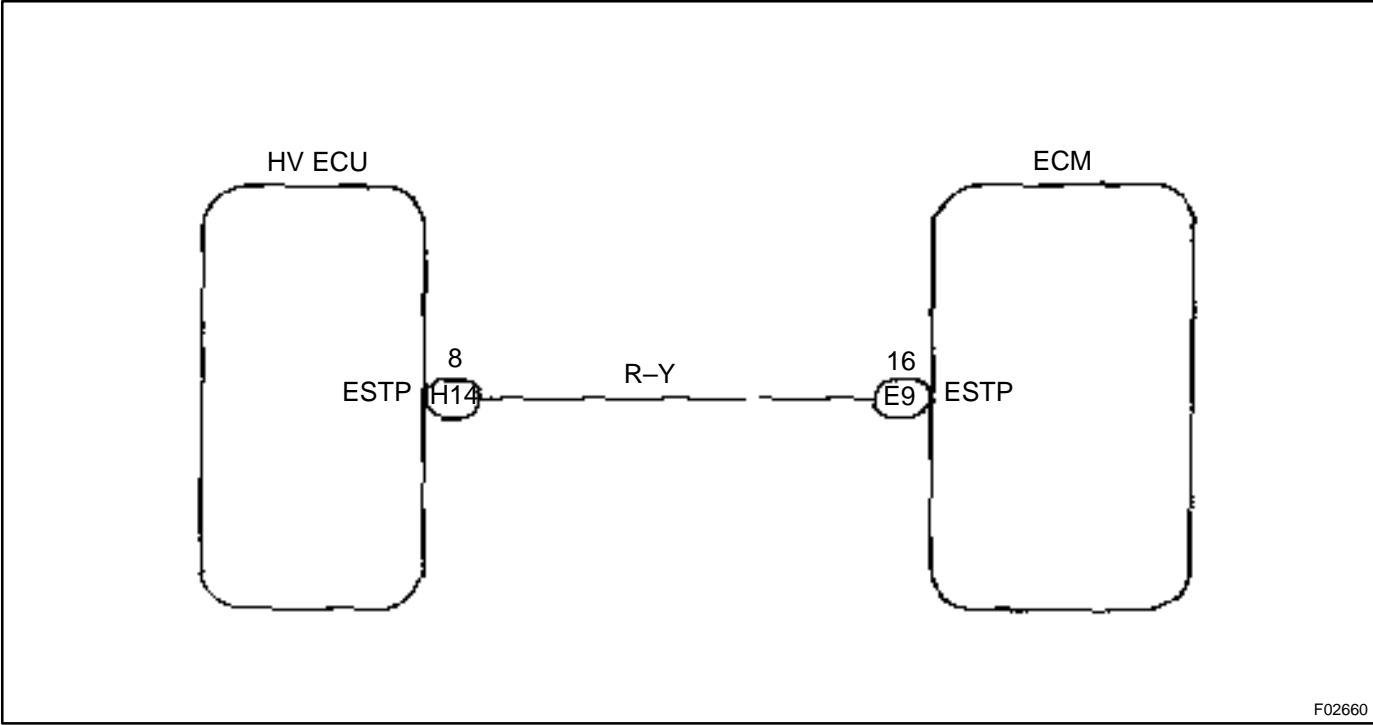

INSPECTION PROCEDURE

- | | |
|---|---|
| 1 | Check voltage between terminal ESTP of ECM and body ground. |
|---|---|

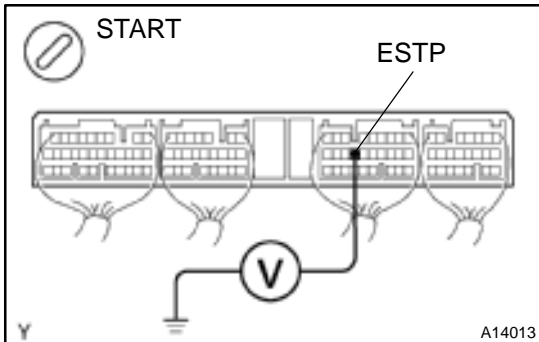**PREPARATION:**

- (a) Remove the ECM with connector still connected (See page [SF-62](#)).
- (b) Start the engine.

CHECK:

Measure voltage between terminal ESTP of ECM and body ground.

OK:

Voltage: 9 – 14 V

OK

Replace ECM.

NG

- | | |
|---|---|
| 2 | Check for open and short in harness and connector between ESTP of ECM and HV ECU (See page IN-41). |
|---|---|

OK

Replace HV ECU.

NG

Repair or replace harness or connector.

DTC	P1656	OCV Circuit Malfunction
------------	--------------	--------------------------------

CIRCUIT DESCRIPTION

Refer to DTC P1349 on page [DI-121](#).

DTC No.	DTC Detecting Condition	Trouble Area
P1656 P1663	Open or short in oil control valve circuit	<ul style="list-style-type: none"> • Open or short in oil control valve circuit • Oil control valve • ECM

WIRING DIAGRAM

Refer to DTC P1349 on page [DI-121](#).

INSPECTION PROCEDURE

HINT:

Read freeze frame data using TOYOTA hand-held tester or OBD II scan tool. Because freeze frame records the engine conditions when the malfunction is detected, when troubleshooting it is useful for determining whether the vehicle was running or stopped, the engine warmed up or not, the air-fuel ratio lean or rich, etc. at the time of the malfunction.

TOYOTA hand-held tester

1	Check OCV circuit.
----------	---------------------------

PREPARATION:

- Start the engine and warmed it up.
- Connect the TOYOTA hand-held tester and select VVT from ACTIVE TEST menu.

CHECK:

Check the engine speed when operate the OCV by the TOYOTA hand-held tester.

OK:

VVT system is OFF (OCV is OFF): Normal engine speed


VVT system is ON (OCV is ON): Rough idle or engine stalled

OK

**Check for intermittent problems
(See page [DI-3](#)).**

NG

2 Check operation of OCV.

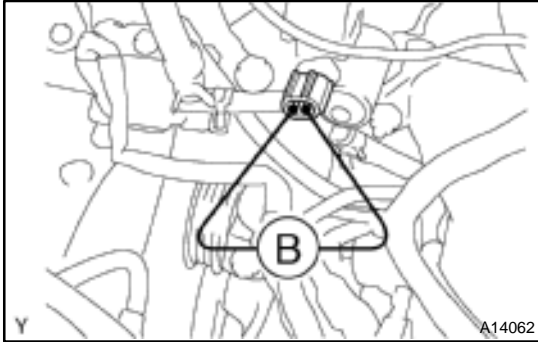

PREPARATION:

- (a) Start the engine and warmed it up.
- (b) Disconnect the OCV connector.
- (c) Apply battery positive voltage between terminals of the OCV.

CHECK:

Check the engine speed.

OK:

Rough idle or engine stalled.

NG

Replace OCV.

OK

3 Check voltage between terminals OCV+ and OCV– of ECM connector (See page [DI-121](#)).

NG

Check and replace ECM (See page [IN-41](#)).

OK


4 Check for open and short in harness and connector between OCV and ECM (See page [IN-41](#)).

NG

Repair or replace.

OK

Check for intermitent problems
(See page [DI-3](#)).

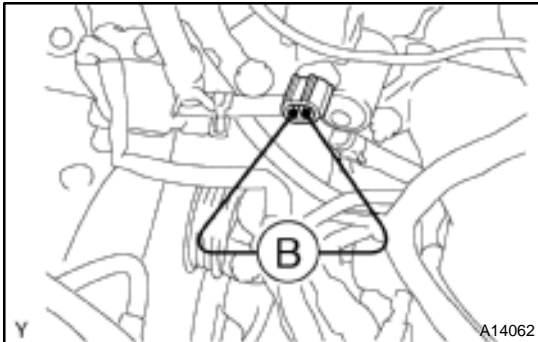OBD II scan tool (excluding TOYOTA hand-held tester)**1 Check operation of OCV.****PREPARATION:**

- (a) Start the engine and warmed it up.
- (b) Disconnect the OCV connector.
- (c) Apply battery positive voltage between terminals of the OCV.

CHECK:

Check the engine speed.

OK:

Rough idle or engine stalled

NG

Replace OCV.

OK

**2 Check voltage between terminals OCV+ and OCV– of ECM connector
(See page [DI-121](#)).**

NG

Check and replace ECM (See page [IN-41](#)).

OK

**3 Check for open and short in harness and connector between OCV and ECM
(See page [IN-41](#)).**

NG

Repair or replace.

OK

**Check for intermittent problems
(See page [DI-3](#)).**

DTC	P3190	Poor Engine Power
------------	--------------	--------------------------

DTC	P3191	Engine dose not Start
------------	--------------	------------------------------

CIRCUIT DESCRIPTION

From the HV ECU, the ECM receives data such as power output required for the engine (required output), estimated torque produced by the engine (estimated torque), engine RPM of control target (target RPM), whether the engine is in start mode or not. Then, based on the required output and target RPM, the ECM calculates a target torque that is to be produced by the engine and compares it with the estimated torque. If the estimated torque is very low compared with the target torque, or the engine start mode continues at the engine RPM or for the duration calculated by water temperature, an abnormal condition is detected.

DTC No.	DTC Detecting Condition	Trouble Area
P3190	Following condition (a) to (e) continues at a fixed engine RPM or a fixed length of time: (a) Communication with HV ECU is normal. (b) Engine RPM is a fixed value or more. (c) Engine star mode is not active. (d) Target torque is a fixed value or more. (e) Ratio of estimated torque against target torque is less than 20 %.	<ul style="list-style-type: none"> • Air induction system • Throttle body • Fuel pressure • Engine • Air flow meter • Out of fuel
P3191	Following condition (a) to (c) continues at a fixed engine RPM or for a fixed length of time: (a) Vommunication with HV ECU is normal. (b) Engine RPM is a fixed value or more. (c) Engine start mode is active.	<ul style="list-style-type: none"> • Water temp. sensor • Crankshaft position sensor • Camshaft position sensor • ECM

WIRING DIAGRAM

Refer to DTC P1636 on page [DI-146](#).

INSPECTION PROCEDURE

1	Are there any other codes begin output?
----------	--

YES

Go to relevant DTC chart.

NO

2 Check remaining amount of fuel.

NG

Supply fuel.

OK

3 Check air induction system (See page [SF-1](#)).

NG

Repair or replace.

OK

4 Check for unusual noise or vibration when starting engine or racing.

NG

Repair or replace.

OK

5 Check fuel pressure (See page [SF-6](#)).

NG

Check and repair fuel pump and fuel pipe line
(See page [SF-19](#)).

OK

6 Check air flow meter (See page [SF-22](#)) and engine coolant temp. sensor
(See page [SF-49](#)).

NG

Repair or replace.

OK

7	Check crankshaft position sensor and camshaft position sensor (See page IG-1).
---	---

NG

Repair or replace.

OK

8	Check throttle control motor and throttle position sensor (See page SF-24).
---	--

NG

Repair or replace.


OK

Check and replace ECM (See page [IN-41](#)).

cardiagn.com

INSPECTION PROCEDURE

1	Check voltage between terminals +B and E1 or ECM connectors.
---	---

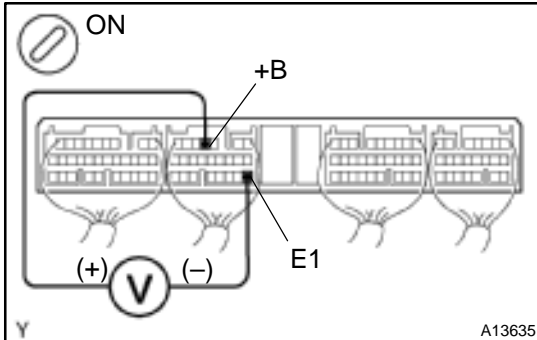**PREPARATION:**

- (a) Remove the ECM with connector still connected (See page [SF-62](#)).
- (b) Turn the ignition switch ON.

CHECK:

Measure the voltage between terminals +B and E1 of the ECM connectors.

OK:

Voltage: 9 – 14 V

OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-22](#)).

NG


2	Check for open in harness and connector between terminal E1 of ECM connector and body ground (See page IN-41).
---	---

NG

Repair or replace harness or connector.

OK

3	Check voltage between terminal IGSW of ECM connector and body ground.
---	--

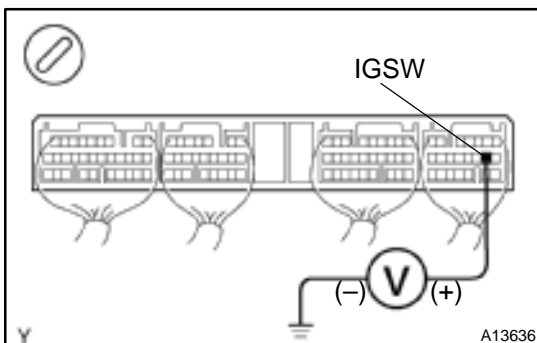**PREPARATION:**

- (a) Remove the ECM with connector still connected (See page [SF-62](#)).
- (b) Turn the ignition switch ON.

CHECK:

Measure the voltage between terminal IGSW of the ECM connector and body ground.


OK:

Voltage: 9 – 14 V

OK

Go to step 6.

NG

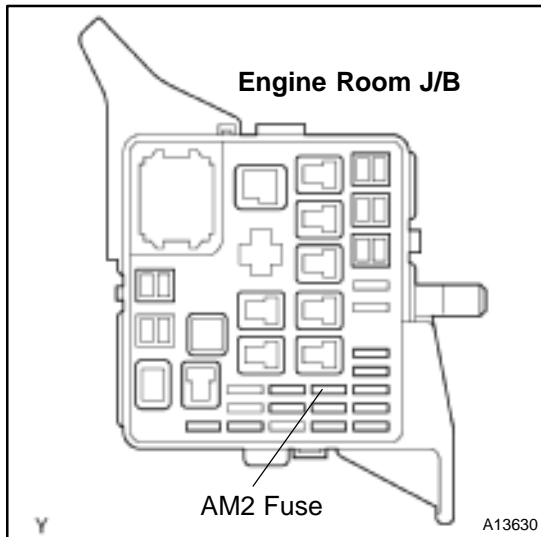4 Check AM2 fuse.**PREPARATION:**

Remove the AM2 fuse from the engine room J/B.

CHECK:

Check the continuity of the AM2 fuse.

OK:

Continuity

NG

Check for short in all harness and components connected to AM2 fuse (See attached wiring diagram).

OK

5 Check ignition switch (See page [BE-16](#)).


NG

Replace ignition switch.

OK

Check and repair harness and connector between battery and ignition switch, and ignition switch and ECM.

6 Check voltage between terminal MREL of ECM connector and body ground.

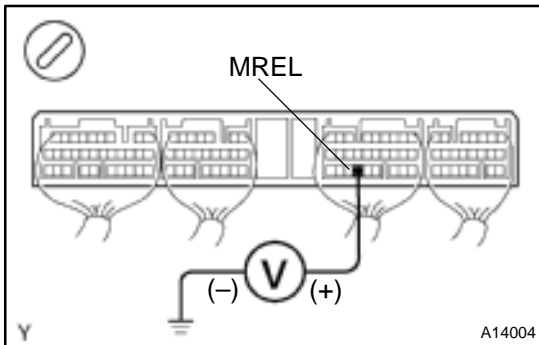

PREPARATION:

- (a) Remove the ECM with connector still connected (See page [SF-62](#)).
- (b) Turn the ignition switch ON.

CHECK:

Measure the voltage between terminal MREL of the ECM connector and body ground.

OK:


Voltage: 9 – 14 V

NG

Check and replace ECM (See page [IN-41](#)).

OK

7 Check EFI1 fuse.

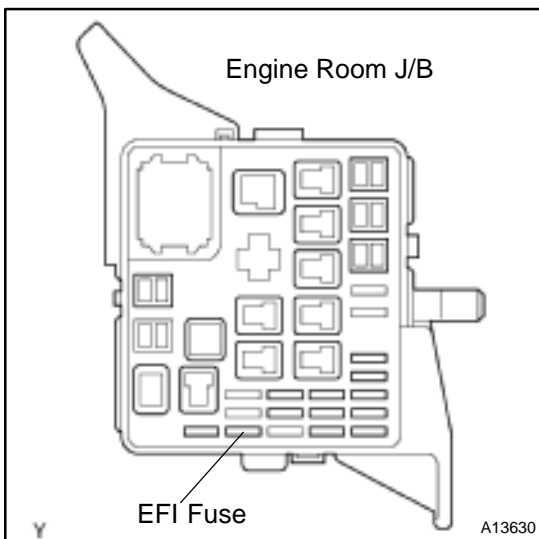

PREPARATION:

Remove the EFI fuse from the engine room J/B.

CHECK:

Check continuity of EFI fuse.

OK:

Continuity

NG

Check for short in all harness and components connected to EFI1 fuse (See attached wiring diagram).

OK

8 Check EFI main relay (Marking: EFI MAIN) (See page [SF-37](#)).

NG

Replace EFI main relay.

OK

9	Check for open and short in harness and connector between terminal MREL of ECM and body ground (See page IN-41).
---	---

NG**Repair or replace harness or connector.****OK****Check and repair harness or connector between EFI1 fuse and battery.**

Fuel Pump Control Circuit

CIRCUIT DESCRIPTION

When starting the engine with ignition switch:

HV ECU receives ST signal and decides to start the engine, and send the signal of the engine start prior signal to the engine ECU by the communication between the engine ECU and HV ECU.

Engine ECU receives that signal and turns ON the circuit opening relay slightly earlier, then turns the fuel pump.

When starting the engine in an intermittent operation:


With the cranking by MG1, NE signal comes in immediately, so the engine ECU receives the generation of NE signal and turns the fuel pump. (At this time, no reference of the communication from HV ECU)

When stopping the fuel pump:

When the signal to stop the engine comes in to the engine ECU from HV ECU from HV ECU side, the fuel pump stops.

At the time of the fuel cut operation such as deceleration by the engine brake, the fuel pump stops.

WIRING DIAGRAM

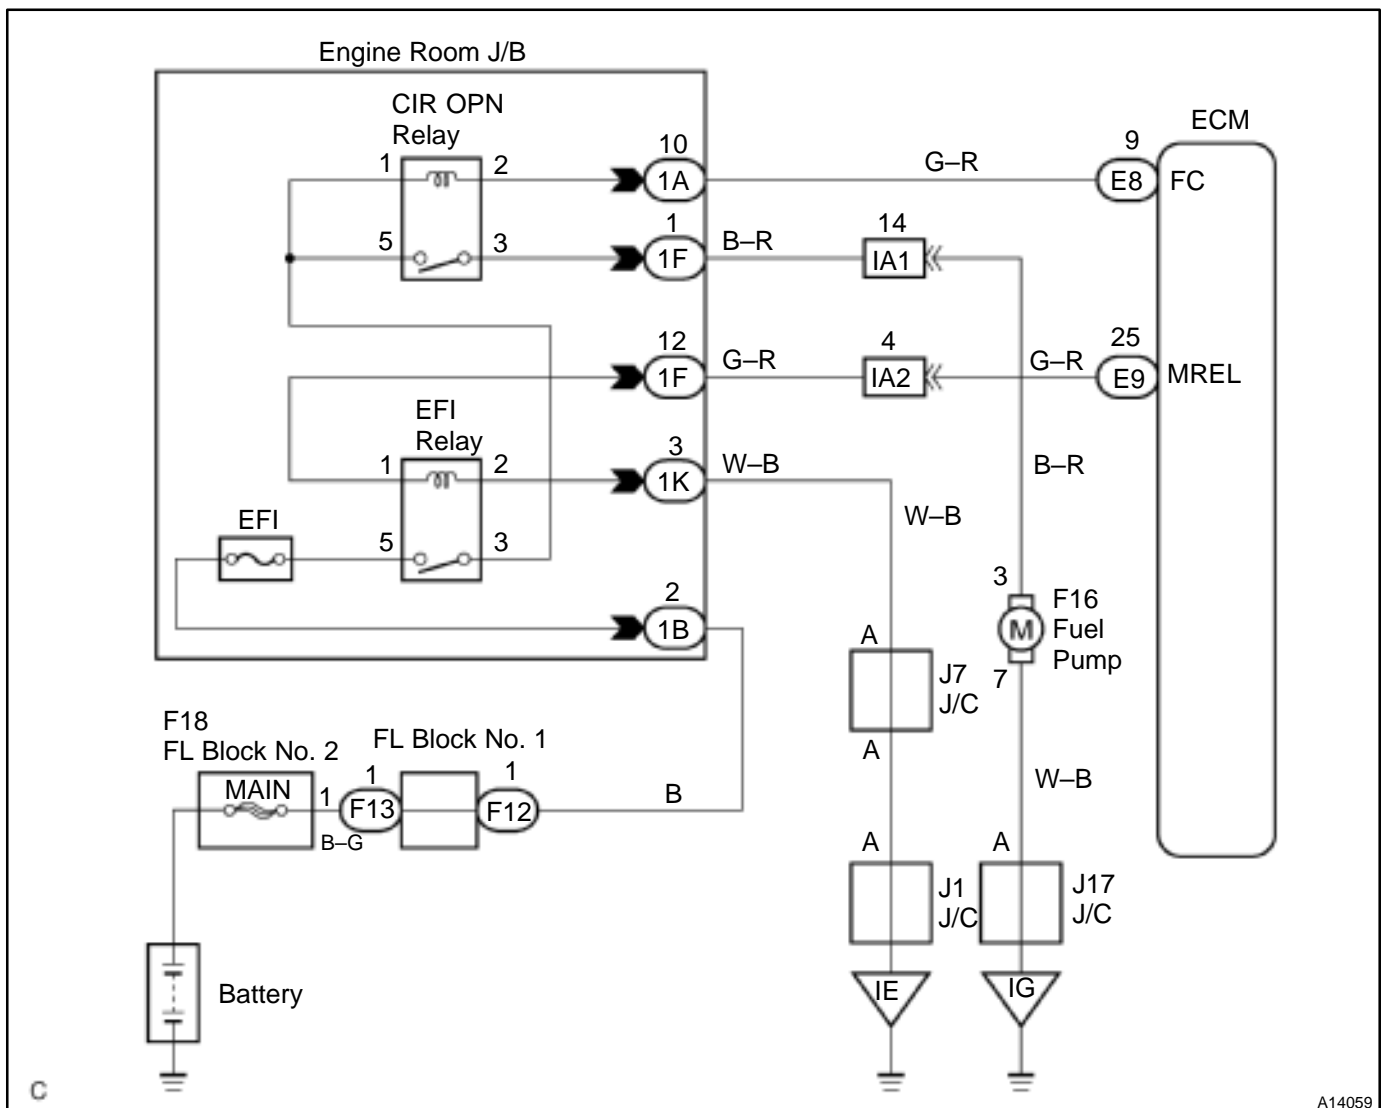

INSPECTION PROCEDURE

TOYOTA hand-held tester:

1	Connect TOYOTA hand-held tester and check operation of fuel pump (See page DI-3).
---	--

OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-22](#)).

NG

2	Check for ECM power source circuit (See page DI-156).
---	--

NG

Repair or replace.

OK


3	Check circuit opening relay (Marking: C/OPN) (See page SF-38).
---	---

NG

Replace circuit opening relay.

OK

4	Check voltage between terminal FC of ECM and body ground.
---	---

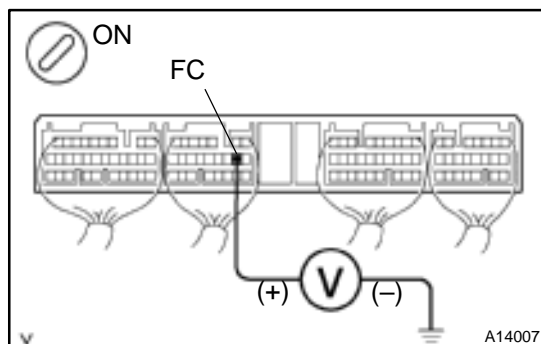**PREPARATION:**

- (a) Remove the ECM with connector still connected (See page [SF-62](#)).
- (b) Turn the ignition switch ON.

CHECK:

Measure the voltage between terminal FC of the ECM and body ground.

OK:

Voltage: 9 – 14 V

OK

Go to step 5.

NG

Check for open in harness and connector between EFI main relay and circuit opening relay (Marking: C/OPN), circuit opening relay and ECM (See page [IN-41](#)).

5

Check fuel pump (See page [SF-6](#)).NG

Repair or replace fuel tank assembly.


OK

6

Check for open in harness and connector between circuit opening relay and fuel pump and body ground (See page [IN-41](#)).NG

Repair or replace harness or connector.

OKCheck and replace ECM (See page [IN-41](#)).

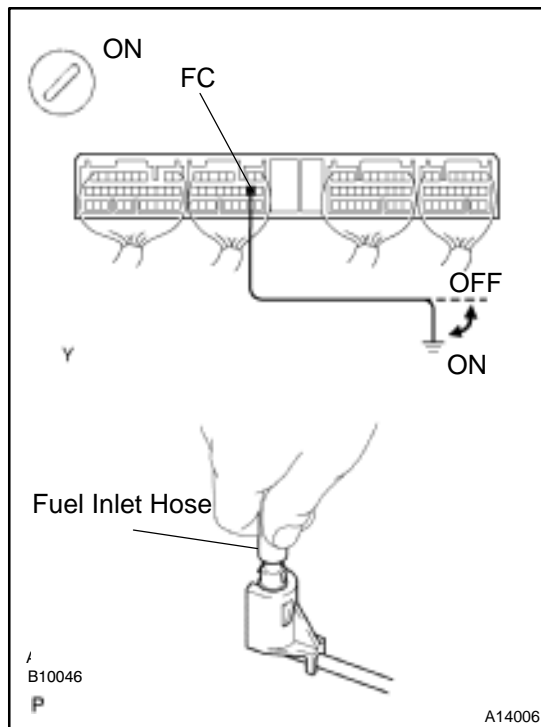OBD II scan tool (excluding TOYOTA hand-held tester):**1 Check operation of fuel pump.****PREPARATION:**

- (a) Remove the ECM with connector still connected (See page [SF-62](#)).
- (b) Turn the ignition switch ON.

CHECK:

- (a) Connect between terminal FC of the ECM connector and body ground.
- (b) Check for fuel pressure in the fuel inlet hose when it is pinched off.

OK:

There is pressure in fuel inlet hose.

HINT:

At this time, you will hear a fuel return flowing noise.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-22](#)).

NG**2 Check for ECM power source circuit (See page [DI-156](#)).****NG**

Repair or replace.

OK**3 Check circuit opening relay (Marking: C/OPN) (See page [SF-38](#)).****NG**

Replace circuit opening relay.

OK

- 4** Check voltage between terminal FC of ECM and body ground (See page [DI-161](#)).

OK

Go to step 5.

NG

Check for open in harness and connector between EFI main relay and circuit opening relay (Marking: C/OPN), circuit opening relay and ECM (See page [IN-41](#)).

- 5** Check fuel pump (See page [SF-6](#)).

NG

Repair or replace fuel tank assembly.

OK

- 6** Check for open in harness and connector between circuit opening relay and fuel pump and body ground (See page [IN-41](#)).

NG

Repair or replace harness or connector.

OK

Check and replace ECM (See page [IN-41](#)).

MIL Circuit Malfunction

CIRCUIT DESCRIPTION


If the ECM detects trouble, the MIL lights up. At this time, the ECM records a DTC in memory.

HINT:

When the ignition switch is ON and "READY" indicator light is OFF, the bulb check of the "MIL" is performed ("MIL" is ON).

When "MIL" is ON, but the DTC of the engine is not memorized, it may be because of HV control system abnormality, so check HV control system beforehand.

WIRING DIAGRAM

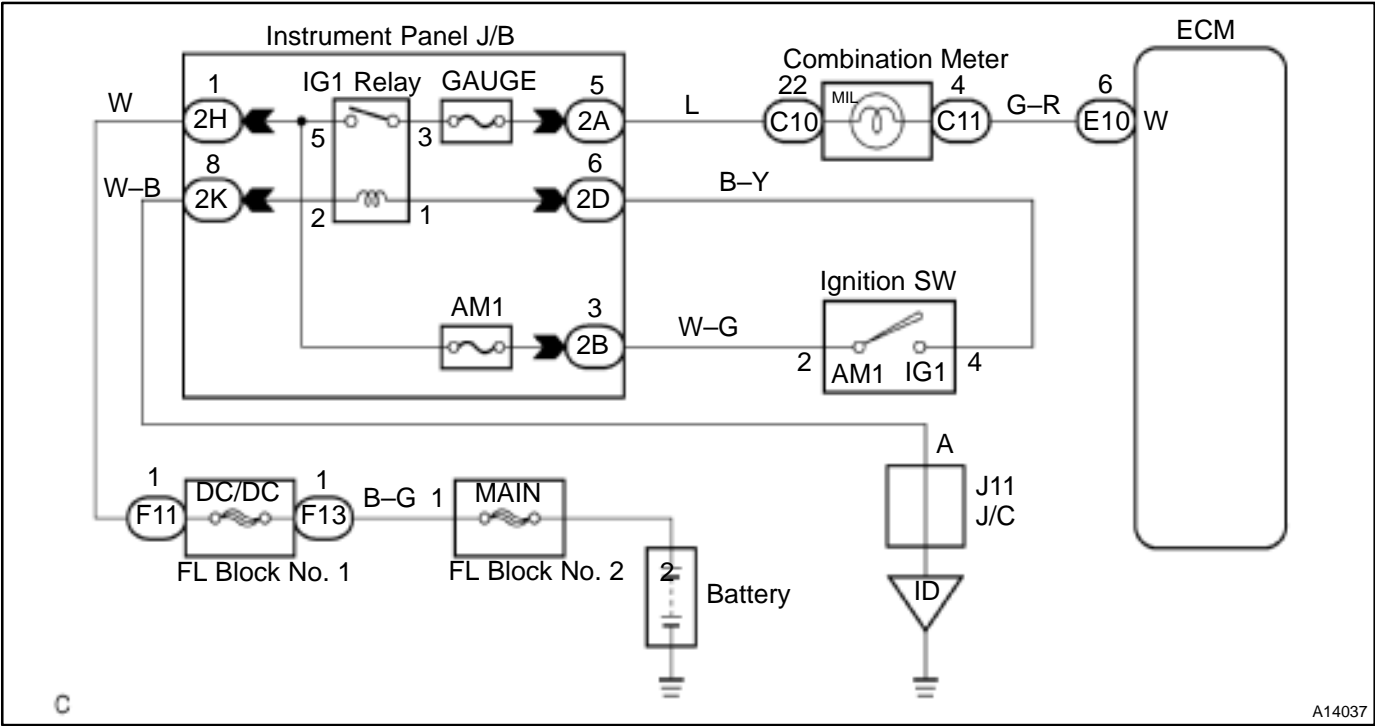

INSPECTION PROCEDURE

HINT:

Troubleshoot in accordance with the chart below for each trouble symptom.

MIL does not light up	Start inspection from step 1 in case of using TOYOTA hand-held tester and start from step 2 in case of not using TOYOTA hand-held tester
MIL remains on	After inspection of step 3, start inspection from step 4 in case of using TOYOTA hand-held tester and start from step 5 in case of not using TOYOTA hand-held tester

1	Inspect diagnosis (normal mode, check mode) (See page DI-3).
---	---

OKCheck and replace ECM (See page [IN-41](#)).**NG**

2	Check MIL.
---	------------

See combination meter troubleshooting on page [BE-2](#).**NG**

Repair or replace bulb or combination meter assembly.

OK

3	Check that ECM connectors are securely connected to ECM.
---	--

NO

Connect connector to ECM.

YESCheck for open circuit in harness and connector between combination meter and ECM (See page [IN-41](#)).

4	Check operation of MIL (See step 1).
---	--------------------------------------

OKCheck and replace ECM (See page [IN-41](#)).**NG**

5	Is any DTC output?
----------	---------------------------

Check DTC on page [DI-14](#).

YES

Repair circuit indicated by output code.

NO

6	Check IG1 relay (Marking: IG1).
----------	--

NG

Replace IG1 relay.

OK


Check for short circuit in harness and connector between DLC3 and ECM (See page [IN-41](#)).

TC Terminal Circuit

CIRCUIT DESCRIPTION

Terminal TC and CG are located in the DLC3. When connecting these terminals, DTCs in normal mode or test mode can be read through the MIL flashing in the combination meter.

WIRING DIAGRAM

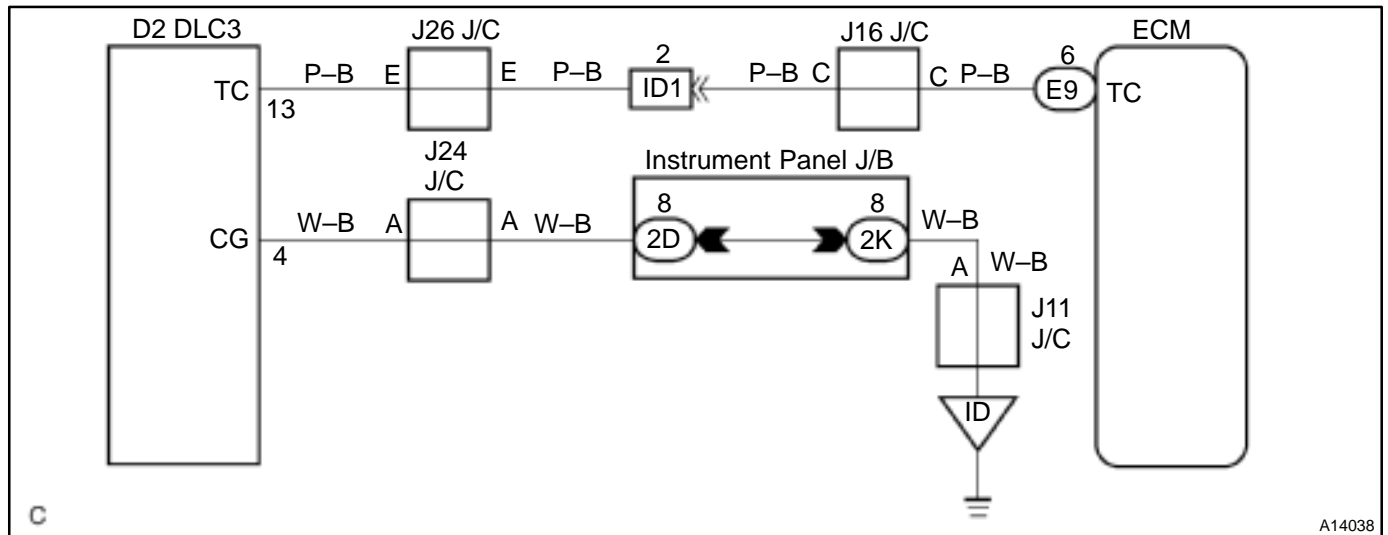


INSPECTION PROCEDURE

HINT:

- Even though terminal TC is not connected with terminal CG, the MIL blinks.
- For the above phenomenon, an open or short in the wire harness, or malfunction inside the ECM is the likely cause.

- 1 Check voltage between terminals TC and CG of DLC3.

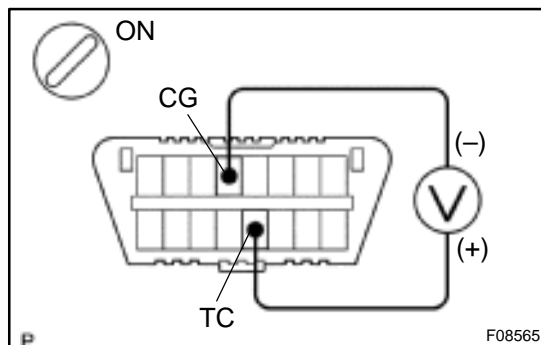

PREPARATION:

Turn the ignition switch ON.

CHECK:

Measure the voltage between terminals TC and CG of the DLC3.

OK:

Voltage: 9 – 14 V

OK

Check and replace ECM (See page [IN-41](#)).

NG

2	Check continuity between terminal CG of DLC3 and body ground.
---	---

NG

Repair or replace harness or connector.

OK

3	Check for open and short circuit in harness and connector between ECM and DLC3, and DLC3 and body ground (See page IN-41).
---	---

NG

Repair or replace harness or connector.

OK


Check and replace ECM (See page IN-41).
--

A/C Cut Control Circuit

CIRCUIT DESCRIPTION

This circuit cuts air conditioning operation during vehicle acceleration in order to increase acceleration performance. During acceleration with the vehicle speed at (AT: 25 km/h (16 mph), MT: 40 km/h (25 mph)) or less, engine speed at (AT: 1,200 rpm, MT: 1,600 rpm) or less and throttle valve opening angle at 60° or more, the A/C magnet switch is turned OFF for several seconds.

WIRING DIAGRAM

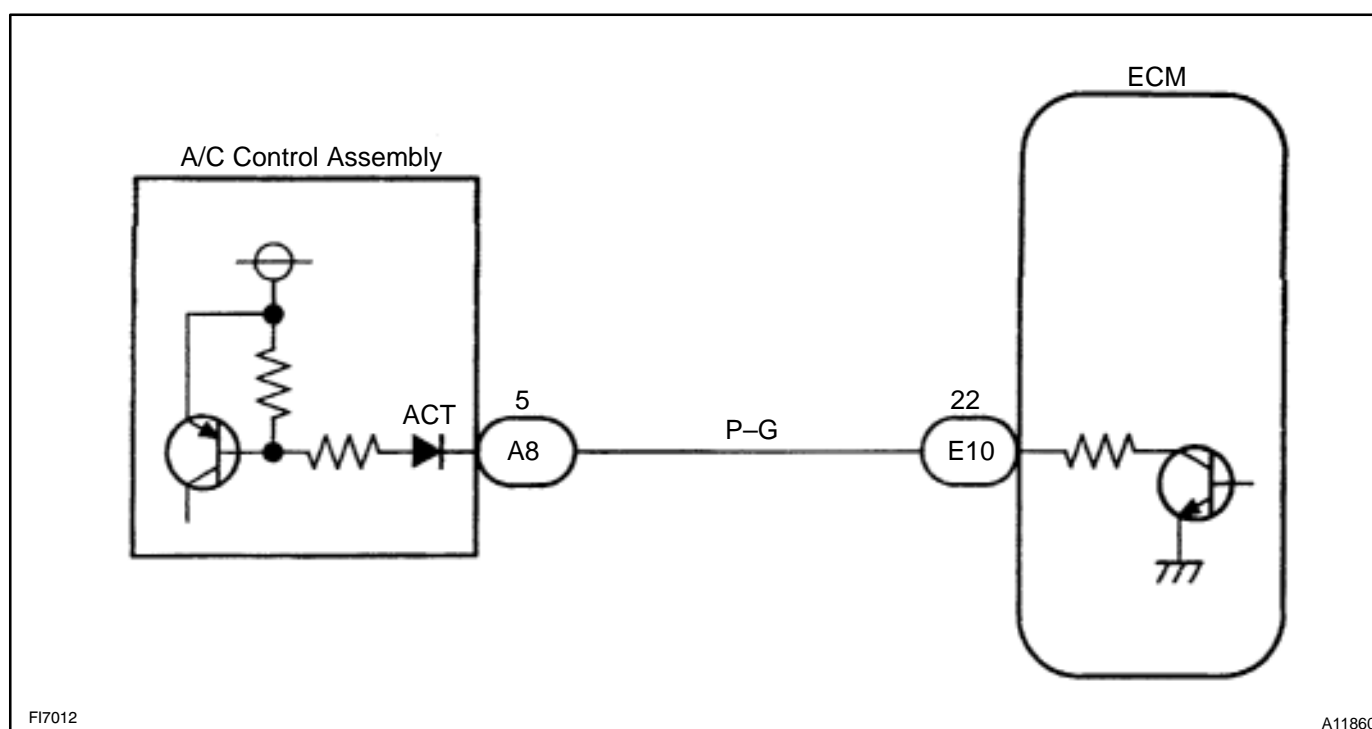

INSPECTION PROCEDURE

TOYOTA hand-held tester:

1	Connect the TOYOTA hand-held tester and check operation of air conditioning cut control.
---	--

PREPARATION:

- Connect the TOYOTA hand-held tester to the DLC3.
- Turn the ignition switch ON and TOYOTA hand-held tester main switch ON.
- Start the engine and air conditioning switch ON.

HINT:

A/C magnet clutch is turned ON.

- Select the ACTIVE TEST mode on the TOYOTA hand-held tester.

CHECK:

Check operation of A/C magnet clutch cut when air conditioning cut control is operated by the TOYOTA hand-held tester.

OK:

A/C magnet clutch is turned OFF.

OK

Proceed to next circuit inspection shown on problem symptom table. (See page [DI-22](#))

NG

2

Check for open and short in harness and connector between ECM and A/C amplifier. (See page [IN-41](#))


NG

Repair or replace harness or connector.

OK

3

Check voltage between terminal ACT of ECM and body ground.

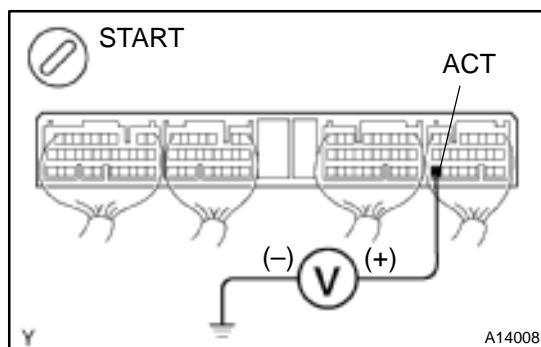**PREPARATION:**

- (a) Remove the ECM with connector still connected (See page [SF-62](#)).
- (b) Start the engine.

CHECK:

Measure voltage between terminal ACT of ECM connector and body ground when A/C switch is turned to ON and OFF.

OK:

A/C switch condition	Voltage
ON	9 – 14 V
OFF	Below 1.5 V

NG


Check and replace A/C amplifier.

OK

Check and replace ECM. (See page [IN-41](#))

OBDII scan tool (excluding TOYOTA hand-held tester):

1	Check voltage between terminal ACT of ECM and body ground.
---	--

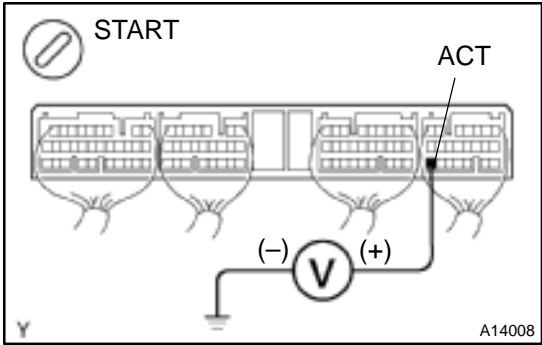

PREPARATION:

Start the engine.

CHECK:

Measure voltage between terminal ACT of ECM connector and body ground when A/C switch is turned to ON and OFF.

OK:

A/C switch condition	Voltage
ON	9 – 14 V
OFF	Below 1.5 V

OK

Check and repair ECM. (See page [IN-41](#))

NG

2	Check for open and short in harness and connector between ECM and A/C amplifier. (See page IN-41)
---	--

NG

Repair or replace harness or connector.

OK

Check and replace A/C amplifier.

CUSTOMER PROBLEM ANALYSIS CHECK


Prius Problem Check Sheet

Please fill in the blanks within bold frame.

			Name of Dealer		Person in Charge at Headquarters		Person in Charge at Dealer					
			Office									
Vehicle Specifications	Model Code	NHW11-	Problem Occurrence Date		Odometer Reading		km miles					
	Frame No.		Service Entry Date		Registration date							
	Unit No. etc.		Vehicle Delivery Date									
	Option	() Navigation (equipped by () MOP () dealer) () Cold climate specification () others()										
Interview Results	Contents of complaint (Status when and before/after occurring in the order of events as correct as possible)				Characteristics of Customer							
					Gender	() Male () Female						
					Age							
					Occupation							
					Vehicle used before							
					Main use area	city area () % suburbs () % mountain area () % Others () () %						
					Frequency in use	times/day or week or month						
					Others							
	Driving Condition		Road Condition		Vehicle Condition			Others				
	Vehicle Speed _____ km/h _____ mph () when starting () when according () When normal driving () when decelerating () when braking () when shopping () when parking () when turning () when ABS actuating () others ()		() flat road () up hill () down hill incline of _____ % distance _____ km _____ mph () dry paved road () wet paved road () rough paved road () unpaved road () snowy/frozen road () bump/curb () others ()		() when starting () right after starting () until _____ min. after starting () until _____ min. after starting of driving () when shopping system Status of engine () while shopping engine () when starting engine () when revolving engine			HV Battery indication () 4/4 () 3/4 () 2/4 () 1/4 () unidentified Shift position (indication) () P () R () N () D () B () when operating _____ → _____ () no indication () unidentified A/C status () A/C () FULL () OFF () unidentified		Warning light (MIL) () ON () OFF () PS () main battery () HV! () engine () charge () output control () brake () ABS () others ()		Weather: _____ Temperature: _____ °C _____ °F Brake operation () brake slowly () Brake suddenly () use two pedals system Frequency in occurrence () always () sometimes () only once Fuel level () segments

cardiagn.com


Vehicle Verification Results	Verification Results of Warning Light		Verification Results of Diagnostic Code	
	<input type="checkbox"/> ON <input type="checkbox"/> OFF <input type="checkbox"/> engine <input type="checkbox"/> HV <input type="checkbox"/> HV battery <input type="checkbox"/> output control warning light <input type="checkbox"/> charge <input type="checkbox"/> PS <input type="checkbox"/> brake <input type="checkbox"/> ABS <input type="checkbox"/> others ()		Engine	
			HV	
			INF. code	
			HV battery	
			Brake	
			PS	
Vehicle Inspection Results (Verification items, reason to identify/presume the cause parts, etc.)		Duplication Status		
		<input type="checkbox"/> always <input type="checkbox"/> sometimes <input type="checkbox"/> no reproduction		
Replacement Parts		Confirmation Results After Repair		
problem parts: No/Yes (Sending date: . .)		<input type="checkbox"/> Normal <input type="checkbox"/> reproduction <input type="checkbox"/> others ()		

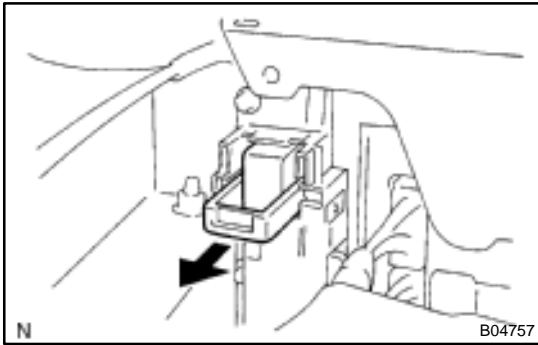

PRE-CHECK

1. PRECAUTION


- (a) When distinguishing trouble and replace the defective part, take necessary preventive measures against an electric shock (See page IN-4).
- (b) Some portions of the wiring harness in the THS vehicle have circuits to which a high voltage is applied. To prevent an electrical shock, be sure to observe the following:
 - (1) Wear insulated gloves during inspection.
 - (2) Remove a service plug and do not start any repair operation before 5 minutes have passed. Then, confirm that the voltage at the output terminals has dropped down to 12 V or less.
 - (3) Use insulated tools during inspection.
 - (4) When disengaging the wiring connectors, hold the connector bodies to avoid pulling the wires. When engaging the wiring connectors, be sure to engage them securely.
- (c) Do not leave the tools or parts (bolts, nuts, etc.) inside the cabin.
- (d) Do not carry metallic objects such as mechanical pencils or scales.

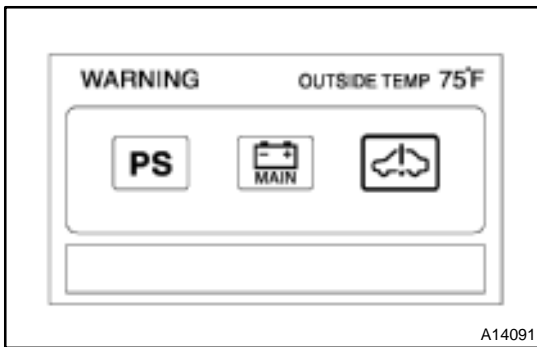


2. DIAGNOSIS SYSTEM

(a) Description

- The HV control ECU has a self-diagnosis system by which malfunction in the computer itself or in THS components is detected and the Hybrid vehicle warning light in the multi-information display are lighted up.
- To check the Diagnostic Trouble Codes (DTC), connect the hand-held tester to the Data Link Connector 3 (DLC3) on the vehicle. The TOYOTA hand-held tester also enables you to erase the DTC and check freeze frame data and various forms of THS data.

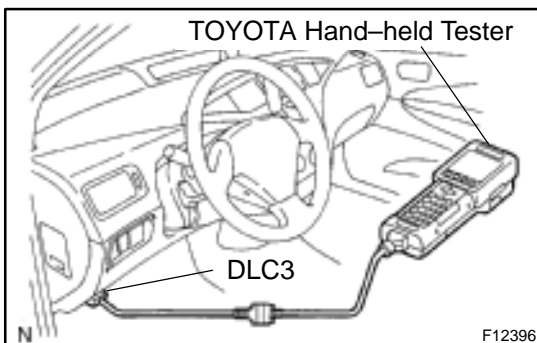

- Freeze frame data:
As the freeze frame data records the driving condition when a malfunction is detected, when troubleshooting, it is useful for determining whether the vehicle was running, braked, stopped or reversed.

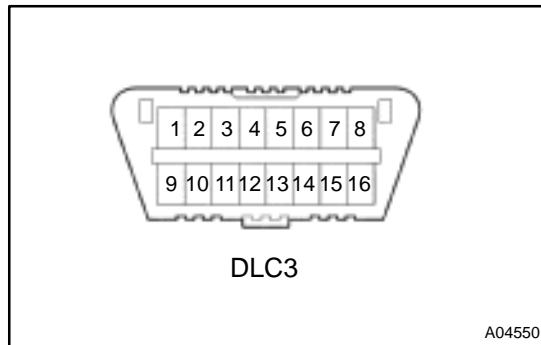

- (b) Check the DLC3.
The HV control ECU conforms to ISO 14230 for communication.
The terminal arrangement of the DLC3 complies with SAEJ1962 and matches the ISO 14230 format.

Terminal No.	Connection/Voltage or Resistance	Condition
7	Bus \oplus Line/Pulse generation	During transmission
4	Chassis Ground \leftrightarrow Body Ground/1 Ω or less	Always
5	Signal Ground \leftrightarrow Body Ground/1 Ω or less	Always
16	Battery Positive \leftrightarrow Body Ground/10 – 15 V	Always

HINT:

If your display shows **UNABLE TO CONNECT TO VEHICLE** when you have connected the cable of the TOYOTA hand-held tester to the DLC3, turned the motor switch ON and operated the tester, there is a problem in the vehicle or tool.

- If communication is normal when the tool is connected to another vehicle, inspect the DLC3 on the original vehicle.
- If communication is still not possible when the tool is connected to another vehicle, the problem is probably in the tool itself, so consult the Service Department.

3. INSPECT DIAGNOSIS


- (a) Check the auxiliary battery.
- (1) Measure the voltage of the auxiliary battery.
Voltage: 10 – 15 V
 - (2) Inspect the auxiliary battery, fuses, fusible links, wiring harness, connectors and ground.



- (b) Check the master warning light.
- (1) Turn the ignition switch ON and confirm that the master warning light comes on.

HINT:


If the master warning light does not come on, suspect a burnt fuse, burnt bulb, or open in wiring harness.

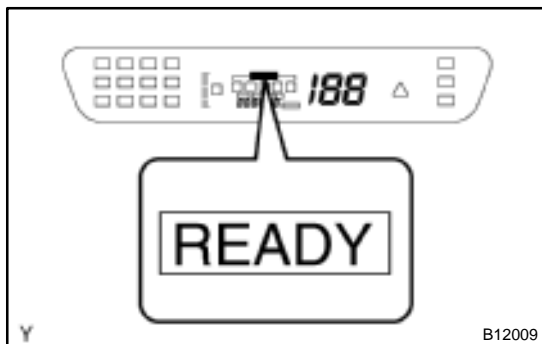

- (2) When the "READY" light is ON, the master warning light should go off.

If the lamp remains on, the diagnosis system has detected a malfunction in the system or the message such as "When you park your care, make sure you shift to Park P." and "The batteries will not charge if the shifter is N" appears on the multi-information display.

Since DTC may be stored even though the lamp is OFF, be sure to check DTC.

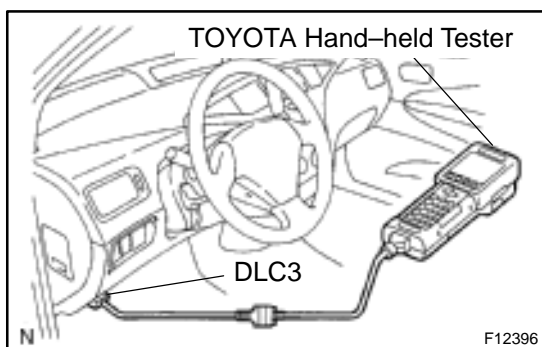

- (c) Check the DTC.
- (1) Prepare a TOYOTA hand-held tester.
 - (2) Connect the TOYOTA hand-held tester to the DLC3.
 - (3) Turn the ignition switch ON and push the TOYOTA hand-held tester main switch ON.
 - (4) Use the TOYOTA hand-held tester to check the DTC, information code and freeze frame data and note them down. (For operating instructions, see the TOYOTA hand-held tester operator's manual).

HINT:

- For one DTC, the HV diagnosis system can memorize more than one information code and freeze frame data corresponding to them. Therefore, when troubleshooting, check all of the information codes, record the freeze frame data and then start inspection according to the procedures of "Circuit Inspection".
 - The HV ECU is communicating with each ECU of the engine brake, HV battery and EMPS. So, if a warning is output from the HV control system, check and record DTCs of all ECUs. (See tables on the following pages.)
- (5) See a related page to confirm details of the DTC.

HV ECU-DTC & Information

DTC		INFORMATION 1	
		INFORMATION 2	
		INFORMATION 3	
		INFORMATION 4	
		INFORMATION 5	
DTC		INFORMATION 1	
		INFORMATION 2	
		INFORMATION 3	
		INFORMATION 4	
		INFORMATION 5	
DTC		INFORMATION 1	
		INFORMATION 2	
		INFORMATION 3	
		INFORMATION 4	
		INFORMATION 5	
DTC		INFORMATION 1	
		INFORMATION 2	
		INFORMATION 3	
		INFORMATION 4	
		INFORMATION 5	

HV ECU-Information & Freezed frame data

INFORMATION	
MG1 REV	rpm
MG2 REV	rpm
MG1 TORQ	N·m
MG2 TORQ	N·m
POWER RQST	W
ENGINE SPD	rpm
MCYL CTRL POWER	Nm
SOC	%
WOUT CTRL POWER	W
WIN CTRL POWER	W
DRIVE CONDITION	
INVERT TEMP – MG1	°F (°C)
INVERT TEMP – MG2	°F (°C)
MG1 TEMP	°F (°C)
MG2 TEMP	°F (°C)
PWR RESOURCE VM	V
PWR RESOURCE IB	A
SHIFT SENSOR 1	
ACC SENSOR MAIN	V
ENG STOP RQST	Yes / No
IDLING REQUEST	Yes / No
ENGINE FUEL CUT	Yes / No

HV BATT CH RQST	Yes / No
HCAC ABSRT RQST	Yes / No
ENG WARM UP RQT	Yes / No
STOP SW COND	Yes / No
CRUISE CONTROL	Yes / No
AUX. BATT V	V
EXCLUSIVE INFO1	
EXCLUSIVE INFO2	
EXCLUSIVE INFO3	
EXCLUSIVE INFO4	
EXCLUSIVE INFO5	
EXCLUSIVE INFO6	
LOAD CONDITION	MG1 / MG2
DRIVING PATTEN1	
DRIVING PATTEN2	
DRIVING PATTEN3	
IG OFF IN DRVIN	Yes / No
SG B IN REDUCIN	Yes / No
SG N IN REDUC/P	Yes / No
STEP ACC&BRAKE	Yes / No
IG OFF TIME	min
OCCURRENCE ORDER	–

HV ECU–Operation History Data

SHIFT BEF READY	LATEST OPER	
	LATEST TRIP	
	1 BEF LATST OR	
	1 BEF LATST TRP	
	2 BEF LATST OR	
	2 BEF LATST TRP	

N RANGE CTRL 1	LATEST OPER	
	LATEST TRIP	
	1 BEF LATST OR	
	1 BEF LATST TRP	
	2 BEF LATST OR	
	2 BEF LATST TRP	

N RANGE CTRL 2	LATEST OPER	
	LATEST TRIP	
	1 BEF LATST OR	
	1 BEF LATST TRP	
	2 BEF LATST OR	
	2 BEF LATST TRP	

STEP ACCEL IN N	LATEST OPER	
	LATEST TRIP	
	1 BEF LATST OR	
	1 BEF LATST TRP	
	2 BEF LATST OR	
	2 BEF LATST TRP	

AUX. BATT LOW	LATEST OPER	
	LATEST TRIP	
	1 BEF LATST OR	
	1 BEF LATST TRP	
	2 BEF LATST OR	
	2 BEF LATST TRP	

HV INTERMITTENT	LATEST OPER	
	LATEST TRIP	
	1 BEF LATST OR	
	1 BEF LATST TRP	
	2 BEF LATST OR	
	2 BEF LATST TRP	

MG2 TEMP HIGH	LATEST OPER	
	LATEST TRIP	
	1 BEF LATST OR	
	1 BEF LATST TRP	
	2 BEF LATST OR	
	2 BEF LATST TRP	

MG1 TEMP HIGH	LATEST OPER	
	LATEST TRIP	
	1 BEF LATST OR	
	1 BEF LATST TRP	
	2 BEF LATST OR	
	2 BEF LATST TRP	

MG2 INV TEMP HIGH	LATEST OPER	
	LATEST TRIP	
	1 BEF LATST OR	
	1 BEF LATST TRP	
	2 BEF LATST OR	
	2 BEF LATST TRP	

MG1 INV TEMP HIGH	LATEST OPER	
	LATEST TRIP	
	1 BEF LATST OR	
	1 BEF LATST TRP	
	2 BEF LATST OR	
	2 BEF LATST TRP	

MAIN BATT LOW	LATEST OPER	
	LATEST TRIP	
	1 BEF LATST OR	
	1 BEF LATST TRP	
	2 BEF LATST OR	
	2 BEF LATST TRP	

RESIST OVR HEAT	LATEST OPER	
	LATEST TRIP	
	1 BEF LATST OR	
	1 BEF LATST TRP	
	2 BEF LATST OR	
	2 BEF LATST TRP	

ACCEL MODE 1	SHIFT POSITION	
	BRAKE TORQ	N·m
	MG2 TORQ	N·m
	MG1 TORQ	N·m
	VEHICLE SPD	mph(km/h)
	ACC THROTTLE	%
	OCCURRENCE TRIP	

ACCEL MODE 2	SHIFT POSITION	
	BRAKE TORQ	N·m
	MG2 TORQ	N·m
	MG1 TORQ	N·m
	VEHICLE SPD	mph(km/h)
	ACC THROTTLE	%
	OCCURRENCE TRIP	

ACCEL MODE 3	SHIFT POSITION	
	BRAKE TORQ	N·m
	MG2 TORQ	N·m
	MG1 TORQ	N·m
	VEHICLE SPD	mph(km/h)
	ACC THROTTLE	%
	OCCURRENCE TRIP	

REGEN IH FACTOR	OVER VOLTAGE	Yes / No
	OVER CURRENT	Yes / No
	MG2 TEMP HIGH	Yes / No
	MG1 TEMP HIGH	Yes / No
	BATTERY FULL	Yes / No
	CHG RESTRICTION	Yes / No
	REGN BRK INFECT	Yes / No

BATT SAVE RQST	BATT LOW VOLT	Yes / No
	DISCHAG INHIBIT	Yes / No
	N RANG OVR TIME	Yes / No
	BATT HIGH VOLT	Yes / No
	BATT OVER LOAD	Yes / No
	BATT HIGH TEMP	Yes / No

DRIVING PATTERN	LOAT CONDITION	
	DRIVING PATTEN	
	DRIVING PATTEN	
	DRIVING PATTEN	

TEMP TRBLE FACT	ACC TENT TRBLR	Yes / No
	ABNML COM BR–HV	Yes / No
	ILK OPERATION	Yes / No
	FUEL SHORTAGE	Yes / No

ENG INDPDENT RQ	ENG WARM UP RQT	Yes / No
	AIRCON REQUEST	Yes / No
	ENG STP INHIBIT	Yes / No
	HCAC ABSRT RQST	Yes / No
	HV BATT CH RQST	Yes / No
	IDLING REQUEST	Yes / No
	ENG STOP RQST	Yes / No

DC/DC CONV STP	OUTPUT V OVER	Yes / No
	INPUT V LOW	Yes / No
	INPUT V OVER	Yes / No
	OVR HEAT PRTECT	Yes / No
	DC/DC CONV STOP	Yes / No
	DC/DC V UNSTLE	Yes / No
	OUTPUT STOP	Yes / No
	DC/DC STOP FACT	Yes / No

Battery ECU


TROUBLE CODE	
BATTERY SOC	%
WOUT	KW
WIN	KW
DELTA SOC	%
IB MAIN BATTERY	A
BATT TEMP 1	°F (°C)
BATT TEMP 2	°F (°C)
BATT TEMP 3	°F (°C)
BATT TEMP 4	°F (°C)
BATT INSIDE AIR	°F (°C)
NORMAL STATUS	YES / NO
PRE ONBOARD CH	YES / NO
ONBOARD CHARGE	YES / NO
OFF AVE CHG ST	YES / NO
COOLING FAN LO	ON / OFF
COOLING FAN MID	ON / OFF
COOLING FAN HI	ON / OFF
SBL FAN ST RQST	ON / OFF
AUX. BATT V	V
EQTR CHARGE ST	ON / OFF
EQCO DF RERAY	ON / OFF
CCTL	ON / OFF
BATT BLOCK V1	V
BATT BLOCK V2	V
BATT BLOCK V3	V
BATT BLOCK V4	V
BATT BLOCK V5	V
BATT BLOCK V6	V
BATT BLOCK V7	V
BATT BLOCK V8	V
BATT BLOCK V9	V
BATT BLOCK V10	V
BATT BLOCK V11	V
BATT BLOCK V12	V
BATT BLOCK V13	V
BATT BLOCK V14	V
BATT BLOCK V15	V
BATT BLOCK V16	V
BATT BLOCK V17	V
BATT BLOCK V18	V
BATT BLOCK V19	V

Engine ECU

TROUBLE CODE	
CALC LOAD	%
ENGINE SPD	rpm
COOLANT TEMP	°F (°C)
INTAKE AIR	°F (°C)
VEHICLE SPD	mph (km/h)
SHORT FT #1	%
LOND FT #1	%
FUEL SYS #1	
FUEL SYS #2	
ENG RUN TIME	
BATTERY	V
INJECTOR	ms
INJ VOL FB	
FEL FB COEF	
A/F LEARN	%
PURGE LEARN	%
KCS FEEDBACK	degree
REQ ENQ TORQ	KW
RAM MONITOR	
ENG RUN SIG	ON / OFF
ACC RACING SIG	ON / OFF
ENG WARM UP SIG	ON / OFF
ENG RUN PERM	
FC STATUS	
ENG STP LIMIT	

EMPS ECU

TROUBLE CODE	
TRQ1	V
TRQ2	V
WRR	mph (km/h)
WRL	mph (km/h)
MOTOR ACTUAL	A
COMMAND VALUE	A
STR ANGL VEL	deg/s
THERMISTOR TEMP	°F (°C)
PIG SUPPLY	V
IG SUPPLY	ON / OFF
TRQ1 ZERO VAL	V
TRQ2 ZERO VAL	V

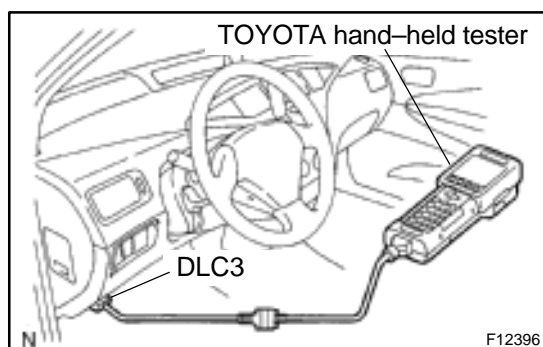

- (d) Clear the DTC after completion of repair.
- (1) Connect the TOYOTA hand-held tester to the DLC3.
Before clearing, check that DTCs and freeze frame data of the HV ECU and the ECU related to the operation history data are recorded.
 - (2) Operate the TOYOTA hand-held tester to erase the DTC (See the hand-held tester operator's manual.).

4. FAIL-SAFE CHART

If any the following codes is recorded, the HV ECU enters the fail safe mode.

DTC code	INF. code	Trouble area	Driving condition
B2799	101	Immobilizer Malfunction	Impossible to drive
C2692	102	Regenerative Brake Check	–
C2693	103	Regenerative Brake Check	–
P1120	104	Accelerator Pedal Position Sensor Circuit Malfunction	Limited driving
	105		Limited driving
	106		Limited driving
	107		Limited driving
	108		Limited driving
	109		Limited driving
	110		Limited driving
	111		Limited driving
	112		Limited driving
	113		Limited driving (Creep vehicle speed)
	114		Limited driving (Creep vehicle speed)
P1520	115	Stop Light Switch Malfunction	Cruise control driving impossible
P1566	116	Cruise Control System Malfunction	Cruise control driving impossible
P1600	117	BATT Malfunction	Normal driving
P1780	118	Park/Neutral Position Switch System Malfunction	Impossible to drive/Normal driving when shift position is fixed
	119		Impossible to drive/Normal driving when shift position is fixed
	120		Impossible to drive
	121		Impossible to drive/Normal driving when shift position is fixed
P3000	123	HV Battery Malfunction	Limited driving
	125		Limited driving
	388		Limited driving
	389		Limited driving
P3001	129	HV Battery ECU Malfunction	Limited driving
P3004	130	Power Cable Malfunction	Limited driving
	131		Impossible to drive
	132		Normal driving
	133		Limited driving

P3100	127	HV ECU Malfunction	Limited driving
	128		Limited driving
	134		Impossible to drive
	135		Impossible to drive
	136		Normal driving
	137		Normal driving
	138		Limited driving
	139		Normal driving
	140		Impossible to drive
	141		Impossible to drive
	142		Impossible to drive
	143		Impossible to drive
	144		Impossible to drive
	145		Impossible to drive
	147		Impossible to drive
	148		Normal driving
	149		Normal driving
	150		Impossible to drive
	151		Impossible to drive
	152		Impossible to drive
	153		Impossible to drive
	154		Impossible to drive
	155		Impossible to drive
	156		Impossible to drive
	157		Impossible to drive
	158		Impossible to drive
	159		Impossible to drive
	160		Impossible to drive
	161		Impossible to drive
	162		Impossible to drive
	163		Impossible to drive
	164		Impossible to drive
	165		Limited driving
	166		Normal driving
	167		Limited driving
	168		Limited driving
	169		Limited driving
	170		Limited driving
	171		Impossible to drive
	172		Impossible to drive
	173		Impossible to drive
	174		Normal driving
	175		Normal driving
	176		Normal driving
	177		Impossible to drive
	178		Impossible to drive

DIAGNOSTICS – HYBRID VEHICLE CONTROL SYSTEM

P3100	179	HV ECU Malfunction	Impossible to drive
	180		Impossible to drive
	181		Impossible to drive
	182		Impossible to drive
	183		Impossible to drive
	184		Impossible to drive
	185		Impossible to drive
	186		Impossible to drive
	187		Impossible to drive
	188		Limited driving
	189		Limited driving
	190		Limited driving
	191		Limited driving
	192		Limited driving
	193		Limited driving
	194		Limited driving
	195		Limited driving
	196		Limited driving
	197		Limited driving
	198		Normal driving
	199		Limited driving
	200		Limited driving
	201		Limited driving
	202		Limited driving
	203		Limited driving
	271		Normal driving
	310		Limited driving
	392		Impossible to drive
	393		Impossible to drive
P3101	204	Engine System Malfunction	Limited driving
	205		Limited driving
	238		Limited driving
P3105	206	Battery ECU Communication Circuit Malfunction	Limited driving
	207		Limited driving
	208		Limited driving
P3106	209	ECM Communication Circuit Malfunction	Limited driving
	210		Limited driving
	211		Limited driving
	212		Limited driving
	394		Limited driving
P3107	213	Airbag ECU Communication Circuit Malfunction	Normal driving
	214		Normal driving
	215		Normal driving
P3108	216	A/C Amplifier Communication Circuit Malfunction	Normal driving
	217		Normal driving

P3109	218	Battery ECU Communication Circuit Malfunction	Regenerative brake ineffective
	219		Regenerative brake ineffective
	220		Regenerative brake ineffective
	221		Regenerative brake ineffective
	222		Regenerative brake ineffective
P3110	223	IGCT Relay Malfunction	Normal driving
P3115	224	System Main Relay Malfunction	Normal driving
	225		Normal driving
	226		Impossible to drive
	227		Impossible to drive
	228		Impossible to drive
	229		Impossible to drive
	231		Impossible to drive
	232		Limited driving
	233		Impossible to drive
P3120	234	HV Transaxle Malfunction	Regenerative brake ineffective
	235		Impossible to drive
	236		Normal driving
	237		Limited driving
	239		Limited driving
	240		Impossible to drive
	241		Normal driving
	242		Limited driving
	243		Limited driving
	244		Limited driving
	245		Limited driving
	246		Limited driving
	247		Normal driving
	248		Normal driving
	249		Normal driving
	250		Normal driving
	253		Limited driving
	254		Limited driving
	255		Limited driving
	256		Limited driving
	257		Normal driving
	258		Normal driving
	259		Normal driving
	260		Normal driving

DIAGNOSTICS – HYBRID VEHICLE CONTROL SYSTEM

P3125	263	Converter & Inverter Assembly Malfunction	Normal driving
	264		Normal driving
	265		Normal driving
	266		Limited driving
	267		Limited driving
	268		Limited driving
	269		Limited driving
	270		Limited driving
	272		Normal driving
	273		Normal driving
	274		Normal driving
	275		Normal driving
	276		Normal driving
	277		Normal driving
	278		Limited driving
	279		Impossible to drive
	280		Limited driving
	281		Limited driving
	282		Limited driving
	283		Limited driving
	284		Impossible to drive
	285		Limited driving
	286		Limited driving
	287		Limited driving
	288		Limited driving
	289		Limited driving
	290		Limited driving
	291		Limited driving
	292		Limited driving
	293		Limited driving
	294		Limited driving
	295		Limited driving
	296		Limited driving
	297		Limited driving
	298		Limited driving
	299		Limited driving
	300		Limited driving
	301		Limited driving
	302		Limited driving
	303		Limited driving
	304		Limited driving
	305		Limited driving
	306		Limited driving
	307		Limited driving
	308		Impossible to drive

P3125	309	Converter & Inverter Assembly Malfunction	Limited driving
	311		Normal driving
	312		Normal driving
	313		Normal driving
	314		Normal driving
	315		Normal driving
	316		Limited driving
	317		Limited driving
	318		Limited driving
	319		Limited driving
	320		Limited driving
	321		Limited driving
	322		Limited driving
	323		Limited driving
	324		Limited driving
	325		Limited driving
	326		Limited driving
	327		Limited driving
	328		Limited driving
	329		Limited driving
	330		Limited driving
	331		Limited driving
	332		Limited driving
	333		Limited driving
	334		Limited driving
	335		Limited driving
	336		Limited driving
	337		Limited driving
	338		Limited driving
	339		Limited driving
	340		Limited driving
	341		Limited driving
	342		Limited driving
	343		Limited driving
	344		Limited driving
	345		Limited driving
P3130	346	Inverter Cooling System Malfunction	Normal driving
	347		Normal driving
P3135	348	Circuit Breaker Sensor Malfunction	Normal driving
	349		Normal driving
P3140	350	Interlock Malfunction	Normal driving
	351		Normal driving
P3145	352	Vehicle Speed Sensor Circuit Malfunction	Cruise control driving impossible

5. CHECK FOR INTERMITTENT PROBLEMS

- (a) Perform a simulation test (See page
- [IN-41](#)
-).

In the simulation test, reproduce the driving condition at the trouble occurrence according to the customer's comments and freeze frame data recorded with DTC, such as an opening angle of the accelerator pedal, SOC, engine coolant temperature, engine rpm, and MG/1MG2 rpm and torque.

- (b) Check the connector and terminal (See page
- [IN-41](#)
-).

- (c) Handle the connector (See page
- [IN-41](#)
-).

6. TOYOTA HAND-HELD TESTER DISPLAY ITEMS

TOYOTA Hand-held tester display	Measurement Item
1 BEF LATST OR	Number of operation of 1 trip before last
1 BEF LATST TRP	Number of trips before last
2 BEF LATST OR	Number of operation 2 trips before last
2 BEF LATST TRP	Number of trips 2 before last
ABNML CON BR-HV	Communication malfunction between HV ECU and brake
ACC SENSOR MAIN	Main accelerator sensor
ACC SENSOR SUB	Sub accelerator sensor
ACC TENT TRBLE	Tentative trouble of accelerator
ACC THROTTLE	Accelerator throttle
ACCEL MODE	History of acceleration and reduction
AIR CON REQUEST	Air conditioner request
AUX. BATT LOW	Auxiliary battery becomes weak
AUX. BATT V	Voltage of auxiliary battery
BATT HIGH TEMP	Temperature of the battery is too high
BATT HIGH VOLT	Voltage of the battery is too high
BATT LOW VOLT	Voltage of the battery is low
BATT OVER LOAD	Battery is overloaded
BATT SAVE RQST	Request to save the main battery
BATTERY FULL	Battery full
BRAKE TORQ	Brake torque
CELL TEMP-MAX	Highest temperature of all battery cells
CELL TEMP-MIN	Lowest temperature of all battery cells
CHG RESTRICTION	Charge restriction
COOLANT TEMP	Water temperature
CRUISE CONTROL	Condition of the cruise control
DC/DC CONV STOP	DC/DC converter stop signal
DC/DC CONV STOP	Factors causing DC/DC converter to stop
DC/DC STOP FACT	DC/DC converter has stopped at least once
DC/DC V UNSET	DC/DC voltage is unsettled
DCHG RQST SOC	Discharge request to adjust SOC
DISCHAG INHIBIT	Battery is inhibited to discharge

DRIVE CONDITION	0: When engine is stopped
	1: When stopping engine
	2: When starting engine
	3: When cranking engine or engine is operating
	4: While generating power or load driving
	5: –
	6: While racing engine in P position
DRIVING PATTEN1	History of driving pattern 1
DRIVING PATTEN2	History of driving pattern 2
DRIVING PATTEN3	History of driving pattern 3
DRIVING PATTERN	History of driving
ECU TYPE	ECU type
ENG INDPDET RQ	Factors causing engine to run independently
ENG STOP RQST	Engine stop request
ENG STP INHIBIT	Engine stop inhibition
ENG WARM UP RQT	Engine warming up request
ENGINE FUEL CUT	Engine fuel cut
ENGINE SPD	Engine speed
EXCLUSIVE INFO1	Exclusive information 1
EXCLUSIVE INFO2	Exclusive information 2
EXCLUSIVE INFO3	Exclusive information 3
EXCLUSIVE INFO4	Exclusive information 4
EXCLUSIVE INFO5	Exclusive information 5
EXCLUSIVE INFO6	Exclusive information 6
FUEL SHORTAGE	Low fuel
HCAC ABSRT RQST	HCAC OBD request
HV BATT CH RQST	Request from HV ECU to charge the battery
HV ECU INTERMITTENT	HV ECU intermittent problems
IDLING REQUEST	Engine idling request
IG OFF IN DRVIN	Turning IG OFF while driving the car
IG OFF TIME	IG OFF time
ILK OPERATION	Interlock operation
INFORMATION 1–5	Information code
INPUT V LOW	Input voltage is too low
INPUT V OVER	Input voltage is too high
INTAKE AIR	Intake air temperature
INVERT TEMP–MG1	Temperature of inverter MG1
INVERT TEMP–MG2	Temperature of inverter MG2
LATEST OPER	Latest number of operation
LATEST TRIP	Latest number of trips (IG ON–OFF)
LOAD CONDITION	Indicating which of MG1 or MG2 the vehicle uses more
MAIN BATT LOW	SOC of main battery becomes low
MCYL CTRL POWER	Torque for controlling oil pressure of master cylinder
MG1 TEMP HIGH	Temperature MG1 is too high
MG2 TEMP HIGH	Temperature MG2 is too high
MG1 CURRENT V	Electric current of MG1 V phase

DIAGNOSTICS – HYBRID VEHICLE CONTROL SYSTEM

MG1 CURRENT W	Electric current of MG1 W phase
MG1 INV TEMP HI	Temperature of inverter MG1 is high
MG1 REV	MG1 revolution
MG1 TEMP	Motor temperature of MG1
MG1 TEMP HIGH	Temperature fo MG1 is too high
MG2 TEMP HIGH	Temperature fo MG2 is too high
MG1 CURRENT V	Electric cuurent of MG1 is V phase
MG1 CURRENT W	Electric cuurent of MG1 is W phase
MG1 INV TEMP HI	Temperature of inverter MG1 is higt
MG1 REV	MG1 revolution
MG1 TEMP	Motor temperature of MG1
MG1 TEMP HIGH	Temperature of MG1 is high
MG1 TORQ	MG1 torque
MG2 CURRENT V	Electric cuurent of MG2 is V phase
MG2 CURRENT W	Electric cuurent of MG2 is W phase
MG2 INV TEMP HI	Temperature of inverter MG2 is higt
MG2 REV	MG2 revolution
MG2 TEMP	Motor temperature of MG2
MG2 TEMP HIGH	Temperature of MG2 is high
MG2 TORQ	MG2 torque
N RANGE OVR TIME	Leaving shift gear into N position over a period of time
N RANGE CTRL1	N position control due to incomplete shift gears
N RANGE CTRL2	N position control due to rapid shift gear (D-R)
OCCURRENCE ORDR	Order in which the trouble occurs
OCCURRNCE TRIP	Number of trips when this error occurred
OUTPUT STOP	Output stop
OUTPUT V OVER	Output voltage is too high
OVER CURRENT	Electric current of the batytery is too high
OVER VOLTAGE	Voltage of the battery is too high
OVR HEAT PRTECT	Overheat protection
POWER RQST	Power output requested by HV ECU
PWR RESOURCE IB	Power resource IB
PWR RESOURCE VM	power resource VM
RAPID SPD CHANG	Vehicle speed is changed too rapidly
REGEN EXEC TORQ	Torque volue of regenerative brake
REGEN IH FACTOR	Inhibiting factor of regeneration
REGEN RQST TORQ	Torque valueof regenerative brake requested by HV ECU
REGN BRK INEFACT	Regenerative brake is ineffective
RESIST OVR HEAT	Restriction resist is overheating
SG B IN REDUCIN	Shifting gear into "B" in reducing the speed
SG N IN REDUC/P	Shifting gear into "N" reducing the speed
SHIFT BEF READY	Shifting gear before "READY" light turns on
SHIFT POSITION	Shift position
SHIFT SENSOR1	Shift sensor 1
SHIFT SENSOR2	Shift sensor 2
SOC	Stated of charge

STEP ACC&BRAKE	Stepping both accelerator & brake at the same time
STEPP ACC IN N	Stepping accelerator in N position
STOP SW COND	Condition of stop switch
STP CIRCIT OPEN	STP circuit short
STP IN CIR MLF	STP circuit malfunction
TACHO METER	Engine rpm
TARGET ENG SPD	Target engine speed
TEMP TRBLE FACT	Factors causing temporary trouble
VEHICLE SPD	Vehicle speed
WIN CTRL POWER	Power value of charge control
WOUT CTRL POWER	Power value of discharge control

DIAGNOSTIC TROUBLE CODE CHART

HINT:

Parameters listed in the chart may not be exactly the same as your reading due to the type of instrument or other factors.

If a malfunction code is displayed during the DTC check in the check mode, check the circuit for that code listed in the table below. For the details of each code, turn to the page referred to under the "See page" for the respective "DTC No." in the DTC chart.

DTC No. (See page)	Detection Item	Trouble Area	Hybrid System Warning Light*	Memory
B2799 (DI-210)	Immobilizer Malfunction	<ul style="list-style-type: none"> • Wire Harness • Immobilizer System 	○	○
C2692 (DI-212)	Regenerative Brake Check	–	○	○
C2693 (DI-212)	Regenerative Brake Check	–	X	○
P1120 (DI-213)	Accelerator Pedal Position Sensor Circuit Malfunction	<ul style="list-style-type: none"> • Accelerator Pedal Position Sensor • Wire Harness 	○	○
P1520 (DI-215)	Stop Light Switch (Cruise Con- trol System) Malfunction	<ul style="list-style-type: none"> • Stop Light Switch • Wire Harness • Brake ECU 	X	○
P1566 (DI-217)	Cruise Control System Malfunc- tion	<ul style="list-style-type: none"> • Stop Light Switch • Brake ECU • Wire Harness 	X	○
P1600 (DI-219)	BATT Malfunction	<ul style="list-style-type: none"> • HV Fuse • Wire Harness 	○	○
P1780 (DI-221)	Park/Neutral Position Switch System Malfunction	<ul style="list-style-type: none"> • Park/Neutral Position Switch • Wire Harness 	○	○
P3000 (DI-223)	HV Battery Malfunction	<ul style="list-style-type: none"> • HV Battery System • High Voltage Fuse • Power Cable • HV Battery Cooling System 	○/X	○
P3001 (DI-224)	HV Battery ECU Malfunction	<ul style="list-style-type: none"> • Battery ECU 	○	○
P3004 (DI-225)	Power Cable Malfunction	<ul style="list-style-type: none"> • Power Cable • HV Battery System • Service Plug • System Main Relay • Converter & Inverter Assembly 	○/X	○
P3100 (DI-229)	HV ECU Malfunction	<ul style="list-style-type: none"> • Wire Harness • HV ECU • ECM • Crankshaft Position Sensor • Camshaft Position Sensor • Ignition Switch 	○	○
P3101 (DI-237)	Engine System Malfunction	<ul style="list-style-type: none"> • Engine • HV Transaxle 	○	○
P3105 (DI-238)	Battery ECU Communication Cir- cuit Malfunction	<ul style="list-style-type: none"> • Wire Harness • Battery ECU 	○	○
P3106 (DI-240)	ECM Communication Circuit Malfunction	<ul style="list-style-type: none"> • Wire Harness • ECM 	○/X	○

P3107 (DI-242)	Airbag ECU Communication Circuit Malfunction	<ul style="list-style-type: none"> • Wire Harness • Airbag Sensor Assembly 	○	○
P3108 (DI-244)	A/C Amplifier Communication Circuit Malfunction	<ul style="list-style-type: none"> • Wire Harness • A/C Amplifier 	X	○
P3109 (DI-245)	Brake ECU Communication Circuit Malfunction	<ul style="list-style-type: none"> • Wire Harness • Brake ECU 	○	○
P3110 (DI-247)	IGCT Relay Malfunction	<ul style="list-style-type: none"> • Wire Harness • IGCT Relay 	○	○
P3115 (DI-249)	System Main Relay Malfunction	<ul style="list-style-type: none"> • Wire Harness • System Main Relay • HV ECU 	○	○
P3120 (DI-252)	HV Transaxle Malfunction	<ul style="list-style-type: none"> • HV Transaxle • Wire Harness • System Main Relay 	○	○
P3125 (DI-266)	Converter & Inverter Assembly Malfunction	<ul style="list-style-type: none"> • Converter & Inverter Assembly • Wire Harness 	○	○
P3130 (DI-302)	Inverter Cooling System Malfunction	<ul style="list-style-type: none"> • Inverter Water Pump • Wire Harness • IG2 Relay • Electric Cooling Fan System 	○	○
P3135 (DI-305)	Circuit Breaker Sensor Malfunction	<ul style="list-style-type: none"> • Circuit Breaker Sensor • Wire Harness 	○	○
P3140 (DI-307)	Interlock Malfunction	<ul style="list-style-type: none"> • Interlock Switch • Inverter Terminal Cover • Converter & Inverter Assembly • Wire Harness 	○	○
P3145 (DI-310)	Vehicle Speed Sensor Circuit Malfunction	<ul style="list-style-type: none"> • Wire Harness 	X	○

*: ○: Hybrid system warning light lights up. X: Hybrid system warning light does not light up.

INFORMATION CODE (TOYOTA Hand-held tester only)

DTC NO.	INF. Code	Detection Item	Detecting Condition
B2799	101	Immobilizer Malfunction	No input of signal from transponder key ECU
C2692	102	Regenerative Brake Check	Regenerative brake check
C2693	103	Regenerative Brake Check	Regenerative brake check
P1120	104	Accelerator Pedal Position Sensor Circuit Malfunction	Open or short in main accelerator sensor circuit
	105		+B short in main accelerator sensor circuit
	106		Main sensor internal error
	107		Open or short in sub accelerator sensor circuit
	108		+B short in sub accelerator sensor circuit
	109		Sub sensor internal error
	110		When difference between main sensor value and sub sensor value is large
	111		When sub sensor value changes while main sensor value does not
	112		When main sensor value changes while sub sensor value does not
	113		When any of the information code 104 – 112 continues to appear
	114		Accelerator pedal not smoothly returning to original position
P1520	115	Stop Light Switch (Cruise Control System) Malfunction	Open or short in stop light switch circuit
P1566	116	Cruise Control System Malfunction	When STP signal of HV ECU is inconsistent with that of brake ECU, with cruise control indicator ON
P1600	117	BATT Malfunction	HV ECU back-up power source circuit malfunction
P1780	118	Park/Neutral Position Switch System Malfunction	When more than 2 main signals are ON
	119		When main signal is not turned ON even though sub signal has been input
	120		Open or short in sub sensor circuit
	121		When shift position detected by main signal is different from that detected by sub signal
P3000	123	HV Battery Malfunction	Input of abnormal signal from battery ECU (HV battery system malfunction)
	125		Input of abnormal signal from battery ECU (high voltage fuse blown out)
	388	Discharge Inhibition Control Malfunction	When charged battery is low due to leaving the vehicle in N position, gas shortage or HV system malfunction
	389	Drop of High Voltage	When main battery is dead or main battery is dead due to HV system malfunction
P3001	129	HV Battery ECU Malfunction	Battery ECU malfunction
P3004	130	HV Battery Malfunction	When HV battery voltage becomes lower than inverter voltage
	131	Power Cable Malfunction	When main fuse is blown out, service plug is disconnected or limiter resistance is cut off
	132		When inverter voltage sensor is malfunctioning or limiter resistance value increases
	133	HV Battery Malfunction	Input of abnormal signal from battery ECU
P3100	134	HV ECU Internal Error	HV ECU Internal Error
	135		HV ECU Internal Error
	136	GO Signal Error	Open or short in GO signal circuit
	137	Engine Speed Sensor Malfunction	Engine speed sensor malfunction

DTC NO.	INF. Code	Detection Item	Detecting Condition
P3100	127	IB Circuit Malfunction	+B short in IB terminal circuit of HV ECU
	128		Open or short in IB terminal circuit of HV ECU
	138		When the difference between battery current of HV ECU and current of battery is large
	139	IG Signal Circuit Malfunction	HV ECU internal error
	140	RAM Braked	HV ECU internal error
	141	ROM Braked	HV ECU internal error
	142	ST Signal Circuit Malfunction	When ST signal of HV ECU is ON, with ignition switch turned OFF
	143	Immobilizer Malfunction	HV ECU internal error
	144	Primary Check Malfunction	HV ECU internal error
	145		HV ECU internal error
	146		HV ECU internal error
	147		HV ECU internal error
	391	Motor CPU Malfunction	HV ECU internal error
	392		HV ECU internal error
	393	HV CPU Operation Malfunction	HV ECU internal error
	148	HV CPU Malfunction	HV ECU internal error
	149		HV ECU internal error
	150	Motor CPU Malfunction	HV ECU internal error
	151		HV ECU internal error
	152		HV ECU internal error
	153		HV ECU internal error
	154		HV ECU internal error
	155		HV ECU internal error
	156		HV ECU internal error
	157	Motor CPU Malfunction	HV ECU internal error
	158		HV ECU internal error
	159	Motor ECU Communication Circuit Malfunction	HV ECU internal error
	160		HV ECU internal error
	161	Motor ECU Power Source Malfunction	HV ECU internal error
	162		HV ECU internal error
	163		HV ECU internal error
	164		HV ECU internal error
	165		HV ECU internal error
	271	Motor PWN Line Connection Malfunction	HV ECU internal error
	166	Motor R/D Malfunction	HV ECU internal error
	167		HV ECU internal error
	168		HV ECU internal error
	169		HV ECU internal error
	170		HV ECU internal error

DIAGNOSTICS – HYBRID VEHICLE CONTROL SYSTEM

DTC NO.	INF. Code	Detection Item	Detecting Condition
P3100	171	Motor REF Signal Malfunction	HV ECU internal error
	172		HV ECU internal error
	173		HV ECU internal error
	174	Motor Inverter Current Sensor Malfunction	HV ECU internal error
	175		HV ECU internal error
	176	Motor Gate Shutdown Signal Line Connection Malfunction	HV ECU internal error
	177	Motor Main CPU Malfunction	HV ECU internal error
	178		HV ECU internal error
	179		HV ECU internal error
	180	Rotation Angle Check CPU Malfunction	HV ECU internal error
	181		HV ECU internal error
	182		HV ECU internal error
	183		HV ECU internal error
	184		HV ECU internal error
	185		HV ECU internal error
	186		HV ECU internal error
	187	Important RAM Malfunction	HV ECU internal error
	188	Generator CPU Malfunction	HV ECU internal error
	189		HV ECU internal error
	190		HV ECU internal error
	191		HV ECU internal error
	192		HV ECU internal error
	193		HV ECU internal error
	194		HV ECU internal error
	195		HV ECU internal error
	196		HV ECU internal error
	310	Generator PWN Line Connection Malfunction	HV ECU internal error
	197	Generator R/D Malfunction	HV ECU internal error
	198		HV ECU internal error
	199		HV ECU internal error
	200		HV ECU internal error
	201		HV ECU internal error
	202		HV ECU internal error
	203	Generator Shutdown Signal Line Connection Malfunction	HV ECU internal error
	390	Charge Inhibition Control Malfunction	HV ECU internal error
P3101	204	Engine System Malfunction	Input of abnormal signal from the ECM (abnormal engine output)
	205		Input of abnormal signal from the ECM (engine unable to start)
	238	Transaxle Malfunction	When engine does not start even though cranking it
P3105	206	Battery ECU Communication Circuit Malfunction	When communication between battery ECU and HV ECU is abnormal 1 sec. after ignition is turned ON
	207		
	208		

DTC NO.	INF. Code	Detection Item	Detecting Condition
P3106	209	ECM Communication Circuit Malfunction	When communication between ECM and HV ECU is abnormal 1 sec. after ignition is turned ON
	210		
	211		Input of abnormal signal from ECM
	212		
	394		When ECM does not operate
P3107	213	Airbag ECU Communication Circuit Malfunction	When communication between airbag ECU and HV ECU is abnormal 10 sec. after ignition is turned ON
	214		
	215		
P3108	216	A/C Amplifier Communication Circuit Malfunction	When communication from A/C amplifier to HV ECU is abnormal
	217		
P3109	218	Brake ECU Communication Circuit Malfunction	When communication between brake ECU and HV ECU is abnormal 1.5 sec. after ignition is turned ON
	219		
	220		
	221		When abnormal data is received from brake ECU
	222		
P3110	223	IGCT Relay	When IGCT relay is always closed
P3115	224	SMR Cont1 Malfunction	Open or +B short in system main relay No. 1 circuit
	225		Short in system main relay No. 1 circuit
	226	SMR Cont2 Malfunction	Open or +B short in system main relay No. 2 circuit
	227		Short in system main relay No. 2 circuit
	228	SMR Cont3 Malfunction	Open or +B short in system main relay No. 3 circuit
	229		Short in system main relay No. 3 circuit
	231	Deposit of SMR	System main relay + terminal deposited
	232		System main relay – terminal deposited
	233		System main relay + & – terminal deposited
P3120	234	Energy Balance Malfunction	Small reduction of motor magnetism
	235		Large reduction of motor magnetism
	236		Small reduction of generator magnetism
	237		Large reduction of generator magnetism
	239	HV Transaxle Malfunction	Shaft damaged
	240		Generator locked
	241		Torque limiter sliding
	242		Planetary gear locked
	243	Motor Resolver Malfunction	Motor resolver inter-phase short
	244		Motor resolver inter-phase short (When there is a history that the state of malfunction continued during inverter fail safe mode)
	245		Open or short in motor resolver circuit
	246		Open or short in motor resolver circuit (When there is a history that the state of malfunction continued during inverter fail safe mode)

DIAGNOSTICS – HYBRID VEHICLE CONTROL SYSTEM

DTC NO.	INF. Code	Detection Item	Detecting Condition
P3120	247	Motor Temperature Sensor Malfunction	GND short in motor temperature sensor
	248		Motor temperature sensor malfunction
	249		Open or +B short in motor temperature sensor
	250		Motor temperature sensor performance problem
	253	Generator Resolver Malfunction	Generator resolver inter-phase short
	254		Generator resolver inter-phase short (When there is a history that the state of malfunction continued during inverter fail safe mode)
	255		Open or short in generator resolver circuit
	256		Open or short in generator resolver circuit (When there is a history that the state of malfunction continued during inverter fail safe mode)
	257	Generator Temperature Sensor Malfunction	GND short in generator temperature sensor
	258		Generator temperature sensor malfunction
	259		Open or +B short in generator temperature sensor
	260		Generator temperature sensor performance problem
P3125	263	DCDC Converter Malfunction	+B short in DCDC converter NODD wiring
	264		DCDC converter malfunction
	265		Open or GND short in DCDC converter NODD wiring
	266	VM Malfunction	Open or GND short in inverter voltage signal circuit
	267		+B short in inverter voltage signal circuit
	268		Inverter voltage signal is inconsistent with battery voltage
	269		Inverter voltage sensor malfunction
	270		Abnormality of line connection of inverter voltage signal circuit (When there is a history that the state of malfunction continued during inverter fail safe mode)
	272	Motor PWN Line Connection Malfunction	Abnormality of line connection of motor PWM (When there is a history that the state of malfunction continued during inverter fail safe mode)
	273	Motor Inverter Gate Malfunction	Motor inverter malfunction
	274	Motor Inverter Temperature	Open or +B short in motor inverter temperature sensor
	275		GND short in motor inverter temperature sensor
	276	Sensor Malfunction	Motor inverter temperature sensor malfunction
	277		Motor inverter temperature sensor performance problem
	278	Motor Inverter Sinv	+B short in motor inverter stop signal circuit
	279		Over voltage of inverter
	280		Open or GND short in motor inverter stop signal circuit
	281		Voltage drop of inverter power source
	282		Inverter circuit broken
	283	Motor Inverter Finv	+B short in motor inverter fail signal circuit
	284		Inverter overheating
	285		Open or GND short in motor inverter fail signal circuit
	286		Inverter circuit broken
	287		Inverter internal short


DTC NO.	INF. Code	Detection Item	Detecting Condition
P3125	288	Motor Inverter Current Sensor Malfunction	Motor inverter current sensor malfunction (V phase sub sensor)
	289		Open in motor inverter current sensor (V phase sub sensor)
	290		Motor inverter current sensor malfunction (V phase main sensor)
	291		(when there is a history that the state of malfunction continued during inverter fail safe mode)
	292		Open in motor inverter current sensor (V phase main sensor)
	293		(when there is a history that the state of malfunction continued during inverter fail safe mode)
	294		Motor inverter current sensor V phase performance problem
	295		(when there is a history that the state of malfunction continued during inverter fail safe mode)
	296		Motor inverter current sensor malfunction (W phase sub sensor)
	297		Open in motor inverter current sensor (W phase sub sensor)
	298		Motor inverter current sensor malfunction (W phase main sensor)
	299		(when there is a history that the state of malfunction continued during inverter fail safe mode)
	300		Open in motor inverter current sensor (W phase main sensor)
	301		(when there is a history that the state of malfunction continued during inverter fail safe mode)
	302	Motor Inverter Current Sensor Malfunction	Motor inverter current sensor W phase performance problem
	303		(when there is a history that the state of malfunction continued during inverter fail safe mode)
	304	Motor Gate Shutdown Signal Line Connection Malfunction	+B short in motor gate shutdown signal circuit
	305		Open or GND short in motor gate shutdown signal circuit
	306	Failure in Monitoring Motor Torque Performance	Failure in monitoring motor torque performance
	307	Abnormal Current Value of Motor	Abnormal current value of motor
	308	Detection of Collision Signal	Input of collision signal from airbag or inverter
	309	Motor PWM Line Connection Malfunction	Open or short in generator inverter switching wiring (GUU, GVU, GWU)
	311	Generator Inverter Malfunction	Generator inverter malfunction
	312	Generator Inverter Temperature Sensor Malfunction	Open or +B short in generator inverter temperature sensor
	313		GND short in generator inverter temperature sensor
	314		Generator inverter temperature sensor malfunction
	315		Generator inverter temperature sensor performance problem
	316	Generator Inverter Sinv	+B short in generator inverter stop signal circuit
	317		Over voltage of inverter
	318		Open or GND short in generation inverter stop signal circuit
	319		Voltage drop of inverter power source
	320		Inverter circuit broken
	321	Generator Inverter Finv	+B short in generator inverter fail signal circuit
	322		Inverter overheating
	323		Open or GND short in generator inverter fail signal circuit
	324		Inverter circuit broken
	325		Inverter internal short

DIAGNOSTICS – HYBRID VEHICLE CONTROL SYSTEM

DTC NO.	INF. Code	Detection Item	Detecting Condition
P3125	326	Generator Inverter Current Sensor Malfunction	Generator inverter current sensor malfunction (V phase sub sensor)
	327		Open in generator inverter current sensor (V phase sub sensor)
	328		Generator inverter current sensor malfunction (V phase main sensor)
	329		(when there is a history that the state of malfunction continued during inverter fail safe mode)
	330		Open in generator inverter current sensor (V phase main sensor)
	331		(when there is a history that the state of malfunction continued during inverter fail safe mode)
	332		Generator inverter current sensor V phase performance problem
	333		(when there is a history that the state of malfunction continued during inverter fail safe mode)
	334		Generator inverter current sensor malfunction (W phase sub sensor)
	335		Open in generator inverter current sensor (W phase sub sensor)
	336		Generator inverter current sensor malfunction (W phase main sensor)
	337		(when there is a history that the state of malfunction continued during inverter fail safe mode)
	338		Open in generator inverter current sensor (W phase main sensor)
	339		(when there is a history that the state of malfunction continued during inverter fail safe mode)
	340		Generator inverter current sensor W phase performance problem
	341		(when there is a history that the state of malfunction continued during inverter fail safe mode)
	342	Motor Gate Shutdown Signal Line Connection	+B short in generator gate shutdown signal circuit
	343		Open or GND short in generator gate shutdown signal circuit
	344	Failure in Monitoring Generator Torque Performance	Failure in monitoring generator torque performance
	345	Abnormal Current Value of Generator	Abnormal current value of generator
P3130	346	Inverter Cooling System Malfunction	Water pump system malfunction
	347		Electric cooling fan system malfunction
P3135	348	Circuit Breaker Sensor Malfunction	GND short in circuit breaker sensor
	349		Open or +B short in circuit breaker sensor
P3140	350	Interlock Malfunction	Safety devices operating with vehicle is stopped (ILK signal ON)
	351		Open circuit in interlock signal circuit while vehicle is running
P3145	352	Vehicle Speed Sensor Circuit Malfunction	No input of vehicle speed signal during cruise control driving

TERMINALS OF ECU

HV ECU Terminals

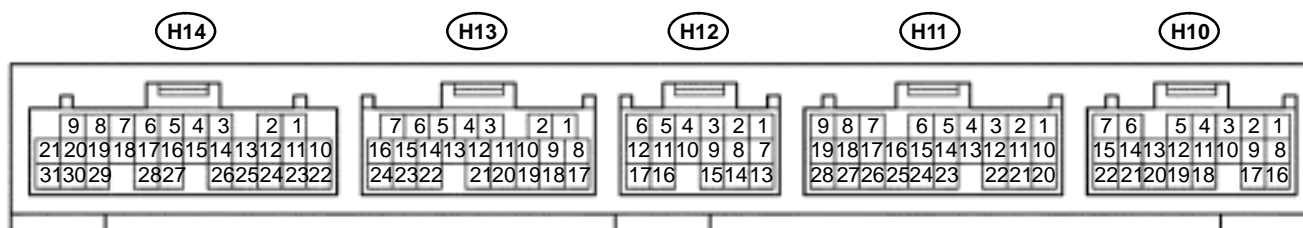

A02508

A04997

Symbols (Terminals No.)	Wiring Color	Condition	STD Voltage (V)
BATT (H14-3) ↔ GND1 (H14-31)	G-Y ↔ W-B	Always	9 – 14
+B1 (H14-4) ↔ GND1 (H14-31)	W-G ↔ W-B	Ignition switch ON and "READY" light ON	9 – 14
+B2 (H14-5) ↔ GND1 (H14-31)	W-G ↔ W-B	Ignition switch ON and "READY" light ON	9 – 14
IGSW (H13-7) ↔ GND1 (H14-31)	B-W ↔ W-B	Ignition switch ON	9 – 14
ST2 (H13-6) ↔ GND1 (H14-31)	R-W ↔ W-B	Ignition switch ST	9 – 14
ST1 (H14-2) ↔ GND1 (H14-31)	B-Y ↔ W-B	Brake pedal is depressed	Below 0.5
		Brake pedal is released	9 – 14
STP (H14-1) ↔ GND1 (H14-31)	G-W ↔ W-B	Brake pedal is depressed	9 – 14
		Brake pedal is released	Below 0.5
VCP1 (H14-13) ↔ GND1 (H14-31)	Y ↔ W-B	Ignition switch ON	Approx. 5
VPA1 (H14-14) ↔ GND1 (H14-31)	G ↔ W-B	Ignition switch ON and accelerator pedal is released	Approx. 1
		Ignition switch ON and accelerator pedal is fully depressed	Approx. 4
EP1 (H14-12) ↔ GND1 (H14-31)	L ↔ W-B	Ignition switch ON	Below 0.5
VCP2 (H14-23) ↔ GND1 (H14-31)	B ↔ W-B	Ignition switch ON	Approx. 5
VPA2 (H14-15) ↔ GND1 (H14-31)	W ↔ W-B	Ignition switch ON and accelerator pedal is released	Approx. 1
		Ignition switch ON and accelerator pedal is fully depressed	Approx. 4
EP2 (H14-22) ↔ GND1 (H14-31)	R ↔ W-B	Ignition switch ON	Below 0.5
P (H13-15) ↔ GND1 (H14-31)	L-R ↔ W-B	Shift lever is P position	Below 1
		Except shift lever is P position	4 or more
R (H13-14) ↔ GND1 (H14-31)	R-B ↔ W-B	Shift lever is R position	Below 1
		Except shift lever is R position	4 or more
N (H13-13) ↔ GND1 (H14-31)	L-W ↔ W-B	Shift lever is N position	Below 1
		Except shift lever is N position	4 or more
D (H13-23) ↔ GND1 (H14-31)	L-B ↔ W-B	Shift lever is D position	Below 1
		Except shift lever is D position	4 or more
B (H13-22) ↔ GND1 (H14-31)	LG-R ↔ W-B	Shift lever is B position	Below 1
		Except shift lever is B position	4 or more

SFT (H13-11) ↔ GSFT (H13-21)	B-R	Shift lever is P position	Approx. 0.5
		Shift lever is R position	Approx. 2.8
		Shift lever is N position	Approx. 3.4
		Shift lever is D position	Approx. 4.0
		Shift lever is B position	Approx. 4.5
VSFT (H13-12) ↔ GSFT (H13-21)	W-R	Ignition switch ON	4 or more
SPDI (H12-8) ↔ GND1 (H14-31)	V-W ↔ W-B	Ignition switch ON and rotor driving wheel slowly	Pulse generation
ESTP (H14-8) ↔ GND1 (H14-31)	R-Y ↔ W-B	Engine stop is not required	9 – 14
		Engine stop is required	Below 1
SPDO (H14-6) ↔ GND1 (H14-31)	O ↔ W-B	Ignition switch ON and rotor driving wheel slowly	Pulse generation
NODD (H12-4) ↔ GND1 (H14-31)	L-O ↔ W-B	When converter is in normal operation	5 – 7
		When converter is improper	2 – 4
		When converter is required to stop	0.1 – 0.5
ILK (H13-4) ↔ GND1 (H14-31)	O ↔ W-B	Ignition switch ON and interlock switch ON	Below 1
		Ignition switch ON and interlock switch OFF	4 or more
AS1G (H12-14) ↔ AS1 (H12-15)	BR-B ↔ G-R	Ignition switch ON	2.5 – 2.9
IB (H14-25) ↔ GB (H14-26)	B-L ↔ R-W	Ignition switch OFF	Below 1
		Ignition switch from ON to ST ("READY" light ON)	0.5 – 4.5
ABFS (H13-3) ↔ GND1 (H14-31)	L ↔ W-B	Ignition switch ON and "READY" light ON	2.7 – 3.2
MREL (H12-7) ↔ GND1 (H14-31)	O ↔ W-B	Ignition switch ON	9 – 14

Communication Line

Symbols (Terminals No.)	Wiring Color	Connecting Part or Symbol (Terminal No.)
GSNG (H10-11)	G	MG1, GSNG (M2-7)
GSN (H10-4)	R	MG1, GSN (M2-2)
GRF (H10-10)	B	MG1, GRF (M2-1)
GRFG (H10-17)	W	MG1, GRFG (M2-6)
GCS (H10-5)	Y	MG1, GCS (M2-3)
GCSG (H10-12)	BR	MG1, GCSG (M2-8)
GMTG (H10-8)	G-W	MG1, GMTG (M2-9)
GMT (H10-1)	B-R	MG1, GMT (M2-4)
MSNG (H10-20)	G	MG2, MSNG (M3-5)
MSN (H10-13)	R	MG2, MSN (M3-2)
MRF (H10-19)	P	MG2, MRF (M3-1)
MRFG (H10-18)	L	MG2, MRFG (M3-4)
MCS (H10-14)	B	MG2, MCS (M3-3)
MCSG (H10-21)	W	MG2, MCSG (M3-6)
MMTG (H10-9)	R-W	MG2, MMTG (M4-3)
MMT (H10-2)	GR	MG2, MMT (M3-1)
MSIV (H11-21)	G	Inverter, M-SINV (I10-7)
MSDN (H11-13)	Y	Inverter, M-SDOWN (I9-4)
MIT (H11-11)	L	Inverter, M-INVT (I9-5)

DIAGNOSTICS – HYBRID VEHICLE CONTROL SYSTEM

MWU (H11-6)	G	Inverter, M-WU (I9-3)
MUU (H11-4)	R	Inverter, M-UU (I9-1)
MVU (H11-5)	W	Inverter, M-VU (I9-2)
MIVG (H11-26)	B	Inverter, M-GINV (I9-6)
MIVA (H11-16)	B	Inverter, M-IVA (I10-1)
MIVB (H11-7)	W	Inverter, M-IVB (I10-3)
MIWB (H11-17)	G	Inverter, M-IWB (I10-4)
VB (H11-20)	Y	Inverter, VB (I10-5)
MIWA (H11-25)	R	Inverter, M-IWA (I10-2)
GIVA (H11-19)	B	Inverter, G-IVA (I12-1)
GIVB (H11-8)	W	Inverter, G-IVB (I12-3)
GIWB (H11-18)	G	Inverter, G-IWB (I12-4)
GIWA (H11-28)	R	Inverter, G-IWA (I12-2)
GSDN (H11-12)	Y	Inverter, G-SDOWN (I11-4)
GIT (H11-23)	L	Inverter, G-INVT (I11-5)
GWU (H11-3)	G	Inverter, G-WU (I11-3)
GVU (H11-2)	W	Inverter, G-VU (I11-2)
GUU (H11-1)	R	Inverter, G-UU (I11-1)
GIVG (H11-27)	B	Inverter, G-GINV (I11-6)
MFIV (H11-14)	B	Inverter, M-FINV (I10-8)
GSIV (H11-15)	G	Inverter, G-SINV (I12-7)
GFIV (H11-24)	B	Inverter, G-FINV (I12-8)
ETH+ (H14-28)	P	Engine ECU, ETH+ (E9-28)
ETH- (H14-27)	L	Engine ECU, ETH- (E9-27)
HTE+ (H14-19)	Y	Engine ECU, H TE+ (E9-19)
HTE- (H14-29)	BR	Engine ECU, H TE- (E9-18)
HTB+ (H14-20)	LG	Brake ECU, HVI+ (B10-24)
HTB- (H14-30)	V	Brake ECU, HVI- (B10-16)
BTH+ (H14-18)	G	Brake ECU, HVO+ (B10-14)
BTH- (H14-17)	R	Brake ECU, HVO- (B10-22)
FCVC (H14-7)	B-W	Transponder Key ECU, HEVC (T4-8)
CON1 (H12-13)	V	System Main Relay (S8-3)
CON2 (H12-2)	GR	System Main Relay (S8-4)
CON3 (H13-1)	P	System Main Relay (S8-5)
HTD+ (H13-2)	W	Battery ECU, HTD+ (B17-6)
HTD- (H13-20)	B	Battery ECU, HTD- (B17-7)
DTD+ (H13-19)	R	Battery ECU, DTD+ (B17-18)
DTD- (H13-18)	G	Battery ECU, DTD- (B17-19)

CIRCUIT INSPECTION

DTC	B2799	Immobilizer Malfunction
------------	--------------	--------------------------------


CIRCUIT DESCRIPTION

The HV ECU checks the condition of the communication from the transponder key ECU.

DTC B2799 – Information code 101

INF. code.	Detecting Condition	Trouble Area
101	No input of signal from transponder key ECU	<ul style="list-style-type: none"> • Wire harness • Immobilizer system

WIRING DIAGRAM

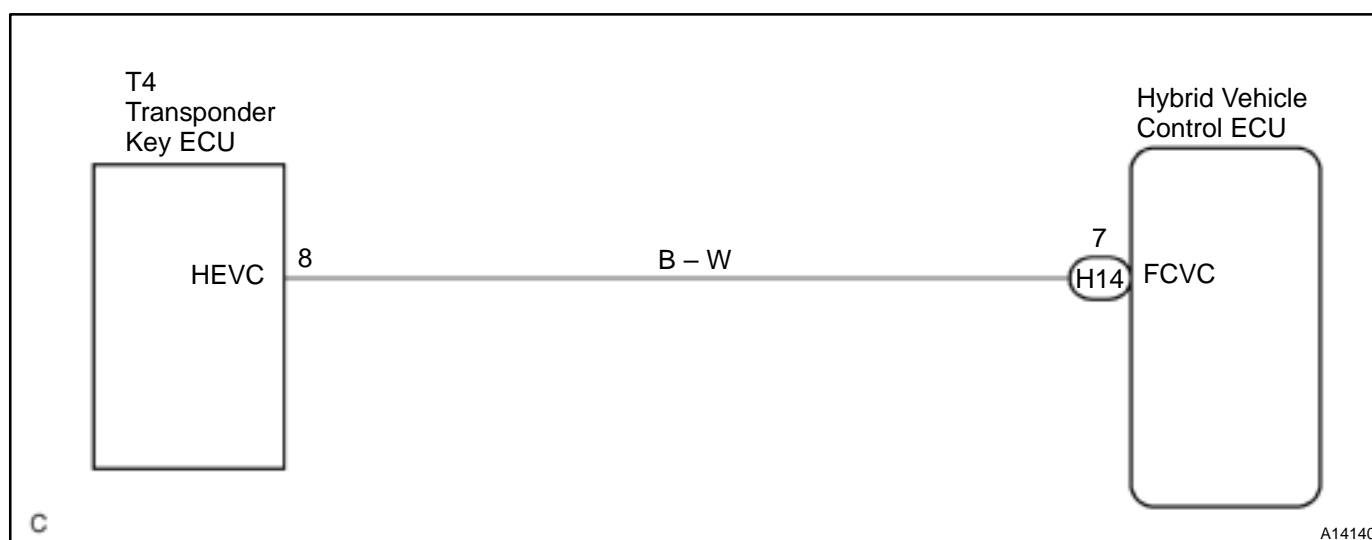

INSPECTION PROCEDURE

1	Check for open and short in wire harness between HV ECU FCVC terminal and transponder key ECU HEVC terminal (See page IN-41).
---	--

NG

Repair or replace wire harness.

OK

Check and repair immobilizer system (See page [BE-104](#)).

DTC	P1120	Accelerator Pedal Position Sensor Circuit Malfunction
------------	--------------	--

CIRCUIT DESCRIPTION

The accelerator pedal position sensor mounted on the accelerator pedal has main and sub sensors and detects the accelerator pedal position and the malfunction of the accelerator position sensor itself.


HINT:

- When using an OBD scan tool other than TOYOTA hand-held tester, check all the steps.
- When using TOYOTA hand-held tester, confirm the information code and check it.

DTC P1120 – Information code 104, 105, 107, 108

INF. code.	Detecting Condition	Trouble Area
104	Open or short in main accelerator sensor circuit	<ul style="list-style-type: none"> Accelerator pedal position sensor Wire harness
105	+B short in main accelerator sensor circuit	
107	Open or short in sub accelerator sensor circuit	
108	+B short in sub accelerator sensor circuit	

WIRING DIAGRAM

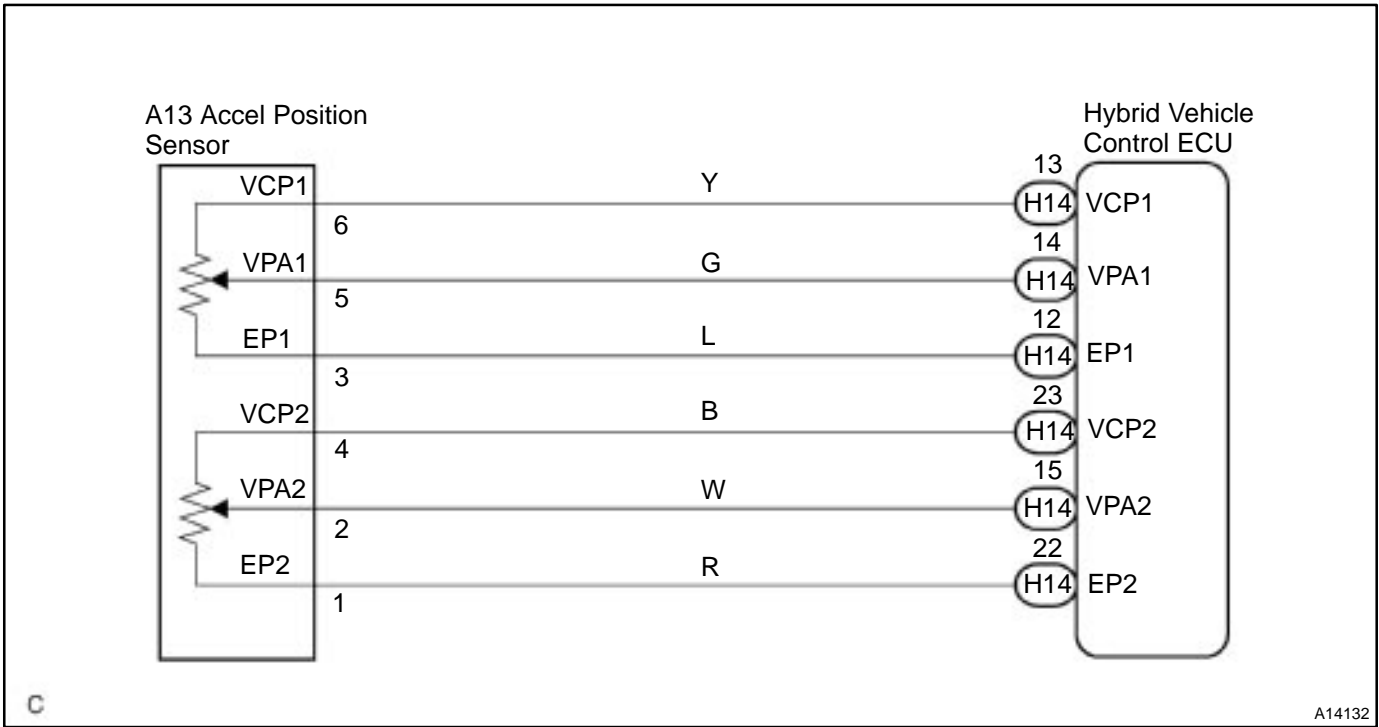

INSPECTION PROCEDURE

1	Check for open, short and +B short in wire harness between HV ECU and accelerator pedal position sensor (See page IN-41).
---	--

Terminals for checking open and short:

Accelerator pedal position sensor Terminals	HV ECU Terminals
VCP1	VCP1
VPA1	VPA1
EP1	EP1
VCP2	VCP2
VPA2	VPA2
EP2	EP2

HINT:

The acceleration pedal position sensor circuit has +B short if the voltage at the HV ECU VPA1 or VPA2 terminal is more than 5V with the ignition ON.

NG

Repair or replace wire harness.

OK

Check and replace accelerator pedal position sensor (See page [SF-59](#)).

DTC P1120 – Information code 106, 109, 110, 111, 112, 113, 114

INF. code.	Detecting Condition	Trouble Area
106	Main sensor internal error	• Accelerator pedal position sensor
109	Sub sensor internal error	
110	When difference between main sensor value and sub sensor value is large	
111	When sub sensor value changes while main sensor value does not	
112	When main sensor value changes while sub sensor value does not	
113	When any of the information code 104 – 112 continues to appear	
114	Accelerator pedal not smoothly returning to original position	

INSPECTION PROCEDURE

If the information code 106 or 109 – 114 is output, check and replace the accelerator pedal position sensor (See page [SF-59](#)).

DTC	P1520	Stop Light Switch (Cruise Control System) Malfunction
------------	--------------	--

CIRCUIT DESCRIPTION


The HV ECU detects the malfunction of the cruise control system and inhibits the operation of the cruise control.

It detects faulty output of the STP and ST1- signals sent from the stop light switch or an error signal from the brake ECU.

DTC P1520 – Information code 115

INF. code.	Detecting Condition	Trouble Area
115	Open or short in stop light switch circuit	<ul style="list-style-type: none"> • Stop light switch • Wire harness • Brake ECU

WIRING DIAGRAM

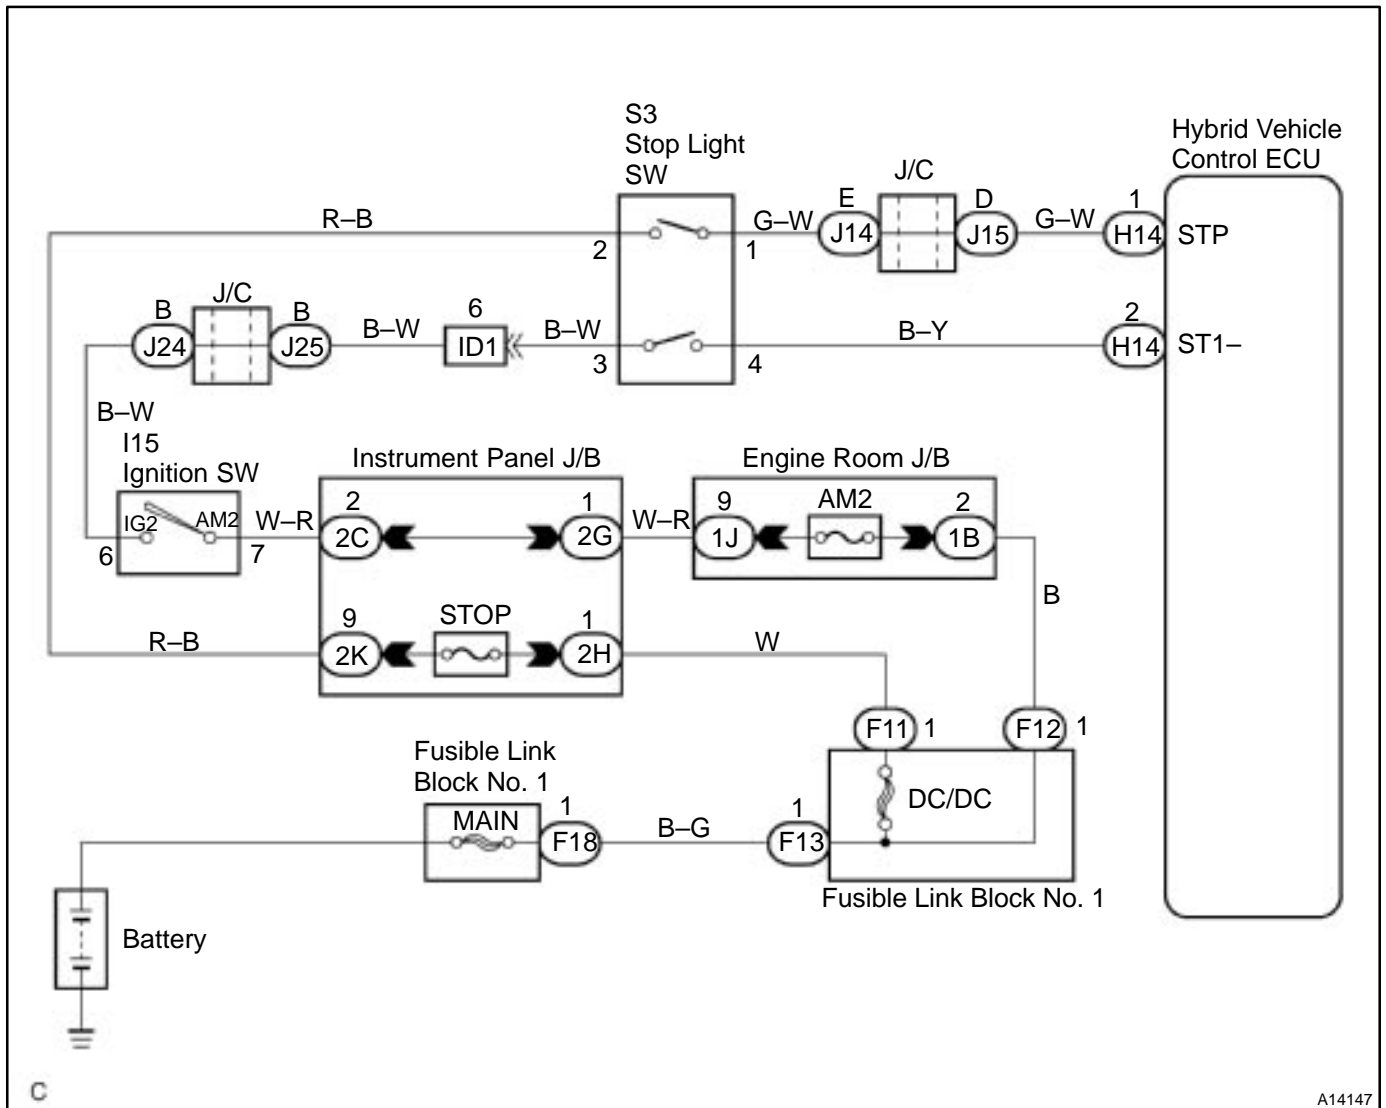

INSPECTION PROCEDURE

1	Is DTC of brake ECU being output?
<div>YES</div> <div>Check DTC of brake ECU (See page DI-358).</div>	
<div>NO</div>	
2	Check voltage between terminal 2, 3 of stop light switch and body ground.
<div>NG</div> <div>Repair or replace wire harness or connector.</div>	
<div>OK</div>	
3	Check for open and short in wire harness between stop light switch and terminals STP, ST1– of HV ECU (See page IN-41).
<div>NG</div> <div>Repair or replace wire harness.</div>	
<div>OK</div>	
Check and replace stop light switch (See page BE-32).	

DTC	P1566	Cruise Control System Malfunction
------------	--------------	--

CIRCUIT DESCRIPTION

The HV ECU and the brake ECU monitor the same STP signal. If any difference is identified between both received signals, the HV ECU outputs an error.

DTC P1566 – Information code 116

INF. code.	Detecting Condition	Trouble Area
116	When STP signal of HV ECU is inconsistent with that of brake ECU, with cruise control indicator ON.	<ul style="list-style-type: none"> • Brake ECU • Wire harness • Stop light switch

WIRING DIAGRAM

Refer to [DI-215](#).

INSPECTION PROCEDURE

1	Is DTC of brake ECU being output (See page DI-351)?
----------	--

YES

Check DTC of brake ECU (See page [DI-351](#)).

NO

2	Check for +B short in wire harness between stop light switch and terminals STP, ST1-of HV ECU (See page IN-41).
----------	--

HINT:

Under the normal condition, the voltage of the HV ECU STP terminal is 0V when the brake pedal is released with the ignition OFF. If there is any output of voltage at this time, the stop light switch circuit has +B short.

NG

Repair or replace wire harness.

OK

3	Check for open and short in wire harness between stop light switch and brake ECU.
---	---

NG

Repair or replace wire harness.

OK

Check and replace stop light switch (See page [BE-32](#)).

DTC	P1600	BATT Malfunction
------------	--------------	-------------------------


CIRCUIT DESCRIPTION

Since the ECU back-up power source is used for DTC and freeze frame data memory, the back-up power source (BATT) continues to be supplied to the HV ECU even though the ignition switch is turned OFF.

DTC P1600 – Information code 117

INF. code.	Detecting Condition	Trouble Area
117	HV ECU back-up power source circuit malfunction	<ul style="list-style-type: none"> • HV Fuse • Wire harness

WIRING DIAGRAM

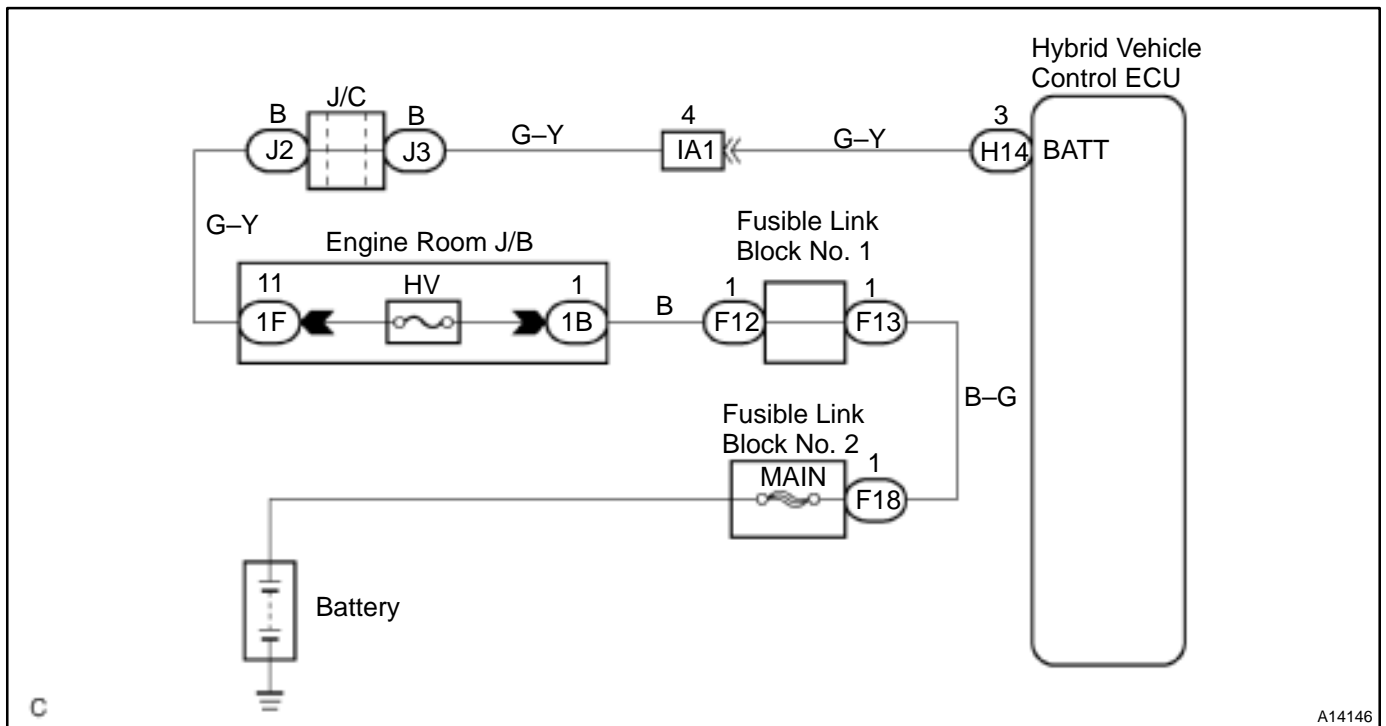

INSPECTION PROCEDURE

1	Check continuity of HV fuse of engine room J/B.
----------	--

OK:**Continuity****NG****Check for short in all harness and parts connected to HV fuse.****OK****Repair or replace wire harness.**

DTC	P1780	Park/neutral Position Switch System Malfunction
------------	--------------	--

CIRCUIT DESCRIPTION

The park/neutral position switch sends both main sensor signal (switch signal) and sub sensor signal (analogue value) to the HV ECU. The HV ECU uses those signals to detect the shift lever position (P, R, N, D or B) and to control the forward and backward movement of the vehicle.


HINT:

- When using an OBDⅡ scan tool other than TOYOTA hand-held tester, check all the steps.
- When using TOYOTA hand-held tester, confirm the information code and check it.

DTC P1780 – Information code 118, 119, 120, 121

INF. code.	Detecting Condition	Trouble Area
118	When more than 2 main signals are ON	<ul style="list-style-type: none"> • Park/neutral position switch • Wire harness
119	When main signal is not turned ON even though sub signal has been input	
120	Open or short in sub sensor circuit	
121	When shift position detected by main signal is different from that detected by sub signal	

WIRING DIAGRAM

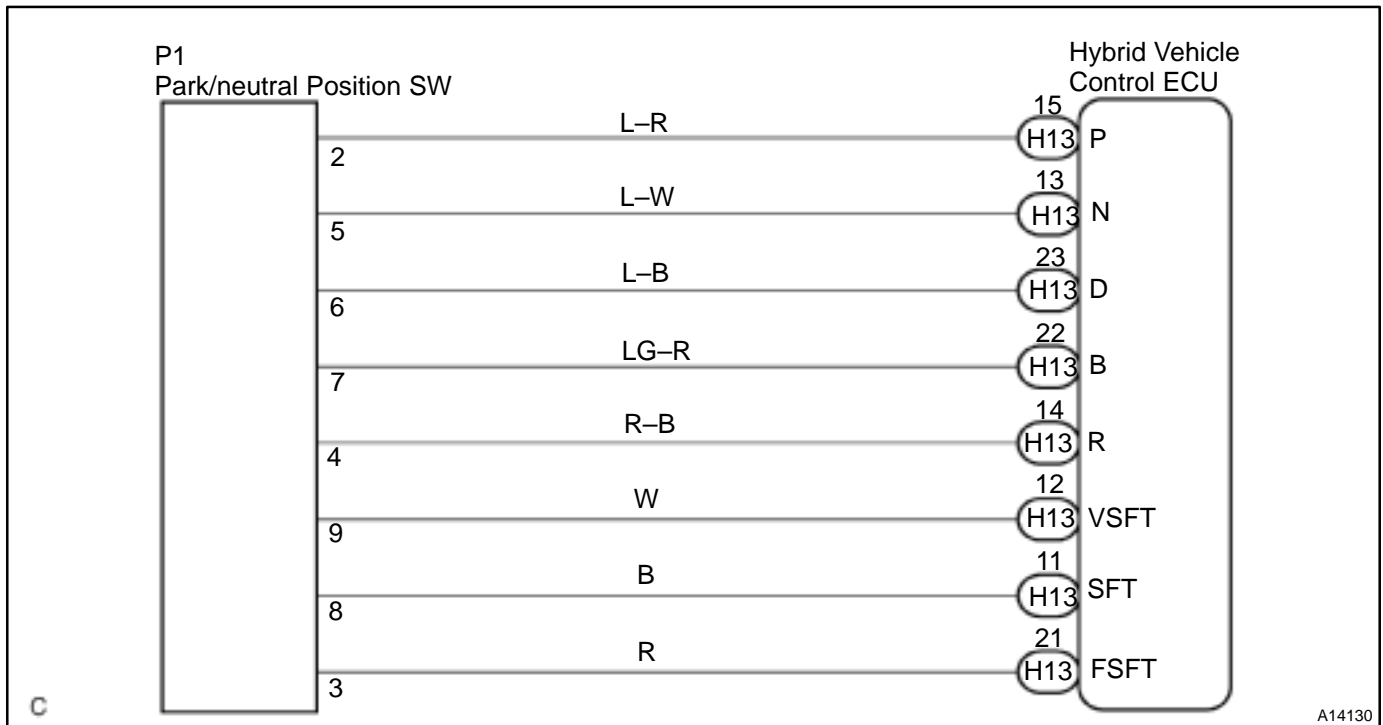

INSPECTION PROCEDURE

- | | |
|----------|---|
| 1 | Check for open and short in wire harness between park/neutral position switch and HV ECU (See page IN-41). |
|----------|---|

Terminals for checking open and short:

Park/neutral Position Switch Terminals	HV ECU Terminals
2	P
5	N
6	D
7	B
4	R
9	VSFT
8	SFT
3	GSFT

NG

Repair or replace wire harness.

OK

Check and repair park/neutral position switch (See page [HT-54](#)).

DTC	P3004	Power Cable Malfunction
------------	--------------	--------------------------------

CIRCUIT DESCRIPTION

If the inverter voltage is not decreased after discharge with the ignition switch OFF, the VM sensor in the inverter is determined as defective.

HINT:

- When using an OBD \square scan tool other than TOYOTA hand-held tester, check all the steps.
- When using TOYOTA hand-held tester, confirm the information code and check it.

DTC P3004 – Information code 130

INF. Code.	Detecting Condition	Trouble Area
130	When HV battery voltage becomes lower than inverter voltage	Converter & inverter assembly

INSPECTION PROCEDURE

1	Are there any other codes of HV ECU being outputs?
----------	---

YES

Go to relevant DTC chart.

NO

Replace converter & inverter assembly.

DTC P3004 – Information code 131

INF. Code.	Detecting Condition	Trouble Area
131	When condition (a), (b) or (c) is detected: (d) Main fuse blown out (e) Service plug disconnected (f) Limiter resistance cut off	<ul style="list-style-type: none"> • Service plug • Power cable • System main relay

INSPECTION PROCEDURE

1	Is DTC of battery ECU being output?
----------	--

YES**Check the applicable DTC.****NO**

2	Check condition of service plug terminal (Loosened, poor contact, etc.).
----------	---

NG**Replace service plug.****OK**

3	Check continuity of power cable.
----------	---

OK:**Continuity :Less than 1 Ω****NG****Replace the power cable.****OK****Replace the system main relay.**

CIRCUIT DESCRIPTION

DTC P3004 – Information code 132

INF. Code.	Detecting Condition	Trouble Area
132	When inverter voltage sensor is malfunctioning or limiter resistance value increases.	<ul style="list-style-type: none"> • Converter & inverter assembly • Power cable • System main relay

INSPECTION PROCEDURE


1	Are other information codes recorded?
---	---------------------------------------

YES

Check applicable information code (See page [DI-197](#)).

NO

2	Check continuity of limiter resistance in system main relay.
---	--

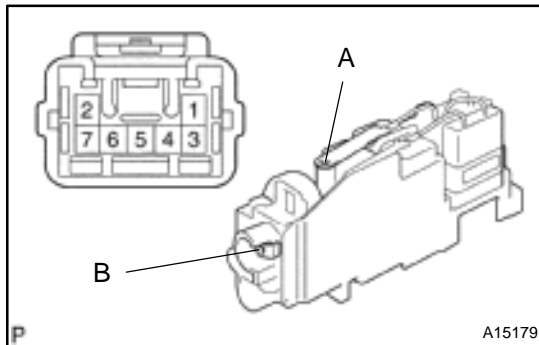

PREPARATION:

Remove the system main relay.

CHECK:

- Apply battery voltage across terminals 1 and 3.
- Using an ohmmeter, check that there is continuity between terminals A and B.

OK:

Continuity

NG

Replace the system main relay.

OK

Check continuity and replace power cable.

CIRCUIT DESCRIPTION

The HV ECU gives warning to the driver and performs the fail safe control, according to the abnormal signal received from the battery ECU.

DTC P3004 – Information code 133

INF. Code.	Detecting Condition	Trouble Area
133	Input of abnormal signal from battery ECU	• HV battery system

INSPECTION PROCEDURE

If the information code 133 output, after confirming the DTC of the HV Battery ECU, check and repair the applicable DTC. After repairing it, record the DTC of the HV ECU, freeze frame data and history of operation. Then, clear the DTC and check it one more time after starting the system again ("READY" light ON).

DTC	P3100	HV ECU Malfunction
------------	--------------	---------------------------

CIRCUIT DESCRIPTION

The HV ECU compares Ne signal with G signal that are sent from the ECM and checks whether the engine rpm signal is correct or not.


HINT:


- When using an OBDⅡ scan tool other than TOYOTA hand-held tester, check all the steps.
- When using TOYOTA hand-held tester, confirm the information code and check it.

DTC P3100 – Information code 136, 137

INF. Code.	Detecting Condition	Trouble Area
136	Open or short in GO signal circuit	<ul style="list-style-type: none"> • Wire harness • ECM
137	Engine speed sensor malfunction	<ul style="list-style-type: none"> • Crankshaft position sensor • Camshaft position sensor

WIRING DIAGRAM

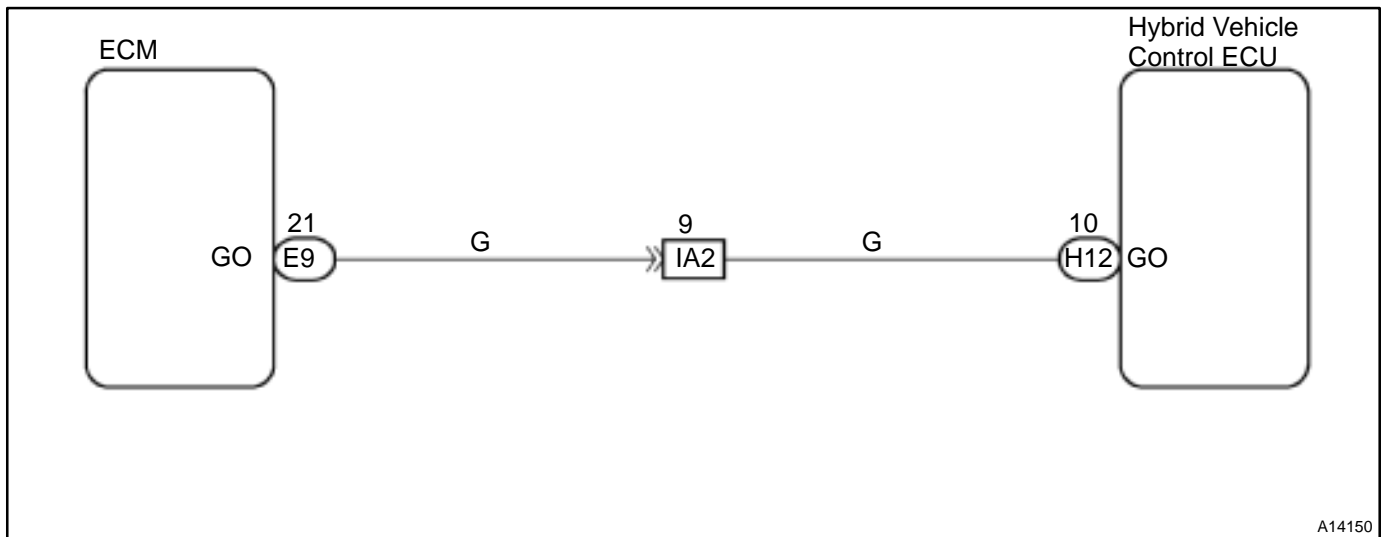

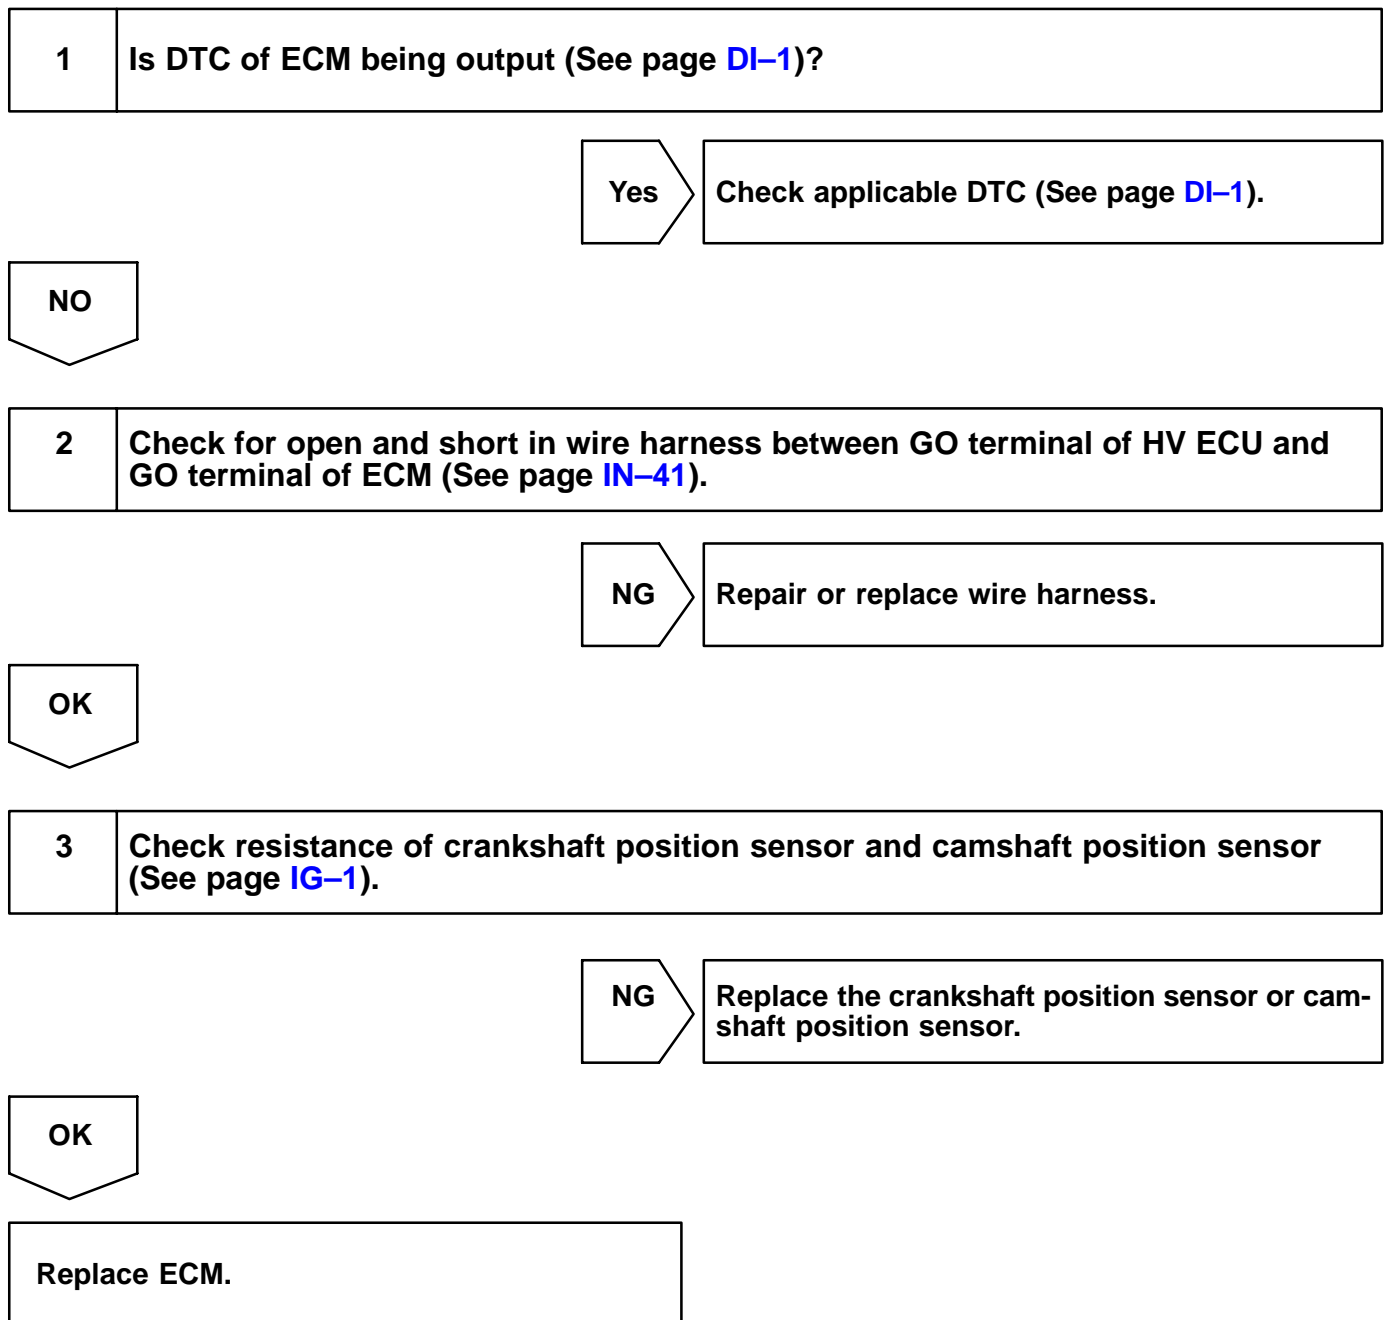INSPECTION PROCEDURE


CIRCUIT DESCRIPTION

The HV ECU checks the current value of the battery and detects malfunction.

DTC P3100 – Information code 127, 128, 138

INF. Code.	Detecting Condition	Trouble Area
127	+B short in IB terminal circuit of HV ECU	<ul style="list-style-type: none"> • Wire harness • HV ECU
128	Open or short in IB terminal circuit of HV ECU	
138	When the difference between battery current of HV ECU and current of battery is large.	

WIRING DIAGRAM

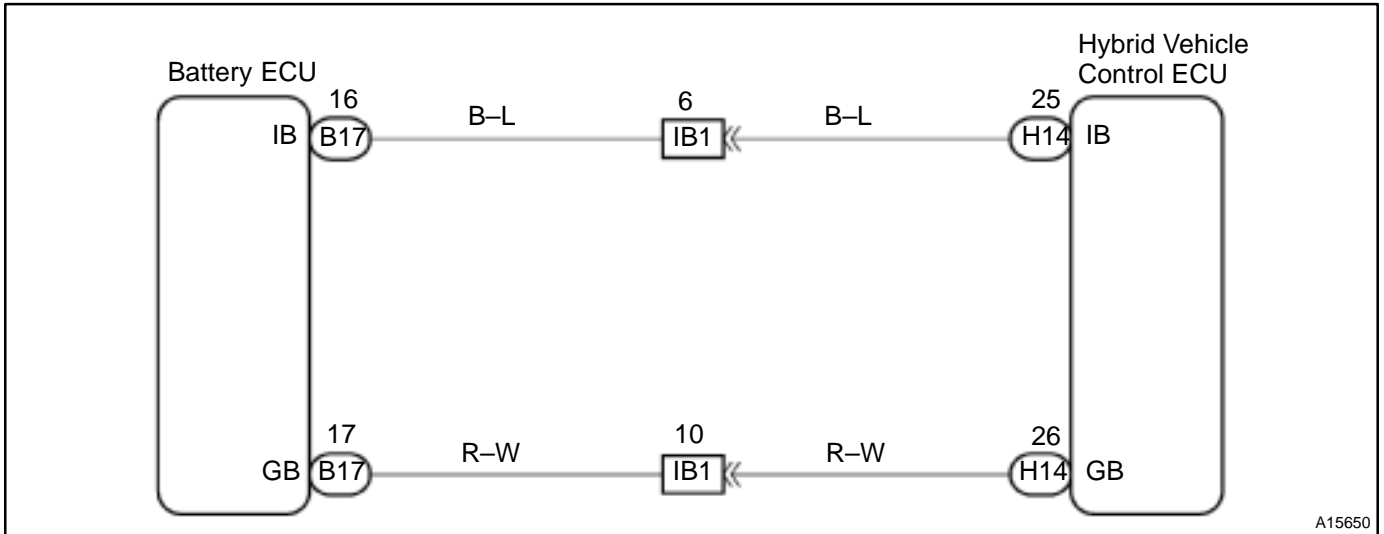

INSPECTION PROCEDURE

1	Is DTC of battery ECU being output (See page DI-312)?
----------	--

HINT:

In case of output of Information code 128, check whether V– wire harness of battery ECU DTC P3115 is open or short at first. When there is no–abnormality, go to step 2.

Yes**Check applicable DTC (See page [DI-312](#)).****NO**

2	Check for open, short and +B short in wire harness between HV ECU IB and GB terminals and battery ECU IB and GB terminals (See page IN-41).
----------	--

HINT:

The HV ECU IB terminal has +B short if there is no open in wire harness and the voltage of the IB or GB terminal is more than 5 V with the ignition ON.

NG**Repair or replace wire harness.****OK****Replace HV ECU.**


CIRCUIT DESCRIPTION

The HV ECU checks the ST signal and detects malfunction. If the ST signal has +B short, the ST will always be ON. Therefore, even with the IG ON when starting the THS, the system will start. To prevent this from happening, the HV ECU detects the malfunction of the ST signal.

DTC P3100 – Information code 142

INF. Code.	Detecting Condition	Trouble Area
142	When ST signal of HV ECU is ON, with ignition switch turned OFF.	<ul style="list-style-type: none"> • Wire harness • HV ECU • Ignition switch

WIRING DIAGRAM

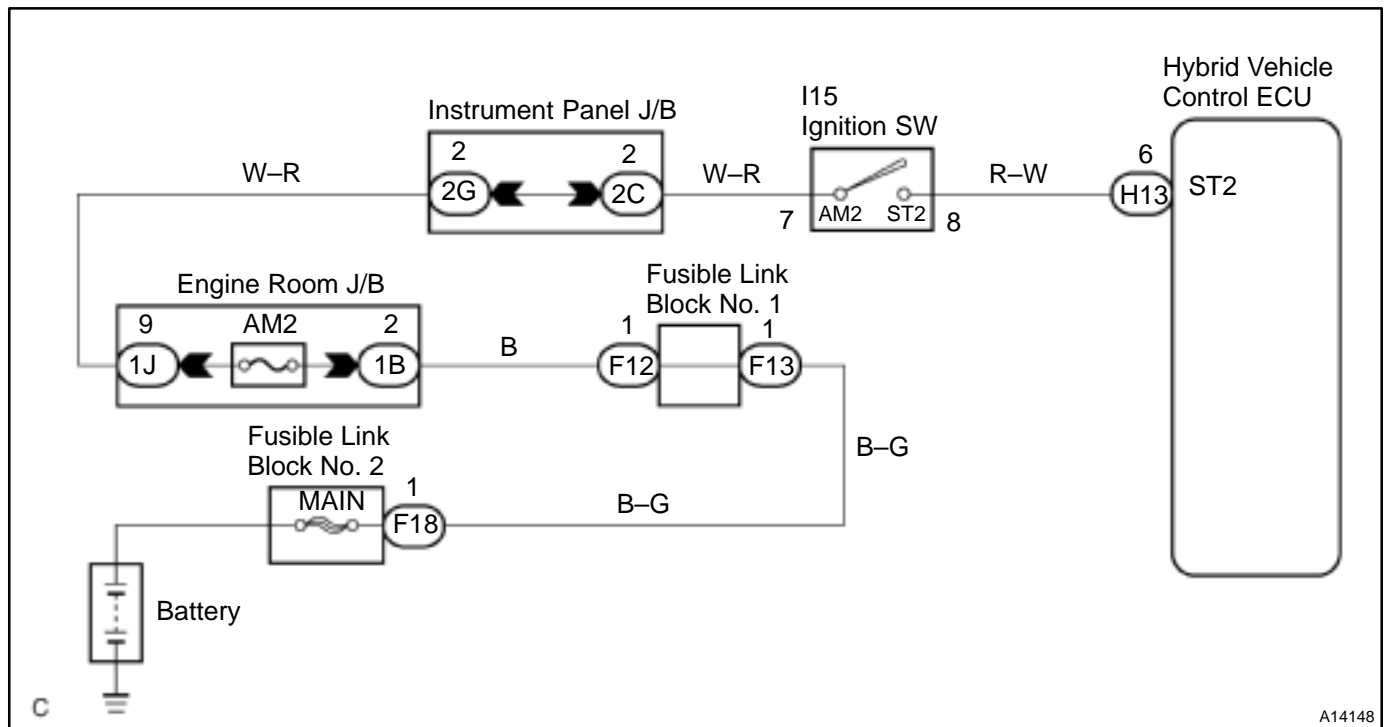

INSPECTION PROCEDURE

1	Check ignition switch (See page BE-17).
----------	--

NG**Replace ignition switch (See page [SR-11](#)).****NO**

2	Check for +B short in wire harness between ignition switch ST2 terminal and HV ECU ST2 terminal (See page IN-41).
----------	--

HINT:

The HV ECU ST circuit has +B short if battery voltage is supplied to the ST2 terminal.

NG**Repair or replace wire harness.****OK****Replace HV ECU.**

CIRCUIT DESCRIPTION

The HV ECU checks the internal operation of the ECU and detects malfunction.

DTC P3100 – Information code 134, 135, 139, 140, 141, 143, 144, 145, 146, 147, 148, 149, 150, 151, 152, 153, 154, 155, 156, 157, 158, 159, 160, 161, 162, 163, 164, 165, 166, 167, 168, 169, 170, 171, 172, 173, 174, 175, 176, 177, 178, 179, 180, 181, 182, 183, 184, 185, 186, 187, 188, 189, 190, 191, 192, 193, 194, 195, 196, 197, 198, 199, 200, 201, 202, 203, 271, 310, 390, 391, 392, 393

INF. Code.	Detecting Condition	Trouble Area
134	HV ECU internal error	• HV ECU
135		
139		
140		
141		
143		
144		
145		
146		
147		
148		
149		
150		
151		
152		
153		
154		
155		
156		
157		
158		
159		
160		
161		
162		
163		
164		
165		
166		
167		
168		
169		

INF. Code.	Detecting Condition	Trouble Area
170	HV ECU internal error	• HV ECU
171		
172		
173		
174		
175		
176		
177		
178		
179		
180		
181		
182		
183		
184		
185		
186		
187		
188		
189		
190		
191		
192		
193		
194		
195		
196		
197		
198		
199		
200		
201		
202		
203		
271		
310		
390		
391		
392		
393		

INSPECTION PROCEDURE

If any of the above information codes is output, replace the HV ECU.

DTC	P3105	Battery ECU Communication Circuit Malfunction
------------	--------------	--


CIRCUIT DESCRIPTION

The HV ECU monitors the communication signal from the battery ECU and if it cannot monitor it due to noise or other reasons, judges as an error.


DTC P3105 – Information code 206, 207, 208

INF. Code.	Detecting Condition	Trouble Area
206	When communication between battery ECU and HV ECU is abnormal 1 sec. after ignition is turned ON	<ul style="list-style-type: none"> • Wire harness • Battery ECU
207		
208		

WIRING DIAGRAM

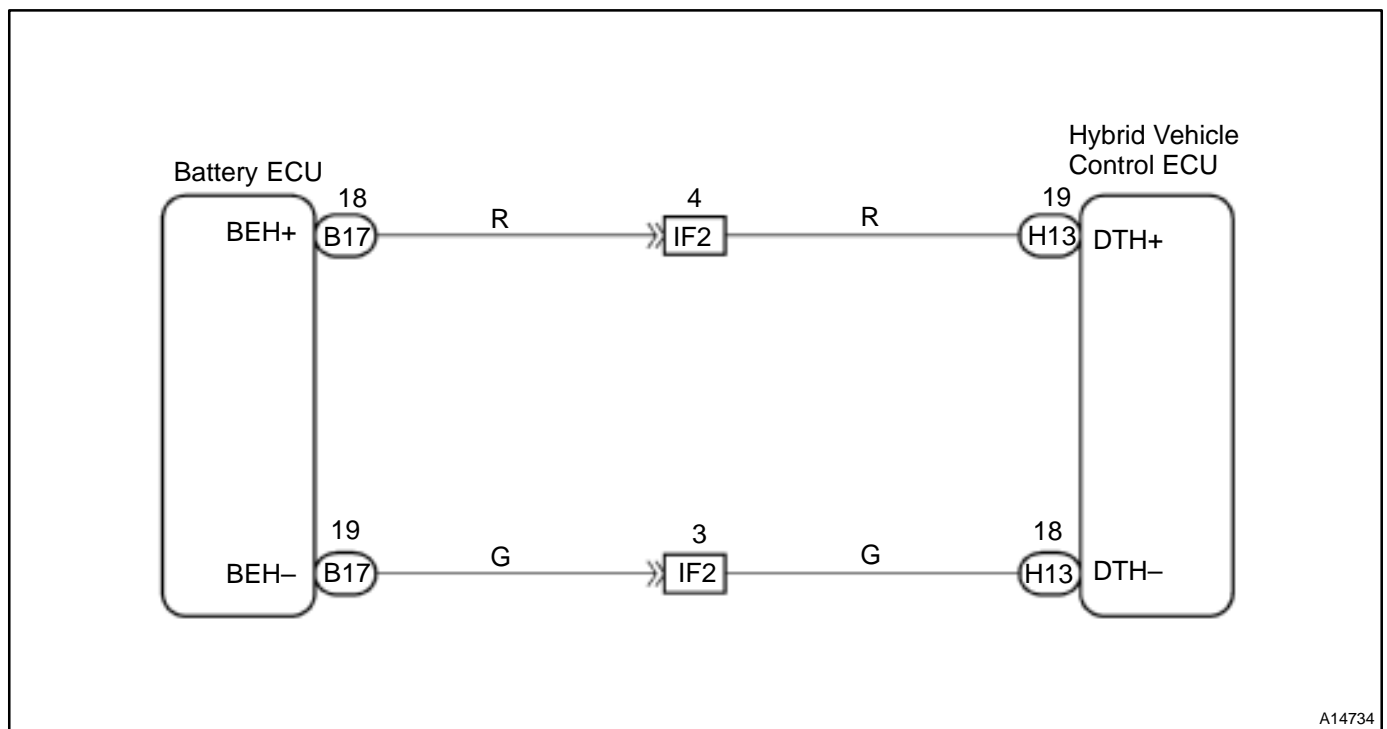

INSPECTION PROCEDURE

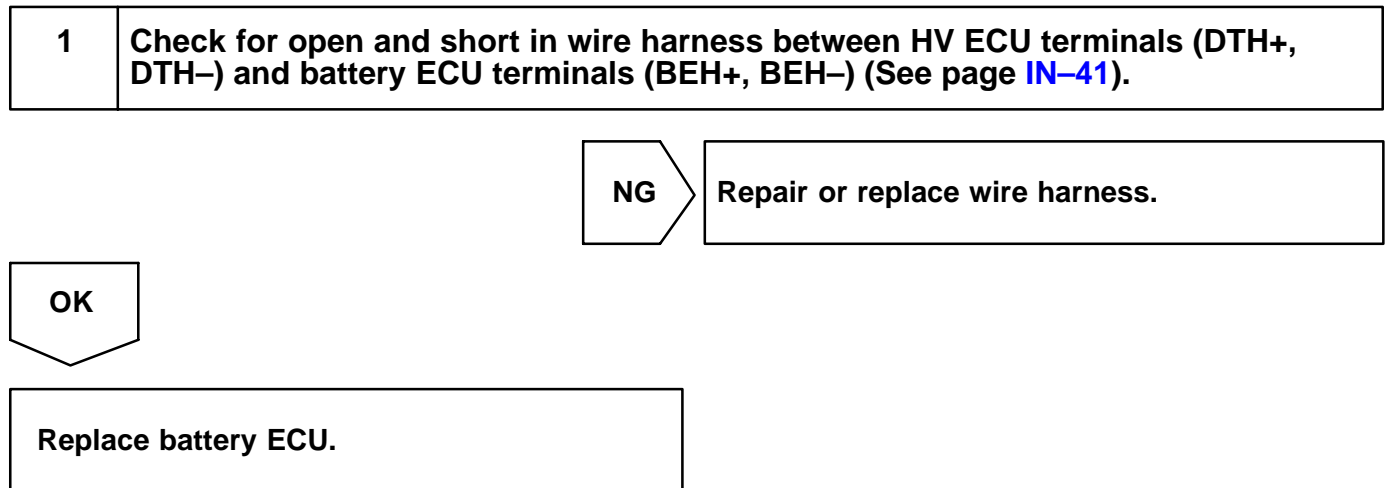

DTC	P3106	ECM Communication Circuit Malfunction
------------	--------------	--

CIRCUIT DESCRIPTION

The HV ECU monitors the communication signal from the ECM and if it cannot monitor it due to noise or other reasons, judges as an error.


HINT:

- When using an OBDⅡ scan tool other than TOYOTA hand-held tester, check all the steps.
- When using TOYOTA hand-held tester, confirm the information code and check it.

DTC P3106 – Information code 209, 210, 211

INF. Code.	Detecting Condition	Trouble Area
209	When communication between ECM and HV ECU is abnormal 1 sec. after ignition is turned ON	<ul style="list-style-type: none"> • Wire harness • ECM
210		
211		

WIRING DIAGRAM

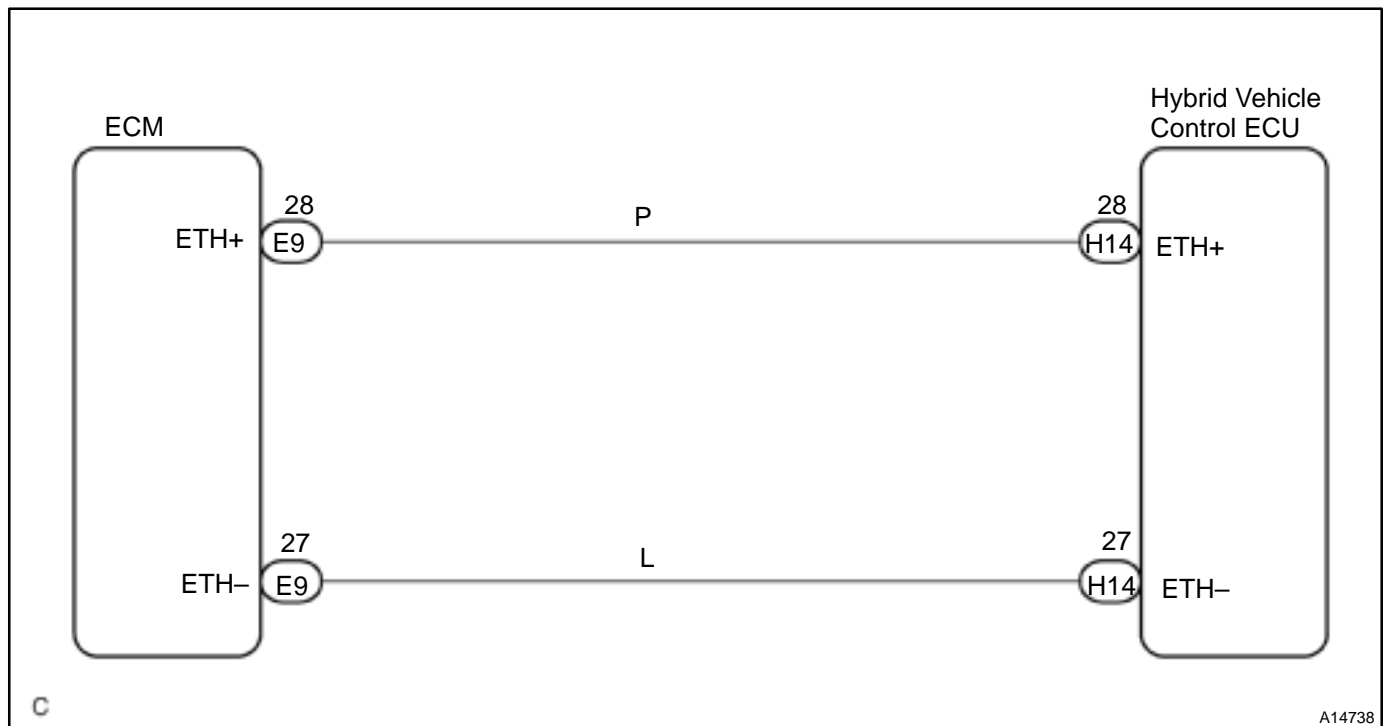

INSPECTION PROCEDURE

1	Check for open and short in wire harness between HV ECU terminals (ETH+, ETH-) and ECM terminals (ETH+, ETH-) (See page IN-41).
---	--

NG

Repair or replace wire harness.

OK

Replace ECM.

CIRCUIT DESCRIPTION

DTC P3106 – Information code 212

INF. Code.	Detecting Condition	Trouble Area
212	Input of abnormal signal from ECM	• ECM

INSPECTION PROCEDURE

If the information code 212 is output, after confirming the DTC of the ECM, check and repair the applicable DTC. Prior to repairing it, record the DTC of the HV ECU, freeze frame data and history of operation. Then, clear the DTC and check it one more time after starting the system again ("READY" light ON).

CIRCUIT DESCRIPTION

DTC P3106 – Information code 394

INF. Code.	Detecting Condition	Trouble Area
394	When ECM does not operate	• ECM

INSPECTION PROCEDURE

If the information code 394 is output, check and repair the ECM power source circuit. If there is no problem in the power source circuit, replace the ECM. Prior to the repair, record the DTC of the HV ECU, freeze frame data and history of operation and clear them. Then, start the system one more time ("READY" light ON) and check the DTC again.

DTC	P3107	Airbag ECU Communication Circuit Malfunction
------------	--------------	---


CIRCUIT DESCRIPTION

The HV ECU detects the malfunction of the collision signal circuit from the airbag and gives warning to the driver.

DTC P3107 – Information code 213, 214, 215

INF. Code.	Detecting Condition	Trouble Area
213	When communication between airbag ECU and HV ECU is abnormal 10 sec. after ignition is turned ON	<ul style="list-style-type: none"> • Wire harness • Airbag sensor assembly
214		
215		

WIRING DIAGRAM

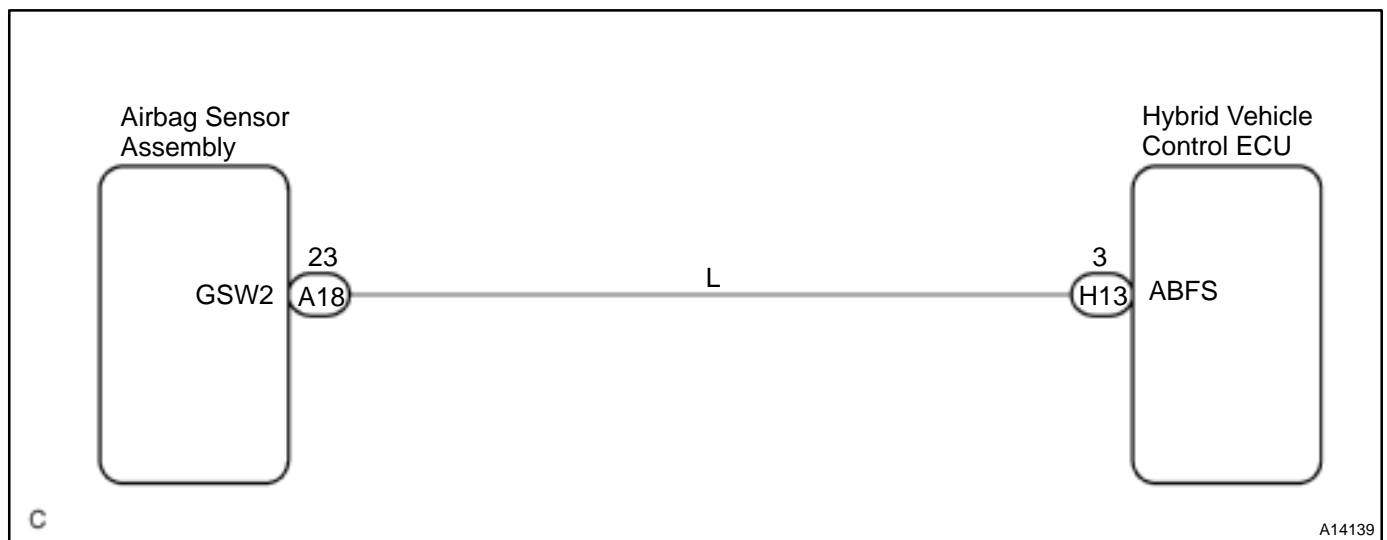

INSPECTION PROCEDURE

1	Check for open, short and +B short in wire harness between HV ECU ABFS terminals and airbag ECU GSW 2 terminal (See page IN-41).
---	---

HINT:

Confirm that there is no open circuit in the wire harness. If the battery voltage is always applied to the HV ECU ABFS terminal with the ignition ON, the airbag signal circuit has +B short.

NG**Repair or replace wire harness.****OK****Replace airbag sensor assembly.**

DTC	P3109	Brake ECU Communication Circuit Malfunction
------------	--------------	--

CIRCUIT DESCRIPTION

The HV ECU performs multiple checks to avoid any malfunction that may occur through the communication with the brake ECU due to a noise, etc.


HINT:

- When using an OBD scan tool other than TOYOTA hand-held tester, check all the steps.
- When using TOYOTA hand-held tester, confirm the information code and check it.

DTC P3109 – Information code 218, 219, 220, 221

INF. Code.	Detecting Condition	Trouble Area
218	When communication between brake ECU and HV ECU is abnormal 1.5 sec. after ignition is turned ON	<ul style="list-style-type: none"> Wire harness Brake ECU
219		
220		
221		

WIRING DIAGRAM

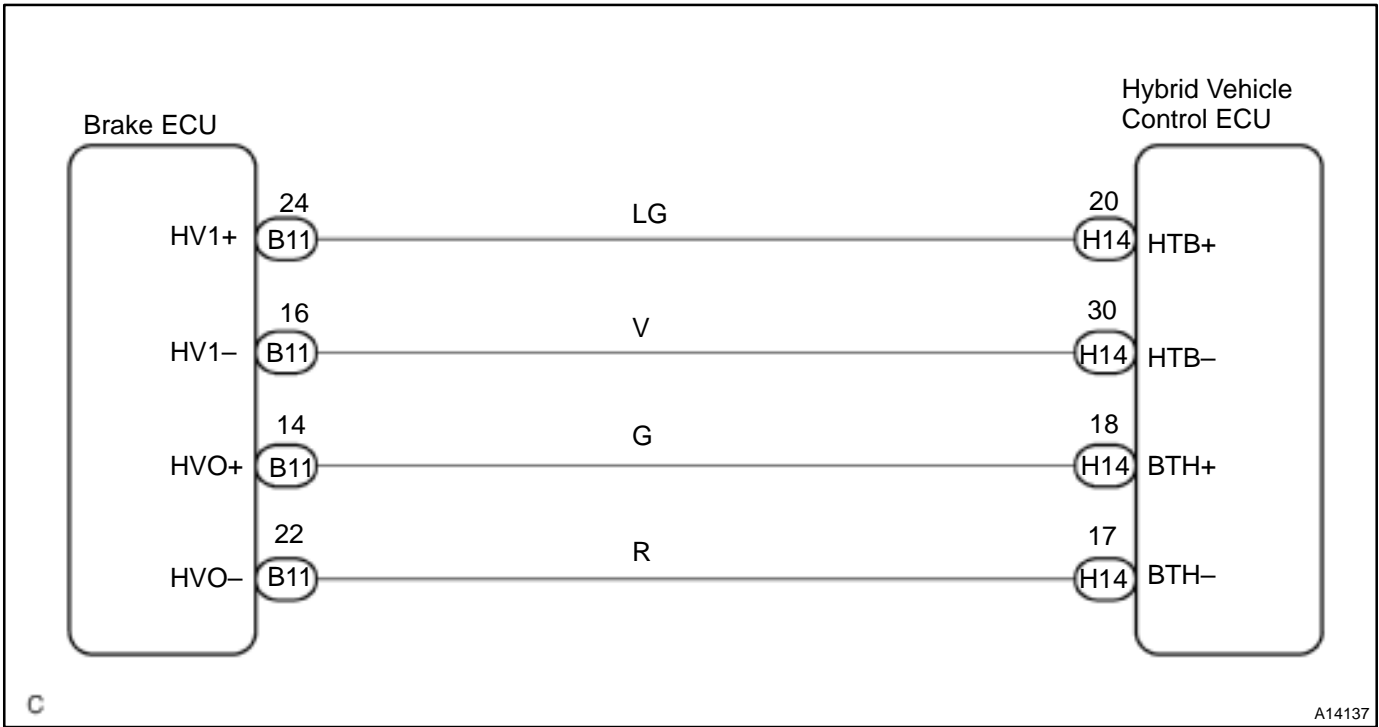

INSPECTION PROCEDURE

1	Check for open, short and +B short in wire harness between HV ECU terminals (HTB+, HTB-, BTH+, BTH-) and brake ECU terminals (HV1+, HV1-, HVO+, HVO-) (See page IN-41).
---	--

HINT:

Confirm that there is no open circuit in the wire harness. If the voltage of each HV ECU terminals (HTB+, HTB-, BTH+ and BTH-) is always more than 5 V with the ignition ON, the brake ECU communication circuit has +B short.

NG

Repair or replace wire harness.

OK

Replace brake ECU.

CIRCUIT DESCRIPTION

DTC P3109 – Information code 222

INF. Code.	Detecting Condition	Trouble Area
222	When abnormal data is received from brake ECU.	• Brake ECU

INSPECTION PROCEDURE

If the information code 222 is output, after confirming the DTC of the brake ECU, check and repair the applicable DTC. Prior to repairing it, record the DTC of the HV ECU, freeze frame data and history of operation. Then, clear the DTC and check it one more time after starting the system again ("READY" light ON).

DTC	P3110	IGCT Relay Malfunction
------------	--------------	-------------------------------


CIRCUIT DESCRIPTION

The HV ECU checks the IGCT relay and detects malfunction.

DTC P3110 – Information code 223


INF. Code.	Detecting Condition	Trouble Area
223	When IGCT relay is always closed.	<ul style="list-style-type: none"> • Wire harness • IGCT relay

WIRING DIAGRAM

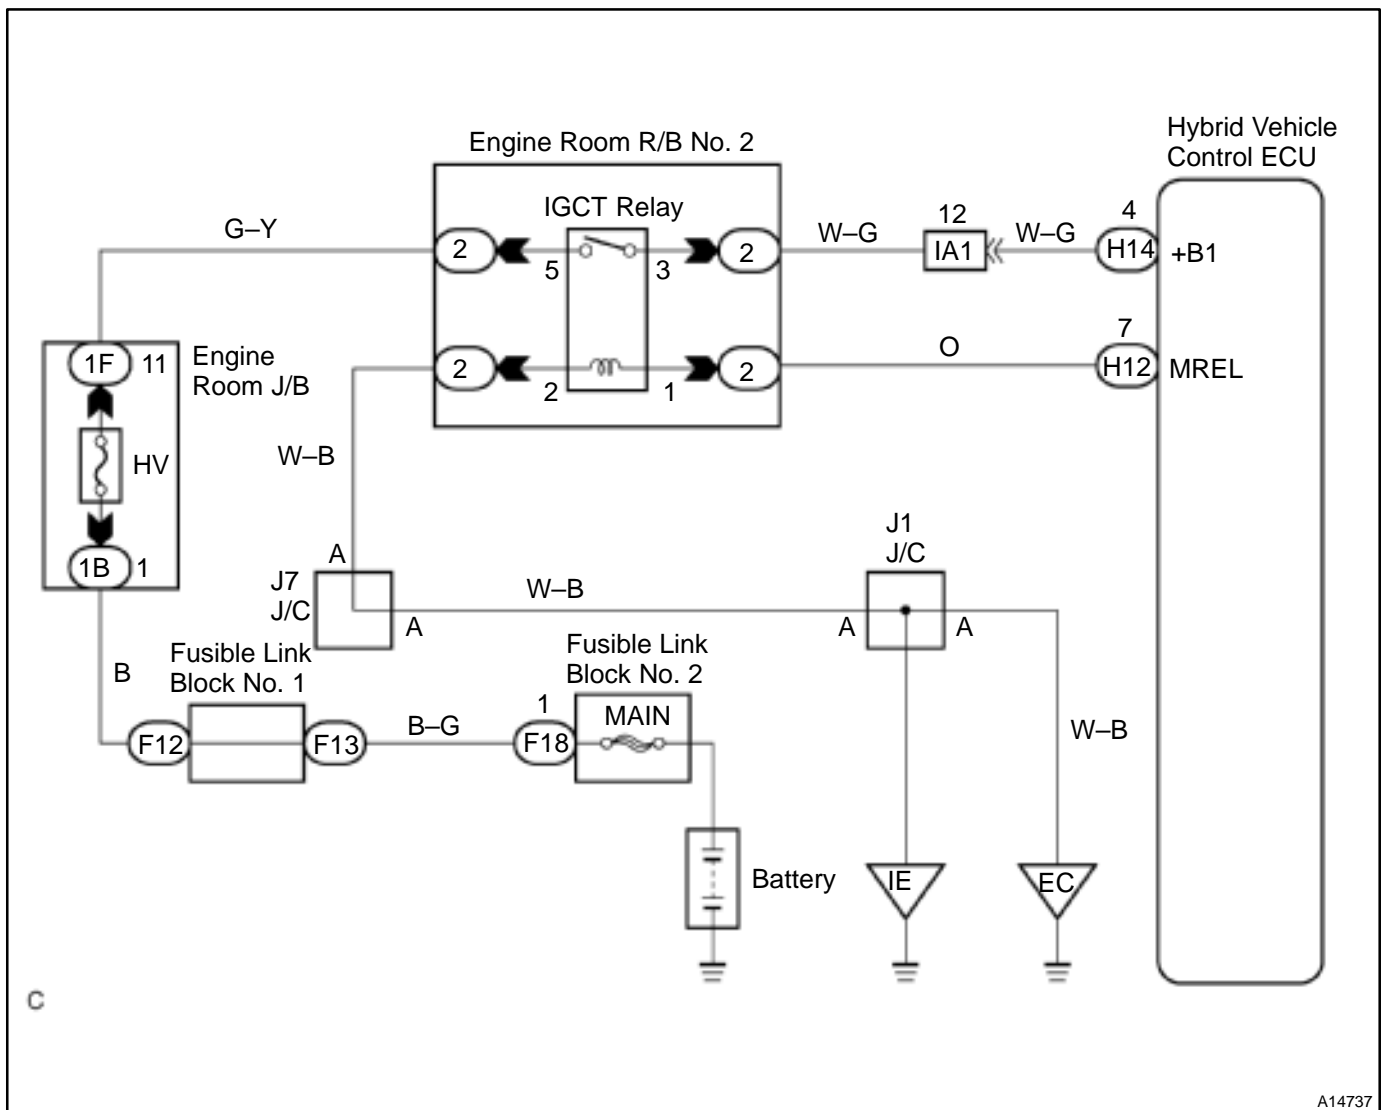

INSPECTION PROCEDURE

1 Check IGCT relay.

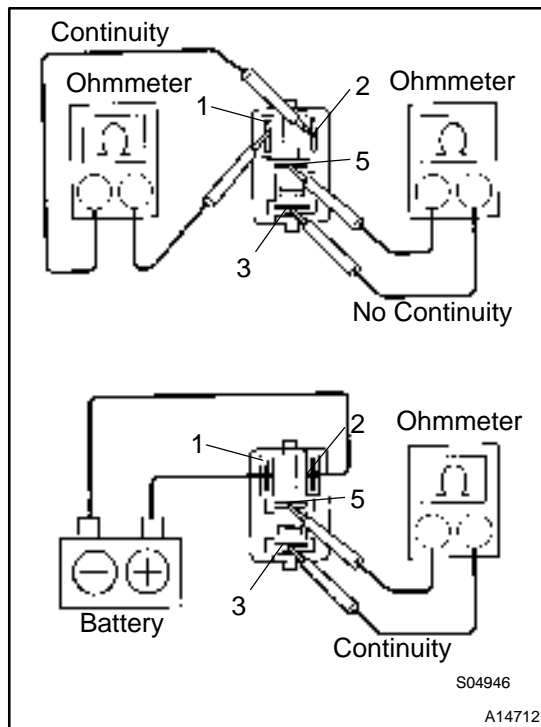**PREPARATION:**

Remove the IGCT relay from the engine room R/B No. 3.

CHECK:

- Using an ohmmeter, check that there is continuity between terminals 1 and 2.
- Check that there is no continuity between terminals 3 and 5.
- Apply battery voltage across terminals 1 and 2. Using an ohmmeter, check that there is continuity between terminals 3 and 5.

OK:

- Continuity
- No continuity
- Continuity

NG**Replace IGCT relay.****OK**

**Check for +B short in wire harness between HV ECU and IGCT relay (See page IN-41).
Repair or replace wire harness.**

HINT:

The HV ECU MREL terminal has +B short if the battery voltage is always applied to the HV ECU +B1 or MREL terminal with the ignition OFF.

DTC	P3115	System Main Relay Malfunction
------------	--------------	--------------------------------------

CIRCUIT DESCRIPTION

The HV ECU checks that the system main relay (No. 1, No. 2, No. 3) is normally operating and detects malfunction.


HINT:

- When using an OBD \square scan tool other than TOYOTA hand-held tester, check all the steps.
- When using TOYOTA hand-held tester, confirm the information code and check it.

DTC P3115 – Information code 224, 225, 226, 227, 228, 229

INF. Code.	Detecting Condition	Trouble Area
224	Open or +B short in system main relay No. 1 circuit	<ul style="list-style-type: none"> • Wire harness • System main relay • HV ECU
225	Short in system main relay No. 1 circuit	
226	Open or +B short in system main relay No. 2 circuit	
227	Short in system main relay No. 2 circuit	
228	Open or +B short in system main relay No. 3 circuit	
229	Short in system main relay No. 3 circuit	

WIRING DIAGRAM

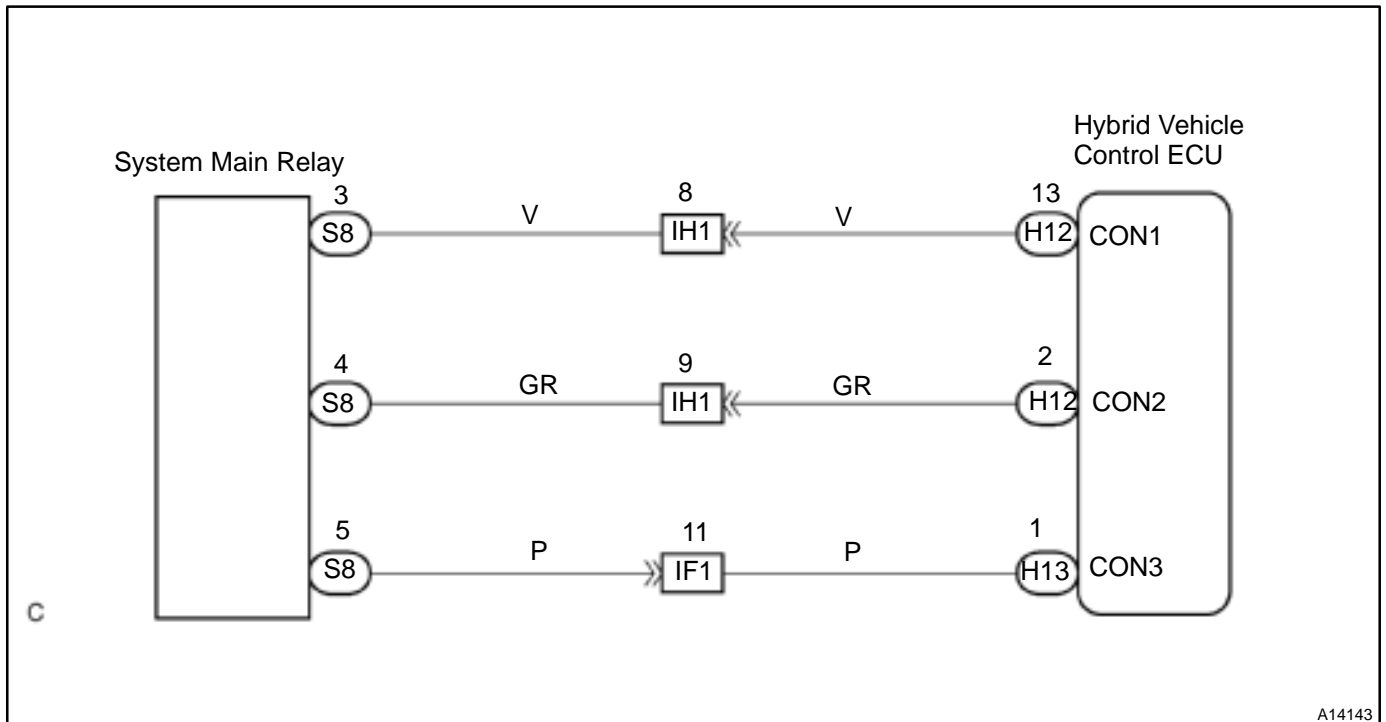

INSPECTION PROCEDURE

1	Check for open, short and +B short in wire harness between HV ECU terminals (Cont1, Cont2, Cont3) and system main relay terminals (See page IN-41).
---	--

HINT:

Confirm that there is no open circuit in the wire harness. If the battery voltage is always applied to the HV ECU Cont1, Cont2 and Cont3 terminals with the ignition ON ("READY" light OFF), the system main relay has +B short.

NG**Repair or replace wire harness.****OK**

2	Is any of the information code 231, 232 or 233 recorded?
---	--

NO**Replace HV ECU.****YES****Replace HV ECU and system main relay.**

CIRCUIT DESCRIPTION

If the system main relay is deposited, it might be impossible to shut down the high voltage system. Therefore, the HV ECU checks the system main relay and stops the system if malfunction is detected.

DTC P3115 – Information code 231, 232, 233

INF. Code.	Detecting Condition	Trouble Area
231	System main relay + terminal deposited	<ul style="list-style-type: none"> • System main relay • HV ECU
232	System main relay – terminal deposited	
233	System main relay + & – terminal deposited	

INSPECTION PROCEDURE

If any of these information codes is output, replace the system main relay.

If one of the information codes above and any of the information codes 224 – 229 are recorded at the same time, also replace the HV ECU.

DTC	P3120	HV Transaxle Malfunction
------------	--------------	---------------------------------

CIRCUIT DESCRIPTION

The HV ECU checks the energy balance and detects abnormality if the magnetism of the motor or generator greatly decreases.

HINT:

- When using an OBDⅡ scan tool other than TOYOTA hand-held tester, check all the steps.
- When using TOYOTA hand-held tester, confirm the information code and check it.

DTC P3120 – Information code 234, 235, 236, 237

INF. Code.	Detecting Condition	Trouble Area
234	Small reduction of motor magnetism	<ul style="list-style-type: none"> • HV transaxle (motor) • System main relay
235	Large reduction of motor magnetism	
236	Small reduction of generator magnetism	<ul style="list-style-type: none"> • HV transaxle (generator) • System main relay
237	Large reduction of generator magnetism	

INSPECTION PROCEDURE

1	Is DTC of HV battery ECU being output?
----------	---

YES

Check applicable DTC.

NO

2	Turn the ignition switch to ST(ON) and check if malfunction occurs again.
----------	--

NO

Replace system main relay.

YES

Replace HV transaxle motor or generator.

CIRCUIT DESCRIPTION

The HV ECU detects the malfunction of the transmission system. Judging from a malfunction symptom, it records one of the four information codes.

DTC P3120 – Information code 239, 240, 241, 242

INF. Code.	Detecting Condition	Trouble Area
239	Shaft damaged	• HV transaxle
240	Generator locked	
241	Torque limiter sliding	
242	Planetary gear locked	

INSPECTION PROCEDURE

When Information code 239 is stored, check that the connector of the crankshaft position sensor is properly connected. If disconnected, the code 239 may be stored.

If any of these information codes is output, replace the defective part inside the HV transaxle.


CIRCUIT DESCRIPTION

The HV ECU checks the motor resolver signal voltage and circuit impedance to detect malfunction.

DTC P3120 – Information code 243, 245

INF. Code.	Detecting Condition	Trouble Area
243	Motor resolver inter-phase short	• HV transaxle • Wire harness
245	Open or short in motor resolver circuit	

WIRING DIAGRAM

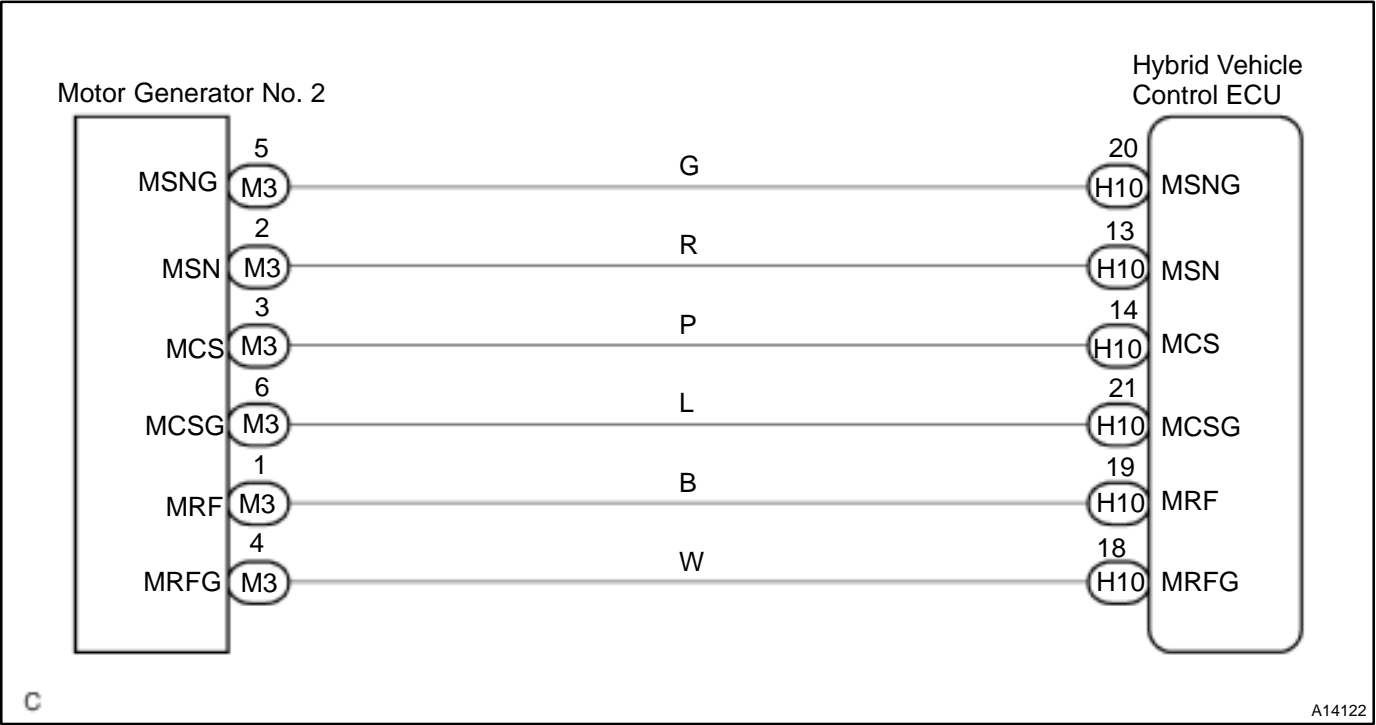

INSPECTION PROCEDURE

- | | |
|----------|---|
| 1 | Check for open and short in wire harness between HV transaxle and HV ECU (See page IN-41). |
|----------|---|

Terminals for checking open and short:

MG2 Terminals	HV ECU Terminals
MSNG	MSNG
MSN	MSN
MCS	MCS
MCSG	MCSG
MRF	MRF
MRFG	MRFG

NG

Repair or replace wire harness.

OK

Check for open in motor resolver or inter-phase short and then replace HV transaxle motor. Check motor resolver (See page [HV-40](#)).


CIRCUIT DESCRIPTION

The HV ECU checks the motor resolver signal voltage and circuit impedance to detect malfunction.

DTC P3120 – Information code 244, 246

INF. Code.	Detecting Condition	Trouble Area
244	Motor resolver inter-phase short (when there is a history that the state of malfunction continued during inverter fail safe mode)	• HV transaxle • Wire harness
246	Open or short in motor resolver circuit (when there is a history that the state of malfunction continued during inverter fail safe mode)	

WIRING DIAGRAM

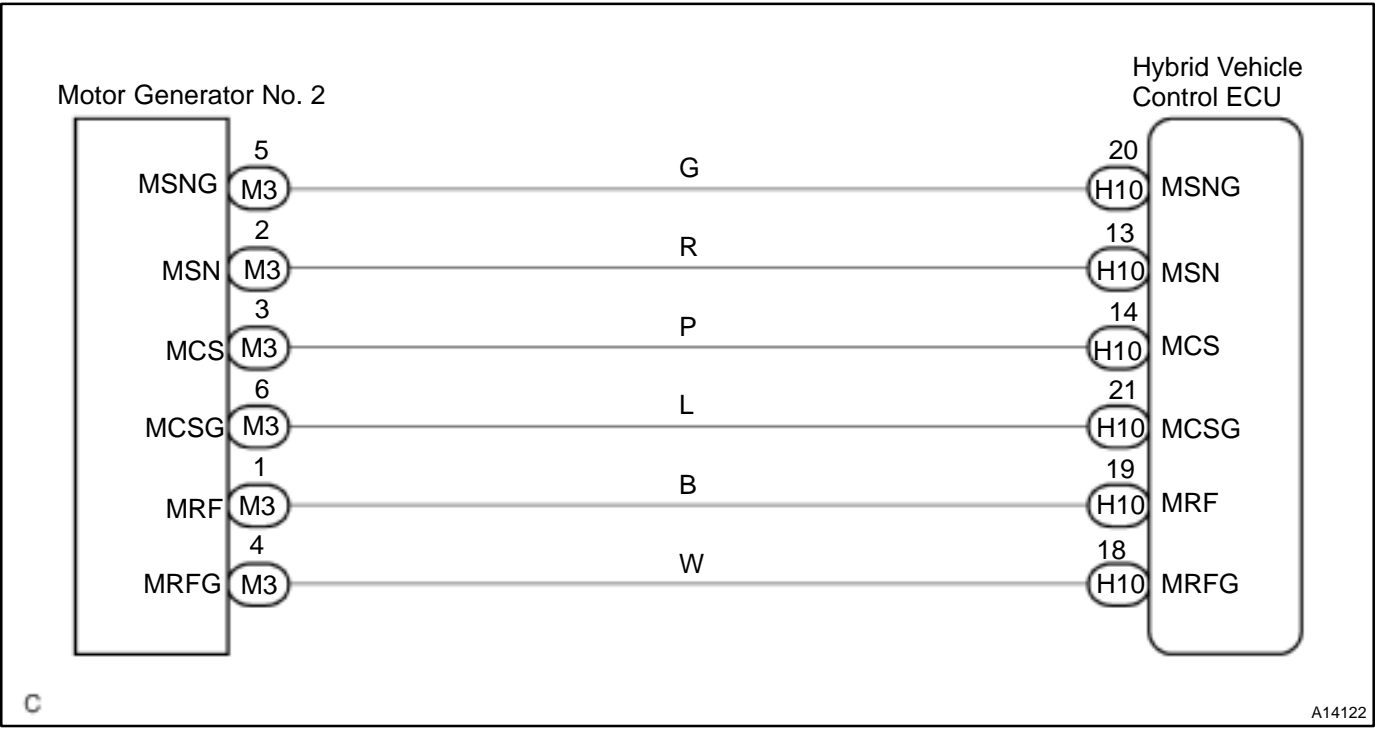

INSPECTION PROCEDURE

- | | |
|---|---|
| 1 | Check for open and short in wire harness between HV transaxle and HV ECU (See page IN-41). |
|---|---|

Terminals for checking open and short:

MG2 Terminals	HV ECU Terminals
MSNG	MSNG
MSN	MSN
MCS	MCS
MCSG	MCSG
MRF	MRF
MRFG	MRFG

NG

Repair or replace wire harness.

OK

- | | |
|---|---|
| 2 | Is there DTC P3100 being output? |
|---|---|

YES

Check applicable DTC.

NO

- | | |
|---|---|
| 3 | Is there DTC P3125 being output? |
|---|---|

YES

Check applicable DTC.

NO

Replace HV transaxle motor.


CIRCUIT DESCRIPTION

The HV ECU checks the motor temperature and controls the load limitation in order to prevent the motor from overheating. Also, it detects the abnormality of the line connection of the motor temperature sensor and malfunction of the sensor itself.

DTC P3120 – Information code 247, 249

INF. Code.	Detecting Condition	Trouble Area
247	GND short in motor temperature sensor	• HV transaxle • Wire harness
249	Open or +B short in motor temperature sensor	

WIRING DIAGRAM

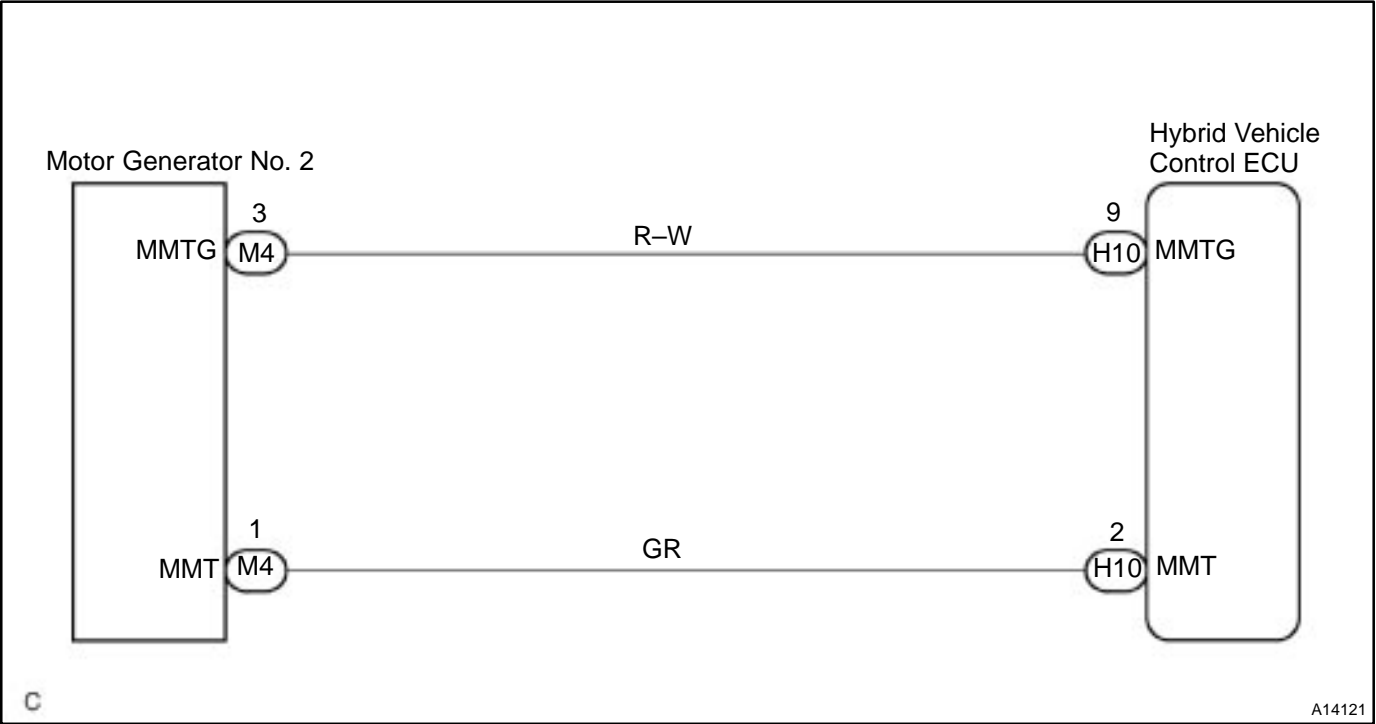

INSPECTION PROCEDURE

1	Check open, short and +B short in wire harness between HV transaxle motor temperature sensor MMT and MMTG terminals and HV ECU MMT and MMTG terminals (See page IN-41).
---	--

HINT:

Confirm that there is no open circuit in the wire harness. If the voltage of the HV ECU MMT terminal is always more than 5V with the ignition ON, the motor temperature sensor circuit has +B short.

NG

Repair or replace wire harness.

OK

Check for open in motor temperature sensor and then replace HV transaxle motor.
Check motor temperature sensor (See page [HV-40](#)).

CIRCUIT DESCRIPTION

DTC P3120 – Information code 248, 250

INF. Code.	Detecting Condition	Trouble Area
248	Motor temperature sensor malfunction	• HV transaxle motor
250	Motor temperature sensor performance problem	

INSPECTION PROCEDURE

If the information code 248 or 250 is output, replace the HV transaxle motor.


CIRCUIT DESCRIPTION

The HV ECU checks the generator resolver signal voltage and circuit impedance to detect malfunction.

DTC P3120 – Information code 253, 255

INF. Code.	Detecting Condition	Trouble Area
253	Generator resolver inter-phase short	• HV transaxle (generator) • Wire harness
255	Open or short in generator resolver circuit	

WIRING DIAGRAM

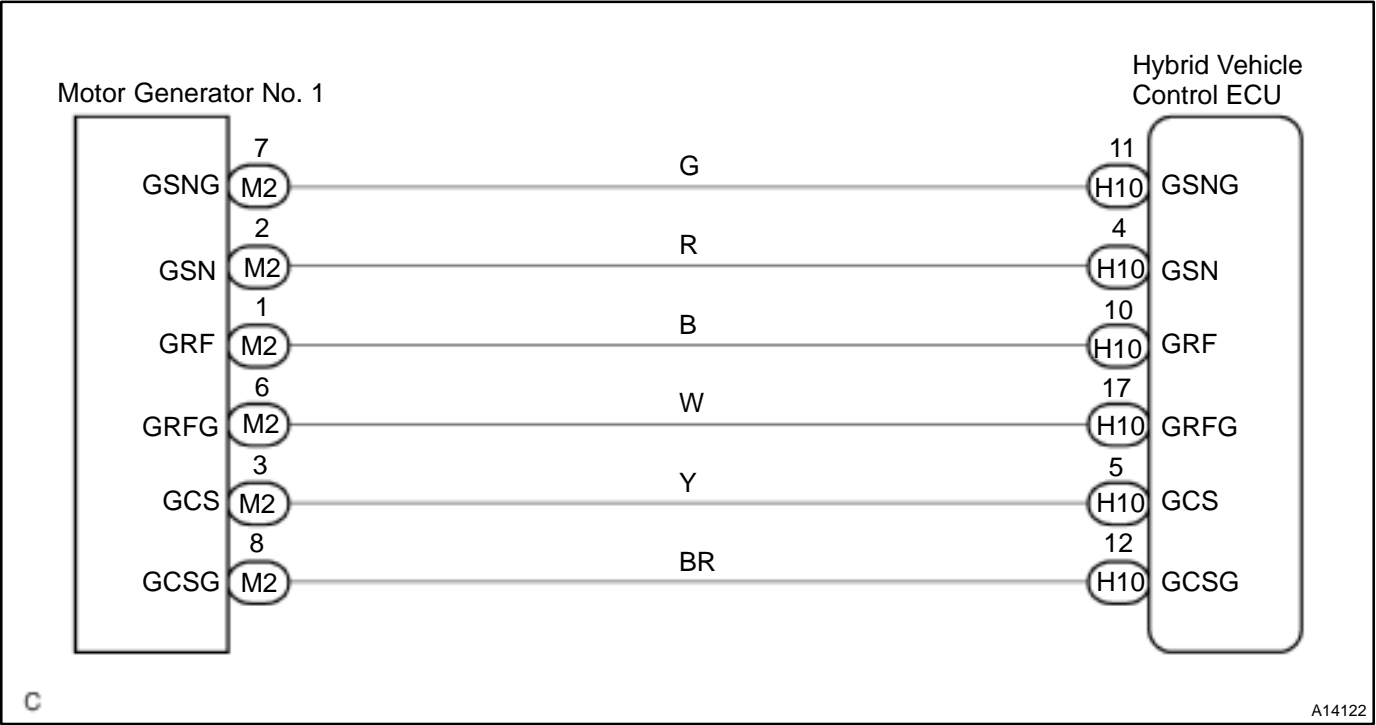


INSPECTION PROCEDURE

1	Check for open and short in wire harness between HV transaxle and HV ECU (See page IN-41).
---	---

Terminals for checking open and short:

MG1 Terminals	HV ECU Terminals
GSNG	GSNG
GSN	GSN
GCS	GCS
GCSG	GCSG
GRF	GRF
GRFG	GRFG

NG	Repair or replace wire harness.
----	---------------------------------



Check for open in generator resolver or inter-phase short and then replace HV transaxle generator. Check generator resolver (See page HV-40).


CIRCUIT DESCRIPTION

The HV ECU checks the generator resolver signal voltage and circuit impedance to detect malfunction.

DTC P3120 – Information code 254, 256

INF. Code.	Detecting Condition	Trouble Area
254	Generator resolver inter-phase short (when there is a history that the state of malfunction continued during inverter fail safe mode)	• HV transaxle (generator) • Wire harness
256	Open or short in generator resolver circuit (when there is a history that the state of malfunction continued during inverter fail safe mode)	

WIRING DIAGRAM

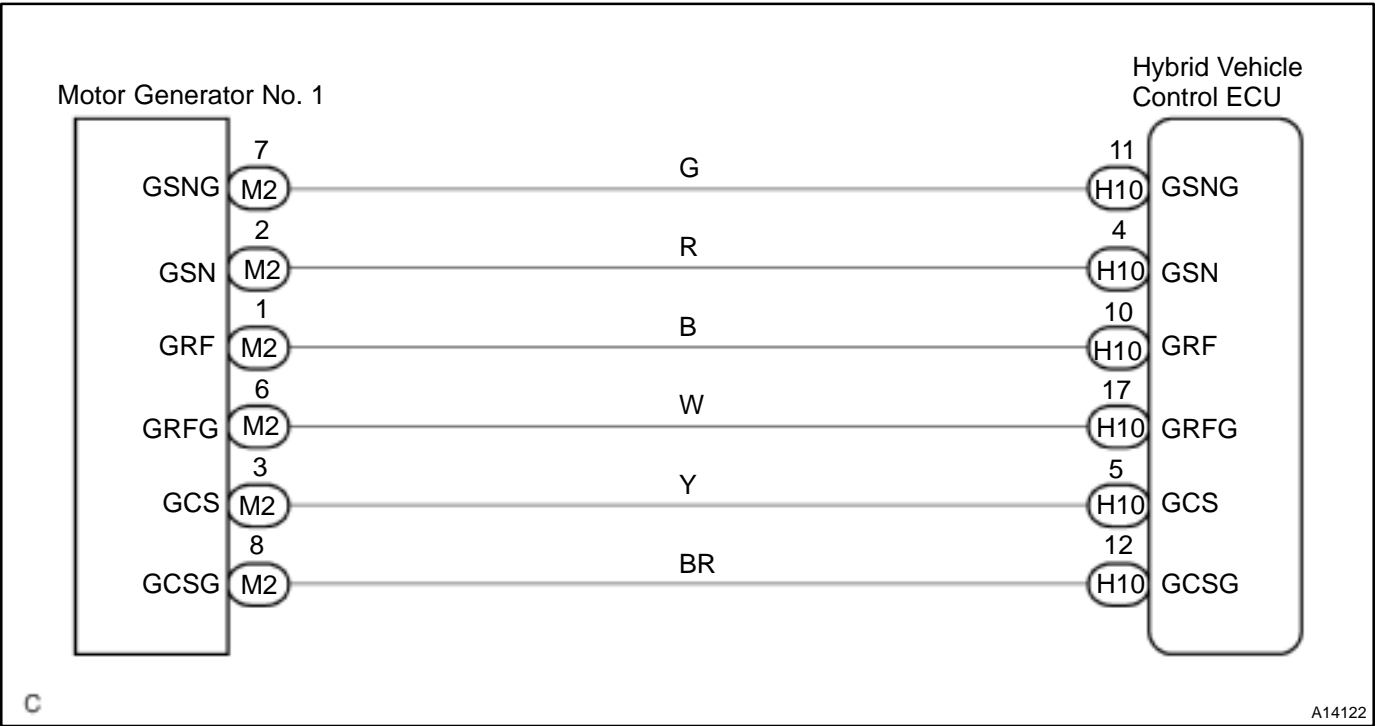

INSPECTION PROCEDURE

- | | |
|---|---|
| 1 | Check for open and short in wire harness between HV transaxle and HV ECU (See page IN-41). |
|---|---|

Terminals for checking open and short:

MG2 Terminals	HV ECU Terminals
MSNG	MSNG
MSN	MSN
MCS	MCS
MCSG	MCSG
MRF	MRF
MRFG	MRFG

NG

Repair or replace wire harness.

OK

- | | |
|---|---|
| 2 | Is there DTC P3100 being output? |
|---|---|

YES

Check applicable DTC.

NO

- | | |
|---|---|
| 3 | Is there DTC P3125 being output? |
|---|---|

YES

Check applicable DTC.

NO

Replace HV transaxle generator.


CIRCUIT DESCRIPTION

The HV ECU checks the generator temperature and controls the load limitation in order to prevent the generator from overheating. Also, it detects the abnormality of the line connection of the generator temperature sensor and the malfunction of the sensor itself.

DTC P3120 – Information code 257, 259

INF. Code.	Detecting Condition	Trouble Area
257	GND short in generator temperature sensor	• HV transaxle • Wire harness
259	Open or +B short in generator temperature sensor	

WIRING DIAGRAM

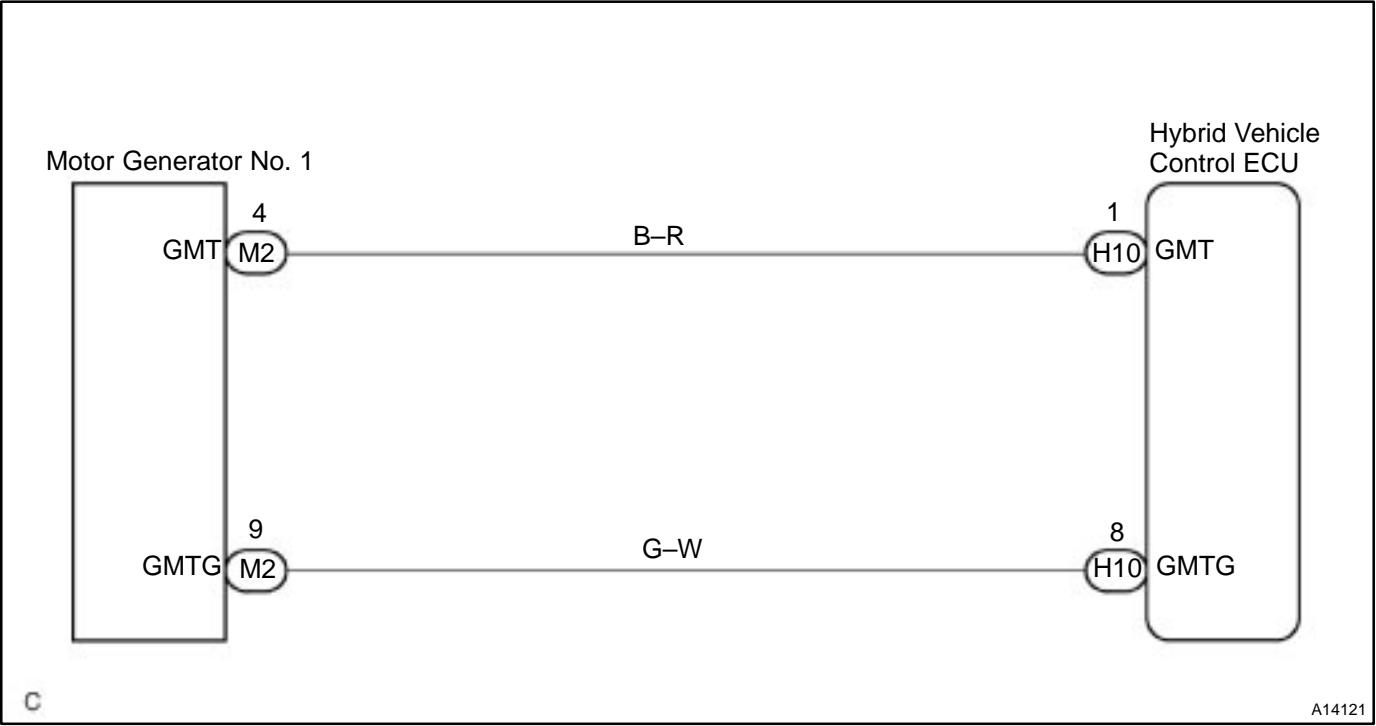

INSPECTION PROCEDURE

1	Check for open, short and +B short in wire harness between HV transaxle generator temperature sensor GMT and GMTG terminals and HV ECU GMT and GMTG terminals (See page IN-41).
---	--

HINT:

Confirm that there is no open circuit in the wire harness. If the voltage of the HV ECU GMT terminal is always more than 5V with the ignition ON, the generator temperature sensor circuit has +B short.

NG

Repair or replace wire harness.

OK

Check for open in generator temperature sensor and then replace HV transaxle generator. Check generator temperature sensor (See page [HV-40](#)).

CIRCUIT DESCRIPTION

DTC P3120 – Information code 258, 260

INF. Code.	Detecting Condition	Trouble Area
258	Generator temperature sensor malfunction	• HV transaxle (generator)
260	Generator temperature sensor performance problem	

INSPECTION PROCEDURE

If the information code 258 or 260 is output, replace the HV transaxle generator.

DTC	P3125	Converter & Inverter Assembly Malfunction
------------	--------------	--

CIRCUIT DESCRIPTION

If driving the vehicle with the DCDC converter malfunctioning, the voltage of the auxiliary battery will drop, which will make it impossible to keep driving the vehicle. Therefore, HV ECU checks the operation of the DCDC converter and gives warning to the driver if malfunction is detected.


HINT:

- When using an OBDⅡ scan tool other than TOYOTA hand-held tester, check all the steps.
- When using TOYOTA hand-held tester, confirm the information code and check it.

DTC P3125 – Information code 263, 264, 265

INF. Code.	Detecting Condition	Trouble Area
263	+B short in DCDC converter NODD wiring	<ul style="list-style-type: none"> • Converter & inverter assembly • Wire harness
264	DCDC converter malfunction	
265	Open or GND short in DCDC converter NODD wiring	

WIRING DIAGRAM

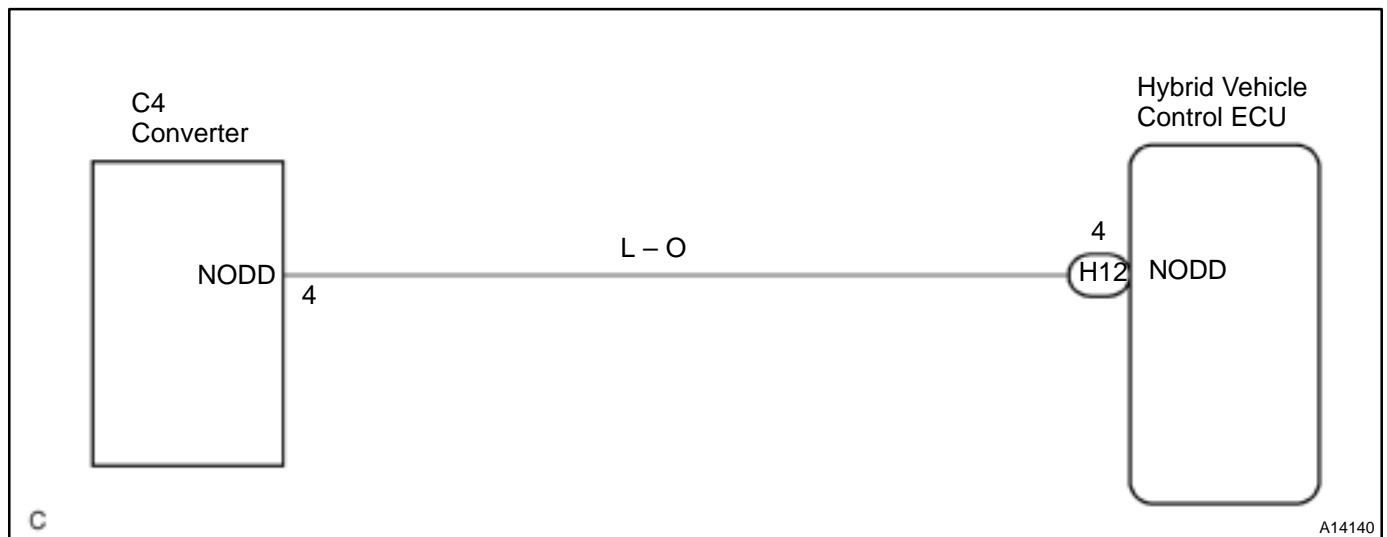

INSPECTION PROCEDURE

1	Check for open, short and +B short in wire harness between HV ECU NODD terminal and converter & inverter NODD terminal (See page IN-41).
---	---

HINT:

The converter has +B short if the battery voltage is always applied to the HV ECU NODD terminal with the ignition ON.

NG**Repair or replace wire harness.****OK****Replace converter & inverter assembly.**


CIRCUIT DESCRIPTION

The HV ECU checks the inverter voltage and detects malfunction.

DTC P3125 – Information code 266, 267, 268, 269, 270

INF. Code.	Detecting Condition	Trouble Area
266	Open or GND short in inverter voltage signal circuit	• Converter & inverter assembly • Wire harness
267	+B short in inverter voltage signal circuit	
268	Inverter voltage signal is inconsistent with battery voltage	
269	Inverter voltage sensor malfunction	
270	Abnormality of line connection of inverter voltage signal circuit (when there is a history that the state of malfunction continued during inverter fail safe mode)	

WIRING DIAGRAM

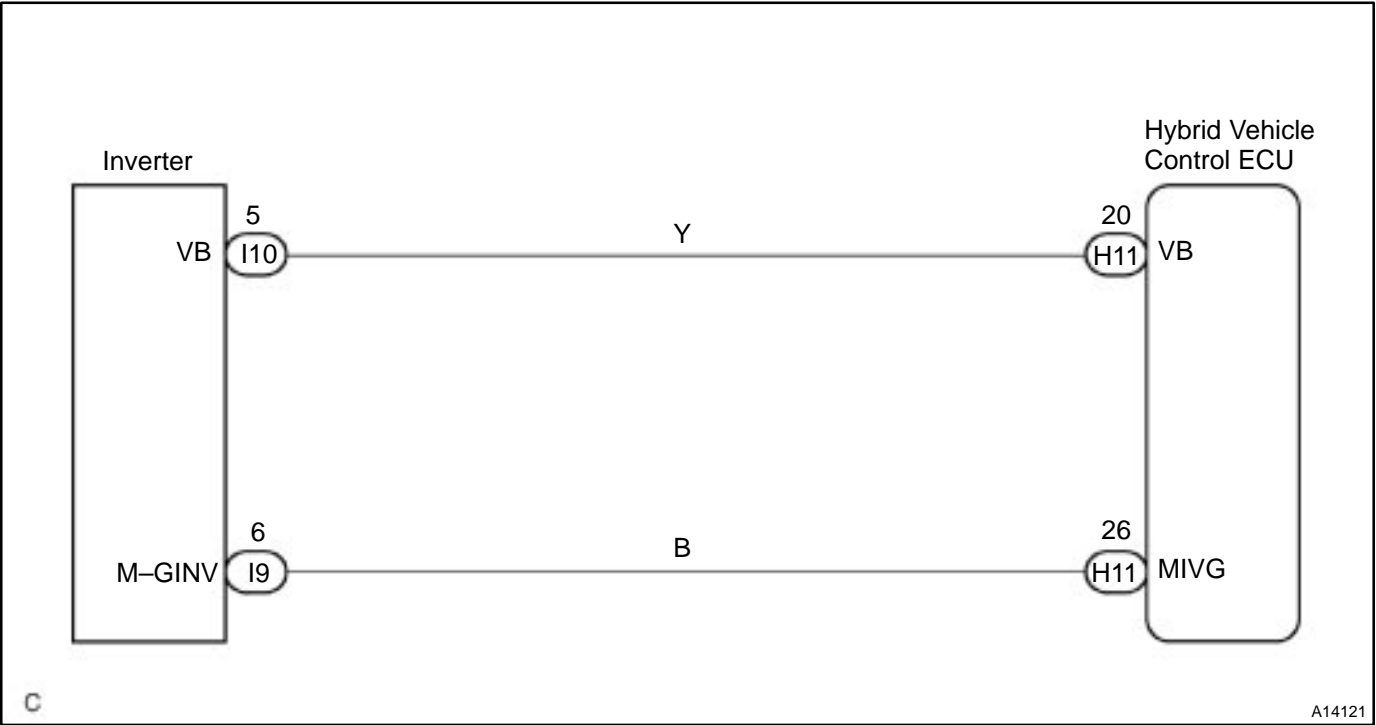

INSPECTION PROCEDURE

1	Check for open, short and +B short in wire harness between HV ECU VB and MIVG terminals and converter & inverter assembly VB and M-GINV terminal (See page IN-41).
---	---

HINT:

Confirm that there is no open circuit in the wire harness. If the voltage between the HV ECU VB or MIVG terminal and body ground is always more than 5V with the ignition ON, the inverter voltage signal circuit has +B short.

NG**Repair or replace wire harness.****OK**

2	Is there DTC P3100 being output?
---	----------------------------------

YES**Check applicable DTC.****NO****Replace converter & inverter assembly.**


CIRCUIT DESCRIPTION


The HV ECU detects faulty line connection inside the inverter.

DTC P3125 – Information code 272

INF. Code.	Detecting Condition	Trouble Area
272	Abnormality of line connection of motor PWM (when there is a history that the state of malfunction continued during inverter fail safe mode)	<ul style="list-style-type: none">• Wire harness• Converter & inverter assembly

WIRING DIAGRAM

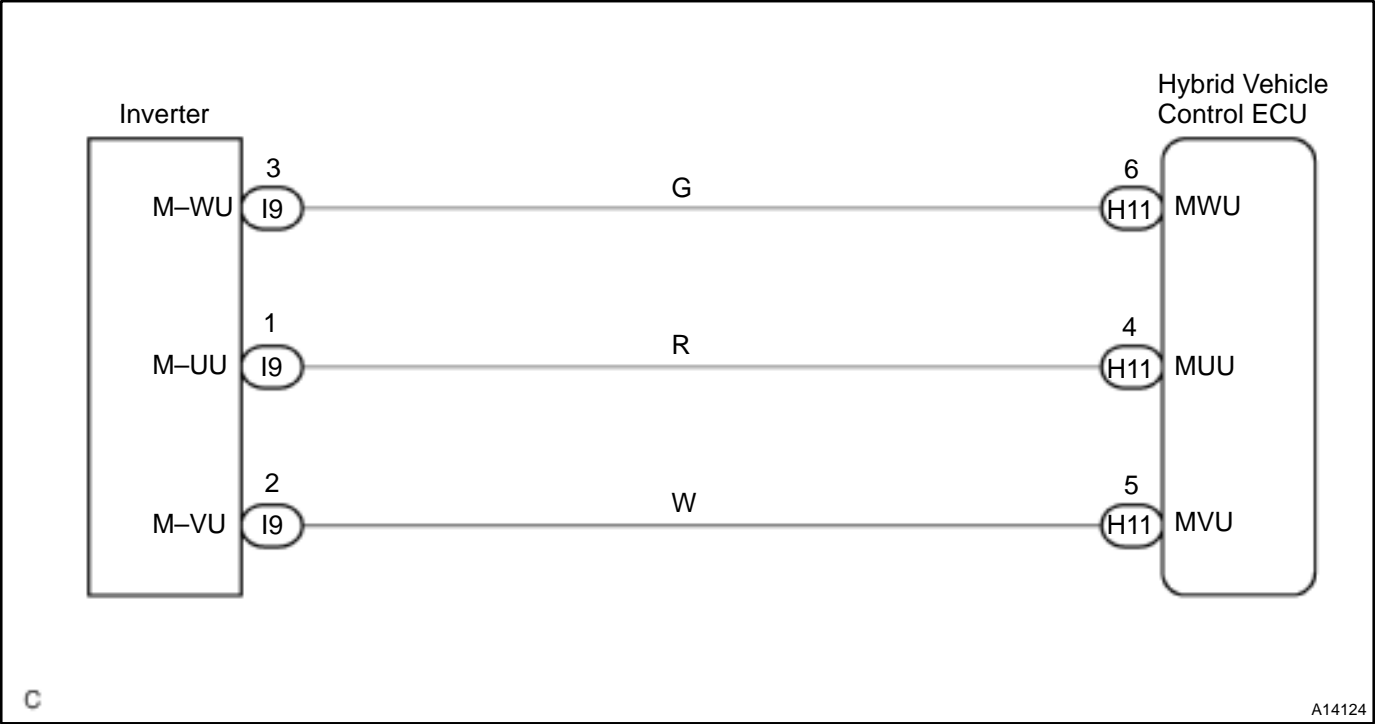

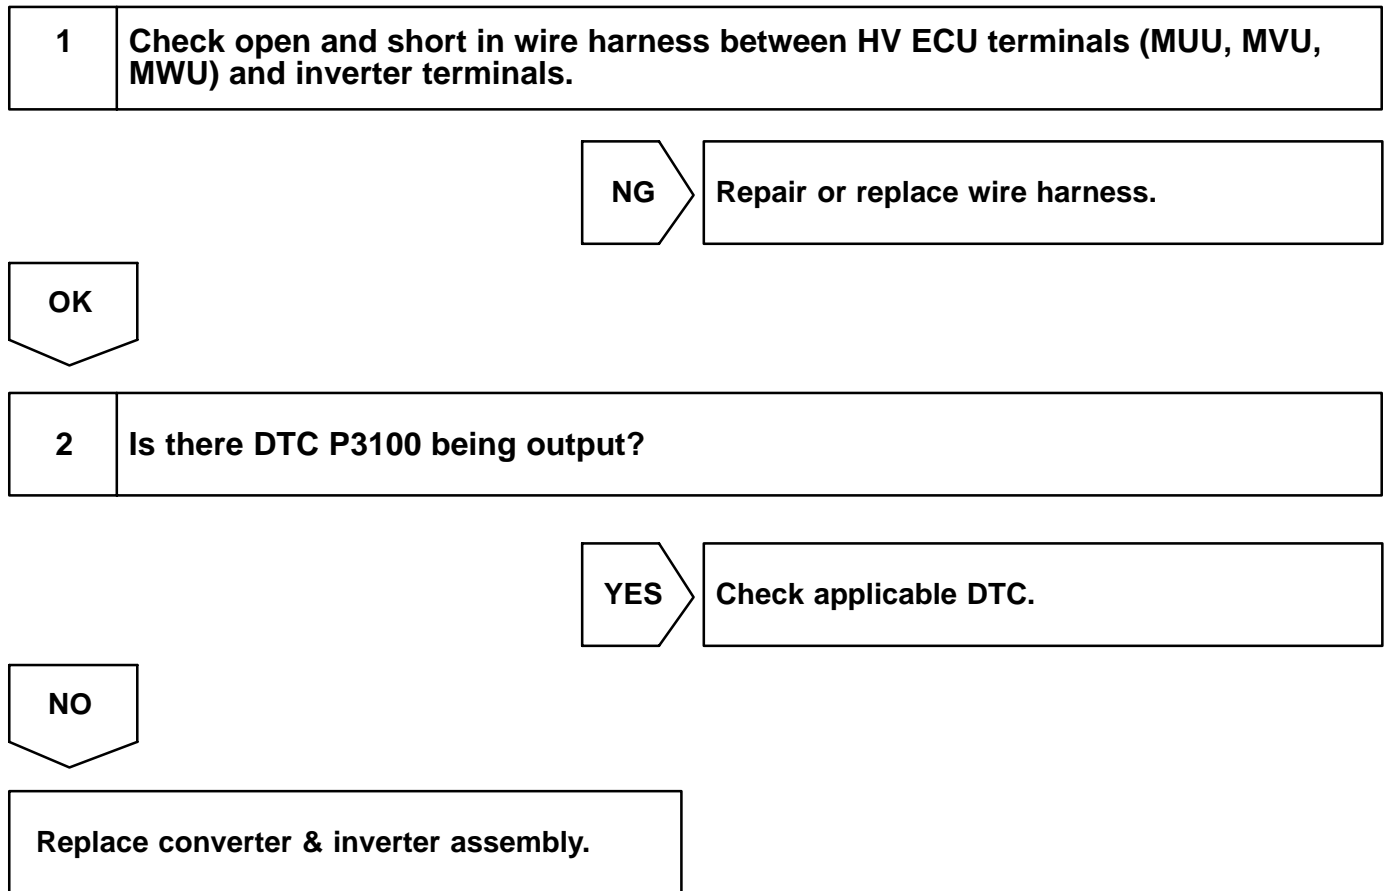INSPECTION PROCEDURE


CIRCUIT DESCRIPTION

The HV ECU detects faulty line connection inside the inverter.

DTC P3125 – Information code 273


INF. Code.	Detecting Condition	Trouble Area
273	Motor inverter malfunction	<ul style="list-style-type: none">• Converter & inverter assembly• Wire harness

WIRING DIAGRAM

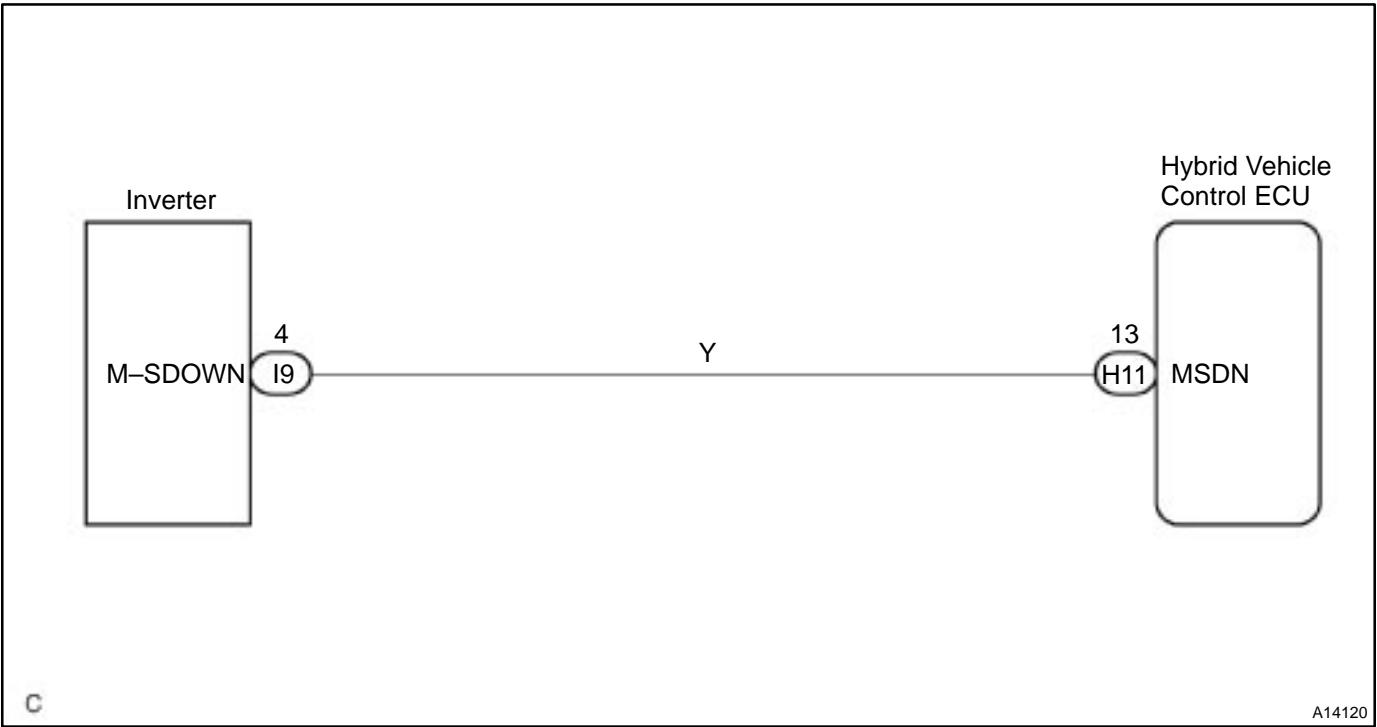

INSPECTION PROCEDURE

1	Check for open and short in wire harness between HV ECU MSDN terminal and converter & inverter M-SDOWN terminal.
---	--

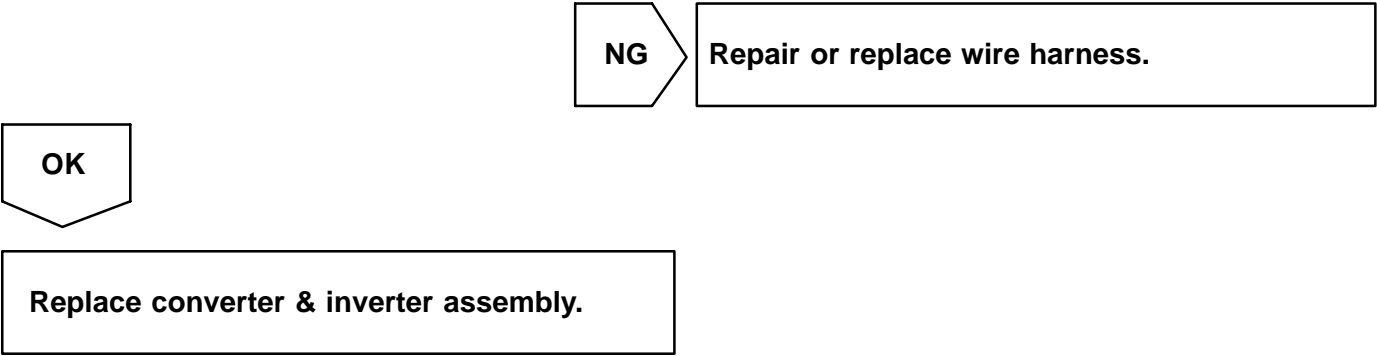


CIRCUIT DESCRIPTION

The HV ECU checks the inverter temperature and controls the load limitation in order to prevent the inverter from overheating. Also, it detects the abnormality of the line connection of the inverter temperature sensor and the malfunction of the sensor itself.

DTC P3125 – Information code 274, 275, 276, 277

INF. Code.	Detecting Condition	Trouble Area
274	Open or +B short in motor inverter temperature sensor	<ul style="list-style-type: none"> • Converter & inverter assembly • Wire harness
275	GND short in motor inverter temperature sensor	
276	Motor inverter temperature sensor malfunction	
277	Motor inverter temperature sensor performance problem	

WIRING DIAGRAM

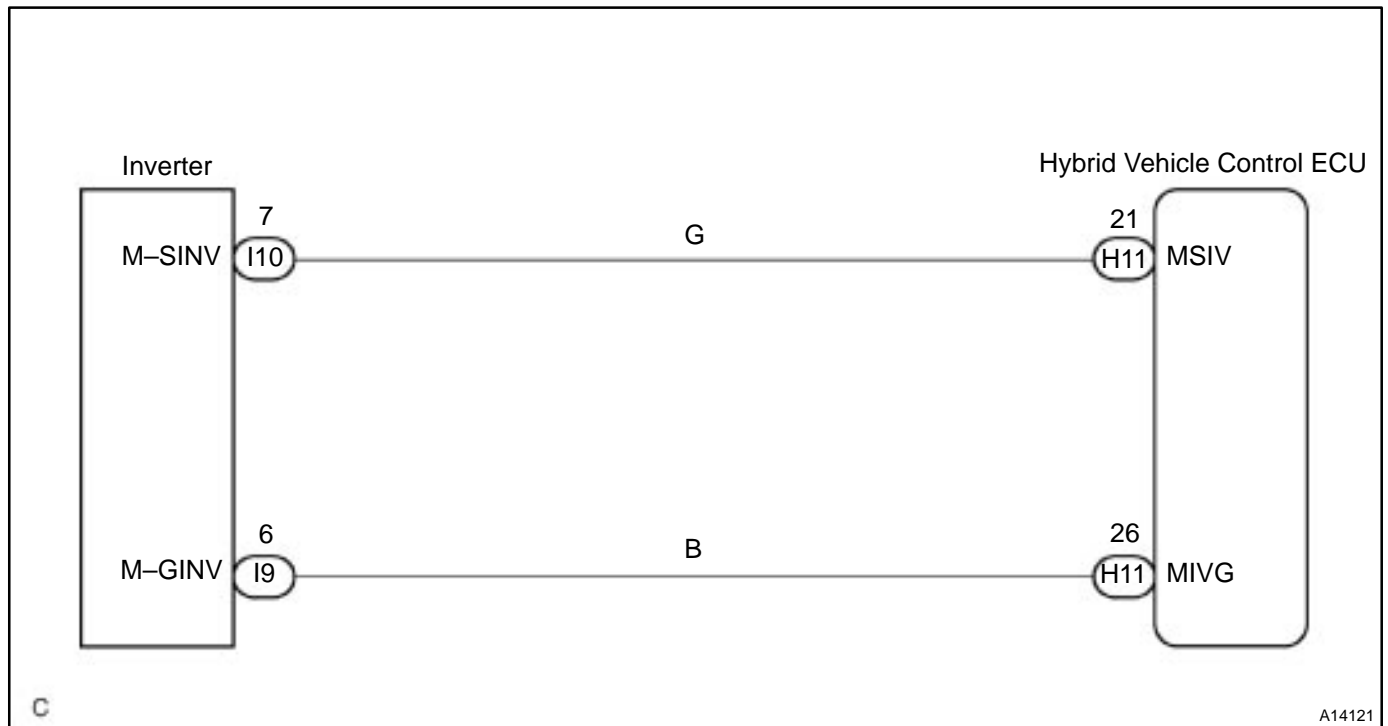

INSPECTION PROCEDURE

1	Check for open, short and +B short in wire harness between HV ECU MIT and MIVG terminals and converter & inverter M-INVT, M-GINV terminals (See page IN-41).
---	---

HINT:

Confirm that there is no open circuit in the wire harness. If the voltage between the HV ECU MIT or MIVG terminal and body ground is always more than 5V with the ignition ON, the motor inverter temperature sensor circuit has +B short.

NG

Repair or replace wire harness.

OK

Check for open in motor inverter temperature sensor and then replace converter & inverter assembly. Check motor inverter temperature sensor (See page [HV-14](#)).


CIRCUIT DESCRIPTION

The HV ECU checks the line connection of the motor inverter stop signal circuit and enters the fail safe mode (limited output driving) if malfunction is detected.

DTC P3125 – Information code 278, 280

INF. Code.	Detecting Condition	Trouble Area
278	+B short in motor inverter stop signal circuit	• Converter & inverter assembly
280	Open or GND short in motor inverter stop signal circuit	• Wire harness

WIRING DIAGRAM

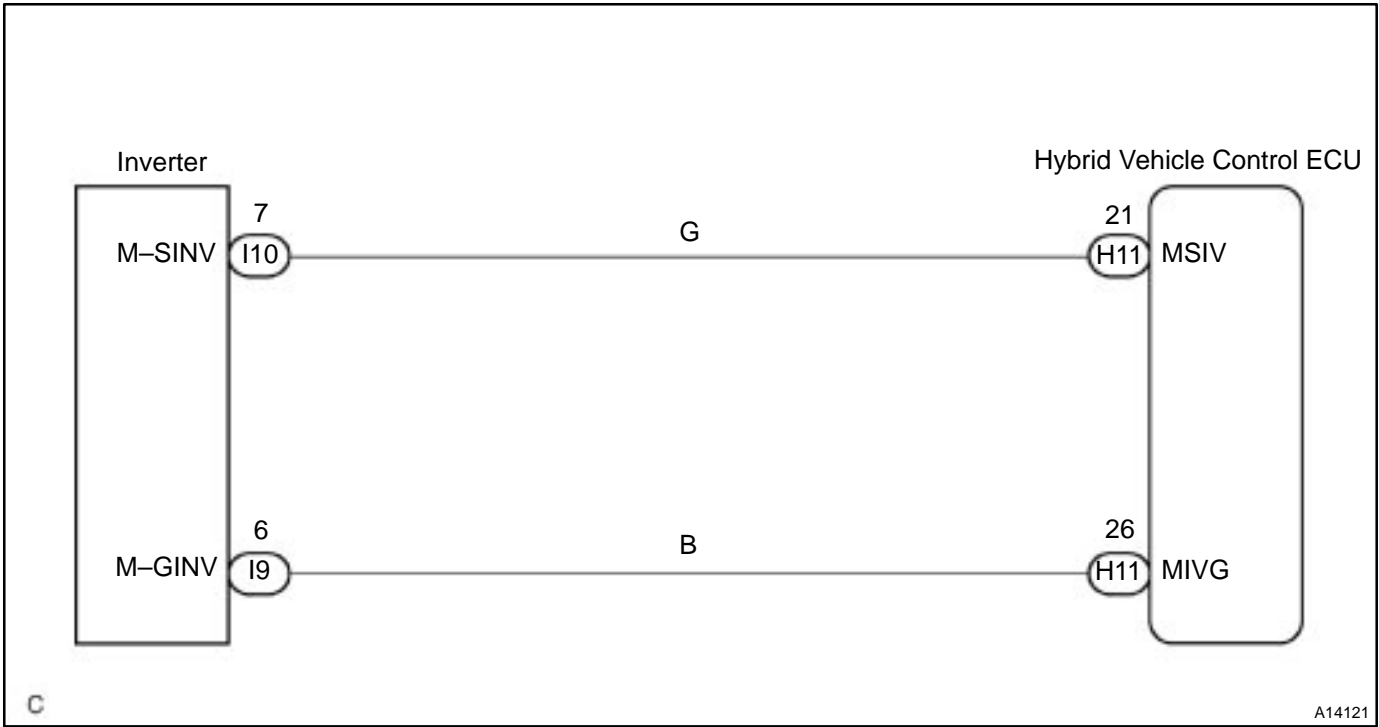

INSPECTION PROCEDURE

1	Check for open, short and +B short in wire harness between HV ECU MSIV and MIVG terminals and converter & inverter assembly M-SINV and M-GIVN terminals (See page IN-41).
---	---

HINT:

The motor inverter stop signal circuit has +B short if the voltage between the HV ECU MSIV or MIGV terminal and body ground is always more than 13 V with the ignition ON ("READY" light OFF).

NG

Repair or replace wire harness.

OK

Replace converter & inverter assembly.

CIRCUIT DESCRIPTION

DTC P3125 – Information code 279, 281, 282

INF. Code.	Detecting Condition	Trouble Area
279	Over voltage of inverter	• Converter & inverter assembly
281	Voltage drop of inverter power source	
282	Inverter circuit broken	

INSPECTION PROCEDURE

If the information code 279 or 281 is output, check if other DTC or information codes are recorded. If they are recorded, check and repair those codes first.

If the information code 279 or 281 alone is recorded, replace the converter & inverter assembly.

If the information code 282 is output, replace the converter & inverter assembly.


CIRCUIT DESCRIPTION

The HV ECU checks the line connection of the motor inverter fail signal circuit and detects malfunction.

DTC P3125 – Information code 283, 285

INF. Code.	Detecting Condition	Trouble Area
283	+B short in motor inverter fail signal circuit	<ul style="list-style-type: none"> • Converter & inverter assembly • Wire harness
285	Open or GND short in motor inverter fail signal circuit	

WIRING DIAGRAM

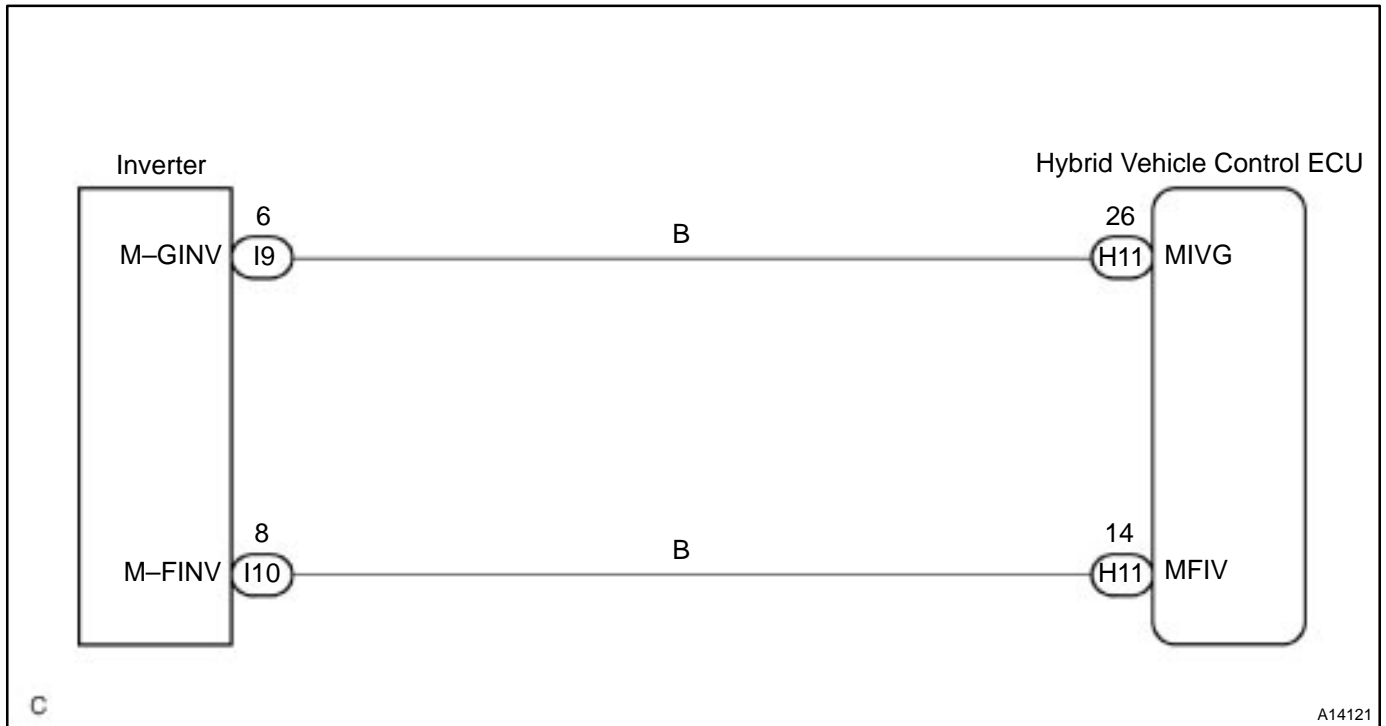

INSPECTION PROCEDURE

1	Check for open, short and +B short in wire harness between HV ECU MFIV and MIVG terminals and converter & inverter assembly M-FINV and M-GINV terminals (See page IN-41).
---	--

HINT:

The motor inverter fail signal circuit has +B short if the voltage between the HV ECU MIVG or MFIV terminal and body ground is always more than 13 V with the ignition ON ("READY" light OFF).

NG

Repair or replace wire harness.

OK

Replace converter & inverter assembly.

CIRCUIT DESCRIPTION

DTC P3125 – Information code 284, 286, 287

INF. Code.	Detecting Condition	Trouble Area
284	Inverter overheating	• Converter & inverter assembly
286	Inverter circuit broken	
287	Inverter internal short	

INSPECTION PROCEDURE

If the information code 284 or 287 is output, check if other DTC or information codes are recorded. If they are recorded, check and repair those codes first.

If the information code 284 or 287 alone is recorded, replace the converter & inverter assembly.

If the information code 286 is output, replace the converter & inverter assembly.


CIRCUIT DESCRIPTION

The HV ECU detects the malfunction of the motor inverter current sensor. It detects the malfunction of the sensor system, not of the high voltage system.

DTC P3125 – Information code 288, 289, 290, 292, 294, 296, 297, 298, 300, 302,

INF. Code.	Detecting Condition	Trouble Area
289	Open in motor inverter current sensor (V phase sub sensor)	<ul style="list-style-type: none"> • Converter & inverter assembly • Wire harness
292	Open in motor inverter current sensor (V phase main sensor)	
297	Open in motor inverter current sensor (W phase sub sensor)	
300	Open in motor inverter current sensor (W phase main sensor)	
288	Motor inverter current sensor malfunction (V phase sub sensor)	
290	Motor inverter current sensor malfunction (V phase main sensor)	
294	Motor inverter current sensor V phase performance problem	
296	Motor inverter current sensor malfunction (W phase sub sensor)	
298	Motor inverter current sensor malfunction (W phase main sensor)	
302	Motor inverter current sensor W phase performance problem	

WIRING DIAGRAM

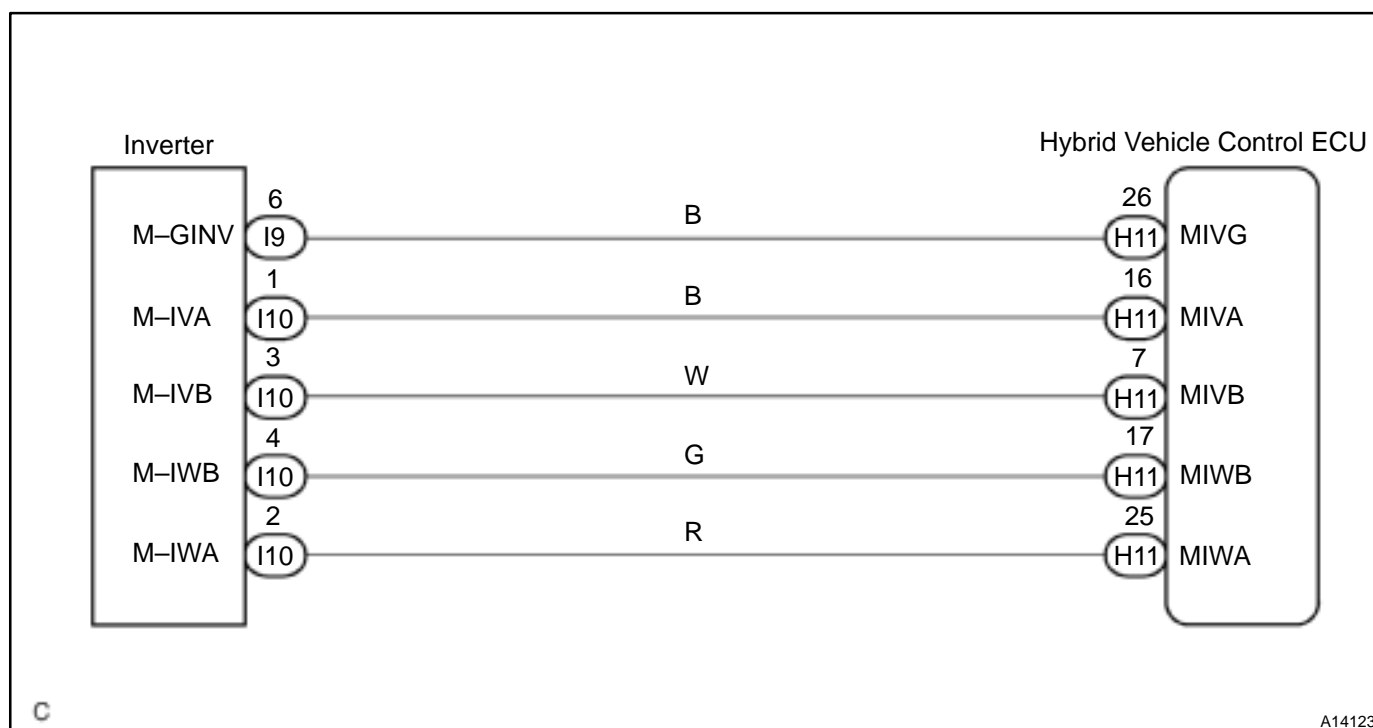

INSPECTION PROCEDURE

1	Check continuity of wire harness between HV ECU and converter & inverter assembly (See page IN-41).
---	--

OK:**Continuity: Less than 1 Ω**

HV ECU Terminals	Inverter Terminals
MIVA	M-IVA
MIVB	M-IVB
MIWA	M-IWA
MIWB	M-IWB
MIVG	M-GINV

NG**Repair or replace wire harness.****OK****Replace converter & inverter assembly.**


CIRCUIT DESCRIPTION

The HV ECU detects the malfunction of the motor inverter current sensor. It detects the malfunction of the sensor system, not of the high voltage system.

DTC P3125 – Information code 291, 293, 295, 299, 301, 303

INF. Code.	Detecting Condition	Trouble Area
291	When there is a history that the state of malfunction continued during inverter fail safe mode.	<ul style="list-style-type: none"> • Converter & inverter assembly • Wire harness
293		
295		
299		
301		
303		

WIRING DIAGRAM

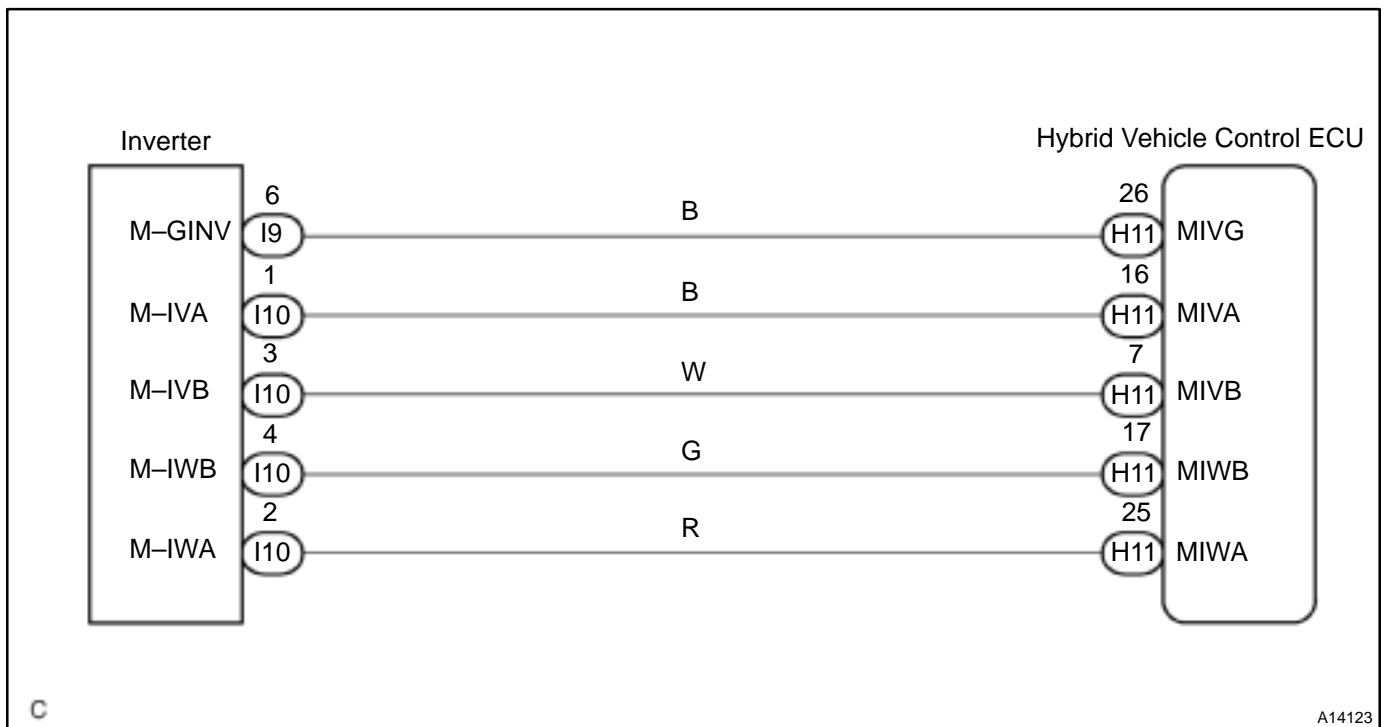

INSPECTION PROCEDURE

1	Check continuity of wire harness between HV ECU and converter & inverter assembly (See page IN-41).
---	--

OK:**Continuity: Less than 1 Ω**

HV ECU Terminals	Inverter Terminals
MIVA	M-IVA
MIVB	M-IVB
MIWA	M-IWA
MIWB	M-IWB
MIVG	M-GINV

NG**Repair or replace wire harness.****OK**

2	Is there DTC P3100 being output?
---	----------------------------------

YES**Check applicable DTC.****NO****Replace converter & inverter assembly.**

CIRCUIT DESCRIPTION

The HV ECU detects the malfunction of the motor inverter current sensor. It detects the malfunction of the sensor system, not of the high voltage system.

DTC P3125 – Information code 306, 307

INF. Code.	Detecting Condition	Trouble Area
306	Failure in monitoring motor torque performance	• Converter & inverter assembly
307	Abnormal current value of motor	

INSPECTION PROCEDURE

If the information code 306 or 307 is output, check if other DTC or information codes are recorded. If they are recorded, check and repair those codes first.

If the information code 306 or 307 alone is recorded, replace the converter & inverter assembly.

CIRCUIT DESCRIPTION

If the HV ECU detects the collision signal from the airbag or inverter, the HV ECU recognizes it as the destruction of the vehicle and then shuts down the high voltage system to ensure safety.

DTC P3125 – Information code 308

INF. Code.	Detecting Condition	Trouble Area
308	Input of collision signal from airbag or inverter	–

HINT:

When the vehicle collision occurs and the airbag is deployed, this information code will be recorded and the high voltage system will be shut down.


CIRCUIT DESCRIPTION

The HV ECU checks the line connection of the motor gate shutdown signal circuit and detects malfunction.

DTC P3125 – Information code 304, 305

INF. Code.	Detecting Condition	Trouble Area
304	+B short in motor gate shutdown signal circuit	• Converter & inverter assembly • Wire harness
305	Open or GND short in motor gate shutdown signal circuit	

WIRING DIAGRAM

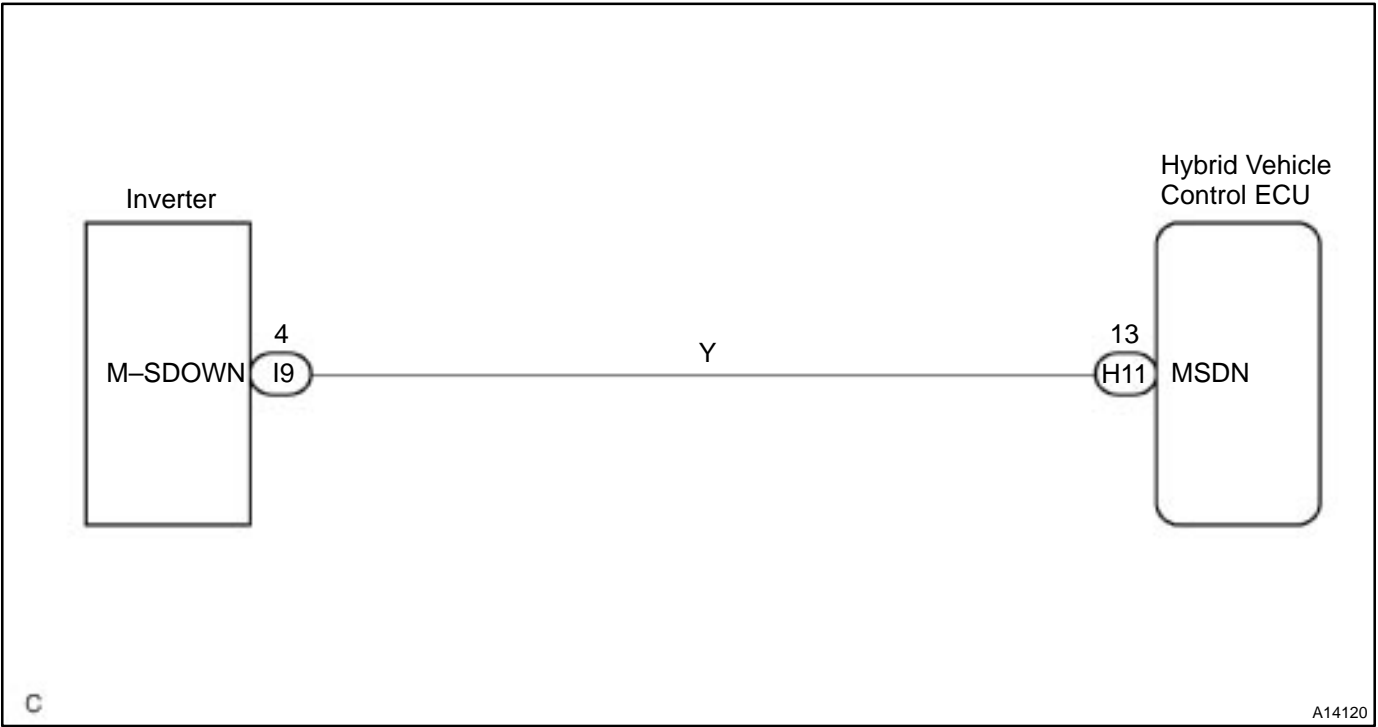

INSPECTION PROCEDURE

1	Check for open, short and +B short in wire harness between HV ECU MSDN terminal and converter & inverter assembly M-SDOWN terminals (See page IN-41).
---	--

HINT:

Confirm that there is no open circuit in the wire harness. The motor gate shutdown signal circuit has +B short if the battery voltage is always applied to the HV ECU MSDN terminal with the ignition ON.

NG**Repair or replace wire harness.****OK****Replace converter & inverter assembly.**


CIRCUIT DESCRIPTION


The HV ECU detects faulty line connection inside the inverter.

DTC P3125 – Information code 309

INF. Code.	Detecting Condition	Trouble Area
309	Open or short in generator inverter switching wiring (GUU, GVU, GWU)	<ul style="list-style-type: none">• Wire harness• Converter & inverter assembly

WIRING DIAGRAM

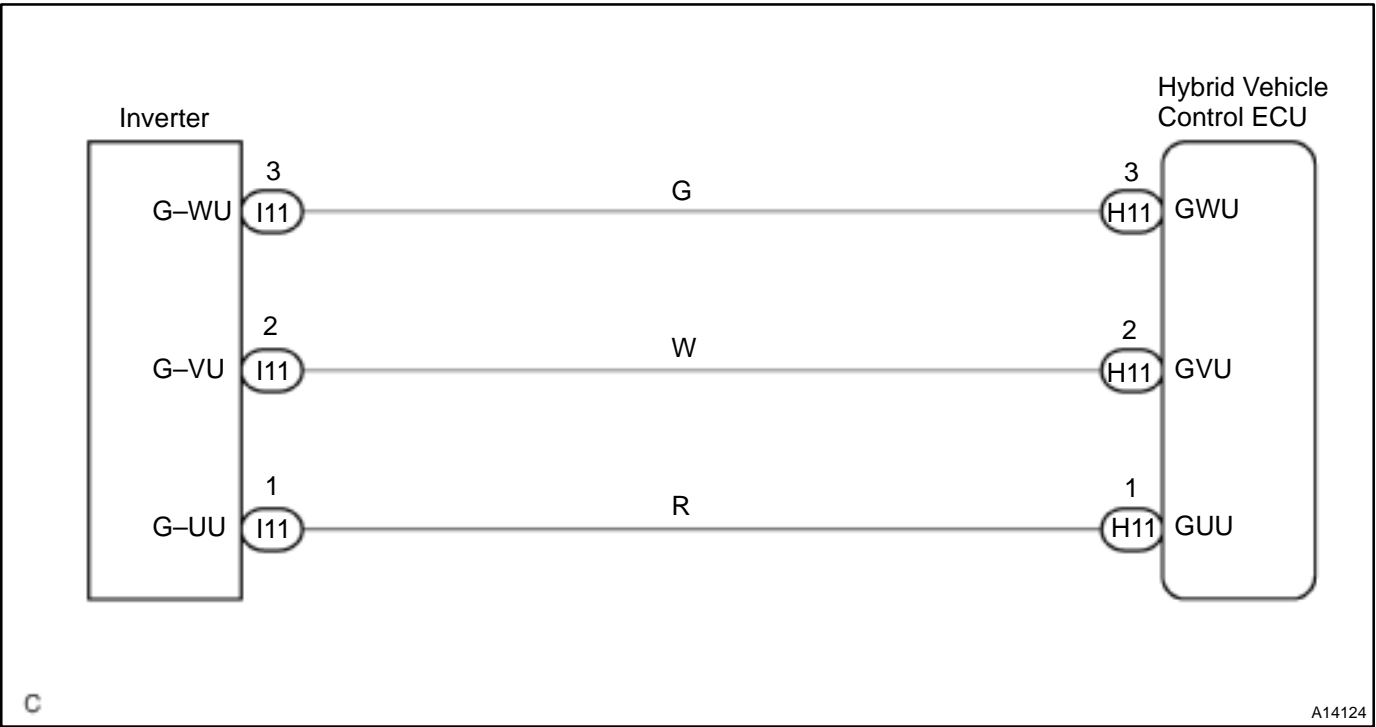

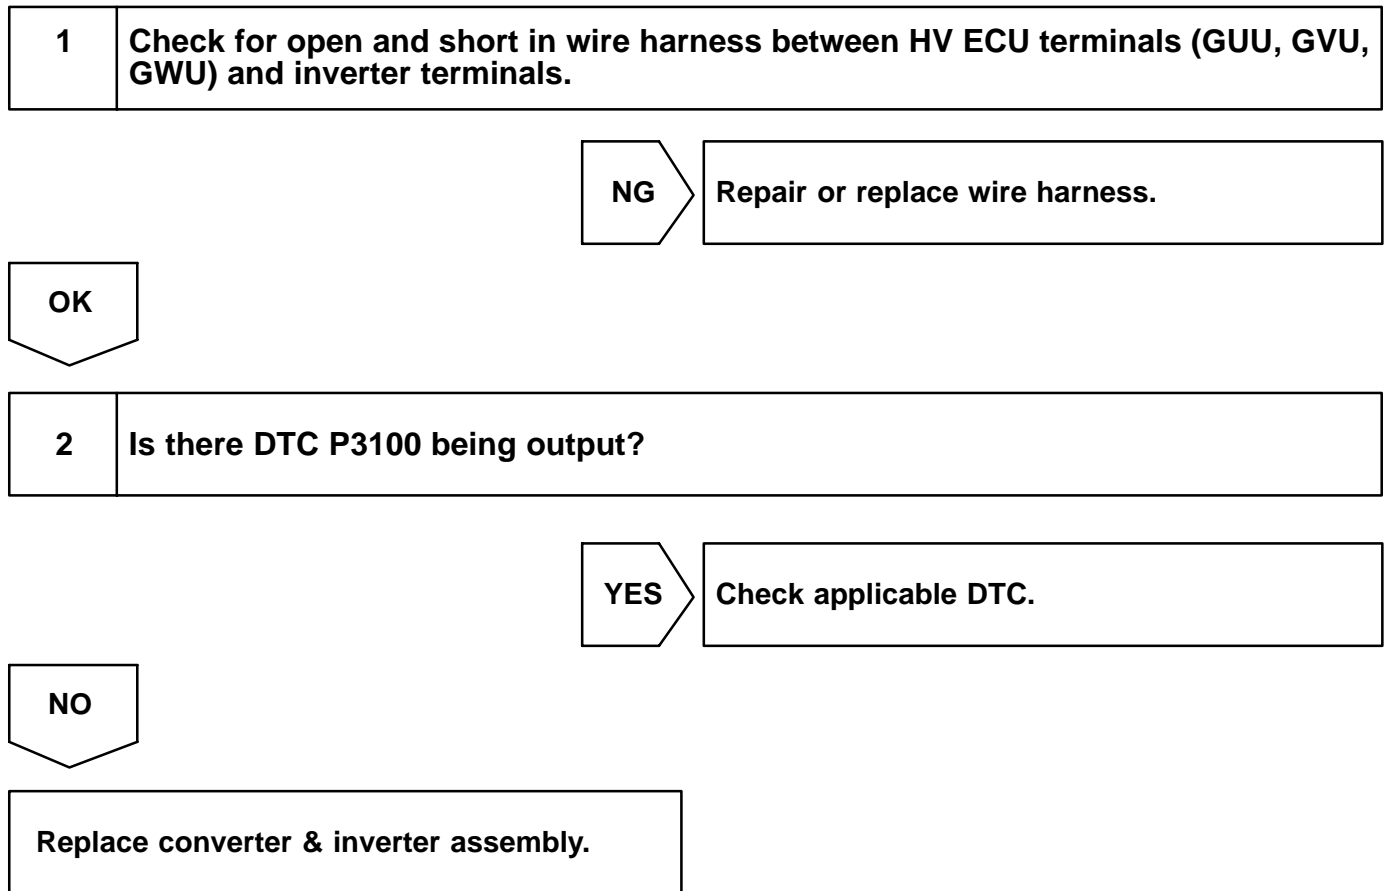INSPECTION PROCEDURE


CIRCUIT DESCRIPTION

The HV ECU detects faulty line connection inside the inverter.

DTC P3125 – Information code 311

INF. Code.	Detecting Condition	Trouble Area
311	Generator inverter malfunction	<ul style="list-style-type: none">• Converter & inverter assembly• Wire harness

WIRING DIAGRAM

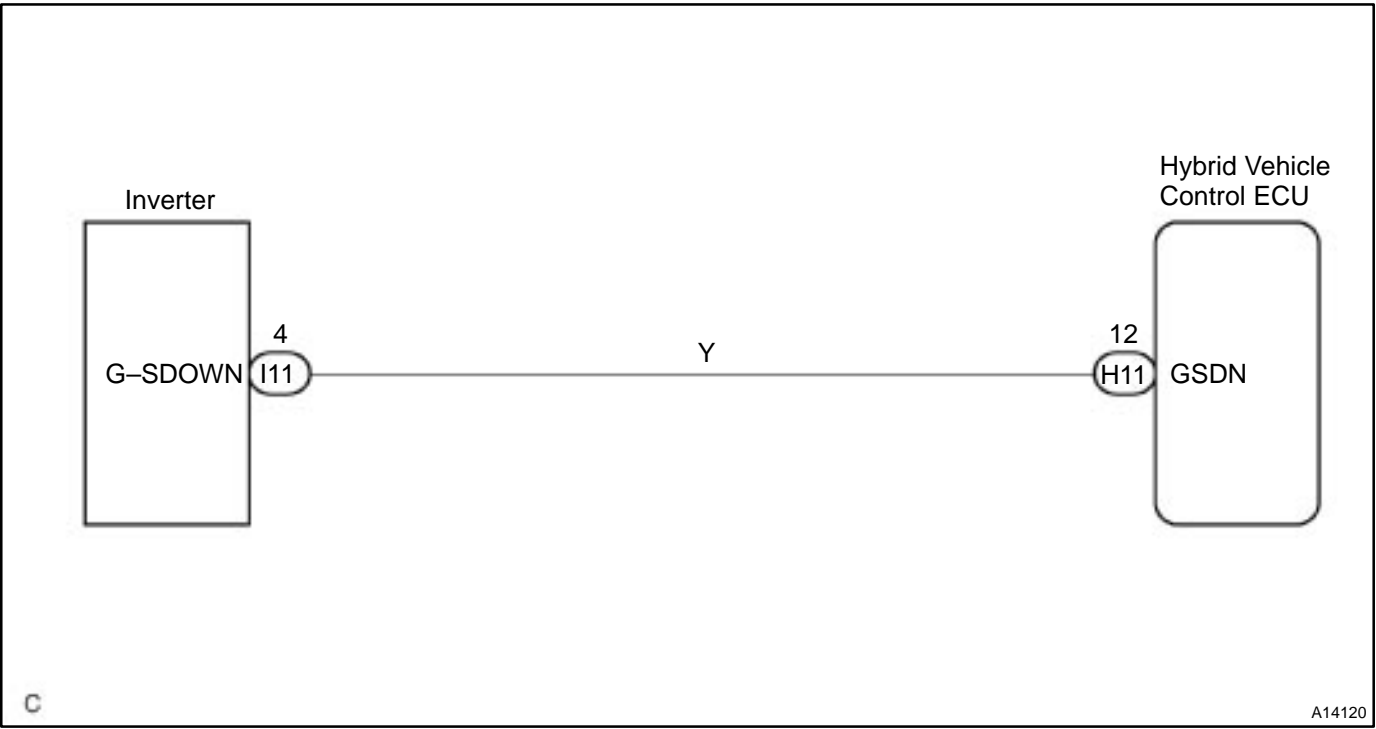

INSPECTION PROCEDURE

1	Check for open and short in wire harness between HV ECU GSDN terminal and converter & inverter S-DOWN terminal.
---	---

NG

Repair or replace wire harness.

OK

Replace converter & inverter assembly.


CIRCUIT DESCRIPTION

The HV ECU checks the generator temperature and controls the load limitation in order to prevent the generator from overheating. Also, it detects the abnormality of the line connection of the generator temperature sensor and the malfunction of the sensor itself.

DTC P3125 – Information code 312, 313, 314, 315

INF. Code.	Detecting Condition	Trouble Area
312	Open or +B short in generator inverter temperature sensor	<ul style="list-style-type: none"> • Converter & inverter assembly • Wire harness
313	GND short in generator inverter temperature sensor	
314	Generator inverter temperature sensor malfunction	
315	Generator inverter temperature sensor performance problem	

WIRING DIAGRAM

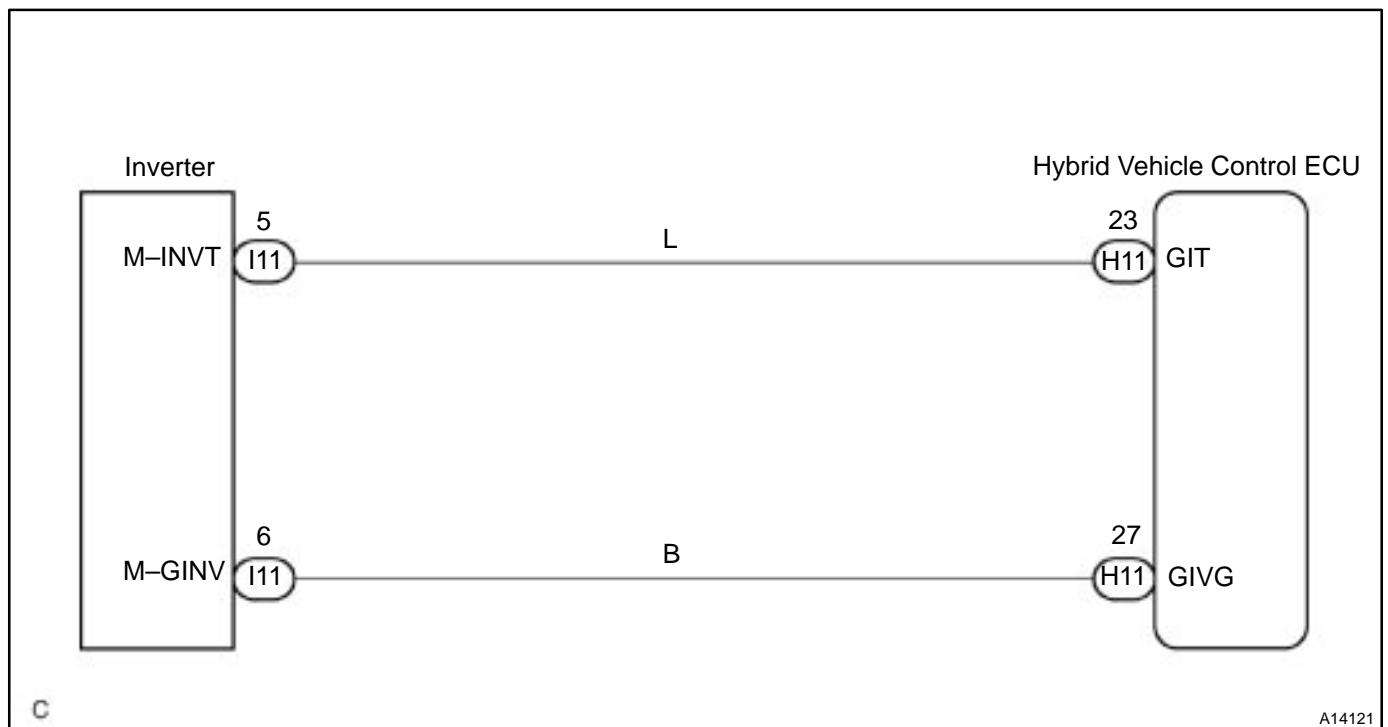

INSPECTION PROCEDURE

1	Check for open, short and +B short in wire harness between HV ECU GIT and GIVG terminals and converter & inverter G–GINV or G–GINV terminals (See page IN-41).
---	---

HINT:

Confirm that there is no open circuit in the wire harness. The generator inverter temperature sensor circuit has +B short if the voltage between the HV ECU GIT or GIVG terminal and body ground is always more than 5V with the ignition ON.

NG**Repair or replace wire harness.****OK**

Check for open in generator inverter temperature sensor and then replace converter & inverter assembly. Check generator inverter temperature sensor (See page [HV-14](#)).


CIRCUIT DESCRIPTION

The HV ECU checks the line connection of the generator inverter stop signal circuit and enters the fail safe mode (limited driving) if malfunction is detected.

DTC P3125 – Information code 316, 318

INF. Code.	Detecting Condition	Trouble Area
316	+B short in generator inverter stop signal circuit	• Converter & inverter assembly
318	Open or GND short in generator inverter stop signal circuit	• Wire harness

WIRING DIAGRAM

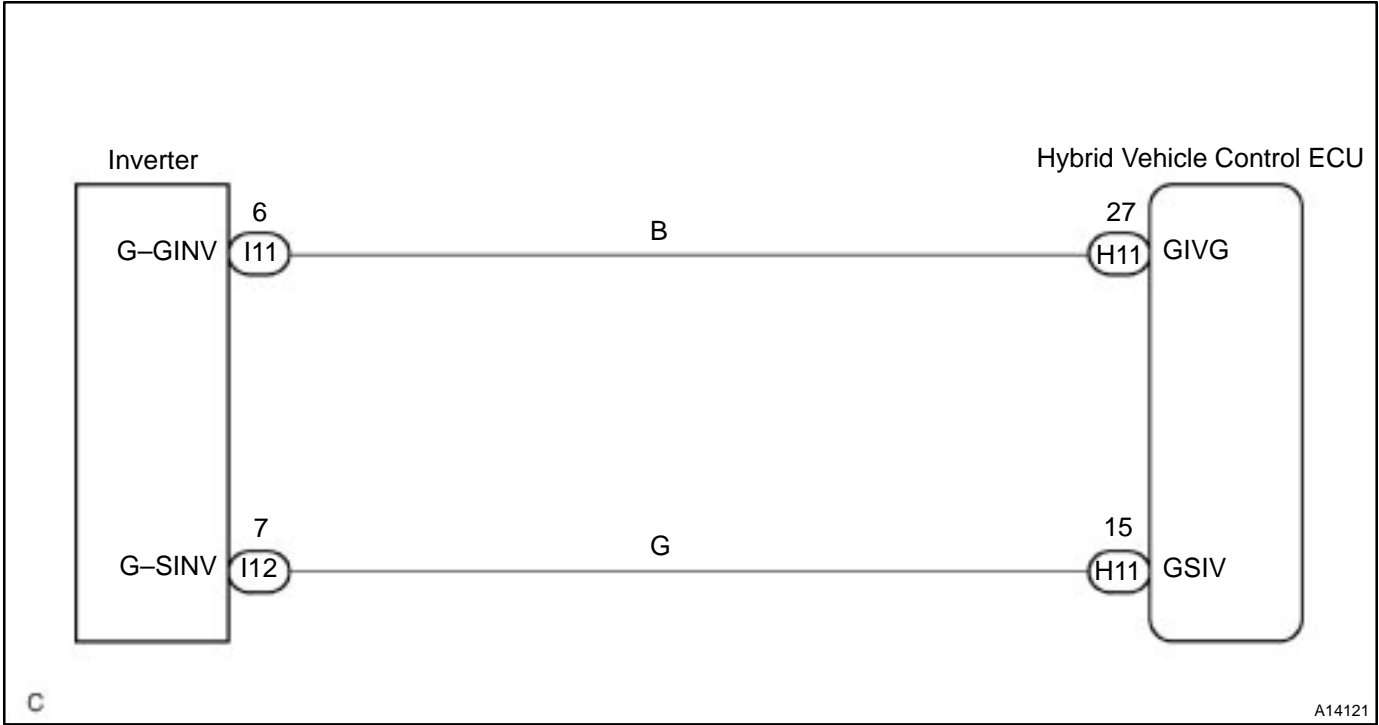

INSPECTION PROCEDURE

1	Check for open, short and +B short in wire harness between HV ECU GSIV and GIVG terminals and converter & inverter assembly G-SINV and G-GINV terminals (See page IN-41).
---	--

HINT:

The generator inverter stop signal circuit has +B short if the voltage between the HV ECU GSIV or GIVG terminal and body ground is always more than 13 V with the ignition ON ("READY" light OFF).

NG

Repair or replace wire harness.

OK

Replace converter & inverter assembly.

CIRCUIT DESCRIPTION

DTC P3125 – Information code 317, 319, 320

INF. Code.	Detecting Condition	Trouble Area
317	Over voltage of inverter	• Converter & inverter assembly
319	Voltage drop of inverter power source	
320	Inverter circuit broken	

INSPECTION PROCEDURE

If the information code 317 or 319 is output, check if other information codes are recorded. If they are recorded, check and repair those codes first.

If the information code 317 or 319 alone is recorded, replace the converter & inverter assembly.

If the information code 320 is output, replace the converter & inverter assembly.


CIRCUIT DESCRIPTION

The HV ECU checks the line connection of the generator inverter fail signal circuit and detects malfunction.

DTC P3125 – Information code 321, 323

INF. Code.	Detecting Condition	Trouble Area
321	+B short in generator inverter fail signal circuit	<ul style="list-style-type: none"> • Converter & inverter assembly • Wire harness
323	Open or GND short in generator inverter fail signal circuit	

WIRING DIAGRAM

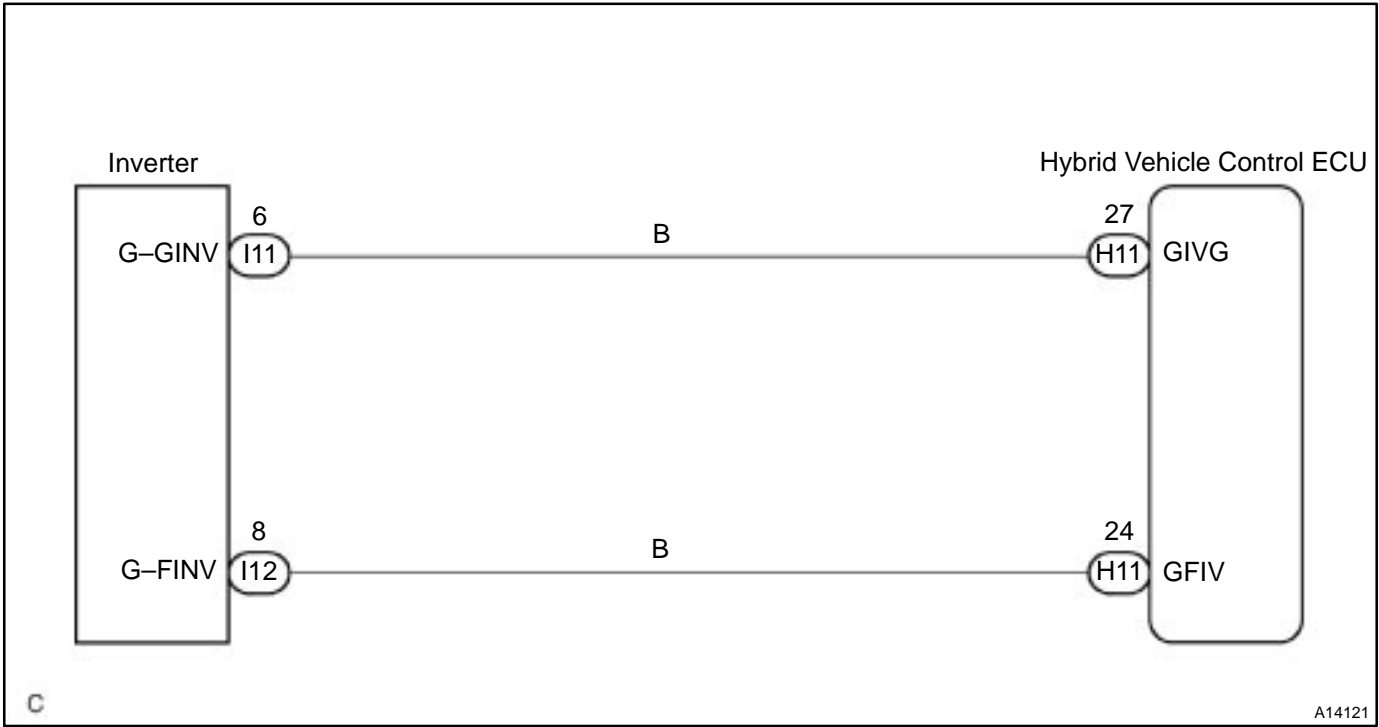

INSPECTION PROCEDURE

1	Check for open, short and +B short in wire harness between HV ECU GFIV and GIVG terminals and converter & inverter assembly G-FINV and G-GINV terminals (See page IN-41).
---	--

HINT:

The generator inverter fail signal circuit has +B short if the voltage between the HV ECU GFIV or GIVG terminal and body ground is always more than 13 V with the ignition ON ("READY" light OFF).

NG

Repair or replace wire harness.

OK

Replace converter & inverter assembly.

CIRCUIT DESCRIPTION

DTC P3125 – Information code 322, 324, 325

INF. Code.	Detecting Condition	Trouble Area
322	Inverter overheating	• Converter & inverter assembly
324	Inverter circuit broken	
325	Inverter internal short	

INSPECTION PROCEDURE

If the information code 322 or 325 is output, check if other information codes are recorded. If they are recorded, check and repair those codes first.

If the information code 322 or 325 alone is recorded, replace the converter & inverter assembly.

If the information code 324 is output, replace the converter & inverter assembly.


CIRCUIT DESCRIPTION

The HV ECU detects the malfunction of the generator inverter current sensor. It detects the malfunction of the sensor system, not of the high voltage system.

DTC P3125 – Information code 326, 327, 328, 330, 332, 334, 335, 336, 338, 340

INF. Code.	Detecting Condition	Trouble Area
327	Open in generator inverter current sensor (V phase sub sensor)	<ul style="list-style-type: none"> • Converter & inverter assembly • Wire harness
330	Open in generator inverter current sensor (V phase main sensor)	
335	Open in generator inverter current sensor (W phase sub sensor)	
338	Open in generator inverter current sensor (W phase main sensor)	
326	Generator inverter current sensor malfunction (V phase sub sensor)	
328	Generator inverter current sensor malfunction (V phase main sensor)	
332	Generator inverter current sensor V phase performance problem	
334	Generator inverter current sensor malfunction (W phase sub sensor)	
336	Generator inverter current sensor malfunction (W phase main sensor)	
340	Generator inverter current sensor W phase performance problem	

WIRING DIAGRAM

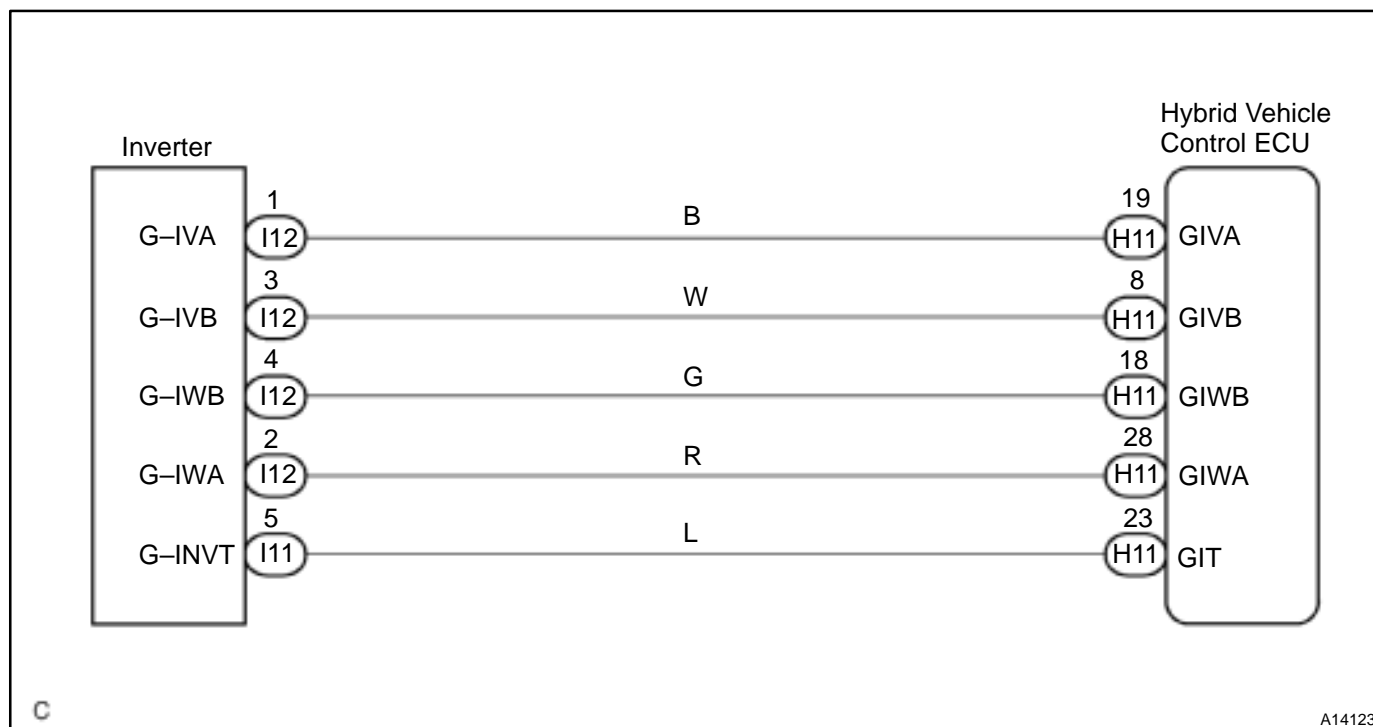

INSPECTION PROCEDURE

1	Check continuity of wire harness between HV ECU and converter & inverter assembly (See page IN-41).
---	--

OK:**Continuity: Less than 1 Ω**

HV ECU Terminals	Inverter Terminals
GIVA	G-IVA
GIVB	G-IVB
GIWA	G-IWA
GIWB	G-IWB
GIVG	G-GINV

NG**Repair or replace wire harness.****OK****Replace converter & inverter assembly.**


CIRCUIT DESCRIPTION

The HV ECU detects the malfunction of the generator inverter current sensor. It detects the malfunction of the sensor system, not of the high voltage system.

DTC P3125 – Information code 329, 331, 333, 337, 339, 341

INF. Code.	Detecting Condition	Trouble Area
329	When there is a history that the state of malfunction continued during inverter fail safe mode	<ul style="list-style-type: none"> • Converter & inverter assembly • Wire harness
331		
333		
337		
339		
341		

WIRING DIAGRAM

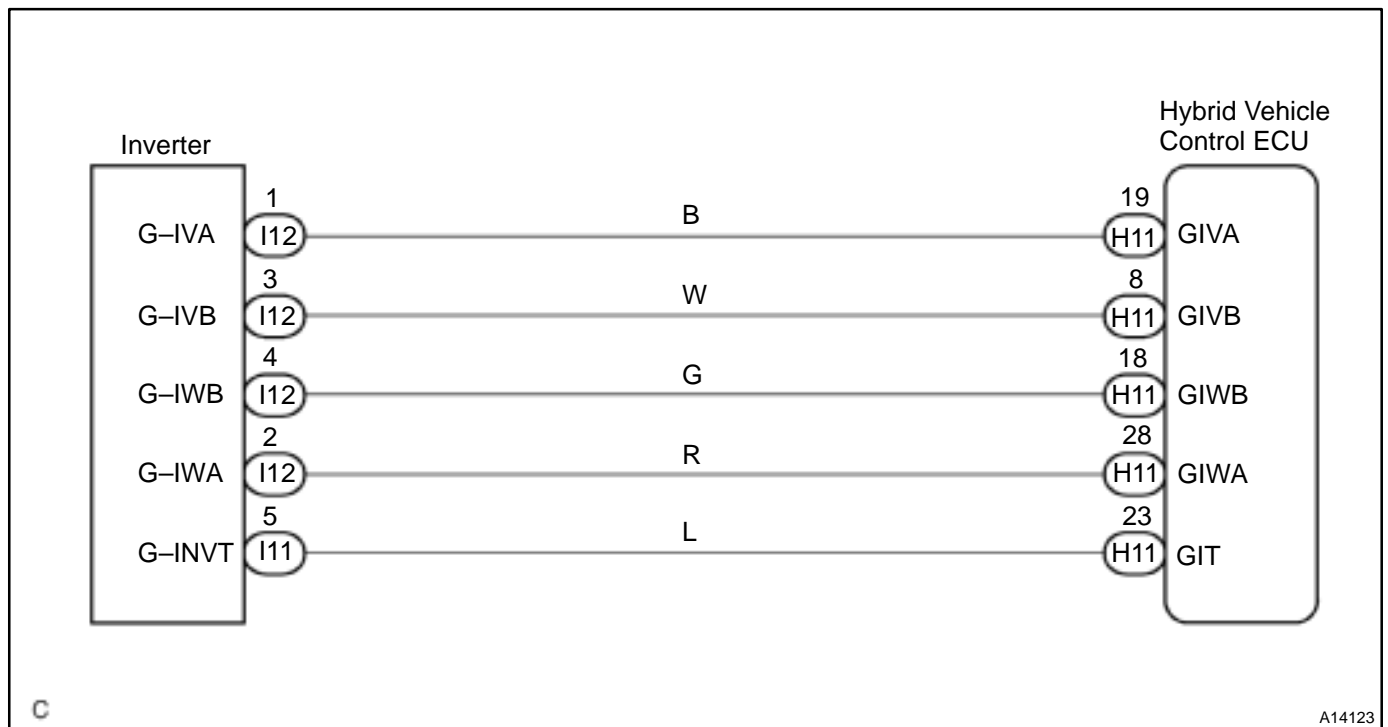

INSPECTION PROCEDURE

- | | |
|---|--|
| 1 | Check continuity of wire harness between HV ECU and converter & inverter assembly (See page IN-41). |
|---|--|

OK:

Continuity: Less than 1 Ω

HV ECU Terminals	Inverter Terminals
GIVA	G-IVA
GIVB	G-IVB
GIWA	G-IWA
GIWB	G-IWB
GIVG	G-GINV

NG

Repair or replace wire harness.

OK

- | | |
|---|----------------------------------|
| 2 | Is there DTC P3100 being output? |
|---|----------------------------------|

YES

Check applicable DTC.

NO

Replace converter & inverter assembly.

CIRCUIT DESCRIPTION

The HV ECU detects the malfunction of the generator inverter current sensor. It detects the malfunction of the sensor system, not of the high voltage system.

DTC P3125 – Information code 344, 345

INF. Code.	Detecting Condition	Trouble Area
344	Failure in monitoring generator torque performance	• Converter & inverter assembly
345	Abnormal current value of generator	

INSPECTION PROCEDURE

If the information code 344 or 345 is output, check if other DTC or information codes are recorded. If they are recorded, check and repair those codes first.

If the information code 344 or 345 alone is recorded, replace the converter & inverter assembly.


CIRCUIT DESCRIPTION

The HV ECU checks the line connection of the generator gate shutdown signal circuit and detects malfunction.

DTC P3125 – Information code 342, 343

INF. Code.	Detecting Condition	Trouble Area
342	+B short in generator gate shutdown signal circuit	• Converter & inverter assembly • Wire harness
343	Open or GND short in generator gate shutdown signal circuit	

WIRING DIAGRAM

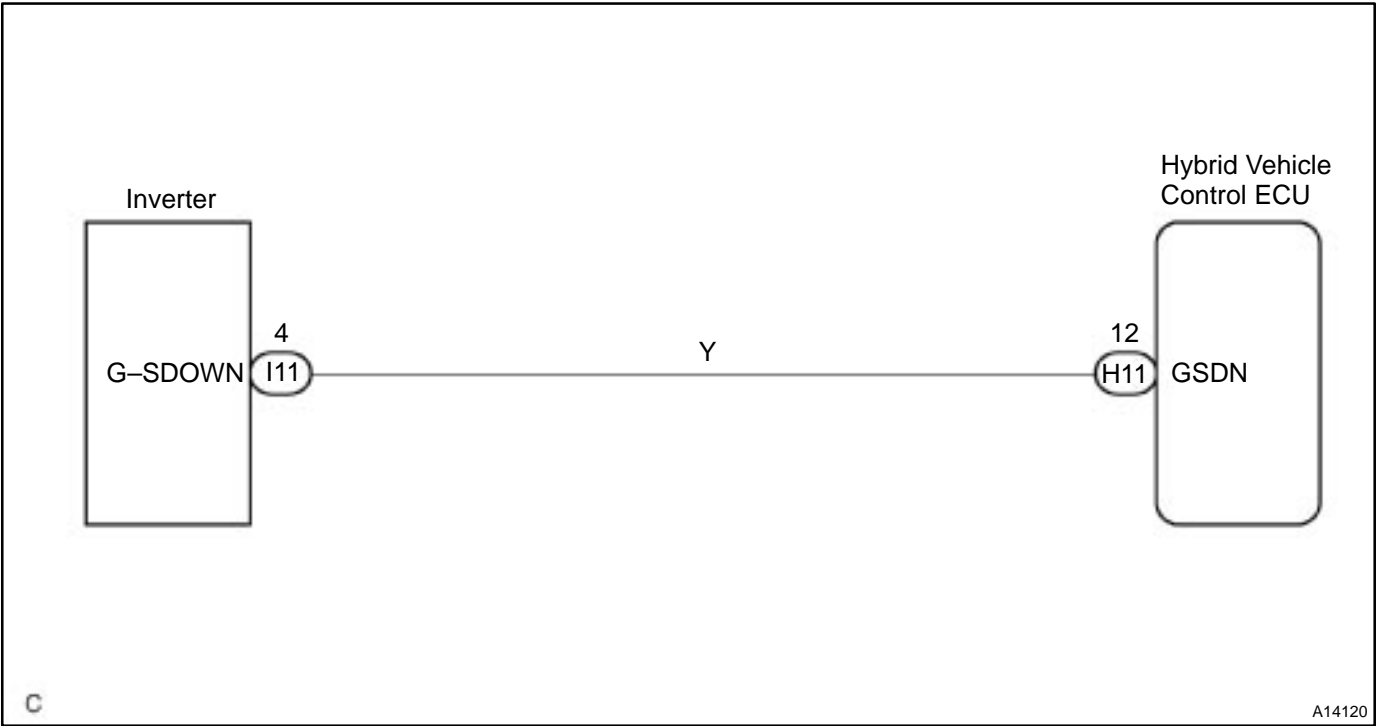

cardiagn.com

INSPECTION PROCEDURE

1	Check for open, short and +B short in wire harness between HV ECU GSDN terminal and converter & inverter assembly G–SDOWN terminals (See page IN-41).
---	--

HINT:

Confirm that there is no open circuit in the wire harness. The generator gate shutdown signal circuit has +B short if the battery voltage is always applied to the HV ECU GSDN terminal with the ignition ON.

NG

Repair or replace wire harness.

OK

Replace converter & inverter assembly.

DTC	P3130	Inverter Cooling System Malfunction
------------	--------------	--

CIRCUIT DESCRIPTION

The HV ECU checks the operation of the inverter water pump and detects malfunction.


HINT:

- When using an OBD scan tool other than TOYOTA hand-held tester, check all the steps.
- When using TOYOTA hand-held tester, confirm the information code and check it.

DTC P3130 – Information code 346

INF. code.	Detecting Condition	Trouble Area
346	Water pump system malfunction	<ul style="list-style-type: none"> • Inverter water pump • IG2 relay • Wire harness

WIRING DIAGRAM

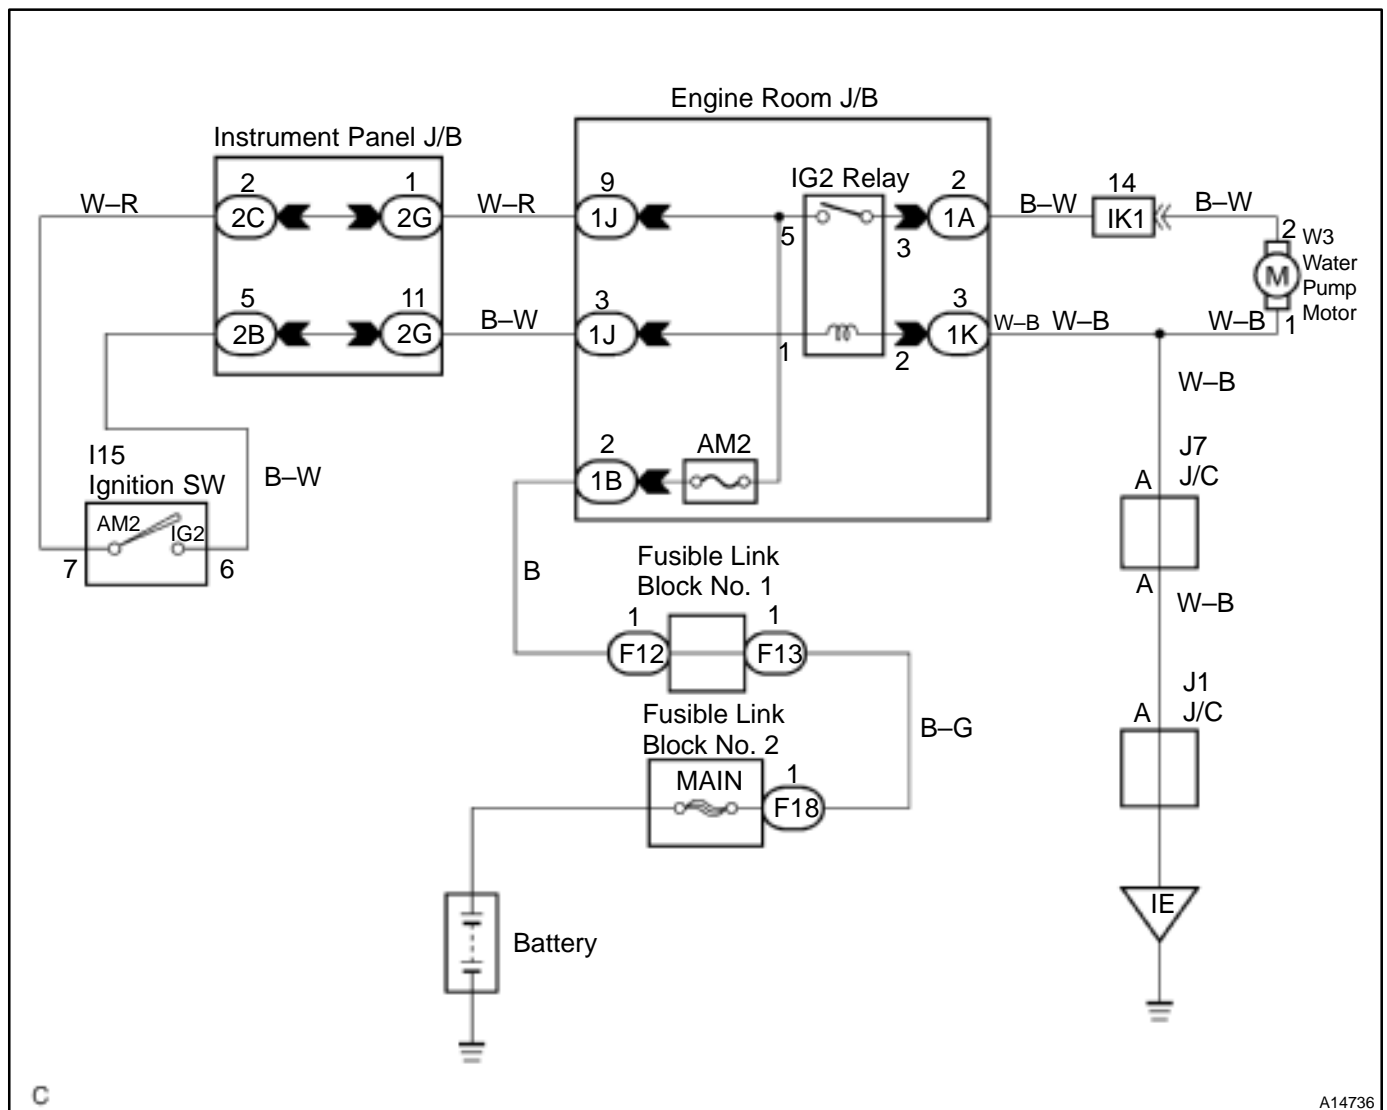

INSPECTION PROCEDURE

1	Check wire harness (See page IN-41).
----------	---


HINT:

After removing the IG2 relay, check the electrical condition of each terminal.

- No. 1 terminal: With the IG switch ON, 10 – 14 V
- No. 2 terminal : Continuity between the IG2 relay No. 2 terminal and body ground (less than 1 Ω)
- No. 3 terminal: Continuity between the IG2 relay No. 3 terminal and water pump No. 2 terminal (less than 1 Ω)
- No. 5 terminal: Always 10 – 14 V

Continuity between the water pump No. 1 terminal and body ground (less than 1 Ω)

NG**Repair or replace wire harness.****OK**

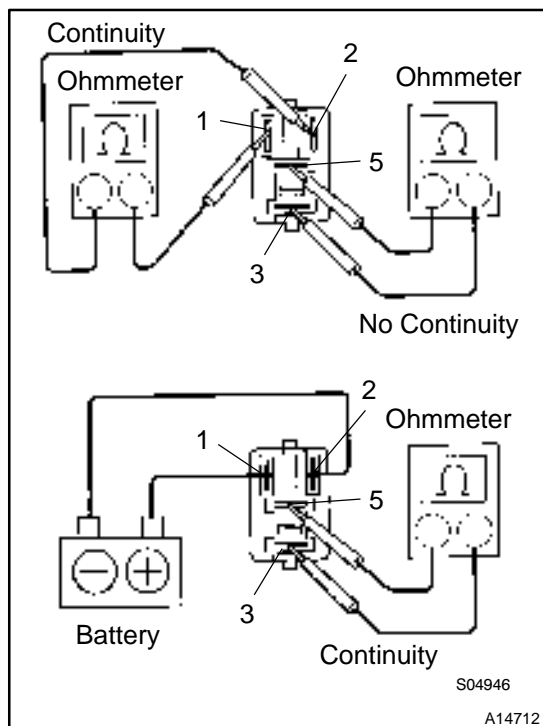2 Check IG2 relay.**PREPARATION:**

Remove the IG2 relay from the engine room J/B.

CHECK:

- Using an ohmmeter, check that there is continuity between terminals 1 and 2.
- Check that there is no continuity between terminals 3 and 5.
- Apply battery voltage across terminals 1 and 2. Using an ohmmeter, check that there is continuity between terminals 3 and 5.

OK:

- Continuity
- No continuity
- Continuity

NG**Replace IG2 relay.****OK**

Confirm that water pump is defective and then replace it.
Check water pump (See page [HV-26](#)).

CIRCUIT DESCRIPTION**DTC P3130 – Information code 347**

INF. code.	Detecting Condition	Trouble Area
347	Electric cooling fan system malfunction	• Electric cooling fan system

INSPECTION PROCEDURE

If this information code is output, check the electric cooling fan system (See page [CO-20](#)).

DTC	P3135	Circuit Breaker Sensor Malfunction
------------	--------------	---


CIRCUIT DESCRIPTION

The HV ECU checks the line connection of the circuit breaker sensor (collision signal) and gives warning to the driver if malfunction is detected.

DTC P3135 – Information code 348, 349

INF. code.	Detecting Condition	Trouble Area
348	GND short in circuit breaker sensor	• Circuit breaker sensor
349	Open or +B short in circuit breaker sensor	• Wire harness

WIRING DIAGRAM

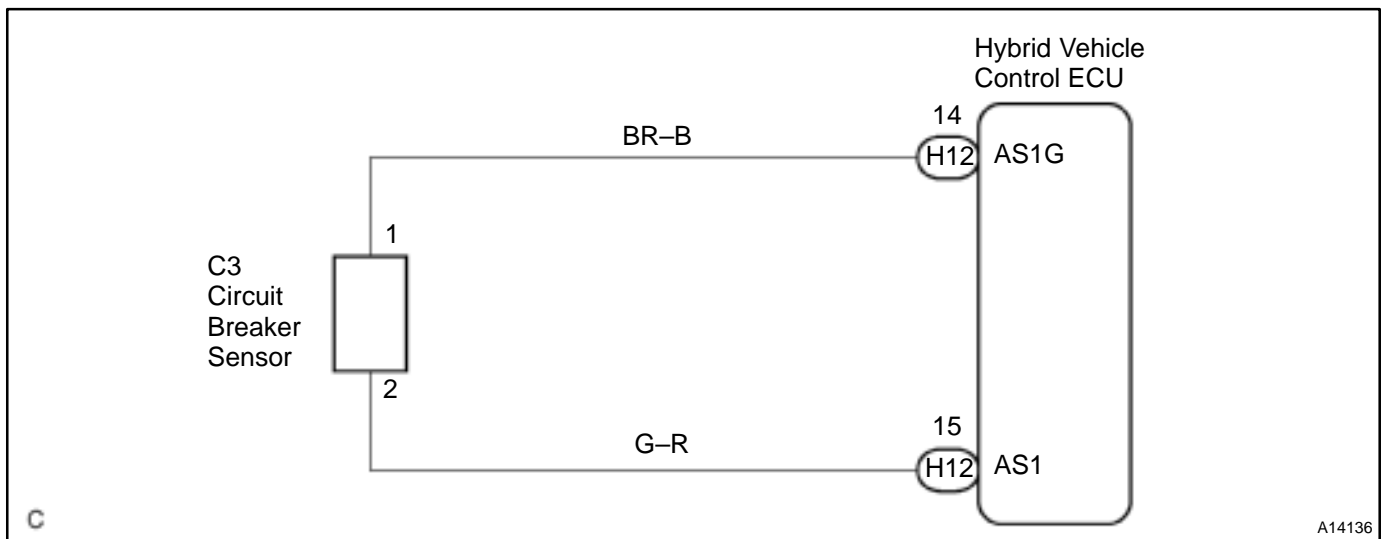

INSPECTION PROCEDURE

1	Check for open, short and +B short in wire harness between circuit breaker sensor No. 1 and No. 2 terminals and HV ECU AS1G and AS1 terminals (See page IN-41).
---	--

HINT:

Confirm that there is no open circuit in the wire harness. The circuit breaker sensor circuit has +B short if the voltage of the HV ECU AS1 terminal is more than 5V with the ignition ON.

NG**Repair or replace wire harness.****OK**

Check for open in resistance between circuit breaker sensor terminals and then replace circuit breaker sensor (Circuit breaker sensor resistance: $820 \pm 82 \Omega$).

DTC	P3140	Interlock Malfunction
------------	--------------	------------------------------

CIRCUIT DESCRIPTION

If the HV ECU detects the operation of the safety devices (removal of the service plug, inverter terminal cover and sensor cover) while the vehicle is not running (with the vehicle is stopped), it will shut down the system main relay. If the safety devices are correctly installed, it will resume the normal operation after the power source is supplied again. If it does not, there is a possibility of an open circuit, so perform the same inspection as the information code 351.

HINT:

- When using an OBDⅡ scan tool other than TOYOTA hand-held tester, check all the steps.
- When using TOYOTA hand-held tester, confirm the information code and check it.

DTC P3140 – Information code 350

INF. code.	Detecting Condition	Trouble Area
350	Safety devices operating with vehicle is stopped (ILK signal ON)	–


CIRCUIT DESCRIPTION

The HV ECU records the information code 351 and gives warning to the driver when it detects an open circuit in the interlock signal circuit while the vehicle is running. In this case, it does not shut down the high voltage system.

DTC P3140 – Information code 351

INF. code.	Detecting Condition	Trouble Area
351	Open circuit in interlock signal circuit while vehicle is running	<ul style="list-style-type: none"> • Interlock switch • Inverter terminal cover • Converter & inverter assembly • Wire harness

WIRING DIAGRAM

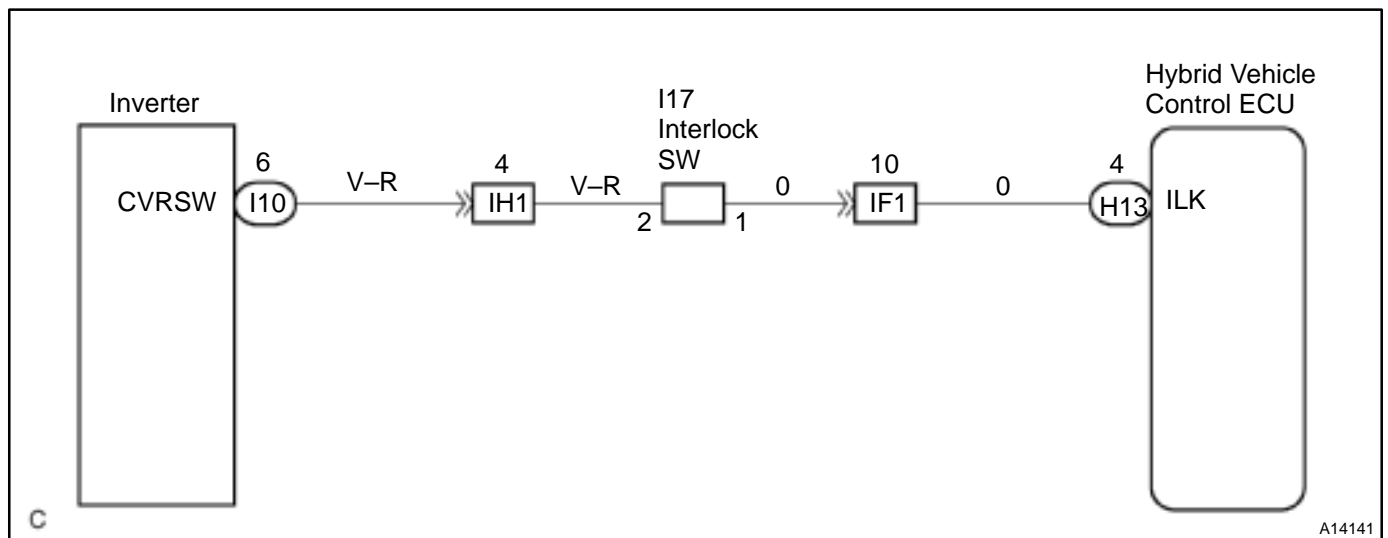

INSPECTION PROCEDURE

- | | |
|---|---|
| 1 | Check installation condition of inverter terminal cover and sensor cover. |
|---|---|

NG

Install them correctly.

OK

- | | |
|---|---|
| 2 | Check continuity of wire harness between interlock switch No. 1 terminal and HV ECU ILK terminal and interlock switch No. 2 terminal and inverter CVRSW terminal (See page IN-41). |
|---|---|

OK:Continuity: Less than 1 Ω **NG**

Repair or replace wire harness.

OK

- | | |
|---|---|
| 3 | Check continuity between inverter CVRSW terminal and body ground (See page IN-41). |
|---|---|

OK:Continuity: Less than 1 Ω **NG**

Replace converter & inverter assembly.

OK

Confirm that interlock switch is defective and replace it. Check interlock switch (See page HV-38)
--


DTC	P3145	Vehicle Speed Sensor Circuit Malfunction
-----	-------	--

CIRCUIT DESCRIPTION

DTC P3145 – Information code 352

INF. code.	Detecting Condition	Trouble Area
352	No input of vehicle speed signal during cruise control driving	• Wire harness

WIRING DIAGRAM

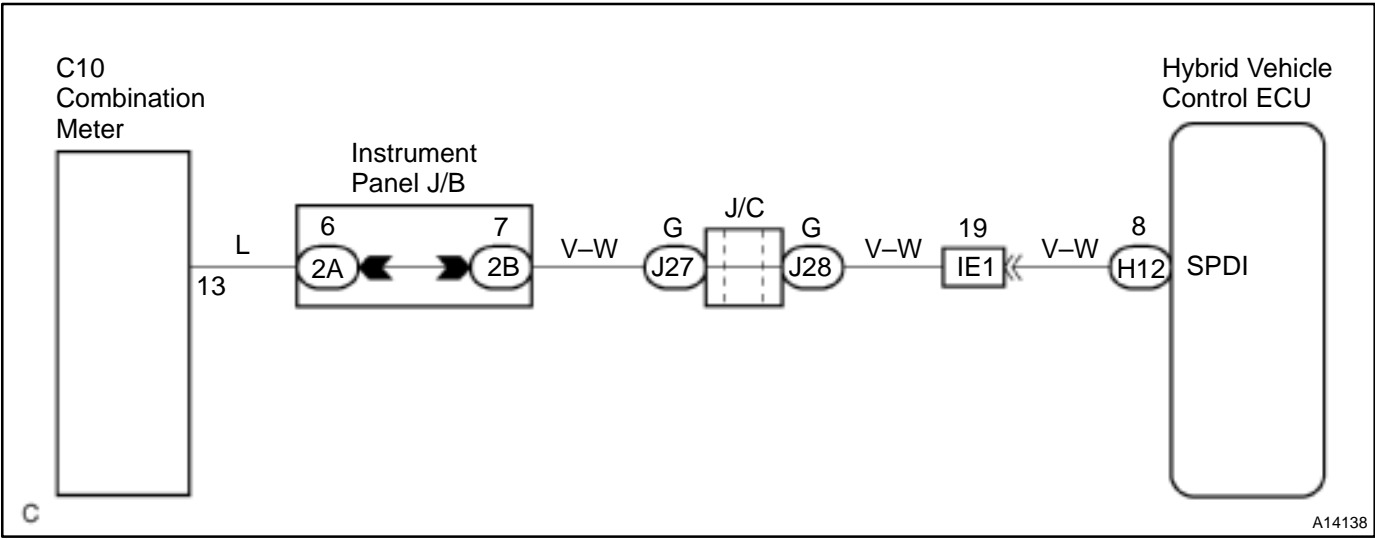

INSPECTION PROCEDURE

1	Is DTC P0500 of engine ECU being output?
---	--

YES**Check DTC P0500.****NO**

Check continuity of wire harness between J26 J/B G terminal and HV ECU SPDI terminal and repair wire harness.

CUSTOMER PROBLEM ANALYSIS CHECK


Prius Problem Check Sheet

Please fill in the blanks within bold frame.

			Name of Dealer		Person in Charge at Headquarters		Person in Charge at Dealer	
			Office					
Vehicle Specifications	Model Code	NHW11-	Problem Occurrence Date		Odometer Reading		km miles	
	Frame No.		Service Entry Date		Registration date			
	Unit No. etc.		Vehicle Delivery Date					
	Option	() Navigation (equipped by () MOP () dealer) () Cold climate specification () others()						
Interview Results	Contents of complaint (Status when and before/after occurring in the order of events as correct as possible)				Characteristics of Customer			
					Gender	() Male () Female		
					Age			
					Occupation			
					Vehicle used before			
					Main use area	city area () % suburbs () % mountain area () % Others () () %		
					Frequency in use	times/day or week or month		
					Others			
	Driving Condition	Road Condition	Vehicle Condition				Others	
	Vehicle Speed _____ km/h _____ mph () when starting () when according () When normal driving () when decelerating () when braking () when shopping () when parking () when turning () when ABS actuating () others ()	() flat road () up hill () down hill incline of _____ % distance _____ km _____ mph () dry paved road () wet paved road () rough paved road () unpaved road () snowy/frozen road () bump/curb () others ()	() when starting () right after starting () until _____ min. after starting () until _____ min. after starting of driving () when shopping system Status of engine () while shopping engine () when starting engine () when revolving engine				HV Battery indication () 4/4 () 3/4 () 2/4 () 1/4 () unidentified Shift position (indication) () P () R () N () D () B () when operating _____ → _____ () no indication () unidentified A/C status () A/C () FULL () OFF () unidentified	Warning light (MIL) () ON () OFF () PS () main battery () HV! () engine () charge () output control () brake () ABS () others ()

cardiagn.com


Vehicle Verification Results	Verification Results of Warning Light		Verification Results of Diagnostic Code	
	<input type="checkbox"/> ON <input type="checkbox"/> OFF <input type="checkbox"/> engine <input type="checkbox"/> HV <input type="checkbox"/> HV battery <input type="checkbox"/> output control warning light <input type="checkbox"/> charge <input type="checkbox"/> PS <input type="checkbox"/> brake <input type="checkbox"/> ABS <input type="checkbox"/> others ()		Engine	
			HV	
			INF. code	
			HV battery	
			Brake	
			PS	
Vehicle Inspection Results (Verification items, reason to identify/presume the cause parts, etc.)			Duplication Status	
			<input type="checkbox"/> always <input type="checkbox"/> sometimes <input type="checkbox"/> no reproduction	
Replacement Parts			Confirmation Results After Repair	
problem parts: No/Yes (Sending date: . .)			<input type="checkbox"/> Normal <input type="checkbox"/> reproduction <input type="checkbox"/> others ()	

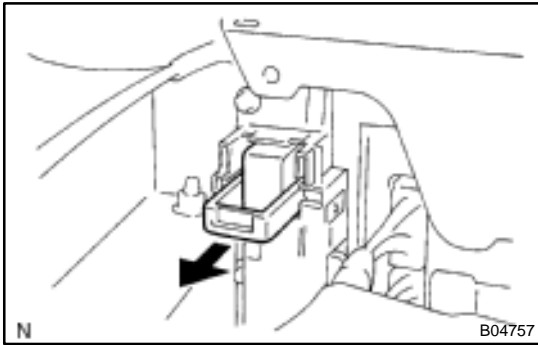

PRE-CHECK

1. PRECAUTION


- (a) To distinguish a trouble and replace a defective part, take necessary preventive measures against an electric shock (See page [IN-4](#)).
- (b) Some portions of the wiring harness in the THS vehicle have the circuits, to which a high voltage is applied. To prevent an electrical shock, be sure to observe the following:
 - (1) Wear insulated gloves during inspection.
 - (2) Remove a service plug and do not start any repair operation before 5 minutes have passed, then confirm that the voltage at the output terminals has dropped down to 12 V or less.
 - (3) Use insulated tools during inspection.
 - (4) When disengaging wiring connectors, hold the connector bodies to avoid pulling the wires. When engaging wiring connectors, be sure to engage them securely.
- (c) Do not leave tools or parts (bolts, nuts, etc.) inside the cabin.
- (d) Do not carry metallic objects such as mechanical pencils or scales.

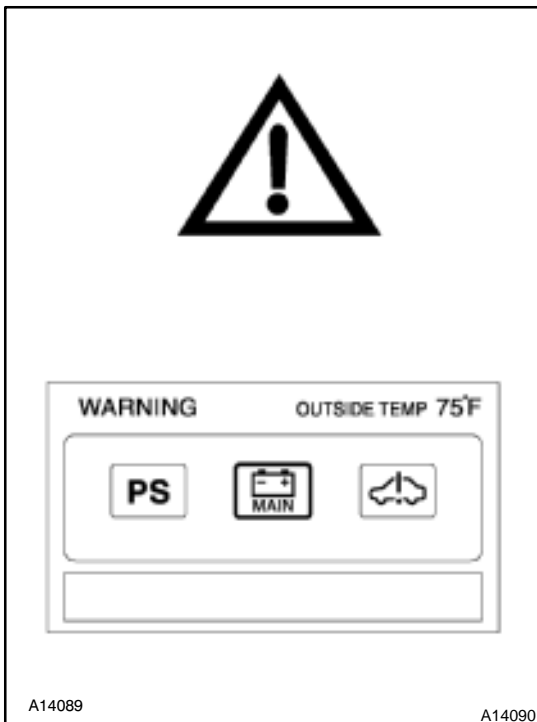


2. DIAGNOSIS SYSTEM

(a) Description

- The HV Battery ECU has a self-diagnosis system by which malfunction in the computer itself or in Hybrid System is detected and the master warning light in the combination meter and the Hybrid system warning light in the multi-information display lights up.

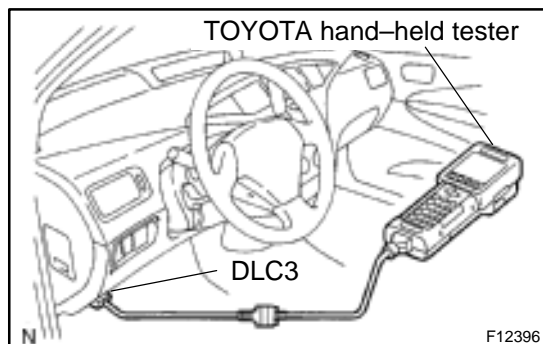

- To check the Diagnostic Trouble Codes (DTC), connect the TOYOTA hand-held tester to the Data Link Connector 3 (DLC3) on the vehicle. The TOYOTA hand-held tester also enables you to erase the DTC and check freeze frame data and various forms of THS data.
- Freeze frame data:
Freeze frame data records the battery condition when a malfunction is detected.
When troubleshooting, this is useful for knowing the battery condition.

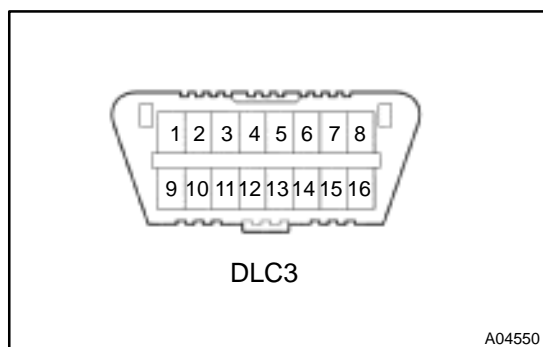

- (b) Check the DLC3.
The HV control ECU conforms to ISO 14230 for communication.
The terminal arrangement of the DLC3 complies with SAEJ1962 and matches the ISO 14230 format.

Terminal No.	Connection/Voltage or Resistance	Condition
7	Bus ⊕ Line/Pulse generation	During transmission
4	Chassis Ground ↔ Body Ground/1 Ω or less	Always
5	Signal Ground ↔ Body Ground/1 Ω or less	Always
16	Battery Positive ↔ Body Ground/10 – 15 V	Always

HINT:

If your display shows **UNABLE TO CONNECT TO VEHICLE** when you have connected the cable of the TOYOTA hand-held tester to the DLC3, turned the motor switch ON and operated the tester, there is a problem in the vehicle or tool.

- If communication is normal when the tool is connected to another vehicle, inspect the DLC3 on the original vehicle.
- If communication is still not possible when the tool is connected to another vehicle, the problem is probably in the tool itself, so consult the Service Department.

3. INSPECT DIAGNOSIS

- (a) Check the auxiliary battery.

(1) Measure the voltage of the auxiliary battery.


Voltage: 10 – 15 V




- (2) Inspect the auxiliary battery, fuses, fusible links, wiring harness, connectors and ground.
- (b) Check the master warning light.
 - (1) Turn the ignition switch ON and confirm that the master warning light comes on.

HINT:


If the master warning light does not come on, suspect a burnt fuse, burnt bulb, or open in wiring harness.

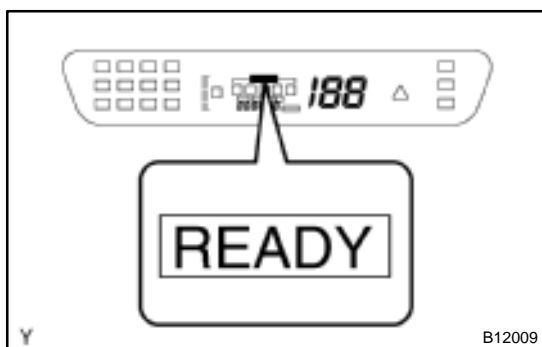

- (2) When the "READY" light is ON, the master warning light should go off.
- If the lamp remains on, the diagnosis system has detected a malfunction or abnormality in the system.

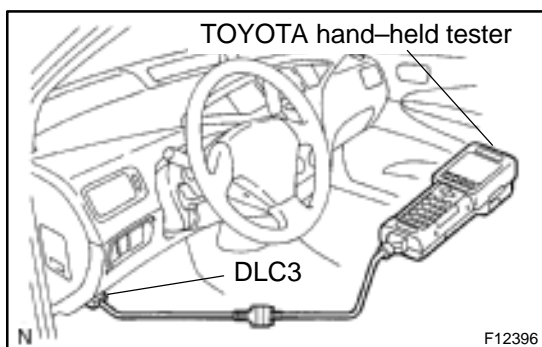

- (c) Check the DTC.
 - (1) Prepare a TOYOTA hand-held tester.
 - (2) Connect the TOYOTA hand-held tester to the DLC3.
 - (3) Turn the ignition switch ON and push the TOYOTA hand-held tester main switch ON.
 - (4) Use the TOYOTA hand-held tester to check the DTC and freeze frame data and note them down. (For operating instructions, see the TOYOTA hand-held tester operator's manual).
 Since the HV battery ECU stores DTC and freeze frame data, when troubleshooting, check all of the DTC, write down the freeze frame data and perform inspection according to the procedures of "Circuit Inspection".
 Because the HV battery ECU is communicating with the HV ECU, if any DTC is stored in the HV battery ECU, check and record DTC stored in the HV ECU (For tables for DTC, see page [DI-177](#)).
 - (5) See a related page to confirm details of the DTC.

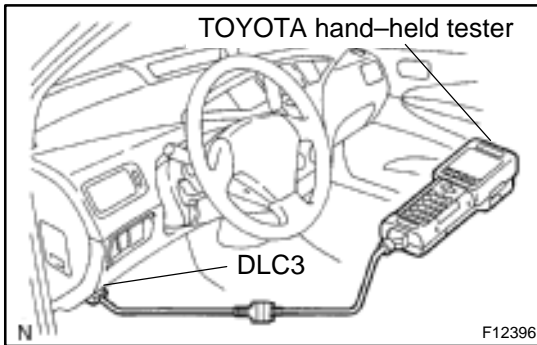

(d) Clear DTC after completion of repair.

- (1) Connect the TOYOTA hand-held tester to the DLC3.

HINT:

Before clearing, check that DTC for the HV battery ECU, DTC for the ECU which is related with freeze frame data and the freeze frame data are recorded.

- (2) Operate the TOYOTA hand-held tester to erase the DTC (See the TOYOTA hand-held tester operator's manual.).

4. CHECK FOR INTERMITTENT PROBLEMS

- (a) Perform a simulation test (See page IN-30).

HINT:

In the simulation test, reproduce the condition at trouble occurrence based on the customer's comments and the freeze frame data recorded with the DTC.

- (b) Check the connector and terminal (See page IN-41).
- (c) Handle the connector (See page IN-41).

5. TOYOTA HAND-HELD TESTER DISPLAY ITEMS

TOYOTA hand-held tester display	Measurement Item
BATTERY SOC	Battery State of charge
ONB CHARGE TIME	Cumulative number of times of on-board equalizing charging
BATTERY LO TIME	Cumulative number of times of battery dies
DC INHIBIT TIME	Cumulative number of times of discharge inhibition
IB MAIN BATTERY	IB main battery current (with correction)
BATT BLOCK V#	Battery block voltage
BAT BLOCK MIN V	Battery block minimum voltage
MIN BAT BLOCK #	Minimum voltage battery block
BAT BLOCK MAX V	Battery block maximum voltage
MAX BAT BLOCK #	Maximum voltage battery block
BATT INSIDE AIR	Ambient temperature inside battery pack
BATTERY TOO HI #	Cumulative number of times of too-high battery voltage
VMF FAN VOLTAGE	Battery cooling fan voltage
AUX. BATT V	Auxiliary battery voltage
WIN	Charge restriction value
WOUT	Discharge restriction value
DELTA SOC	Difference between MAX. and MIN. values of SOC at every battery block.
SBLW FAN ST RQS	SBL cooling fan stop request signal
COOLING FAN HI	Cooling fan operation in high speed
COOLING FAN MID	Cooling fan operation in middle speed
COOLING FAN LO	Cooling fan operation in low
CCTL	Off-board equalizing charge control signal
EQC0 DF RELAY	EQC0 dead front relay
EQTR CHARGE ST	EQTR uniform charging start signal
ONBORD CHARGE	On-board equalizing charging status
PRE ONBORDE CH	Pre-On-board charging status
NORMAL STATUS	Normal status
INSIDE RESIST #	Inside resistance

DIAGNOSTICS – HV BATTERY CONTROL SYSTEM

BATT TEMP #	Battery temperature
ECU CODE	ECU code
IG OFF HOUR	Average time of IG OFF
IG ON HOUR	Average time of IG ON
ET OFF CHG HR	Estimation of time to finish OFF BOARD
DTC	The number of stored DTC

CIRCUIT INSPECTION

DTC	P1600	Back Up Power Source Circuit Malfunction
------------	--------------	---

CIRCUIT DESCRIPTION


Battery positive voltage is supplied to terminal AM of the Battery ECU even when the ignition switch is OFF to read the DTC memory and freeze frame data adaptive control value memory, etc.

DTC No.	DTC Detecting Condition	Trouble Area
P1600	Open in back up power source circuit	<ul style="list-style-type: none"> Open in back up power source circuit Battery ECU

HINT:

If DTC P1600 appears, the Battery ECU does not store any other DTC.

WIRING DIAGRAM

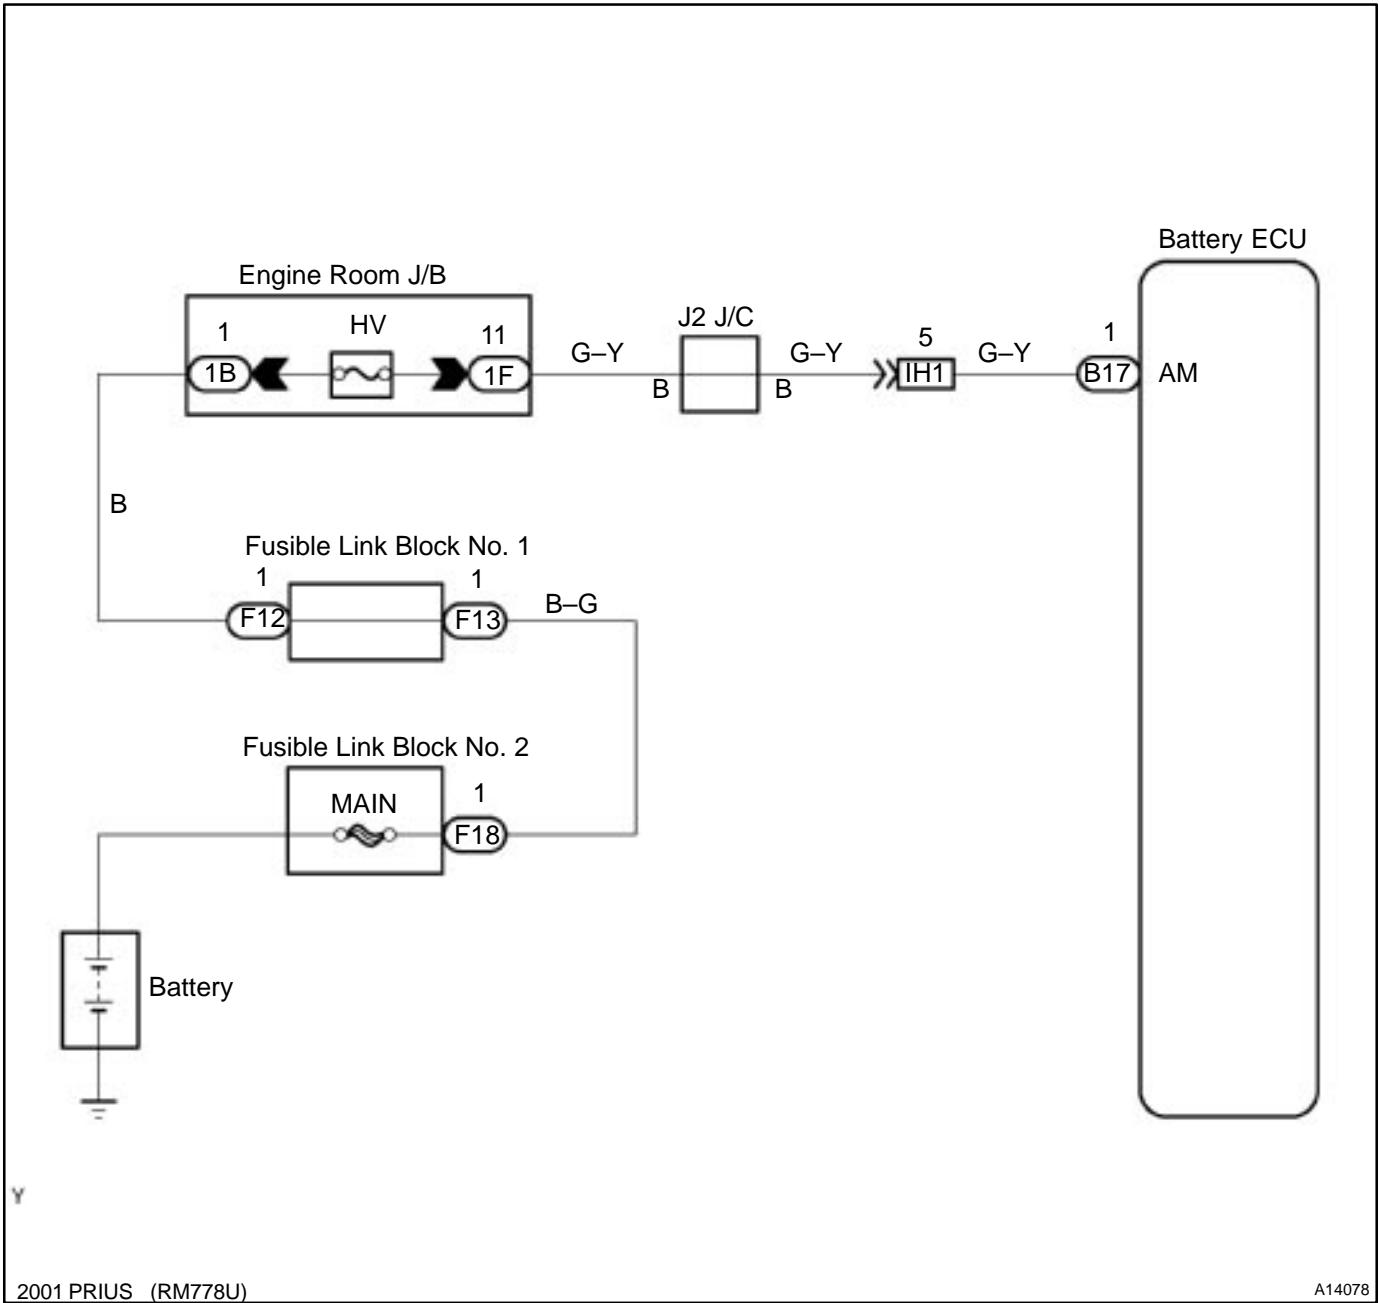


INSPECTION PROCEDURE

HINT:

Read freeze frame data using a TOYOTA hand-held tester or OBD II scan tool. Because freeze frame data records the battery condition when the malfunction is detected. When troubleshooting, this is useful for knowing the battery condition.

1 Check voltage between terminal AM of Battery ECU connector and body ground.

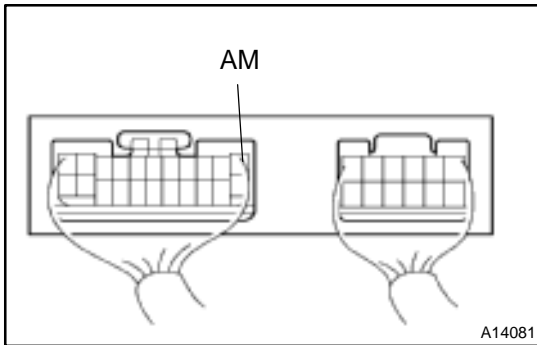

PREPARATION:

Remove the luggage trim.

CHECK:

Measure the voltage between terminal AM of the Battery ECU connector and body ground.

OK:


Voltage: 9 – 14 V

OK

Check and replace Battery ECU (See page [IN-41](#)).

NG

2 Check HV fuse of engine room J/B.

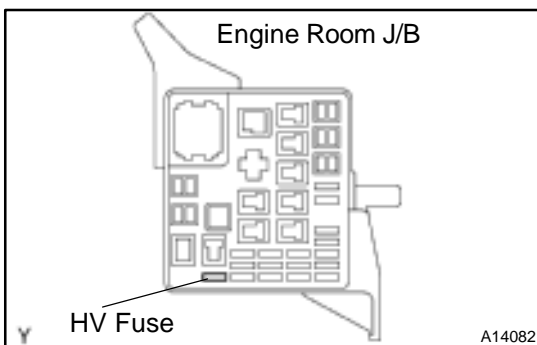

PREPARATION:

Remove the HV fuse from the engine room J/B.

CHECK:

Check the continuity of the HV fuse.

OK:

Continuity

NG

Check for short in all harness and components connected to HV fuse.

OK

Check and repair harness or connector between battery and HV fuse, and HV fuse and Battery ECU (See page [IN-41](#)).

DTC	P3002	HV ECU Communication Malfunction
-----	-------	----------------------------------


CIRCUIT DESCRIPTION

The battery ECU receives information of the AC ECU, system main relay connection signals, etc. sent from the HV ECU, and stores DTC when an error is detected in the receives information.

DTC No.	DTC Detecting Condition	Trouble Area
P3002	No serial signals transmitted from HV ECU	• Communication bus line • HV ECU

HINT:
Check DTC of other ECUs and see whether any communication error of the HV ECU is stored or not.
If HV communication errors are stored in then one ECU, replace the HV ECU.

WIRING DIAGRAM

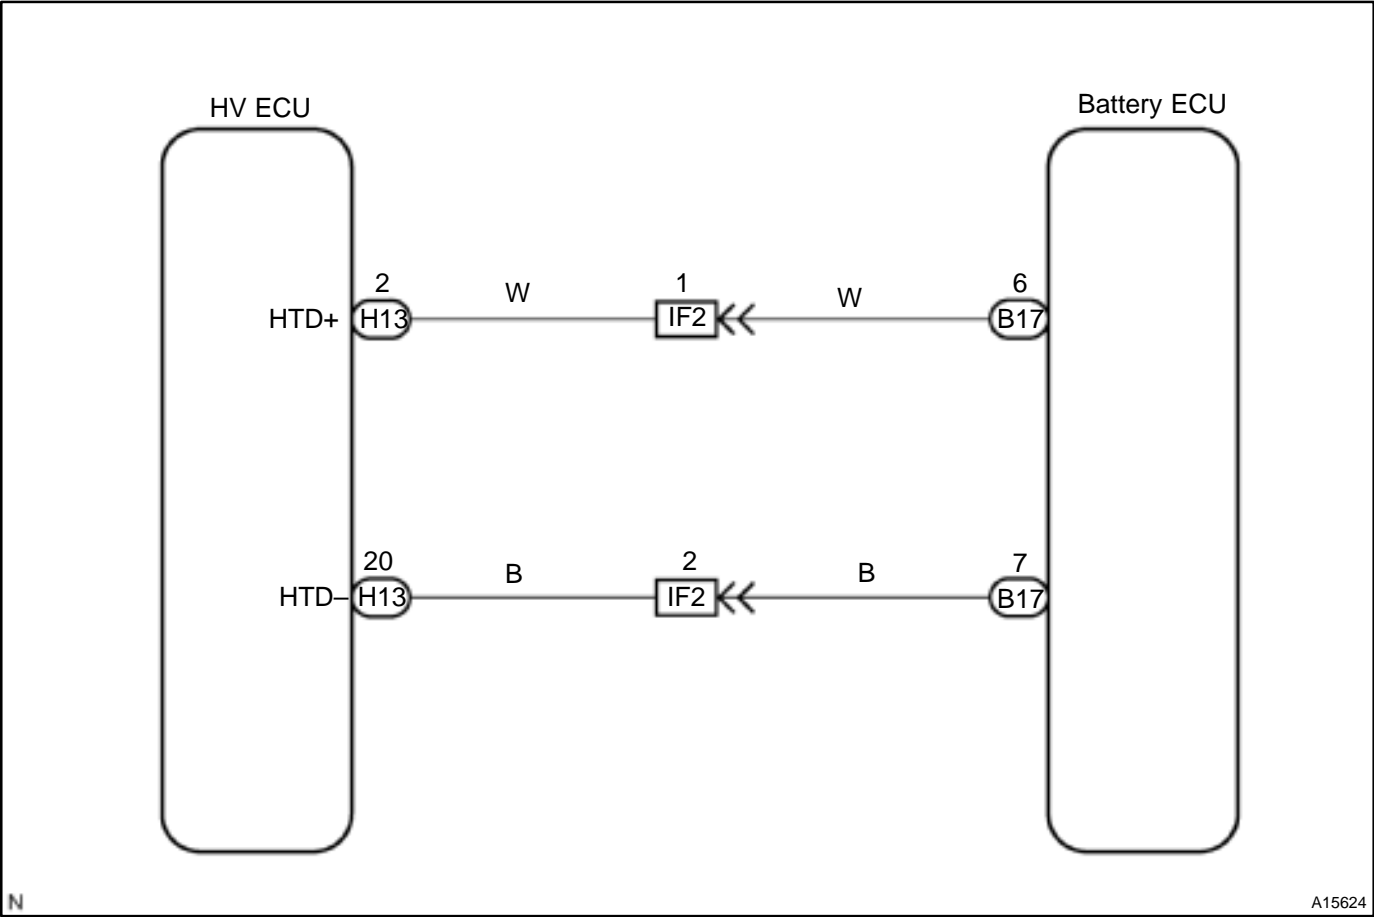

INSPECTION PROCEDURE

1	Check for open and short in wire harness between HV ECU and battery ECU.
---	--

PREPARATION:

Disconnect the connector from the battery ECU and the HV ECU

CHECK:

Check that the communication bus line is not short or open.

Terminals for checking open and short:

HV ECU Terminals	Battery ECU Terminals
H13 – 2	B17 – 6
H13 – 20	B17 – 7

OK:

No open or short.

NG

Repair or replace the wire harness.

OK

2	Stop operation of all optional electric products for vehicle and check if same DTC is stored.
---	---

NO

Stop using product that causes noise.

YES

Replace the HV ECU.


DTC	P3005	High Voltage Fuse Snapped
-----	-------	---------------------------


CIRCUIT DESCRIPTION

A fuse is set in the service plug to protect high-voltage system parts.

DTC No.	DTC Detecting Condition	Trouble Area
P3005	Although interlock switch is connected, voltage of battery block No. 10 is less than specified.	<ul style="list-style-type: none">• High voltage fuse• Power cable

WIRING DIAGRAM

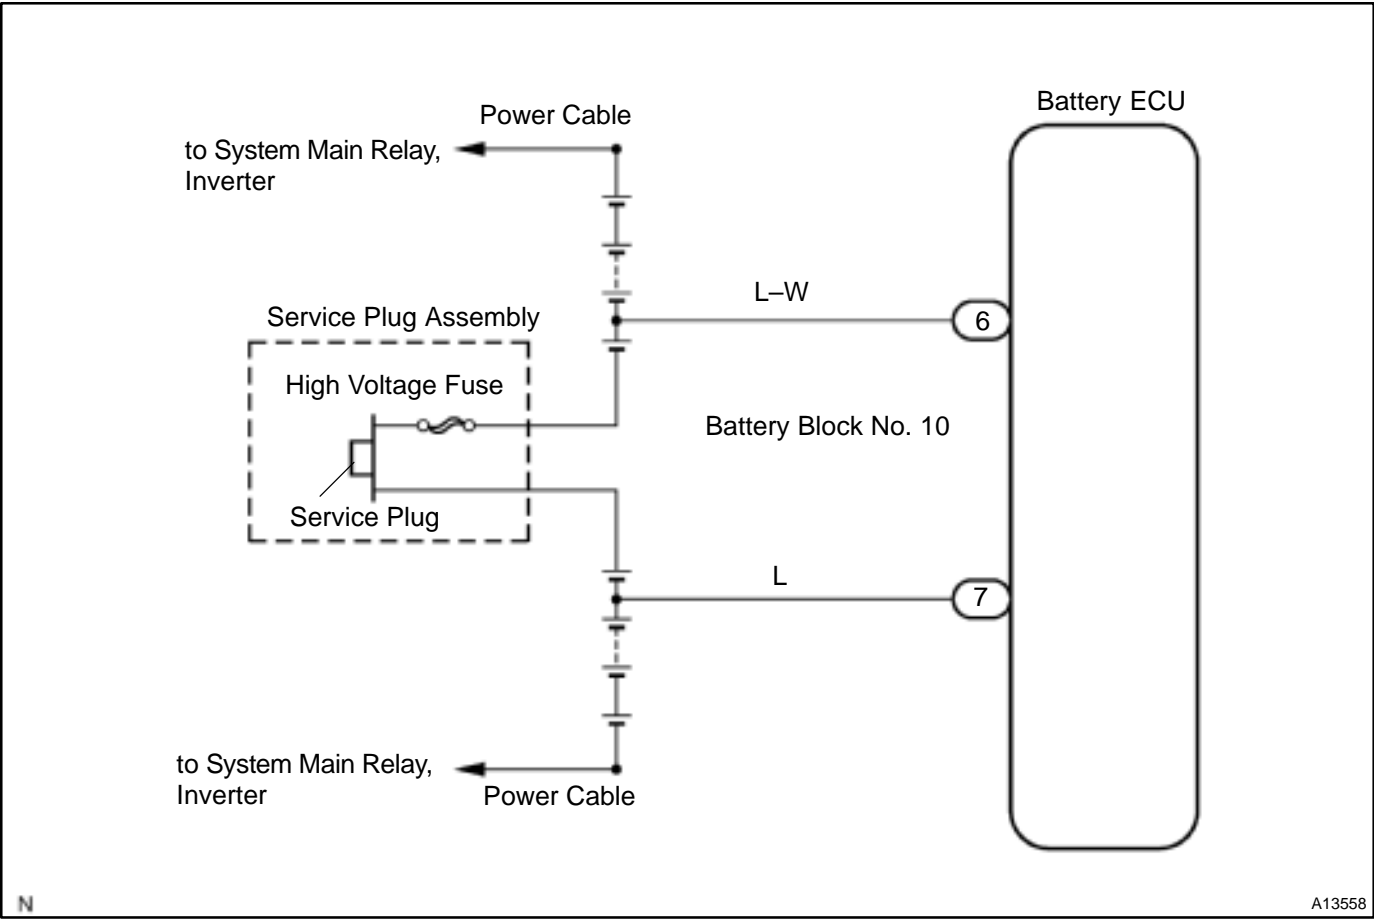

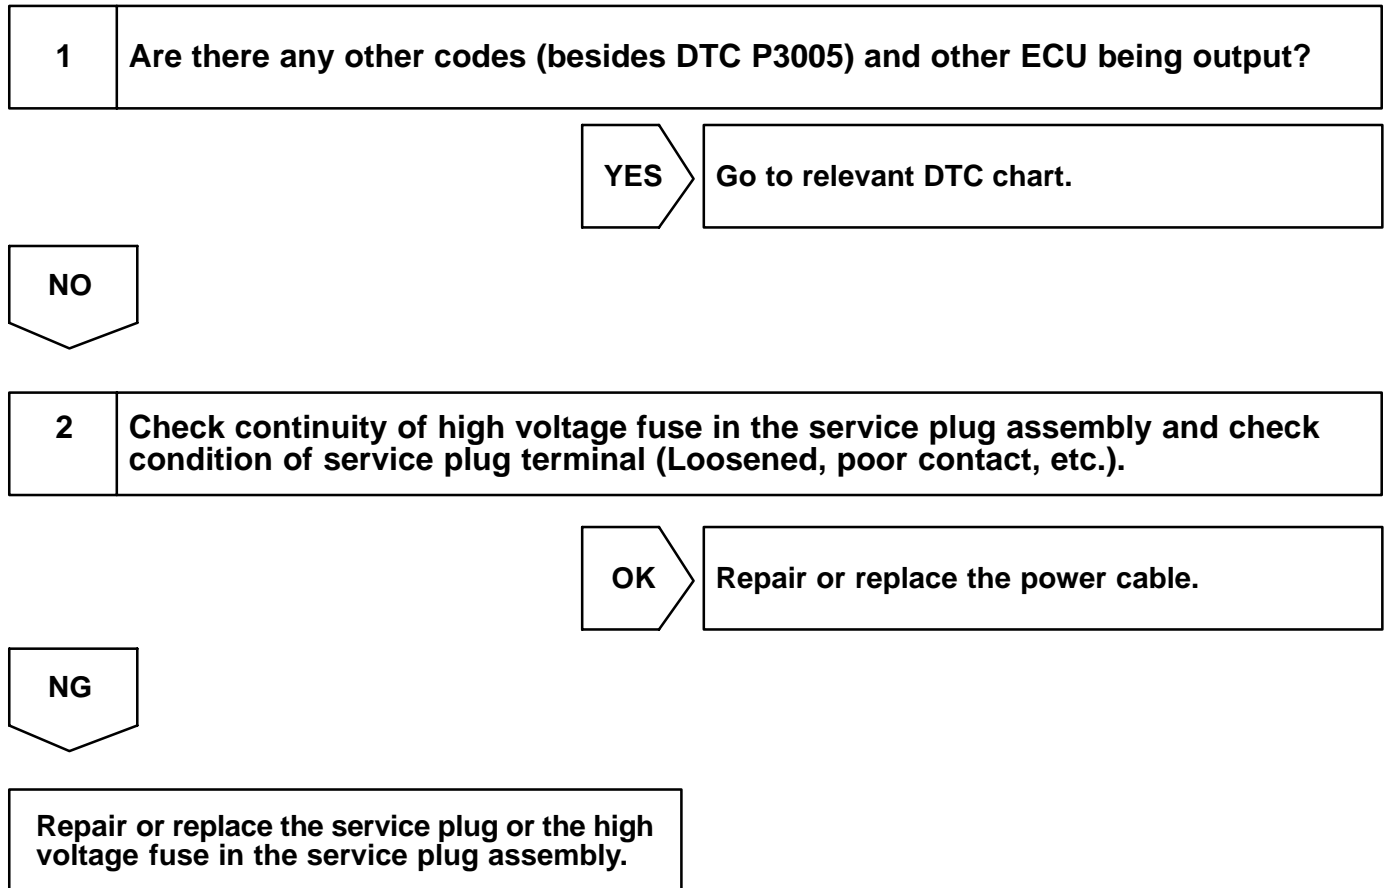INSPECTION PROCEDURE

DTC	P3009	Leak Detected
------------	--------------	----------------------

CIRCUIT DESCRIPTION

Electric leak from the high-voltage system, which may seriously harm the human body, is detected by this code.

DTC No.	DTC Detecting Condition	Trouble Area
P3009	Electric leak from high-voltage system (Insulating resistance of power cable is 100 kΩ or less.)	<ul style="list-style-type: none"> • Power cable • HV transaxle • Converter & inverter assembly • Battery cover • System main relay • Battery temperature sensor • Battery ECU • Battery carrier catch bracket • Main battery cable • Service plug assembly • HV battery assembly

INSPECTION PROCEDURE

1	Is DTC P3125 of HV ECU being output?
----------	---

YES

Go to relevant DTC chart.

NO

2	Are there any other codes (Desides DTC P3009) being output?
----------	--

YES

Go to relevant DTC chart.

NO

3	Is DTC P3009 of battery ECU being output?
----------	--

PREPARATION:

- (a) Before clearing the DTC, check that related DTC and freeze frame data are recorded in the given table.
- (b) With the shift lever in P, delete this DTC using a TOYOTA hand-held tester.
- (c) Turn the ignition switch OFF and then ON (Do not turn to ST.), leave it alone for 1 min. and then check for DTC.

CHECK:

Check that DTC P3009 is detected.

YES

Go to step 8.

NO

4	Is DTC P3009 of battery ECU being output? (Check for battery carrier catch bracket.)
----------	---

PREPARATION:

- (a) Under step 2 condition, turn the ignition switch OFF and disconnect the negative terminal of the auxiliary battery.
- (b) Remove the service plug.
- (c) Using the service plug, turn the interlock counterclockwise to unlock.
- (d) Remove the 3 nuts and battery carrier catch bracket.
- (e) Connect the negative terminal of the auxiliary battery and turn the ignition switch ON to clear DTC.

HINT:

When the ignition switch is turned ON, DTC P3140 is stored in the HV ECU. This happens because the service plug is removed, so continue the operation.

- (f) After turning the ignition switch OFF, connect the service plug.
- (g) Turn the ignition switch ON (to ST), leave it alone for 1 min. and then check for DTC.

CHECK:

Check that DTC P3009 is detected.

NO

Check for contact between battery carrier catch bracket and power cable and if any defect is identified, replace defective part.

HINT:

If no defect is identified at inspection, entry of foreign matter or water into the battery assembly or converter & inverter assembly may be possible as a cause.

YES

5 Check insulating resistance of power cable.**PREPARATION:**

- (a) Under step 3 condition, turn the ignition switch OFF and disconnect the negative terminal of the auxiliary battery.
- (b) Remove the service plug.
- (c) Disconnect the 2 power cables from the converter & inverter.
- (d) Disconnect the 2 power cables from the HV battery.

CHECK:

Using a megger (500V), measure the insulating resistance between the power cable and body ground.

OK:

Insulating resistance: 10MΩ or more

NG**Replace the power cable.****OK****6 Check insulating resistance of power cable of hybrid transaxle.****PREPARATION:**

- (a) Under step 4 condition, disconnect the 3 power cables for MG2 and a power cable for MG1 from the converter & inverter assembly.
- (b) Check that the voltage between each of the 6 terminals of the power cables and body ground is 0 V.

CHECK:

Using a megger (500V), measure the insulating resistance between each of the 6 terminals and the hybrid transaxle.

OK:

Insulating resistance: 10MΩ or more

NG**Replace the hybrid transaxle assembly.****OK**

7**Check insulating resistance of converter & inverter assembly.****CHECK:**

Using a megger (500V), measure the insulating resistance between each of 2 connected parts of the HV battery power cables to the converter & inverter and the converter & inverter itself, and between each of 6 connected parts of MG2/MG1 power cables to the converter & inverter and the converter & inverter itself. and the hybrid transaxle.

OK:

Insulating resistance: $0.9M\Omega$

NG**Replace the converter & inverter assembly.****OK****Replace the battery ECU.**

8	Is DTC P3009 of battery ECU being output? (Check for battery cover.)
---	---

PREPARATION:

- (a) Under step 2 condition, turn the ignition switch OFF and disconnect the negative terminal of the auxiliary battery.
- (b) Remove the service plug.
- (c) Using the service plug, turn the interlock counterclockwise to unlock.
- (d) Remove the 3 nuts and battery carrier catch bracket.
- (e) Remove the 2 bolts and power cables.
- (f) Remove the battery cover.
- (g) Connecting the negative terminal of the auxiliary battery, turn the ignition switch ON and clear the DTC.

HINT:

When the ignition switch is turned ON, DTC P3140 is stored in the HV ECU. This happens because the service plug is removed, so continue the operation.

- (h) After turning the ignition switch OFF, connect the service plug.
- (i) Turn the ignition switch ON (to ST), leave it alone for 1 min. and then check for DTC.

CHECK:

Check that DTC P3009 is detected.

NO

Check for contact between battery carrier catch bracket and power cable and if any defect is identified, replace defective part.

HINT:

If no defect is identified at inspection, entry of foreign matter or water into the battery assembly or converter & inverter assembly may be possible as a cause.

YES

9	Check insulating resistance of main battery cable.
---	--

PREPARATION:

- (a) Under step 7 condition, turn the ignition switch OFF and disconnect the negative terminal of the auxiliary battery.
- (b) Remove the service plug.
- (c) Remove the main battery cables. (Disconnect 4 terminals of a long and a short cables connected between the system main relay and the HV battery.)

CHECK:

Using a megger (500V), measure the insulating resistance between the main battery cable and body ground.

OK:

Insulating resistance: 10M Ω or more

NG

Replace the main battery cable.

OK

10	Check insulating resistance of system main relay.
----	---

CHECK:

Using a megger (500V), measure the insulating resistance between each of 2 connected parts of the system main relay to the power cables and body ground, and between each of 2 connected parts of the system main relay to the main battery cables and body ground.

OK:

Insulating resistance: 10M Ω or more

NG

Replace the system main relay.

OK

11 Check insulating resistance of service plug assembly.**PREPARATION:**

Under step 9 condition, disconnect the cable terminal of the service plug assembly from the HV battery.

CHECK:

Using a megger (500V), measure the insulating resistance between 2 cable terminals and body ground.

OK:

Insulating resistance: 10MΩ or more

NG**Replace the service plug assembly.****OK****12 Check insulating resistance of HV battery temperature sensor.****PREPARATION:**

Under step 10 condition, disconnect the HV battery temperature sensor connector from the battery ECU.

CHECK:

Using a megger (500V), measure the insulating resistance between each terminal of the HV battery temperature sensor and body ground.

OK:

Insulating resistance: 10MΩ or more

NG**Replace the HV battery temperature sensor.****OK**

13 Is DTC P3009 of battery ECU being output?**PREPARATION:**

- (a) Under step 11 condition, disconnect the HV connector from the battery ECU.
- (b) Connect the negative terminal of the auxiliary battery (with the service plug removed).
- (c) Turn the ignition switch ON (not ST) and clear the DTC.

HINT:

When the ignition switch is turned ON, DTC P3140 is stored in the HV ECU. This happens because the service plug is removed, so continue the operation.

CHECK:

Check that DTC P3009 is detected.

YES**Replace the HV battery ECU.****NO****14 Check insulating resistance of wire harness for module voltage detection.****PREPARATION:**

- (a) Under step 12 condition, turn the ignition switch OFF and disconnect the negative terminal of the auxiliary battery.
- (b) Remove the 36 nuts and the busbar module on the battery rear side.

CHECK:

Using a megger (500V), measure the insulating resistance between the connector terminal of the wire harness for the removed module's voltage detection and body ground.

OK:

Insulating resistance: 10 MΩ or more

NG**Replace the HV battery assembly.****OK****Replace the HV battery ECU.**

DTC	P3011–P3029	Battery Block # Malfunction
------------	--------------------	------------------------------------

CIRCUIT DESCRIPTION

Internal resistance of each battery module is measured, detecting battery deterioration for each block, 1 to 19. Nineteen blocks of battery modules are arranged in the order of 1 to 19 from the ECU side.

DTC No.	DTC Detecting Condition	Trouble Area
P3011–P3029	Battery internal resistance is abnormal.	<ul style="list-style-type: none"> • Battery ECU • Battery pack

INSPECTION PROCEDURE

1	Are there any other codes (besides DTC P3011–P3029) being outputs?
----------	---

YES

Go to relevant DTC chart.

NO


2	Check that the block voltage during charging/ discharging.
----------	---

PREPARATION:

- To ensure safety, conduct this test in a wide, clear level area which provides good traction.
- Turn ON the "READY" light.
- Warm up the engine and turn off the A/C switch.
- Fully apply the parking brake and chock the 4 wheels.
- Connect a TOYOTA hand-held tester to DLC3 and select HV BATTERY and then CURRENT DATA.
- Show voltage of the block corresponding to the DTC and other block (any block except the above-mentioned block).

CHECK:

- Keep your left foot pressed firmly on the brake pedal and shift into the R position.
- Confirm the engine stopped in the R position. Step on the accelerator pedal until the engine starts, stepping on the brake pedal firmly.
- Release the accelerator pedal when the engine starts. At the same time, monitor the change of the voltage before engine starting (during discharging) and after engine starting (during charging).

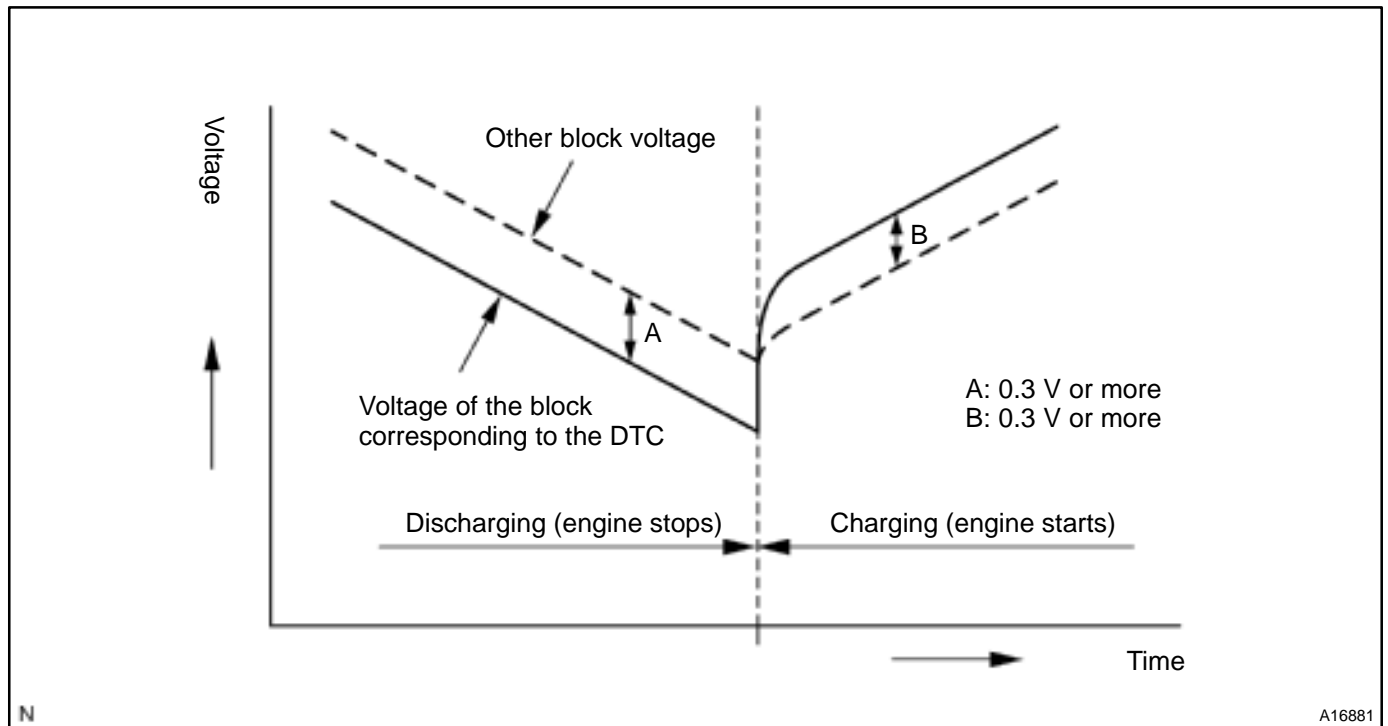**OK:**

Before or after switch-over from discharging to charging, the relationship of the voltage size are reversed and the difference of the voltage is 0.3 V or more.

OK

Go to step 5.

NG

3


Check that the HV battery blocks voltage swings at stall test.

PREPARATION:

- To ensure safety, conduct this test in a wide, clear level area which provides good traction.
- Turn ON the "Ready" light.
- Warm up the engine and turn off the A/C switch.
- Fully apply the parking brake and chock the 4 wheels.
- Connect a TOYOTA hand-held tester to DLC3 and select HV BATTERY and then CURRENT DATA to show "BAT BLOCK MIN V" and "BAT BLOCK MAX V" on the TOYOTA hand-held tester.

CHECK:

- Keep your left foot pressed firmly on the brake pedal and shift into the R position.
- Stepping on the brake pedal, release the accelerator pedal during the engine moving and step on the accelerator pedal during the engine stopping.
- Continue STEP (b) for more than 20 min. and monitor the swing and the difference of the voltage between the data MAX V and MIN V.

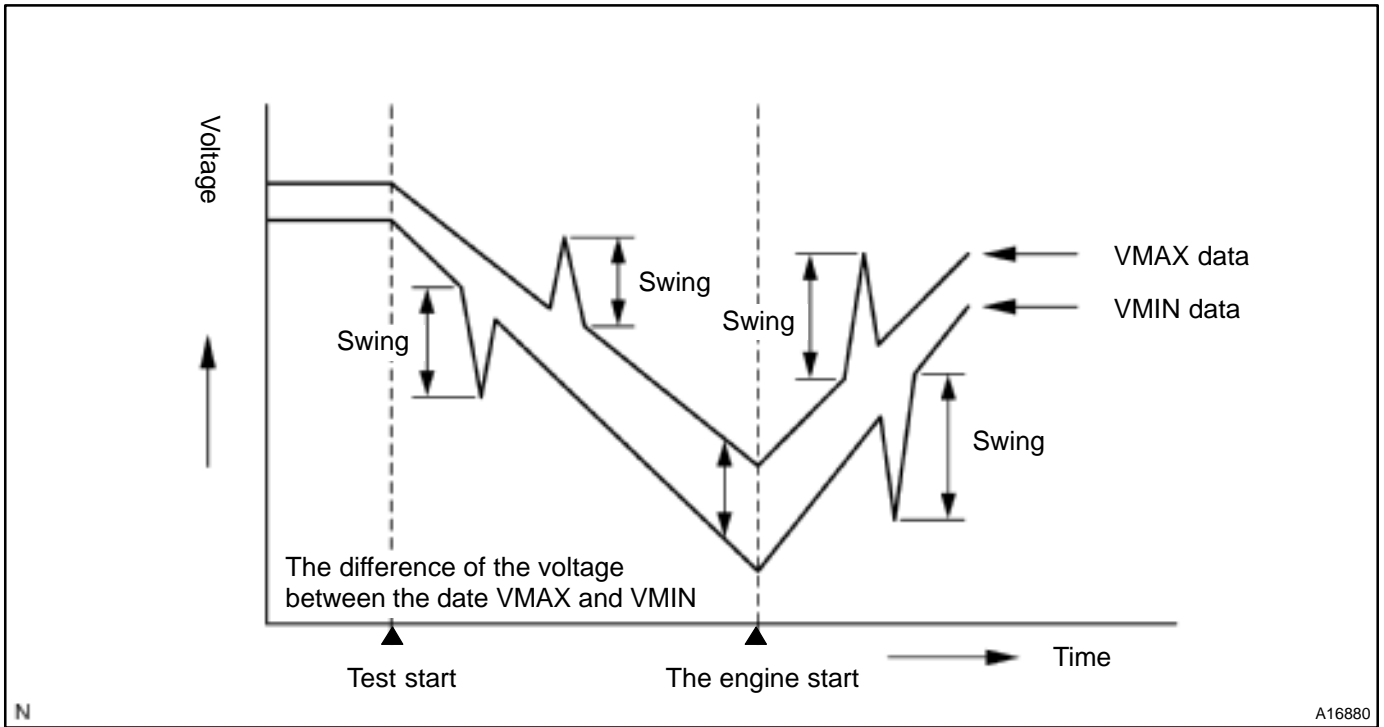**OK:**

Standard voltage swing: Less than 2 V

NG

Replace the battery ECU (See page IN-41).

OK

4

Check the difference of the voltage between the data V MAX and V MIN.

Standard voltage difference: Less than 1.2 V

YES

Replace the battery ECU. (See page IN-41).

NO

5

Replace the battery pack assembly, and initialize the battery ECU by performing an active test.


DTC	P3030	Battery Voltage Detective line Snapped
-----	-------	--

CIRCUIT DESCRIPTION

A voltage sensor set in a busbar module circuit measures a voltage of a pair of battery modules and sends signals to the battery ECU.

DTC No.	DTC Detecting Condition	Trouble Area
P3030	Open in battery voltage detective line	<ul style="list-style-type: none">• Battery ECU• Open in battery voltage detective line• Wire harness, Busbar module

WIRING DIAGRAM

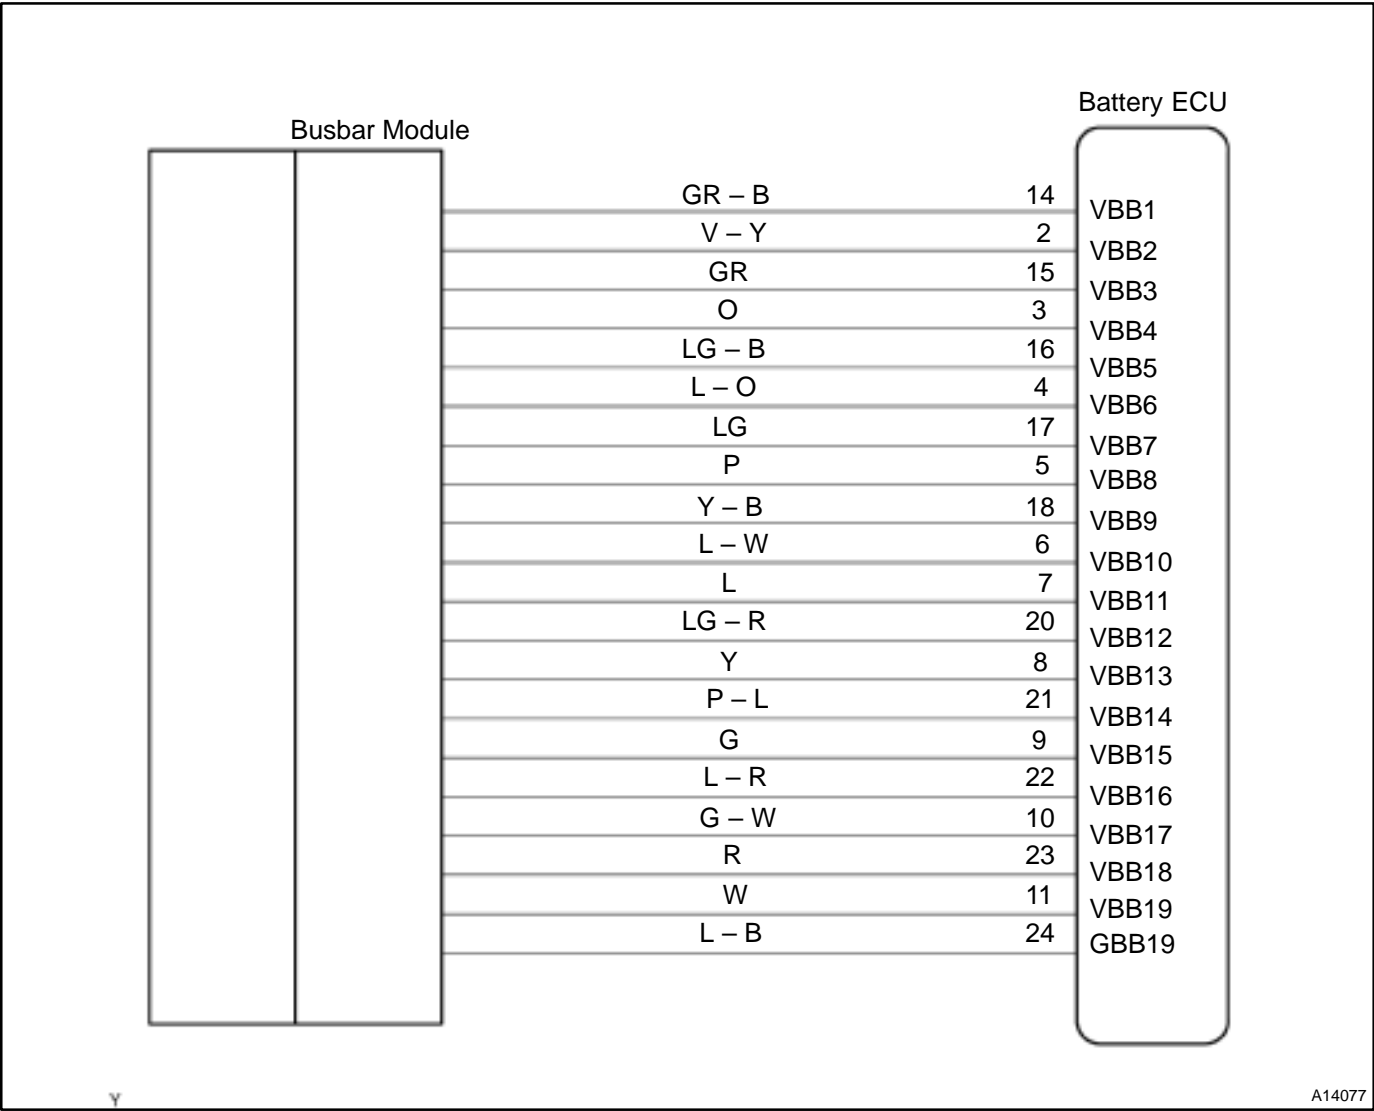

INSPECTION PROCEDURE

1	Are there any other codes (besides DTC P3030) being outputs?
---	---

YES

Go to relevant DTC chart.

NO

2	Check voltage of battery block 1 to 19.
---	--

CHECK:

Connecting a TOYOTA hand-held tester, check the ECU data.

HINT:

Nineteen blocks of battery modules are arranged in the order of 1 to 19 from the battery ECU side.

OK:

Standard voltage: 2V or more

OK

Go to step 4.

NG


3	Check that the HV battery blocks voltage swings at stall test.
---	---

PREPARATION:

- (a) To ensure safety, conduct this test in a wide, clear level area which provides good traction.
- (b) Turn ON the "READY" light.
- (c) Warm up the engine and turn off the A/C switch.
- (d) Fully apply the parking brake and chock the 4 wheels.
- (e) Connect a TOYOTA hand-held tester to DLC3 and select HV BATTERY and then CURRENT DATA to show "BAT BLOCK MIN V" and "BAT BLOCK MAX V" on the TOYOTA hand-held tester.

CHECK:

- (a) Keep your left foot pressed firmly on the brake pedal and shift into the R position.
- (b) Stepping on the brake pedal, release the accelerator pedal during the engine moving and step on the accelerator pedal during the engine stopping.
- (c) Continue STEP (b) for more than 20 min. and monitor the swing and the difference of the voltage between the data MAX V and MIN V.

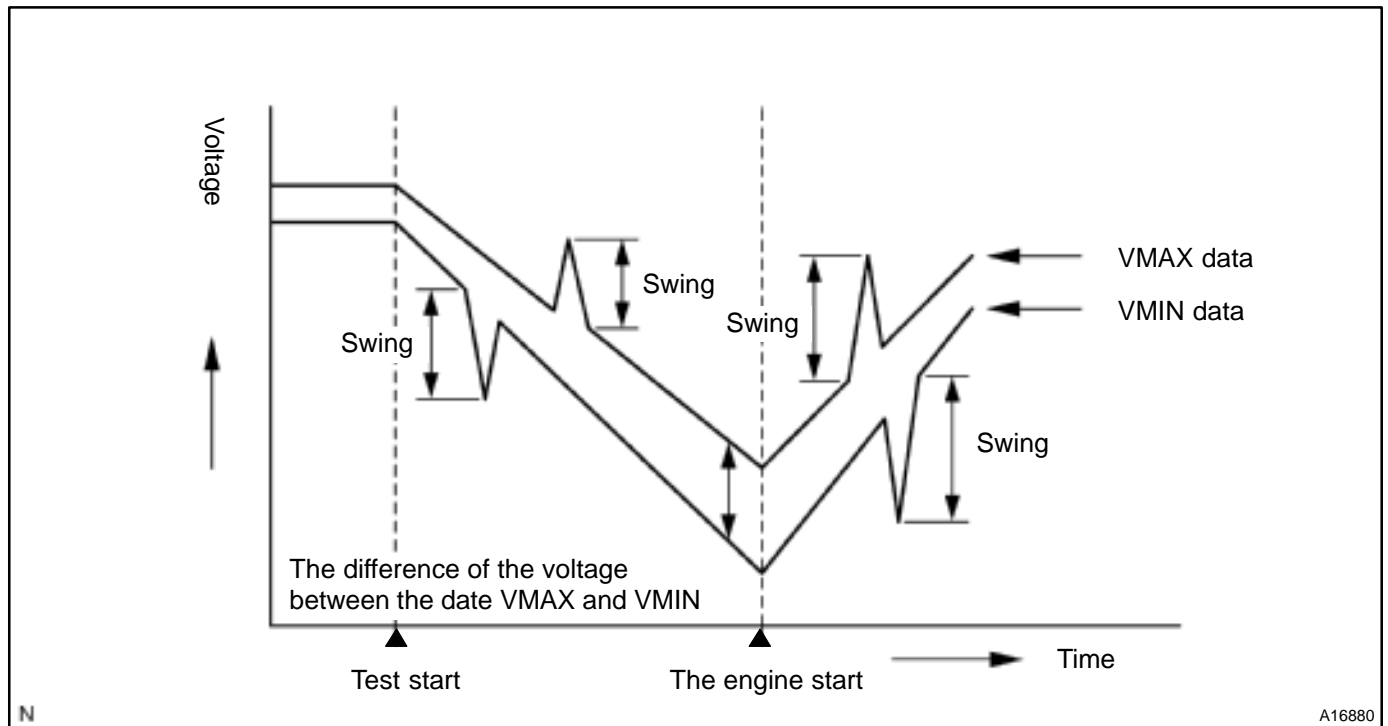**OK:**

Standard voltage swing: 2 V or more

NG

Replace the battery ECU (See page IN-41).

OK

4

Check tightening condition of busbar module of block and correct if necessary.

OK:

The nut is not loosened.

Torque: 6 N·m (61 kgf·cm, 4.4 ft·lbf)

NG

Tighten the nut.

OK

5

Check if busbar module connector is properly connected.

NG

Connect properly, repair or replace.

OK

6	Continuity check of the busbar module.
---	--

NG**Replace the busbar module
(See page IN-41).****OK****Replace the battery ECU (See page IN-41).**


DTC	P3060	Battery Temperature sensor Circuit Malfunction
-----	-------	--

CIRCUIT DESCRIPTION

A thermistor in the sensor set in a battery pack changes its resistance according to battery temperature. As the battery temperature falls or rises, the resistance rises or falls accordingly.

DTC No.	DTC Detecting Condition	Trouble Area
P3060	<ul style="list-style-type: none">• Open or short in battery temperature sensor circuit• Battery temperature sensor circuit range/performance problem	<ul style="list-style-type: none">• Battery temperature sensor• Connector and wire harness

WIRING DIAGRAM

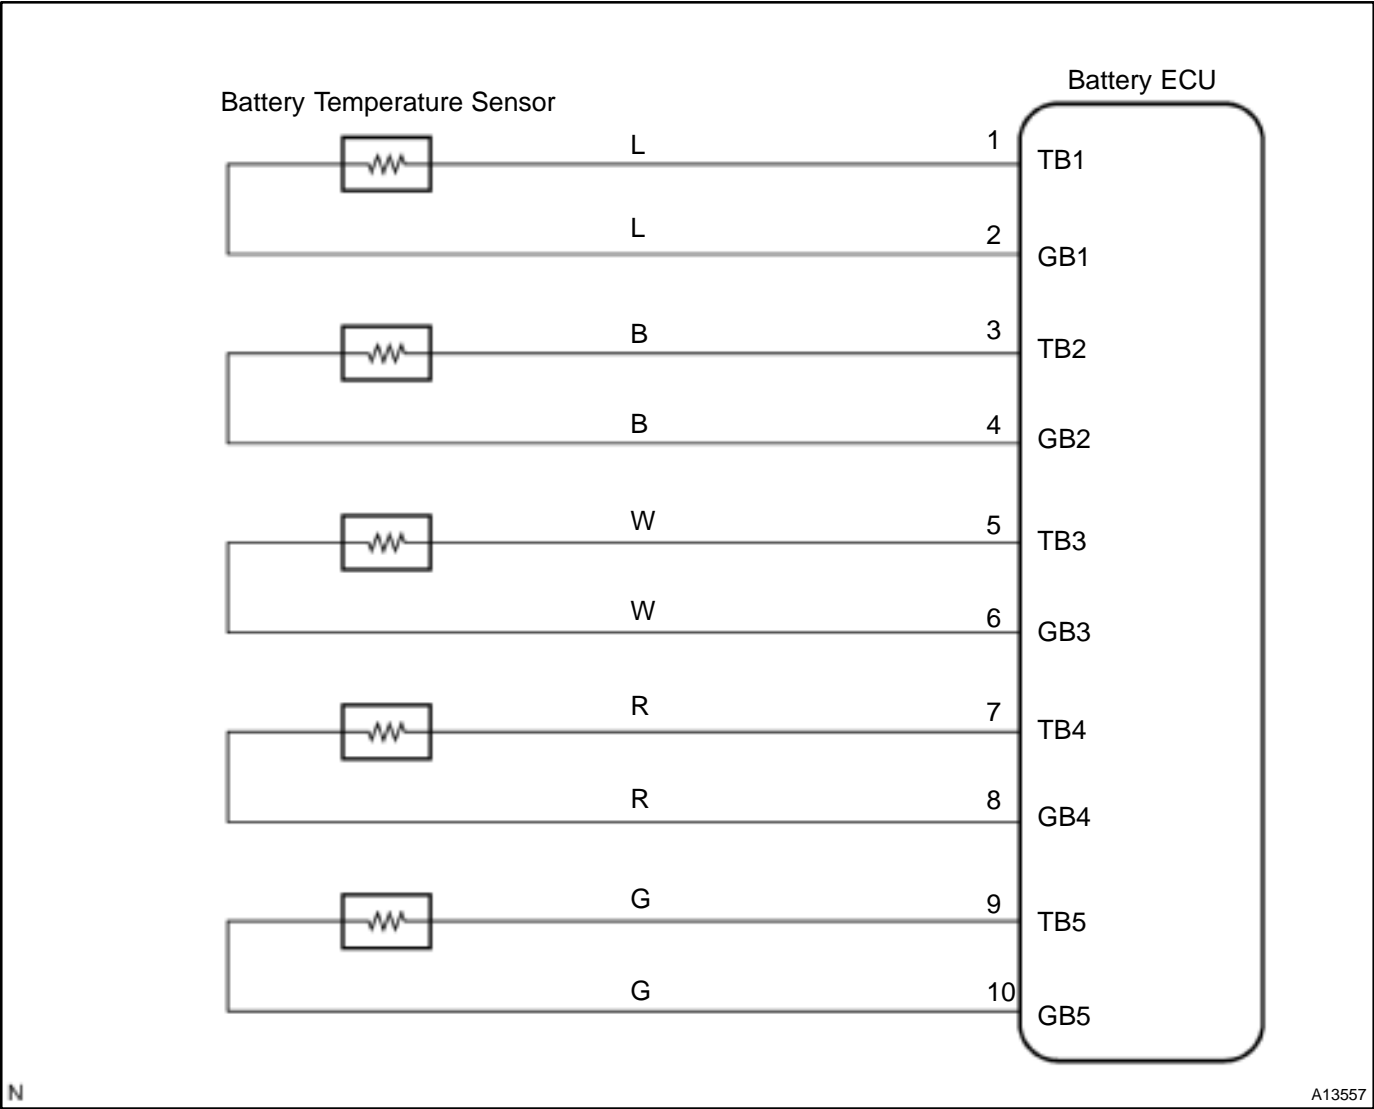

INSPECTION PROCEDURE

1	Are there any other codes (besides DTC P3060) being output?
----------	--

YES**Go to relevant DTC chart.****NO**

2	Check resistance of battery temperature sensor.
----------	--

PREPARATION:

- (a) Remove the battery cover (See page [HV-5](#)).
 (b) Disconnect the battery temperature sensor connector.

CHECK:

Using an ohmmeter, measure the resistance between terminals.

OK:**Standard resistance:**

Terminals	Resistance (at 25 °C (77 °F))
1 – 2	9 – 11 kΩ
3 – 4	9 – 11 kΩ
5 – 6	9 – 11 kΩ
7 – 8	9 – 11 kΩ
9 – 10	9 – 11 kΩ

NG**Replace the battery temperature sensor.****OK**

Check fitting of battery temperature sensor connector and correct if necessary.


DTC	P3077	Battery Cooling Fan Motor Circuit Malfunction
------------	--------------	--


CIRCUIT DESCRIPTION

To control rise in battery temperature during driving and charging, the battery fan operation is controlled in 3 levels depending on battery temperature.

DTC No.	DTC Detecting Condition	Trouble Area
P3077	Electric error in battery cooling fan motor circuit continues for 10 sec. (2 trip detection logic)	<ul style="list-style-type: none"> Battery blower motor Battery fan relay Battery blower motor controller Wire harness

WIRING DIAGRAM

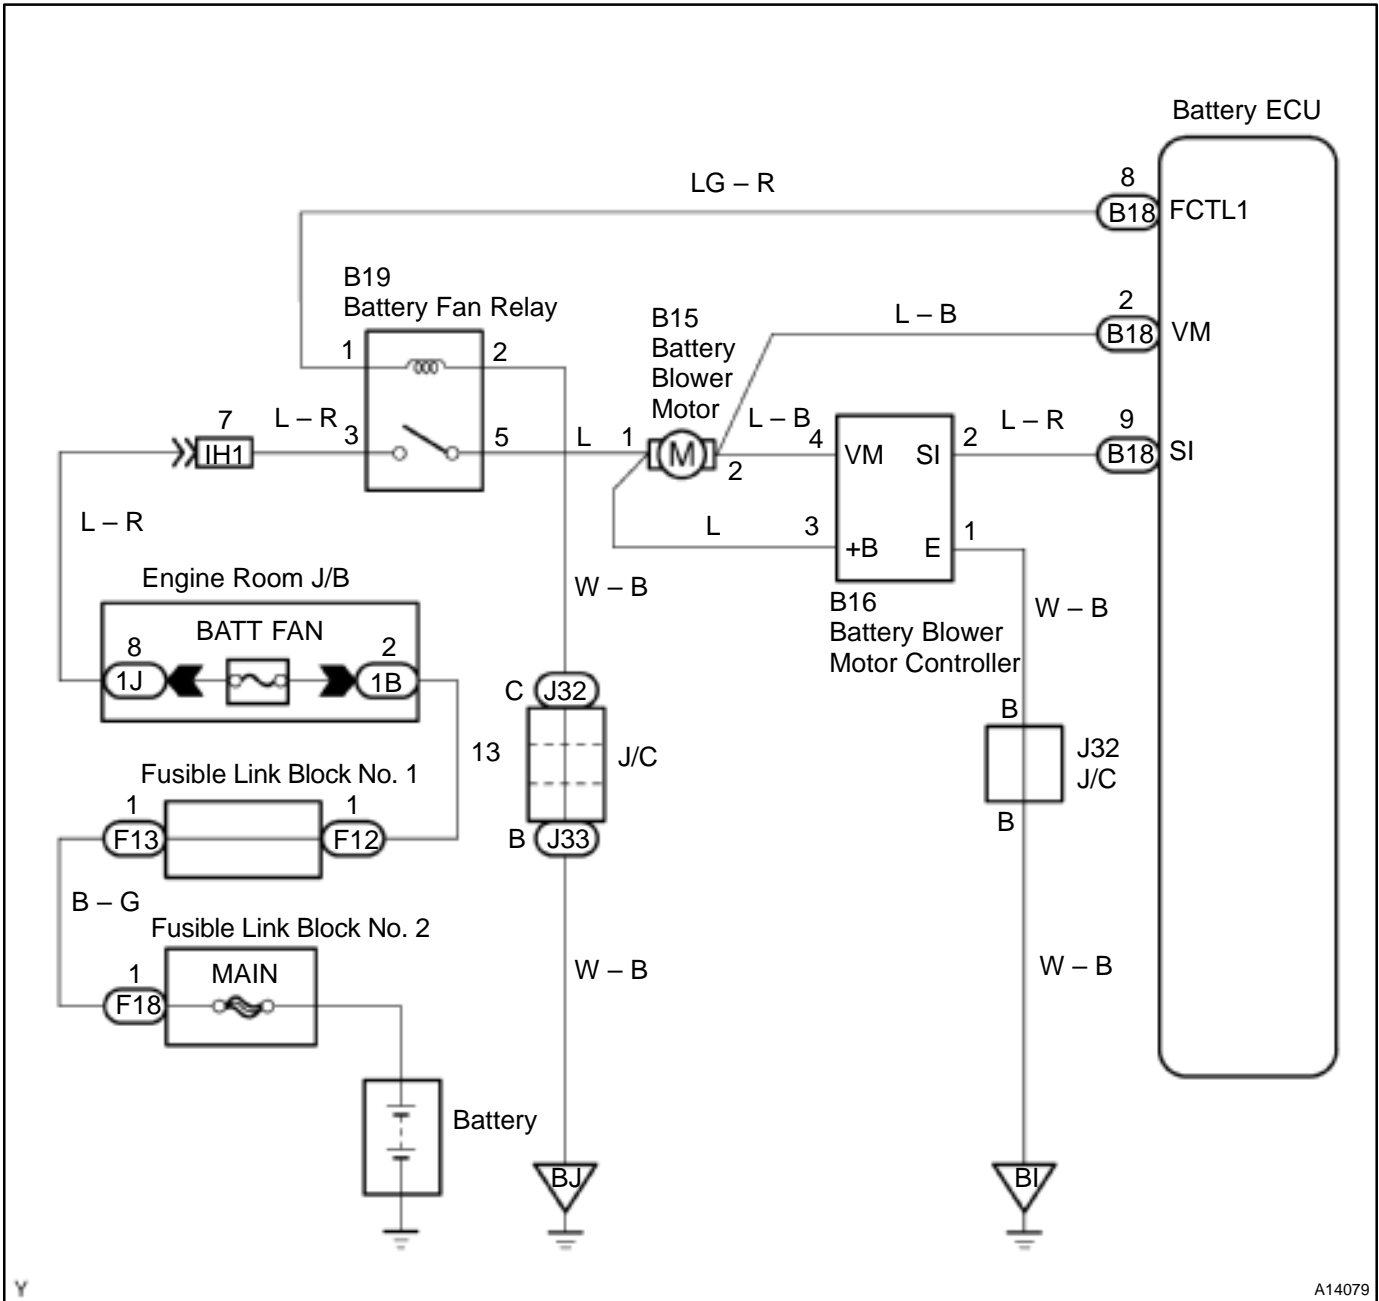

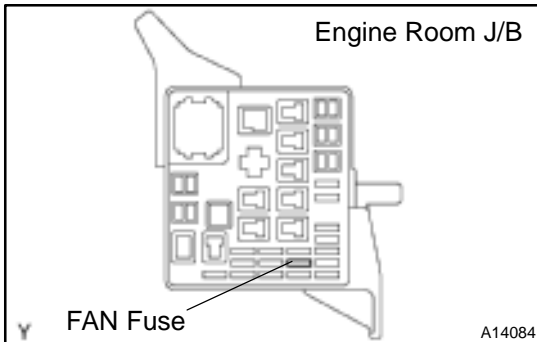INSPECTION PROCEDURE**1 Check FAN fuse of engine room J/B.****PREPARATION:**

Remove the FAN fuse from the engine room J/B.

CHECK:

Check the continuity of the FAN fuse.

OK:

Continuity

NG

Check for short in all harness and components connected to FAN fuse. Check that the motor is not locked. If locked, replace the motor.

OK

2 Check blower fan relay (See page HV-35).

NG

Replace the blower fan relay.

OK

3 Check blower motor operation.**PREPARATION:**

Remove the blower motor (See page HV-32).

CHECK:

Apply battery voltage to the power supply terminal of the motor, and check the fan rotation.

OK:

The fan rotates normally.

NG

Replace the blower motor.

OK

Replace battery blower motor controller.


DTC	P3115	HV Battery Current Sensor Malfunction
-----	-------	---------------------------------------

CIRCUIT DESCRIPTION

The battery ECU inputs signals from a current sensor in the system main relay and controls the output current.

DTC No.	DTC Detecting Condition	Trouble Area
P3115	Failure or open circuit in battery current sensor. (2 trip detection logic)	• System main relay (Battery current sensor) • Wire harness

WIRING DIAGRAM

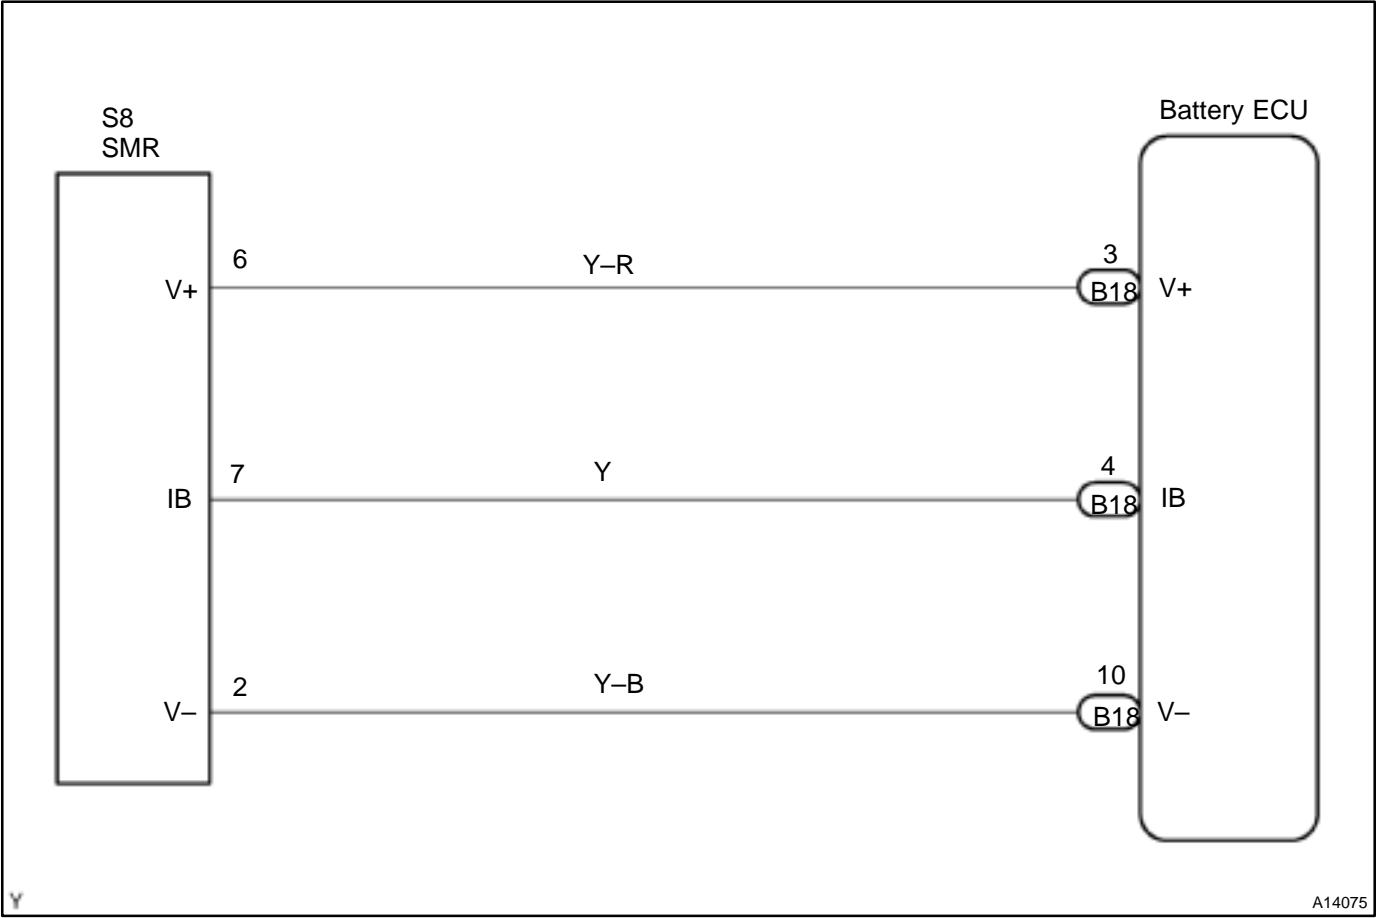

INSPECTION PROCEDURE

1	Are there any other codes (besides DTC P3115) being output?
---	---

YES

Go to relevant DTC chart.

NO

2	Check for open and short in wire harness between HV ECU terminals (V+, IB V-) and system main relay terminals (6, 7, 2).
---	--

PREPARATION:

- (a) Disconnect the connector from the battery ECU.
- (b) Disconnect the connector from the system main relay.

CHECK:

Check that the wire harness between the battery ECU and the system main relay is short and open.


OK:**No short and open****NG**

Repair or replace the wire harness.

OK

3**Check resistance of HV battery current sensor (In system main relay).****CHECK:**

Using an ohmmeter, measure the resistance between terminals.

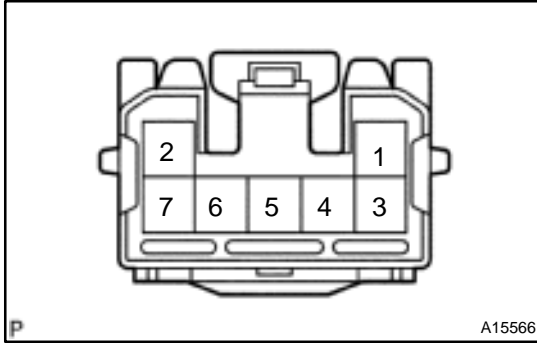OK:**Standard resistance:**

Terminal No. (Tester+)	Terminal No. (Tester-)	Resistance
6	7	30 – 50 kΩ
6	2	More than 10 MΩ
7	6	30 – 50 kΩ
7	2	More than 10 MΩ
2	6	300 – 400 kΩ
2	7	3 – 5 MΩ


NG**Replace the system main relay.****OK**

Check fitting of connector S8 of system main relay and correct if necessary.

PRE-CHECK

1. PRECAUTION

- (a) To distinguish trouble and repair it, perform necessary electrical shock prevention operation (See page [IN-4](#)).
- (b) Some portions of the wiring harness belong to the 288 V circuit, to which a high voltage is supplied. To avoid receiving an electrical shock, be sure to observe the following:
 - (1) Wear insulating gloves during inspection.
 - (2) Before removing or installing parts and connectors, remove the service plug and conform that the voltage at the output terminals has dropped down to 0 V.
 - (3) When disengaging wiring connectors, hold the connector bodies to avoid pulling the wires. When engaging wiring connectors, be sure to engage them securely.

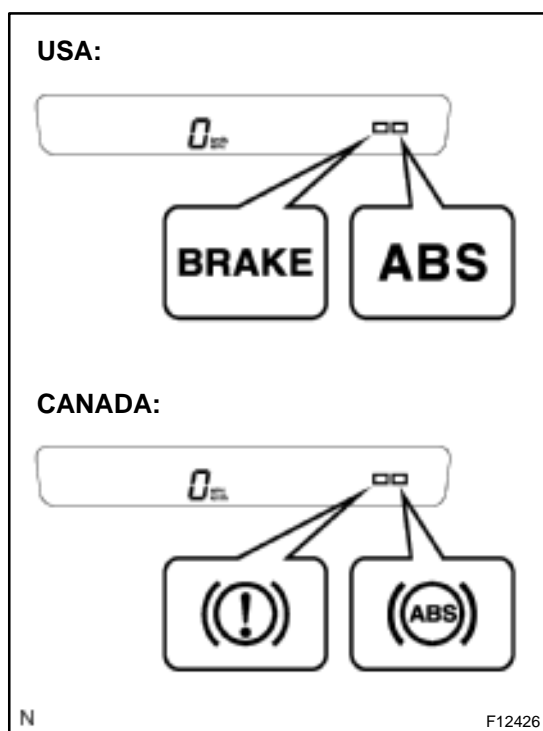

2. DIAGNOSIS SYSTEM


- (a) Release the parking brake pedal.
- (b) Check the indicator.
When the ignition switch is turned ON, check that the ABS warning light and BRAKE warning light goes on for approx. 3 seconds.

HINT:

- When the parking brake is applied or the level of the brake fluid is low, the BRAKE warning light is lit.
 - If the indicator check result is not normal, proceed to troubleshooting for the ABS warning light circuit or BRAKE warning light circuit (See page [DI-437](#) or [DI-441](#)).
- (c) Check the warning buzzer.
When depressing the brake pedal repeatedly it may turn on the brake warning buzzer.

HINT:


If the warning buzzer check result is not normal, proceed to troubleshooting for the brake warning buzzer circuit (See page [DI-444](#)).

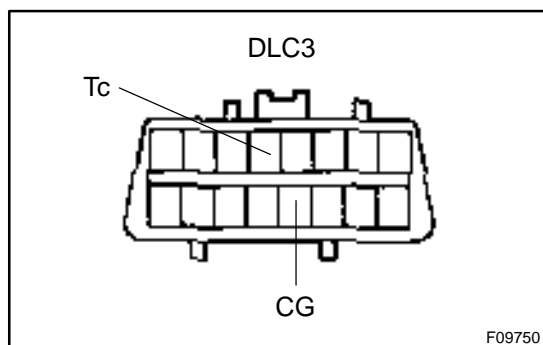

- (d) In case of not using TOYOTA hand-held tester: Check the DTC.
 - (1) Using SST, connect terminals Tc and CG of DLC3. SST 09843-18040
 - (2) Turn the ignition switch ON.
 - (3) Read the DTC from the ABS warning light on the combination meter.


HINT:

- If no code appears, inspect the diagnostic circuit or ABS warning light circuit (See page [DI-437](#) or [DI-447](#)).

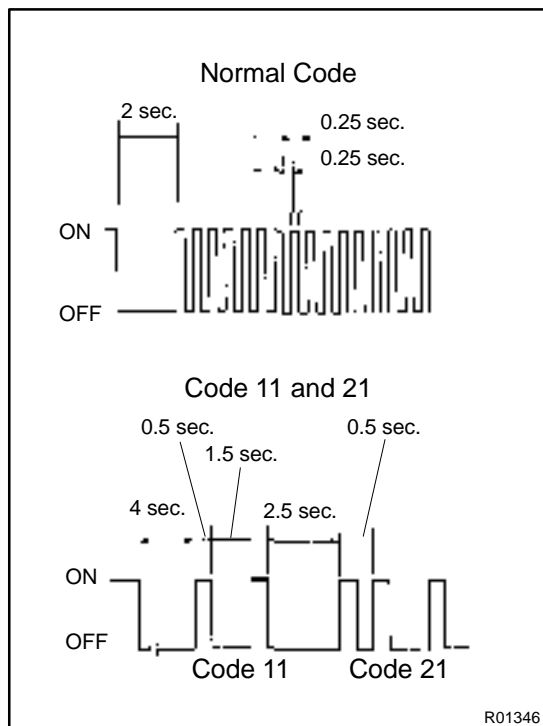

- As an example, the blinking patterns for normal code and codes 11 and 21 are shown on the left.
- (4) Codes are explained in the code table on page [DI-358](#).
- (5) After completing the check, disconnect terminals Tc and CG, and turn off the display.

If 2 or more malfunctions are indicated at the same time the lowest numbered DTC will be displayed 1st.

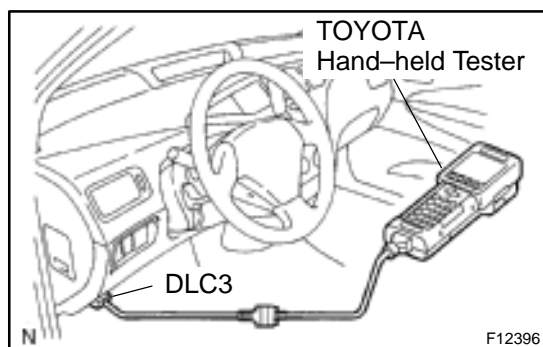


- (e) In case of using TOYOTA hand-held tester:
Check the DTC.
- (1) Hook up the TOYOTA hand-held tester to the DLC3.
 - (2) Turn the ignition switch ON.
 - (3) Read the DTC by following the prompts on the tester screen.

HINT:

Please refer to the TOYOTA hand-held tester operator's manual for further details.



- (f) In case of not using TOYOTA hand-held tester:
Clear the DTC.
- (1) Using SST, connect terminals Tc and CG of DLC3.
SST 09843-18040
 - (2) Turn the ignition switch ON.
 - (3) Clear the DTC stored in ECU by depressing the brake pedal 8 or more times within 5 seconds.
 - (4) Check that the warning light shows the normal code.
 - (5) Remove the SST from the terminals of DLC3.
SST 09843-18040

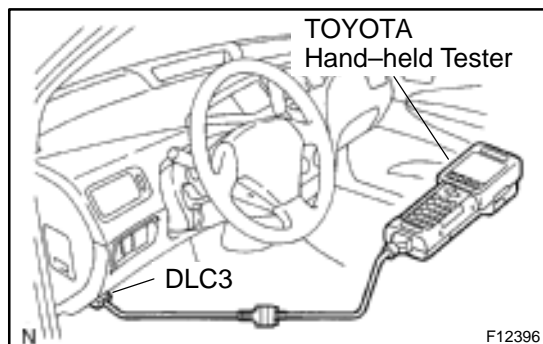

- (g) In case of using TOYOTA hand-held tester:
Clear the DTC.
- (1) Hook up the TOYOTA hand-held tester to the DLC3.
 - (2) Turn the ignition switch ON.
 - (3) Operate the TOYOTA hand-held tester to erase the codes.

HINT:

Please refer to the TOYOTA hand-held tester operator's manual for further details.

3. SENSOR SIGNAL CHECK (TEST MODE)**HINT:**

If the ignition switch is turned from ON to ACC or LOCK during test mode, DTC will be erased.

- (a) In case of not using TOYOTA hand-held tester:
Check the sensor signal.
- (1) Turn the ignition switch OFF.
 - (2) Using SST, connect terminals Ts and CG of DLC3.
SST 09843-18040
 - (3) Start the engine.
 - (4) Check that the ABS warning light blinks.



HINT:

If the ABS warning light does not blink, inspect the ABS warning light circuit and Ts terminal circuit (See page [DI-437](#), [DI-449](#)).

- (5) Keep the vehicle in the stationary condition and the brake pedal in free condition for 1 sec. or more.
- (6) Keeping the vehicle in the stationary condition, depress the brake pedal with 98 N (10 kgf, 22 lbf) or more for 1 sec. or more.
- (7) Drive vehicle straight forward.
When driving the vehicle at the speed faster than 45 km/h (28 mph) for several seconds, check that the ABS warning light comes off.

HINT:


There is a case that the sensor check is not completed if the vehicle has its front wheels spun or its steering wheel steered during this check.

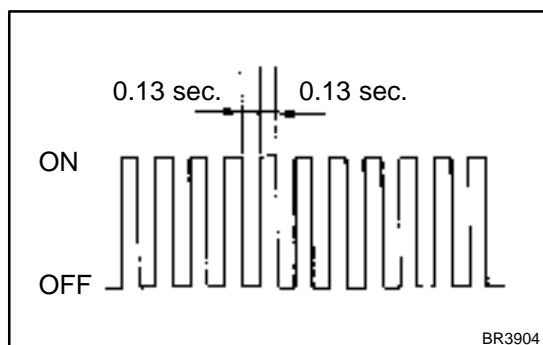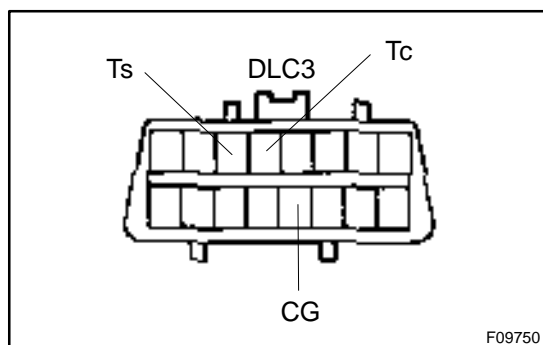

- (8) Stop the vehicle.
- (9) Using SST, connect terminals Tc and CG of DLC3.
- SST 09843-18040
- (10) Read the number of blinks of the ABS warning light.


HINT:

- See the list of DTC shown on the next page.
- If every sensor is normal, a normal code is output (A cycle of 0.25 sec. ON and 0.25 sec. OFF is repeated).
- If 2 or more malfunctions are indicated at the same time, the lowest numbered code will be displayed 1st.

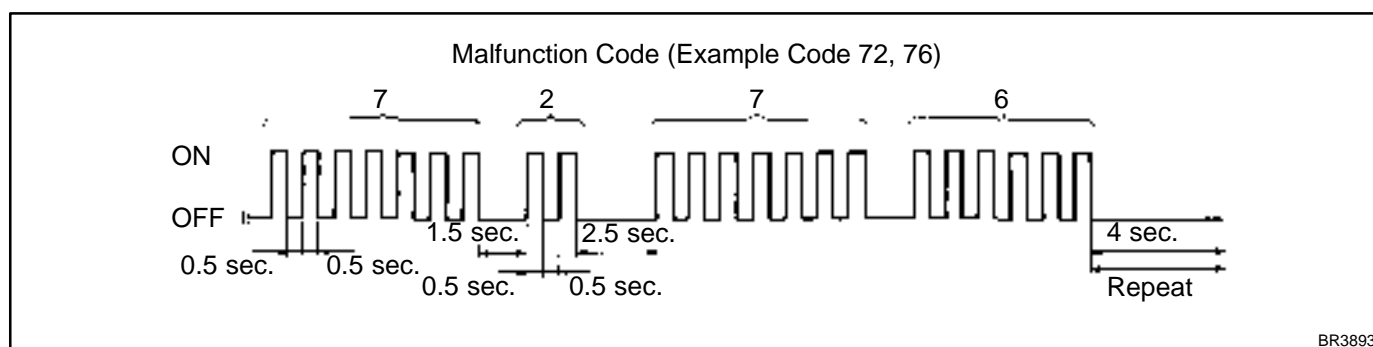

- (11) After doing the check, turn ignition switch OFF, and disconnect the SST from terminals Ts and CG, Tc and CG of DLC3.

SST 09843-18040

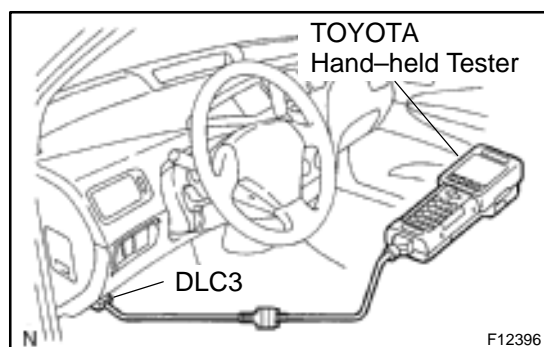

- (b) In case of using TOYOTA hand-held tester:
Check the DTC.
- (1) Hook up the TOYOTA hand-held tester to the DLC3.
- (2) Do step (3) to (8) on the previous page and this page.
- (3) Read the DTC by following the prompts on the tester screen.

HINT:

Please refer to the TOYOTA hand-held tester operator's manual for further details.

DTC of sensor check function:

Code No.	Diagnosis	Trouble Area
C1271/71	Low output voltage of right front speed sensor	<ul style="list-style-type: none"> • Right front speed sensor • Sensor installation • Right front speed sensor rotor
C1272/72	Low output voltage of left front speed sensor	<ul style="list-style-type: none"> • Left front speed sensor • Sensor installation • Left front speed sensor rotor
C1273/73	Low output voltage of right rear speed sensor	<ul style="list-style-type: none"> • Right rear speed sensor • Sensor installation • Right rear speed sensor rotor
C1274/74	Low output voltage of left rear speed sensor	<ul style="list-style-type: none"> • Left rear speed sensor • Sensor installation • Left rear speed sensor rotor
C1275/75	Abnormal change in output voltage of right front speed sensor	Right front speed sensor rotor
C1276/76	Abnormal change in output voltage of left front speed sensor	Left front speed sensor rotor
C1277/77	Abnormal change in output voltage of right rear speed sensor	Right rear speed sensor rotor
C1278/78	Abnormal change in output voltage of left rear speed sensor	Left rear speed sensor rotor
C1281/81	Master cylinder (M/C) pressure sensor output signals is faulty	Master cylinder (M/C) pressure sensor
C1282/82	Regulator (REG) pressure sensor output signal is faulty	Regulator (REG) pressure sensor
C1283/83	Front (FR) pressure sensor output signal is faulty	Front (FR) pressure sensor
C1284/84	Rear (RR) pressure sensor output signal is faulty	Rear (RR) pressure sensor

DIAGNOSTIC TROUBLE CODE CHART

NOTICE:

When removing the part, turn the ignition switch OFF.

HINT:

- Using SST 09843-18040, connect the terminals Tc and CG of DLC3.
- If any abnormality is not found when inspecting parts, inspect the ECU.
- If a malfunction code is displayed during the DTC check, check the circuit listed that code. For details of each code, turn to the page referred to under the "See page" for respective "DTC No." in the DTC chart.

DTC No. (See Page)	Detection Item	Trouble Area
C0200/31*1 (DI-366)	Right front wheel speed sensor signal malfunction	<ul style="list-style-type: none"> • Right front, left front, right rear and left rear speed sensor • Each speed sensor circuit • Sensor rotor
C0205/32*1 (DI-366)	Left front wheel speed sensor signal malfunction	
C0210/33*1 (DI-366)	Right rear wheel speed sensor signal malfunction	
C0215/34*1 (DI-366)	Left rear wheel speed sensor signal malfunction	
C0226/21 (DI-373)	Malfunction in ABS solenoid (SFR) circuit	<ul style="list-style-type: none"> • SFRR or SFRH circuit • Brake actuator
C0236/22 (DI-373)	Malfunction in ABS solenoid (SFL) circuit	<ul style="list-style-type: none"> • SFLR or SFLH circuit • Brake actuator
C0246/23 (DI-373)	Malfunction in ABS solenoid (SR) circuit	<ul style="list-style-type: none"> • SRR or SRH circuit • Brake actuator
C0278/11 (DI-376)	Open circuit in ABS solenoid relay circuit	<ul style="list-style-type: none"> • ABS solenoid relay • ABS solenoid relay circuit
C0279/12 (DI-376)	Short circuit in ABS solenoid relay circuit	
C1202/58 (DI-380)	Brake fluid level low Open circuit in brake fluid level warning switch circuit	<ul style="list-style-type: none"> • Brake fluid level • Brake fluid level warning switch • Brake fluid level warning switch circuit
C1211/61 (DI-382)	Malfunction in linear solenoid (SLA) circuit	<ul style="list-style-type: none"> • SLA+ or SLA- circuit • Brake actuator
C1212/62 (DI-382)	Malfunction in linear solenoid (SLR) circuit	<ul style="list-style-type: none"> • SLR+ or SLR- circuit • Brake actuator
C1213/63 (DI-384)	Malfunction in HV ECU communication circuit	<ul style="list-style-type: none"> • HVI+ or HVI- circuit • HVO+ or HVO- circuit • HV ECU
C1214/64 (DI-386)	Malfunction in hydraulic system	<ul style="list-style-type: none"> • Each pressure sensor • Each pressure sensor circuit • Fluid leakage
C1215/15 (DI-387)	Low positive voltage of linear solenoid	<ul style="list-style-type: none"> • Battery • Charging system • Power source circuit
C1216/16 (DI-387)	High positive voltage of linear solenoid	
C1217/25 (DI-373)	Malfunction in regenerative solenoid (SMC1) circuit	<ul style="list-style-type: none"> • Regenerative solenoid (SMC1) circuit • Brake actuator
C1218/26 (DI-373)	Malfunction in regenerative solenoid (SMC2) circuit	<ul style="list-style-type: none"> • Regenerative solenoid (SMC2) circuit • Brake actuator

C1219/27 (DI-373)	Malfunction in regenerative solenoid (SS) circuit	<ul style="list-style-type: none"> • Regenerative solenoid (SS) circuit • Brake actuator
C1220/46 (DI-392)	Malfunction in regulator (REG) pressure sensor	<ul style="list-style-type: none"> • Each pressure sensor • Each pressure sensor circuit • Brake actuator
C1221/46 (DI-392)	Malfunction in front (FR) pressure sensor	
C1222/46 (DI-392)	Malfunction in rear (RR) pressure sensor	
C1241/41 (DI-397)	Low or abnormally high battery positive voltage in IG1 circuit	<ul style="list-style-type: none"> • Battery • Charging system • Power source circuit
C1242/42*2 (DI-400)	Open circuit in IG2 circuit	<ul style="list-style-type: none"> • Battery • Charging system • Power source circuit
C1246/46 (DI-392)	Malfunction in master cylinder (M/C) pressure sensor	<ul style="list-style-type: none"> • Master cylinder (M/C) pressure sensor • Master cylinder (M/C) pressure sensor circuit
C1249/49 (DI-403)	Open circuit in stop light switch circuit	<ul style="list-style-type: none"> • Stop light switch • Stop light switch circuit
C1251/51*2 (DI-406)	Malfunction in hydraulic brake booster pump motor	Hydraulic brake booster pump motor
C1252/52*2 (DI-409)	Hydraulic brake booster pump motor ON time abnormally long	<ul style="list-style-type: none"> • Hydraulic brake booster pump motor • Hydraulic brake booster pump motor circuit • Pressure switch (PH or PL)
C1253/53*2 (DI-416)	Malfunction in hydro motor relay circuit	<ul style="list-style-type: none"> • Hydro motor relay • Hydro motor relay circuit
C1254/54*2 (DI-421)	Malfunction in pressure switch	<ul style="list-style-type: none"> • Pressure switch (PH or PL) • Pressure switch circuit
C1256/56*2 (DI-424)	Malfunction of accumulator low pressure	<ul style="list-style-type: none"> • Accumulator • Pressure switch (PH or PL) • Hydraulic brake booster pump motor
C1257/57*2 (DI-430)	Malfunction in power supply drive circuit	<ul style="list-style-type: none"> • Battery • Power Source circuit
C1259/59 (DI-433)	Malfunction in regenerative of HV ECU	<ul style="list-style-type: none"> • HV control system • HV ECU
Always ON (DI-434)	Malfunction in brake ECU	<ul style="list-style-type: none"> • Battery • Charging system • Power source circuit • Brake ECU

*1: As the DTC cannot be erased by replacing parts alone do either of the following operations.

- (1) Clear DTC (See page DI-353).
- (2) At the vehicle speed of 20 km/h (12 mph), drive the vehicle for 30 sec. or more.


*2: Using the following table, troubled parts can be specified.

Table of Trouble Part and DTC:

DTC		C1242/42		C1251/51		C1252/52		C1253/53		C1254/54		C1256/56		C1257/57	
BRAKE warning light and buzzer		Light	Buzzer	Light	Buzzer	Light	Buzzer	Light	Buzzer	Light	Buzzer	Light	Buzzer	Light	Buzzer
Pressure switch	PH					○	○			○		○	○		
	PL					○	○			○		○	○		
Pump motor circuit	Pump motor			○	○							○	○		
	MTT wire harness					○	○	○							
	MT+ wire harness			○											
	MT– wire harness			○											
Accumulator malfunction												○	○		
Motor relay circuit	MR1 open circuit							○							
	MR2 open circuit							○							
	MR1 welded contact					○	○	○							
	MR2 welded contact					○	○	○							
Hydraulic brake booster	Pressure leaks					○	○					○	○		
Power source*	IG2 open circuit	○													
ECU	Power supply circuit													○	

*: When IG1 circuit is open, ABS warning light and BRAKE warning light come on.

TERMINALS OF ECU

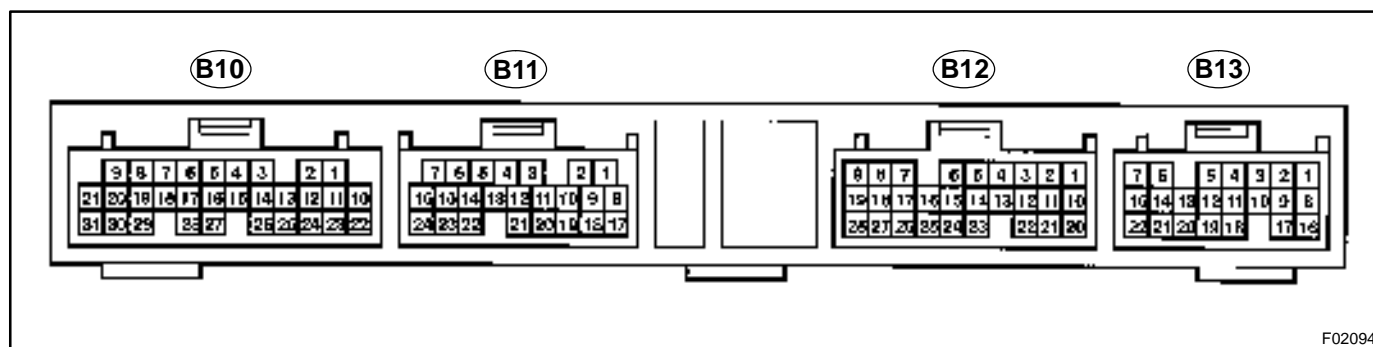

Symbols (Terminals No.)	Wiring Color	Condition	STD Voltage (V)
SFRH (B10 – 1) – GND (B10 – 6, 31, B11 – 8, 17)	R-B ↔ W-B	IG switch ON, ABS warning light OFF	10 – 14
SFRR (B10 – 2) – GND (B10 – 6, 31, B11 – 8, 17)	R-W ↔ W-B	IG switch ON, ABS warning light OFF	10 – 14
SMC2 (B10 – 3) – GND (B10 – 6, 31, B11 – 8, 17)	G-B ↔ W-B	IG switch ON, ABS warning light OFF (Brake pedal released)	10 – 14
SMC1 (B10 – 4) – GND (B10 – 6, 31, B11 – 8, 17)	G-W ↔ W-B	IG switch ON, ABS warning light OFF (Brake pedal released)	10 – 14
SS (B10 – 5) – GND (B10 – 6, 31, B11 – 8, 17)	G-O ↔ W-B	IG switch ON, ABS warning light OFF (Brake pedal released)	10 – 14
SFLR (B10 – 7) – GND (B10 – 6, 31, B11 – 8, 17)	R-G ↔ W-B	IG switch ON, ABS warning light OFF	10 – 14
SRRH (B10 – 8) – GND (B10 – 6, 31, B11 – 8, 17)	R-Y ↔ W-B	IG switch ON, ABS warning light OFF	10 – 14
SRRR (B10 – 9) – GND (B10 – 6, 31, B11 – 8, 17)	R-L ↔ W-B	IG switch ON, ABS warning light OFF	10 – 14
VCM (B10 – 10) – GND (B10 – 6, 31, B11 – 8, 17)	B ↔ W-B	IG switch ON	4.5 – 5.5
PH (B10 – 11) – GND (B10 – 6, 31, B11 – 8, 17)	GR ↔ W-B	Vehicle stops, pump motor rotates	5 – 7
		Vehicle stops, pump motor stops	Below 1.0
SG1 (B10 – 12) – GND (B10 – 6, 31, B11 – 8, 17)	Shielded ↔ W-B	IG switch OFF	Continuity
FR+ (B10 – 14) – FR- (B10 – 13)	P ↔ L	IG switch ON, slowly turn right front wheel	Pulse generation
FL+ (B10 – 16) – FL- (B10 – 15)	R ↔ G	IG switch ON, slowly turn left front wheel	Pulse generation
MT- (B10 – 18) – GND (B10 – 6, 31, B11 – 8, 17)	Y ↔ W-B	IG switch OFF	Continuity
SR (B10 – 19) – GND (B10 – 6, 31, B11 – 8, 17)	B-L ↔ W-B	IG switch ON, ABS warning light OFF	Below 1.5
SFLH (B10 – 21) – GND (B10 – 6, 31, B11 – 8, 17)	Y-B ↔ W-B	IG switch ON, ABS warning light OFF	10 – 14
PMC (B10 – 22) – GND (B10 – 6, 31, B11 – 8, 17)	W ↔ W-B	IG switch ON, stop light switch OFF	Below 1.0
E2 (B10 – 23) – GND (B10 – 6, 31, B11 – 8, 17)	R ↔ W-B	IG switch OFF	Continuity
FSS (B10 – 24) – GND (B10 – 6, 31, B11 – 8, 17)	BR ↔ W-B	IG switch OFF	Continuity

MTT (B10 – 27) – GND (B10 – 6, 31, B11 – 8, 17)	W–L ↔ W–B	IG switch ON, pump motor rotates	Above 8.0
		IG switch ON, pump motor stops	Below 1.5
MT+ (B10 – 28) – GND (B10 – 6, 31, B11 – 8, 17)	Y–G ↔ W–B	IG switch ON (Motor relay is OFF)	Below 1.5
MR1 (B10 – 29) – GND (B10 – 6, 31, B11 – 8, 17)	LG–R ↔ W–B	IG switch ON, ABS motor stops	10 – 14
STP (B11 – 1) – GND (B10 – 6, 31, B11 – 8, 17)	G–W ↔ W–B	Stop light switch OFF	Below 1.5
		Stop light switch ON	8 – 14
SP1 (B11 – 2) – GND (B10 – 6, 31, B11 – 8, 17)	V–R ↔ W–B	Vehicle driving at about 30 km/h (19 mph)	Pulse generation
Tc (B11 – 3) – GND (B10 – 6, 31, B11 – 8, 17)	P–B ↔ W–B	IG switch ON	10 – 14
Ts (B11 – 4) – GND (B10 – 6, 31, B11 – 8, 17)	GR–G ↔ W–B	IG switch ON	10 – 14
BRL (B11 – 5) – GND (B10 – 6, 31, B11 – 8, 17)	R–Y ↔ W–B	IG switch OFF → ON (Parking brake switch OFF)	10 – 14 for about 3 sec., then Below 2
IG1 (B11 – 6) – GND (B10 – 6, 31, B11 – 8, 17)	B–Y ↔ W–B	IG switch ON	10 – 14
R1+ (B11 – 7) – GND (B10 – 6, 31, B11 – 8, 17)	Y–B ↔ W–B	IG switch ON	10 – 14
D/G (B11 – 10) – GND (B10 – 6, 31, B11 – 8, 17)	W–L ↔ W–B	IG switch ON	10 – 14
RR+ (B11 – 11) – RR– (B11 – 12)	Y ↔ BR	IG switch ON, slowly turn right rear wheel	Pulse generation
HVO+ (B11 – 14) – GND (B10 – 6, 31, B11 – 8, 17)	G ↔ W–B	IG switch ON	About 2.5
RLO (B11 – 15) – GND (B10 – 6, 31, B11 – 8, 17)	W ↔ W–B	Vehicle driving at about 30 km/h (19 mph)	Pulse generation
HVI– (B11 – 16) – GND (B10 – 6, 31, B11 – 8, 17)	V ↔ W–B	IG switch ON	About 2.5
WA (B11 – 18) – GND (B10 – 6, 31, B11 – 8, 17)	B–W ↔ W–B	IG switch ON, ABS warning light ON	10 – 14
		IG switch ON, ABS warning light OFF	Below 2.0
RL+ (B11 – 19) – RL– (B11 – 20)	P ↔ L	IG switch ON, slowly turn left rear wheel	Pulse generation
RSS (B11 – 21) – GND (B10 – 6, 31, B11 – 8, 17)	BR–B ↔ W–B	IG switch OFF	Continuity
HVO– (B11 – 22) – GND (B10 – 6, 31, B11 – 8, 17)	R ↔ W–B	IG switch ON	About 2.5
RRO (B11 – 23) – GND (B10 – 6, 31, B11 – 8, 17)	B ↔ W–B	Vehicle driving at about 30 km/h (19 mph)	Pulse generation
HVI+ (B11 – 24) – GND (B10 – 6, 31, B11 – 8, 17)	LG ↔ W–B	IG switch ON	About 2.5
IG2 (B12 – 1) – GND (B10 – 6, 31, B11 – 8, 17)	B–W ↔ W–B	IG switch ON	10 – 14
LBL (B12 – 7) – GND (B10 – 6, 31, B11 – 8, 17)	LG–R ↔ W–B	IG switch ON, fluid in master cylinder reservoir above MIN level	4.5 – 6.4
VFR (B12 – 9) – GND (B10 – 6, 31, B11 – 8, 17)	B ↔ W–B	IG switch ON	4.5 – 5.5
PKB (B12 – 13) – GND (B10 – 6, 31, B11 – 8, 17)	R–Y ↔ W–B	IG switch ON, parking brake switch ON	Below 1.5
		IG switch ON, parking brake switch OFF	10 – 14


DIAGNOSTICS – ANTI-LOCK BRAKE SYSTEM WITH EBD & RBS

SG2 (B12 – 15) – GND (B10 – 6, 31, B11 – 8, 17)	Shielded ↔ W–B	IG switch OFF	Continuity
VREG (B12 – 16) – GND (B10 – 6, 31, B11 – 8, 17)	B ↔ W–B	IG switch ON	4.5 – 5.5
SG3 (B12 – 18) – GND (B10 – 6, 31, B11 – 8, 17)	Shielded ↔ W–B	IG switch OFF	Continuity
BZ (B12 – 20) – GND (B10 – 6, 31, B11 – 8, 17)	G ↔ W–B	IG switch ON, buzzer sounds	Below 1.5
		IG switch ON, buzzer does not sound	10 – 14
EREG (B12 – 24) – GND (B10 – 6, 31, B11 – 8, 17)	R ↔ W–B	IG switch OFF	Continuity
PREG (B12 – 25) – GND (B10 – 6, 31, B11 – 8, 17)	W ↔ W–B	IG switch ON, brake pedal released	Below 1.0
EFR (B12 – 27) – GND (B10 – 6, 31, B11 – 8, 17)	R ↔ W–B	IG switch OFF	Continuity
PFR (B12 – 28) – GND (B10 – 6, 31, B11 – 8, 17)	W ↔ W–B	IG switch ON, brake pedal released	Below 1.0
SLA+ (B13 – 1) – GND (B10 – 6, 31, B11 – 8, 17)	L ↔ W–B	IG switch ON	Pulse generation
MR2 (B13 – 2) – GND (B10 – 6, 31, B11 – 8, 17)	Y–G ↔ W–B	IG switch ON, pump motor rotates	Below 1.0
		IG switch ON, pump motor stops	10 – 14
R2+ (B13 – 3) – GND (B10 – 6, 31, B11 – 8, 17)	L–O ↔ W–B	IG switch ON	10 – 14
VRR (B13 – 5) – GND (B10 – 6, 31, B11 – 8, 17)	B ↔ W–B	IG switch ON	4.5 – 5.5
AST (B13 – 6) – GND (B10 – 6, 31, B11 – 8, 17)	B–O ↔ W–B	IG switch ON, ABS warning light OFF	10 – 14
SLR– (B13 – 7) – GND (B10 – 6, 31, B11 – 8, 17)	V ↔ W–B	IG switch ON	Below 1.5
SLA– (B13 – 8) – GND (B10 – 6, 31, B11 – 8, 17)	LG ↔ W–B	IG switch ON	Below 1.5
PL (B13 – 9) – GND (B10 – 6, 31, B11 – 8, 17)	Y–R ↔ W–B	IG switch OFF, depress brake pedal more than 40 times → IG switch ON	6.5 – 10 → 2.5 – 5.0
PRR (B13 – 13) – GND (B10 – 6, 31, B11 – 8, 17)	W ↔ W–B	IG switch ON, brake pedal released	Below 1.0
SLR+ (B13 – 16) – GND (B10 – 6, 31, B11 – 8, 17)	P ↔ W–B	IG switch ON	Pulse generation
SG4 (B13 – 19) – GND (B10 – 6, 31, B11 – 8, 17)	Shielded ↔ W–B	IG switch OFF	Continuity
ERR (B13 – 20) – GND (B10 – 6, 31, B11 – 8, 17)	R ↔ W–B	IG switch OFF	Continuity
+BS (B13 – 22) – GND (B10 – 6, 31, B11 – 8, 17)	L ↔ W–B	IG switch ON	10 – 14

CIRCUIT INSPECTION

DTC	C0200/31 – C0215/34	Speed Sensor Circuit
------------	----------------------------	-----------------------------

CIRCUIT DESCRIPTION

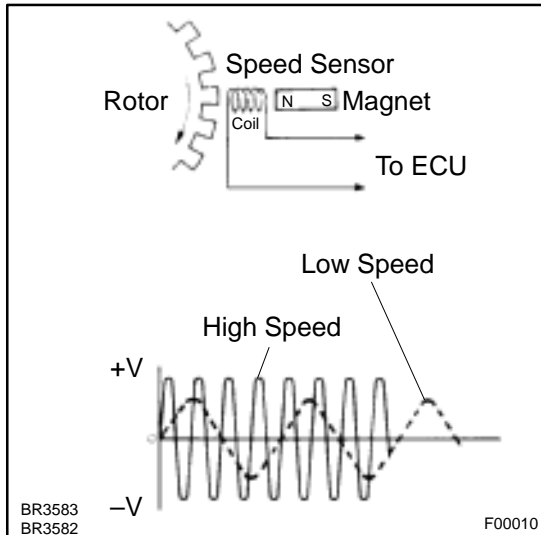

The speed sensor detects wheel speed and sends the appropriate signals to the ECU. These signals are used for control of both the ABS & EBD control system. The front and rear rotors each have 48 serrations.

When the rotors rotate, the magnetic field emitted by the permanent magnet in the speed sensor generates an AC voltage. Since the frequency of this AC voltage changes in direct proportion to the speed of the rotor, the frequency is used by the ECU to detect the speed of each wheel.

DTC No.	DTC Detecting Condition	Trouble Area
C0200/31 C0205/32 C0210/33 C0215/34	<p>Detection of any of conditions 1. through 4.:</p> <ol style="list-style-type: none"> At vehicle speed of 10 km/h (6 mph) or more, pulses are not input for 15 sec. or more. While a vehicle is driven at a speed of 15 km/h (24 mph) or more, pulse signals from the speed sensor are instantly omitted 7 times or more. While a vehicle is driven at a speed of 20 km/h (32 mph) or more, error signals from the speed sensor are transmitted consecutively 75 time or more within 5 min. When the ignition switch is ON, an open circuit in the speed sensor continues for 0.5 sec. or more. 	<ul style="list-style-type: none"> Right front, left front, right rear and left rear speed sensor Each speed sensor circuit Sensor rotor

HINT:


DTC No. C0200/31 is for the right front speed sensor.

DTC No. C0205/32 is for the left front speed sensor.

DTC No. C0210/33 is for the right rear speed sensor.

DTC No. C0215/34 is for the left rear speed sensor.

WIRING DIAGRAM

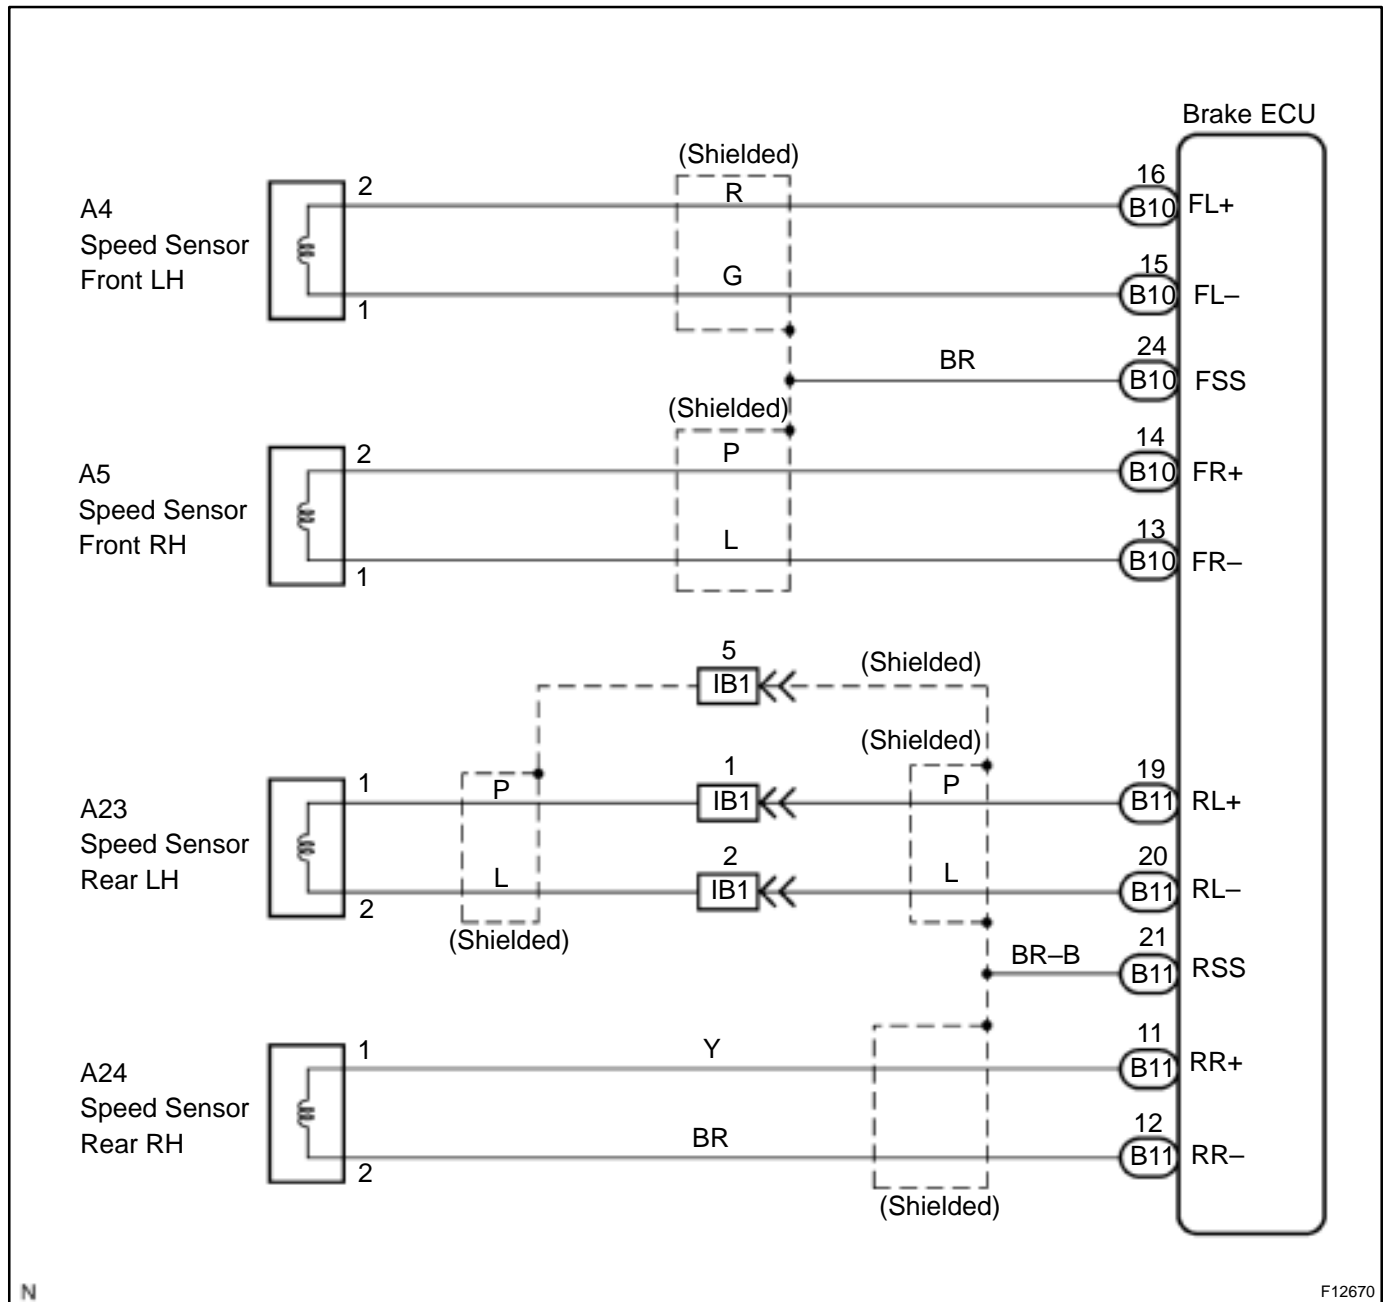

cardiagn.com

INSPECTION PROCEDURE

HINT:

Start the inspection from step 1 in case of using the TOYOTA hand-held tester and start from step 2 in case of not using the TOYOTA hand-held tester.

1	Check output value of speed sensor.
---	--

PREPARATION:

- (a) Connect the TOYOTA hand-held tester to the DLC3.
- (b) Turn the ignition switch ON, and push the TOYOTA hand-held tester main switch ON.
- (c) Select the DATALIST mode on the TOYOTA hand-held tester.

CHECK:

Check that there is no difference between the speed value output from the speed sensor displayed on the TOYOTA hand-held tester and the speed value displayed on the speedometer when driving the vehicle.

OK:

There is almost no difference from the displayed speed value.

HINT:


There is tolerance of $\pm 10\%$ in the speedometer indication.

OK

Check and replace brake ECU.

NG

2	Check speed sensor.
---	----------------------------

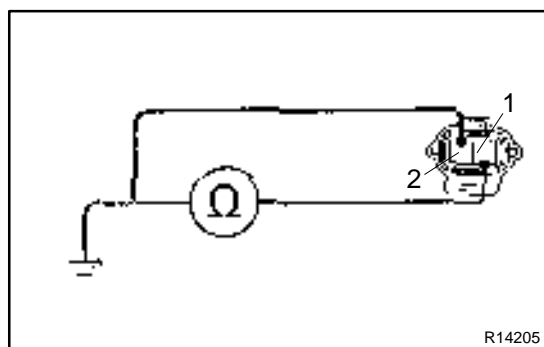

Front:

PREPARATION:

- (a) Remove the front fender liner.
- (b) Make sure that there is no looseness at the connector lock part and connecting part of the connector.
- (c) Disconnect the speed sensor connector.

CHECK:

Measure resistance between terminals 1 and 2 of speed sensor connector.

OK:


Resistance: 0.6 – 2.5 kΩ

CHECK:

Measure resistance between terminals 1 and 2 of speed sensor connector and body ground.

OK:

Resistance: 10 MΩ or higher

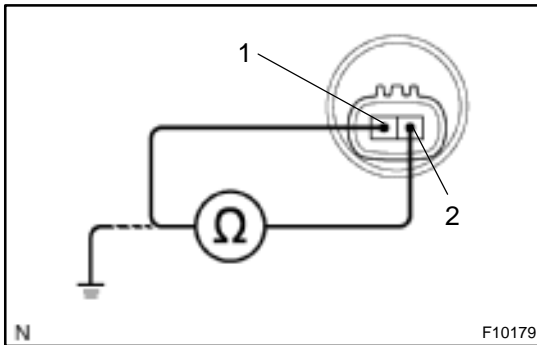**Rear:****PREPARATION:**

- (a) Make sure that there is no looseness at the connector lock part and connecting part of the connector.
- (b) Disconnect the speed sensor connector at hub bearing .

CHECK:

Measure resistance between terminals 1 and 2 of speed sensor connector.

OK:


Resistance: 0.7 – 2.2 kΩ

CHECK:

Measure resistance between terminals 1 and 2 of speed sensor connector and body ground.

OK:

Resistance: 1 MΩ or higher

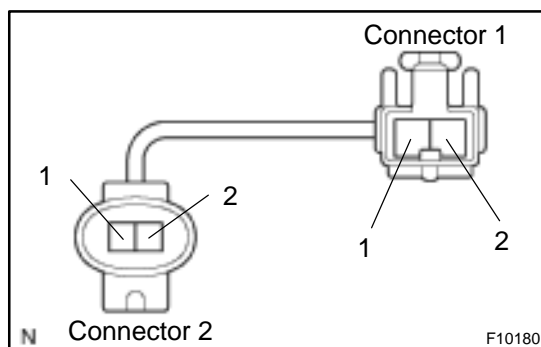**Rear speed sensor sub-wire harness:****PREPARATION:**

- (a) Remove the seat cushion and seatback.
- (b) Make sure that there is no looseness at the connector lock part and connecting part of the connector.
- (c) Disconnect the speed sensor connector inside vehicle.

CHECK:

- (a) Measure resistance between terminal 1 of connector 1 and terminal 2 of connector 2.
- (b) Measure resistance between terminal 2 of connector 1 and terminal 1 of connector 2.

OK:

Resistance: below 1 Ω

CHECK:

Measure resistance between terminals 1 and 2 of speed sensor connector 1 and body ground.

OK:

Resistance: 10 MΩ or higher

NG

Replace speed sensor or sub-wire harness.

NOTICE:

Check the speed sensor signal last (See page [DI-353](#)).

OK


- 3** Check for open and short circuit in harness and connector between each speed sensor and brake ECU (See page [IN-41](#)).

NG

Repair or replace harness or connector.

OK

- 4** Check speed sensor installation.

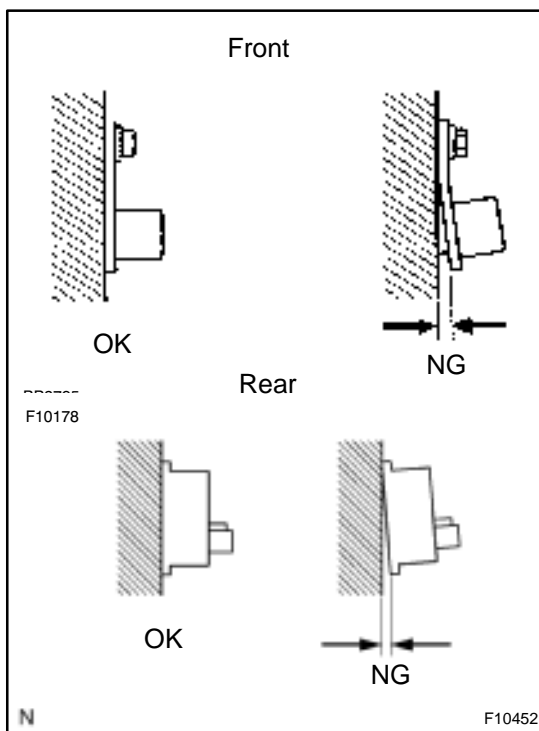

CHECK:

Check the speed sensor installation.

OK:

The installation bolt is tightened properly and there is no clearance between the sensor and steering knuckle or rear axle carrier.

Torque:

Front speed sensor : 8.0 N·m (82 kgf·cm, 71 in.-lbf)

NG


Replace speed sensor.

NOTICE:

Check the speed sensor signal last (See page [DI-353](#)).

OK

5 Check speed sensor and sensor rotor serrations.

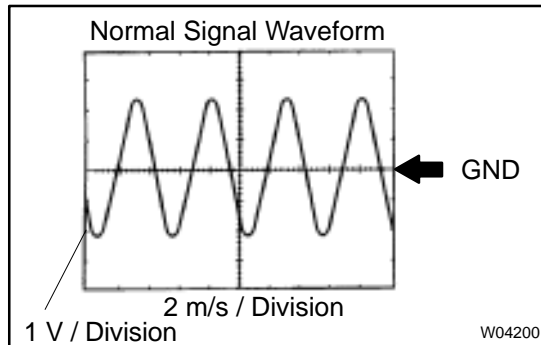

REFERENCE: INSPECTION USING OSCILLOSCOPE

PREPARATION:

- Remove the brake ECU with connectors still connected.
- Connect the oscilloscope to the terminals FR+, FL+, RR+ or RL+ and GND of the brake ECU.

CHECK:

Drive the vehicle with about 20 km/h (12 mph), and check the signal waveform.

HINT:


- As the vehicle speed (rpm of the wheels) increases, a cycle of the waveform becomes shorter and the fluctuation in the output voltage becomes greater.
- When noise is identified in the waveform on the oscilloscope, error signals are generated due to the speed sensor rotor's scratches, looseness or foreign matter deposited on it.

OK

Check and replace brake ECU.

NG

6 Check sensor rotor and sensor tip.

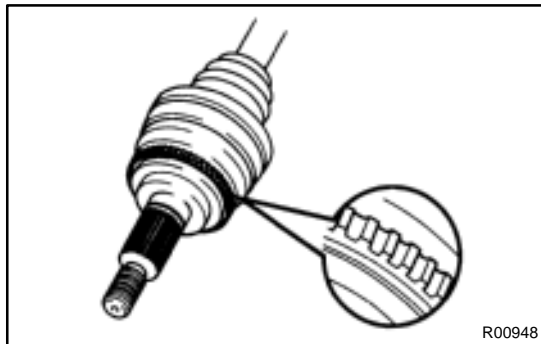

Front:

PREPARATION:

Remove the front drive shaft (See page [SA-17](#)).

CHECK:

Check the sensor rotor serrations.

OK:

No scratches or missing teeth or foreign objects.

PREPARATION:

Remove the front speed sensor (See page [BR-53](#)).

CHECK:


Check the sensor tip.

OK:

No scratches or foreign objects on the sensor tip.

HINT:

If foreign matter (including that on the sensor rotor side) is identified, remove it and after reassembling, check the output waveform.

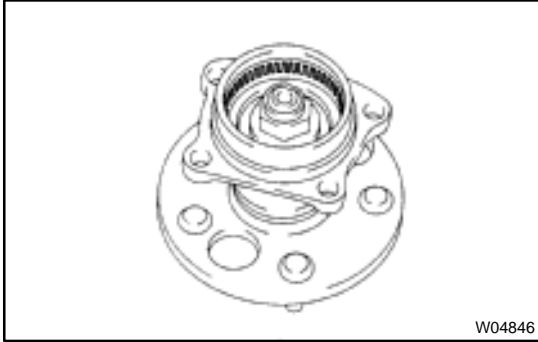**Rear:****PREPARATION:**

Remove the rear speed sensor (See page [BR-56](#)).

CHECK:

Check the sensor rotor serrations.

OK:

No scratches or missing teeth or foreign objects.

HINT:

If the sensor rotor is damaged or deformed, replace the hub assembly.

CHECK:

Check the sensor tip.

OK:

No scratches or foreign objects on the sensor tip.

HINT:

If foreign matter (including that on the sensor rotor side) is identified, remove it and after reassembling, check the output waveform.

NG**Replace sensor rotor or speed sensor.****NOTICE:**

Check the speed sensor signal last (See page [DI-353](#)).

OK**Check and replace brake ECU.**

DTC	C0226/21 – C0246/23	ABS Solenoid Circuit
------------	----------------------------	-----------------------------


DTC	C1217/25 – C1219/27	Regenerative Solenoid Circuit
------------	----------------------------	--------------------------------------

CIRCUIT DESCRIPTION

This solenoid goes on when signals are received from the ECU and controls the pressure acting on the wheel cylinders thus controlling the braking force.

DTC No.	DTC Detecting Condition	Trouble Area
C0226/21	Open or short circuit in SFRH or SFRR circuit continues for 0.05 sec. or more.	<ul style="list-style-type: none"> • SFRH or SFRR circuit • Brake actuator
C0236/22	Open or short circuit in SFLH or SFLR circuit continues for 0.05 sec. or more.	<ul style="list-style-type: none"> • SFLH or SFLR circuit • Brake actuator
C0246/23	Open or short circuit in SRR or SRH circuit continues for 0.05 sec. or more.	<ul style="list-style-type: none"> • SRR or SRH circuit • Brake actuator
C1217/25	Open or short circuit in SMC1 circuit continues for 0.05 sec. or more.	<ul style="list-style-type: none"> • SMC1 circuit • Brake actuator
C1218/26	Open or short circuit in SMC2 circuit continues for 0.05 sec. or more.	<ul style="list-style-type: none"> • SMC2 circuit • Brake actuator
C1219/27	Open or short circuit in SS circuit continues for 0.05 sec. or more.	<ul style="list-style-type: none"> • SS circuit • Brake actuator

WIRING DIAGRAM

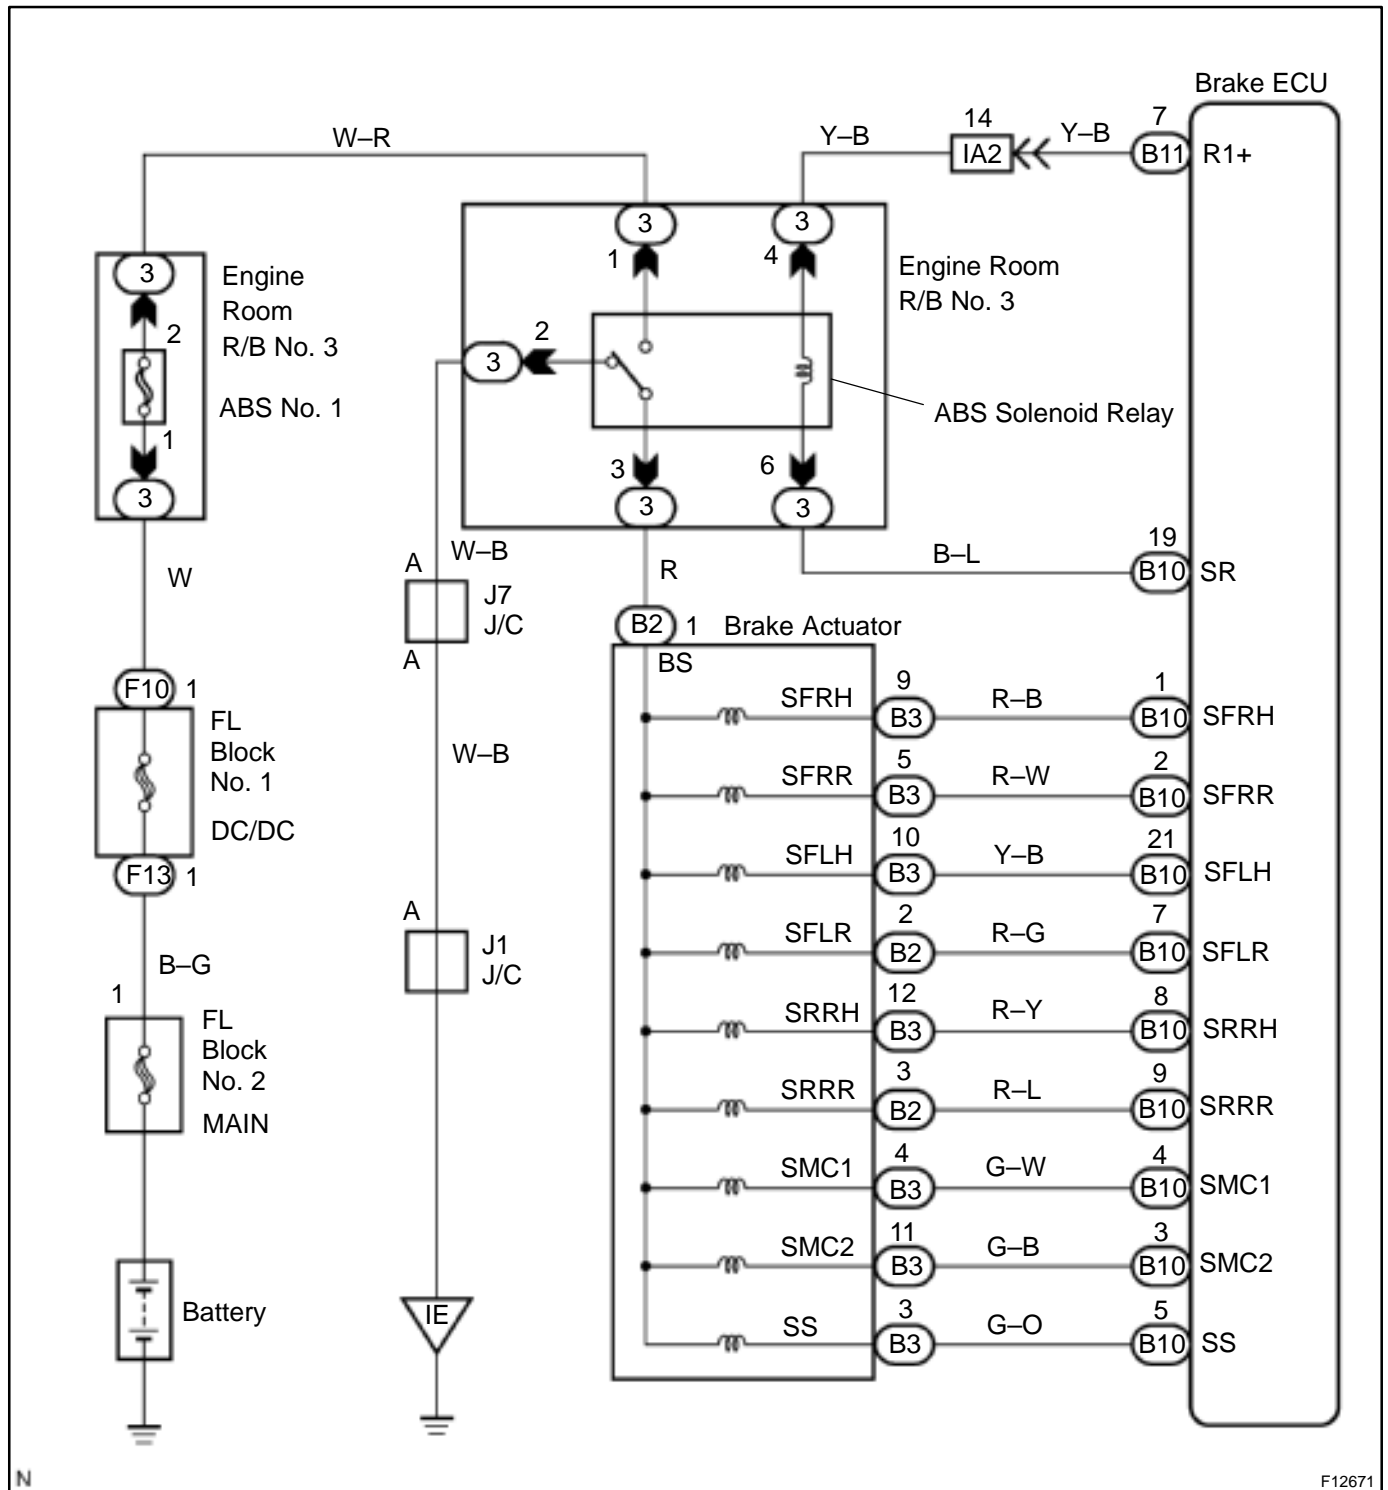


N

F12671

INSPECTION PROCEDURE

1 Check brake actuator solenoid.

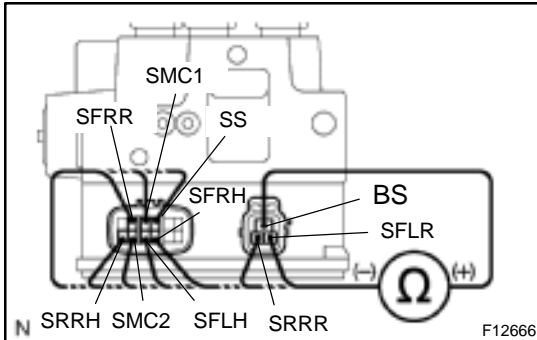**PREPARATION:**

Disconnect the 2 connectors from the brake actuator.

CHECK:

Check continuity between the terminal BS and each of terminals SFRH, SFRR, SFLH, SFLR, SRRH, SRRR, SMC1, SMC2 and SS of brake actuator connector.

OK:**Continuity****HINT:**

Resistance of each solenoid at 20 °C (68 °F)

SFRH, SFLH, SRRH: approx. 6.6 Ω

SFRR, SFLR, SRRR: approx. 2.2 Ω

SMC1, SMC2, SS: approx. 16 Ω

NG**Replace brake actuator.****OK**2 Check for open and short circuit in harness and connector between brake ECU and brake actuator (See page [IN-41](#)).**NG****Repair or replace harness or connector.****OK**

If the same code is still output after the DTC is deleted, check the contact condition of each connection. If the connections are normal, the ECU may be defective.


DTC	C0278/11, C0279/12	ABS Solenoid Relay Circuit
------------	---------------------------	-----------------------------------

CIRCUIT DESCRIPTION

This relay supplies power to each ABS solenoid. After the ignition switch is turned ON, if the initial check is OK, the relay goes on.

DTC No.	DTC Detecting Condition	Trouble Area
C0278/11	When the terminal SR in brake ECU is 2 V or less, the terminal AST in brake ECU continues to be in other than the range from 10 – 14 V for 0.2 sec. more.	<ul style="list-style-type: none"> • ABS solenoid relay
C0279/12	When the voltage of the terminal SR in brake ECU is 10 – 14 V, the terminal AST in brake ECU continues to be in the range from 10 – 14 V for 0.2 sec. more.	<ul style="list-style-type: none"> • ABS solenoid relay circuit

WIRING DIAGRAM

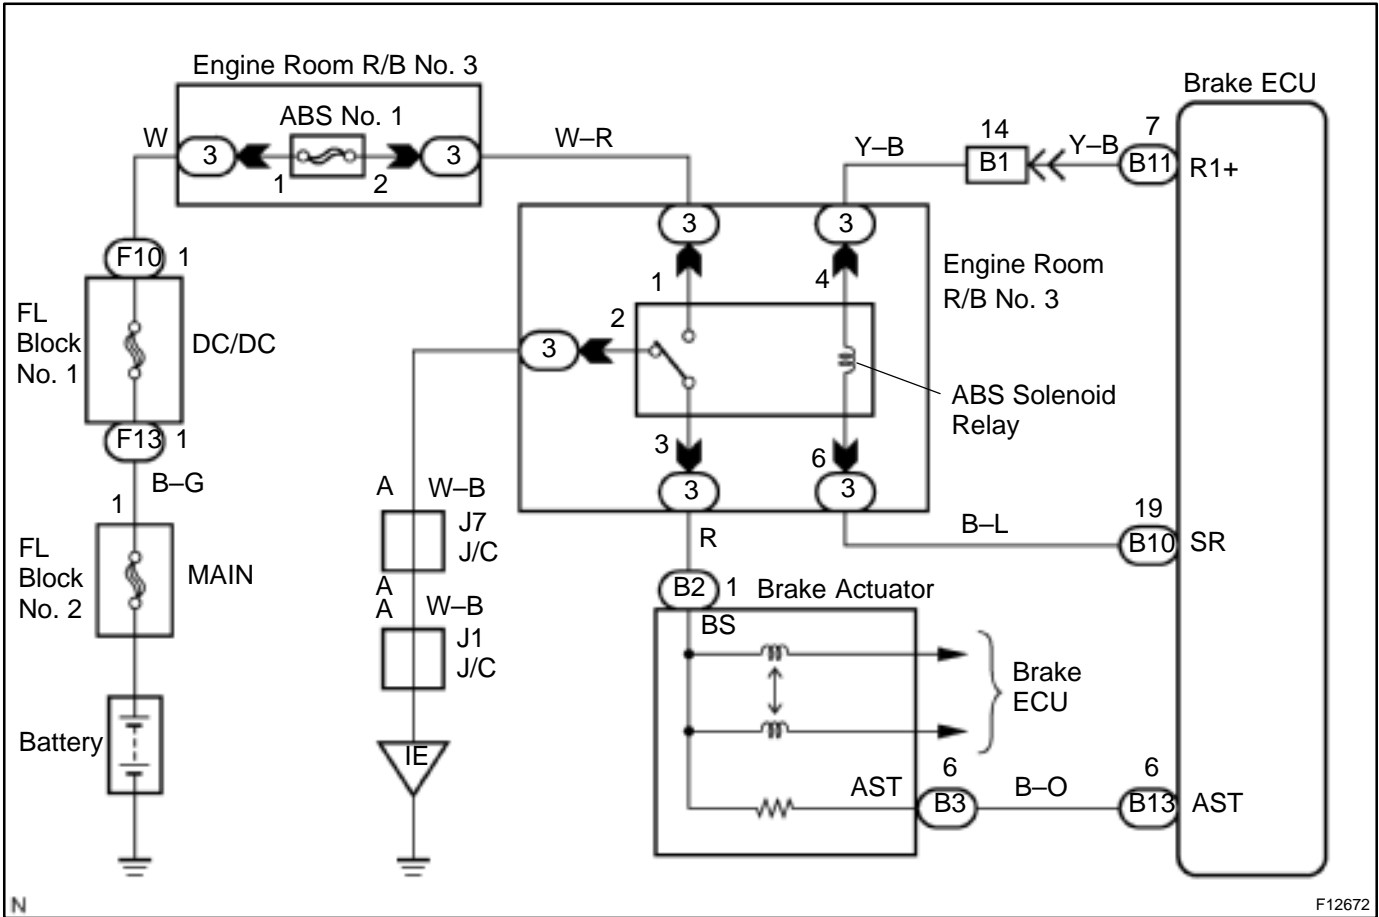

INSPECTION PROCEDURE

HINT:

Start the inspection from step 1 in case of using the TOYOTA hand-held tester and start from step 2 in case of not using the TOYOTA hand-held tester.

1	Check ABS solenoid relay operation.
---	--

PREPARATION:

- (a) Connect the TOYOTA hand-held tester to the DLC3.
- (b) Turn the ignition switch ON, and push the TOYOTA hand-held tester main switch ON.
- (c) Select the ACTIVE TEST mode on the TOYOTA hand-held tester.

CHECK:

Check the operation sound of the ABS solenoid relay when operating it with the TOYOTA hand-held tester.

OK:


The operation sound of the ABS solenoid relay should be heard.

OK

Go to step 4.

NG

2	Check voltage between terminals 1 and 2 of engine room R/B No. 3 (for ABS solenoid relay).
---	---

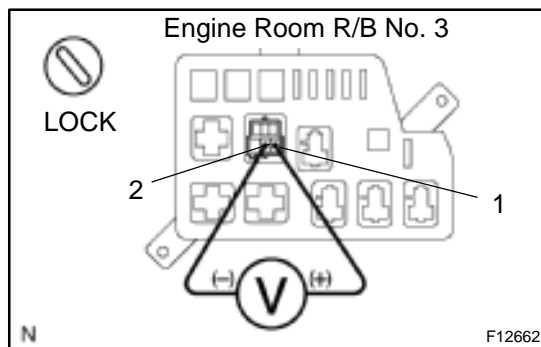

PREPARATION:

Remove the ABS solenoid relay from engine room R/B No. 3.

CHECK:

Measure the voltage between terminals 1 and 2 of engine room R/B No. 3 (for ABS solenoid relay).

OK:

Voltage: 10 – 14 V


NG

Check and repair harness or connector.

OK

3

Check ABS solenoid relay.

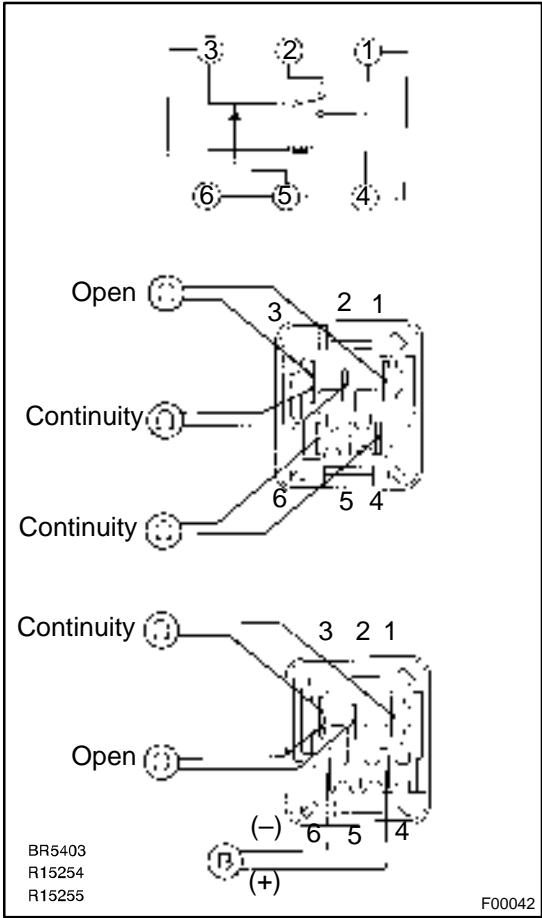

CHECK:

Check continuity between each terminal of ABS solenoid relay.

OK:

Terminals 4 and 6	Continuity (Reference value 80 Ω)
Terminals 2 and 3	Continuity
Terminals 1 and 3	Open

CHECK:

- Apply battery positive voltage between terminals 4 and 6.
- Check continuity between each terminal of ABS solenoid relay.

OK:


Terminals 2 and 3	Open
Terminals 1 and 3	Continuity

NG

Replace ABS solenoid relay.

OK

- 4 Check continuity between terminals 3 of engine room R/B No. 3 (for ABS solenoid relay) and terminal AST of brake ECU.**

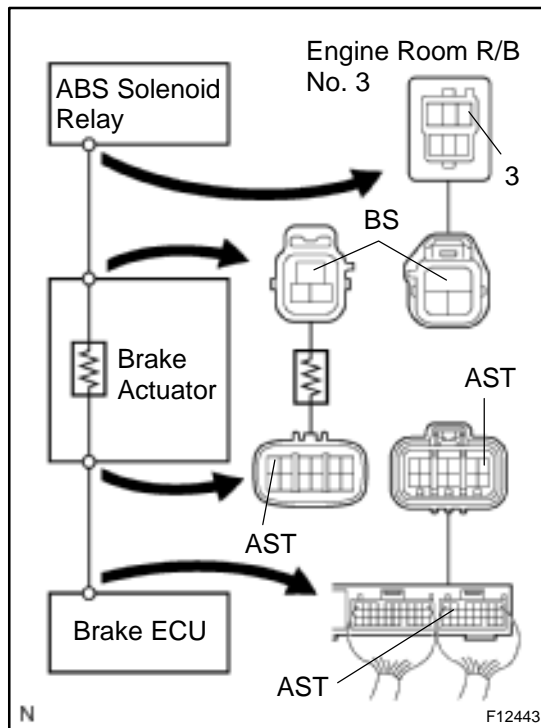**CHECK:**

Check continuity between terminal 3 of engine room R/B No. 3 (for ABS solenoid relay) and terminal AST of brake ECU.

OK:**Continuity****HINT:**

There is a resistance of approx. 33 Ω between terminals BS and AST of the brake actuator.

NG

Repair or replace harness or brake actuator.

OK

- 5 Check for open and short circuit in harness and connector between ABS solenoid relay and brake ECU (See page IN-41).**

NG

Repair or replace harness or connector.

OK

If the same code is still output after the DTC is deleted, check the contact condition of each connection. If the connections are normal, the ECU may be defective.

DTC	C1202/58	Brake Fluid Warning Switch Circuit
------------	-----------------	---

CIRCUIT DESCRIPTION


The brake fluid level warning switch sends the appropriate signal to the ECU when the brake fluid level drops.

HINT:

Depressing the parking brake pedal also turns on the brake warning light but does not diagnose DTC No. C1202/58.

DTC No.	DTC Detecting Condition	Trouble Area
C1202/58	When any of the following 1. 2. or 3. is detected: 1. When the ignition switch is ON, an open condition in the reservoir level switch circuit continues for 2 sec. or more. 2. While a vehicle is driven at a speed of 3 km/h (5 mph) or more, decrease in the reservoir level continues for 10 sec. or more. 3. While a vehicle is stopped, decrease in the reservoir level continues for 5 sec. or more.	<ul style="list-style-type: none"> • Brake fluid level • Brake fluid level warning switch • Brake fluid level warning switch circuit

WIRING DIAGRAM

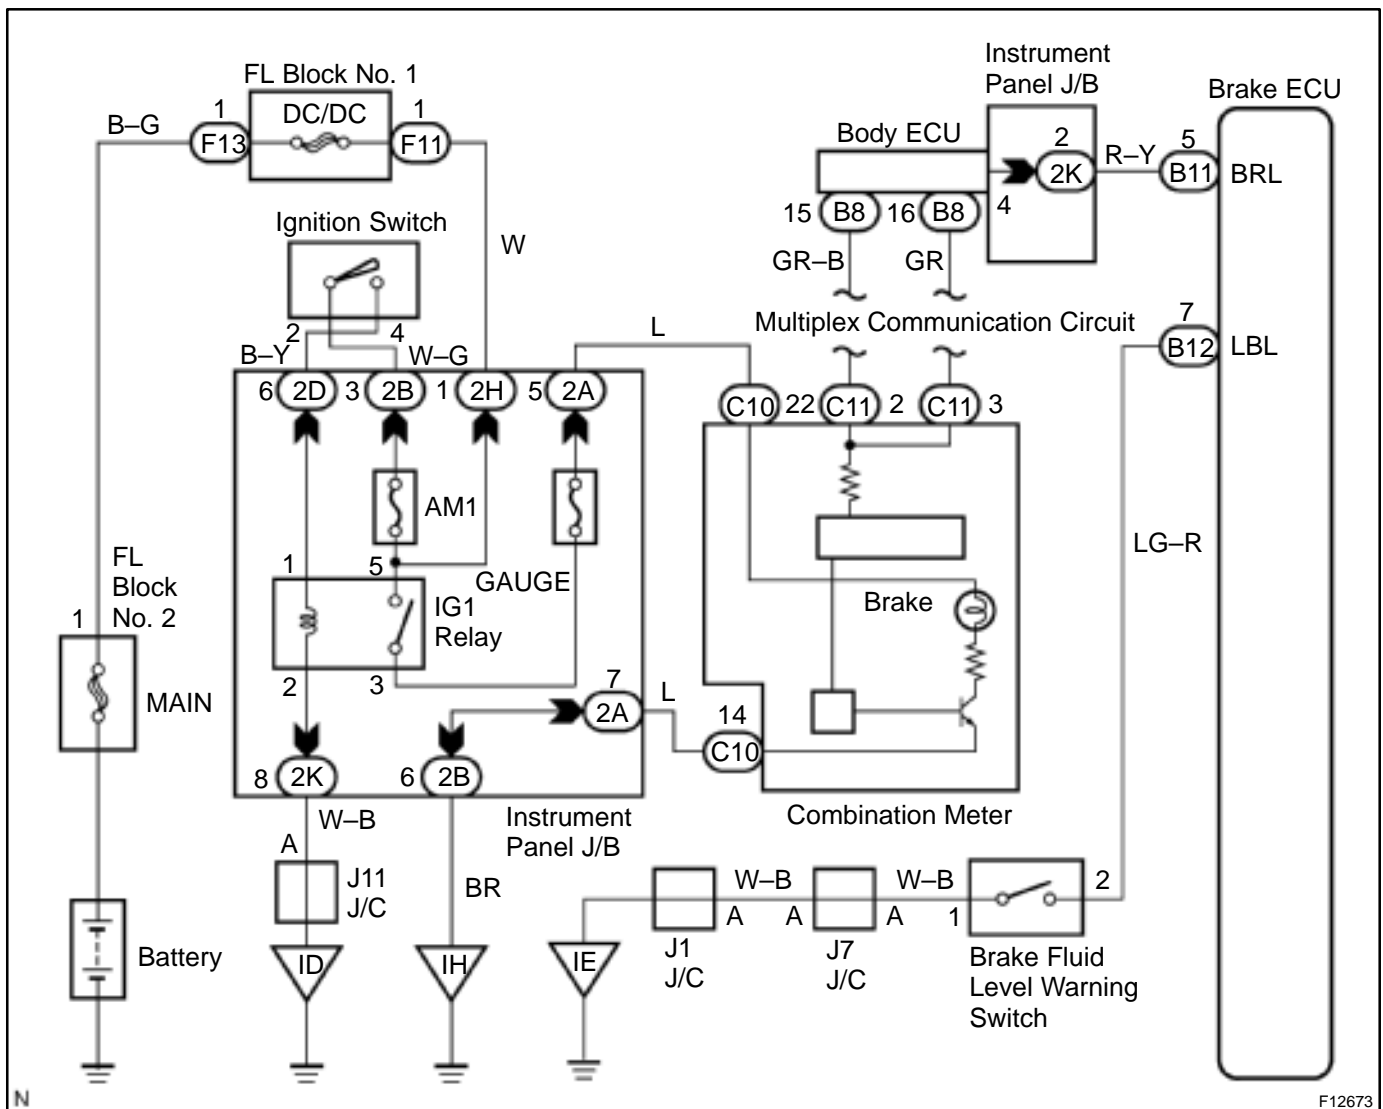

INSPECTION PROCEDURE

1	Check brake fluid level.
----------	---------------------------------

CHECK:

Check the amount of fluid in the brake reservoir.

NG

Check and repair brake fluid leakage and add fluid.

OK

2	Check brake fluid level warning switch (See page BE-2).
----------	--

NG

Replace brake fluid level warning switch.

OK

3	Check for open circuit in all the harness and components connected to brake fluid level warning light (See page IN-41).
----------	--

NG

Repair or replace harness or connector.

OK


Check and replace brake ECU.


DTC	C1211/61, C1212/62	Linear Solenoid Circuit
------------	---------------------------	--------------------------------

CIRCUIT DESCRIPTION

DTC No.	DTC Detecting Condition	Trouble Area
C1211/61	When the ignition switch is ON, an open or short circuit of solenoid continues for 0.1 sec. or more.	<ul style="list-style-type: none"> • SLA+ or SLA- circuit • Brake actuator
C1212/62		<ul style="list-style-type: none"> • SLR+ or SLR- circuit • Brake actuator

WIRING DIAGRAM

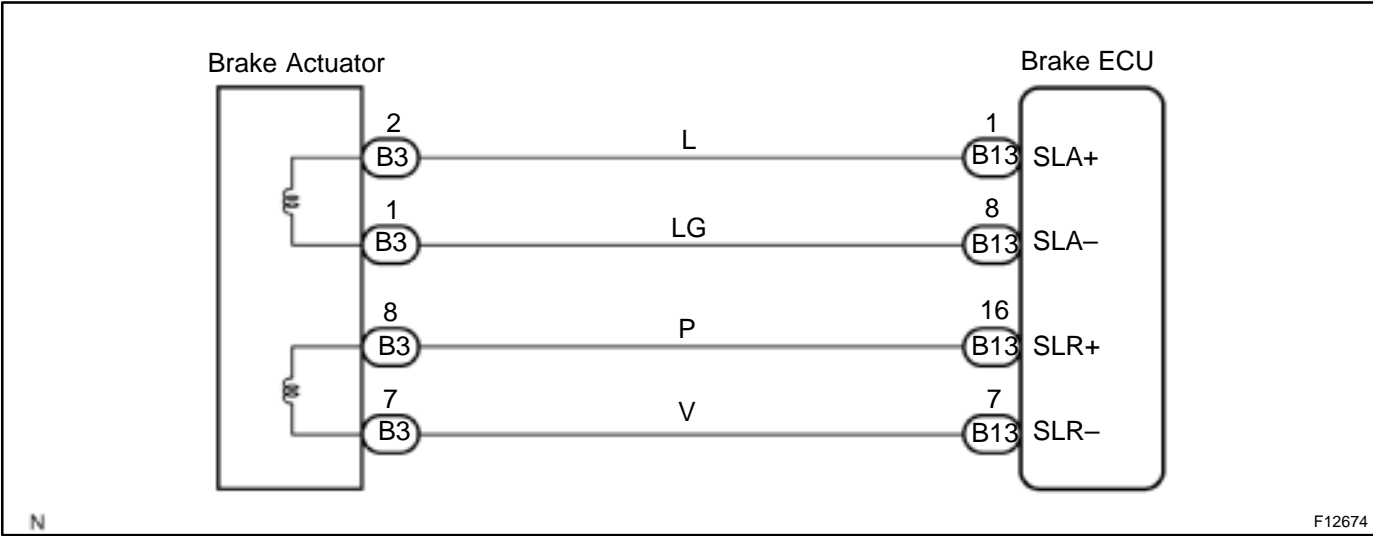

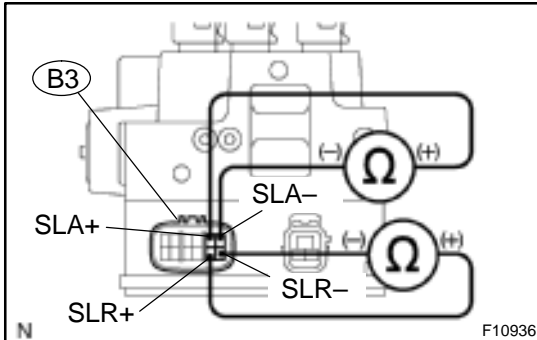INSPECTION PROCEDURE**1 Check brake actuator solenoid.****PREPARATION:**

Disconnect the connector (B3) from the brake actuator.

CHECK:

Check continuity between each of terminals SLA+ and SLA–, and terminals SLR+ and SLR– of brake actuator.

OK:**Continuity****HINT:**

Resistance of each solenoid approx. 2.3 Ω at 20 °C (68 °F).

NG**Replace brake actuator.****OK****2 Check for open and short circuit in harness and connector between brake ECU and brake actuator (See page [IN-41](#)).****NG****Repair or replace harness or connector.****OK**

If the same code is still output after the DTC is deleted, check the contact condition of each connection. If the connections are normal, the ECU may be defective.


DTC	C1213/63	HV ECU Communication Circuit Malfunction
------------	-----------------	---

CIRCUIT DESCRIPTION

The circuit is used to send RBS control information from the brake ECU to the HV ECU (HVI+, HVI-), and HV control information from the HV ECU to the ABS ECU (HVO+, HVO-).

DTC No.	DTC Detecting Condition	Trouble Area
C1213/63	When the ignition switch is ON, abnormal communication with HV ECU continues for 0.5 sec. or more.	<ul style="list-style-type: none"> • HVI+ or HVI- circuit • HVO+ or HVO- circuit • HV ECU

WIRING DIAGRAM

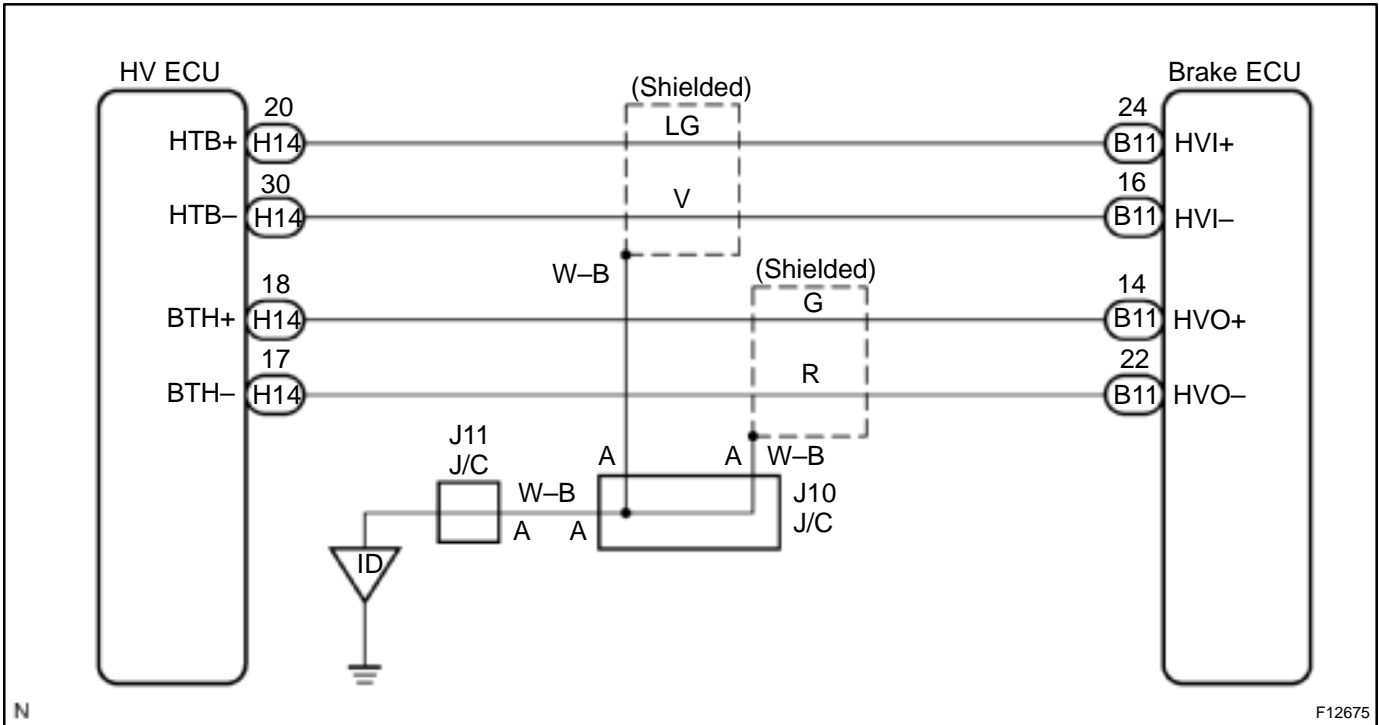

INSPECTION PROCEDURE

1	Check for open and short circuit in harness and connector between terminals HVI+, HVI-, HVO+ and HVO- of brake ECU and HV ECU (See page IN-41).
---	--

NG

Repair or replace harness or connector.

OK


Check and replace HV ECU or brake ECU.


DTC	C1215/15, C1216/16	Linear Solenoid Positive Voltage Malfunction
-----	--------------------	--

CIRCUIT DESCRIPTION

DTC No.	DTC Detecting Condition	Trouble Area
C1215/15	When any of the following 1. or 2. is detected: 1. When the ignition switch is ON, the condition that the voltage of the terminal +BS in brake ECU is 2.5 V or less continues for 0.5 sec. or more. 2. While a vehicle is driven at a speed of 3 km/h (5 mph) or more, the condition that the voltage of the terminal +BS in brake ECU is 9 V or less continues for 10 sec. or more.	• Battery • Charging system • Power source circuit
C1216/16	When the ignition switch is ON, the condition that the voltage of the terminal +BS in brake ECU is 17 V or more continues for 1.2 sec. or more.	

WIRING DIAGRAM

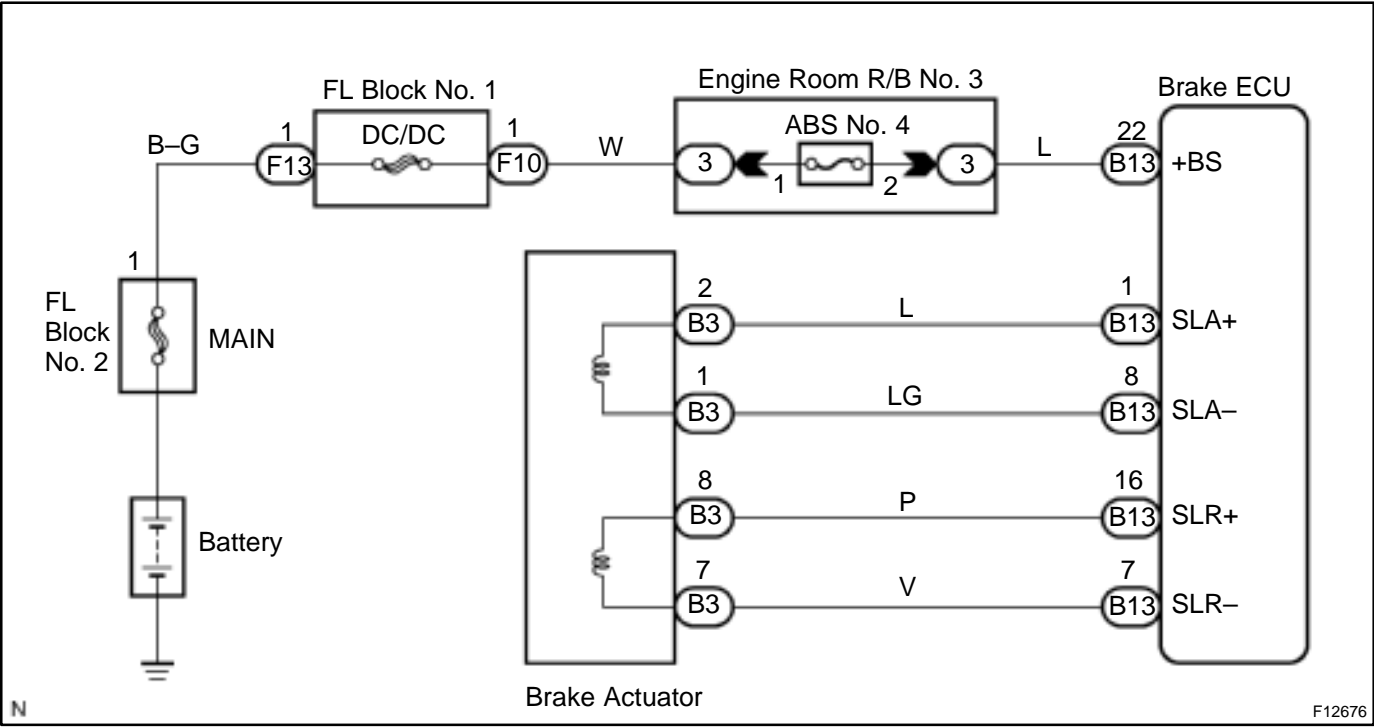

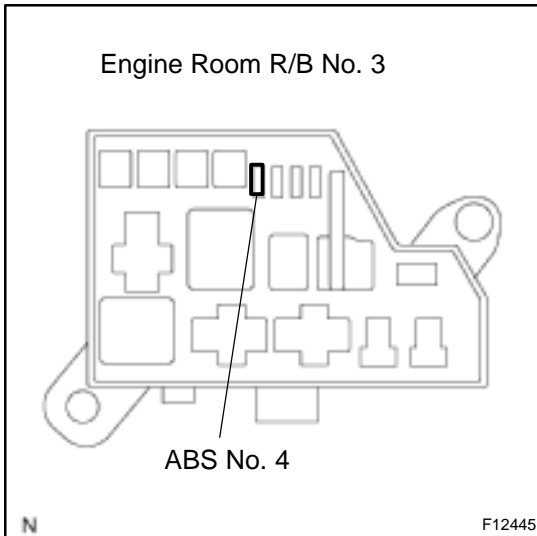INSPECTION PROCEDURE**1 Check ABS No. 4 fuse.****PREPARATION:**

Remove the ABS No. 4 fuse from engine room R/B No. 3.

CHECK:

Check continuity of ABS No. 4 fuse.

OK:

Continuity

NG

Check for short circuit in all the harness and components connected to ABS No. 4 fuse (See attached wiring diagram).

OK

2 Check battery positive voltage.**OK:**

Voltage: 10 – 14 V

NG

Check and repair the charging system (See page [HV-39](#)).

OK

3 Check voltage of the ECU +BS power source.

In case of using the TOYOTA hand-held tester:

PREPARATION:


- (a) Connect the TOYOTA hand-held tester to the DLC3.
- (b) Turn the ignition switch ON, and push the TOYOTA hand-held tester main switch ON.
- (c) Select the DATALIST mode on the TOYOTA hand-held tester.

CHECK:

Check the voltage condition output from the ECU displayed on the TOYOTA hand-held tester.

OK:

"Normal" is displayed.

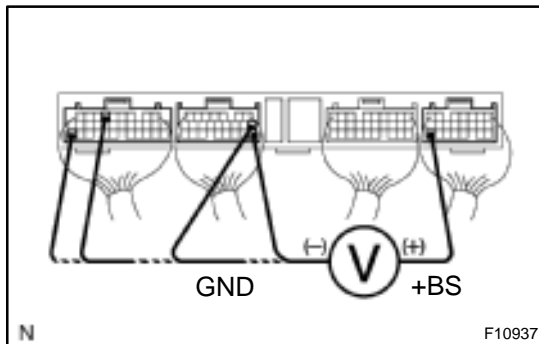

In case of not using TOYOTA hand-held tester:

PREPARATION:

Remove the ABS ECU with connectors still connected.

CHECK:

Measure voltage between terminals +BS and GND of ABS ECU connector.

OK:

Voltage: 10 – 14 V

OK

Check and replace brake ECU.

NG


4 Check for open circuit (to +BS) in harness and connector between brake ECU and battery (See page [IN-41](#)).

NG

Repair or replace harness or connector.

OK

5 Check continuity between terminal GND of brake ECU connector and body ground.

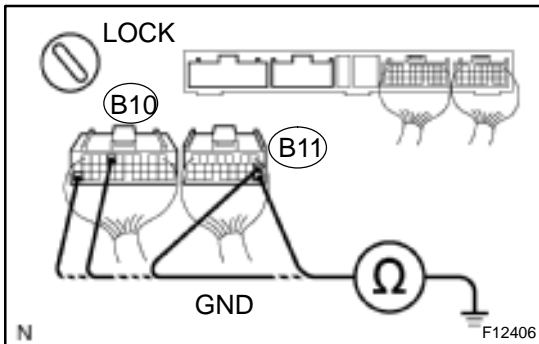

PREPARATION:

Disconnect the 2 connectors (B10, B11) from the brake ECU.

CHECK:

Measure resistance between terminals GND of brake ECU harness side connector and body ground.

OK:


Resistance: 1 Ω or less

NG

Repair or replace harness or connector.

OK

6 Check brake actuator solenoid.

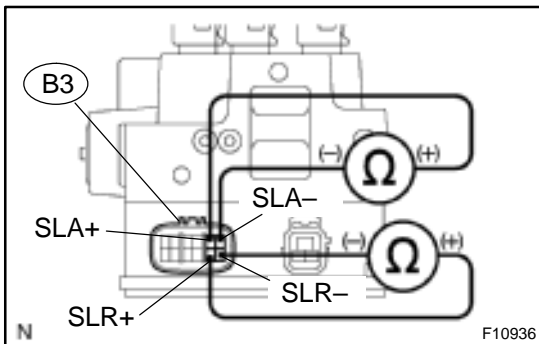

PREPARATION:

Disconnect the connector (B3) from the brake actuator.

CHECK:

Check continuity between each of terminals SLA+ and SLA-, and terminals SLR+ and SLR- of brake actuator.

OK:

Continuity

HINT:

Resistance of each solenoid approx. 2.3 Ω at 20 °C (68 °F).

NG

Replace brake actuator.

OK

7	Check for short circuit in harness and connector between brake ECU and brake actuator (See page IN-41).
---	--

NG

Repair or replace harness or connector.

OK


Check and replace brake ECU.

DTC	C1220–C1222/C1246/46	Each Hydraulic Pressure Sensor Circuit
------------	-----------------------------	---

CIRCUIT DESCRIPTION

DTC No.	DTC Detecting Condition	Trouble Area
C1220/46	<p>Either of the following 1. or 2. is detected:</p> <ol style="list-style-type: none"> When the ignition switch is ON, the condition that the voltage of the terminal PREG in brake ECU is 0.14 V or less or 4.85 V or more, or that of terminal VREG is 4.4 V or less or 5.6 V or more continues for 1.2 sec. or more. At a vehicle speed of 15 km/h (24 mph) or more, when both the brake switch and hydro motor are OFF, the voltage ratio of the terminal PREG to VREG of brake ECU is 0.06 or less or 0.14 or more continues for 8 sec. and this condition occurs consecutively 10 times. 	<ul style="list-style-type: none"> • Regulator (REG) pressure sensor • Regulator (REG) pressure sensor circuit • Brake actuator
C1221/46	<p>Either of the following 1. or 2. is detected:</p> <ol style="list-style-type: none"> When the ignition switch is ON, the condition that the voltage of the terminal PFR in brake ECU is 0.14 V or less or 4.85 V or more, or that of terminal VFR is 4.4 V or less or 5.6 V or more continues for 1.2 sec. or more. At a vehicle speed of 15 km/h (24 mph) or more, when both the brake switch and hydro motor are OFF, the voltage ratio of the terminal PFR to VFR of brake ECU is 0.06 or less or 0.14 or more continues for 8 sec. and this condition occurs consecutively 10 times. 	<ul style="list-style-type: none"> • Front (FR) pressure sensor • Front (FR) pressure sensor circuit • Brake actuator
C1222/46	<p>Either of the following 1. or 2. is detected:</p> <ol style="list-style-type: none"> When the ignition switch is ON, the condition that the voltage of the terminal PRR in brake ECU is 0.14 V or less or 4.85 V or more, or that of terminal VRR is 4.4 V or less or 5.6 V or more continues for 1.2 sec. or more. At a vehicle speed of 15 km/h (24 mph) or more, when both the brake switch and hydro motor are OFF, the voltage ratio of the terminal PRR to VRR of brake ECU is 0.06 or less or 0.14 or more continues for 8 sec. and this condition occurs consecutively 10 times. 	<ul style="list-style-type: none"> • Rear (RR) pressure sensor • Rear (RR) pressure sensor circuit • Brake actuator
C1246/46	<p>Either of the following 1. or 2. is detected:</p> <ol style="list-style-type: none"> When the ignition switch is ON, the condition that the voltage of the terminal PMC in brake ECU is 0.14 V or less or 4.85 V or more, or that of terminal VMC is 4.4 V or less or 5.6 V or more continues for 1.2 sec. or more. At a vehicle speed of 15 km/h (24 mph) or more, when both the brake switch and hydro motor are OFF, the voltage ratio of the terminal PMC to VMC of brake ECU is 0.06 or less or 0.14 or more continues for 8 sec. and this condition occurs consecutively 10 times. 	<ul style="list-style-type: none"> • Master cylinder (M/C) pressure sensor • Master cylinder (M/C) pressure sensor circuit • Brake actuator

WIRING DIAGRAM

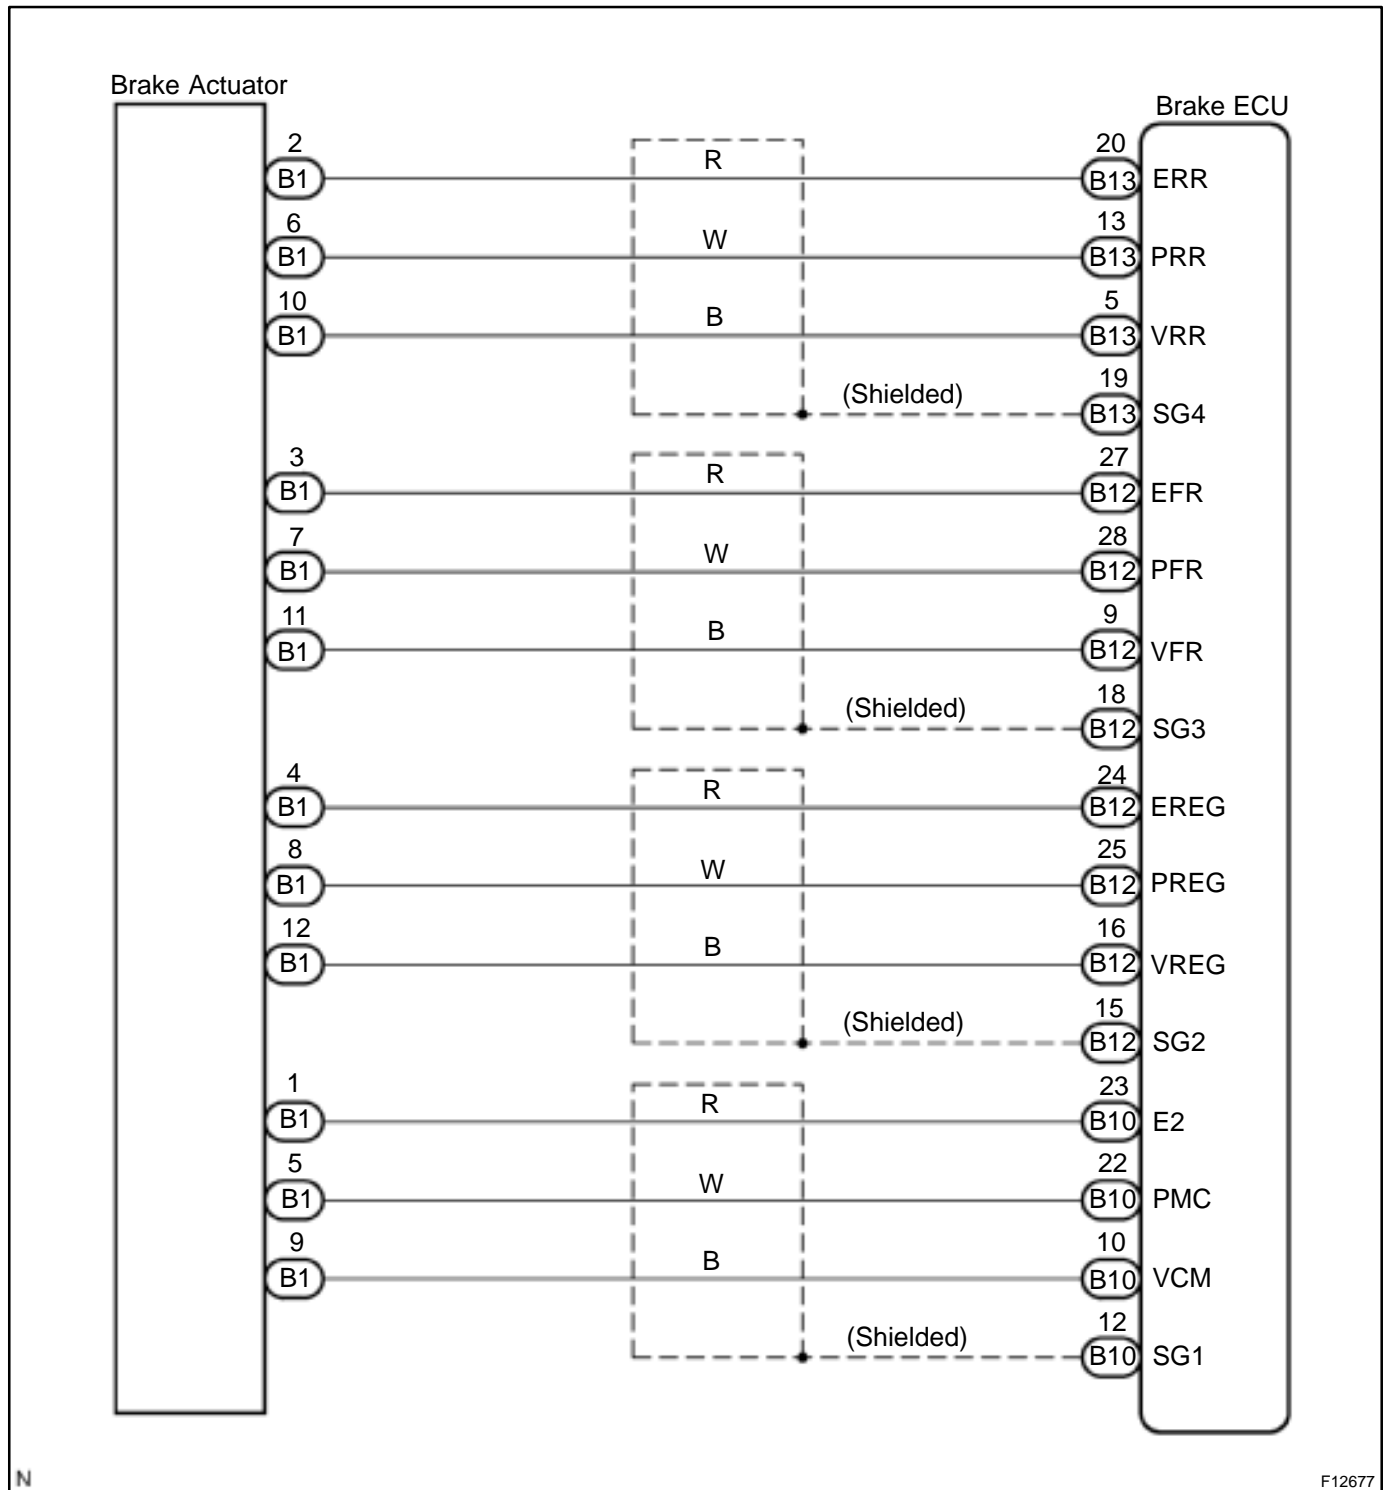

INSPECTION PROCEDURE

HINT:

Start the inspection from step 1 in case of using the TOYOTA hand-held tester and start from step 2 in case of not using the TOYOTA hand-held tester.

1	Check output value of the each pressure sensor.
---	---

PREPARATION:

- (a) Connect the TOYOTA hand-held tester to the DLC3.
- (b) Turn the ignition switch ON, and push the TOYOTA hand-held tester main switch ON.
- (c) Select the DATALIST mode on the TOYOTA hand-held tester.

CHECK:

Check that the brake fluid pressure value of the master cylinder pressure sensor, regulator pressure sensor, front pressure sensor and rear pressure sensor displayed on the TOYOTA hand-held tester is changing when depressing the brake pedal.

OK:


Brake fluid pressure value must be changing.

OK

Go to step 4.

NG

2 Check each pressure sensor.

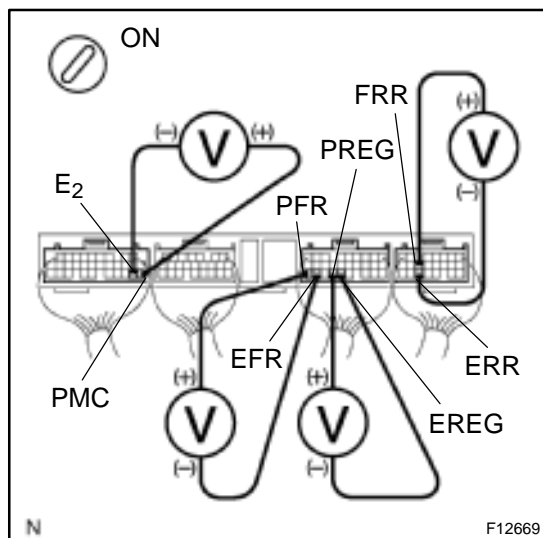

PREPARATION:

(a) Install the LSPV gauge to the front caliper bleeder plug portion, and bleed LSPV gauge.

SST 09709-29018

(b) Remove the brake ECU with connectors still connected.

CHECK:

Turn the ignition switch ON and depress the brake pedal, then check the relation between the fluid pressure and voltage of terminals of each pressure sensor shown below with the connector still connected.

Pressure sensor name	Symbols
Master cylinder pressure sensor	PMC – E ₂
Regulator pressure sensor	PREG – EREG
Front pressure sensor	PFR – EFR
Rear pressure sensor	PRR – ERR

OK:

Front brake caliper fluid pressure	Voltage
0 kPa (0 Kg/cm ² , 0 psi)	0.37 – 0.63 V
5,883 kPa (60 kg/cm ² , 853 psi)	1.57 – 1.83 V
11,768 kPa (120 kg/cm ² , 1,706 psi)	2.77 – 3.03 V

HINT:

It should be taken into account that the difference in voltage between terminals is caused by the slightly different pressure applied to each pressure sensor.

OK

Go to step 4.

NG

3 Check for open and short circuit in harness and connector between each pressure sensor and brake ECU (See page IN-41).

NG

Repair or replace harness or connector.

OK

Replace brake actuator.

4	Check whether or not the brake ECU terminal STP input voltage is changed when the stop light switch is turned on and off.
---	---

NO

Check the stop light switch circuit (See page [BE-2](#)).

YES


Check and replace brake ECU.


DTC	C1241/41	IG Power Source Circuit
------------	-----------------	--------------------------------

CIRCUIT DESCRIPTION

DTC No.	DTC Detecting Condition	Trouble Area
C1241/41	<p>Either of the following 1. 2. or 3. is detected:</p> <ol style="list-style-type: none"> While a vehicle is driven at a speed of 3 km/h (5 mph), the condition that the voltage of the terminal IG1 in brake ECU is 9 V or less continues for 10 sec. or more. When the solenoid relay is ON, the contact point of the relay becomes OFF for 0.2 sec. or more due to the voltage decrease of the terminal IG1 in brake ECU. When ignition switch is ON, the voltage of terminal IG1 in brake ECU remains in 17 V or more for 1.2 sec. or more. 	<ul style="list-style-type: none"> • Battery • Charging system • Power source circuit

WIRING DIAGRAM

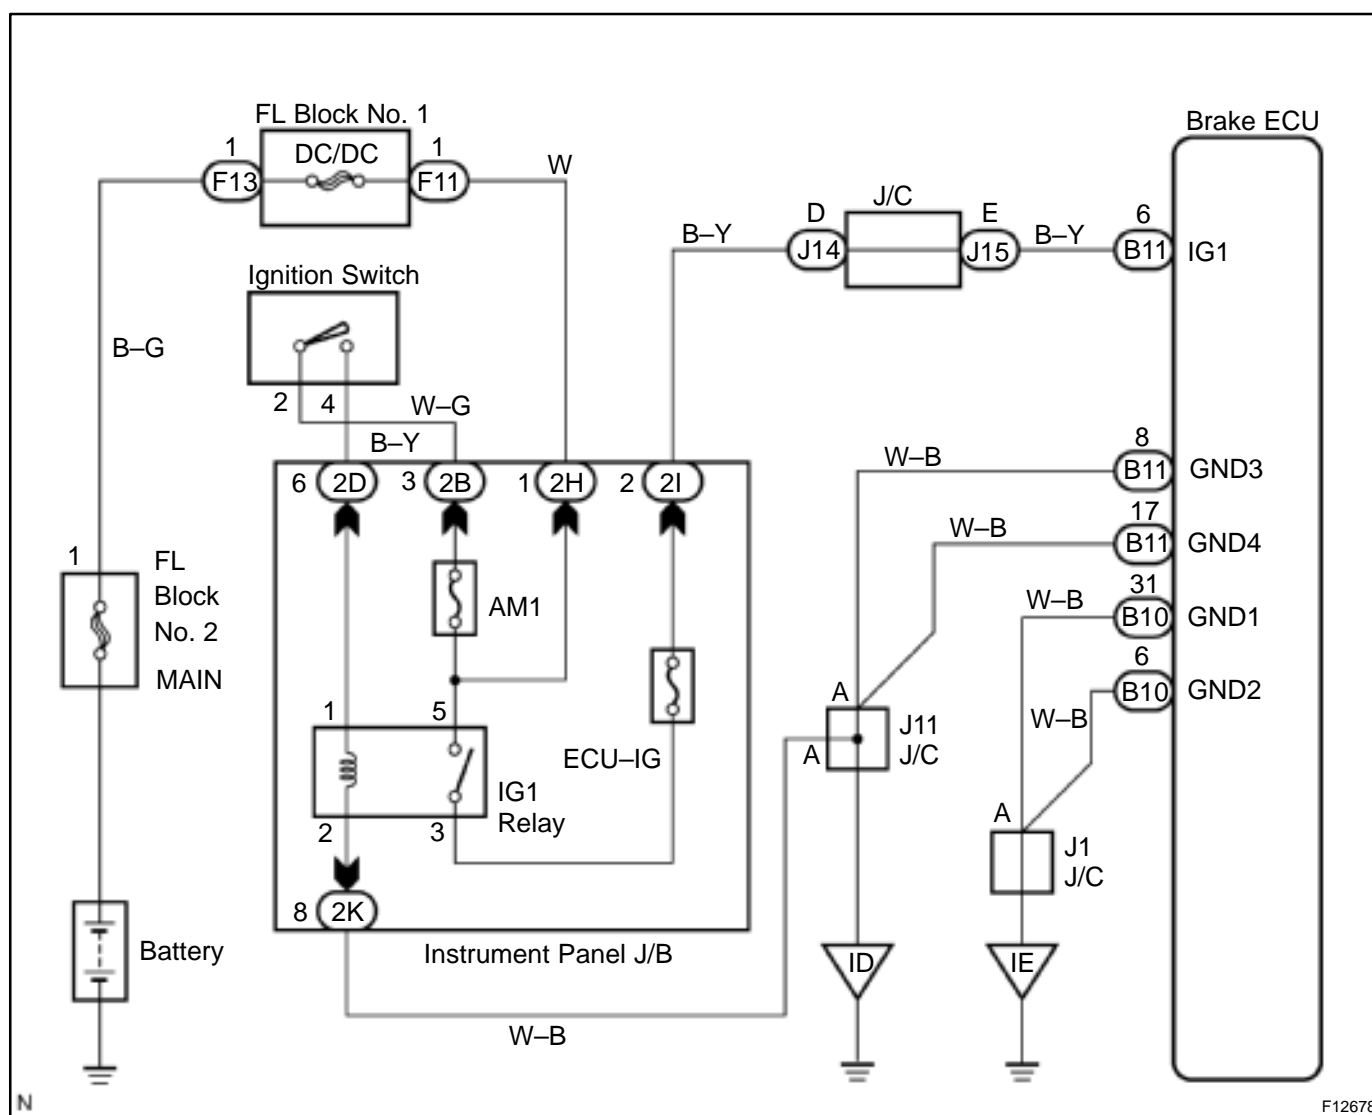

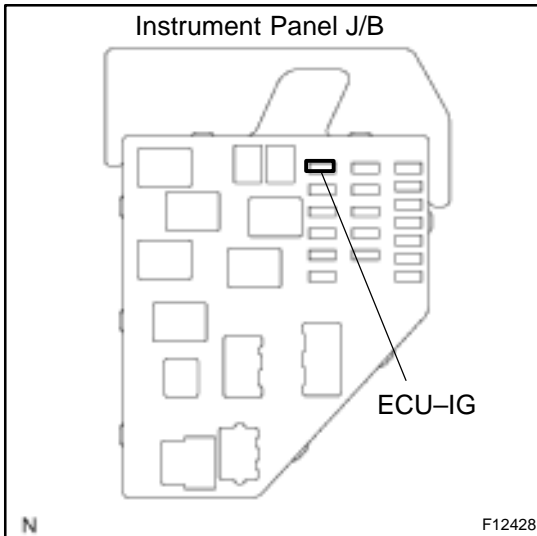INSPECTION PROCEDURE**1 Check ECU-IG fuse.****PREPARATION:**

Remove the ECU-IG fuse from instrument panel J/B.

CHECK:

Check continuity of ECU-IG fuse.

OK:

Continuity

NG

Check for short circuit in all the harness and components connected to ECU-IG fuse (See attached wiring diagram).

OK

2 Check battery positive voltage.**OK:**

Voltage: 10 – 14 V

NG

Check and repair the charging system (See page [HV-39](#)).

OK

3 Check voltage of the ECU IG power source.

In case of using the TOYOTA hand-held tester:

PREPARATION:


- Connect the TOYOTA hand-held tester to the DLC3.
- Turn the ignition switch ON, and push the TOYOTA hand-held tester main switch ON.
- Select the DATALIST mode on the TOYOTA hand-held tester.

CHECK:

Check the voltage condition output from the ECU displayed on the TOYOTA hand-held tester.

OK:

"Normal" is displayed.

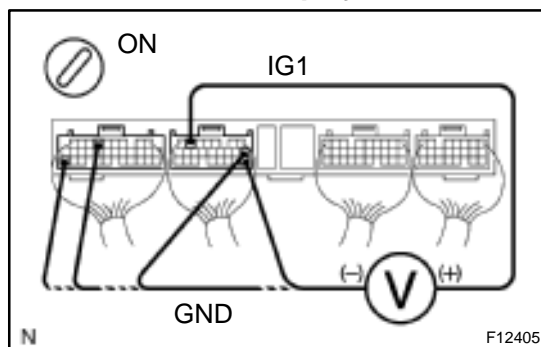

In case of not using the TOYOTA hand-held tester:

PREPARATION:

Remove the brake ECU with connectors still connected.

CHECK:

Turn the ignition switch ON, measure voltage between terminals IG1 and GND of brake ECU connector.

OK:


Voltage: 10 – 14 V

OK

Check and replace brake ECU.

NG

4 Check continuity between terminal GND of brake ECU connector and body ground.

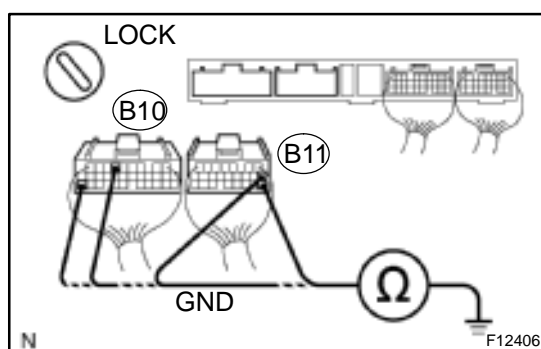

PREPARATION:

Disconnect the 2 connectors (B10, B11) from the brake ECU.

CHECK:

Measure resistance between terminal GND of brake ECU harness side connector and body ground.

OK:

Resistance: 1 Ω or less

NG

Repair or replace harness or connector.

OK


Check for open circuit in harness and connector between brake ECU and battery (See page [IN-41](#)).

DTC	C1242/42	IG2 Power Source Circuit
------------	-----------------	---------------------------------

CIRCUIT DESCRIPTION

DTC No.	DTC Detecting Condition	Trouble Area
C1242/42	When the vehicle is driven at a speed of 3km/h (5 mph) or more, an open condition in IG2 circuit in brake ECU continues for 7 sec. or more.	<ul style="list-style-type: none"> • Battery • Charging system • Power source circuit

WIRING DIAGRAM

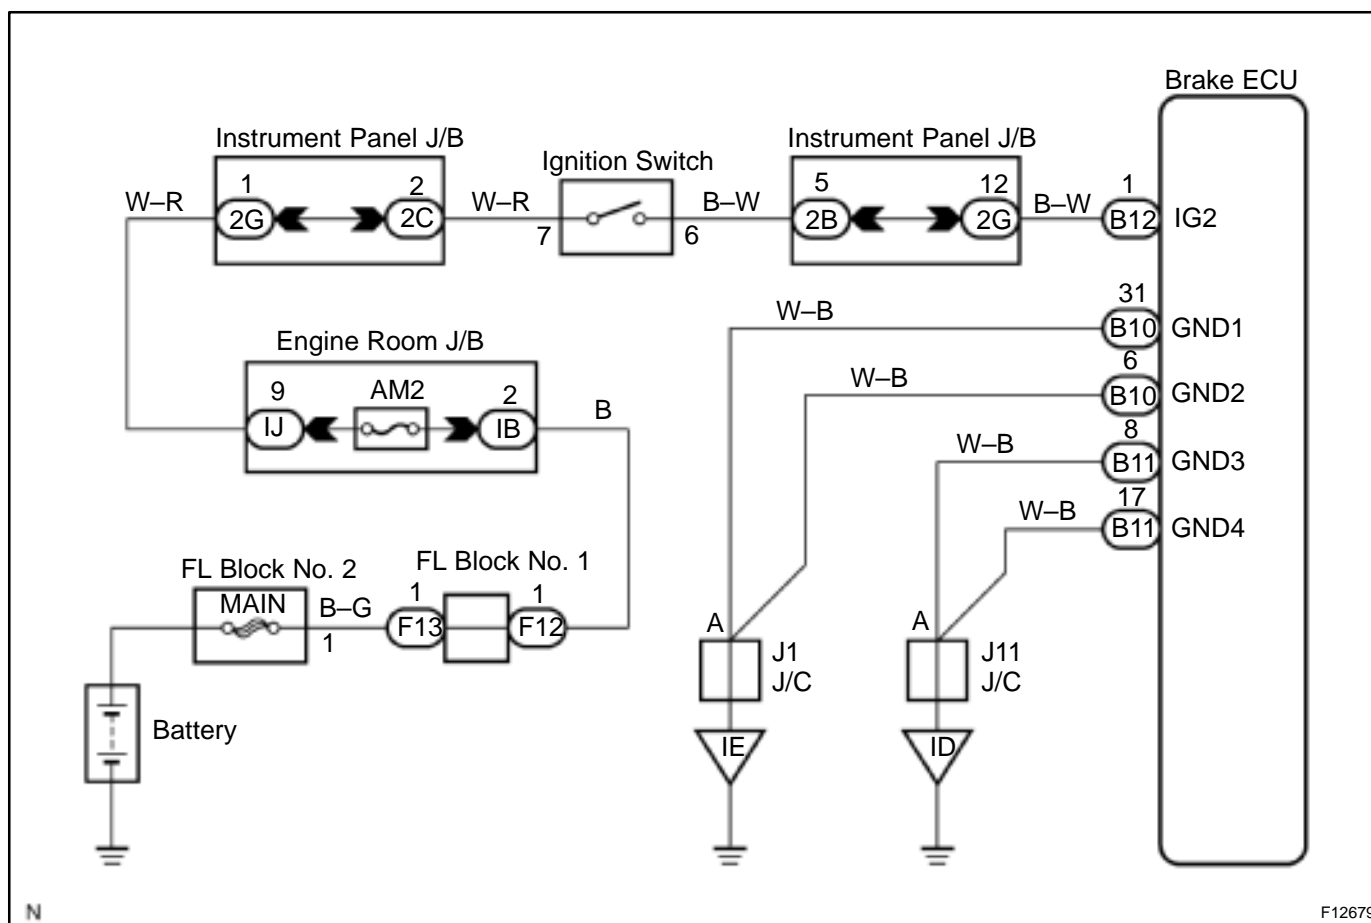

INSPECTION PROCEDURE

1	Check battery positive voltage.
---	---------------------------------

OK:

Voltage: 10 – 14 V

NGCheck and repair the charging system (See page [HV-39](#)).**OK**

2	Check voltage of the ECU IG power source.
---	---

In case of using the TOYOTA hand-held tester:**PREPARATION:**


- (a) Connect the TOYOTA hand-held tester to the DLC3.
- (b) Turn the ignition switch ON, and push the TOYOTA hand-held tester main switch ON.
- (c) Select the DATALIST mode on the TOYOTA hand-held tester.

CHECK:

Check the voltage condition output from the ECU displayed on the TOYOTA hand-held tester.

OK:

"Normal" is displayed.

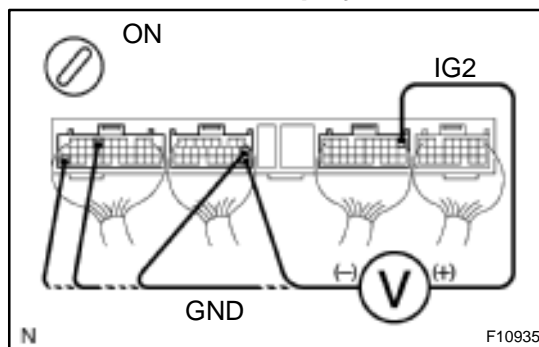**In case of not using the TOYOTA hand-held tester:****PREPARATION:**

Remove the brake ECU with connectors still connected.

CHECK:

Turn the ignition switch ON, measure voltage between terminals IG2 and GND of brake ECU connector.


OK:

Voltage: 10 – 14 V

OK

Check and replace brake ECU.

NG

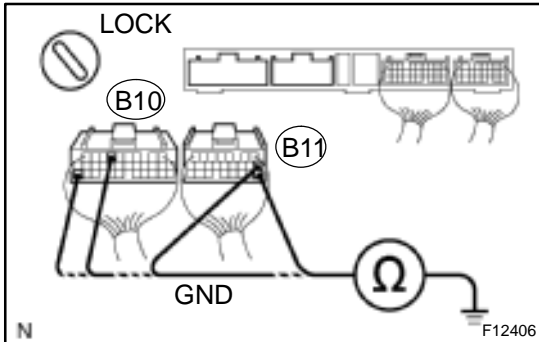3 Check continuity between terminal GND of brake ECU connector and body ground.**PREPARATION:**

Disconnect the 2 connectors (B10, B11) from the brake ECU.

CHECK:

Measure resistance between terminals GND of brake ECU harness side connector and body ground.

OK:

Resistance: 1 Ω or less

NG

Repair or replace harness or connector.

OK


Check for open circuit in harness and connector between brake ECU and battery (See page [IN-41](#)).

DTC	C1249/49	Stop Light Switch Circuit
------------	-----------------	----------------------------------

CIRCUIT DESCRIPTION

DTC No.	DTC Detecting Condition	Trouble Area
C1249/49	When the ignition switch is ON, the condition that the terminal STP in brake ECU is 3 – 12 V continues for 1 sec. or more.	<ul style="list-style-type: none"> Stop light switch Stop light switch circuit

WIRING DIAGRAM

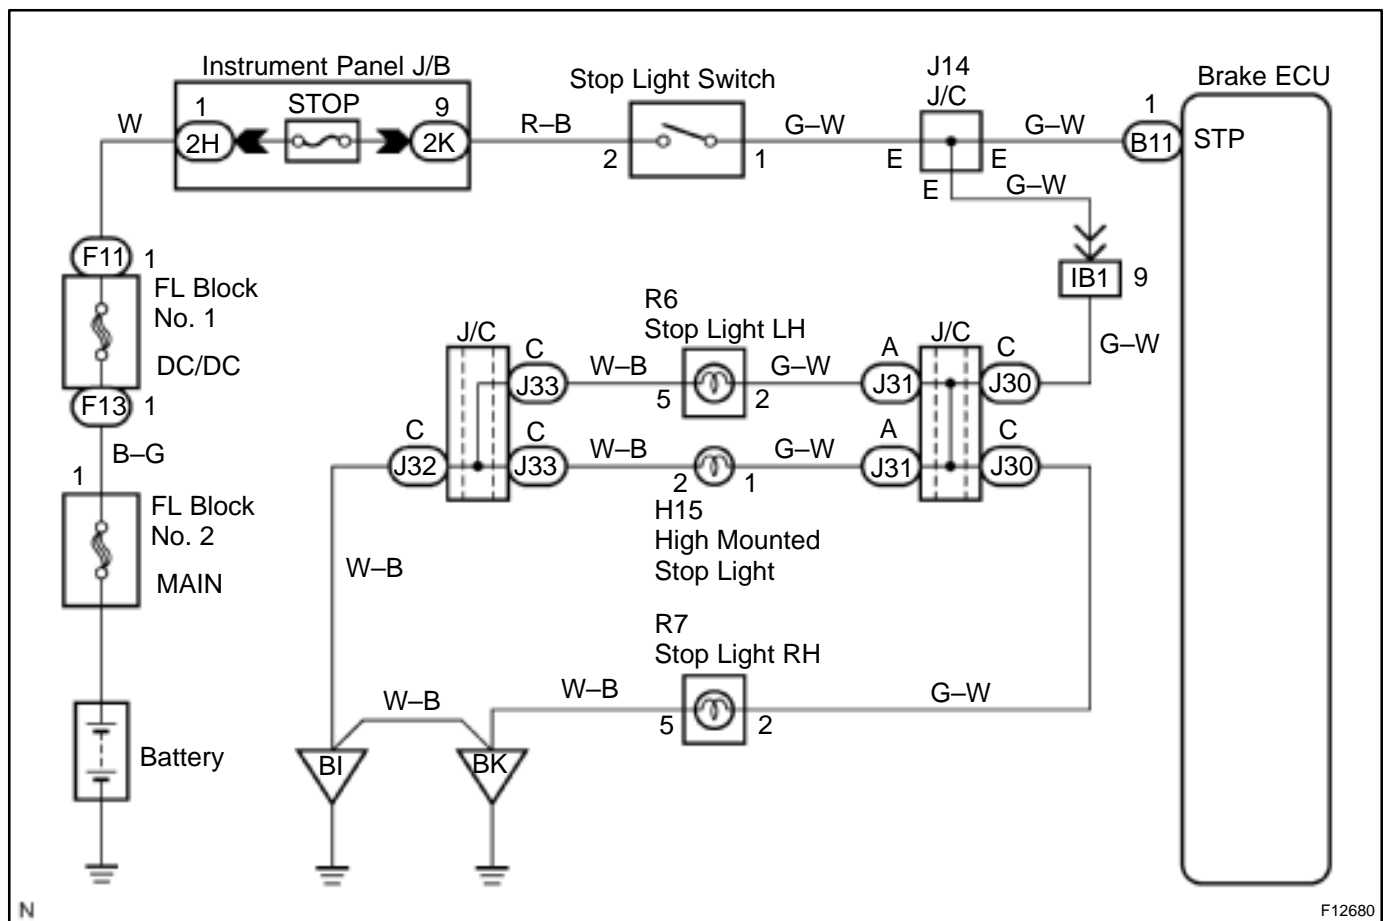

cardiagn.com

INSPECTION PROCEDURE

- | | |
|---|---|
| 1 | Check operation of the stop light switch. |
|---|---|

CHECK:

Check that the stop light lights up when brake pedal is depressed and turns off when the brake pedal is released.

OK

Go to step 3.

NG


- | | |
|---|--|
| 2 | Check stop light circuit (See page BE-2). |
|---|--|

NG

Repair or replace stop light circuit.

OK

- | | |
|---|--|
| 3 | Check voltage between terminal STP of brake ECU and body ground. |
|---|--|

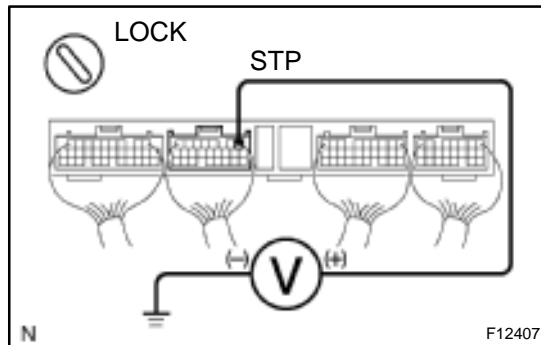**PREPARATION:**

Remove the brake ECU with connectors still connected.

CHECK:

Measure voltage between terminal STP of brake ECU and body ground when brake pedal is depressed.

OK:

Voltage: 8 – 14 V

OK

Check and replace brake ECU.

NG

4	Check for open circuit in harness and connector between brake ECU and stop light switch (See page IN-41).
---	--

NG

Repair or replace harness or connector.

OK


Proceed to next circuit inspection on problem symptoms table (See page [DI-365](#)).

DTC	C1251/51	Hydraulic Brake Booster Pump Motor Malfunction
------------	-----------------	---

CIRCUIT DESCRIPTION


DTC No.	DTC Detecting Condition	Trouble Area
C1251/51	<p>Either of the following 1. or 2. is detected:</p> <ol style="list-style-type: none"> 1. After turning the ignition switch ON, the current of more than 28A flows to the motor for more than 1 sec. 2. After turning the ignition switch ON, less than 7A change in current is detected more than 3 times in a row when the motor is ON. 	Hydraulic brake booster pump motor

WIRING DIAGRAM

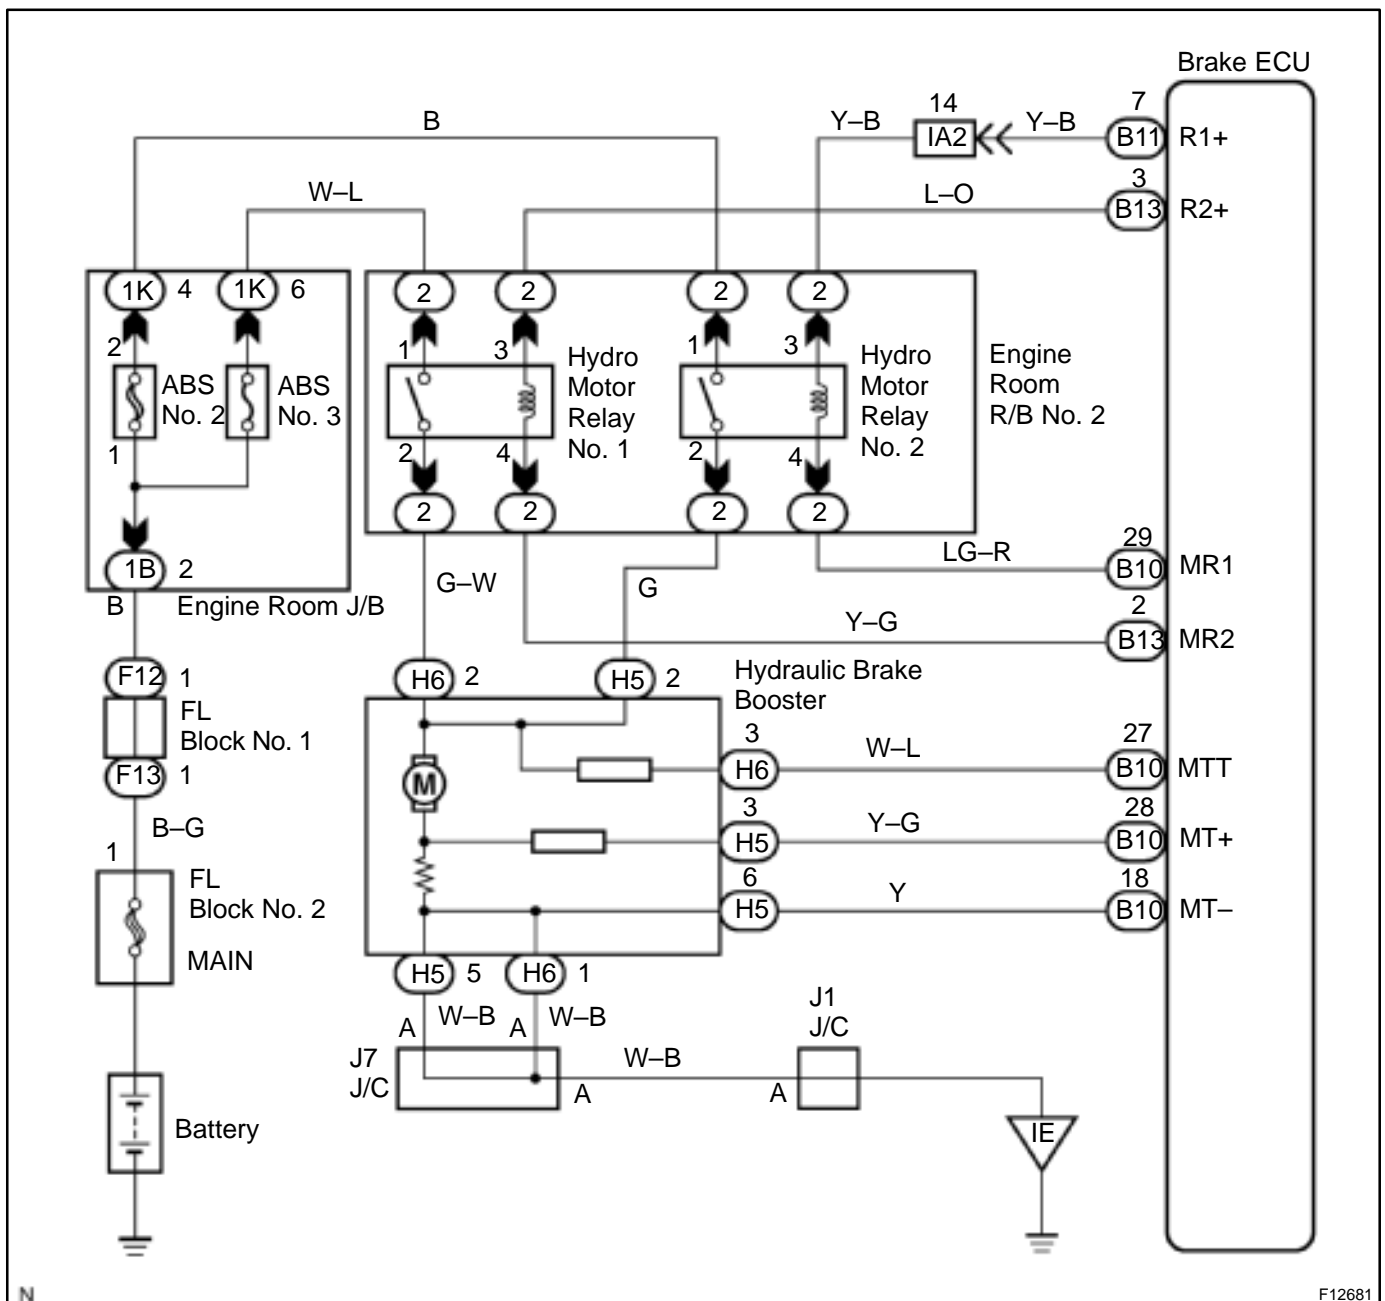

INSPECTION PROCEDURE

1 Check operation of hydraulic brake booster pump motor.

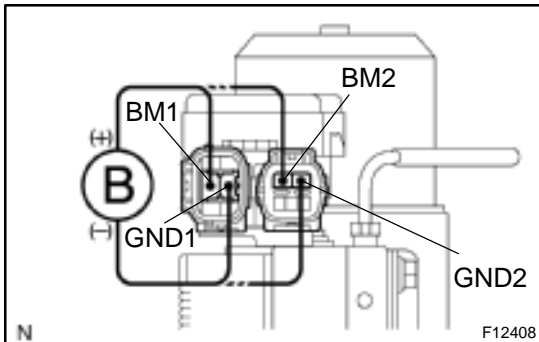**PREPARATION:**

Disconnect the 2 connectors from the hydraulic brake booster.

CHECK:

Connect battery positive \oplus lead to BM1 or BM2 terminal and battery negative \ominus lead to GND1 or GND2 terminal of the hydraulic brake booster (pump motor) connector.

OK:


The operation sound of the pump motor should be heard.

NG

Go to step 4.

OK

2 Check hydraulic brake booster resistance.

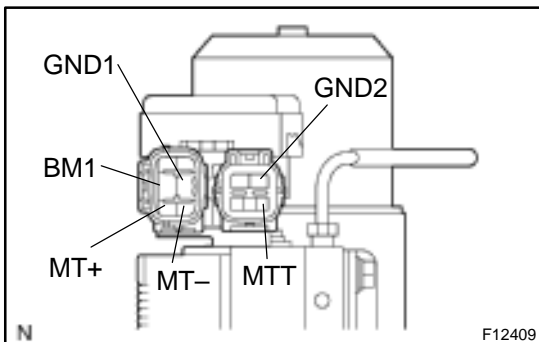**CHECK:**

Check resistance between terminals MT+ and MT-, BM1 and MTT, BM2 and MTT, GND1 and MT+, GND2 and MT+ of the hydraulic brake booster connector.

OK:

30 – 36 Ω

NG

Replace the hydraulic brake booster assembly.

OK

- 3** Check for open circuit in harness and connector between hydraulic brake booster and brake ECU (See page [IN-41](#)).

NG

Repair or replace harness or connector.

OK

Check and replace brake ECU.

- 4** Check for open or short circuit in harness and connector between hydraulic brake booster pump motor and hydraulic brake booster (See page [IN-41](#)).

NG

Replace wire harness.

OK

- 5** Check hydraulic brake booster pump motor (See page [BR-48](#)).

NG

Replace hydraulic brake booster pump motor.

OK


Replace hydraulic brake booster.

DTC	C1252/52	Hydraulic Brake Booster Pump Motor ON Time Abnormally Long
------------	-----------------	---

CIRCUIT DESCRIPTION


DTC No.	DTC Detecting Condition	Trouble Area
C1252/52	After turning the ignition switch ON, when the power is supplied to the pump motor for more than 5 minutes.	<ul style="list-style-type: none"> Hydraulic brake booster pump motor Hydraulic brake booster pump motor circuit Pressure switch (PH or PL)

WIRING DIAGRAM

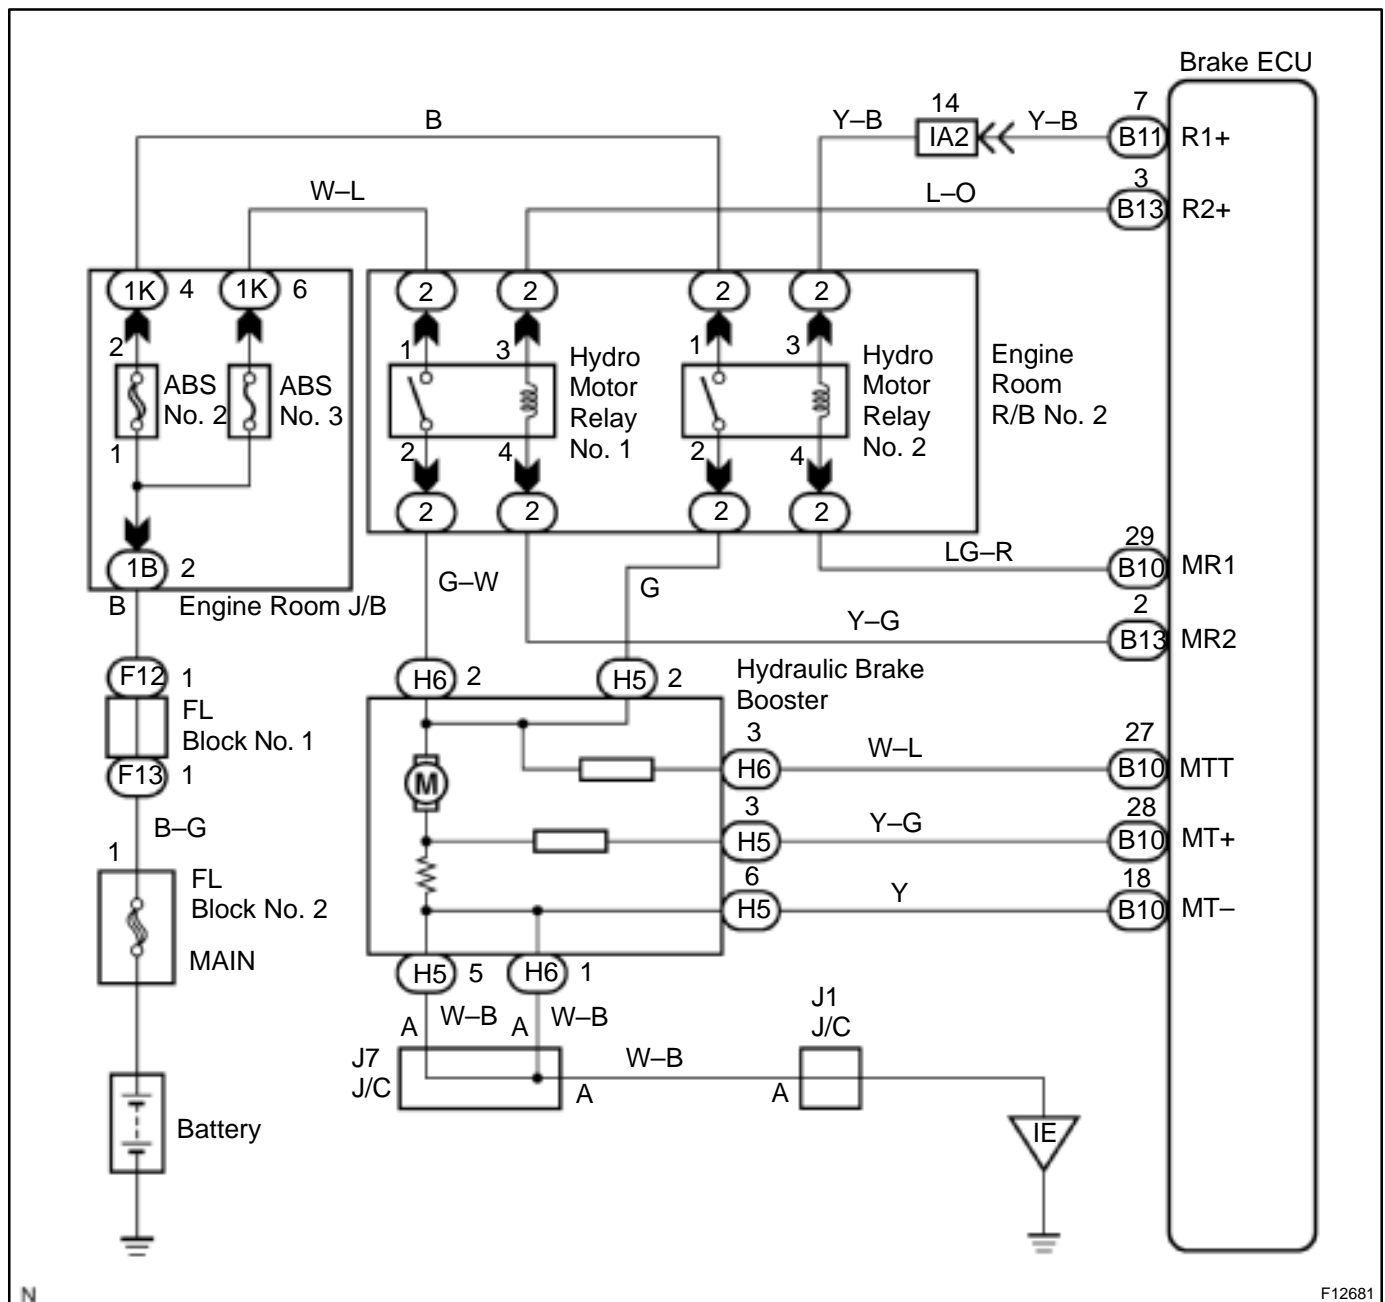

INSPECTION PROCEDURE

1 Check operation of hydraulic brake booster pump motor.

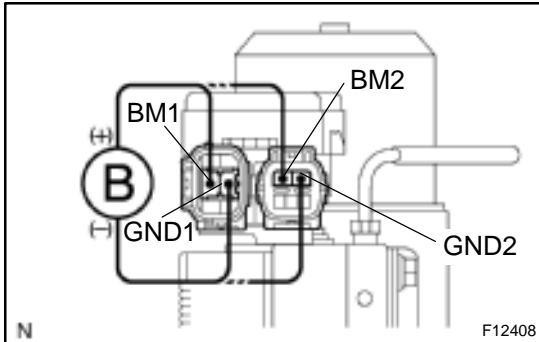**PREPARATION:**

Disconnect the 2 connectors from the hydraulic brake booster.

CHECK:

Connect battery positive \oplus lead to BM1 or BM2 terminal and battery negative \ominus lead to GND1 or GND2 terminal of the hydraulic brake booster (pump motor) connector.

OK:

The operation sound of the pump motor should be heard.

NG

Go to step 9.

OK

2 Check for short circuit in harness and connector between BM1 or BM2 of hydraulic brake booster and hydro motor relay (See page [IN-41](#)).

NG

Repair or replace harness or connector.

OK

3 Check for short circuit in harness and connector between MTT of hydraulic brake booster and brake ECU (See page [IN-41](#)).

NG

Repair or replace harness or connector.

OK

4	Check pressure switch (PH).
----------	------------------------------------

In case of using the TOYOTA hand-held tester:

PREPARATION:

- (a) Connect the TOYOTA hand-held tester to the DLC3.
- (b) Turn the ignition switch ON, and push the TOYOTA hand-held tester main switch ON.
- (c) Select the DATALIST mode on the TOYOTA hand-held tester.

CHECK:

Depress the brake pedal more than 40 times with the ignition switch OFF then turn the ignition switch ON and check the pressure switch (PH) condition.

HINT:

When a pressure in power supply system is released, reaction force becomes heavy and stroke becomes shorter.


OK:

"OFF" turns to "ON".

HINT:

OFF: Low pressure

ON: High pressure

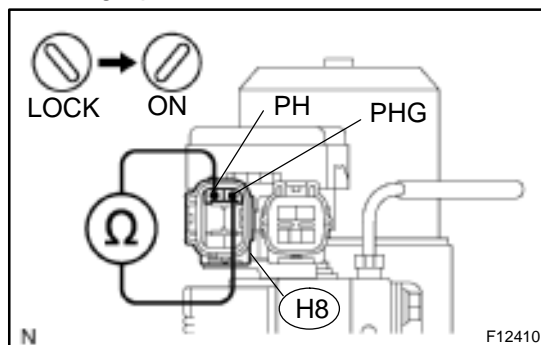

In case of not using the TOYOTA hand-held tester:

PREPARATION:

- (a) Disconnect the connector (H8) from the hydraulic brake booster.
- (b) With the ignition switch OFF, depress the brake pedal more than 40 times to decrease the accumulator pressure.

HINT:

When a pressure in power supply system is released, reaction force becomes heavy and stroke becomes shorter.

CHECK:

Measure resistance between terminals PH and PHG of hydraulic brake booster connector.

OK:

Resistance: 1.0 kΩ

PREPARATION:

- (a) Connect the connector (H8) to the hydraulic brake booster.
- (b) Disconnect the connector (H8) after ignition switch has been ON and the pump motor has stopped.

CHECK:

Measure resistance between terminals PH and PHG of hydraulic brake booster connector.

OK:

Resistance: 0 Ω

HINT:

After inspection, connect the connector and clear the DTC (See page [DI-353](#)).

NG

Replace hydraulic brake booster assembly.

OK

5 Check pressure switch (PL).**In case of using TOYOTA hand-held tester:****PREPARATION:**

- (a) Connect the TOYOTA hand-held tester to the DLC3.
- (b) Turn the ignition switch ON, and push the TOYOTA hand-held tester main switch ON.
- (c) Select the DATALIST mode on the TOYOTA hand-held tester.

CHECK:

Depress the brake pedal more than 40 times with the ignition switch OFF then turn the ignition switch ON and check the pressure switch (PL) condition.


HINT:

When a pressure in power supply system is released, reaction force becomes heavy and stroke becomes shorter.

OK:**"OFF" turns to "ON".****HINT:**

OFF: Low pressure

ON: High pressure

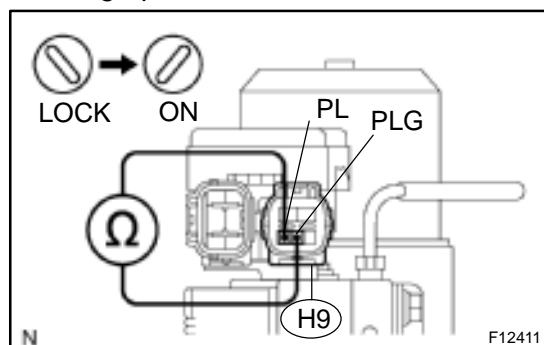**In case of not using TOYOTA hand-held tester:****PREPARATION:**

- (a) Disconnect the connector (H9) from the hydraulic brake booster.
- (b) With the ignition switch OFF, depress the brake pedal more than 40 times to decrease the accumulator pressure.

HINT:

When a pressure in power supply system is released, reaction force becomes heavy and stroke becomes shorter.

CHECK:

Measure resistance between terminals PL and PLG of hydraulic brake booster connector.

OK:**Resistance: 5.7 kΩ****PREPARATION:**

- (a) Connect the connector (H9) to the hydraulic brake booster.
- (b) Disconnect the connector (H9) after ignition switch has been ON and the pump motor has stopped.

CHECK:

Measure resistance between terminals PL and PLG of hydraulic brake booster connector.


OK:**Resistance: 1.0 kΩ**

HINT:

After inspection, connect the connector and clear the DTC (See page [DI-353](#)).

NG**Replace hydraulic brake booster assembly.****OK****6****Check for short circuit in harness and connector between pressure switch and brake ECU (See page [IN-41](#)).****NG****Repair or replace harness or connector.****OK**

7 Check hydro motor relay No. 1 and No. 2.

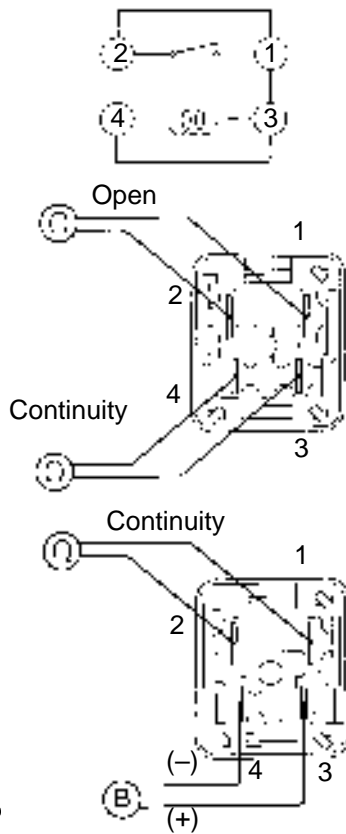

BE1840
R15257
R15258

F00044

PREPARATION:

Remove the hydro motor relay No. 1 and No. 2 from the engine room R/B No. 2.

CHECK:

Check continuity between each pair of terminal of motor relay.

OK:

Terminals 3 and 4	Continuity (Reference value *)
Terminals 1 and 2	Open

* Reference value:

Hydro motor relay No. 1 62 Ω

Hydro motor relay No. 2 54 Ω

CHECK:

- Apply battery positive voltage between terminals 3 and 4.
- Check continuity between terminals.

OK:

Terminals 1 and 2	Continuity
-------------------	------------

NG

Replace hydro motor relay.

OK

8 Check for short circuit in harness and connector between hydro motor relay No. 1, No. 2 and brake ECU (See page IN-41).

NG

Repair or replace harness or connector.

OK

Check and replace brake ECU.

9	Check for open or short circuit in harness and connector between hydraulic brake booster pump motor and hydraulic brake booster (See page IN-41).
---	--

NG

Replace wire harness.

OK

10	Check hydraulic brake booster pump motor (See page BR-48).
----	---

NG

Replace hydraulic brake booster pump motor.

OK

Replace hydraulic brake booster.


DTC	C1253/53	Hydro Motor Relay Circuit
------------	-----------------	----------------------------------

CIRCUIT DESCRIPTION

The hydro motor relay supplies power to the hydraulic brake booster pump motor. While the ABS & EBD & RBS are activated, the ECU switches the motor relay ON and operates the hydraulic brake booster pump motor.

DTC No.	DTC Detecting Condition	Trouble Area
C1253/53	<p>When any of the following 1. through 4. is detected:</p> <ol style="list-style-type: none"> 1. After turning the ignition switch ON, open in the relay coil is detected for more than 1 sec. 2. When the pressure switch does not control motor driving, the status that the motor relay is always ON continues for more than 1 sec. due to short circuit. 3. When the pressure switch (PH) detects the low pressure or while the pump motor operates to increase the pressure, the status that the motor relay does not turn ON continues for more than 0.2 sec. 4. When pressure switch does not control motor driving, the status that the motor relay is always ON due to the welded contact continues for more than 2 sec. 	<ul style="list-style-type: none"> • Hydro motor relay • Hydro motor relay circuit

WIRING DIAGRAM

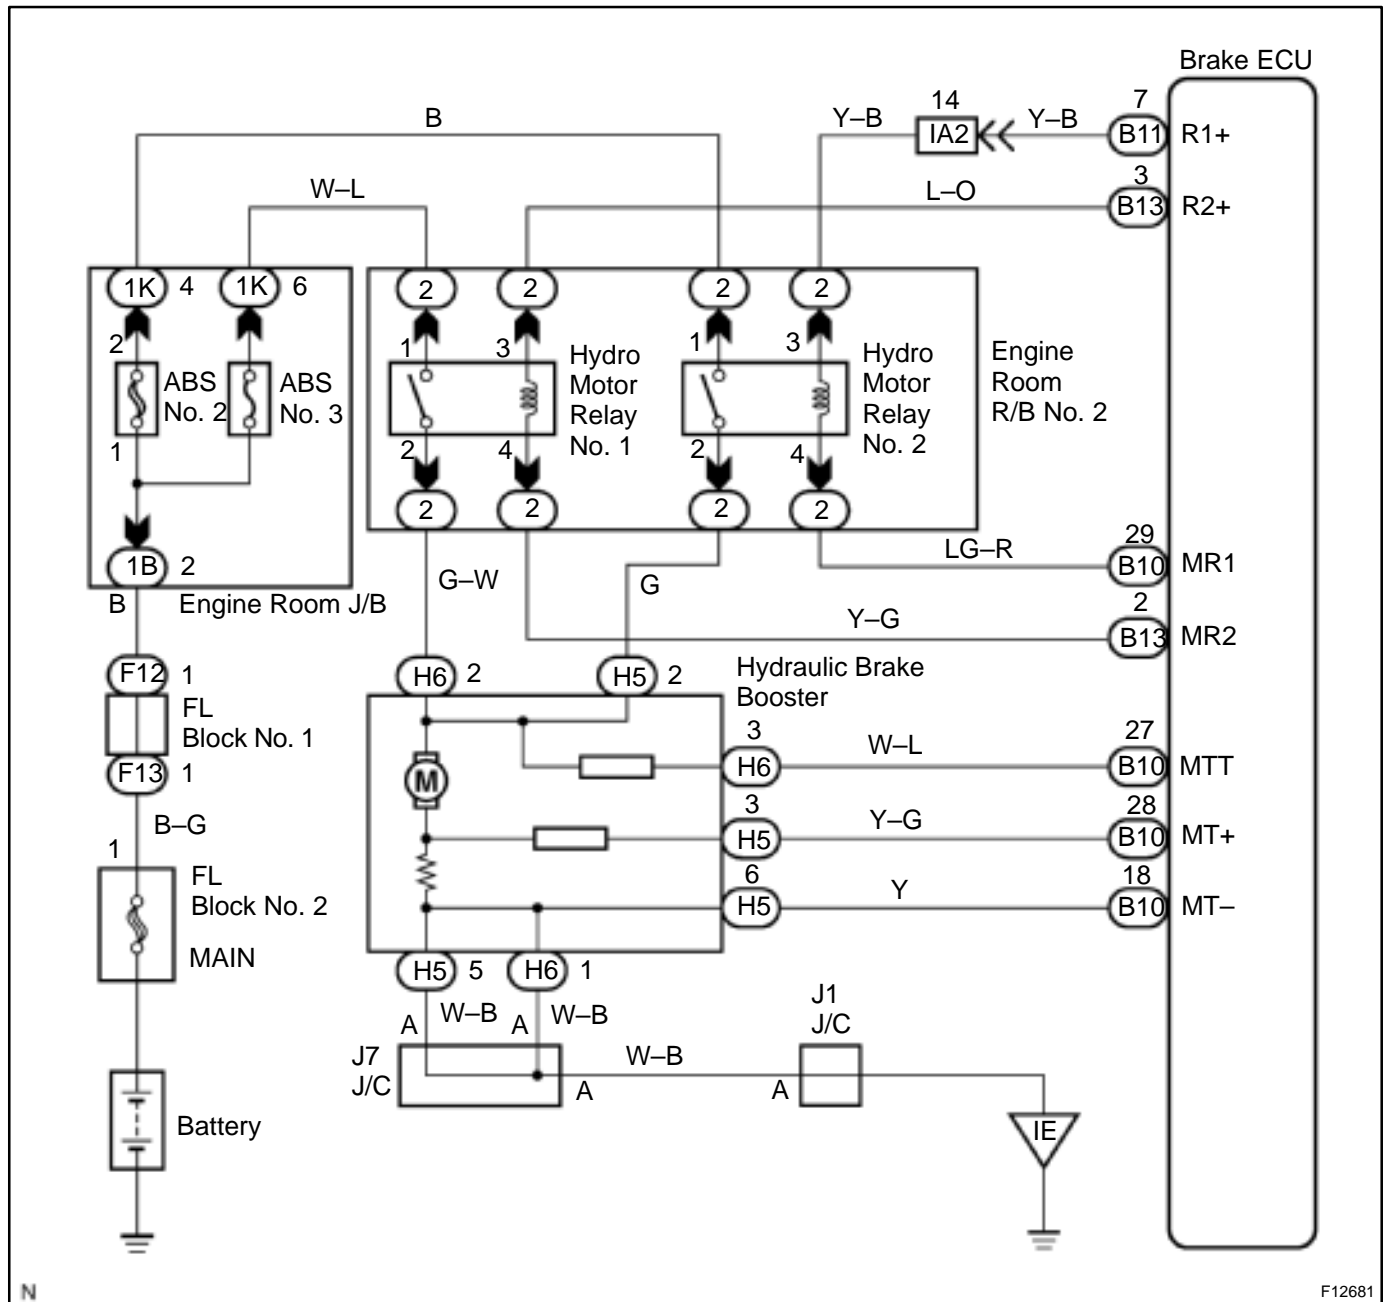

INSPECTION PROCEDURE

HINT:

Start the inspection from step 1, in case of using the TOYOTA hand-held tester and start from step 3, in case of not using TOYOTA hand-held tester.

1	Check hydro motor relay operation.
---	------------------------------------

PREPARATION:

- (a) Connect the TOYOTA hand-held tester to the DLC3.
- (b) Turn the ignition switch ON, and push the TOYOTA hand-held tester main switch ON.
- (c) Select the ACTIVE TEST mode on the TOYOTA hand-held tester.

CHECK:

Check the operation sound of the hydro motor relays individually when operating it with the TOYOTA hand-held tester.

OK:

The operation sound of the hydro motor relay should be heard.

NG

Go to step 3.

OK

2	Check for short circuit in harness and connector between MTT of hydraulic brake booster and brake ECU (See page IN-41).
---	--


NG

Repair or replace harness or connector.

OK

Check and replace brake ECU.

3 Check voltage between terminal 1 of engine room R/B No. 2 (for hydro motor relays) and body ground.

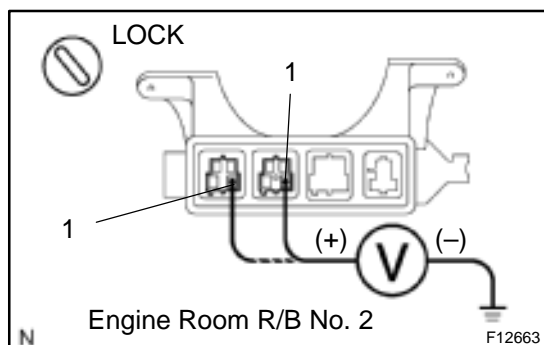

PREPARATION:

Remove the hydro motor relay No. 1 and No. 2 from the engine room R/B No. 2.

CHECK:

Measure voltage between terminal 1 of engine room R/B No. 2 (for hydro motor relays) and body ground.

OK:


Voltage: 10 – 14 V

NG

Check and repair harness or connector.

OK

4 Check hydro motor relay.

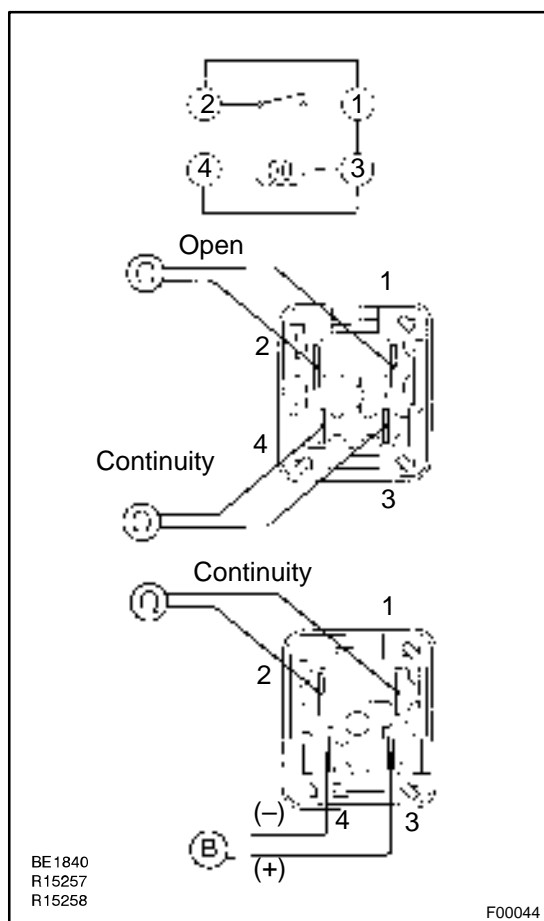

CHECK:

Check continuity between each pair of terminal of motor relay.

OK:

Terminals 3 and 4	Continuity (Reference value *)
Terminals 1 and 2	Open

* Reference value:

Hydro motor relay No. 1 62 Ω

Hydro motor relay No. 2 54 Ω

CHECK:

(a) Apply battery positive voltage between terminals 3 and 4.

(b) Check continuity between terminals.

OK:


Terminals 1 and 2	Continuity
-------------------	------------

NG

Replace hydro motor relay.

OK

5 Check continuity between each terminal 2 of engine room R/B No. 2 (for hydro motor relay) and terminal MTT of brake ECU.

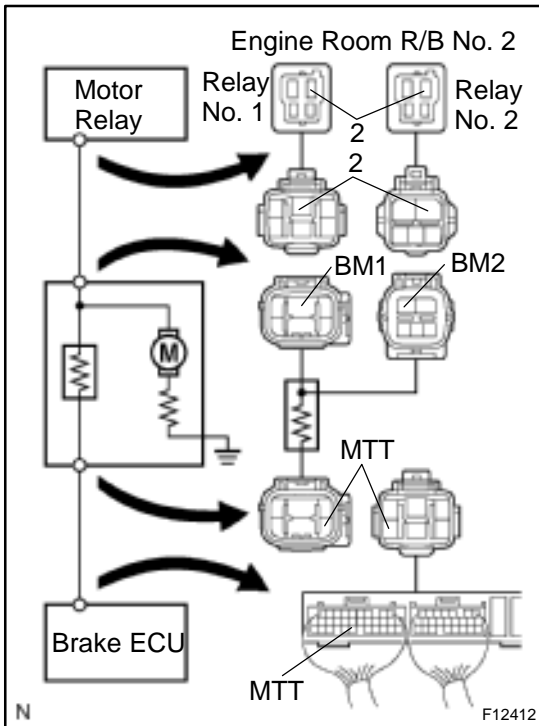

CHECK:

- Check continuity between terminal 2 of engine room R/B No. 2 (for hydro motor relay No. 1) and terminal MTT of brake ECU.
- Check continuity between terminal 2 of engine room R/B No. 2 (for hydro motor relay No. 2) and terminal MTT of brake ECU.

OK:

Continuity

HINT:

There is resistance of $33 \pm 3 \Omega$ between terminals BM1 or BM2 and MTT of the hydraulic brake booster.

NG

Repair or replace harness, connector or hydraulic brake booster.

OK

6 Check for open and short circuit in harness and connector between hydro motor relay No. 1 and No. 2 and brake ECU (See page IN-41).

NG

Repair or replace harness or connector.

OK


Check and replace brake ECU.

DTC	C1254/54	Pressure Switch Circuit
------------	-----------------	--------------------------------

CIRCUIT DESCRIPTION


DTC No.	DTC Detecting Condition	Trouble Area
C1254/54	<p>Either of the following 1. or 2. is detected:</p> <ol style="list-style-type: none"> 1. After turning the ignition switch ON, short or open circuit in pressure switch (PL) continued for more than 1 sec. 2. After turning the ignition switch ON open in pressure switch (PH) continued for more than 1 sec. 	<ul style="list-style-type: none"> • Pressure switch (PH or PL) • Pressure switch circuit

WIRING DIAGRAM

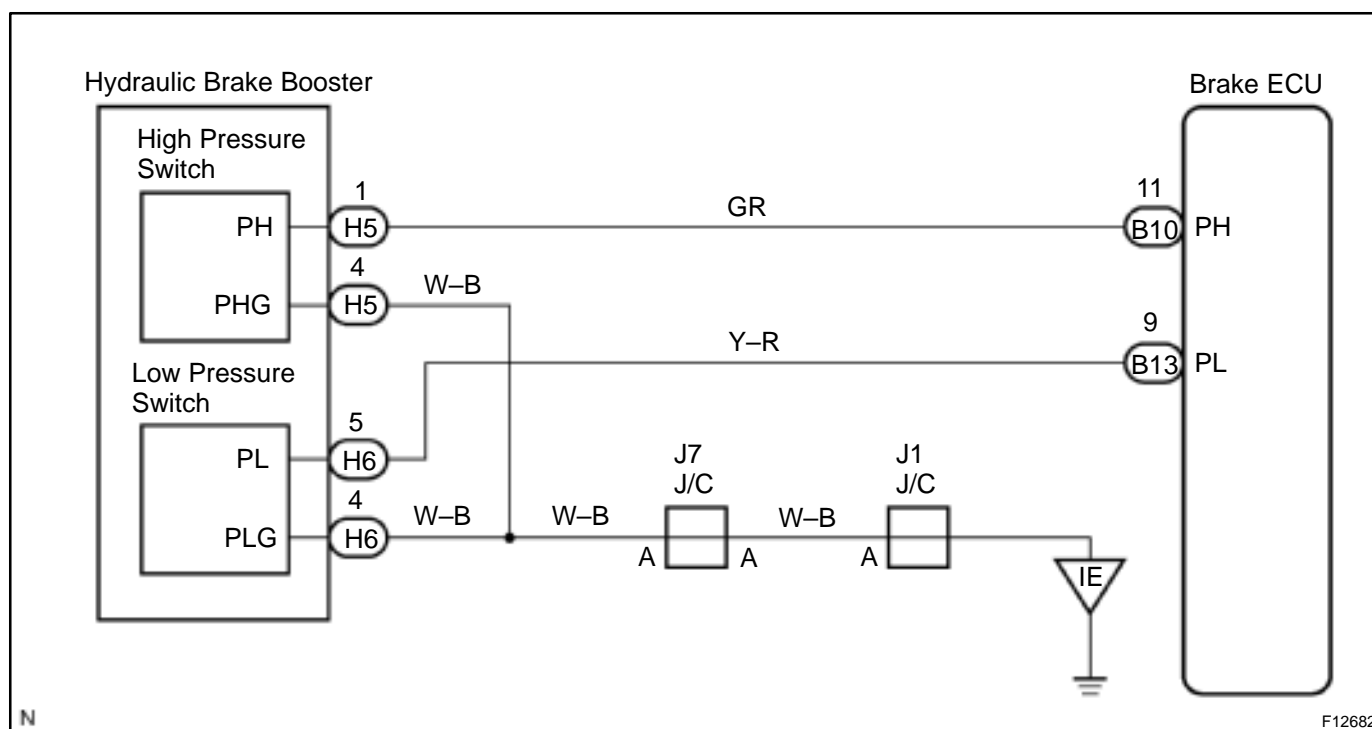

INSPECTION PROCEDURE

1 Check pressure switch (PL) resistance.

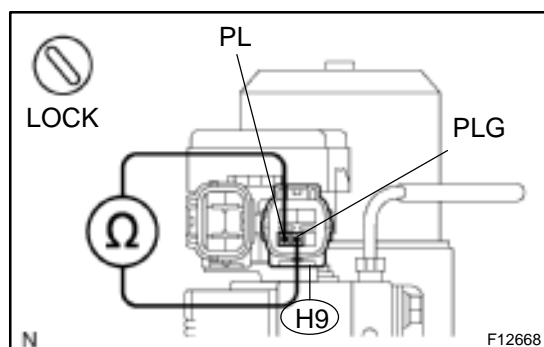**PREPARATION:**

- Disconnect the connector (H9) from the hydraulic brake booster.
- With ignition switch OFF, depress the brake pedal more than 40 times to decrease the accumulator pressure.

HINT:

When a pressure in power supply system is released, reaction force becomes heavy and stroke becomes shorter.

CHECK:

Measure resistance between terminals PL and PLG of hydraulic brake booster connector.


OK:

Resistance: 5.1 – 6.3 k Ω

HINT:

After inspection, connect the connector and clear the DTC (See page [DI-353](#)).

NG**Replace hydraulic brake booster assembly.****OK**

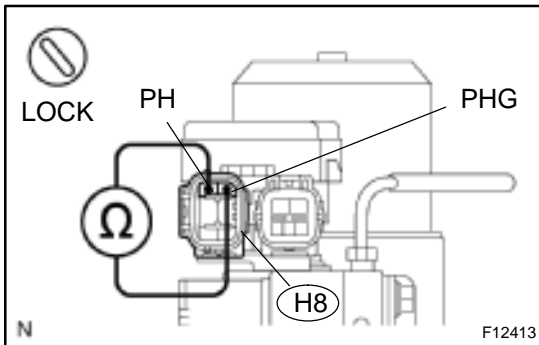2 Check pressure switch (PH) resistance.**PREPARATION:**

- (a) Disconnect the connector (H8) from the hydraulic brake booster.
- (b) With ignition switch OFF, depress the brake pedal more than 40 times to decrease the accumulator pressure.

HINT:

When a pressure in power supply system is released, reaction force becomes heavy and stroke becomes shorter.

CHECK:

Measure resistance between terminals PH and PHG of hydraulic brake booster connector.

OK:

Resistance: 0.9 – 1.1 kΩ

HINT:

After inspection, connect the connector and clear the DTC (See page [DI-353](#)).


NG**Replace hydraulic brake booster assembly.****OK****3 Check for open and short circuit in harness and connector between each pressure switch and brake ECU (See page [IN-41](#)).****NG****Repair or replace harness or connector.****OK****Check and replace brake ECU.**

DTC	C1256/56	Accumulator Low Pressure Malfunction
------------	-----------------	---

CIRCUIT DESCRIPTION

DTC No.	DTC Detecting Condition	Trouble Area
C1256/56	<p>Either of the following 1. through 5. is detected:</p> <ol style="list-style-type: none"> 1. With the vehicle running, when the pressure switch (PL) detects high pressure, although ABS, EBD or RBS does not control, the pressure switch (PL) detects low pressure for more than 1.4 sec. 2. With the vehicle running, when the pressure switch (PL) detects high pressure, although ABS, EBD or RBS controls, the pressure switch (PL) detects low pressure for more than 0.2 sec. 3. After the ignition switch is turned ON, the pressure switch (PL) detects low pressure for more than 60 sec. 4. After the ignition switch is ON, PL (Low pressure switch) turns ON while PH (High pressure switch) is stuck to ON, or PL cannot turn OFF for 1.4 sec. or more when running the vehicle without ABS, EBD or RBS control. 5. After the ignition switch is ON, PL turns ON while PH is stuck to ON, or PL cannot turn OFF for 0.2 sec. or more when running the vehicle under ABS, EBD or RBS control. 	<ul style="list-style-type: none"> • Accumulator • Pressure switch (PH or PL) • Hydraulic brake booster pump motor

WIRING DIAGRAM

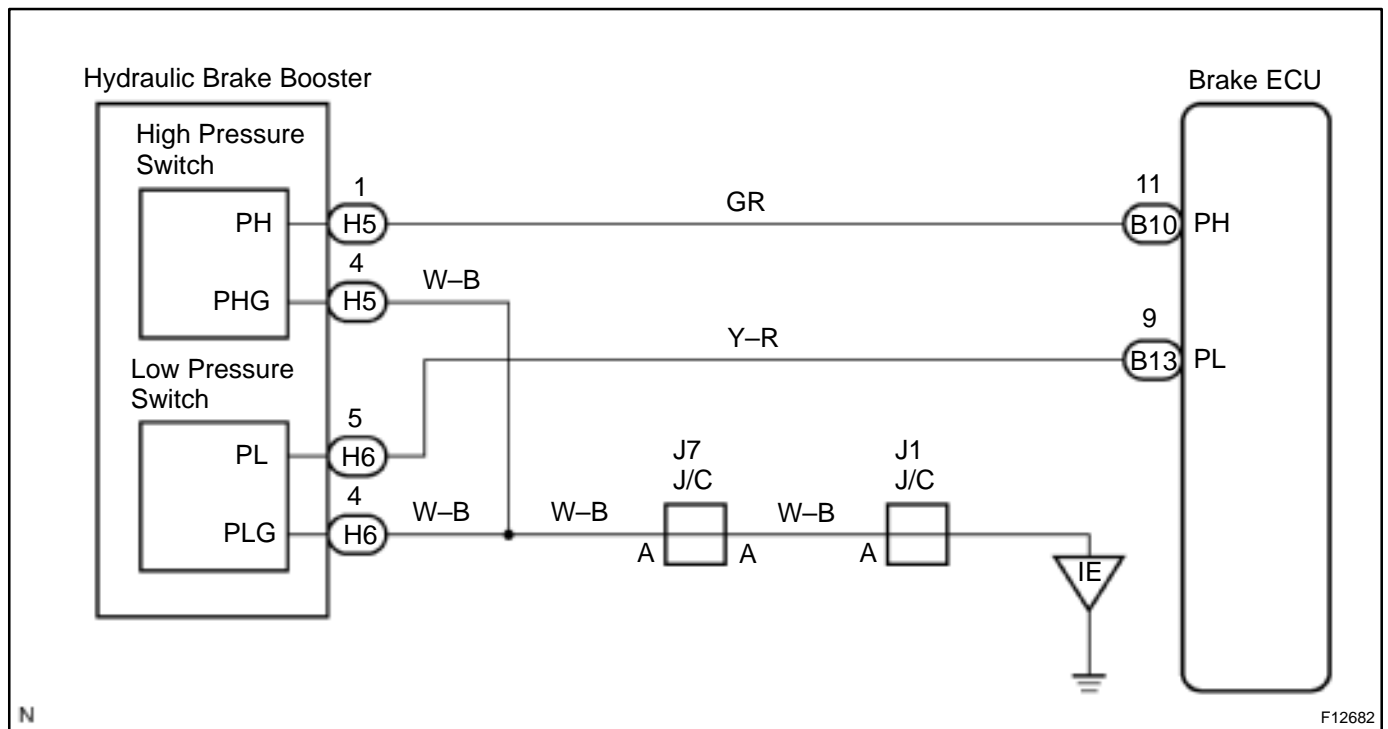

INSPECTION PROCEDURE

1	Check accumulator operation.
---	------------------------------

PREPARATION:

(a) Turn the ignition switch OFF, and depress the brake pedal 40 times or more.

HINT:

When a pressure in power supply system is released, reaction force becomes heavy and stroke becomes shorter.

(b) Install the LSPV gauge (SST) to rear wheel cylinder and bleed air.

SST 09709-29018

CHECK:

Depress the brake pedal with force of more than 343 N (35 kgf, 77 lbf) and turn the ignition switch ON, then check the rear wheel cylinder pressure when an increase of pressure changes from acutely to mildly.

OK:

5,099 – 8,924 kPa (52 – 91 kgf/cm², 740 – 1,294 psi) at 20°C (68°F)

HINT:


If the value is not within the standard, cool the engine room and check it again.

NG

Replace accumulator.

OK

2

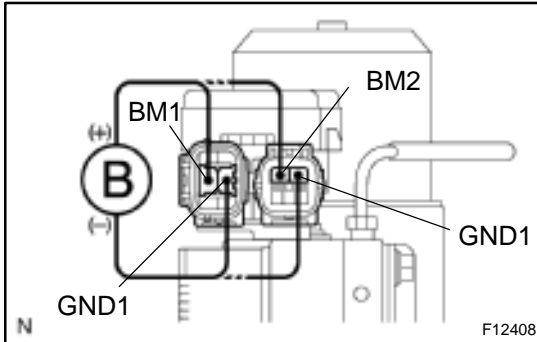Check operation of hydraulic brake booster pump motor.**PREPARATION:**

Disconnect the 2 connectors from the hydraulic brake booster.

CHECK:


Connect battery positive \oplus lead to BM1 or BM2 terminal and battery negative \ominus lead to GND1 or GND2 terminal of the hydraulic brake booster (pump motor) connector.

OK:

The operation sound of the pump motor should be heard.

NG**Go to step 7.****OK**

3 Check pressure switch (PH) operation.

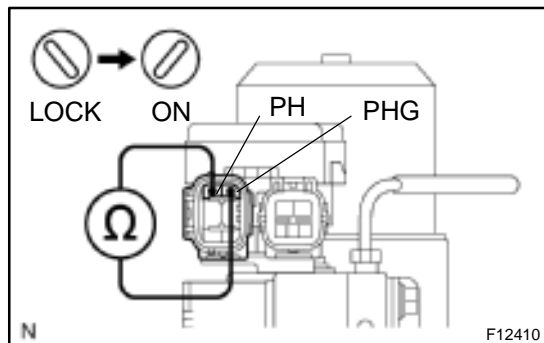

PREPARATION:

- (a) Turn the ignition switch OFF, and depress the brake pedal 40 times or more.

HINT:

When a pressure in power supply system is released, reaction force becomes heavy and stroke becomes shorter.

- (b) Install the LSPV gauge (SST) to the rear wheel cylinder and bleed air.

SST 09709-29018

CHECK:

While checking the voltage between terminals PH and PHG of hydraulic brake booster, depress the brake pedal with force of more than 343 N (35 kgf, 77 lbf) and turn the ignition switch ON, then check the rear wheel cylinder pressure when voltage changes from 6 V to 0 V.

OK:

12,553 – 20,104 kpa (128 – 205 kgf-cm², 1,820 – 2,916 psi)

CHECK:

While checking the resistance between terminals PH and PHG, depress the brake pedal changing the force in the range of 197 N (20 kgf, 44 lbf) to 343 N (35 kgf, 77 lbf) and check the rear wheel cylinder pressure when resistance changes from 0 kΩ to 1 kΩ between PH and PHG.

OK:

11,964 – 18,240 kpa (122 – 186 kgf-cm², 1,735 – 2,645 psi)

HINT:

After inspection, connect the connector, fill brake reservoir with brake fluid and clear the DTC (See page [DI-353](#)).

OK

Go to step 5.

NG

- 4 Check for open circuit in harness and connector between pressure switch (PH) and brake ECU (See page IN-41).**


NG

Repair or replace harness or connector.

OK

Replace hydraulic brake booster assembly.

- 5 Check pressure switch (PL) operation.**

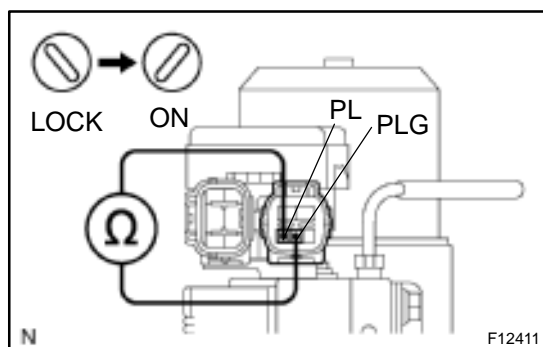

PREPARATION:

- (a) Turn the motor switch OFF, and depress the brake pedal 40 times or more.

HINT:

When a pressure in power supply system is released, reaction force becomes heavy and stroke becomes shorter.

- (b) Install the LSPV gauge (SST) to the rear wheel cylinder and bleed air.

SST 09709 -29018

CHECK:

While checking the resistance between terminals PL and PLG of hydraulic brake booster, depress the brake pedal with force of more than 343 N (35 kgf, 77 lbf) and turn the ignition switch ON, then check the rear wheel cylinder pressure when the resistance changes from 5.7 kΩ to 1.0 kΩ.

OK:

9,022 – 15,102 kpa (92 – 154 kgf-cm², 1,308 – 2,190 psi)

CHECK:

While checking the resistance between terminals PL and PLG of hydraulic brake booster, depress the brake pedal changing the force in the range of 197 N (20 kgf, 44 lbf) to 343 N (35 kgf, 77 lbf) and check the rear wheel cylinder pressure when resistance changes from 1.0 kΩ to 5.7 kΩ.

OK:

8,532 – 13,337 kpa (87 – 136 kgf-cm², 1,237 – 1,934 psi)

HINT:

After inspection, connect the connector, fill brake reservoir with brake fluid and clear the DTC (See page DI-353).

NG

Replace hydraulic brake booster assembly.

OK

6 Check pressure switch (PH) and pressure switch (PL).**CHECK:**

Compare the pressure value of the rear wheel cylinder measured in check pressure switch (PL) operation with the one measured in check pressure switch (PH) operation.

OK:

- Pressure when the voltage between PH and PHG becomes 6 to 0 V > pressure when the resistance between PL and PLG becomes 5.7 kΩ to 1.0 kΩ.
- Pressure when the resistance between PH and PHG becomes 0 kΩ to 1 kΩ > pressure when the resistance between PL and PLG becomes 1.0 kΩ to 5.7 kΩ.

NG

Replace hydraulic brake booster assembly.

OK

Check and replace brake ECU.

7 Check for open or short circuit in harness and connector between hydraulic brake booster pump motor and hydraulic brake booster (See page [IN-41](#)).**NG**

Replace wire harness.

OK**8 Check hydraulic brake booster pump motor (See page [BR-48](#)).****NG**

Replace hydraulic brake booster pump motor.

OK


Replace hydraulic brake booster.


DTC	C1257/57	Power Supply Drive Circuit
------------	-----------------	-----------------------------------

CIRCUIT DESCRIPTION

DTC No.	DTC Detecting Condition	Trouble Area
C1257/57	After turning the ignition switch ON, open or short circuit in circuit of power supply drive system inside ECU continues for more than 1.5 sec.	<ul style="list-style-type: none"> • Battery • Power source circuit

WIRING DIAGRAM

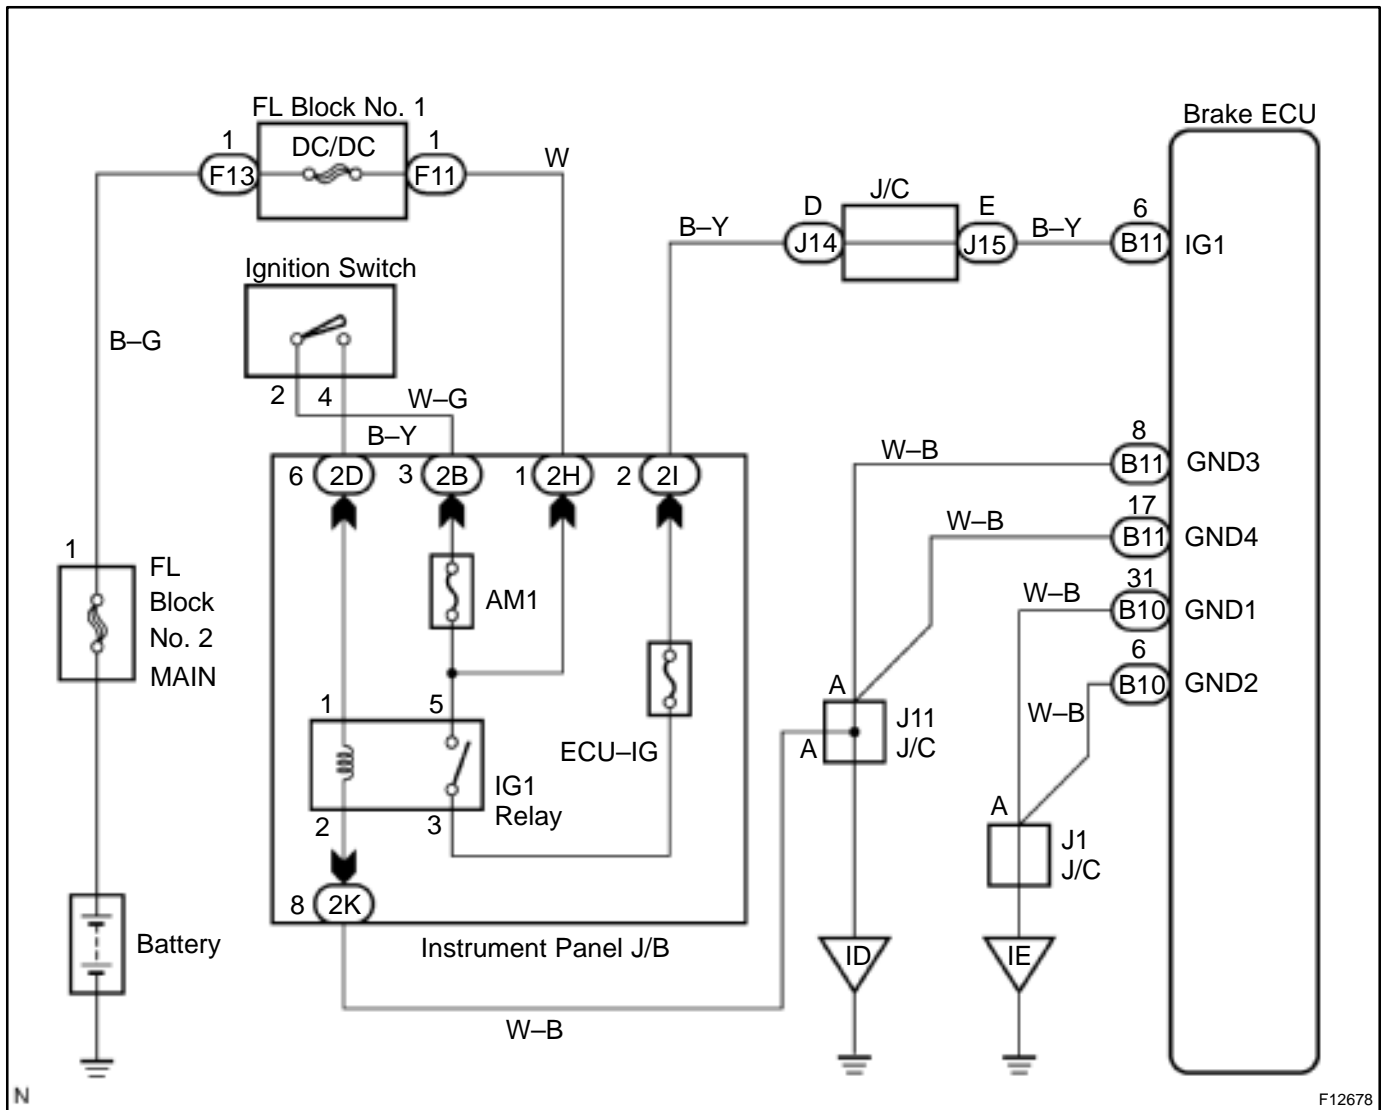

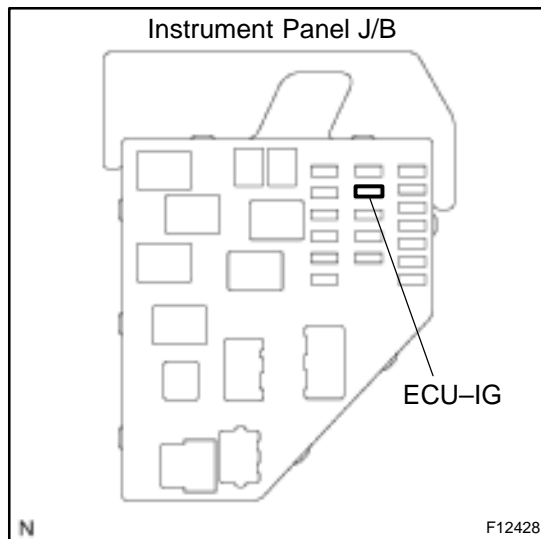INSPECTION PROCEDURE**1 Check ECU-IG fuse.****PREPARATION:**

Remove the ECU-IG fuse from instrument panel J/B.

CHECK:

Check continuity of ECU-IG fuse.

OK:

Continuity

NG

Check for short circuit in all the harness and components connected to ECU-IG fuse (See attached wiring diagram).

OK**2 Check battery positive voltage.****OK:**

Voltage: 10 – 14 V

NG

Check and repair the charging system (See page [HV-39](#)).

OK

3 Check voltage of the ECU IG power source.

In case of using the TOYOTA hand-held tester:

PREPARATION:


- Connect the TOYOTA hand-held tester to the DLC3.
- Turn the ignition switch ON, and push the TOYOTA hand-held tester main switch ON.
- Select the DATALIST mode on the TOYOTA hand-held tester.

CHECK:

Check the voltage condition output from the ECU displayed on the TOYOTA hand-held tester.

OK:

"Normal" is displayed.

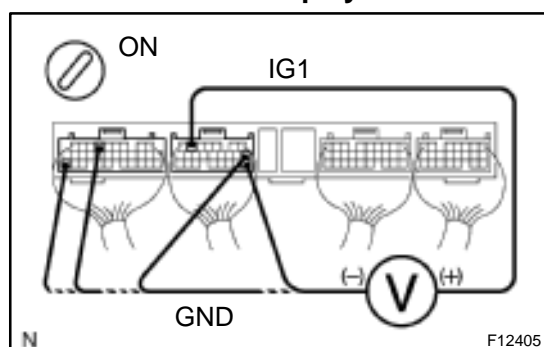

In case of not using the TOYOTA hand-held tester:

PREPARATION:

Remove the brake ECU with connectors still connected.

CHECK:

Turn the ignition switch ON, measure voltage between terminals IG1 and GND of brake ECU connector.

OK:


Voltage: 10 – 14 V

OK

Check and replace brake ECU.

NG

4 Check continuity between terminal GND of brake ECU connector and body ground.

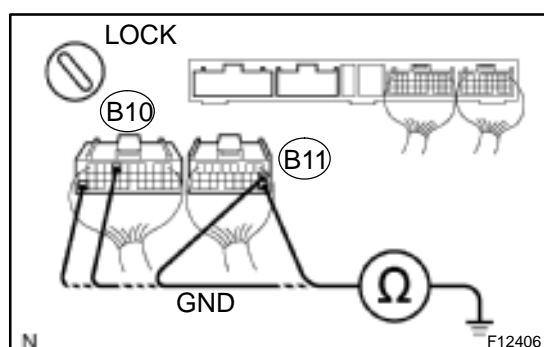

PREPARATION:

Disconnect the 2 connectors (B10, B11) from the brake ECU.

CHECK:

Measure resistance between terminal GND of brake ECU harness side connector and body ground.

OK:

Resistance: 1 Ω or less

NG

Repair or replace harness or connector.

OK

Check for open circuit in harness and connector between brake ECU and battery (See page [IN-41](#)).

DTC	Always ON	Malfunction in ECU
------------	------------------	---------------------------


CIRCUIT DESCRIPTION


DTC No.	DTC Detecting Condition	Trouble Area
Always ON	<p>Either of the following 1. or 2. is detected:</p> <ol style="list-style-type: none"> 1. ECU connectors are disconnected from ECU 2. There is a malfunction in ECU internal circuit 	<ul style="list-style-type: none"> • Battery • Charging system • Power source circuit • Brake ECU

HINT:

There is a case that TOYOTA hand-held tester cannot be used when ECU is abnormal.

WIRING DIAGRAM

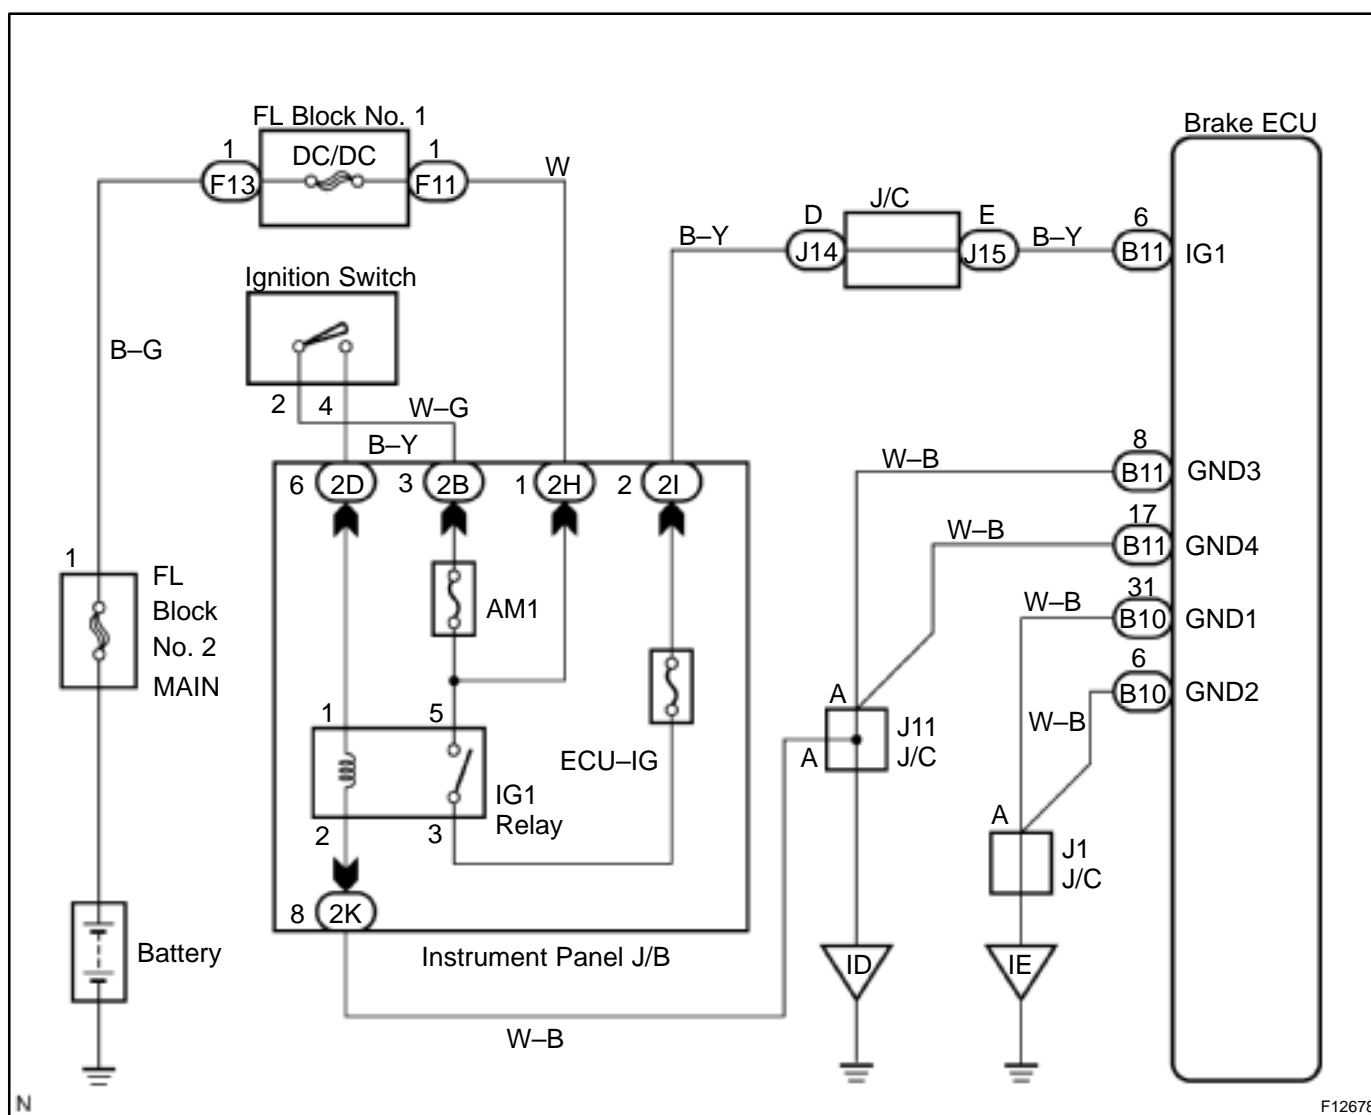

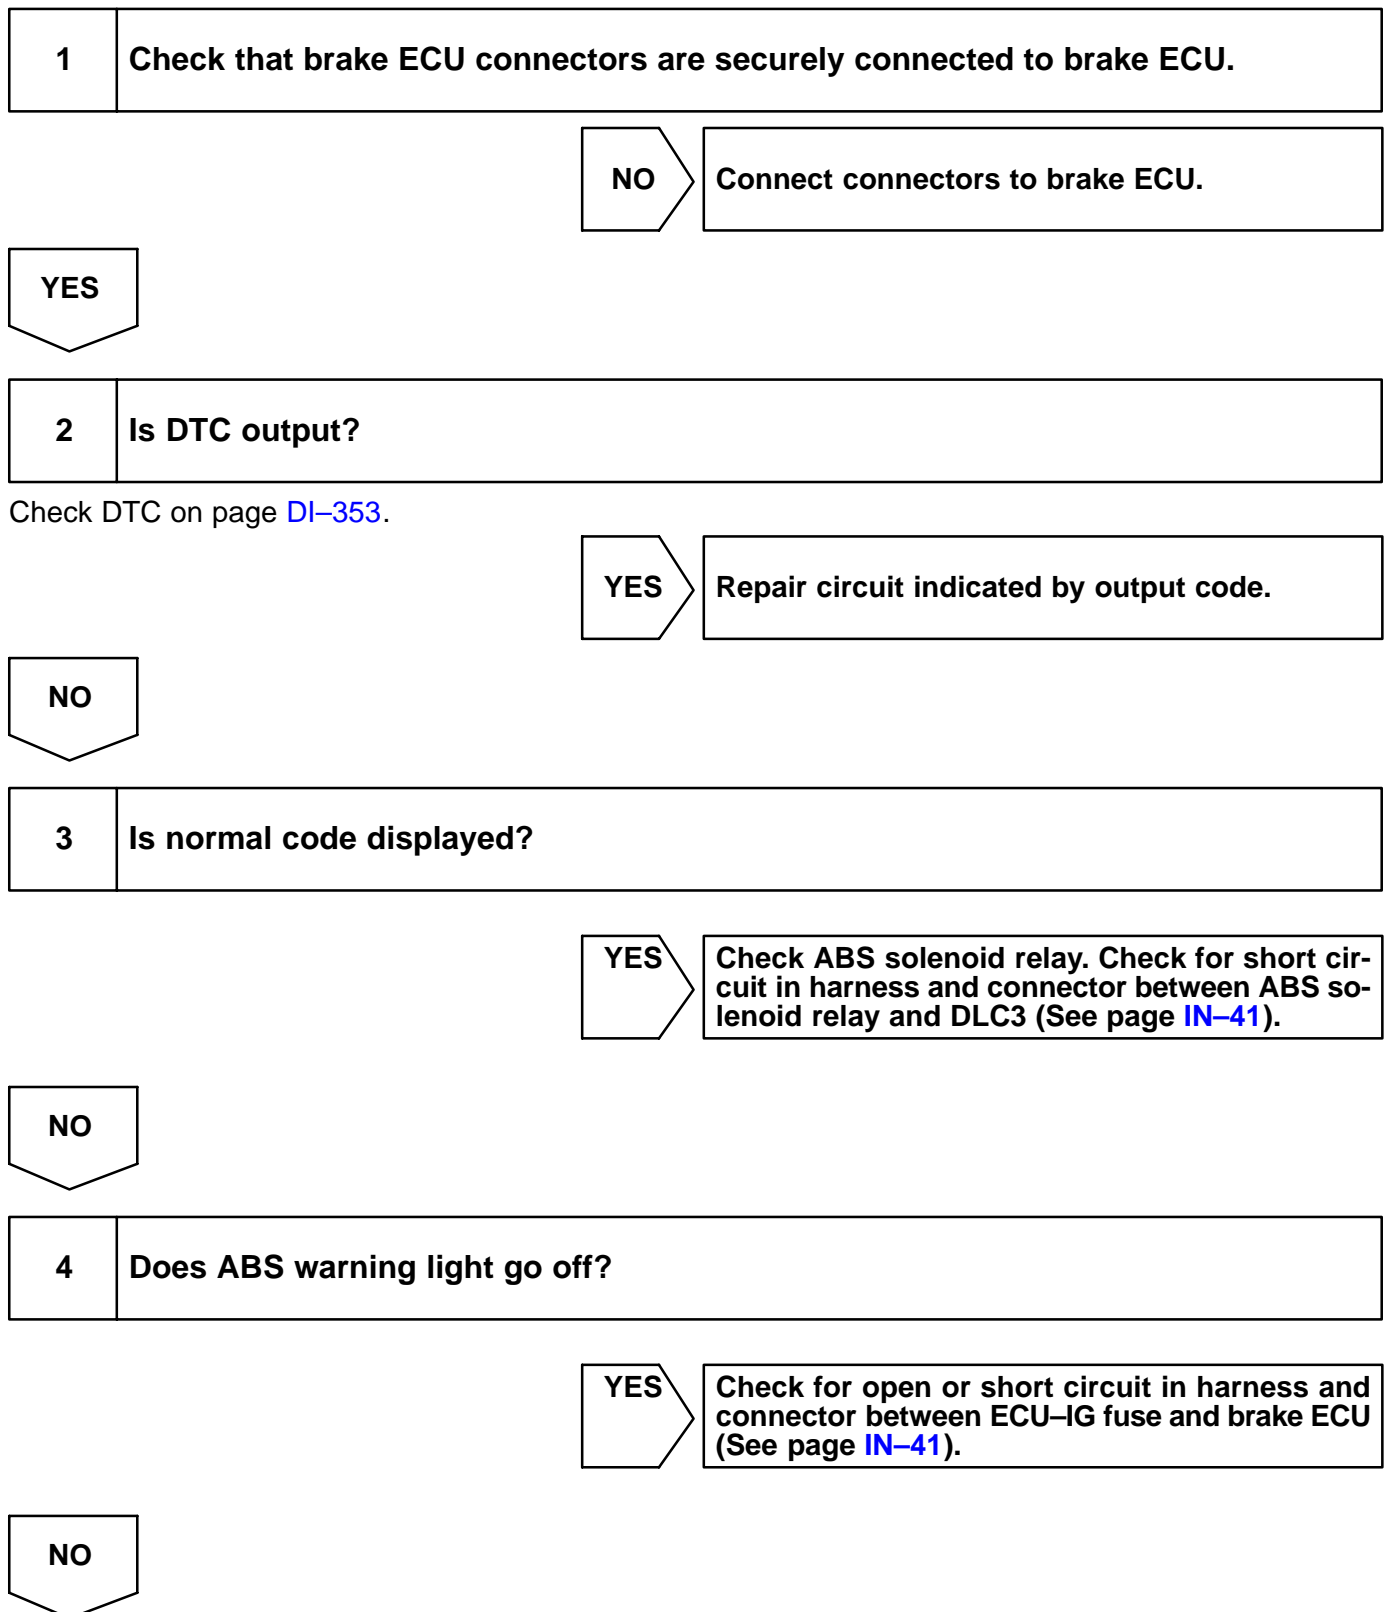INSPECTION PROCEDURE

5 Check battery positive voltage.

CHECK:

Check the battery positive voltage.

OK:

Voltage: 10 – 14 V

NG

Check and repair charging system (See page [HV-39](#)).

OK

6 Check operation of the ABS warning light.


In case of using the TOYOTA hand-held tester:

PREPARATION:

- Connect the TOYOTA hand-held tester to the DLC3.
- Turn the ignition switch ON, and push the TOYOTA hand-held tester main switch ON.
- Select the ACTIVE TEST mode on the TOYOTA hand-held tester.

CHECK:

Check that "ON" and "OFF" of the ABS warning light can be shown on the combination meter by the TOYOTA hand-held tester.

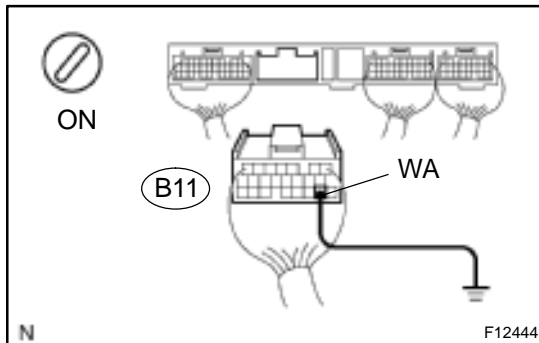

In case of not using the TOYOTA hand-held tester:

- Disconnect the connector (B11) from the brake ECU.
- Using service wire, connect terminal WA of brake ECU harness side connector and body ground.
- Turn the ignition switch ON.

OK:

ABS warning light goes off.

OK

Check and replace brake ECU.

NG

Check for short circuit in harness and connector between combination meter and brake ECU, combination meter and DLC3 (See page [IN-41](#)).
Check ABS solenoid relay circuit (See page [DI-376](#)).


ABS Warning Light Circuit

CIRCUIT DESCRIPTION

If the ECU detects trouble, it lights the ABS warning light while at the same time prohibiting ABS control. At this time, the ECU records a DTC in memory.

Connect terminals Tc and CG of the DLC3 to make the ABS warning light blink and output the DTC.

WIRING DIAGRAM

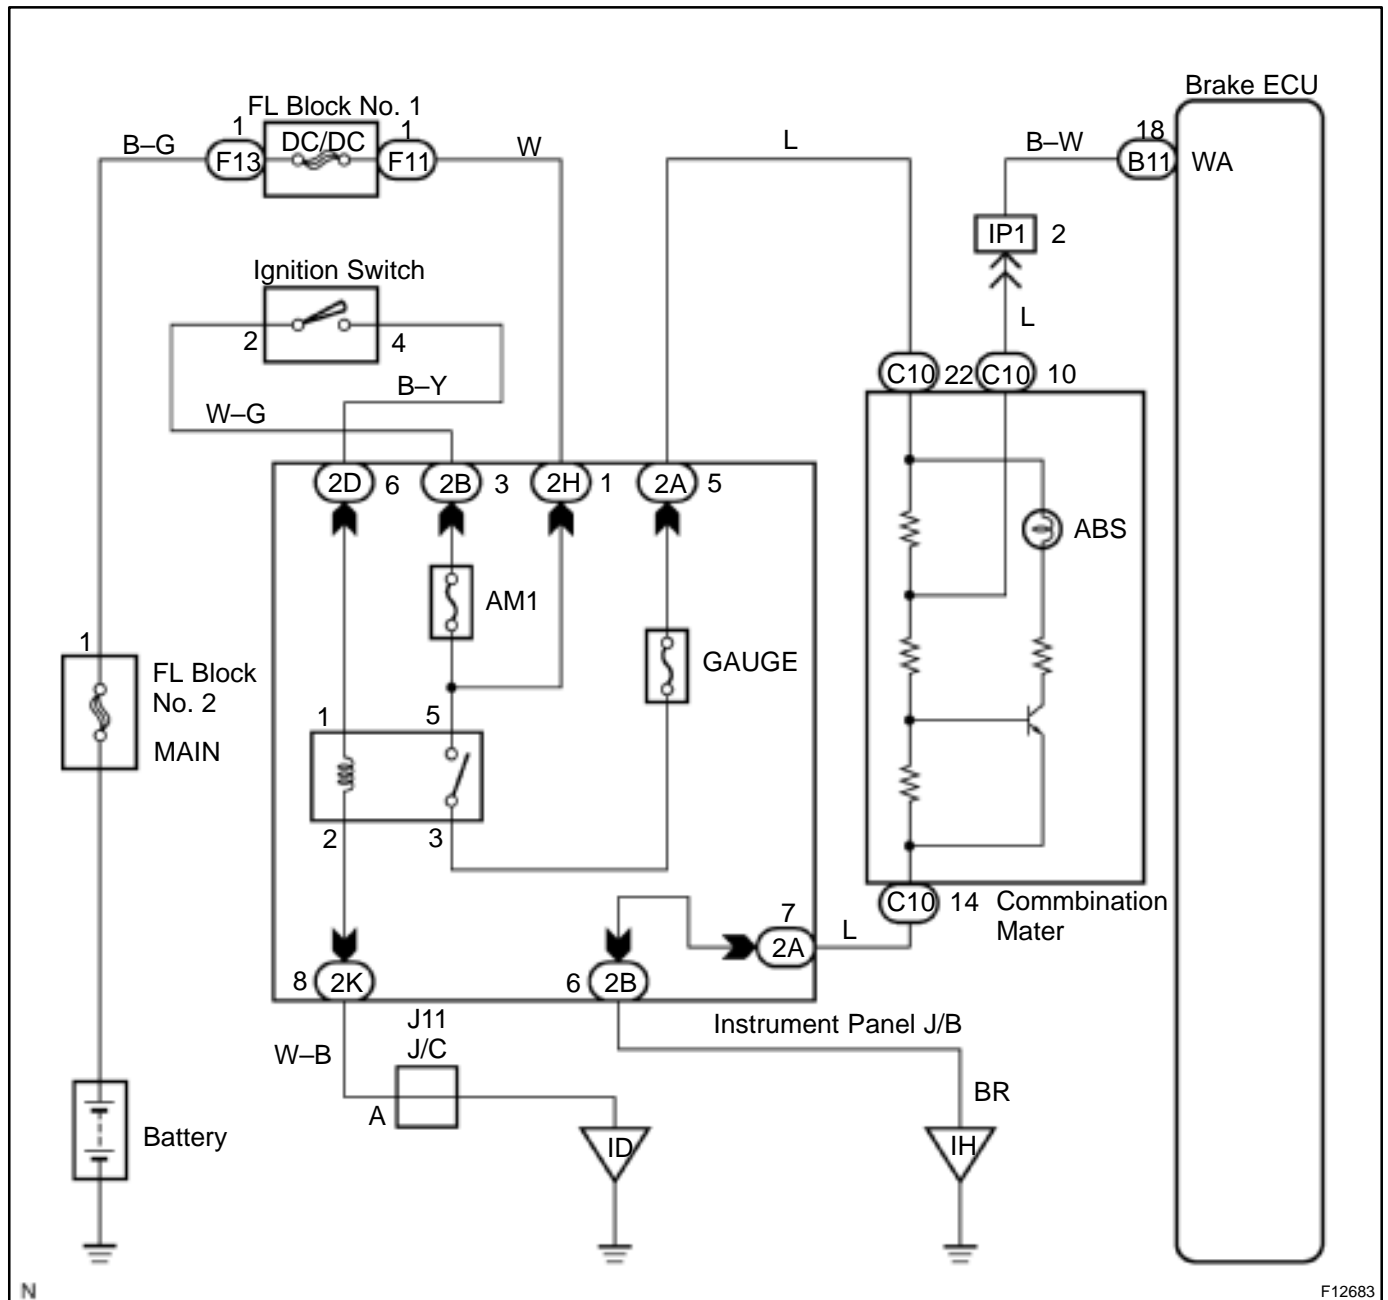

INSPECTION PROCEDURE

HINT:

Troubleshoot in accordance with the chart below for each trouble symptom.

ABS warning light does not light up	*1
ABS warning light remains on	*2

*1: Start the inspection from step 1 in case of using the TOYOTA hand-held tester and start from step 2 in case of not using TOYOTA hand-held tester.

*2: After inspection with step 4, start the inspection from step 5 in case of using the TOYOTA hand-held tester and start from step 6 in case of not using TOYOTA hand-held tester.

1	Check operation of the brake warning light.
----------	--

PREPARATION:

- (a) Connect the TOYOTA hand-held tester to the DLC3.
- (b) Turn the ignition switch ON, and push the TOYOTA hand-held tester main switch ON.
- (c) Select the ACTIVE TEST mode on the TOYOTA hand-held tester.

CHECK:

Check that "ON" and "OFF" of the ABS warning light can be shown on the combination meter on the TOYOTA hand-held tester.

OK

Check and replace brake ECU.

NG

2	Check ABS warning light.
----------	---------------------------------

See combination meter troubleshooting on page [BE-2](#).


NG

Repair bulb or combination meter assembly.

OK

3

Check ABS solenoid relay.

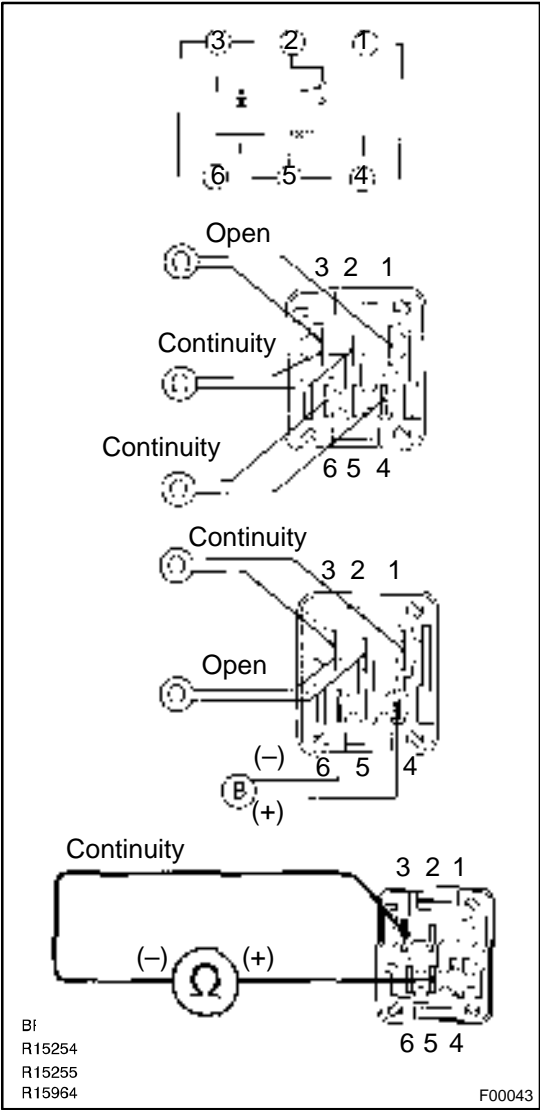

PREPARATION:
Remove the ABS solenoid relay from engine room R/B No. 3.

CHECK:
Check continuity between each terminal of ABS solenoid relay.

OK:

Terminals 4 and 6	Continuity (Reference value 80 Ω)
Terminals 2 and 3	Continuity
Terminals 1 and 3	Open

CHECK:
(a) Apply battery positive voltage between terminals 4 and 6.
(b) Check continuity between each terminal of ABS solenoid relay.

OK:

Terminals 2 and 3	Open
Terminals 1 and 3	Continuity

CHECK:
Connect the ⊕ test lead to terminal 5 and the ⊖ lead to terminal 3. Check continuity between the terminals.

OK:


Continuity
If there is no continuity, connect the ⊖ test lead to terminal 5 and the ⊕ lead to terminal 3. Recheck continuity between terminals.

NG

Replace ABS solenoid relay.

OK

Repair or replace and check for open circuit in harness and connector between DLC3 and ABS solenoid relay and body ground (See page IN-41).

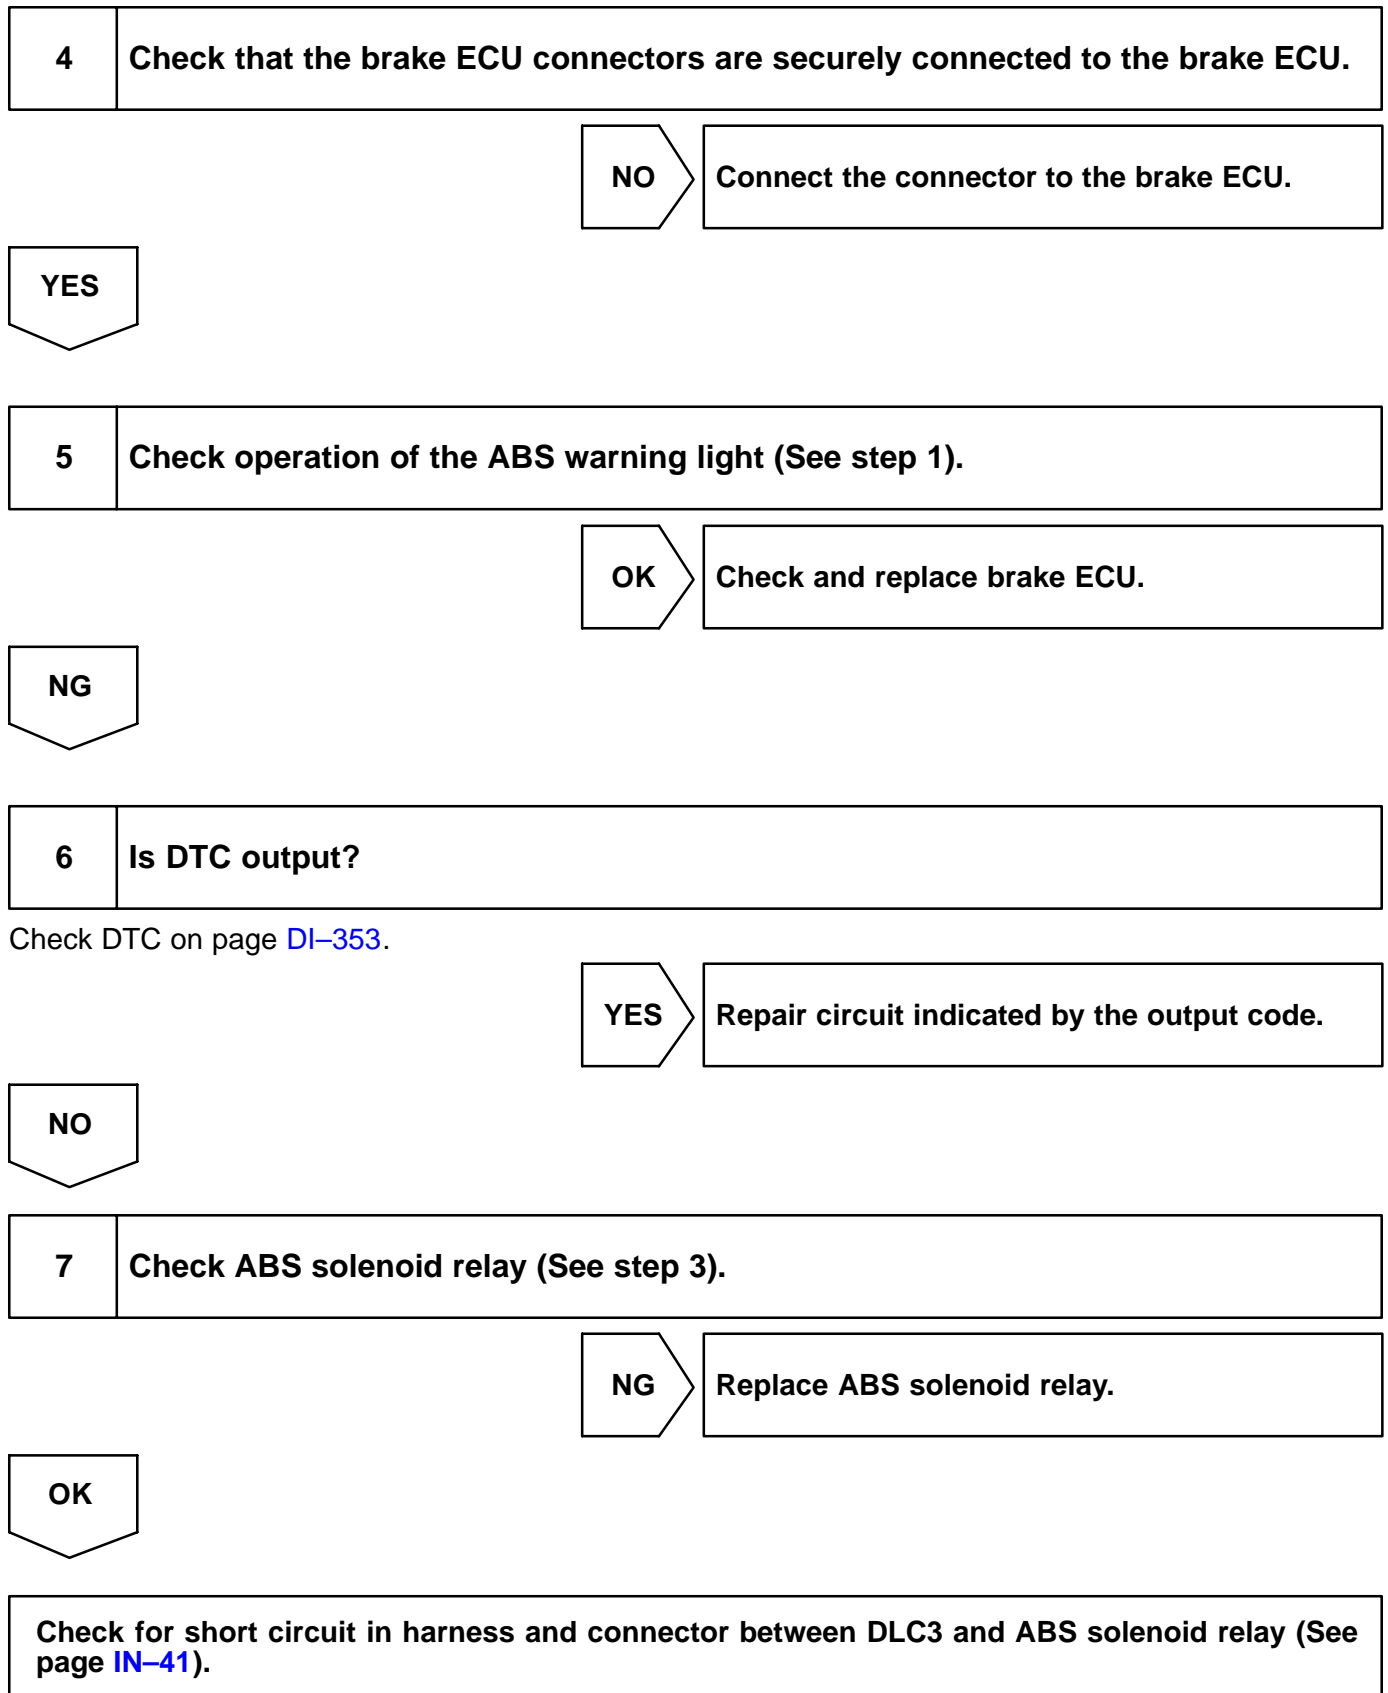


BRAKE Warning Light Circuit

CIRCUIT DESCRIPTION

The BRAKE warning light lights up when the brake fluid is insufficient, the parking brake is applied or the EBD is defective.

The BRAKE warning light also lights up when DTC No. C1213/63 or C1259/59 is detected, however, the EBD is not inhibited in this case.

WIRING DIAGRAM

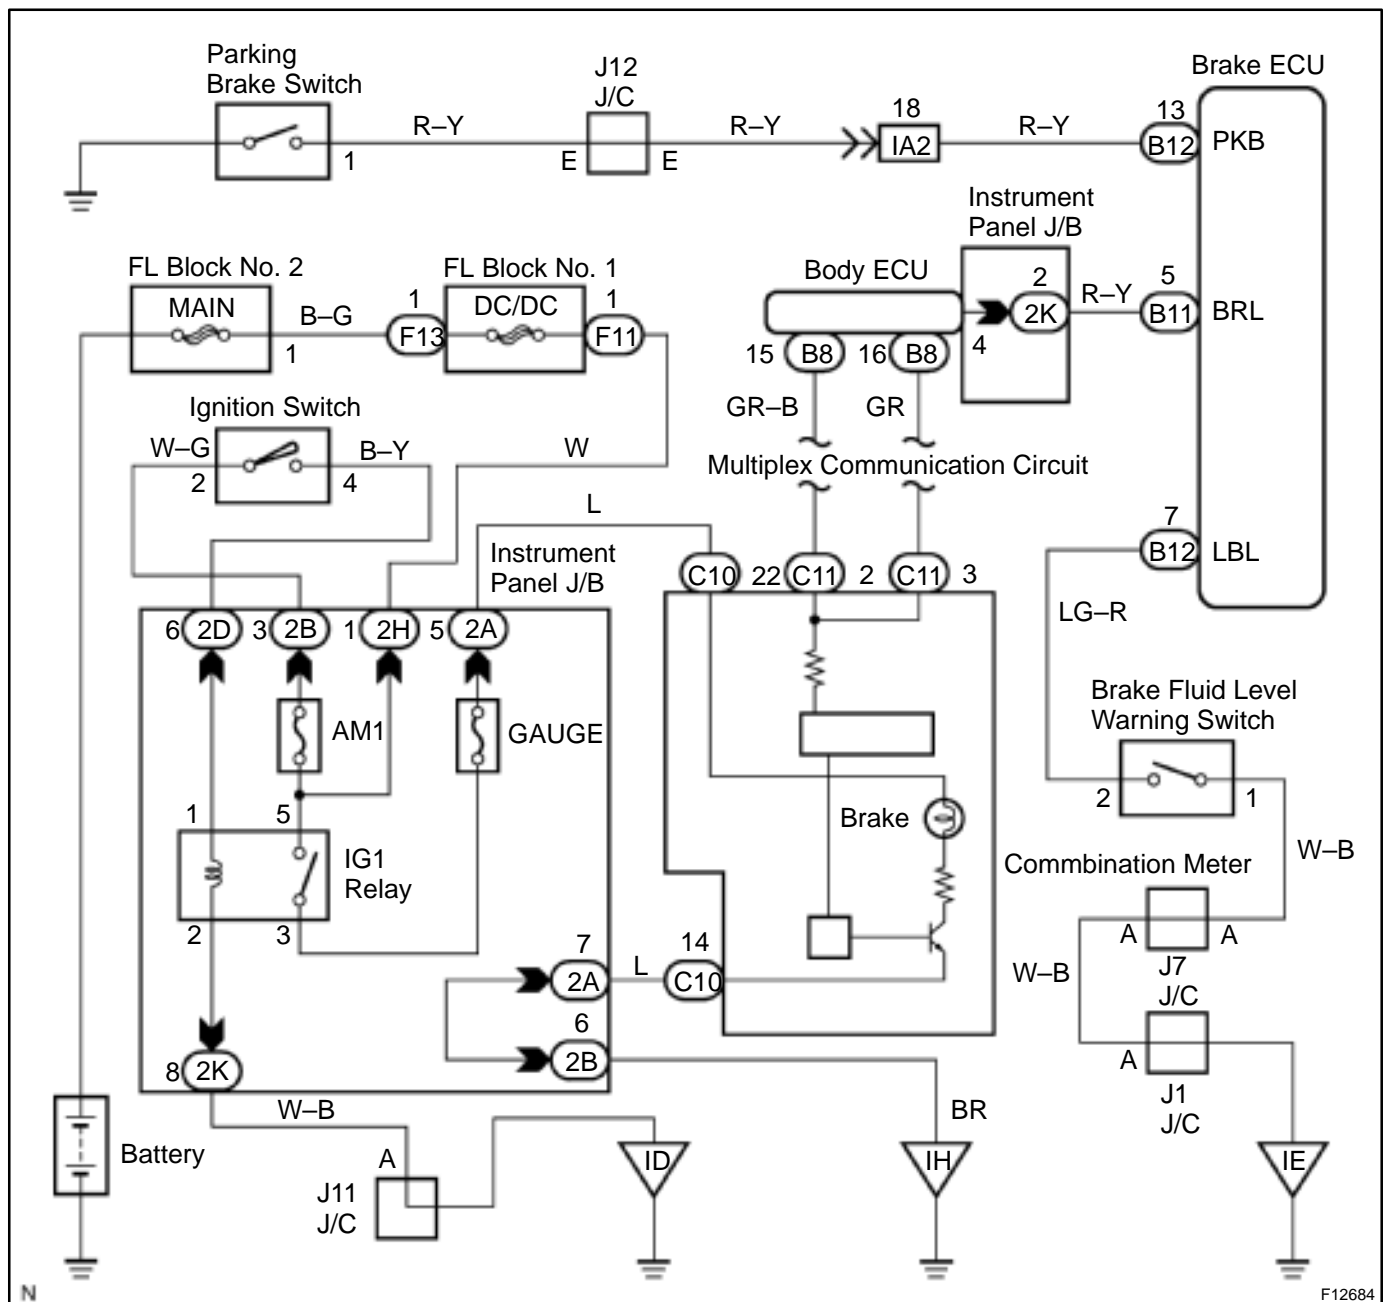

INSPECTION PROCEDURE

HINT:

Start the inspection from step 1 in case of using the TOYOTA hand-held tester and start from step 2 in case of not using the TOYOTA hand-held tester.

1	Check operation of the BRAKE warning light.
---	--

PREPARATION:

- (a) Release the parking brake pedal.
- (b) Connect the TOYOTA hand-held tester to the DLC3.
- (c) Turn the ignition switch ON, and push the TOYOTA hand-held tester main switch ON.
- (d) Select the ACTIVE TEST mode on the TOYOTA hand-held tester.

CHECK:

Check that "ON" and "OFF" of BRAKE warning light can be shown on the combination meter by the TOYOTA hand-held tester.

OK

Check and replace brake ECU.

NG

2	Check parking brake switch circuit (See page BE-2).
---	--

NG

Repair or replace parking brake switch circuit.

OK

3	Check brake fluid level warning switch circuit (See page BE-2).
---	--

NG

Repair or replace brake fluid level warning switch circuit.

OK

4	Is DTC output for ABS ?
---	--------------------------------

Yes

Repair circuit indicated by the output code.

No

5 Check BRAKE warning light.

See combination meter troubleshooting on page [BE-2](#).


NG**Repair or replace combination meter.****OK****6 Check multiplex communication system (See page [DI-752](#)).****NG****Repair or replace multiplex communication circuit.****OK****Check and replace brake ECU.**

Brake Warning Buzzer Circuit

CIRCUIT DESCRIPTION

The brake warning buzzer sounds while the accumulator pressure is abnormally low.

WIRING DIAGRAM

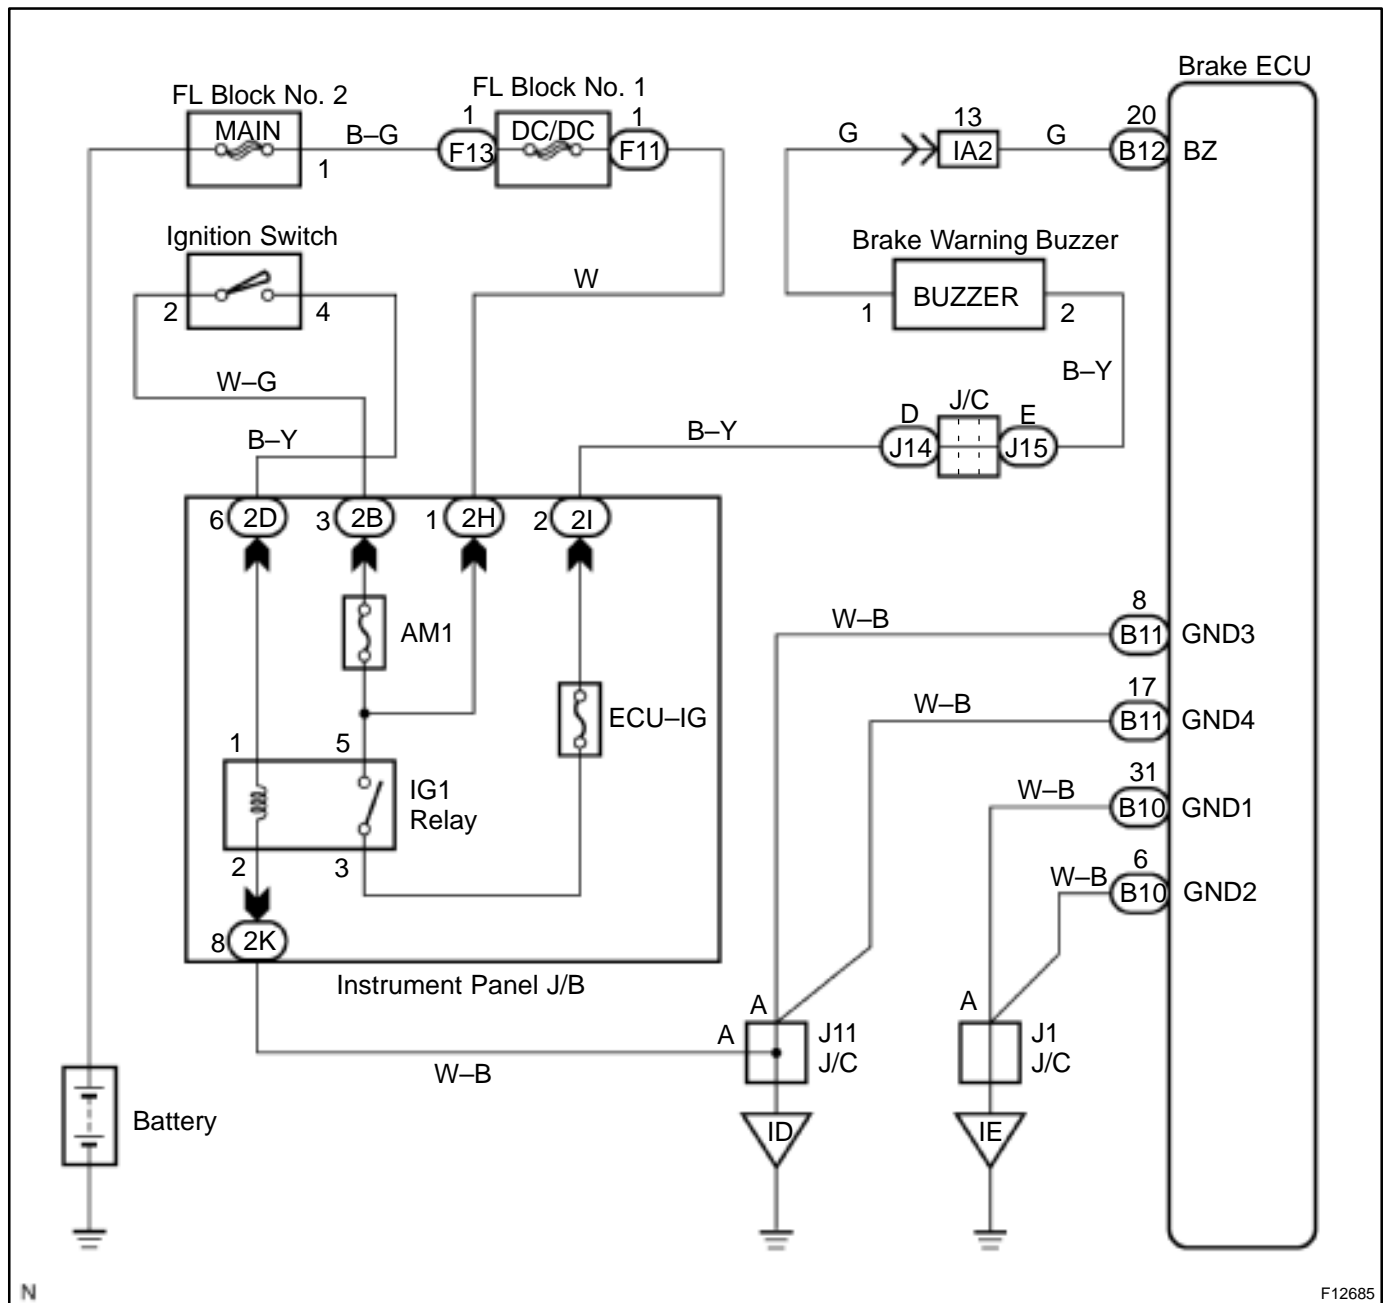

INSPECTION PROCEDURE

HINT:

Start the inspection from step 1 in case of using the TOYOTA hand-held tester and start from step 2 in case of not using the TOYOTA hand-held tester.

1	Check operation of the brake warning buzzer.
---	--

PREPARATION:

- (a) Connect the TOYOTA hand-held tester to the DLC3.
- (b) Turn the ignition switch ON, and push the TOYOTA hand-held tester main switch ON.
- (c) Select the ACTIVE TEST mode on the TOYOTA hand-held tester.

CHECK:


Check that brake warning buzzer sounds "ON" and "OFF" with the TOYOTA hand-held tester.

OK

Check and replace brake ECU.

NG

2	Check brake warning buzzer.
---	-----------------------------

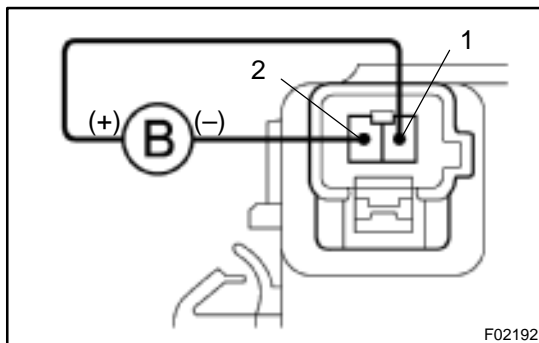

PREPARATION:

Disconnect the brake warning buzzer connector.

CHECK:

Apply battery positive voltage to the terminals 1 and 2 of BRAKE warning buzzer connector, check that the brake warning buzzer sounds.

NG

Replace brake warning buzzer.

OK

3	Check for open and short circuit in harness and connector between brake ECU and brake warning buzzer (See page IN-41).
---	---

NG

Repair or replace harness or connector.

OK


Check and replace brake ECU.

Tc Terminal Circuit

CIRCUIT DESCRIPTION


Connecting terminals Tc and CG of the DLC3 causes the ECU to display the DTC by flashing the ABS warning light.

WIRING DIAGRAM

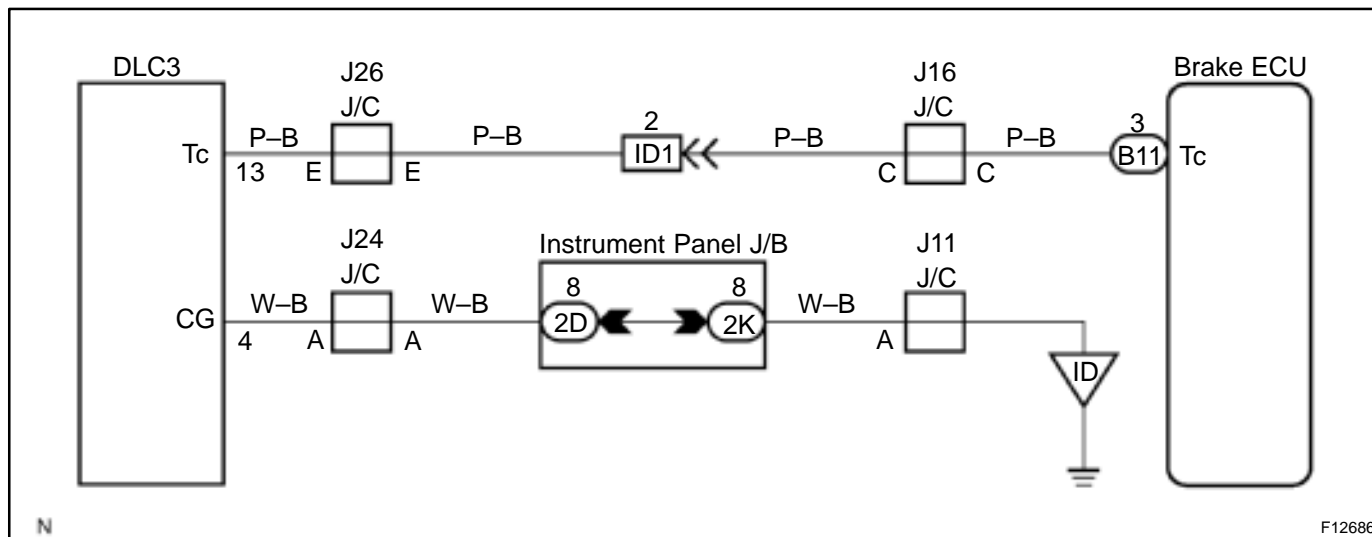

INSPECTION PROCEDURE

- 1 Check voltage between terminals Tc and CG of DLC3.

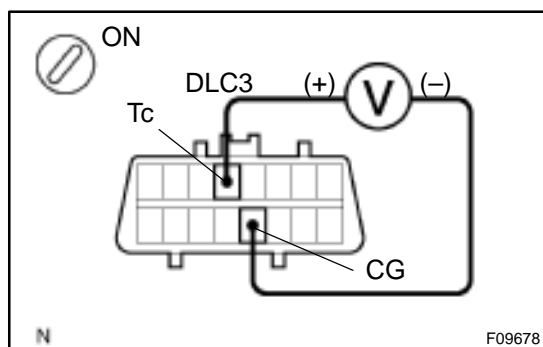

PREPARATION:

Turn the ignition switch ON.

CHECK:

Measure voltage between terminal Tc and CG of DLC3.

OK:

Voltage: 10 – 14 V

OK

If ABS warning light does not blink even after Tc and CG are connected, the ECU may be defective.

NG

2	Check for open and short circuit in harness and connector between brake ECU and DLC3, DLC3 and body ground (See page IN-41).
---	---

NG**Repair or replace harness or connector.****OK****Check and replace brake ECU.**


Ts Terminal Circuit

CIRCUIT DESCRIPTION

The sensor check circuit detects abnormalities in the speed sensor signal which cannot be detected by the DTC check.


Connecting terminals Ts and CG of the DLC3 starts the check.

WIRING DIAGRAM

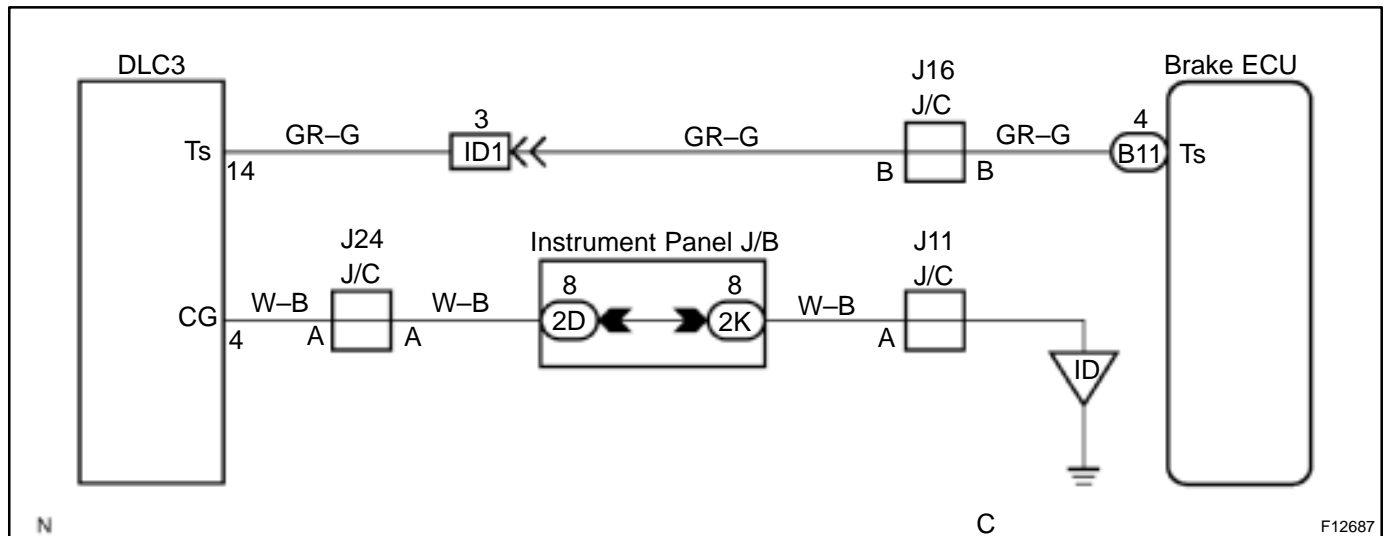

INSPECTION PROCEDURE

- | | |
|---|--|
| 1 | Check voltage between terminals Ts and CG of DLC3. |
|---|--|

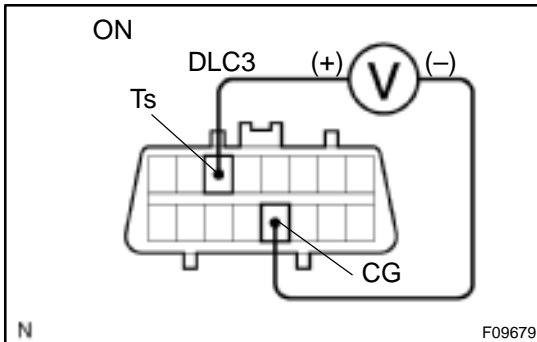**CHECK:**

- (a) Turn the ignition switch ON.
 (b) Measure voltage between terminals Ts and CG of DLC3.

OK:

Voltage: 10 – 14 V

OK

If ABS warning light does not blink even after Ts and CG are connected, the ECU may be defective.

NG


- | | |
|---|---|
| 2 | Check for open and short circuit in harness and connector between brake ECU and DLC3, DLC3 and body ground (See page IN-41). |
|---|---|

NG

Repair or replace harness or connector.

OK

Check and replace brake ECU.

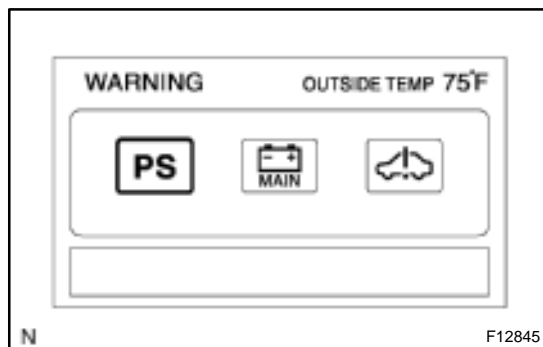

PRE-CHECK



1. DIAGNOSIS SYSTEM

(a) Check the indicator.

When the ignition switch is turned ON, check that the PS warning light goes on for 1.5 seconds.

HINT:


- If the indicator check result is not normal, proceed to troubleshooting for the PS warning light circuit (See page [DI-486](#)).
- When the EMPS system is faulty, the master warning light in the combination meter and the PS warning light in the multiinformation display lights up.

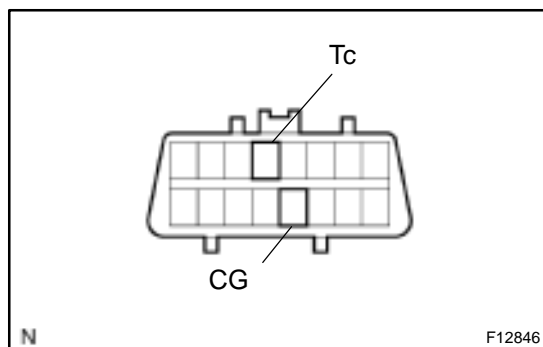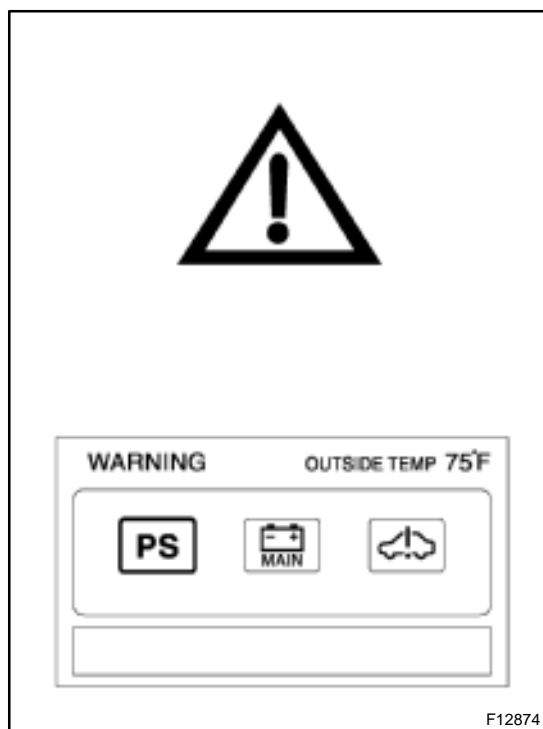


(b) In case of not using TOYOTA hand-held tester: Check the DTC.

- (1) Using SST, connect terminals Tc and CG of the DLC3.


SST 09843-18040

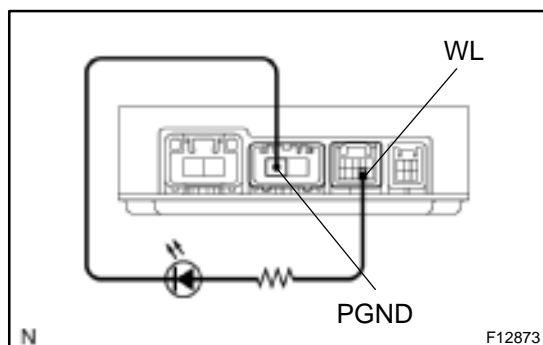

- (2) Remove the EMPS ECU with connector still connected.
- (3) Connect the both terminals of the 1kΩ resistance and LED (Light Emitting Diode) circuit to terminals WL and PGND of the EMPS ECU.
- (4) Turn the ignition switch ON.
- (5) Read the DTC from the PS warning light.

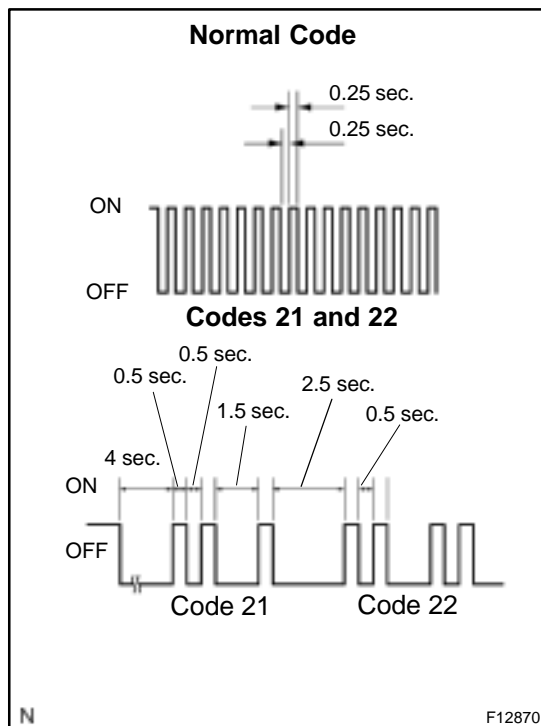**HINT:**


- If no code appears, inspect the diagnostic circuit and PS warning light circuit (See page [DI-491](#) or [DI-486](#)).
 - As an example, the blinking patterns for normal code and codes 21 and 22 are shown on the left.
- (6) Codes are explained in the DTC chart on page [DI-460](#).
 - (7) After completing the check, disconnect terminals Tc and CG of the DLC3, and turn off the display. If 2 or more malfunctions are indicated at the same time, the lowest numbered DTC will be displayed first.

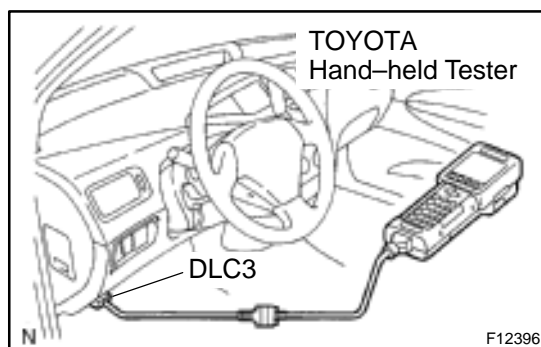


- (c) In case of using TOYOTA hand-held tester:
Check the DTC.
 - (1) Hook up the TOYOTA hand-held tester to the DLC3.
 - (2) Turn the ignition switch ON.
 - (3) Read the DTC by following the prompts on the tester screen.

HINT:


Please refer to the TOYOTA hand-held tester operator's manual for further details.

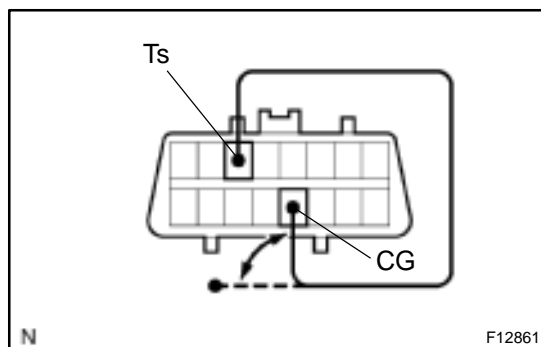

- (d) In case of not using TOYOTA hand-held tester:
Clear the DTC.
 - (1) Using SST, connect terminals Ts and CG of DLC3.
SST 09843-18040
 - (2) Turn the ignition switch ON.
 - (3) ON and OFF the terminal CG of the DLC3 4 times or more within 8 seconds, delete DTC of the EMPS ECU.
 - (4) Check that the PS warning light shows the normal code.
 - (5) Remove the SST from the DLC3.
SST 09843-18040

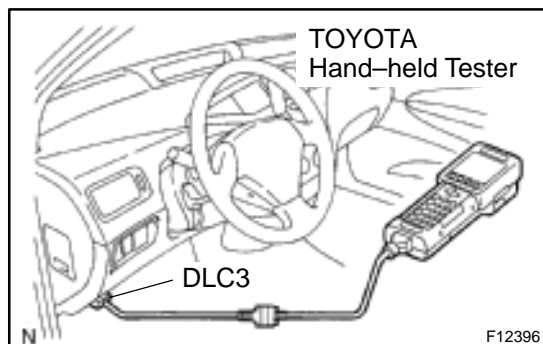

- (e) In case of using TOYOTA hand-held tester:
Clear the DTC.
- (1) Hook up the TOYOTA hand-held tester to the DLC3.
 - (2) Turn the ignition switch ON.
 - (3) Operate the TOYOTA hand-held tester to erase the codes. (See TOYOTA hand-held tester operator's manual.)

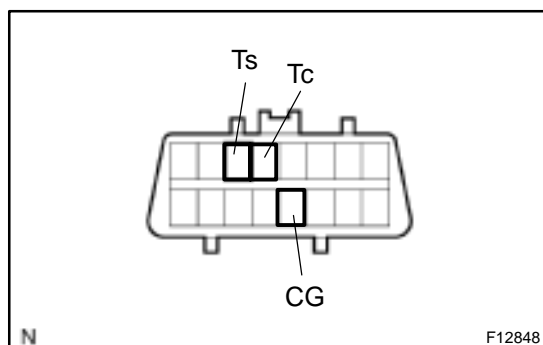

2. INPUT SIGNAL CHECK (TEST MODE)

- (a) In case of not using TOYOTA hand-held tester:
Check the input signal.
- (1) Turn the ignition switch OFF.
 - (2) Using SST, connect terminals Ts and CG of DLC3.
SST 09843-18040
 - (3) Check the warning light goes off with driving more than 20 km/h (12 mph).


HINT:

If the warning light goes off during driving, the sensor can be judged to normal.


- (4) Stop the vehicle.
- (5) Using SST, connect terminals Tc and CG of DLC3.
SST 09843-18040
- (6) Read the number of blinks of the PS warning light.

HINT:

- See the list of DTC shown on the next page.
- Even a sensor is normal, it output codes 71 and 72 during test mode.

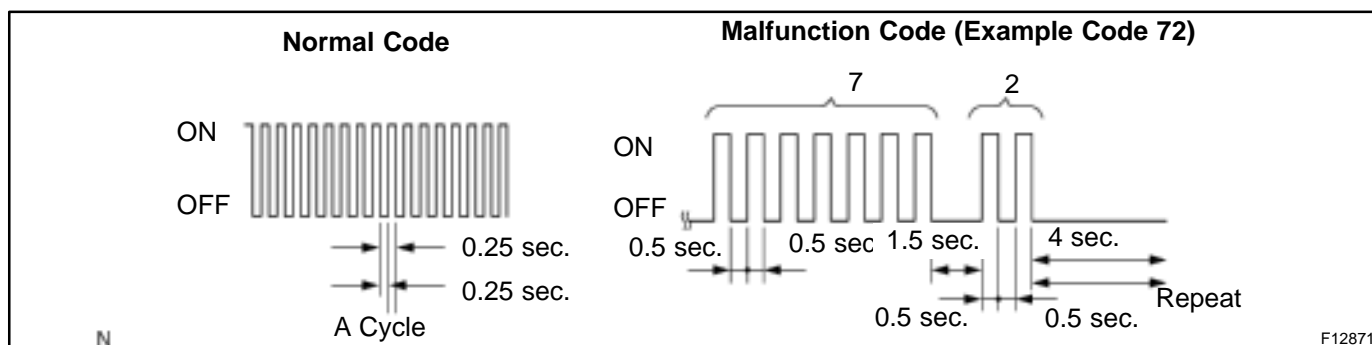

- (7) After doing check, disconnect the SST from the terminals Ts and CG, Tc and CG of DLC3, and turn the ignition switch OFF.
SST 09843-18040

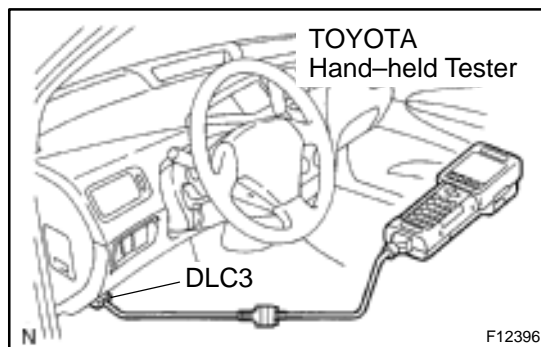

- (b) In case of using TOYOTA hand-held tester:
Check the input signal.
- (1) Hook up the TOYOTA hand-held tester to the DLC3.
 - (2) Check the warning light goes off with driving more than 20 km/h (12 mph).
 - (3) Read the DTC by following the prompts on the tester screen.

HINT:

- Please refer to the TOYOTA hand-held tester operator's manual for further details.
- See the list of DTC shown on the bottom of this page.
- Even a sensor is normal, it output codes 71 and 72 during test mode.

DTC of input signal check function:

Code No. (See page)	Diagnosis	Trouble Area
C1515/15 (DI-468)	Calibration of torque sensor zero point Not Performed	–
C1516/16 (DI-469)	Calibration of torque sensor zero point Not completed	–
C1571/71 C1572/72 (DI-474)	Speed sensor malfunction (Test mode)	<ul style="list-style-type: none"> • Right rear or left rear speed sensor • Sensor installation • Right rear or left rear speed sensor rotor • Right rear or left rear speed sensor circuit • Brake ECU • EMPS ECU

3. CALIBRATION OF TORQUE SENSOR ZERO POINT**HINT:**


Perform this operation in the following cases.

- When removing and installing "steering wheel", "tilt steering column" and "electric power steering gear".
 - When replacing EMPS ECU.
- (a) Place front wheels and steering wheel facing straight ahead.
- (b) In case of using TOYOTA hand-held tester:
Perform the torque sensor zero point initialization.

HINT:

If the EMPS ECU is replaced, however, this operation is not necessary.

- (1) Stop the vehicle.

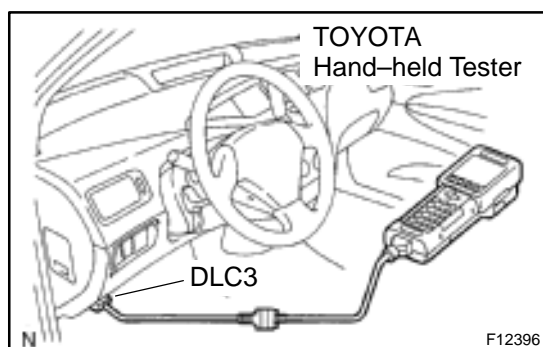

- (2) Hook up the TOYOTA hand-held tester to the DLC3.
- (3) Select the "TRQ SENS ADJUST" mode on the TOYOTA hand-held tester.
- (4) Select the "ZERO POINT INITIALIZE".
- (5) Following the screen instructions, perform the torque sensor zero point initialization.

HINT:

Please refer to the TOYOTA hand-held tester operator's manual for further details.

- (c) In case of not using TOYOTA hand-held tester:
Perform the torque sensor zero point initialization.

HINT:

If the EMPS ECU is replaced, however, this operation is not necessary.

- (1) Stop the vehicle.
- (2) Using SST, connect terminals Ts and CG of DLC3.
SST 09843-18040
- (3) Using SST, connect terminals Tc and CG of DLC3.
SST 09843-18040
- (4) ON and OFF the terminal Tc of DLC3 20 times within 20 seconds.
- (5) Check that the DTC C1515/15.

- (d) In case of using TOYOTA hand-held tester:
Perform the torque sensor zero point calibration.

HINT:

Don't touch the steering wheel.

- (1) Select the "TRQ SENS ADJUST" mode on the TOYOTA hand-held tester.
- (2) Select the "ZERO POINT ADJUST".
- (3) Following the screen instructions, perform the torque sensor zero point calibration.



HINT:


Please refer to the TOYOTA hand-held tester operator's manual for further details.

- (e) In case of not using TOYOTA hand-held tester:
Perform the torque sensor zero point calibration.

HINT:

- Don't touch the steering wheel.
 - Check the DTC except C1515/15 is not output.
- (1) Stop the vehicle and turn the ignition switch OFF.

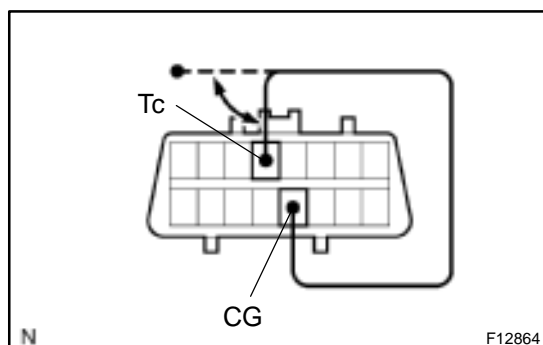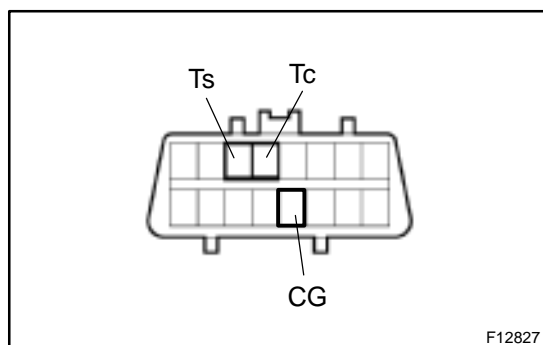

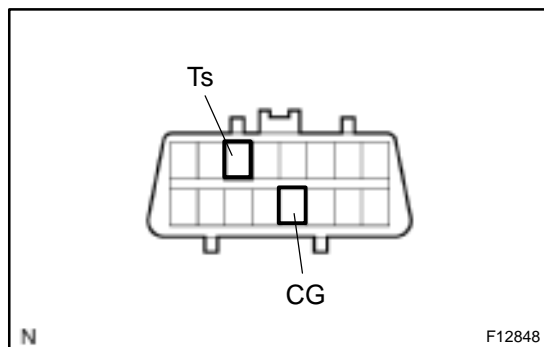

- (2) Using SST, connect terminals Ts and CG of DLC3 and ignition switch ON.

SST 09843-18040

- (3) Disconnect the SST.

SST 09843-18040

DIAGNOSTIC TROUBLE CODE CHART

HINT:

- Using SST 09843–18040, connect terminals Tc and CG of the DLC3.
- If a malfunction code is displayed during the DTC check, check the circuit listed for the code. For details of each code, turn to the page referred to under the "See page" for respective "DTC No." in the DTC chart.

DTC No. (See page)	Detection Item	Trouble Area
C1511/11 (DI-465)	Torque sensor circuit malfunction	<ul style="list-style-type: none"> • Torque sensor • EMPS ECU
C1512/12 (DI-465)		
C1513/13 (DI-465)		
C1514/14 (DI-465)		
C1521/21 (DI-471)	Motor circuit malfunction	<ul style="list-style-type: none"> • Power steering gear assembly with motor • EMPS ECU
C1522/22 (DI-471)		
C1523/23 (DI-471)		
C1524/24 (DI-471)		
C1531/31 (DI-473)	EMPS ECU malfunction	EMPS ECU
C1532/32 (DI-473)		
C1533/33 (DI-473)		
C1541/41 (DI-474)	Speed sensor malfunction	<ul style="list-style-type: none"> • Speed sensor • Brake ECU • EMPS ECU
C1542/42 (DI-474)		
C1543/43 (DI-474)		
C1551/51 (DI-476)	IG power source circuit malfunction	<ul style="list-style-type: none"> • EMPS ECU • Power source circuit • Charging system
C1552/52 (DI-479)	PIG power source drop voltage malfunction	<ul style="list-style-type: none"> • EMPS ECU • Power source circuit
C1553/53 (DI-482)	When resetting voltage, vehicle is being driven	EMPS ECU
C1554/54 (DI-483)	EMPS relay circuit malfunction	<ul style="list-style-type: none"> • EMPS relay • EMPS ECU • EMPS relay circuit
C1555/55 (DI-473)	EMPS ECU malfunction	EMPS ECU
C1556/56 (DI-486)	P/S warning light circuit	<ul style="list-style-type: none"> • Multiinformation display • EMPS ECU

C1557/57 (DI-488)	Memory of overheat prevention control	–
C1558/58 (DI-488)	Memory of voltage drop at motor power supply	–
C1559/59 (DI-488)	Memory of continuous control under high load	–
Always ON (DI-489)	Malfunction in EMPS ECU	<ul style="list-style-type: none"> • Power source circuit • EMPS ECU • PS warning light circuit

CIRCUIT INSPECTION


DTC	C1511/11–C1514/14	Torque Sensor Circuit Malfunction
-----	-------------------	-----------------------------------

CIRCUIT DESCRIPTION

Steering torque is detected from output current of torque sensor.


DTC No.	Detection Item	Trouble Area
C1511/11	Torque sensor malfunction	• Power steering gear assembly with motor • EMPS ECU
C1512/12		
C1513/13		
C1514/14	Open or short torque sensor circuit	

WIRING DIAGRAM

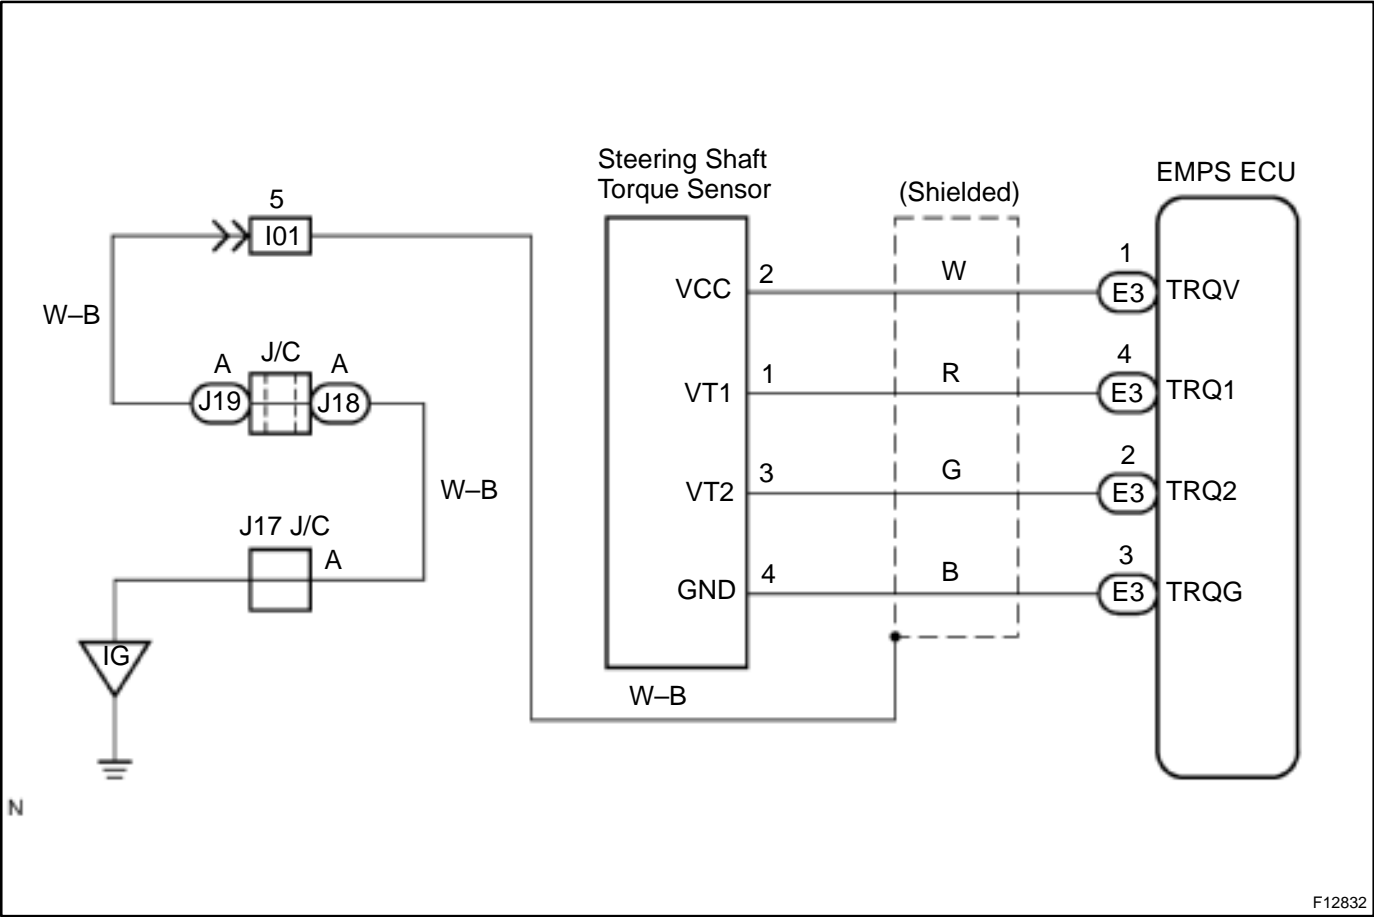

INSPECTION PROCEDURE

1	Check voltage between terminals TRQV and TRQG of EMPS ECU.
---	--

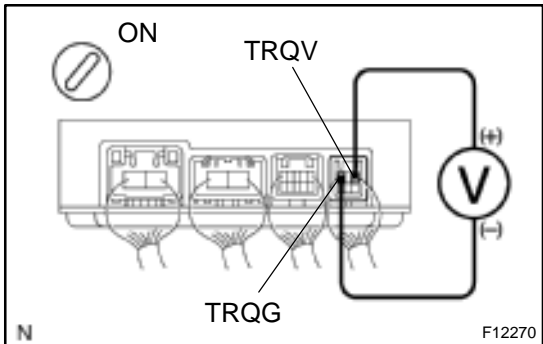

PREPARATION:

Remove the EMPS ECU with connectors still connected.

CHECK:

Measure the voltage between terminals TRQV and TRQG of EMPS ECU connector.

OK:

Voltage: 4.5 – 5.5 V

NG	Check and replace the EMPS ECU.
----	---------------------------------


OK

2	Check for open and short circuit in harness and connector between terminals TRQV and TRQG of EMPS ECU connector (See page IN-41).
---	---

NG	Repair and replace harness or connector.
----	--

OK

3	Check voltage between terminals VT ₁ and GND, VT ₂ and GND of torque sensor connector.
---	--

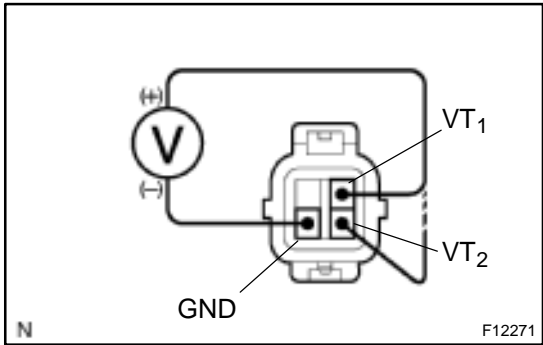

PREPARATION:

Remove the torque sensor with connectors still connected.

CHECK:

Measure the voltage between terminals VT₁ and GND, VT₂ and GND of torque sensor connector.

OK:

Steering Position	VT ₁	VT ₂
Center position	2.1 – 2.9 V	2.1 – 2.9 V
Right turned	0.15 – 2.9 V	2.1 – 4.85 V
Left turned	2.1 – 4.85 V	0.15 – 2.9 V

NG

Check and replace power steering gear assembly with motor (See page [SR-17](#)).

OK**4**

Check for open and short circuit in harness and connector between terminals VT₁ of torque sensor connector and TRQ₁ of EMPS ECU connector, VT₂ of torque sensor connector and TRQ₂ of EMPS ECU connector (See page [IN-41](#)).

NG

Repair and replace harness or connector.

OK

Check and replace EMPS ECU.

DTC	C1516/16	Calibration of Torque Sensor Zero Point Not Completed
------------	-----------------	--


CIRCUIT DESCRIPTION

This DTC does not indicate trouble. This is detected when the torque sensor zero point calibration is not completed normally.

DTC No.	DTC Detecting Condition	Trouble Area
C1516/16	This is detected when the torque sensor zero point calibration is not completed normally.	–

INSPECTION PROCEDURE

1	Perform calibration of torque sensor zero point (See page DI-454).
----------	---



2	Is DTC C1516/16 output?
----------	--------------------------------


Check DTC on page [DI-460](#).

NO	No problem.
-----------	--------------------




3	Is DTC C1532/32 output?
----------	--------------------------------

YES	Check and replace EMPS ECU.
------------	------------------------------------



4	Perform calibration of torque sensor zero point again (See page DI-454).
----------	---



5	Is DTC C1516/16 output after attempted 3 times or more?
---	---


YES**Replace the power steering gear assembly with motor.****NO****No problem.**

DTC	C1521/21–C1524/24	Motor Circuit Malfunction
------------	--------------------------	----------------------------------

CIRCUIT DESCRIPTION


DTC No.	Detection Item	Trouble Area
C1521/21	Short circuit of motor terminal or abnormal voltage or current in motor circuit.	<ul style="list-style-type: none"> • Power steering gear assembly with motor • EMPS ECU
C1522/22		
C1523/23		
C1524/24		

WIRING DIAGRAM

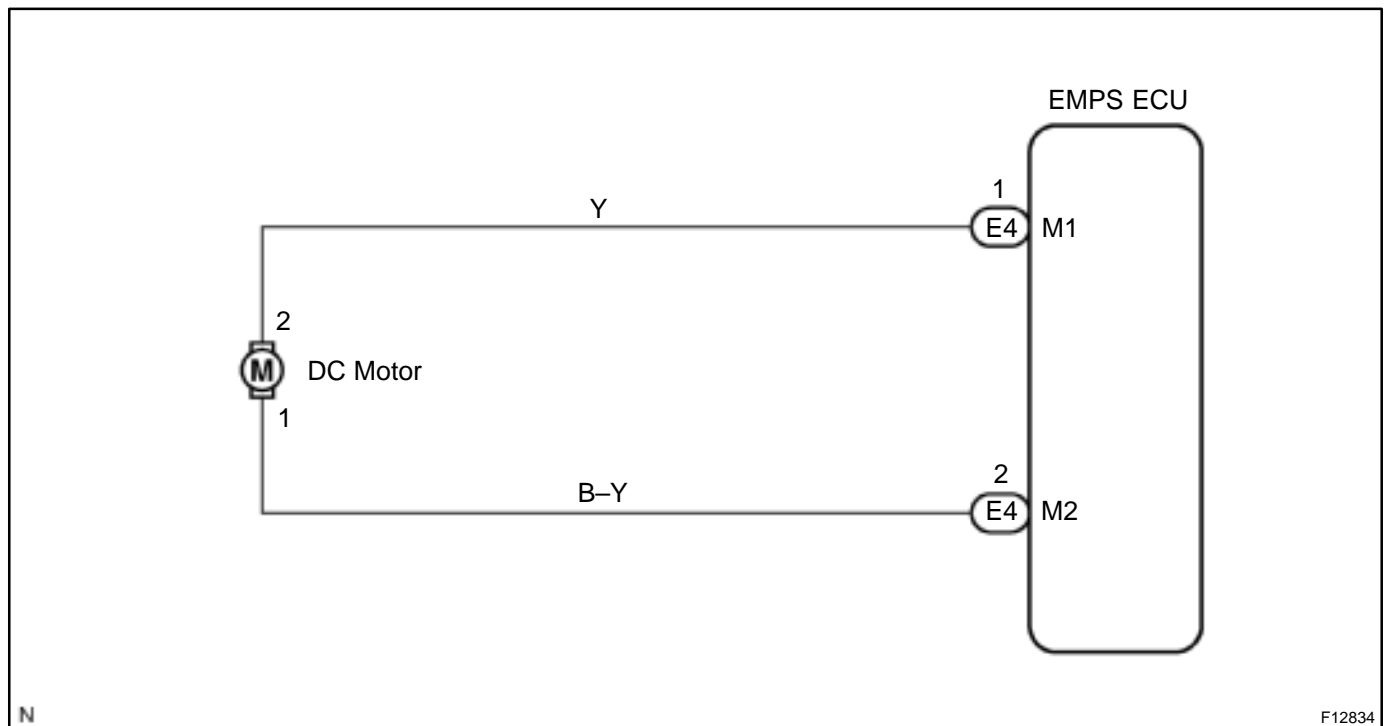

INSPECTION PROCEDURE

1	Check voltage between terminals M₁ and M₂ of EMPS ECU connector.
----------	---

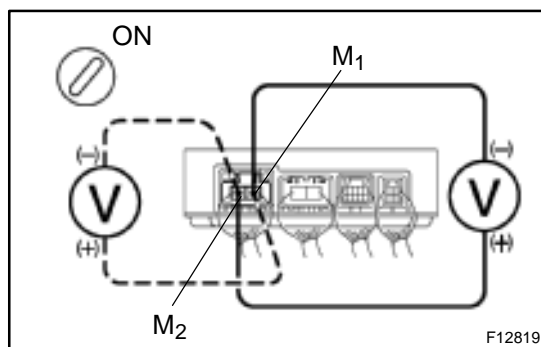

PREPARATION:

- Remove the EMPS ECU with connectors still connected.
- Turn the ignition switch ON.

CHECK:

Turn the steering wheel to left and right and measure the voltage between terminals M₁ and M₂ of EMPS ECU connector.

OK:

Voltage: 9 – 14 V

NG

Check and replace the EMPS ECU.

OK


- 2** Check for open and short circuit in harness and connector between terminals M_1 and M_2 of EMPS ECU connector (See page [IN-41](#)).

NG

Repair or replace harness or connector.

OK

- 3** Check continuity between terminal M_1 and M_2 of motor connector.

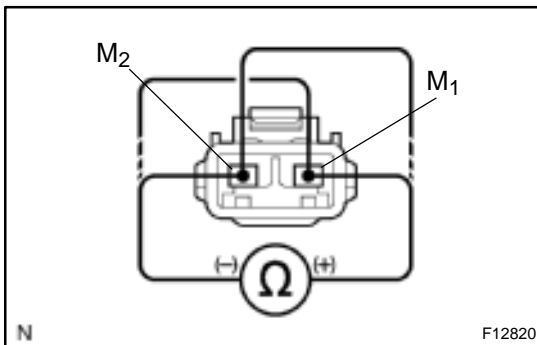**PREPARATION:**

Disconnect the connector from the motor.

CHECK:Measure the resistance between terminals M_1 and M_2 of motor connector.**OK:**Resistance: $0.1 - 1 \Omega$

NG

Check and replace the power steering gear assembly with motor (See page [SR-17](#)).

OK

Check and replace the EMPS ECU.


DTC	C1541/41–C1543/43	Speed Sensor Malfunction
------------	--------------------------	---------------------------------

DTC	C1571/71, C1572/72	Speed Sensor Malfunction (Test Mode)
------------	---------------------------	---

CIRCUIT DESCRIPTION


DTC No.	DTC Detecting Condition	Trouble Area
C1541/41	Speed sensor malfunction	<ul style="list-style-type: none"> • Speed sensor • Brake ECU • EMPS ECU
C1542/42		
C1543/43		
C1571/71 C1572/72	Speed sensor malfunction (Test mode)	<ul style="list-style-type: none"> • Right rear or left rear speed sensor • Sensor installation • Right rear or left rear speed sensor rotor • Right rear or left rear speed sensor circuit • Brake ECU • EMPS ECU

WIRING DIAGRAM

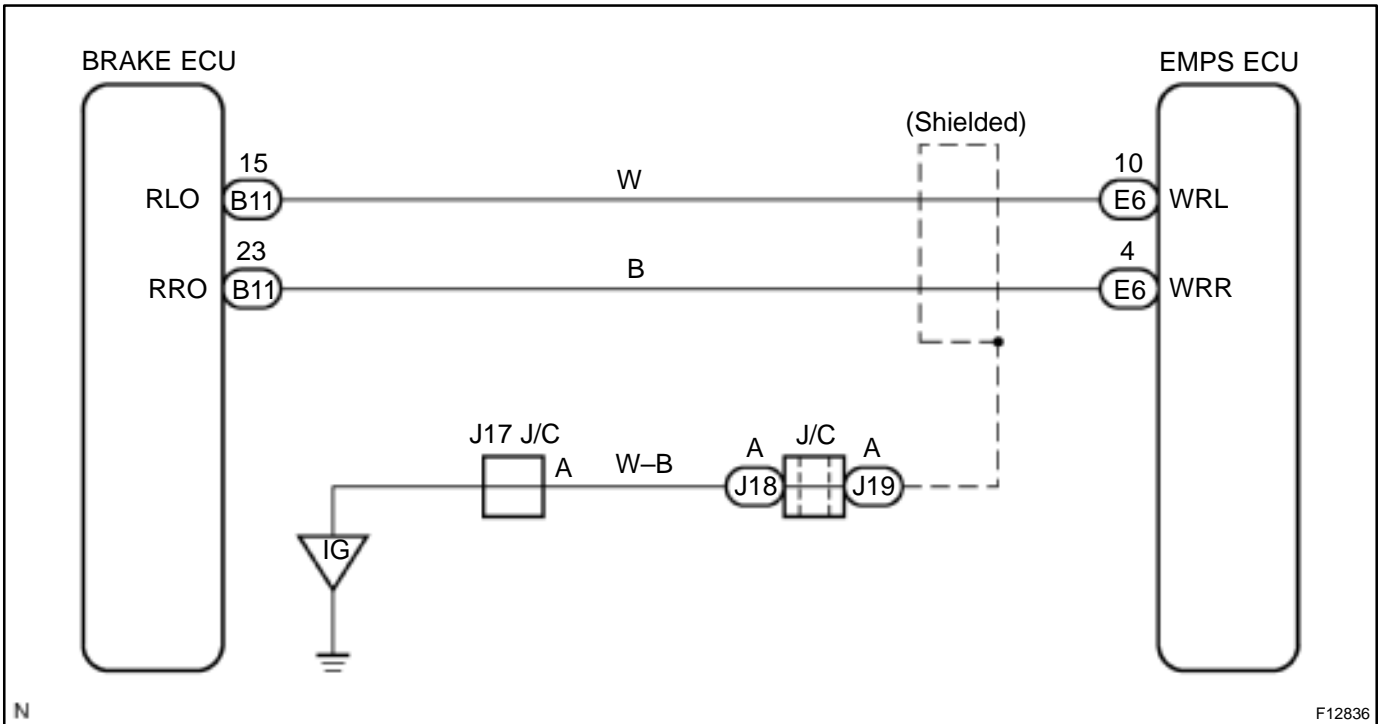

INSPECTION PROCEDURE

1	Check continuity between terminals WRR and PGND, WRL and PGND of EMPS ECU connector.
---	--

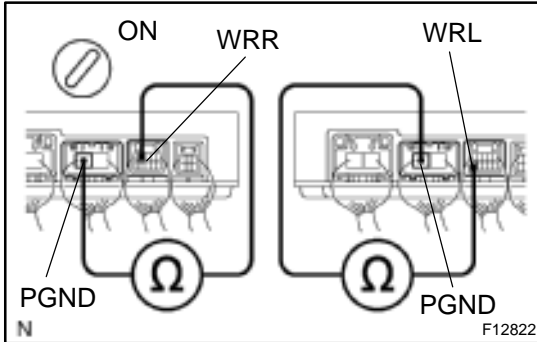**PREPARATION:**

Remove the EMPS ECU with connectors still connected.

CHECK:

Turn the ignition switch ON and measure the resistance between terminals WRR and PGND, WRL and PGND of EMPS ECU connector.

OK:

Resistance: 1M Ω or higher

NG

Check and replace the EMPS ECU.

OK

2	Check for open and short circuit in harness and connector between terminals WRR of EMPS ECU connector and RRO of brake ECU connector, WRL of EMPS ECU and RLO of brake ECU connector (See page IN-41).
---	---

NG

Repair and replace harness or connector.

OK

3	Check the DTC for the ABS with EBD and RBS (See page DI-351).
---	--

***1**

Repair ABS with EBD and RBS control system according to the code output.

*1: Output NG code


DTC	C1551/51	IG Power Source Circuit Malfunction
------------	-----------------	--


CIRCUIT DESCRIPTION

The EMPS ECU identifies ON or OFF status of ignition switch by this circuit.

DTC No.	DTC Detecting Condition	Trouble Area
C1551/51	The abnormal IG voltage value which is not within the specification is input to EMPS ECU.	<ul style="list-style-type: none"> • EMPS ECU • Power source circuit • Charging system

WIRING DIAGRAM

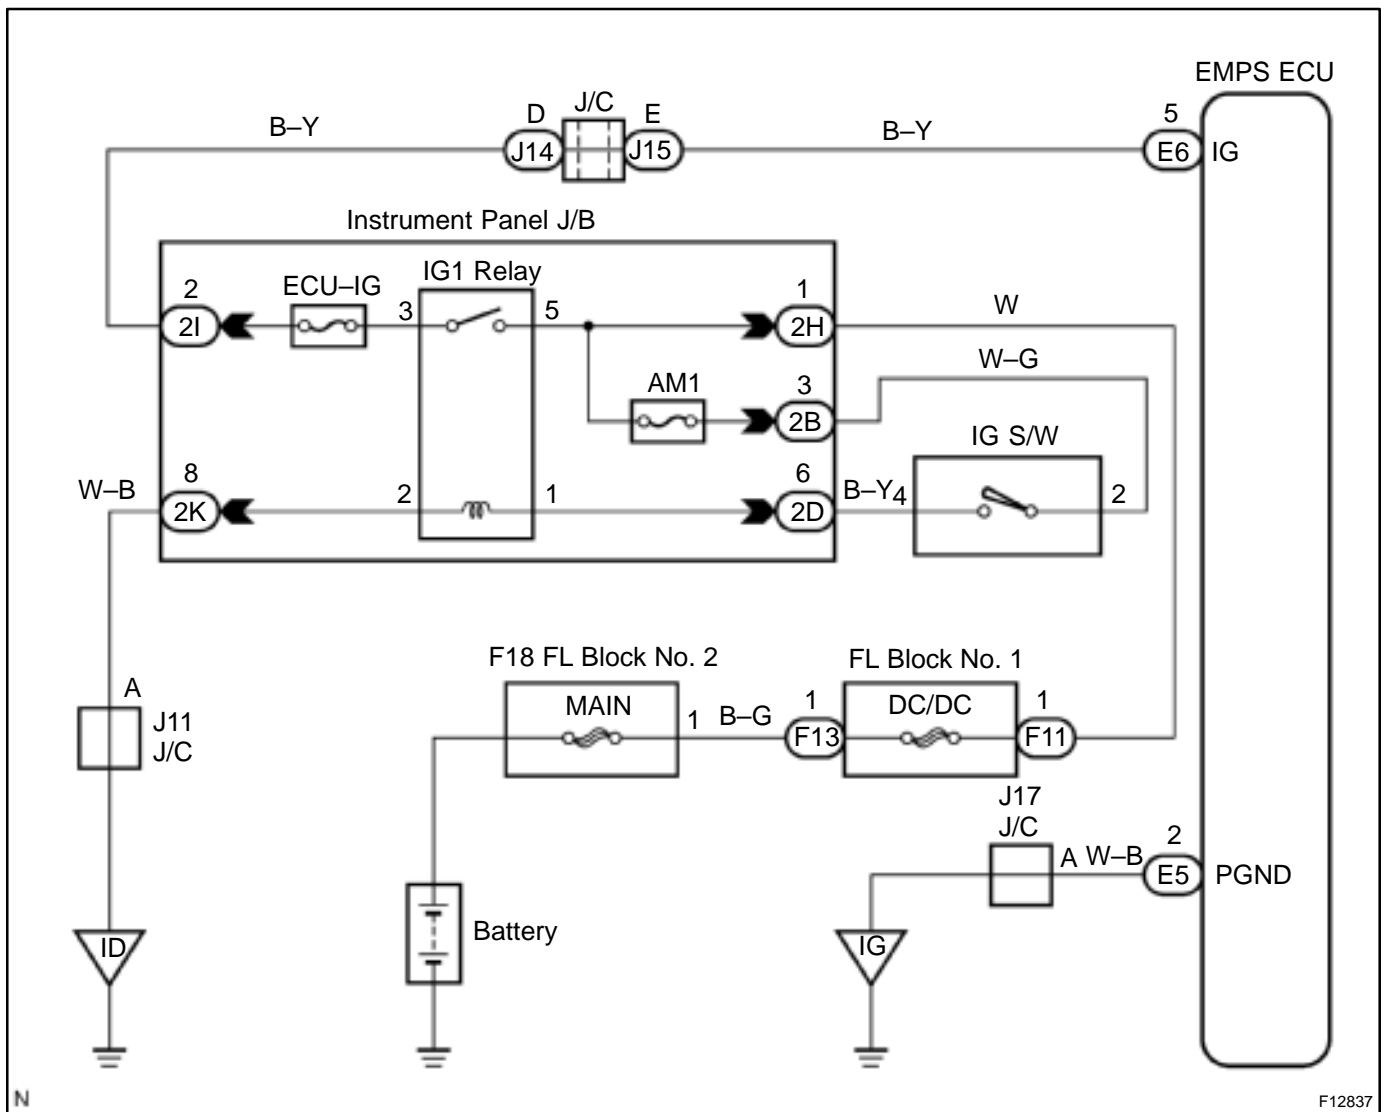

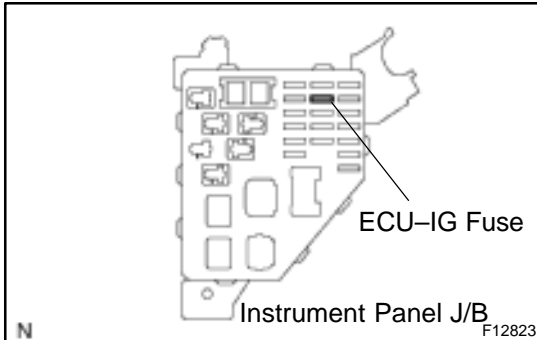INSPECTION PROCEDURE**1 Check ECU-IG fuse.****PREPARATION:**

Remove the ECU-IG fuse from the instrument panel J/B.

CHECK:

Check the continuity of the ECU-IG.

OK:

Continuity

NG

Check for short circuit in all harness and components connected to ECU-IG fuse (See attached wiring diagram).

OK

2 Check that the battery positive voltage when IG switch is OFF.**OK:**


Voltage: 9 – 14 V

NG

Charge or replace the battery.

OK

3 Check voltage between terminals IG and PGND of EMPS ECU connector.

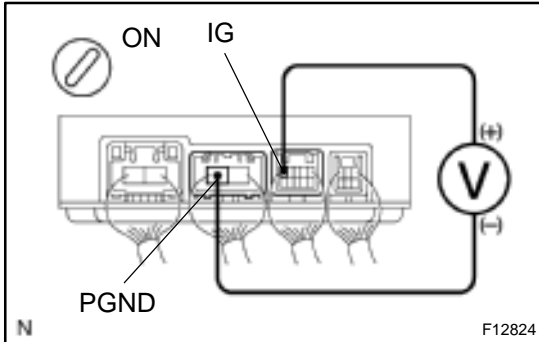

PREPARATION:

Remove the EMPS ECU with connectors still connected.

CHECK:

Turn the ignition switch ON and measure the voltage between terminals IG and PGND of EMPS ECU connector.

OK:


Voltage: 9 – 14 V

OK

Check and replace the EMPS ECU.

NG

4 Check continuity between terminals PGND of EMPS ECU connector and body ground.

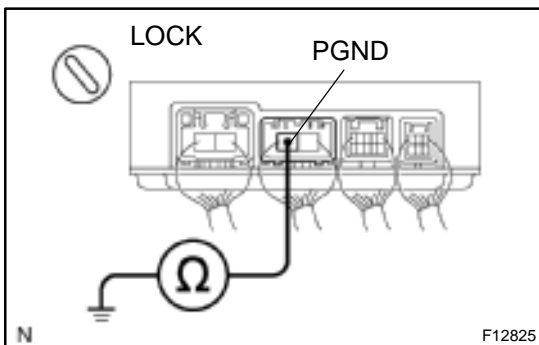

CHECK:

Measure the resistance between terminals PGND of EMPS ECU connector and body ground.

OK:

Resistance: 1 Ω or less

NG

Repair or replace harness or connector.

OK

Check for open and short circuit in harness and connector between EMPS ECU and ECU-IG fuse (See page IN-41).


DTC	C1552/52	PIG Power Source Circuit
-----	----------	--------------------------

CIRCUIT DESCRIPTION

When turning ignition switch ON, battery voltage is supplied to terminal PIG of EMPS ECU by EMPS relay operation.


DTC No.	DTC Detecting Condition	Trouble Area
C1552/52	The abnormal motor power source voltage value which is not within the specification is input to EMPS ECU.	<ul style="list-style-type: none"> • EMPS ECU • Power source circuit

WIRING DIAGRAM

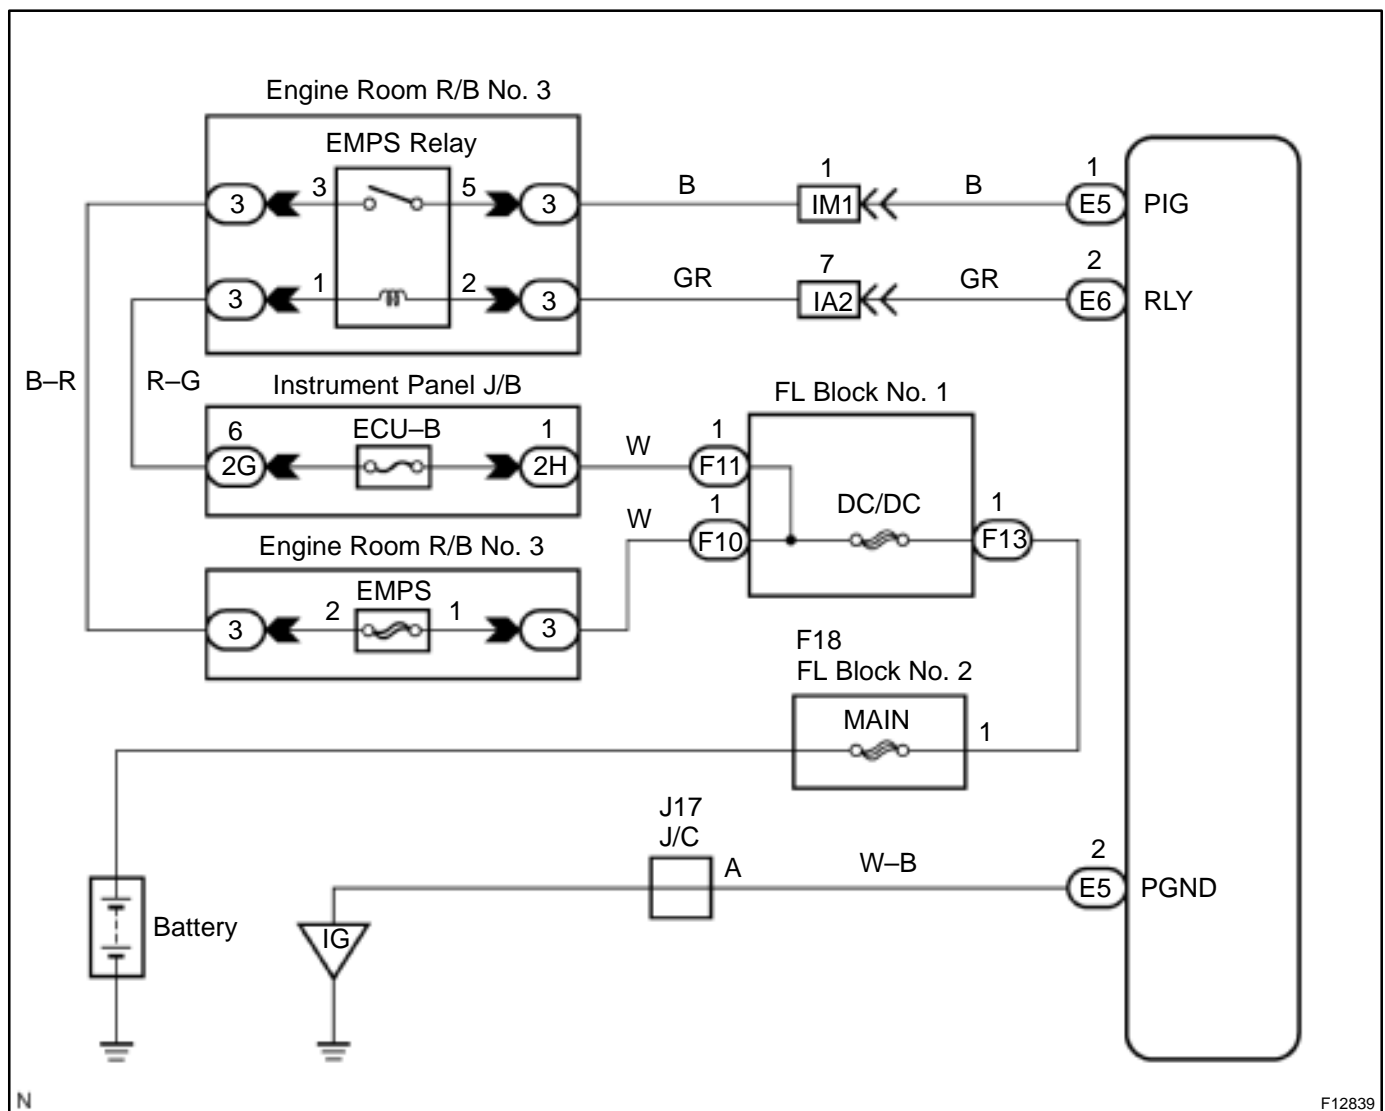

INSPECTION PROCEDURE

- 1 Check voltage between terminals PIG and PGND of EMPS ECU connector.**

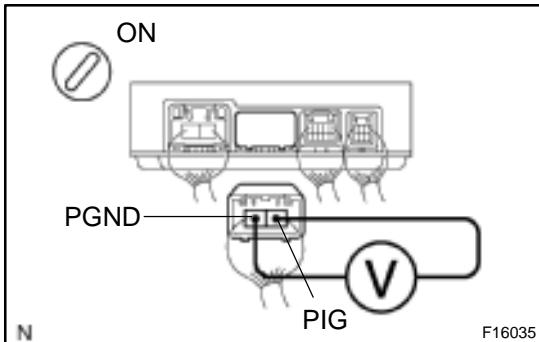**PREPARATION:**

5/18/01 Disconnect the connector from the EMPS ECU.

CHECK:

5/18/01 Turn the ignition switch ON and measure the voltage between terminals PIG and PGND of EMPS ECU connector.

OK:


Voltage: 9 – 14 V

OK

Check and replace EMPS ECU.

NG

- 2 Check continuity between terminals PGND of EMPS ECU connector and body ground.**

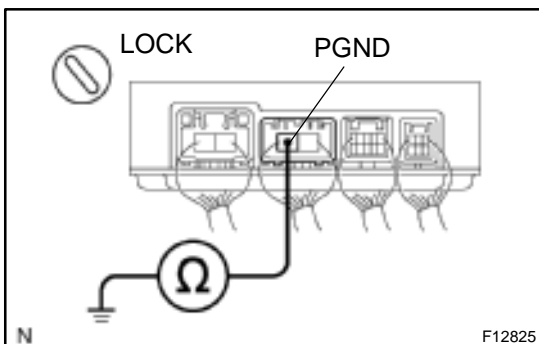**PREPARATION:**

5/18/01 Connect the connector back to the EMPS ECU.

CHECK:

5/18/01 Measure the resistance between terminals PGND of EMPS ECU connector and body ground.


OK:

Resistance: 1 Ω or less

NG

Repair or replace harness or connector.

OK

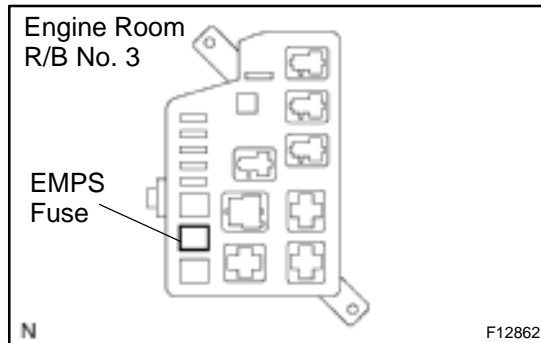3**Check EMPS fuse.****PREPARATION:**

5/18/01 Remove the EMPS fuse from engine room R/B No. 3.

CHECK:

5/18/01 Check continuity of EMPS fuse.


OK:**Continuity****NG****Check for short circuit in harness and all components connected to EMPS fuse (See attached wiring diagram).****OK****Check for open and short circuit in harness and connector between EMPS ECU and battery (See page [IN-41](#)).**

DTC	C1554/54	EMPS Relay Circuit
------------	-----------------	---------------------------

CIRCUIT DESCRIPTION

DTC No.	DTC Detecting Condition	Trouble Area
C1554/54	Open or short circuit is detected.	<ul style="list-style-type: none"> • EMPS ECU • EMPS relay • EMPS relay circuit


WIRING DIAGRAM

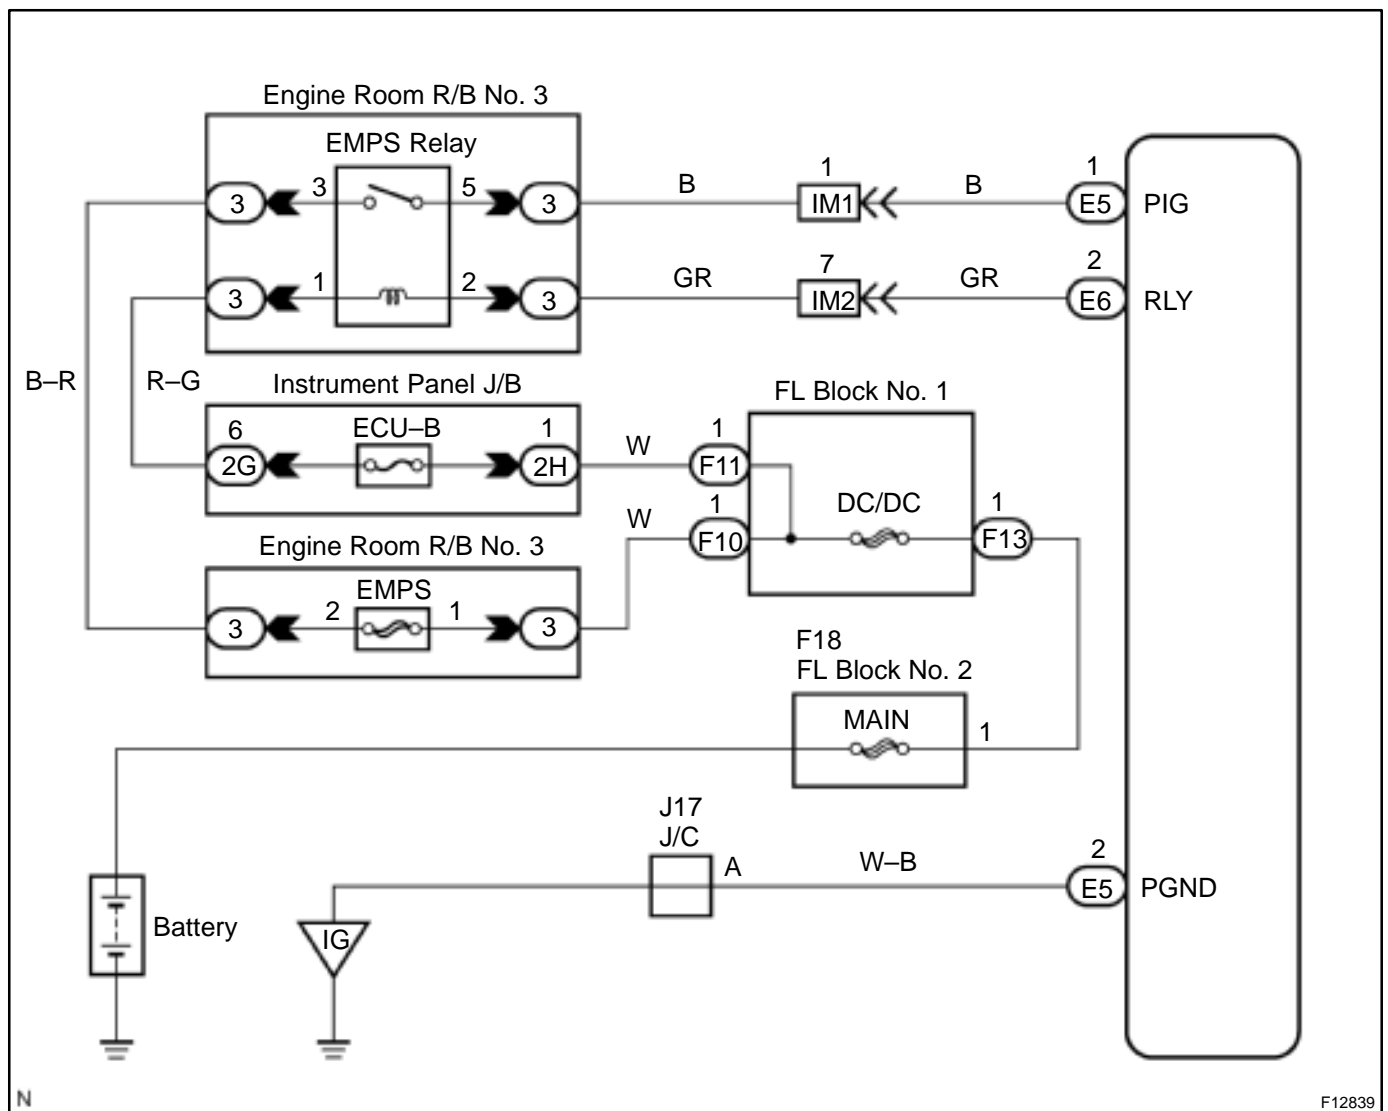

cardiagn.com

INSPECTION PROCEDURE

1 Check voltage between terminals RLY and PGND of EMPS ECU connector.

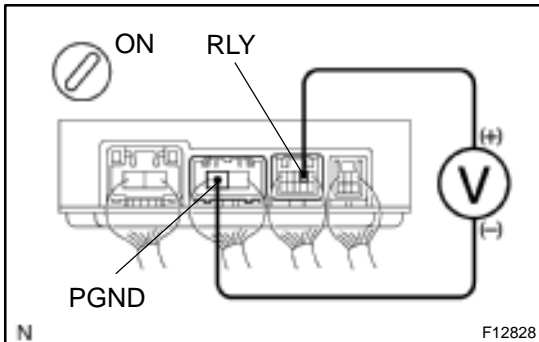**PREPARATION:**

Remove the EMPS ECU with connectors still connected.

CHECK:

Turn the ignition switch ON and measure the voltage between terminals RLY and PGND of EMPS ECU connector.

OK:


Voltage: 9 – 14 V

OK

Check or replace EMPS ECU.

NG

2 Check EMPS relay.

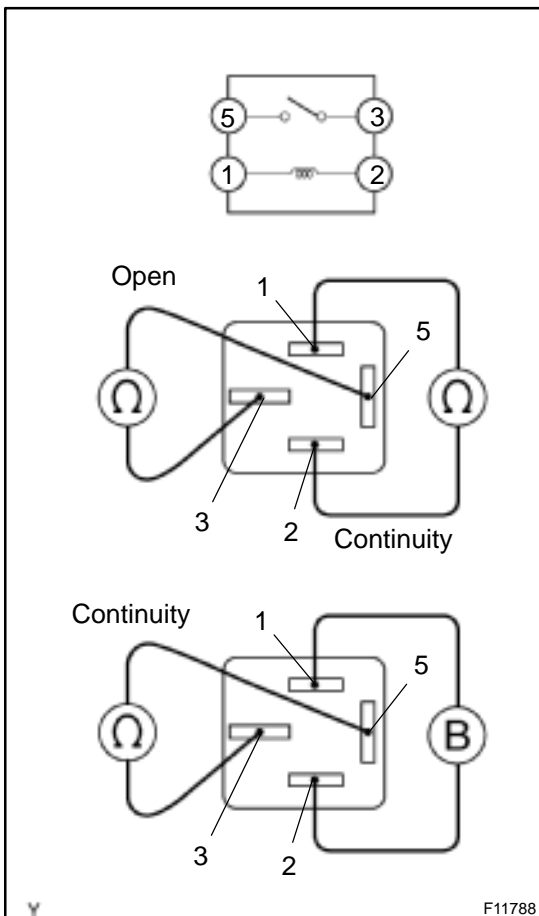**PREPARATION:**

Remove the EMPS relay from the engine room R/B No. 3.

CHECK:

Check the continuity between each terminal of the EMPS relay.

OK:

Terminals 1 and 2	Continuity (Reference value 80 Ω)
Terminals 3 and 5	Open

CHECK:

- Apply battery positive voltage between terminals 1 and 2.
- Check the continuity between the terminals.

OK:

Terminals 3 and 5	Continuity
-------------------	------------


NG

Replace EMPS relay.

OK

3

Check ECU-B fuse.

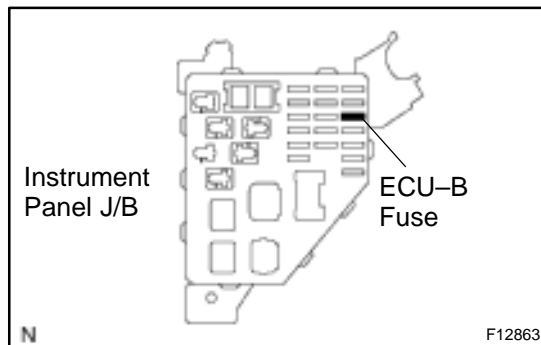**PREPARATION:**

Remove the ECU-B fuse from instrument panel J/B.

CHECK:

Check the continuity of ECU-B fuse.

OK:

Continuity

NG

Check for short in harness and all components connected to ECU-B fuse (See attached wiring diagram).

OK


Check for open and short circuit in harness and connector between EMPS ECU and battery (See page [IN-41](#)).

DTC	C1556/56	P/S Warning Light Circuit
------------	-----------------	----------------------------------

CIRCUIT DESCRIPTION

DTC No.	DTC Detecting Condition	Trouble Area
C1556/56	There is a malfunction in PS warning light circuit.	<ul style="list-style-type: none"> • Multiinformation display • EMPS ECU


WIRING DIAGRAM

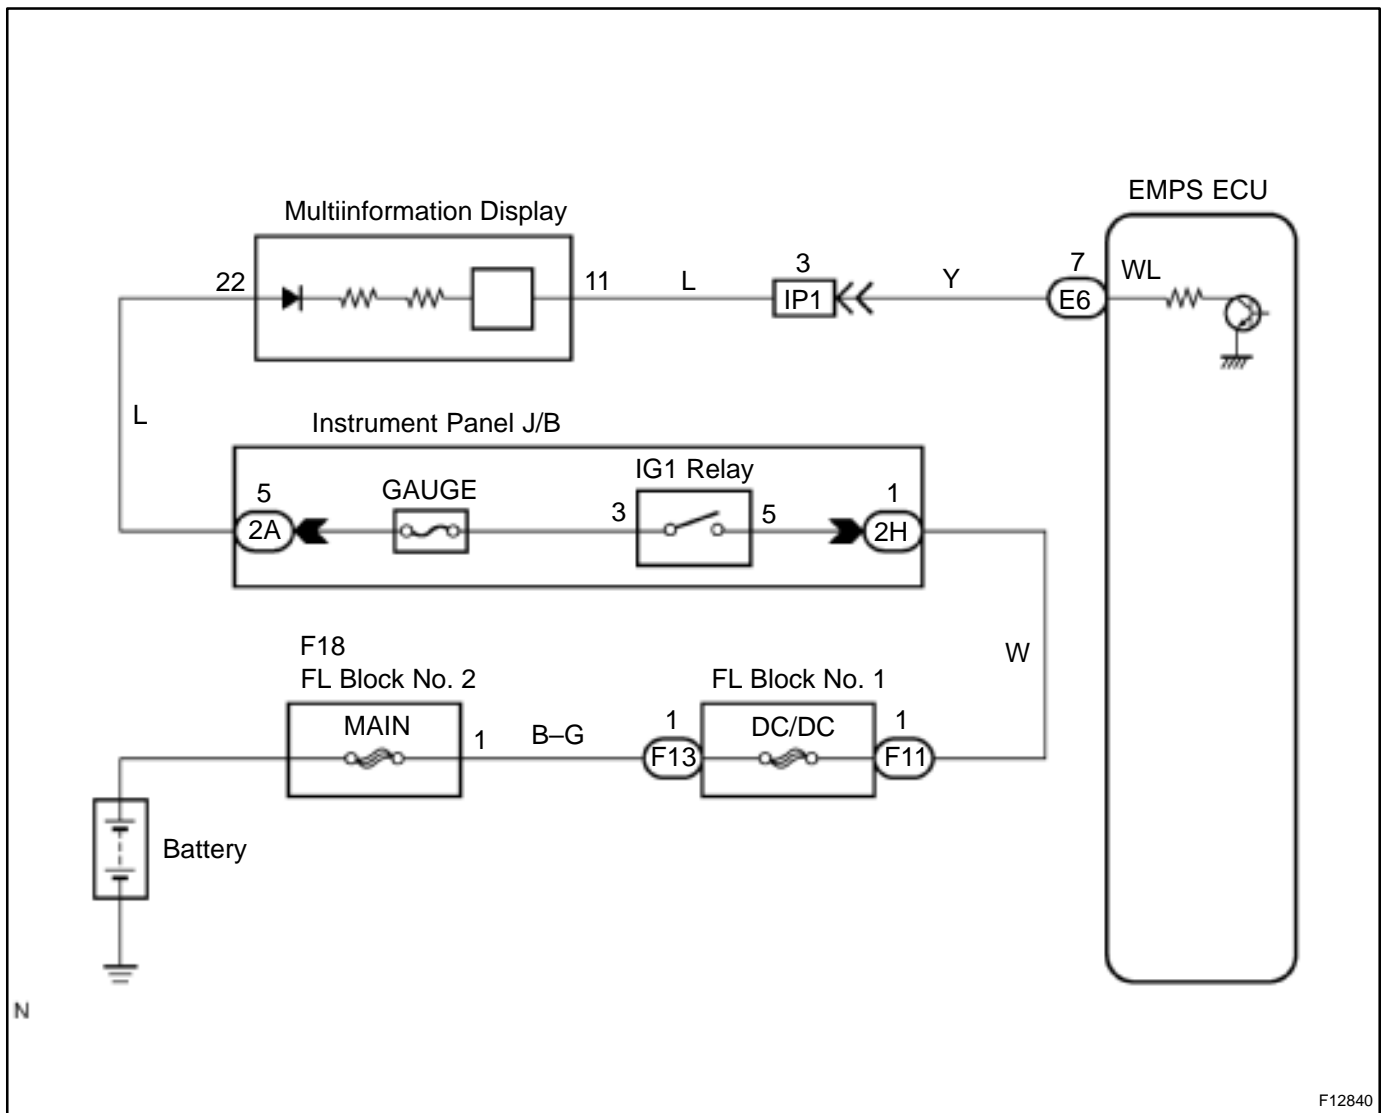

F12840

INSPECTION PROCEDURE

- | | |
|----------|--|
| 1 | Check voltage between terminals WL of EMPS ECU connector and body ground. |
|----------|--|

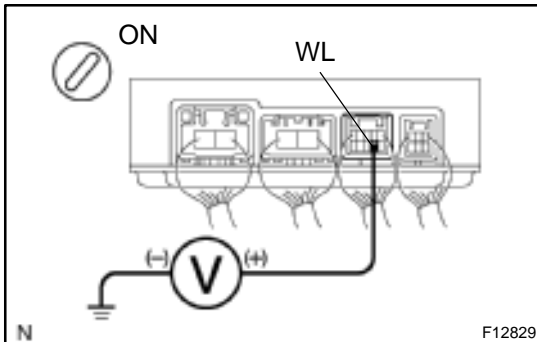**PREPARATION:**

Remove the EMPS ECU with connectors still connected.

CHECK:

Turn the ignition switch ON and measure the voltage between terminals WL of EMPS ECU connector and body ground.

OK:

Voltage: 9 – 14 V

NG**Check and replace EMPS ECU.****OK**

- | | |
|----------|--|
| 2 | Check for open and short circuit in harness and connector between EMPS ECU and multiinformation display (See page IN-41). |
|----------|--|

NG**Repair or replace harness or connector.****OK**

**Check multiinformation display circuit
(See page [BE-97](#)).**

DTC	Always ON	Malfunction in EMPS ECU
------------	------------------	--------------------------------

CIRCUIT DESCRIPTION

DTC No.	DTC Detecting Condition	Trouble Area
Always ON	There is a malfunction in the EMPS ECU internal circuit.	<ul style="list-style-type: none"> • Power source circuit • EMPS ECU • PS warning light circuit

INSPECTION PROCEDURE

1	Is DTC output?
----------	-----------------------

Check DTC on page [DI-460](#).

YES

Repair circuit indicated by output code.

NO

2	Is normal code displayed?
----------	----------------------------------

YES

Check and replace EMPS ECU.

NO

3	Does PS warning light goes off?
----------	--

YES

Check for open or short circuit in harness and connector between ECU-IG fuse and EMPS ECU (See page [IN-41](#)).

NO

4 Check battery positive voltage.**PREPARATION:**

Start the engine.

CHECK:

Check the battery positive voltage.

OK:

Voltage: 9 – 14 V

NG**Check and repair charging system.****OK****5 Check operation of PS warning light.****PREPARATION:**

- (a) Turn the ignition switch OFF.
- (b) Disconnect the connector from the EMPS ECU.
- (c) Turn the ignition switch ON.

CHECK:

Check the PS warning light goes OFF.

OK**Check and replace EMPS ECU.****NG**


Check for short circuit in harness and connector between multiinformation display and EMPS ECU, multiinformation display and DLC3 (See page [IN-41](#)).

Tc Terminal Circuit

CIRCUIT DESCRIPTION


Connecting terminals Tc and CG of the DLC3 causes the EMPS ECU to display the DTC by flashing the PS warning light.

WIRING DIAGRAM

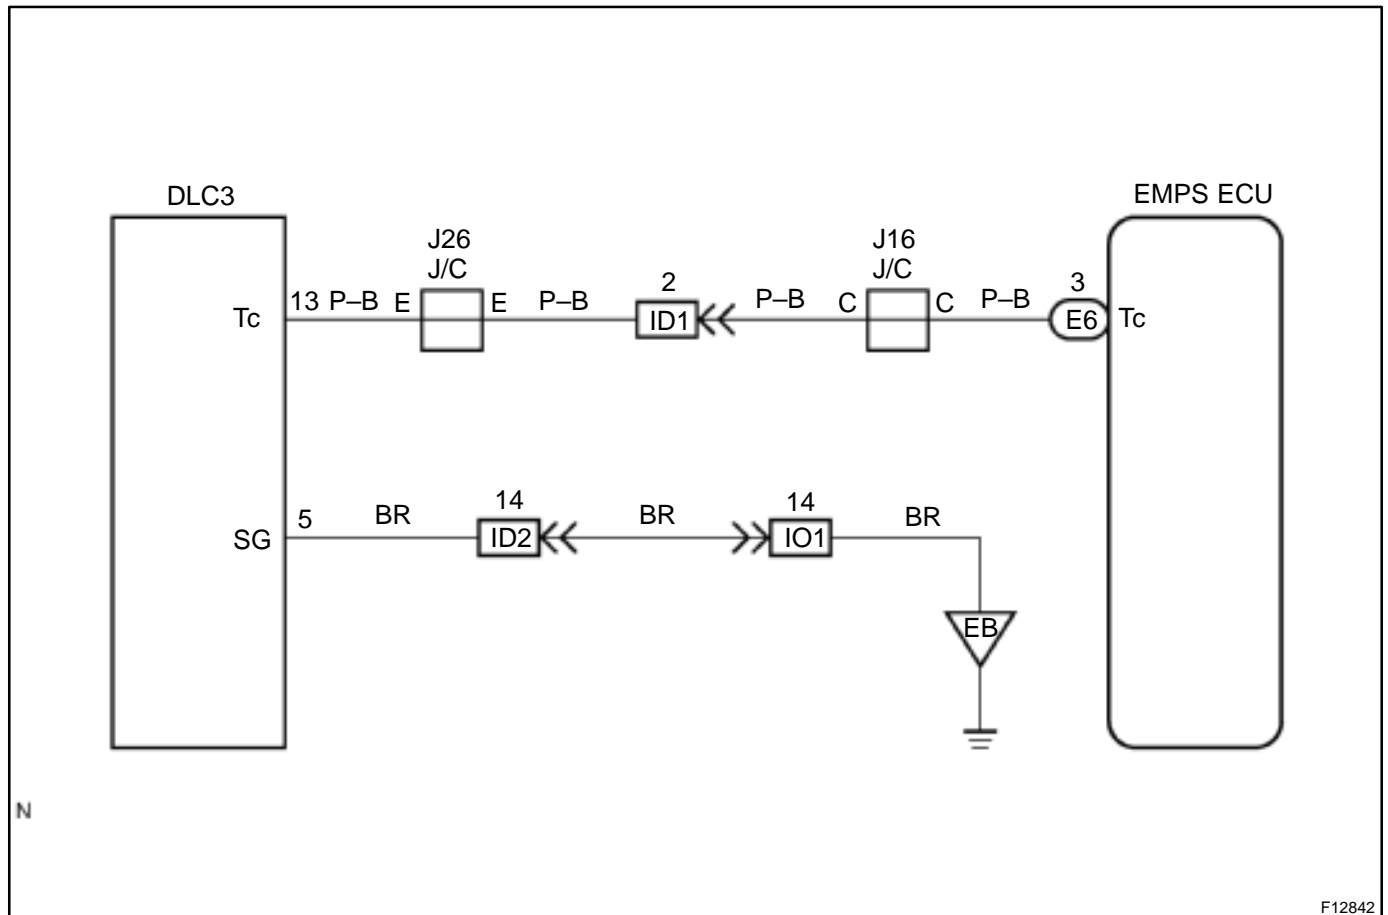

INSPECTION PROCEDURE

- | | |
|---|--|
| 1 | Check voltage between terminals Tc and CG of DLC3. |
|---|--|

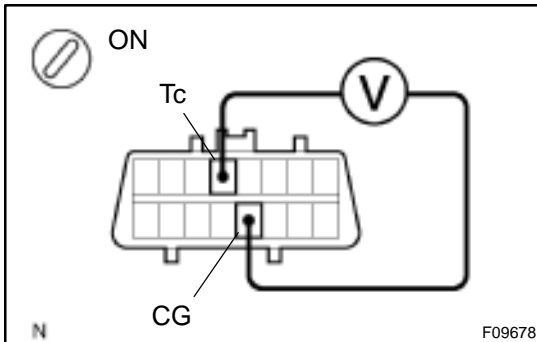**CHECK:**

Turn the ignition switch ON and measure the voltage between terminals Tc and CG of the DLC3.

OK:

Voltage: 9 – 14 V

OK

If PS warning light does not blink even after Tc and CG are connected, EMPS ECU may be defective.

NG

- | | |
|---|--|
| 2 | Turn the ignition switch OFF, and check for open and short circuit in harness and connector between EMPS ECU and DLC3, and DLC3 and body ground (See page IN-41). |
|---|--|

NG

Repair or replace harness or connector.

OK

Check and replace EMPS ECU.


Ts Terminal Circuit

CIRCUIT DESCRIPTION

The sensor check circuit detects abnormalities in the speed sensor signal which cannot be detected by the DTC check.


Connecting terminals Ts and CG of the DLC3 starts the check.

WIRING DIAGRAM

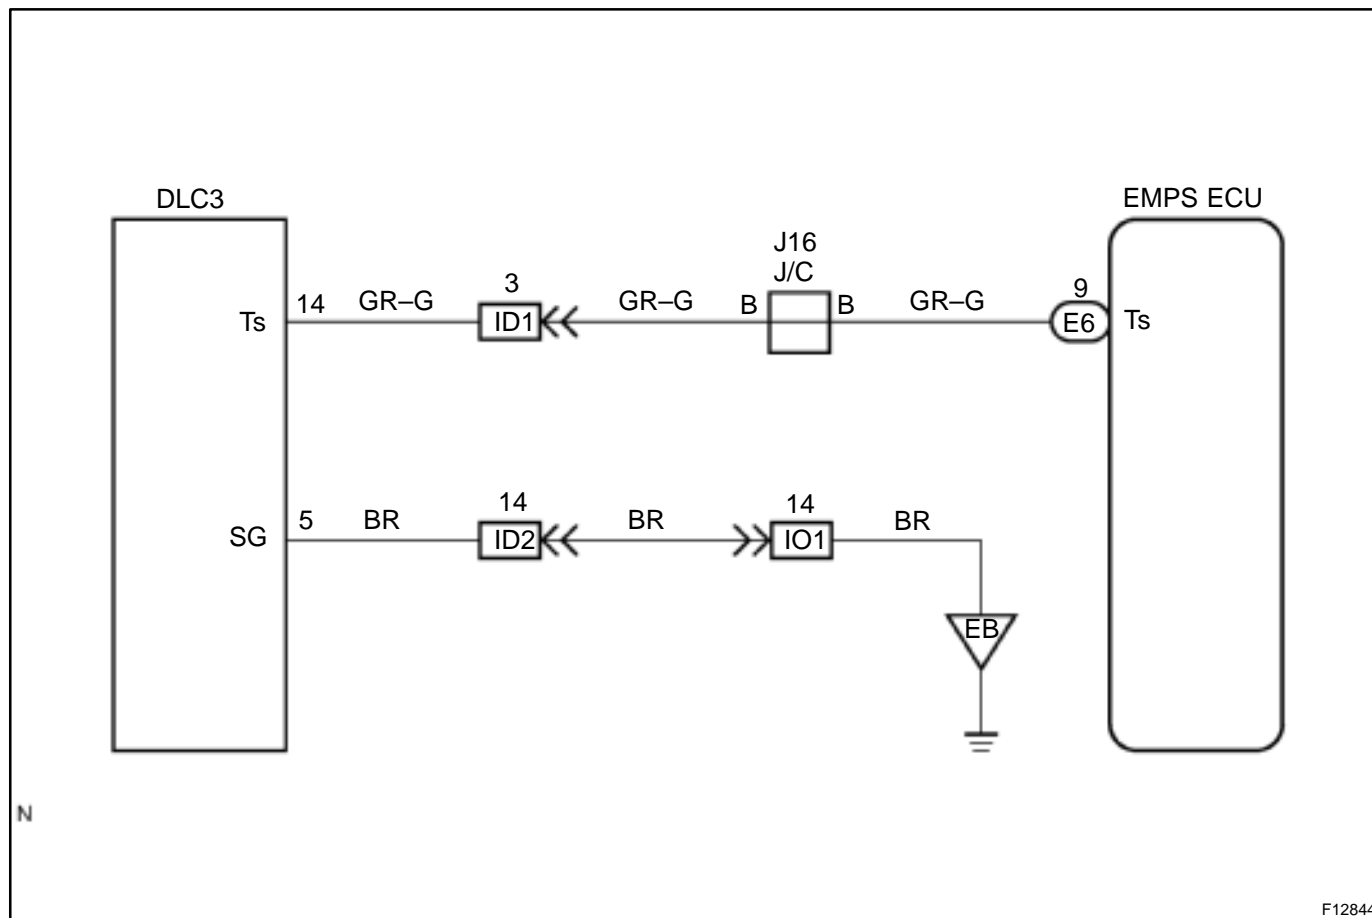

INSPECTION PROCEDURE

- | | |
|----------|---|
| 1 | Check voltage between terminals Ts and CG of DLC3. |
|----------|---|

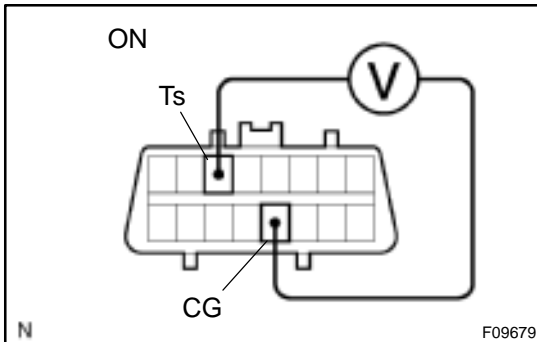**CHECK:**

Turn the ignition switch ON and measure the voltage between terminals Ts and CG of the DLC3.

OK:

Voltage: 9 – 14 V

OK

If PS warning light repeats turning ON and OFF even after Ts and CG are connected, EMPS ECU may be defective.

NG


- | | |
|----------|--|
| 2 | Turn the ignition switch OFF, and check for open and short circuit in harness and connector between EMPS ECU and DLC3, DLC3 and body ground (See page IN-41). |
|----------|--|

NG

Repair or replace harness or connector.

OK

Check and replace EMPS ECU.

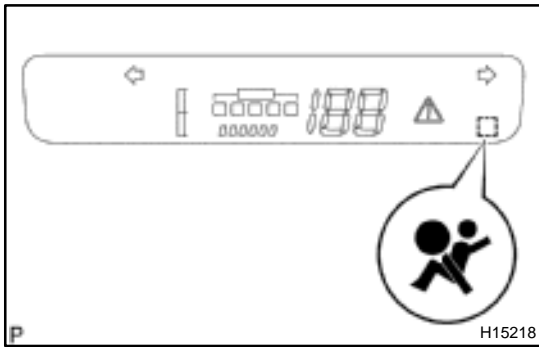


PRE-CHECK

1. SRS WARNING LIGHT CHECK

- Turn the ignition switch to the ON position and check that the SRS warning light lights up.
- Check that the SRS warning light goes out after approx. 6 seconds.

HINT:

- When the ignition switch is at ON and the SRS warning light remains on or flashes, the airbag sensor assembly has detected a malfunction code.
- If, after approx. 6 seconds have elapsed, the SRS warning light sometimes lights up or the SRS warning light lights up even when the ignition switch is OFF, a short in the SRS warning light circuit can be considered likely. Proceed to "SRS warning light circuit malfunction" on page DI-632.

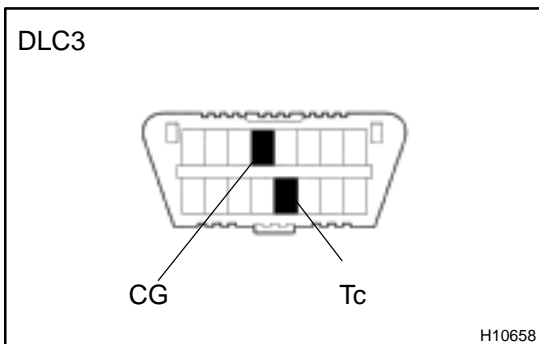

2. DTC CHECK (Using diagnosis check wire)

- Present troubles codes:

Output the DTC.

- Turn the ignition switch to the ON position and wait for approx. 20 seconds.
- Using SST, connect terminals Tc and CG of the DLC3.

SST 09843-18020

NOTICE:

Pay due attention to the terminal connecting position to avoid a malfunction.

- Past troubles codes:

Output the DTC.


- Using service wire, connect terminals Tc and CG of the DLC3.

SST 09843-18020

- Turn the ignition switch to the ON position and wait for approx. 20 seconds.

NOTICE:

Pay due attention to the terminal connecting position to avoid a malfunction.

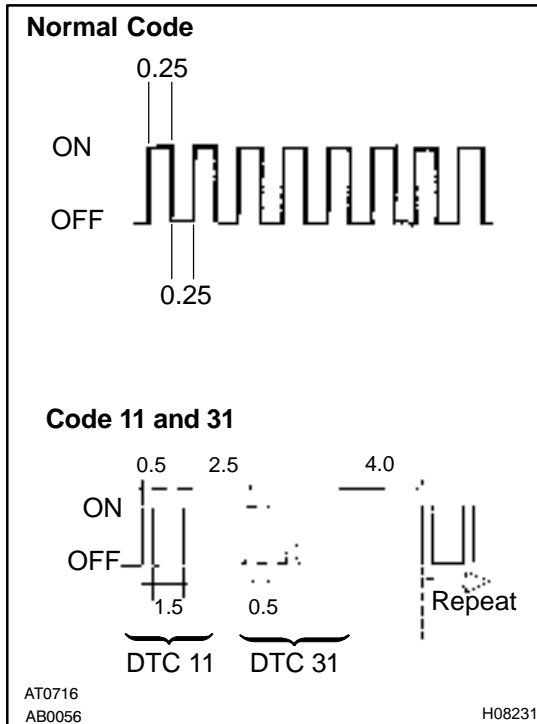

(c) Read the DTC.


Read the 2-digit DTC as indicated by the number of times the SRS warning light blinks. As an example, the blinking patterns, normal, 11 and 31 are shown in the illustration.

- Normal code indication
The light will blink 2 times per second.
- Malfunction code indication
The first blinking output indicates the first digit of a 2-digit DTC. After a 1.5-second pause, the second blinking output will indicate the second digit.

If there are 2 or more codes, there will be a 2.5-second pause between each code. After all the codes have been output, there will be a 4.0-second pause and they will all be repeated.

HINT:

- In the event of a number of trouble codes, indication will start from the smallest numbered code.
- If a DTC is not output or a DTC is output without terminal connection, proceed to the Tc terminal circuit inspection on page [DI-636](#).

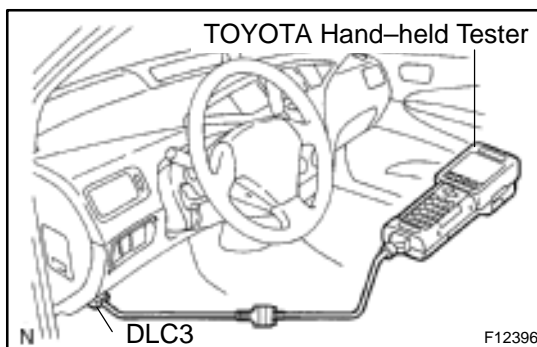**3. DTC CHECK (Using TOYOTA hand-held tester)**

- Hook up the TOYOTA hand-held tester to the DLC3.
- Read the DTCs by following the prompts on the tester screen.

HINT:

Please refer to the TOYOTA hand-held tester operator's manual for further details.

4. DTC CLEARANCE (Not using service wire)

When the ignition switch is turned off, the diagnostic trouble code is cleared.

HINT:

DTC might not be cleared by turning the ignition switch OFF. In this case, proceed to the next step.

5. DTC CLEARANCE (Using service wire)


- Connect the 2 service wires to terminals Tc and A/B of DLC3.
- Turn the ignition switch to ON and wait for approx. 6 seconds.

- (c) Starting with the Tc terminal, ground alternately terminal Tc and terminal A/B twice each in cycles of 1.0 second. Make sure that the terminals are grounded. Ensure the terminal Tc remain grounded.


HINT:

When alternately grounding terminals Tc and A/B, release ground from one terminal and immediately ground the other terminal within an interval of 0.2 seconds.

If DTCs are not cleared, repeat the above procedure until the codes are cleared.

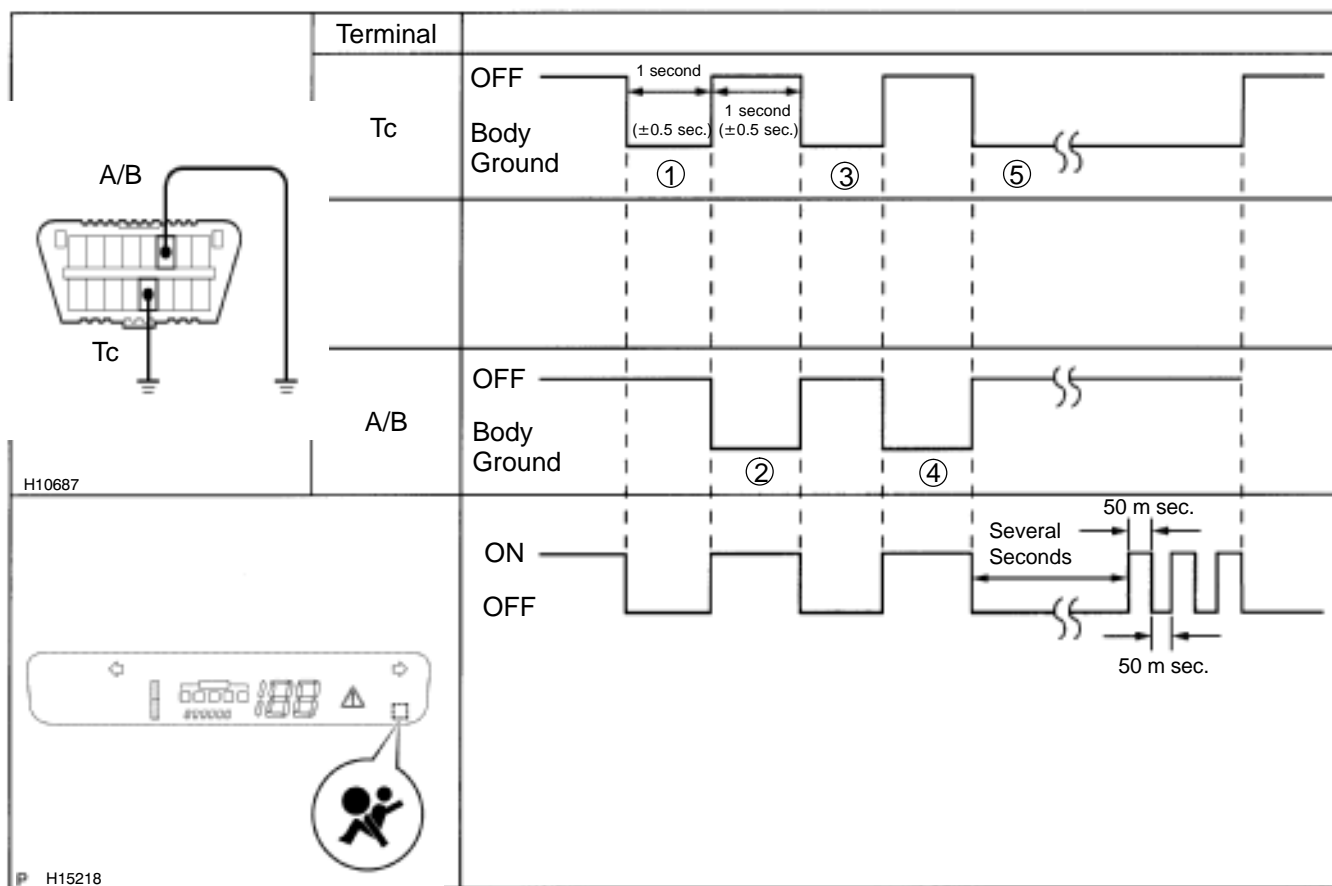

- (d) Several seconds after doing the clearing procedure, the SRS warning light will blink in a 50 – m sec. cycle to indicate the codes which have been cleared.

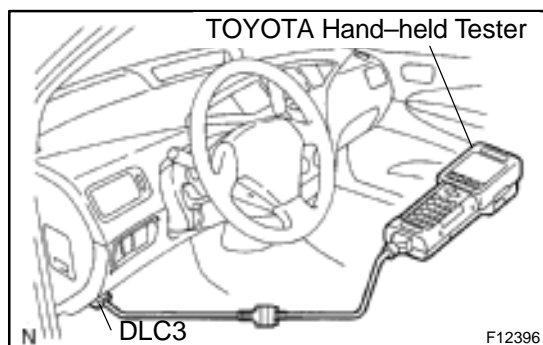**6. DTC CLEARANCE (Using TOYOTA hand-held tester)**

- (a) Hook up the TOYOTA hand-held tester to the DLC3.
 (b) Clear the DTCs by following the prompts on the tester screen.

HINT:

Please refer to the TOYOTA hand-held tester operation's manual for further details.

7. RELEASE METHOD OF AIRBAG ACTIVATION PREVENTION MECHANISM

An airbag activation prevention mechanism is built into the connector for the squib circuit of the SRS.


When release of the airbag activation prevention mechanism is directed in the troubleshooting procedure, as shown in the illustration of the connectors on the next pages, insert paper which has the same thickness as the male terminal between the terminal and the short spring.

CAUTION:



Never release the airbag activation prevention mechanism on the squib connector.

NOTICE:


- **Do not release the airbag activation prevention mechanism unless specifically directed by the troubleshooting procedure.**
- **If the inserted paper is too thick the terminal and short spring may be damaged, so always use paper with the same thickness as the male terminal.**

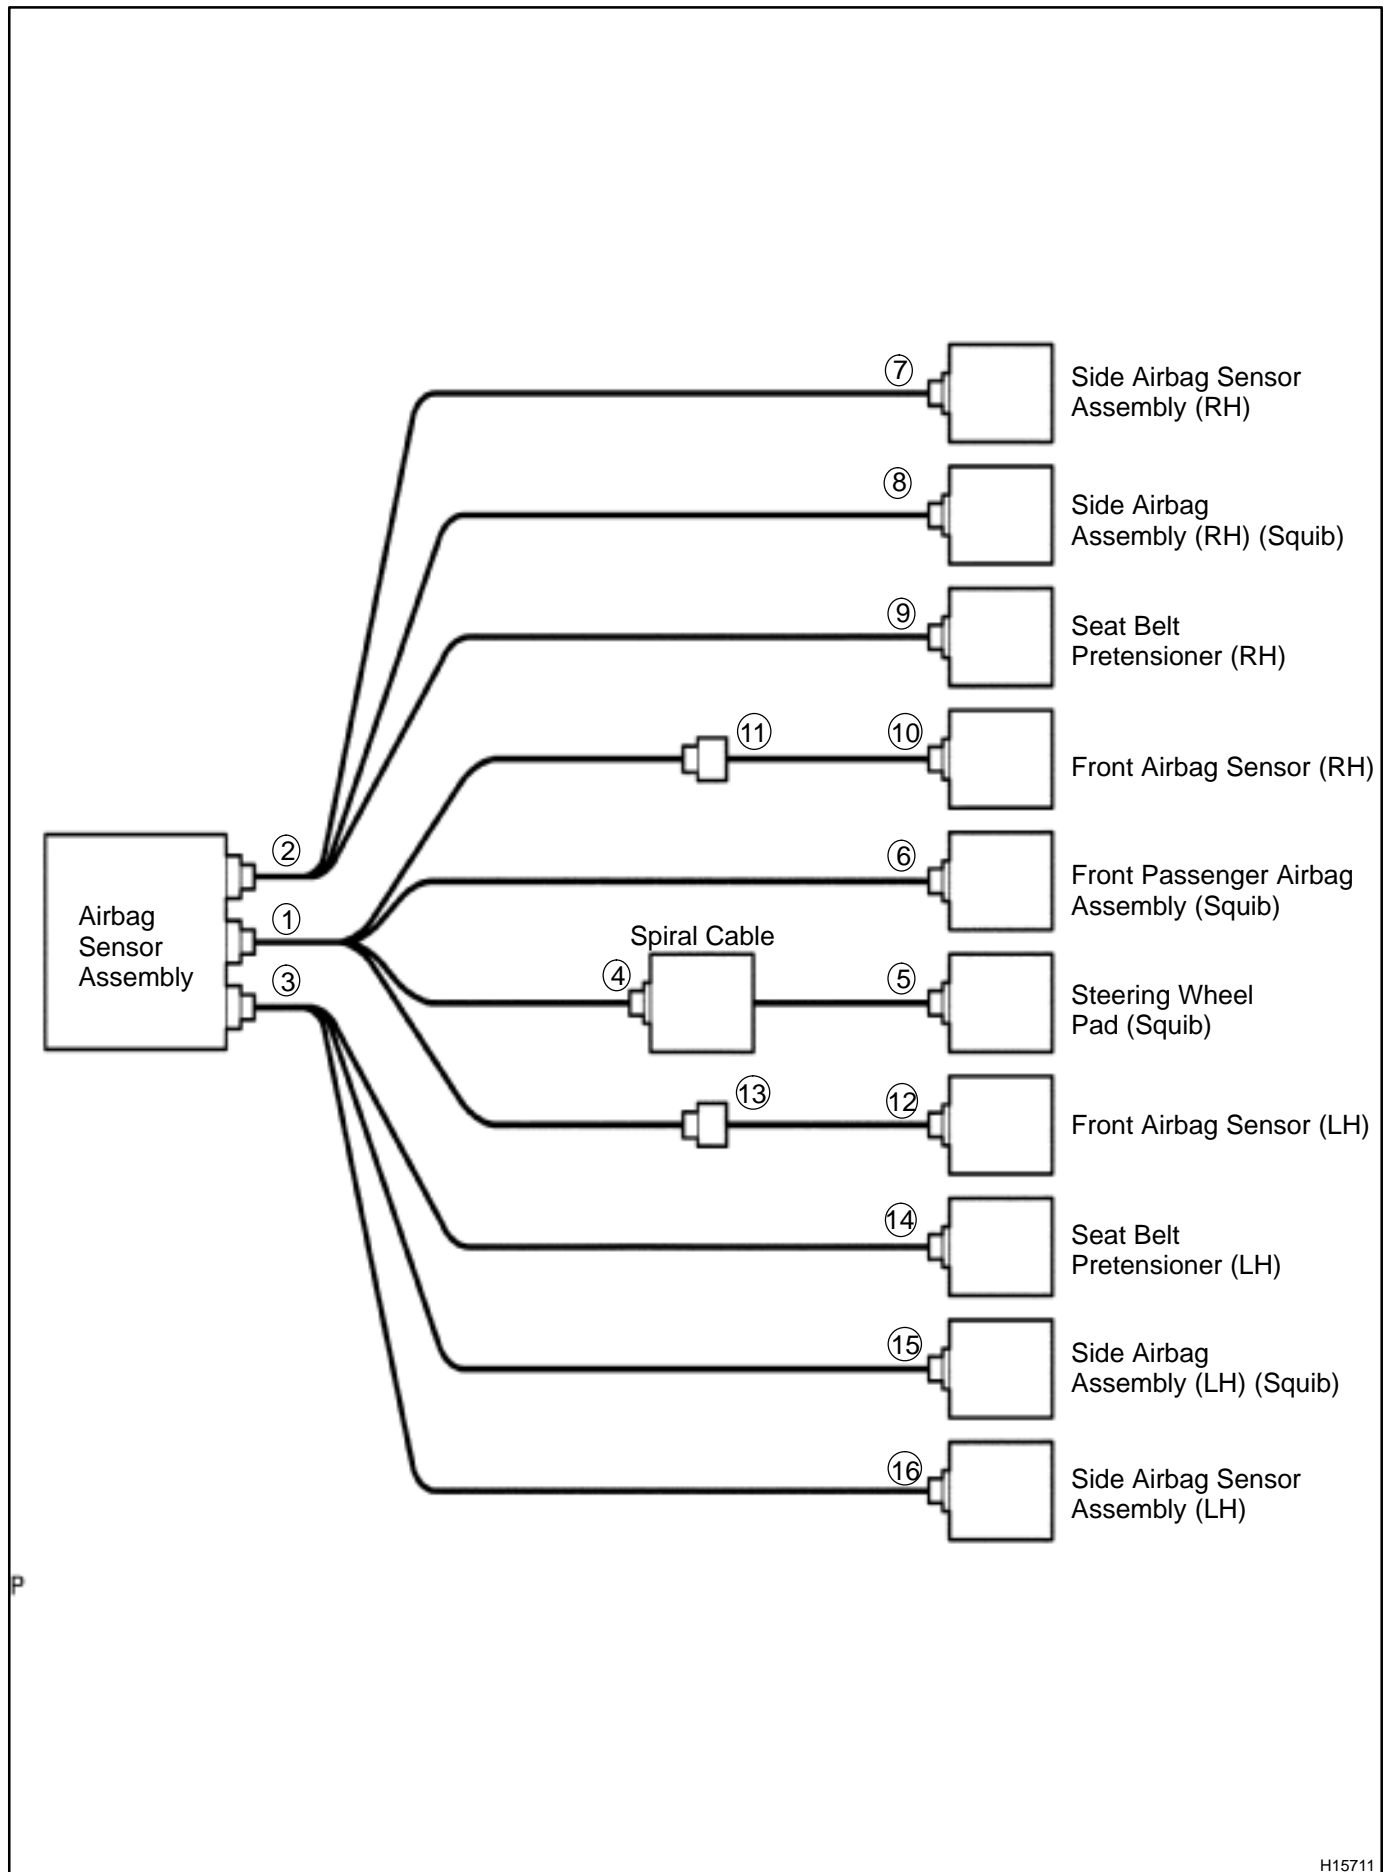




Airbag Sensor Assembly Connector

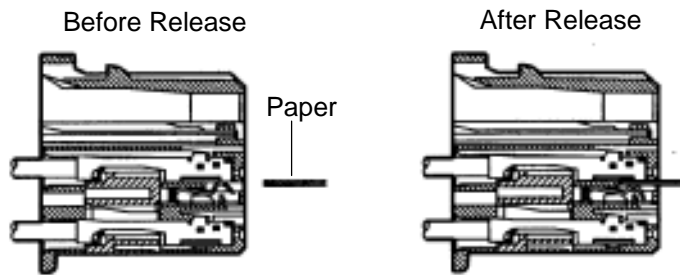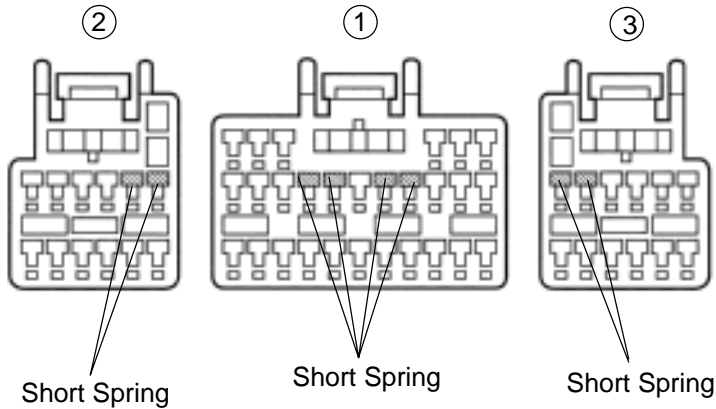

Connector ④

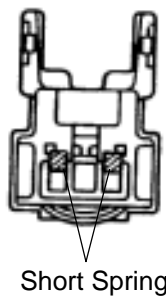

Connector ⑧ ⑭

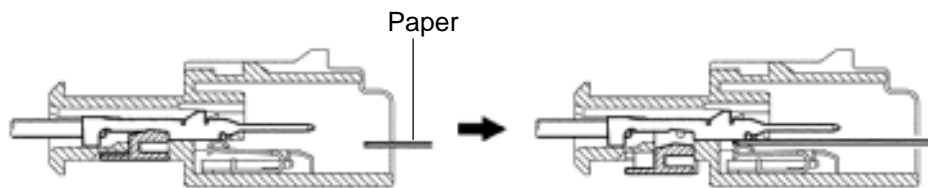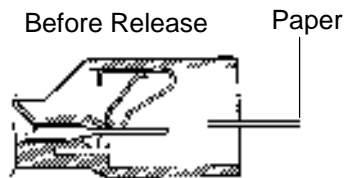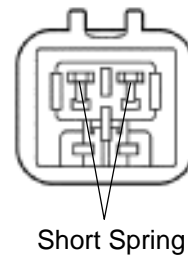

H01356
H01233
AB0130 H02248
AB0045 AB0046
H02249

H11587

DIAGNOSTIC TROUBLE CODE CHART

If a malfunction code is displayed during the DTC check, check the circuit listed for that code in the table below (Proceed to the page given for that circuit.).

DTC No. (See Page)	Detection Item	Trouble Area	SRS Warning Light
B0100/13 (DI-510)	• Short in D squib circuit	<ul style="list-style-type: none"> • Steering wheel pad (squib) • Spiral cable • Airbag sensor assembly • Wire harness 	ON
B0101/14 (DI-515)	• Open in D squib circuit	<ul style="list-style-type: none"> • Steering wheel pad (squib) • Spiral cable • Airbag sensor assembly • Wire harness 	ON
B0102/11 (DI-519)	• Short in D squib circuit (to ground)	<ul style="list-style-type: none"> • Steering wheel pad (squib) • Spiral cable • Airbag sensor assembly • Wire harness 	ON
B0103/12 (DI-523)	• Short in D squib circuit (to B+)	<ul style="list-style-type: none"> • Steering wheel pad (squib) • Spiral cable • Airbag sensor assembly • Wire harness 	ON
B0105/53 (DI-527)	• Short in P squib circuit	<ul style="list-style-type: none"> • Front passenger airbag assembly (squib) • Airbag sensor assembly • Wire harness 	ON
B0106/54 (DI-531)	• Open in P squib circuit	<ul style="list-style-type: none"> • Front passenger airbag assembly (squib) • Airbag sensor assembly • Wire harness 	ON
B0107/51 (DI-534)	• Short in P squib circuit (to ground)	<ul style="list-style-type: none"> • Front passenger airbag assembly (squib) • Airbag sensor assembly • Wire harness 	ON
B0108/52 (DI-537)	• Short in P squib circuit (to B+)	<ul style="list-style-type: none"> • Front passenger airbag assembly (squib) • Airbag sensor assembly • Wire harness 	ON
B0110/43 (DI-540)	• Short in side squib (RH) circuit	<ul style="list-style-type: none"> • Side airbag assembly RH (squib) • Airbag sensor assembly • Wire harness 	Blink
B0111/44 (DI-544)	• Open in side squib (RH) circuit	<ul style="list-style-type: none"> • Side airbag assembly RH (squib) • Airbag sensor assembly • Wire harness 	Blink
B0112/41 (DI-550)	• Short in side squib (RH) circuit (to ground)	<ul style="list-style-type: none"> • Side airbag assembly RH (squib) • Airbag sensor assembly • Wire harness 	Blink
B0113/42 (DI-550)	• Short in side squib (RH) circuit (to B+)	<ul style="list-style-type: none"> • Side airbag assembly RH (squib) • Airbag sensor assembly • Wire harness 	Blink
B0115/47 (DI-553)	• Short in side squib (LH) circuit	<ul style="list-style-type: none"> • Side airbag assembly LH (squib) • Airbag sensor assembly • Wire harness 	Blink
B0116/48 (DI-557)	• Open in side squib (LH) circuit	<ul style="list-style-type: none"> • Side airbag assembly LH (squib) • Airbag sensor assembly • Wire harness 	Blink


DIAGNOSTICS – SUPPLEMENTAL RESTRAINT SYSTEM

DTC No. (See Page)	Detection Item	Trouble Area	SRS Warning Light
B0117/45 (DI-560)	• Short in side squib (LH) circuit (to ground)	• Side airbag assembly LH (squib) • Airbag sensor assembly • Wire harness	Blink
B0118/46 (DI-563)	• Short in side squib (LH) circuit (to B+)	• Side airbag assembly LH (squib) • Airbag sensor assembly • Wire harness	Blink
B0130/63 (DI-566)	• Short in P/T squib (RH) circuit	• Seat belt pretensioner RH (squib) • Airbag sensor assembly • Wire harness	Blink
B0131/64 (DI-570)	• Open in P/T squib (RH) circuit	• Seat belt pretensioner RH (squib) • Airbag sensor assembly • Wire harness	Blink
B0132/61 (DI-573)	• Short in P/T squib (RH) circuit (to ground)	• Seat belt pretensioner RH (squib) • Airbag sensor assembly • Wire harness	Blink
B0133/62 (DI-576)	• Short in P/T squib (RH) circuit (to B+)	• Seat belt pretensioner RH (squib) • Airbag sensor assembly • Wire harness	Blink
B0135/73 (DI-579)	• Short in P/T squib (LH) circuit	• Seat belt pretensioner LH (squib) • Airbag sensor assembly • Wire harness	Blink
B0136/74 (DI-583)	• Open in P/T squib (LH) circuit	• Seat belt pretensioner LH (squib) • Airbag sensor assembly • Wire harness	Blink
B0137/71 (DI-586)	• Short in P/T squib (LH) circuit (to ground)	• Seat belt pretensioner LH (squib) • Airbag sensor assembly • Wire harness	Blink
B0138/72 (DI-589)	• Short in P/T squib (LH) circuit (to B+)	• Seat belt pretensioner LH (squib) • Airbag sensor assembly • Wire harness	Blink
B1100/31 (DI-592)	• Airbag sensor assembly malfunction	• Airbag sensor assembly	ON
B1135/24 (DI-594)	• Harf connection in airbag sensor assembly connector	• Airbag sensor assembly • Wire harness	Blink
B1140/32 (DI-597)	• Side airbag sensor assembly (RH) malfunction	• Side airbag sensor assembly (RH) • Airbag sensor assembly • Wire harness	Blink
B1141/33 (DI-605)	• Side airbag sensor assembly (LH) malfunction	• Side airbag sensor assembly (LH) • Airbag sensor assembly • Wire harness	Blink
B1156/B1157/ 15 (DI-613)	• Front airbag sensor (RH) malfunction	• Front airbag sensor (RH) • Airbag sensor assembly • Instrument panel wire harness • Engine room No. 2 wire harness	ON
B1158/B1159/ 16 (DI-621)	• Front airbag sensor (LH) malfunction	• Front airbag sensor (LH) • Airbag sensor assembly • Instrument panel wire harness • Engine room main wire harness	ON
Normal (DI-629)	• System normal	–	OFF
	• Voltage source drop	• Battery • Airbag sensor assembly	ON

HINT:

- When the SRS warning light remains lit up and the DTC is the normal code, this means a voltage source drops.
This malfunction is not stored in memory by the airbag sensor assembly and if the power source voltage returns to normal, the SRS warning light will automatically go out.
- When 2 or more codes are indicated, the codes will be displayed in numeral order starting from the lowest numbered code.
- If a code not listed on the chart is displayed, the airbag sensor assembly is faulty.

TERMINALS OF ECU

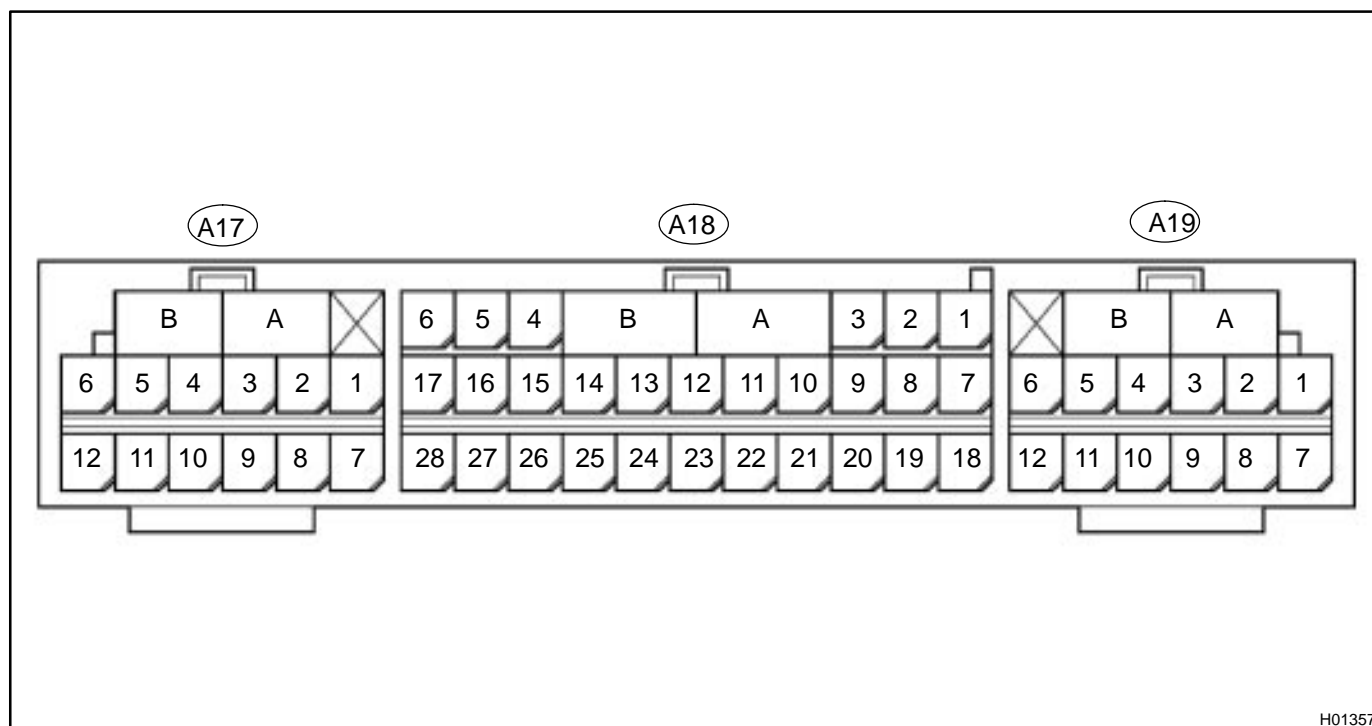

H01357

No.	Symbol	Terminal Name
A	–	Electrical Connector Check Mechanism
B	–	Electrical Connector Check Mechanism
A18 – 3	LA	SRS Warning Light
A18 – 5	IG2	Power Source
A18 – 6	ACC	Power Source
A18 – 9	+SR	Front Airbag Sensor (RH)
A18 – 10	P+	Squib (Passenger)
A18 – 11	P–	Squib (Passenger)
A18 – 12	SIL	Diagnosis
A18 – 13	D–	Squib (Driver)
A18 – 14	D+	Squib (Driver)
A18 – 15	+SL	Front Airbag Sensor (LH)
A18 – 19	Tc	Diagnosis
A18 – 20	–SR	Front Airbag Sensor (RH)
A18 – 23	GSW2	ECM
A18 – 26	–SL	Front Airbag Sensor (LH)
A18 – 27	E1	Ground
A18 – 28	E2	Ground
A17 – 1	PL–	Squib (Seat Belt Pretensioner, LH)
A17 – 2	PL+	Squib (Seat Belt Pretensioner, LH)
A17 – 5	SFL–	Squib (Side, LH)
A17 – 6	SFL+	Squib (Side, LH)
A17 – 7	VUPL	Side Airbag Sensor (LH)
A17 – 9	ESL	Side Airbag Sensor (LH)
A17 – 10	SSL+	Side Airbag Sensor (LH)

DIAGNOSTICS – SUPPLEMENTAL RESTRAINT SYSTEM

No.	Symbol	Terminal Name
A17 – 11	LBE+	Body ECU
A17 – 12	SSL–	Side Airbag Sensor (LH)
A19 – 1	SFR+	Squib (Side, RH)
A19 – 2	SFR–	Squib (Side, RH)
A19 – 5	PR+	Squib (Pretensioner, RH)
A19 – 6	PR–	Squib (Pretensioner, RH)
A19 – 7	SSR–	Side Airbag Sensor (RH)
A19 – 9	SSR+	Side Airbag Sensor (RH)
A19 – 10	ESR	Side Airbag Sensor (RH)
A19 – 12	VUPR	Side Airbag Sensor (RH)

CIRCUIT INSPECTION


DTC	B0100/13	Short in D Squib Circuit
------------	-----------------	---------------------------------

CIRCUIT DESCRIPTION

The D squib circuit consists of the airbag sensor assembly, spiral cable and steering wheel pad. It causes the airbag to deploy when the airbag deployment conditions are satisfied. For details of the function of each component, see OPERATION on page RS-2. DTC B0100/13 is recorded when a short is detected in the D squib circuit.


DTC No.	DTC Detecting Condition	Trouble Area
B0100/13	<ul style="list-style-type: none"> • Short circuit between D+ wire harness and D– wire harness of squib • D squib malfunction • Spiral cable malfunction • Airbag sensor assembly malfunction 	<ul style="list-style-type: none"> • Steering wheel pad (D squib) • Spiral cable • Airbag sensor assembly • Wire harness

WIRING DIAGRAM

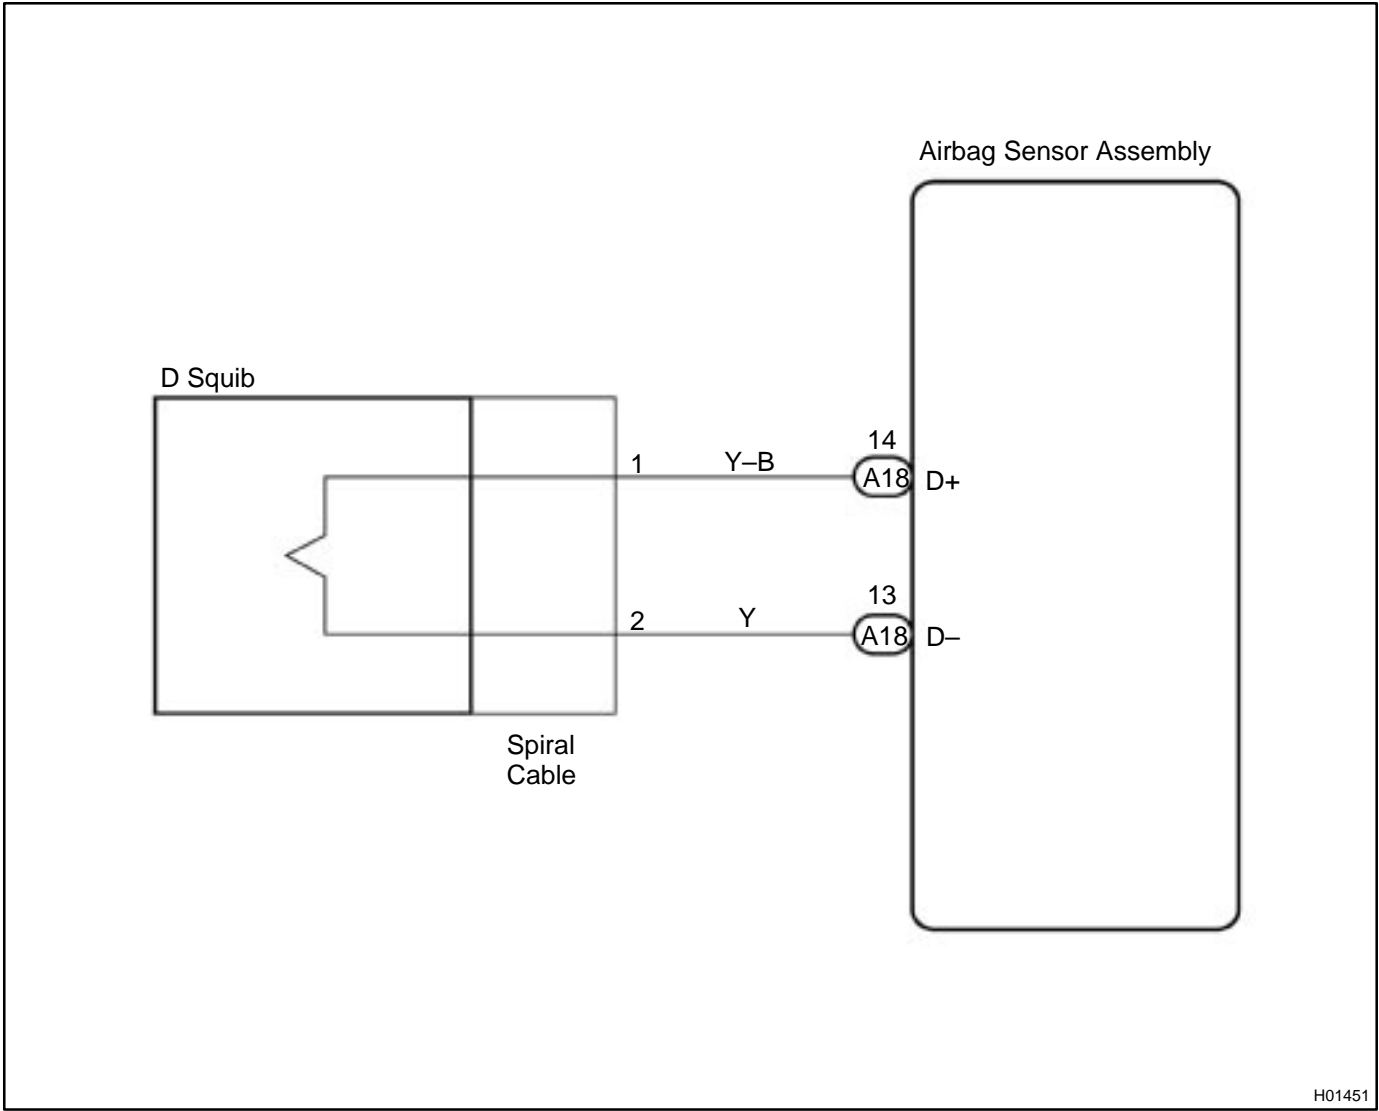


INSPECTION PROCEDURE

- 1** Prepare for inspection (See step 1 on page [DI-629](#)).



- 2** Check D squib circuit.

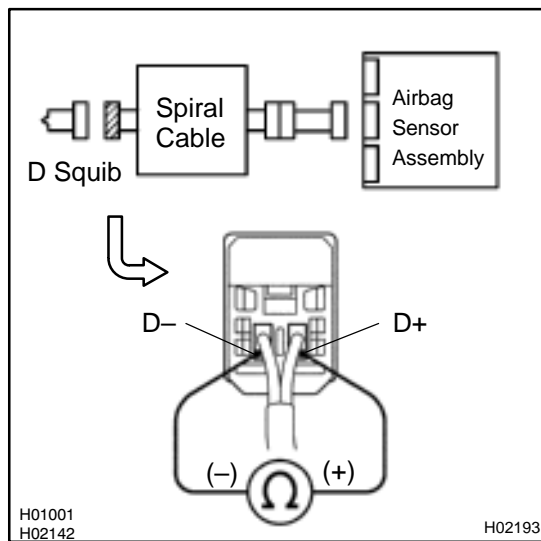**PREPARATION:**

Release the airbag activation prevention mechanism of the connector (on the airbag sensor assembly side) between the airbag sensor assembly and the spiral cable (See page [DI-497](#)).

CHECK:

For the connector (on the spiral cable side) between the spiral cable and the steering wheel pad, measure the resistance between D+ and D-.

OK:


Resistance: 1 MΩ or Higher

NG

Go to step 5.

OK

3 Check airbag sensor assembly.

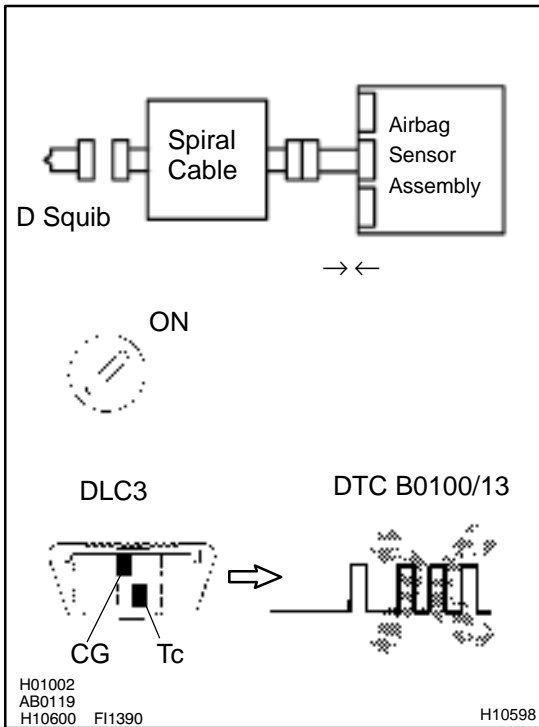

PREPARATION:

- Connect the connector to the airbag sensor assembly.
- Connect negative (–) terminal cable to the battery, and wait at least for 2 seconds.

CHECK:

- Turn the ignition switch to ON and wait at least for 20 seconds.
- Clear the DTC stored in memory (See page [DI-497](#)).
- Turn the ignition switch to LOCK, and wait at least for 20 seconds.
- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Check the DTC (See page [DI-497](#)).

OK:

DTC B0100/13 is not output.

HINT:


Codes other than code B0100/13 may be output at this time, but they are not relevant to this check.

NG

Replace airbag sensor assembly.

OK

4 Check D squib.

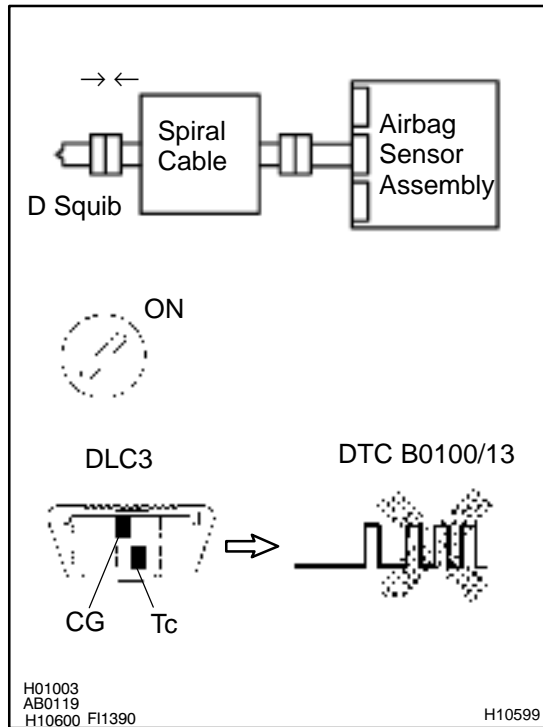

PREPARATION:

- Turn the ignition switch to LOCK.
- Disconnect negative (–) terminal cable from the battery, and wait at least for 90 seconds.
- Connect the steering wheel pad connector.
- Connect negative (–) terminal cable to the battery, and wait at least for 2 seconds.

CHECK:

- Turn the ignition switch to LOCK, and wait at least for 20 seconds.
- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Clear the DTC stored in memory (See page [DI-497](#)).
- Turn the ignition switch to LOCK, and wait at least for 20 seconds.
- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Check the DTC (See page [DI-497](#)).

OK:

DTC B0100/13 is not output.

HINT:


Codes other than code B0100/13 may be output at this time, but they are not relevant to this check.

NG

Replace steering wheel pad.

OK

From the results of the above inspection, the malfunctioning part can now be considered normal. To make sure of this, use the simulation method to check.

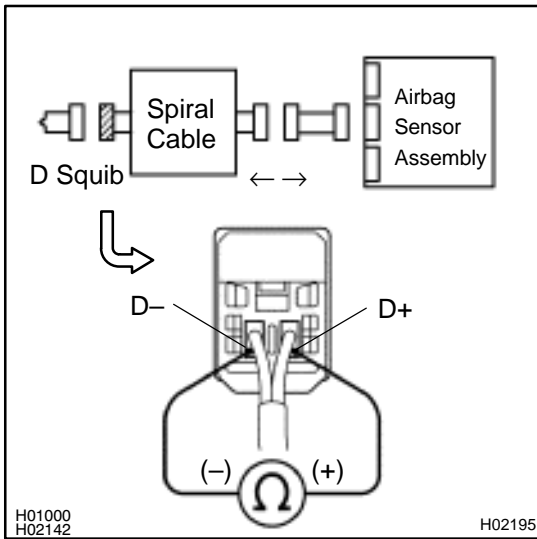5 Check spiral cable.**PREPARATION:**

- Disconnect the connector between the airbag sensor assembly and the spiral cable.
- Release the airbag activation prevention mechanism of the spiral cable connector on the airbag sensor assembly side (See page [DI-497](#)).

CHECK:

For the connector (on the spiral cable side) between the spiral cable and the steering wheel pad, measure the resistance between D+ and D-.


OK:

Resistance: 1 MΩ or Higher

NG

Repair or replace spiral cable.

OK

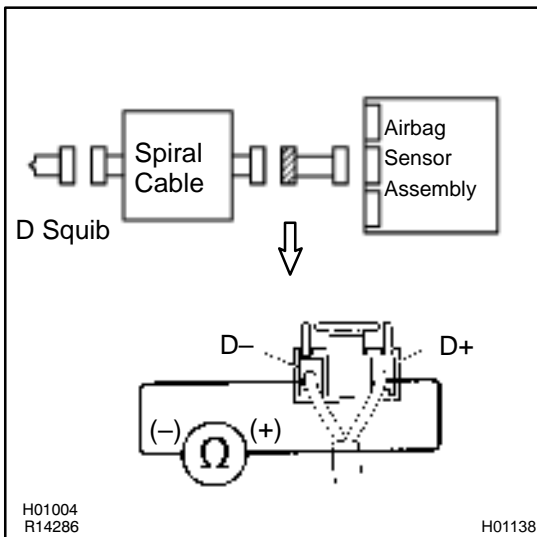6 Check harness between airbag sensor assembly and spiral cable.**PREPARATION:**

Release the airbag activation prevention mechanism of the connector (on the airbag sensor assembly side) between the airbag sensor assembly and the spiral cable (See page [DI-497](#)).

CHECK:

For the connector (on the spiral cable side) between the airbag sensor assembly and the spiral cable, measure the resistance between D+ and D-.

OK:

Resistance: 1 MΩ or Higher

NG

Repair or replace harness or connector between airbag sensor assembly and spiral cable.

OK

From the results of the above inspection, the malfunctioning part can now be considered normal. To make sure of this, use the simulation method to check.

DTC	B0101/14	Open in D Squib Circuit
------------	-----------------	--------------------------------

CIRCUIT DESCRIPTION

The D squib circuit consists of the airbag sensor assembly, spiral cable and steering wheel pad. It causes the airbag to deploy when the airbag deployment conditions are satisfied.

For details of the function of each component, see OPERATION on page RS-2.

DTC B0101/14 is recorded when an open is detected in the D squib circuit.


DTC No.	DTC Detecting Condition	Trouble Area
B0101/14	<ul style="list-style-type: none"> • Open circuit in D+ wire harness or D– wire harness of squib • D squib malfunction • Spiral cable malfunction • Airbag sensor assembly malfunction 	<ul style="list-style-type: none"> • Steering wheel pad (D squib) • Spiral cable • Airbag sensor assembly • Wire harness

WIRING DIAGRAM


See page DI-510.

INSPECTION PROCEDURE

1	Prepare for inspection (See step 1 on page DI-629).
----------	--



2	Check D squib circuit.
----------	-------------------------------

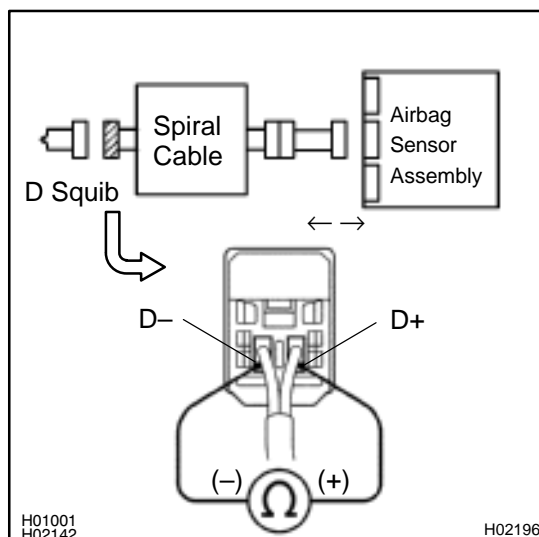

CHECK:

For the connector (on the spiral cable side) between the spiral cable and the steering wheel pad, measure the resistance between D+ and D–.


OK:

Resistance: Below 1 Ω

NG	Go to step 5.
-----------	----------------------



3 Check airbag sensor assembly.

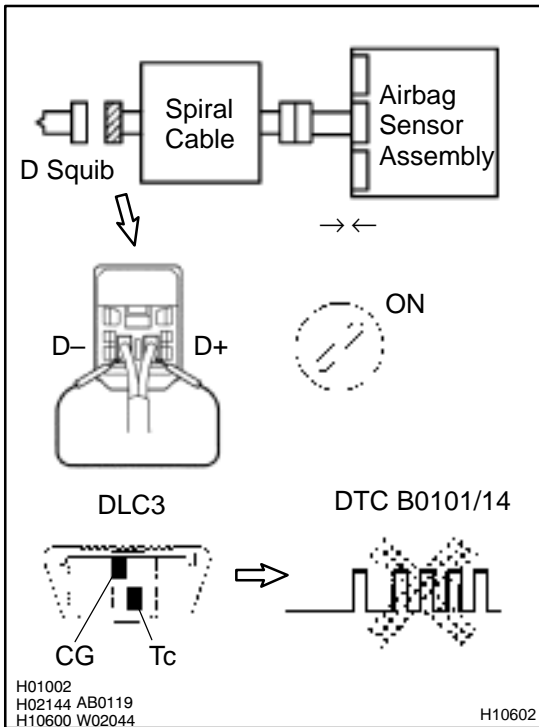

PREPARATION:

- Connect the connector to the airbag sensor assembly.
- Using a service wire, connect D+ and D- of the connector (on the spiral cable side) between the spiral cable and the steering wheel pad.
- Connect negative (-) terminal cable to the battery, and wait at least for 2 seconds.

CHECK:

- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Clear the DTC stored in memory (See page [DI-497](#)).
- Turn the ignition switch to LOCK, and wait at least for 20 seconds.
- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Check the DTC (See page [DI-497](#)).

OK:

DTC B0101/14 is not output.

HINT:


Codes other than code B0101/14 may be output at this time, but they are not relevant to this check.

NG

Replace airbag sensor assembly.

OK

4 Check D squib.

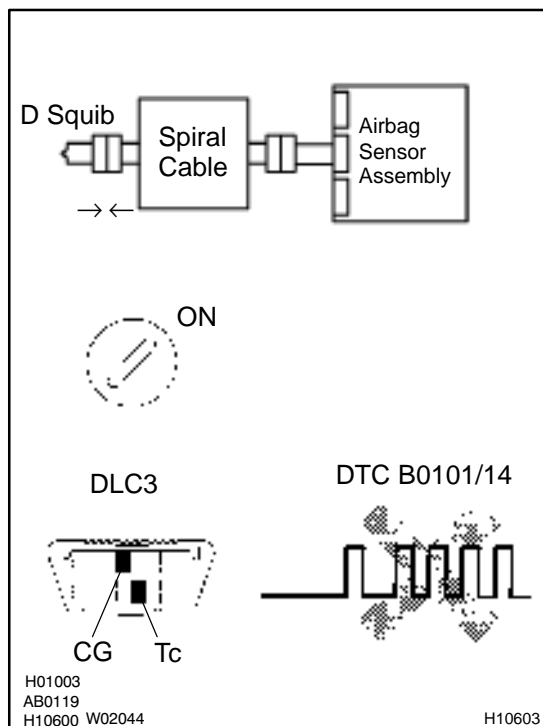

PREPARATION:

- Turn the ignition switch to LOCK.
- Disconnect negative (–) terminal cable from the battery, and wait at least for 90 seconds.
- Connect the steering wheel pad connector.
- Connect negative (–) terminal cable to the battery, and wait at least for 2 seconds.

CHECK:

- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Clear the DTC stored in memory (See page [DI-497](#)).
- Turn the ignition switch to LOCK, and wait at least for 20 seconds.
- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Check the DTC (See page [DI-497](#)).

OK:

DTC B0101/14 is not output.

HINT:


Codes other than code B0101/14 may be output at this time, but they are not relevant to this check.

NG

Replace steering wheel pad.

OK

From the results of the above inspection, the malfunctioning part can now be considered normal. To make sure of this, use the simulation method to check.

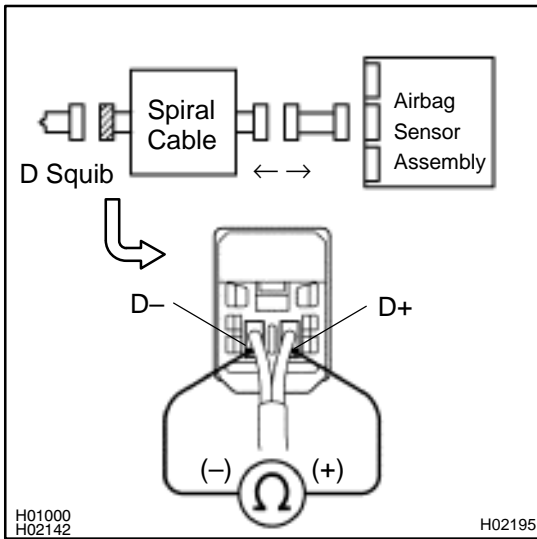5 Check spiral cable.**PREPARATION:**

Disconnect the connector between the airbag sensor assembly and the spiral cable.

CHECK:

For the connector (on the spiral cable side) between the spiral cable and the steering wheel pad, measure the resistance between D+ and D-.


OK:

Resistance: Below 1 Ω

NG

Repair or replace spiral cable.

OK

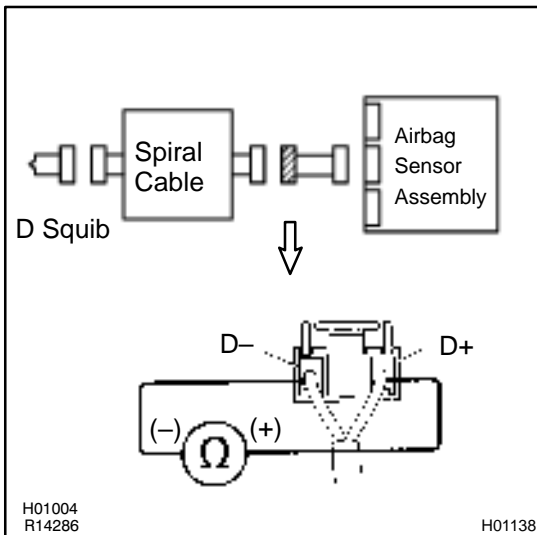6 Check harness between airbag sensor assembly and spiral cable.**CHECK:**

For the connector (on the spiral cable side) between the airbag sensor assembly and the spiral cable, measure the resistance between D+ and D-.

OK:

Resistance: Below 1 Ω

NG

Repair or replace harness or connector between airbag sensor assembly and spiral cable.

OK

From the results of the above inspection, the malfunctioning part can now be considered normal. To make sure of this, use the simulation method to check.

DTC	B0102/11	Short in D Squib Circuit (to Ground)
------------	-----------------	---

CIRCUIT DESCRIPTION

The D squib circuit consists of the airbag sensor assembly, spiral cable and steering wheel pad.

It causes the SRS to deploy when the SRS deployment conditions are satisfied.

For details of the function of each component, see OPERATION on page RS-2.

DTC B0102/11 is recorded when a ground short is detected in the D squib circuit.


DTC No.	DTC Detecting Condition	Trouble Area
B0102/11	<ul style="list-style-type: none"> • Short circuit in D squib wire harness (to ground) • D squib malfunction • Spiral cable malfunction • Airbag sensor assembly malfunction 	<ul style="list-style-type: none"> • Steering wheel pad (D squib) • Spiral cable • Airbag sensor assembly • Wire harness

WIRING DIAGRAM


See page DI-510.

INSPECTION PROCEDURE

1	Prepare for inspection (See step 1 on page DI-629).
----------	--



2	Check D squib circuit.
----------	-------------------------------

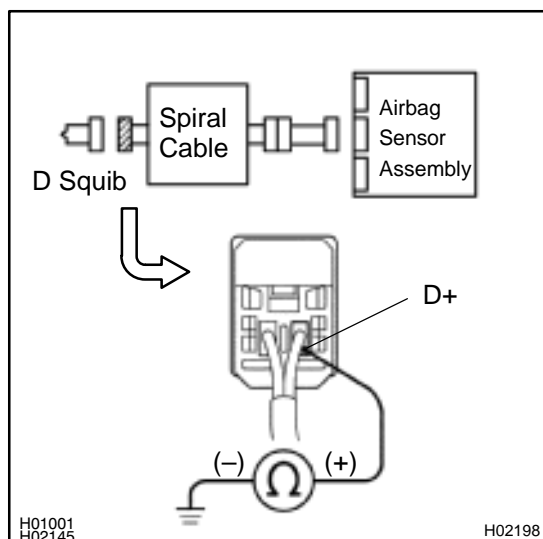


CHECK:

For the connector (on the spiral cable side) between the spiral cable and the steering wheel pad, measure the resistance between D+ and body ground.


OK:

Resistance: 1 MΩ or Higher

NG	Go to step 5.
-----------	----------------------



3 Check airbag sensor assembly.

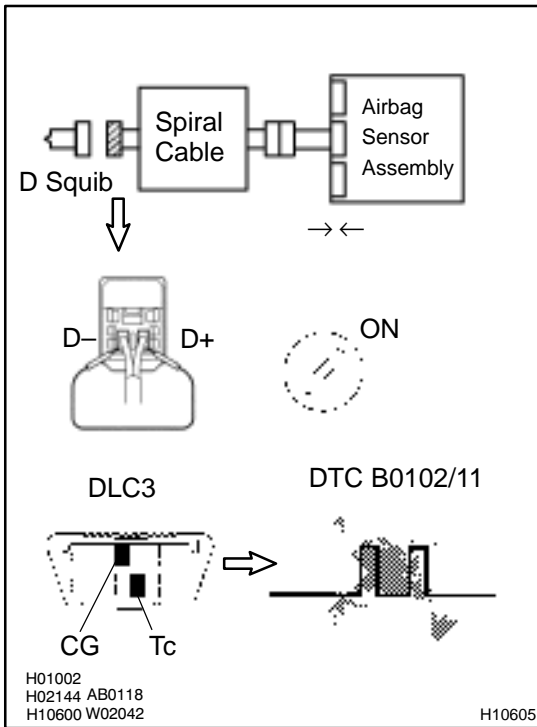

PREPARATION:

- Connect the connector to the airbag sensor assembly.
- Using a service wire, connect D+ and D- of the connector (on the spiral cable side) between the spiral cable and the steering wheel pad.
- Connect negative (-) terminal cable to the battery, and wait at least for 2 seconds.

CHECK:

- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Clear the DTC stored in memory (See step 5 on page [DI-497](#)).
- Turn the ignition switch to LOCK, and wait at least for 20 seconds.
- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Check the DTC (See page [DI-497](#)).

OK:

DTC B0102/11 is not output.

HINT:


Codes other than code B0102/11 may be output at this time, but they are not relevant to this check.

NG

Replace airbag sensor assembly.

OK

4 Check D squib.

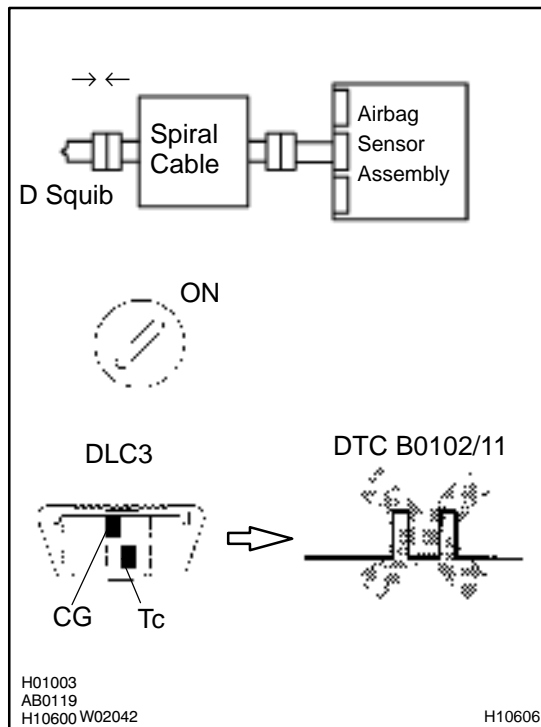

PREPARATION:

- Turn the ignition switch to LOCK.
- Disconnect negative (–) terminal cable from the battery, and wait at least for 90 seconds.
- Connect the steering wheel pad connector.
- Connect negative (–) terminal cable to the battery, and wait at least for 2 seconds.

CHECK:

- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Clear the DTC stored in memory (See step 5 on page [DI-497](#)).
- Turn the ignition switch to LOCK, and wait at least for 20 seconds.
- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Check the DTC (See page [DI-497](#)).

OK:

DTC B0102/11 is not output.

HINT:


Codes other than code B0102/11 may be output at this time, but they are not relevant to this check.

NG

Replace steering wheel pad.

OK

From the results of the above inspection, the malfunctioning part can now be considered normal. To make sure of this, use the simulation method to check. If the malfunctioning part can not be detected by the simulation method, replace all SRS components including the wire harness.

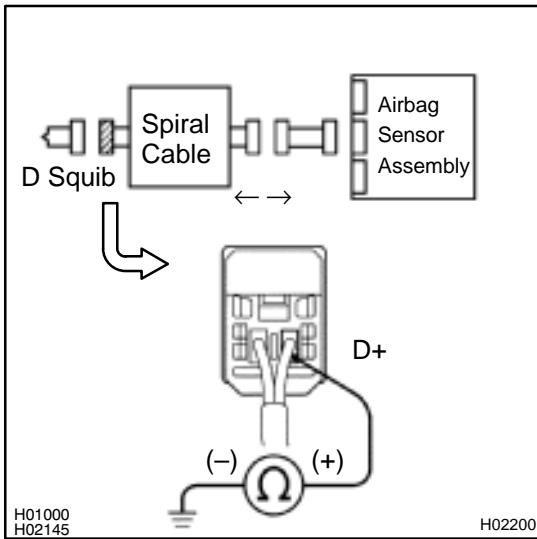5 Check spiral cable.**PREPARATION:**

Disconnect the connector between the airbag sensor assembly and the spiral cable.

CHECK:


For the connector (on the spiral cable side) between the steering wheel pad and the spiral cable, measure the resistance between D+ and body ground.

OK:

Resistance: 1 MΩ or Higher

NG

Repair or replace spiral cable.

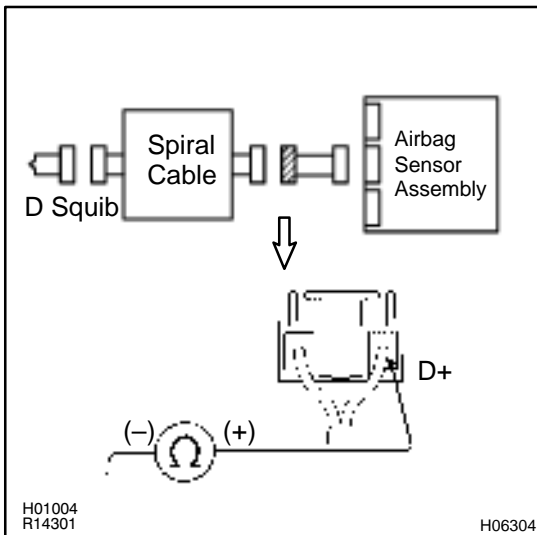OK**6 Check harness between airbag sensor assembly and spiral cable.****CHECK:**

For the connector (on the spiral cable side) between the spiral cable and the airbag sensor assembly, measure the resistance between D+ and body ground.

OK:

Resistance: 1 MΩ or Higher

NG

Repair or replace harness between airbag sensor assembly and spiral cable.

OK

From the results of the above inspection, the malfunctioning part can now be considered normal. To make sure of this, use the simulation method to check. If the malfunctioning part can not be detected by the simulation method, replace all SRS components including the wire harness.

DTC	B0103/12	Short in D Squib Circuit (to B+)
------------	-----------------	---

CIRCUIT DESCRIPTION

The D squib circuit consists of the airbag sensor assembly, spiral cable and steering wheel pad. It causes the SRS to deploy when the SRS deployment conditions are satisfied. For details of the function of each component, see OPERATION on page RS-2. DTC B0103/12 is recorded when a B+ short is detected in the D squib circuit.


DTC No.	DTC Detecting Condition	Trouble Area
B0103/12	<ul style="list-style-type: none"> • Short circuit in D squib wire harness (to B+) • D squib malfunction • Spiral cable malfunction • Airbag sensor assembly malfunction 	<ul style="list-style-type: none"> • Steering wheel pad (D squib) • Spiral cable • Airbag sensor assembly • Wire harness

WIRING DIAGRAM


See page DI-510.

INSPECTION PROCEDURE

1	Prepare for inspection (See step 1 on page DI-629).
----------	--



2	Check D squib circuit.
----------	-------------------------------

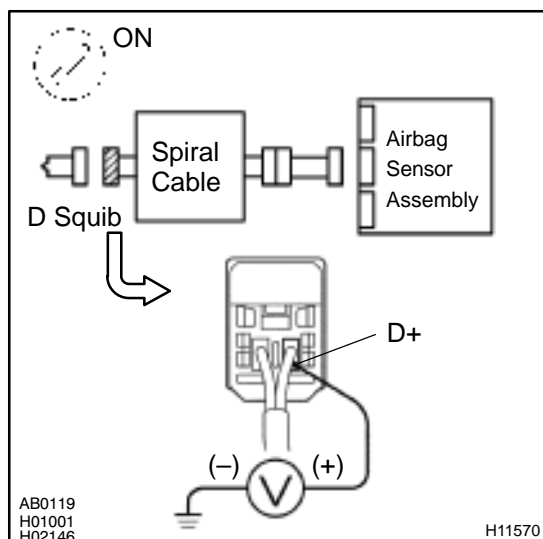

CHECK:

- Turn ignition switch to ON.
- For the connector (on the spiral cable side) between the spiral cable and the steering wheel pad, measure the voltage between D+ and body ground.

OK:


Voltage: 0 V

NG

Go to step 5.

OK

3 Check airbag sensor assembly.

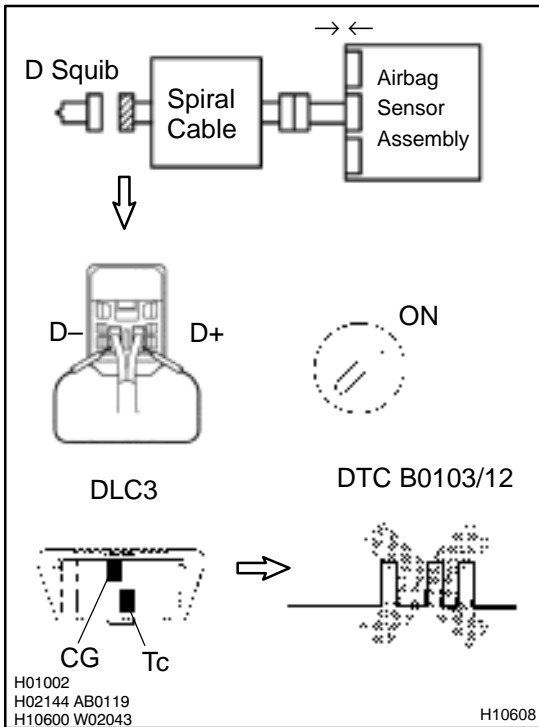

PREPARATION:

- Connect the connector to the airbag sensor assembly.
- Using a service wire, connect D+ and D- of the connector (on the spiral cable side) between the spiral cable and the steering wheel pad.
- Connect negative (-) terminal cable to the battery, and wait at least for 2 seconds.

CHECK:

- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Clear the DTC stored in memory (See step 5 on page [DI-497](#)).
- Turn the ignition switch to LOCK, and wait at least for 20 seconds.
- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Check the DTC (See page [DI-497](#)).

OK:

DTC B0103/12 is not output.

HINT:


Codes other than code B0103/12 may be output at this time, but they are not relevant to this check.

NG

Replace airbag sensor assembly.

OK

4 Check D squib.

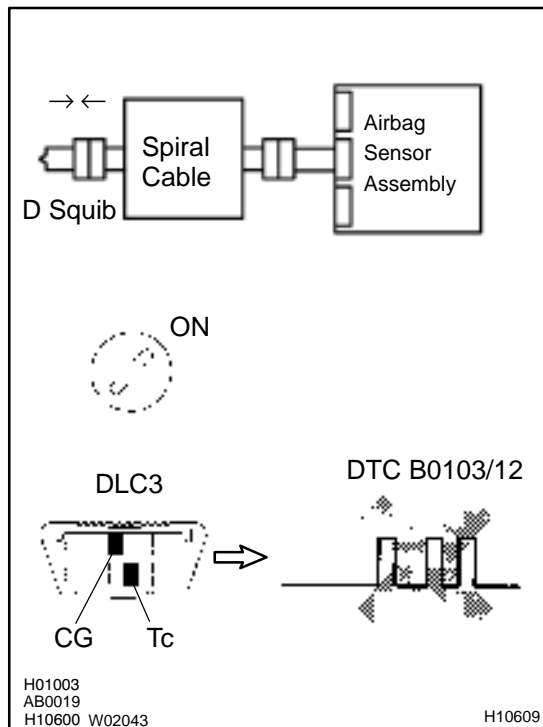

PREPARATION:

- Turn the ignition switch to LOCK.
- Disconnect negative (–) terminal cable from the battery, and wait at least for 90 seconds.
- Connect the steering wheel pad connector.
- Connect negative (–) terminal cable to the battery, and wait at least for 2 seconds.

CHECK:

- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Clear the DTC stored in memory (See step 5 on page [DI-497](#)).
- Turn the ignition switch to LOCK, and wait at least for 20 seconds.
- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Check the DTC (See page [DI-497](#)).

OK:

DTC B0103/12 is not output.

HINT:

Codes other than code B0103/12 may be output at this time, but they are not relevant to this check.


NG

Replace steering wheel pad.

OK

From the results of the above inspection, the malfunctioning part can now be considered normal. To make sure of this, use the simulation method to check. If the malfunctioning part can not be detected by the simulation method, replace all SRS components including the wire harness.

5 Check spiral cable.

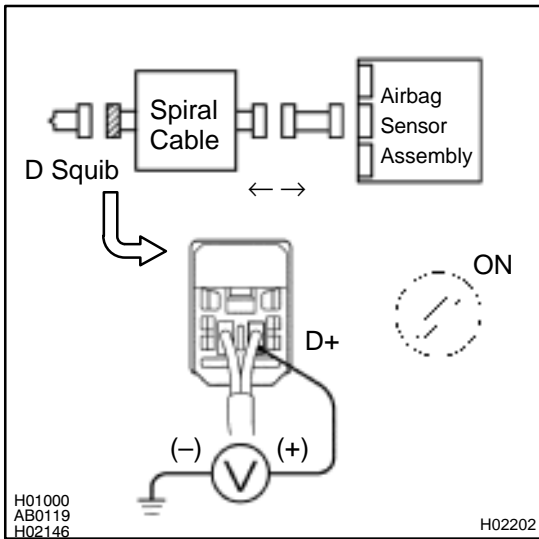

PREPARATION:

- Turn the ignition switch to LOCK.
- Disconnect the connector between the airbag sensor assembly and the spiral cable.

CHECK:

- Turn the ignition switch to ON.
- For the connector (on the spiral cable side) between the spiral cable and the steering wheel pad, measure the voltage between D+ and body ground.

OK:


Voltage: 0 V

NG

Repair or replace spiral cable.

OK

6 Check harness between airbag sensor assembly and spiral cable.

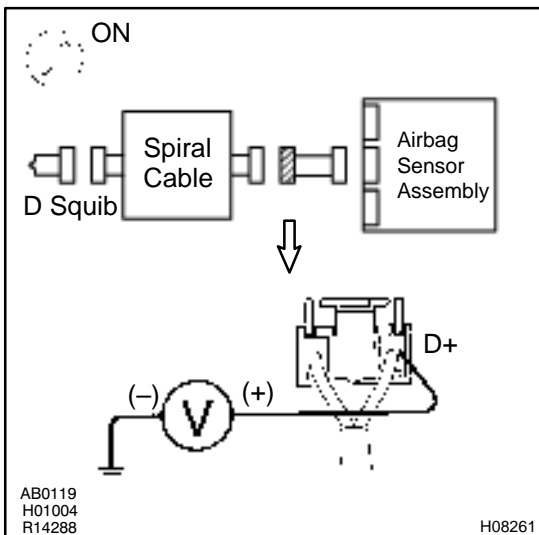

CHECK:

- Turn the ignition switch to ON.
- For the connector (on the spiral cable side) between the spiral cable and airbag sensor assembly, measure the voltage between D+ and body ground.

OK:

Voltage: 0 V

NG

Repair or replace harness between airbag sensor assembly and spiral cable.

OK

From the results of the above inspection, the malfunctioning part can now be considered normal. To make sure of this, use the simulation method to check. If the malfunctioning part can not be detected by the simulation method, replace all SRS components including the wire harness.


DTC	B0105/53	Short in P Squib Circuit
-----	----------	--------------------------

CIRCUIT DESCRIPTION

The P squib circuit consists of the airbag sensor assembly and front passenger airbag assembly. It causes the SRS to deploy when the SRS deployment conditions are satisfied. For details of the function of each component, see OPERATION on page RS-2. DTC B0105/53 is recorded when a short is detected in the P squib circuit.

DTC No.	DTC Detecting Condition	Trouble Area
B0105/53	<ul style="list-style-type: none">• Short circuit in P squib wire harness• P squib malfunction• Airbag sensor assembly malfunction	<ul style="list-style-type: none">• Front passenger airbag assembly (P squib)• Airbag sensor assembly• Wire harness


WIRING DIAGRAM

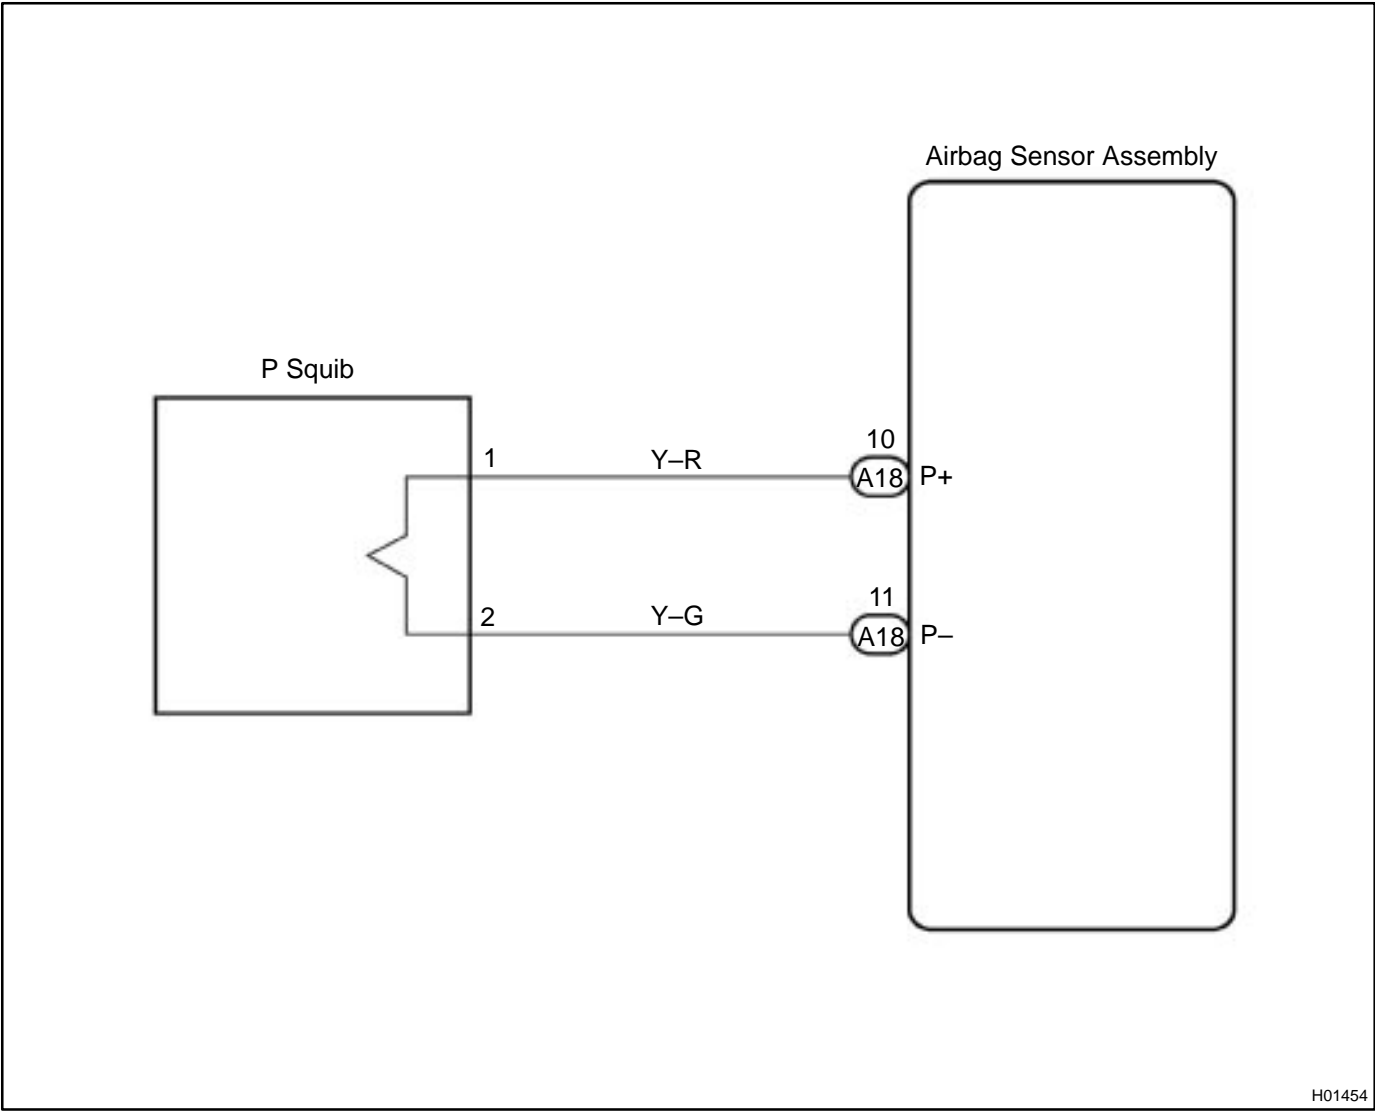


cardiagn.com

INSPECTION PROCEDURE

- 1 Prepare for inspection (See step 1 on page [DI-629](#)).



- 2 Check P squib circuit.

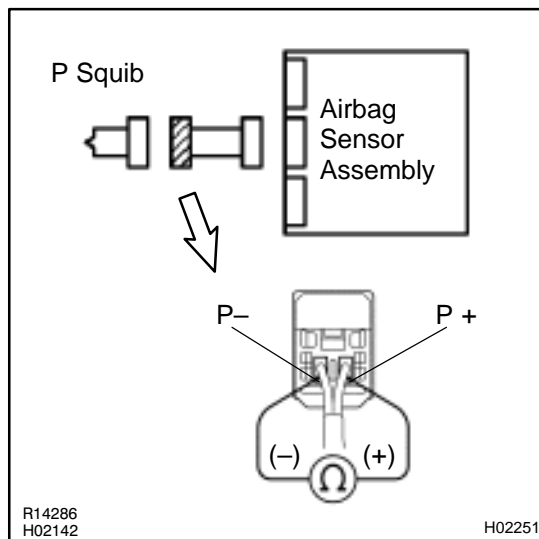**PREPARATION:**

Release the airbag activation prevention mechanism of the connector (on the airbag sensor assembly side) between the front passenger airbag assembly and the airbag sensor assembly (See page [DI-497](#)).

CHECK:

For the connector (on the front passenger airbag assembly side) between the front passenger airbag assembly and the airbag sensor assembly, measure the resistance between P+ and P-.

OK:


Resistance: 1 MΩ or Higher

NG

Repair or replace harness or connector between front passenger airbag assembly and airbag sensor assembly.

OK

3 Check airbag sensor assembly.

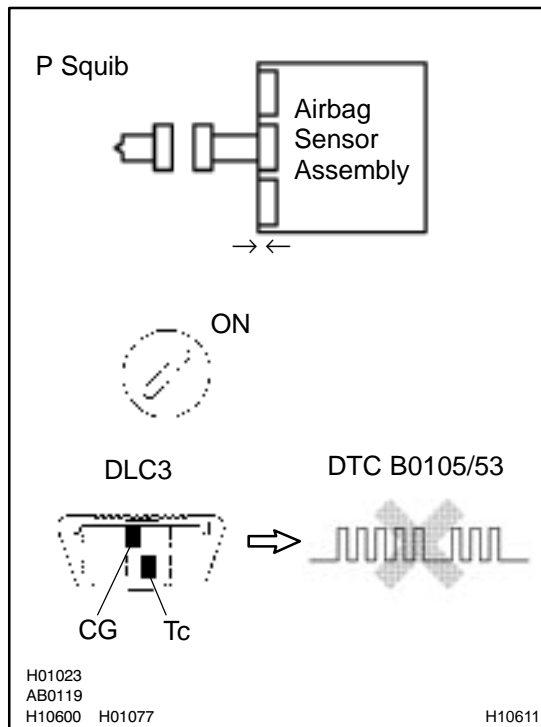

PREPARATION:

- Connect the connector to the airbag sensor assembly.
- Connect negative (–) terminal cable to the battery, and wait at least for 2 seconds.

CHECK:

- Turn the ignition switch to ON and wait at least for 20 seconds.
- Clear the DTC stored in memory (See page [DI-497](#)).
- Turn the ignition switch to LOCK, and wait at least for 20 seconds.
- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Check the DTC (See page [DI-497](#)).

OK:

DTC B0105/53 is not output.

HINT:


Codes other than code B0105/53 may be output at this time, but they are not relevant to this check.

NG

Replace airbag sensor assembly.

OK

4

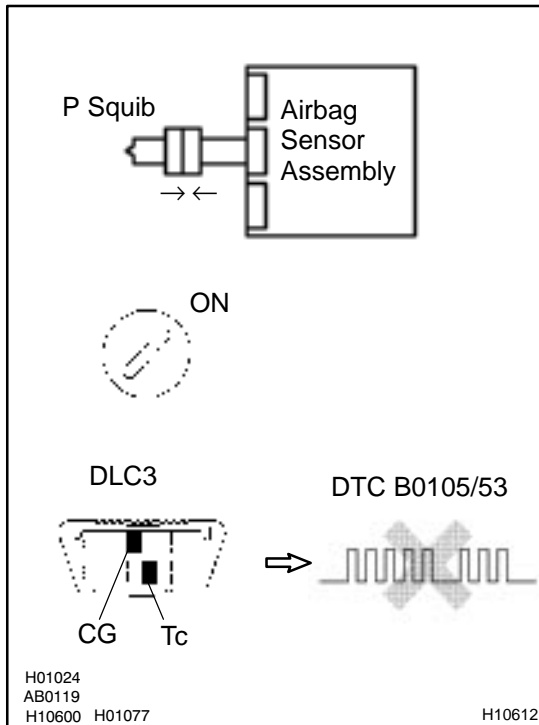Check P squib.**PREPARATION:**

- Turn the ignition switch to LOCK.
- Disconnect negative (–) terminal cable from the battery, and wait at least for 90 seconds.
- Connect the front passenger airbag assembly connector.
- Connect negative (–) terminal cable to the battery, and wait at least for 2 seconds.

CHECK:

- Turn the ignition switch to LOCK, and wait at least for 20 seconds.
- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Clear the DTC stored in memory (See page [DI-497](#)).
- Turn the ignition switch to LOCK, and wait at least for 20 seconds.
- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Check the DTC (See page [DI-497](#)).

OK:**DTC B0105/53 is not output.****HINT:**

Codes other than code B0105/53 may be output at this time, but they are not relevant to this check.

NG**Replace front passenger airbag assembly.****OK**

From the results of the above inspection, the malfunctioning part can now be considered normal. To make sure of this, use the simulation method to check.

DTC	B0106/54	Open in P Squib Circuit
------------	-----------------	--------------------------------

CIRCUIT DESCRIPTION

The P squib circuit consists of the airbag sensor assembly and front passenger airbag assembly. It causes the SRS to deploy when the SRS deployment conditions are satisfied.

For details of the function of each component, see OPERATION on page RS-2.

DTC B0106/54 is recorded when an open is detected in the P squib circuit.


DTC No.	DTC Detecting Condition	Trouble Area
B0106/54	<ul style="list-style-type: none"> • Open circuit in P+ wire harness or P– wire harness of squib • P squib malfunction • Airbag sensor assembly malfunction 	<ul style="list-style-type: none"> • Front passenger airbag assembly (P squib) • Airbag sensor assembly • Wire harness

WIRING DIAGRAM


See page DI-527.

INSPECTION PROCEDURE

1	Prepare for inspection (See step 1 on page DI-629).
----------	--



2	Check P squib circuit.
----------	-------------------------------

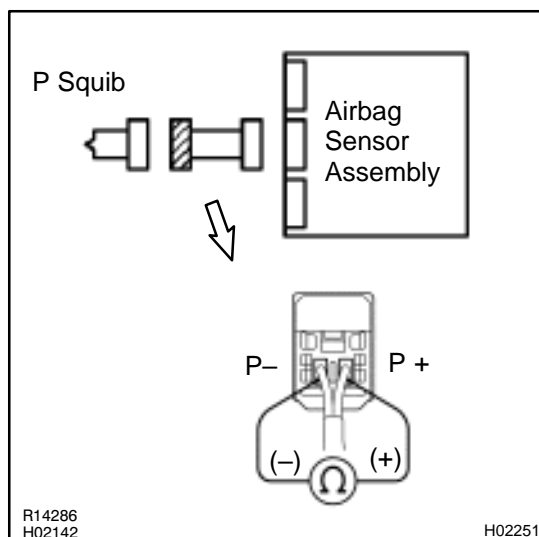

CHECK:

For the connector (on the front passenger airbag assembly side) between the front passenger airbag assembly and the airbag sensor assembly, measure the resistance between P+ and P–.

OK:


Resistance: Below 1 Ω

NG

Repair or replace harness or connector between front passenger airbag assembly and airbag sensor assembly.

OK

3 Check airbag sensor assembly.

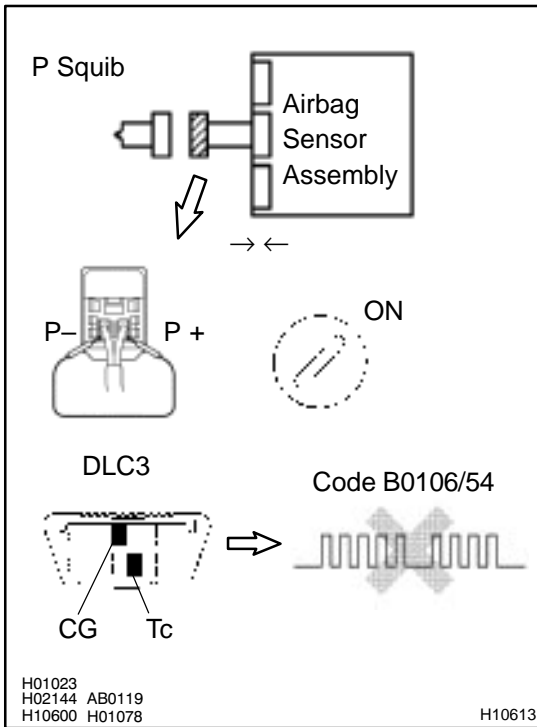

PREPARATION:

- Connect the connector to the airbag sensor assembly.
- Using a service wire, connect P+ and P- of the connector (on the front passenger airbag assembly side) between the front passenger airbag assembly and the airbag sensor assembly.
- Connect negative (-) terminal cable to the battery, and wait at least for 2 seconds.

CHECK:

- Turn the ignition switch to ON and wait at least for 20 seconds.
- Clear the DTC stored in memory (See page [DI-497](#)).
- Turn the ignition switch to LOCK, and wait at least for 20 seconds.
- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Check the DTC (See page [DI-497](#)).

OK:

DTC B0106/54 is not output.

HINT:


Codes other than code B0106/54 may be output at this time, but they are not relevant to this check.

NG

Replace airbag sensor assembly.

OK

4 Check P squib.

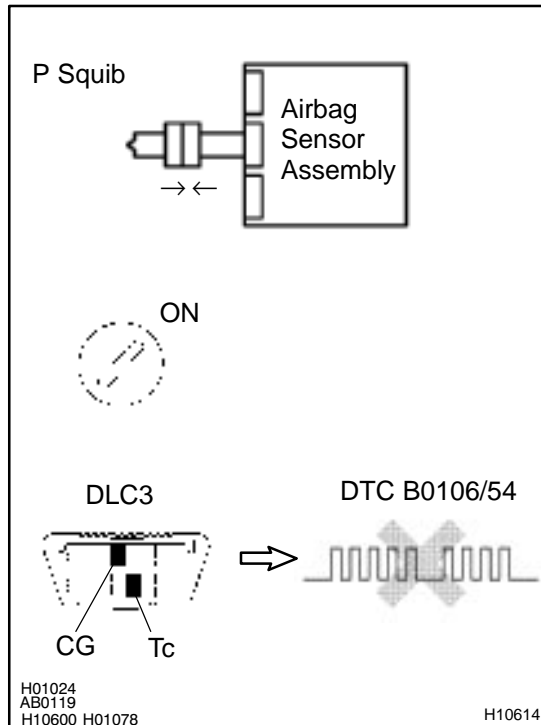

PREPARATION:

- Turn the ignition switch to LOCK.
- Disconnect negative (–) terminal cable from the battery, and wait at least for 90 seconds.
- Connect the front passenger airbag assembly connector.
- Connect negative (–) terminal cable to the battery, and wait at least for 2 seconds.

CHECK:

- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Clear the DTC stored in memory (See page [DI-497](#)).
- Turn the ignition switch to LOCK, and wait at least for 20 seconds.
- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Check the DTC (See page [DI-497](#)).

OK:

DTC B0106/54 is not output.

HINT:

Codes other than code B0106/54 may be output at this time, but they are not relevant to this check.

NG

Replace front passenger airbag assembly.

OK

From the results of the above inspection, the malfunctioning part can now be considered normal. To make sure of this, use the simulation method to check.

DTC	B0107/51	Short in P Squib Circuit (to Ground)
------------	-----------------	---

CIRCUIT DESCRIPTION

The P squib circuit consists of the airbag sensor assembly and front passenger airbag assembly. It causes the SRS to deploy when the SRS deployment conditions are satisfied. For details of the function of each component, see OPERATION on page RS-2. DTC B0107/51 is recorded when ground short is detected in the P squib circuit.


DTC No.	DTC Detecting Condition	Trouble Area
B0107/51	<ul style="list-style-type: none"> • Short circuit in P squib wire harness (to ground) • P squib malfunction • Airbag sensor assembly malfunction 	<ul style="list-style-type: none"> • Front passenger airbag assembly (P squib) • Airbag sensor assembly • Wire harness

WIRING DIAGRAM


See page DI-527.

INSPECTION PROCEDURE

1	Prepare for inspection (See step 1 on page DI-629).
----------	--



2	Check P squib circuit.
----------	-------------------------------

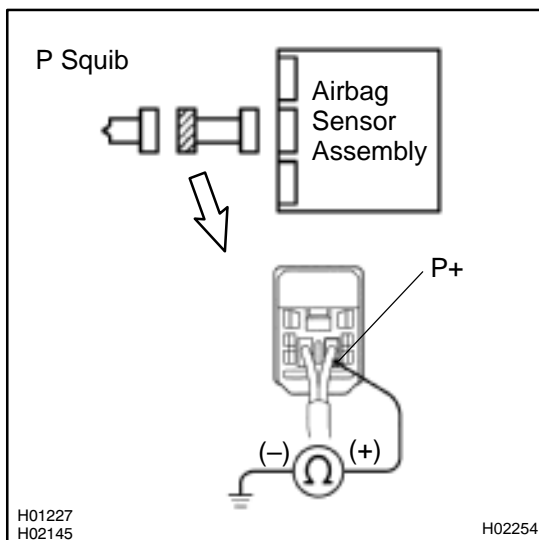

CHECK:

For the connector (on the front passenger airbag assembly side) between the front passenger airbag assembly and the airbag sensor assembly, measure the resistance between P+ and body ground.

OK:


Resistance: 1 MΩ or Higher

NG

Repair or replace harness or connector between front passenger airbag assembly and airbag sensor assembly.

OK

3 Check airbag sensor assembly.

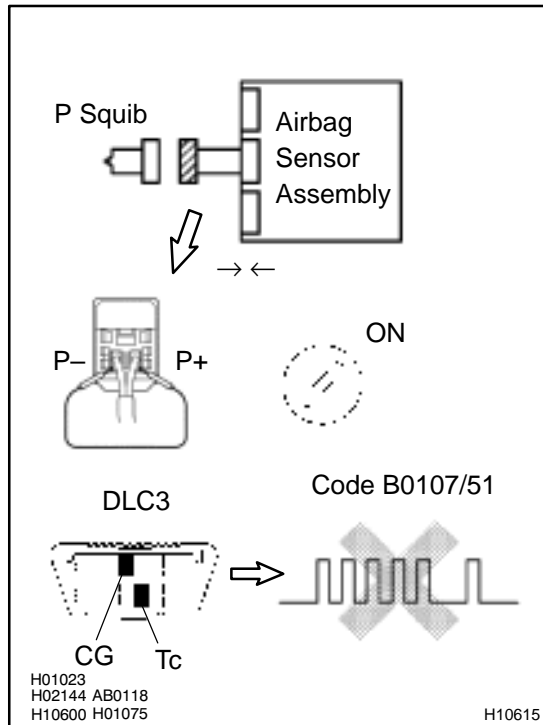

PREPARATION:

- Connect the connector to the airbag sensor assembly.
- Using a service wire, connect P+ and P- of the connector (on the front passenger airbag assembly side) between the front passenger airbag assembly and the airbag sensor assembly.
- Connect negative (-) terminal cable to the battery, and wait at least for 2 seconds.

CHECK:

- Turn the ignition switch to ON and wait at least for 20 seconds.
- Clear the DTC stored in memory (See step 5 on page DI-497).
- Turn the ignition switch to LOCK, and wait at least for 20 seconds.
- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Check the DTC (See page DI-497).

OK:

DTC B0107/51 is not output.

HINT:


Codes other than code B0107/51 may be output at this time, but they are not relevant to this check.

NG

Replace airbag sensor assembly.

OK

4 Check P squib.

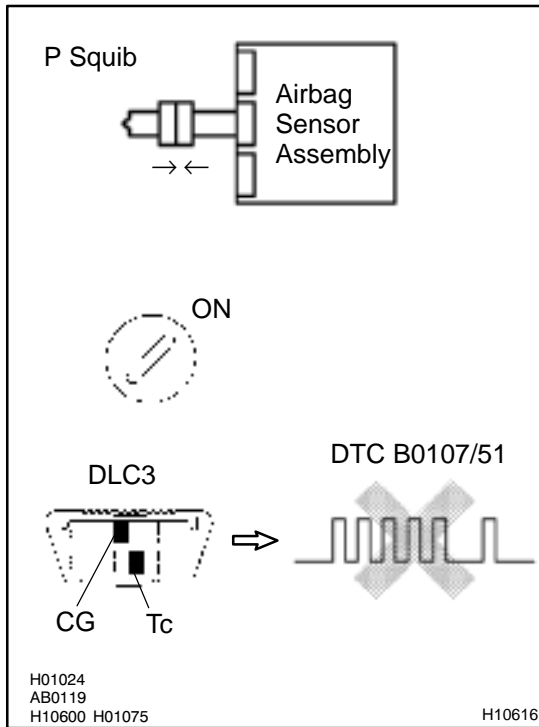

PREPARATION:

- Turn the ignition switch to LOCK.
- Disconnect negative (–) terminal cable from the battery, and wait at least for 90 seconds.
- Connect the front passenger airbag assembly connector.
- Connect negative (–) terminal cable to the battery, and wait at least for 2 seconds.

CHECK:

- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Clear the DTC stored in memory (See step 5 on page [DI-497](#)).
- Turn the ignition switch to LOCK, and wait at least for 20 seconds.
- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Check the DTC (See page [DI-497](#)).

OK:

DTC B0107/51 is not output.

HINT:

Codes other than code B0107/51 may be output at this time, but they are not relevant to this check.

NG

Replace front passenger airbag assembly.

OK

From the results of the above inspection, the malfunctioning part can now be considered normal. To make sure of this, use the simulation method to check. If the malfunctioning part can not be detected by the simulation method, replace all SRS components including the wire harness.

DTC	B0108/52	Short in P Squib Circuit (to B+)
------------	-----------------	---

CIRCUIT DESCRIPTION

The P squib circuit consists of the airbag sensor assembly and front passenger airbag assembly. It causes the SRS to deploy when the SRS deployment conditions are satisfied. For details of the function of each component, see OPERATION on page RS-2. DTC B0108/52 is recorded when a B+ short is detected in the P squib circuit.


DTC No.	DTC Detecting Condition	Trouble Area
B0108/52	<ul style="list-style-type: none"> • Short circuit in P squib wire harness (to B+) • P squib malfunction • Airbag sensor assembly malfunction 	<ul style="list-style-type: none"> • Front passenger airbag assembly (P squib) • Airbag sensor assembly • Wire harness

WIRING DIAGRAM


See page DI-527.

INSPECTION PROCEDURE

1	Prepare for inspection (See step 1 on page DI-629).
----------	--



2	Check P squib circuit.
----------	-------------------------------

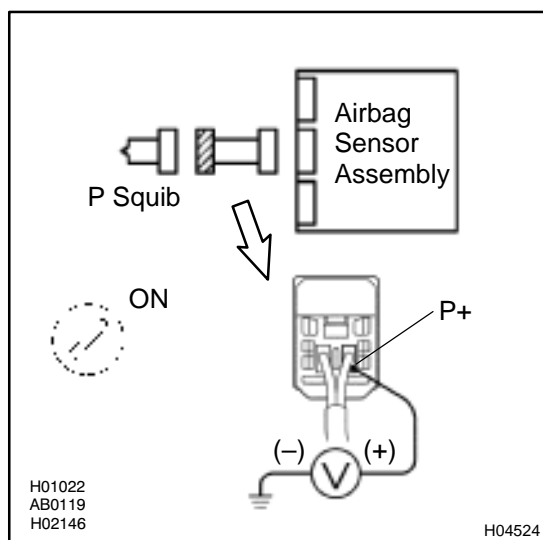

CHECK:

- Turn the ignition switch to ON.
- For the connector (on the front passenger airbag assembly side) between the front passenger airbag assembly and the airbag sensor assembly, measure the voltage between the P+ and body ground.

OK:


Voltage: 0 V

NG

Repair or replace harness or connector between front passenger airbag assembly and airbag sensor assembly.

OK

3 Check airbag sensor assembly.

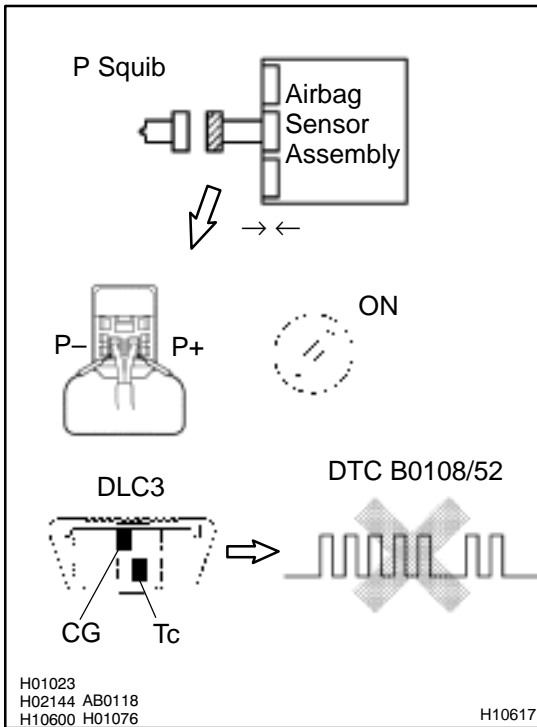

PREPARATION:

- Connect the connector to the airbag sensor assembly.
- Using a service wire, connect P+ and P– of the connector (on the front passenger airbag assembly side) between the front passenger airbag assembly and the airbag sensor assembly.
- Connect negative (–) terminal cable to the battery, and wait at least for 2 seconds.

CHECK:

- Turn the ignition switch to ON and wait at least for 20 seconds.
- Clear the DTC stored in memory (See step 5 on page [DI-497](#)).
- Turn the ignition switch to LOCK, and wait at least for 20 seconds.
- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Check the DTC (See page [DI-497](#)).

OK:

DTC B0108/52 is not output.

HINT:


Codes other than code B0108/52 may be output at this time, but they are not relevant to this check.

NG

Replace airbag sensor assembly.

OK

4 Check P squib.

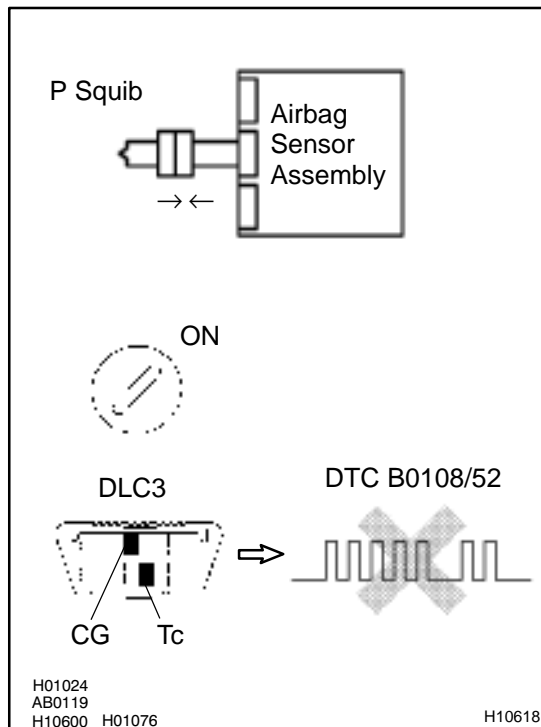

PREPARATION:

- Turn the ignition switch to LOCK.
- Disconnect negative (–) terminal cable from the battery, and wait at least for 90 seconds.
- Connect the front passenger airbag assembly connector.
- Connect negative (–) terminal cable to the battery, and wait at least for 2 seconds.

CHECK:

- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Clear the DTC stored in memory (See step 5 on page [DI-497](#)).
- Turn the ignition switch to LOCK, and wait at least for 20 seconds.
- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Check the DTC (See page [DI-497](#)).

OK:

DTC B0108/52 is not output.

HINT:

Codes other than code B0108/52 may be output at this time, but they are not relevant to this check.

NG

Replace front passenger airbag assembly.

OK

From the results of the above inspection, the malfunctioning part can now be considered normal. To make sure of this, use the simulation method to check. If the malfunctioning part can not be detected by the simulation method, replace all SRS components including the wire harness.


DTC	B0110/43	Short in Side Squib (RH) Circuit
------------	-----------------	---

CIRCUIT DESCRIPTION

The side squib (RH) circuit consists of the airbag sensor assembly and side airbag assembly (RH). It causes the SRS to deploy when the SRS deployment conditions are satisfied. For details of the function of each component, see OPERATION on page RS-2. DTC B0110/43 is recorded when a short is detected in the side squib (RH) circuit.

DTC No.	DTC Detecting Condition	Trouble Area
B0110/43	<ul style="list-style-type: none"> • Short circuit between FR+ wire harness and FR– wire harness of squib • Side squib (RH) malfunction • Airbag sensor assembly malfunction 	<ul style="list-style-type: none"> • Side airbag assembly (RH) • Airbag sensor assembly • Wire harness


WIRING DIAGRAM

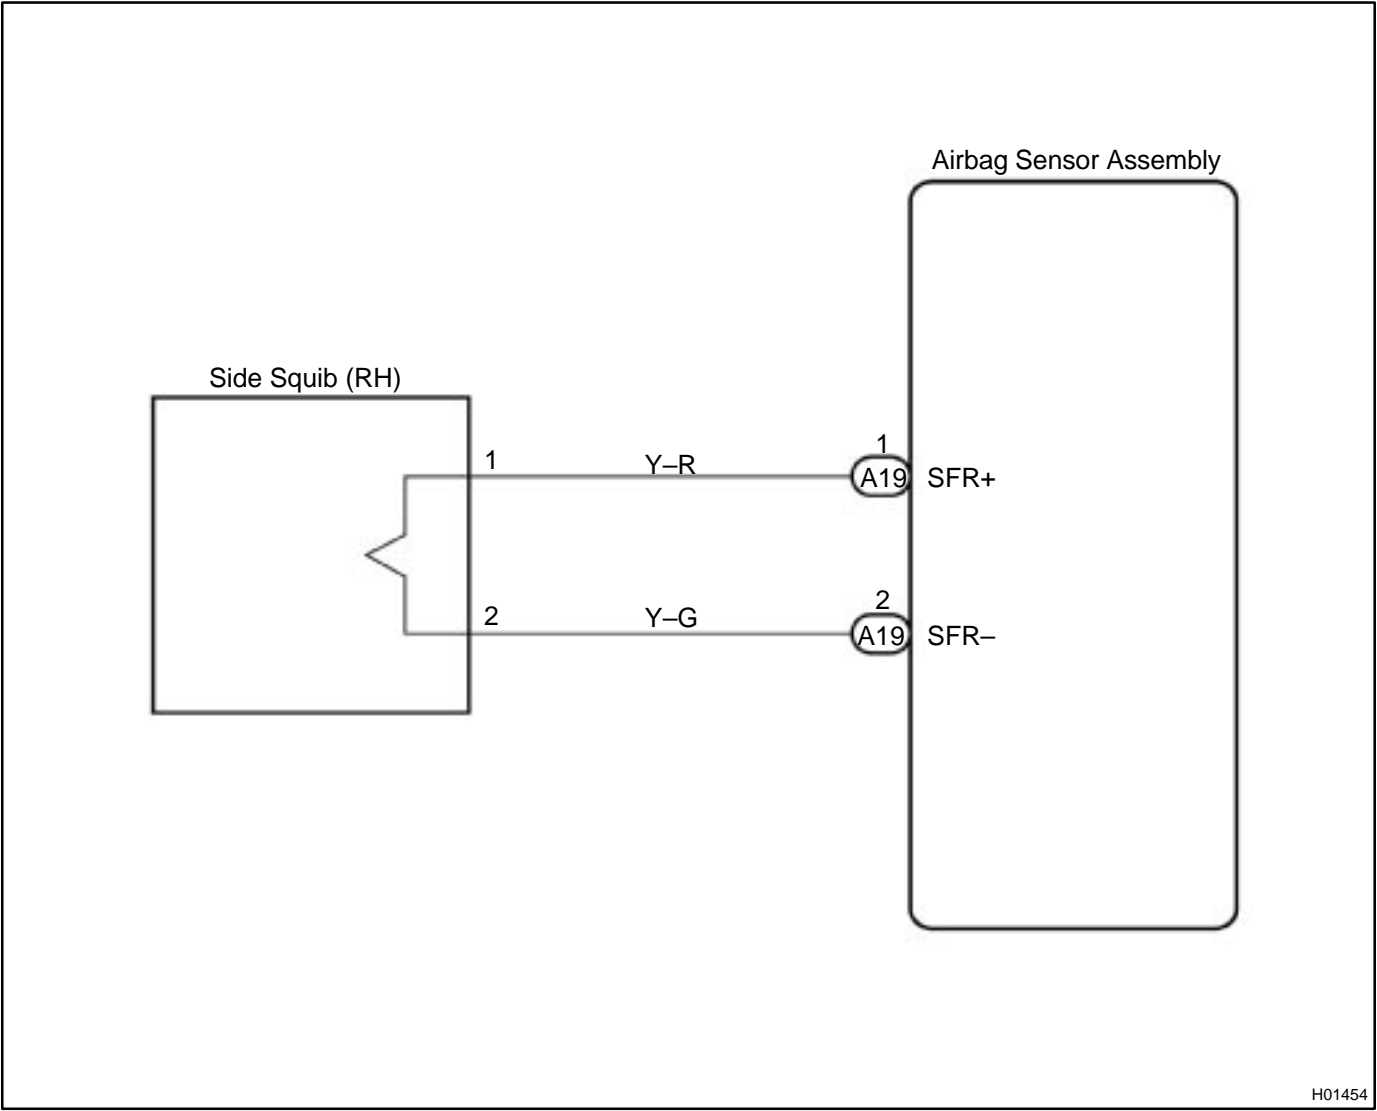


H01454

INSPECTION PROCEDURE

- | | |
|---|--|
| 1 | Prepare for inspection (See step 1 on page DI-629). |
|---|--|



- | | |
|---|--------------------------------|
| 2 | Check side squib (RH) circuit. |
|---|--------------------------------|

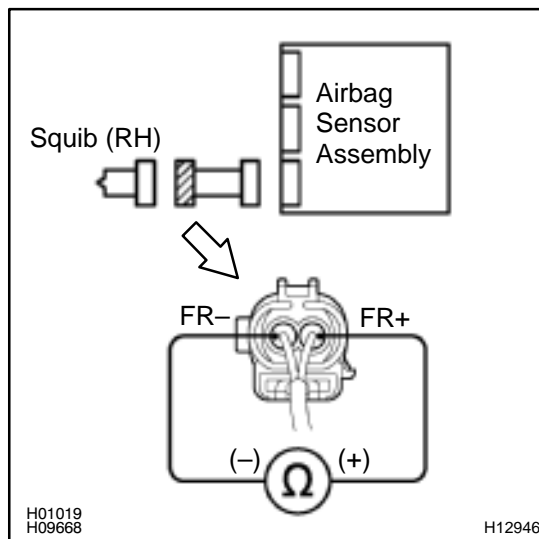**PREPARATION:**

Release the airbag activation prevention mechanism of the connector (on the airbag sensor assembly side) between the airbag sensor assembly and the side airbag assembly (RH) (See page [DI-497](#)).

CHECK:

For the connector (on the side airbag assembly side) between the side airbag assembly (RH) and the airbag sensor assembly, measure the resistance between FR+ and FR-.

OK:


Resistance: 1 MΩ or Higher

NG

Repair or replace harness or connector between side airbag assembly (RH) and airbag sensor assembly.

OK

3 Check airbag sensor assembly.

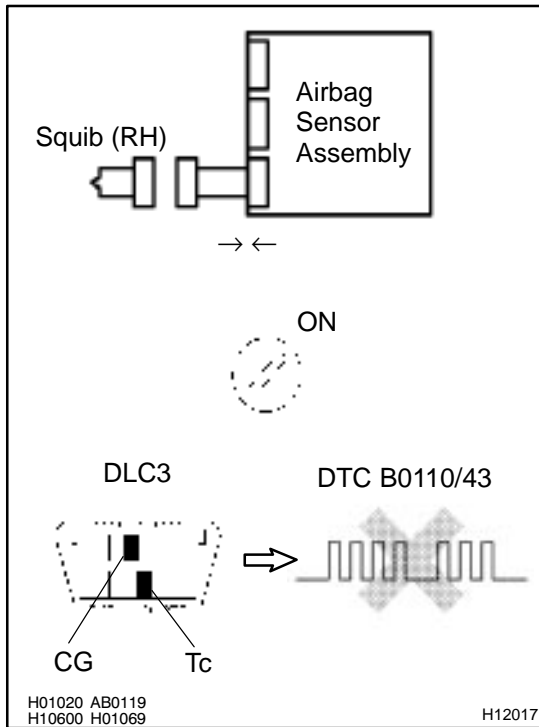

PREPARATION:

- Connect the connector to the airbag sensor assembly.
- Connect negative (–) terminal cable to the battery, and wait at least for 2 seconds.

CHECK:

- Turn the ignition switch to ON and wait at least for 20 seconds.
- Clear the DTC stored in memory (See page [DI-497](#)).
- Turn the ignition switch to LOCK, and wait at least for 20 seconds.
- Turn the ignition switch or ON, and wait at least for 20 seconds.
- Check the DTC (See page [DI-497](#)).

OK:

DTC B0110/43 is not output.

HINT:


Codes other than code B0110/43 may be output at this time, but they are not relevant to this check.

NG

Replace airbag sensor assembly.

OK

4 Check side squib (RH).

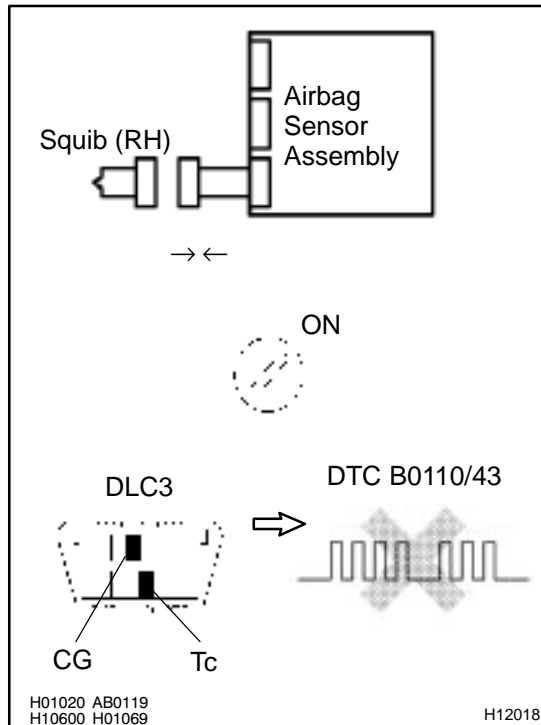

PREPARATION:

- Turn the ignition switch to LOCK.
- Disconnect negative (–) terminal cable from the battery, and wait at least for 90 seconds.
- Connect the side airbag assembly (RH) connector.
- Connect negative (–) terminal cable to the battery, and wait at least for 2 seconds.

CHECK:

- Turn the ignition switch to LOCK, and wait at least for 20 seconds.
- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Clear the DTC stored in memory (See page [DI-497](#)).
- Turn the ignition switch to LOCK, and wait at least for 20 seconds.
- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Check the DTC (See page [DI-497](#)).

OK:

DTC B0110/43 is not output.

HINT:

Codes other than code B0110/43 may be output at this time, but they are not relevant to this check.

NG

Replace side airbag assembly (RH).

OK

From the results of the above inspection, the malfunctioning part can now be considered normal. To make sure of this, use the simulation method to check.

DTC	B0111/44	Open in Side Squib (RH) Circuit
------------	-----------------	--

CIRCUIT DESCRIPTION

The side squib (RH) circuit consists of the airbag sensor assembly and side airbag assembly (RH). It causes the SRS to deploy when the SRS deployment conditions are satisfied. For details of the function of each component, see OPERATION on page RS-2. DTC B0111/44 is recorded when an open is detected in the side squib (RH) circuit.


DTC No.	DTC Detecting Condition	Trouble Area
B0111/44	<ul style="list-style-type: none"> • Open circuit in FR+ wire harness or FR– wire harness of squib • Side squib (RH) malfunction • Airbag sensor assembly malfunction 	<ul style="list-style-type: none"> • Side airbag assembly (RH) • Airbag sensor assembly • Wire harness

WIRING DIAGRAM


See page DI-540.

INSPECTION PROCEDURE

1	Prepare for inspection (See step 1 on page DI-629).
----------	--



2	Check front side squib (RH) circuit.
----------	---

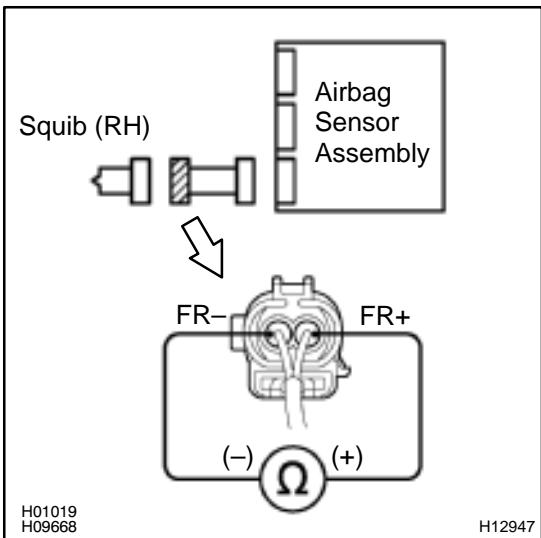

CHECK:


For the connector (on the front side airbag assembly side) between the front side airbag assembly (RH) and the airbag sensor assembly, measure the resistance between FR+ and FR–.

OK:


Resistance: Below 1 Ω



Repair or replace harness or connector between side airbag assembly (RH) and airbag sensor assembly.



3 Check airbag sensor assembly.

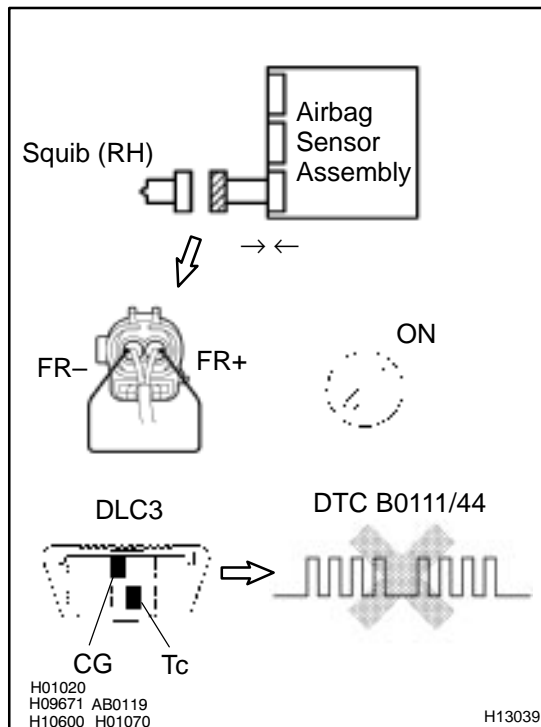

PREPARATION:

- Connect the connector to the airbag sensor assembly.
- Using a service wire, connect FR+ and FR- of the connector (on the side airbag assembly side) between the side airbag assembly (RH) and the airbag sensor assembly.
- Connect negative (-) terminal cable to the battery, and wait at least for 2 seconds.

CHECK:

- Turn the ignition switch to ON and wait at least for 20 seconds.
- Clear the DTC stored in memory (See page [DI-497](#)).
- Turn the ignition switch to LOCK, and wait at least for 20 seconds.
- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Check the DTC (See page [DI-497](#)).

OK:

DTC B0111/44 is not output.


HINT:

Codes other than code B0111/44 may be output at this time, but they are not relevant to this check.

NG

Replace airbag sensor assembly.

OK

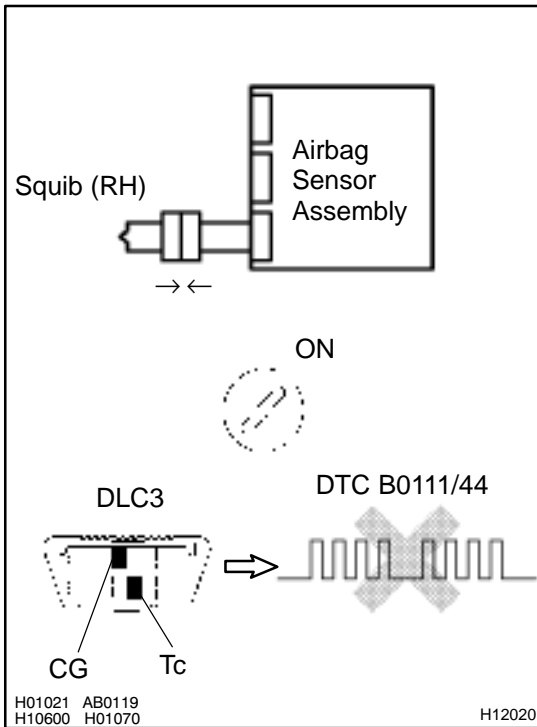4 Check side squib (RH).**PREPARATION:**

- Turn the ignition switch to LOCK.
- Disconnect negative (–) terminal cable from the battery, and wait at least for 90 seconds.
- Connect the front side airbag assembly (RH) connector.
- Connect negative (–) terminal cable to the battery, and wait at least for 2 seconds.

CHECK:

- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Clear the DTC stored in memory (See page [DI-497](#)).
- Turn the ignition switch to LOCK, and wait at least for 20 seconds.
- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Check the DTC (See page [DI-497](#)).

OK:

DTC B0111/44 is not output.

HINT:

Codes other than code B0111/44 may be output at this time, but they are not relevant to this check.

NG

Replace side airbag assembly (RH).

OK

From the results of the above inspection, the malfunctioning part can now be considered normal. To make sure of this, use the simulation method to check.

DTC	B0112/41	Short in Side Squib (RH) Circuit (to Ground)
------------	-----------------	---

CIRCUIT DESCRIPTION

The side squib (RH) circuit consists of the airbag sensor assembly and side airbag assembly (RH).

It causes the SRS to deploy when the SRS deployment conditions are satisfied.

For details of the function of each component, see OPERATION on page RS-2.

DTC B0112/41 is recorded when ground short is detected in the side squib (RH) circuit.


DTC No.	DTC Detecting Condition	Trouble Area
B0112/41	<ul style="list-style-type: none"> • Short circuit in side squib (RH) wire harness (to ground) • Side squib (RH) malfunction • Airbag sensor assembly malfunction 	<ul style="list-style-type: none"> • Side airbag assembly (RH) • Airbag sensor assembly • Wire harness

WIRING DIAGRAM


See page DI-540.

INSPECTION PROCEDURE

1	Prepare for inspection (See step 1 on page DI-629).
----------	--



2	Check side squib (RH) circuit.
----------	---------------------------------------

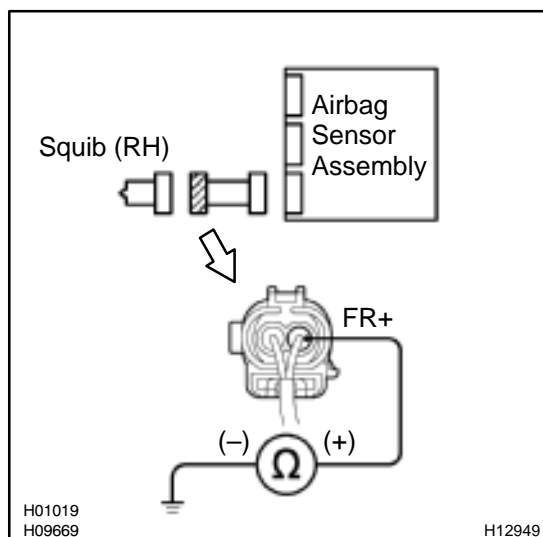

CHECK:

For the connector (on the side airbag assembly side) between the side airbag assembly (RH) and the airbag sensor assembly, measure the resistance between FR+ and body ground.

OK:


Resistance: 1 MΩ or Higher

NG

Repair or replace harness or connector between side airbag assembly (RH) and airbag sensor assembly.

OK

3 Check airbag sensor assembly.

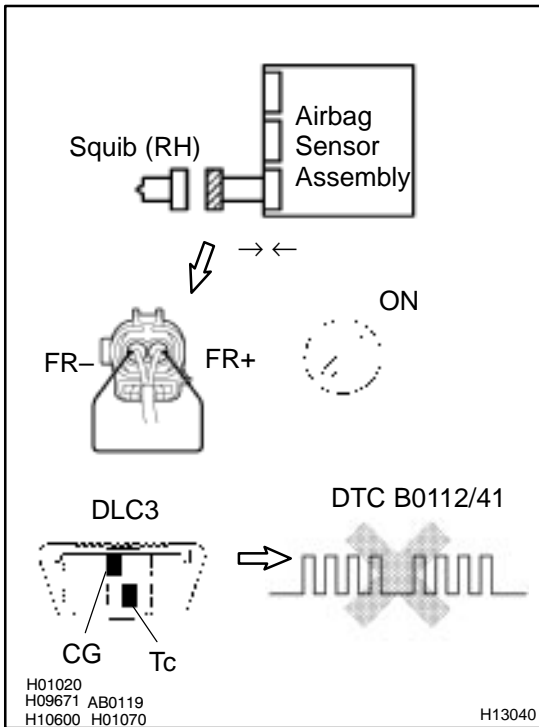

PREPARATION:

- Connect the connector to the airbag sensor assembly.
- Using a service wire, connect FR+ and FR- of the connector (on the side airbag assembly side) between the side airbag assembly (RH) and the airbag sensor assembly.
- Connect negative (-) terminal cable to the battery, and wait at least for 2 seconds.

CHECK:

- Turn the ignition switch to ON and wait at least for 20 seconds.
- Clear the DTC stored in memory (See step 5 on page [DI-497](#)).
- Turn the ignition switch to LOCK, and wait at least for 20 seconds.
- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Check the DTC (See page [DI-497](#)).

OK:

DTC B0112/41 is not output.

HINT:


Codes other than code B0112/41 may be output at this time, but they are not relevant to this check.

NG

Replace airbag sensor assembly.

OK

4 Check side squib (RH).

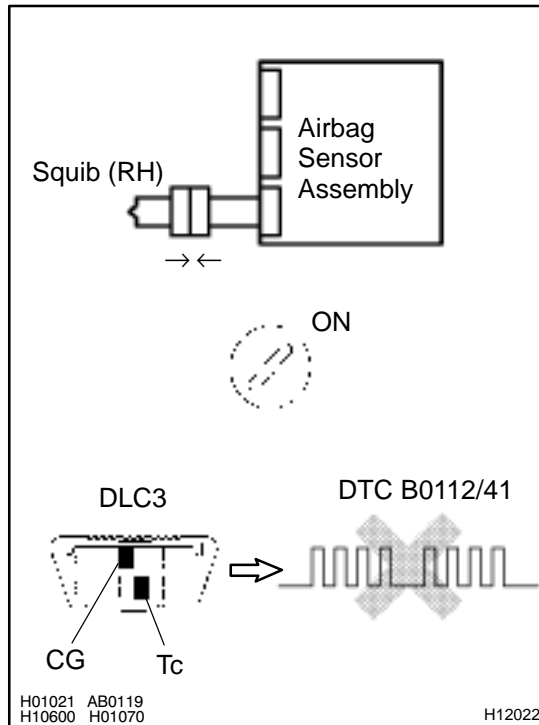

PREPARATION:

- Turn the ignition switch to LOCK.
- Disconnect negative (–) terminal cable from the battery, and wait at least for 90 seconds.
- Connect the side airbag assembly (RH) connector.
- Connect negative (–) terminal cable to the battery, and wait at least for 2 seconds.

CHECK:

- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Clear the DTC stored in memory (See step 5 on page [DI-497](#)).
- Turn the ignition switch to LOCK, and wait at least for 20 seconds.
- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Check the DTC (See page [DI-497](#)).

OK:

DTC B0112/41 is not output.

HINT:

Codes other than code B0112/41 may be output at this time, but they are not relevant to this check.

NG

Replace side airbag assembly (RH).

OK

From the results of the above inspection, the malfunctioning part can now be considered normal. To make sure of this, use the simulation method to check. If the malfunctioning part can not be detected by the simulation method, replace all SRS components including the wire harness.

DTC	B0113/42	Short in Side Squib (RH) Circuit (to B+)
------------	-----------------	---

CIRCUIT DESCRIPTION

The side squib (RH) circuit consists of the airbag sensor assembly and side airbag assembly (RH). It causes the SRS to deploy when the SRS deployment conditions are satisfied. For details of the function of each component, see OPERATION on page RS-2. DTC B0113/42 is recorded when a B+ short is detected in the side squib (RH) circuit.


DTC No.	DTC Detecting Condition	Trouble Area
B0113/42	<ul style="list-style-type: none"> • Short circuit in side squib (RH) wire harness (to B+) • Side squib (RH) malfunction • Airbag sensor assembly malfunction 	<ul style="list-style-type: none"> • Side airbag assembly (RH) • Airbag sensor assembly • Wire harness

WIRING DIAGRAM


See page DI-540.

INSPECTION PROCEDURE

1	Prepare for inspection (See step 1 on page DI-497).
----------	--



2	Check side squib (RH) circuit.
----------	---------------------------------------

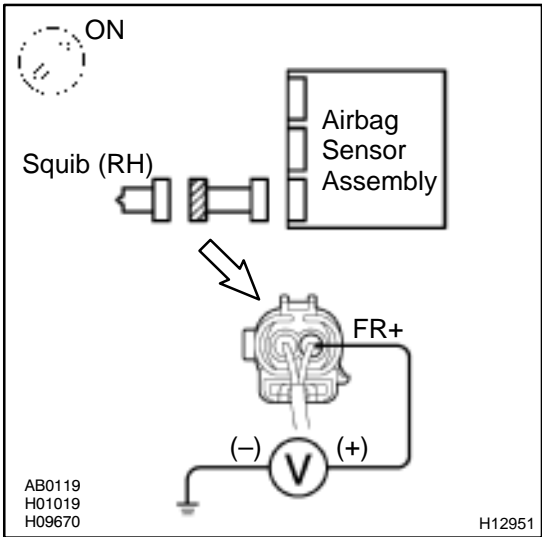

CHECK:


- Turn the ignition switch to ON.
- For the connector (on the airbag sensor assembly side) between the side airbag assembly (RH) and the airbag sensor assembly, measure the voltage between FR+ and body ground.

OK:


Voltage: 0 V

NG

Repair or replace harness or connector between side airbag assembly (RH) and airbag sensor assembly.



3 Check airbag sensor assembly.

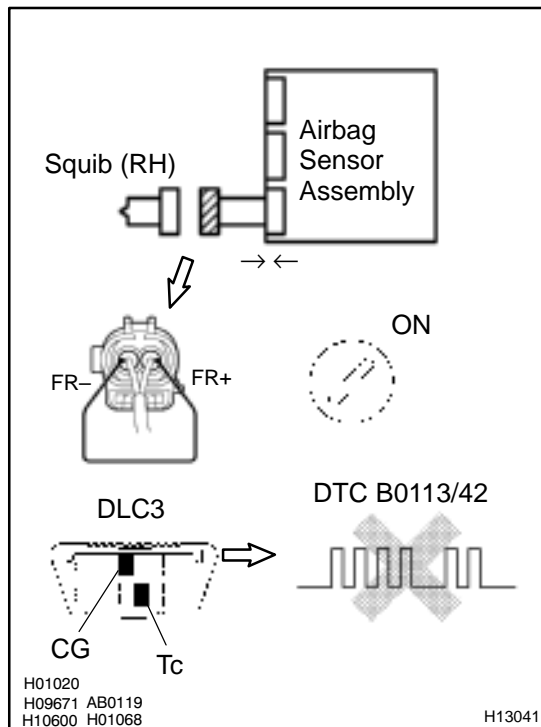

PREPARATION:

- Connect the connector to the airbag sensor assembly.
- Using a service wire, connect FR+ and FR- of the connector (on the front side airbag assembly side) between the front side airbag assembly (RH) and the airbag sensor assembly.
- Connect negative (-) terminal cable to the battery, and wait at least for 2 seconds.

CHECK:

- Turn the ignition switch to ON and wait at least for 20 seconds.
- Clear the DTC stored in memory (See step 5 on page [DI-497](#)).
- Turn the ignition switch to LOCK, and wait at least for 20 seconds.
- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Check the DTC (See page [DI-497](#)).

OK:

DTC B0113/42 is not output.

HINT:


Codes other than code B0113/42 may be output at this time, but they are not relevant to this check.

NG

Replace airbag sensor assembly.

OK

4 Check side squib (RH).

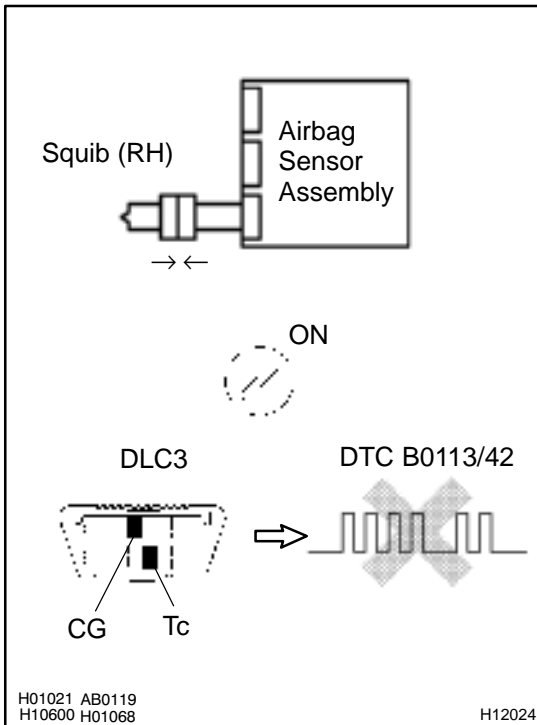

PREPARATION:

- Turn the ignition switch to LOCK.
- Disconnect negative (–) terminal cable from the battery, and wait at least for 90 seconds.
- Connect the front side airbag assembly (RH) connector.
- Connect negative (–) terminal cable to the battery, and wait at least for 2 seconds.

CHECK:

- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Clear the DTC stored in memory (See step 5 on page [DI-497](#)).
- Turn the ignition switch to LOCK, and wait at least for 20 seconds.
- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Check the DTC (See page [DI-497](#)).

OK:

DTC B0113/42 is not output.

HINT:

Codes other than code B0113/42 may be output at this time, but they are not relevant to this check.

NG

Replace side airbag assembly (RH).

OK

From the results of the above inspection, the malfunctioning part can now be considered normal. To make sure of this, use the simulation method to check. If the malfunctioning part can not be detected by the simulation method, replace all SRS components including the wire harness.


DTC	B0115/47	Short in Side Squib (LH) Circuit
-----	----------	----------------------------------

CIRCUIT DESCRIPTION

The side squib (LH) circuit consists of the airbag sensor assembly and side airbag assembly (LH). It causes the SRS to deploy when the SRS deployment conditions are satisfied. For details of the function of each component, see OPERATION on page RS-2. DTC B0115/47 is recorded when a short is detected in the side squib (LH) circuit.

DTC No.	DTC Detecting Condition	Trouble Area
B0115/47	<ul style="list-style-type: none">• Short circuit between FL+ wire harness and FL- wire harness of squib• Side squib (LH) malfunction• Airbag sensor assembly malfunction	<ul style="list-style-type: none">• Side airbag assembly (LH)• Airbag sensor assembly• Wire harness


WIRING DIAGRAM

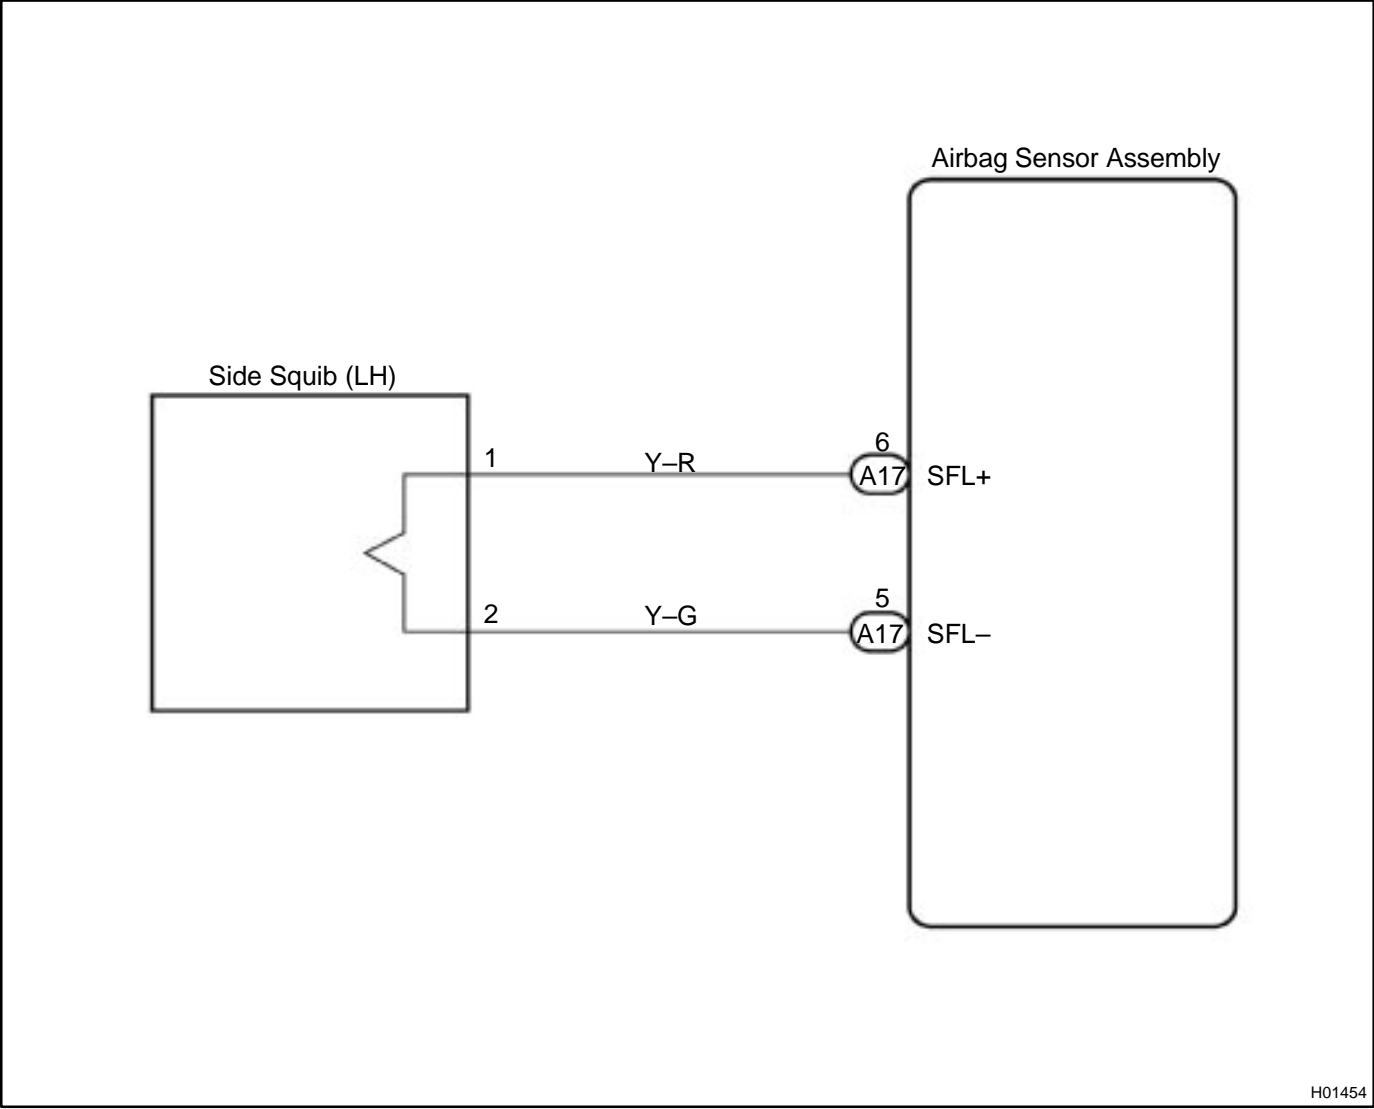


cardiagn.com

INSPECTION PROCEDURE

- 1 Prepare for inspection (See step 1 on page [DI-629](#)).



- 2 Check side squib (LH) circuit.

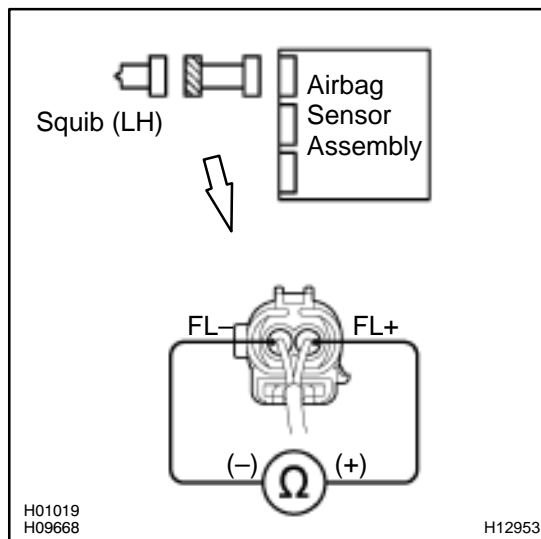**PREPARATION:**

Release the airbag activation prevention mechanism of the connector (on the airbag sensor assembly side) between the airbag sensor assembly and the side airbag assembly (LH) (See page [DI-497](#)).

CHECK:

For the connector (on the side airbag assembly side) between the side airbag assembly (LH) and the airbag sensor assembly, measure the resistance between FL+ and FL-.

OK:


Resistance: 1 MΩ or Higher

NG

Repair or replace harness or connector between side airbag assembly (LH) and airbag sensor assembly.

OK

3 Check airbag sensor assembly.

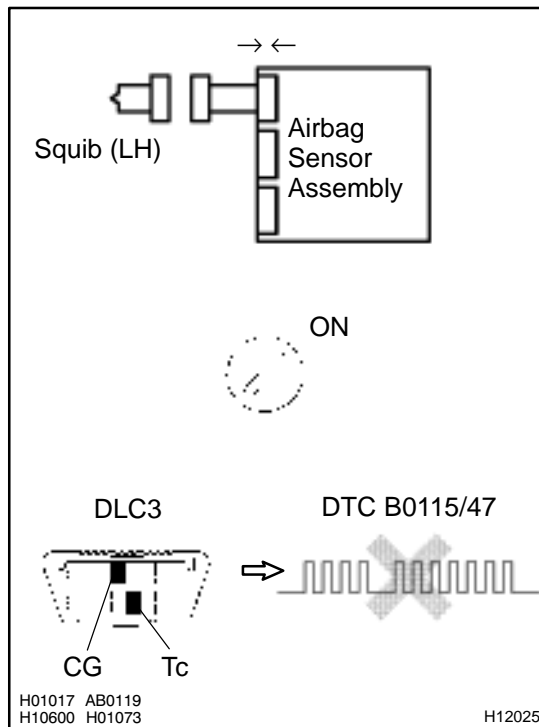

PREPARATION:

- Connect the connector to the airbag sensor assembly.
- Connect negative (–) terminal cable to the battery, and wait at least for 2 seconds.

CHECK:

- Turn the ignition switch to ON and wait at least for 20 seconds.
- Clear the DTC stored in memory (See page [DI-497](#)).
- Turn the ignition switch to LOCK, and wait at least for 20 seconds.
- Turn the ignition switch or ON, and wait at least for 20 seconds.
- Check the DTC (See page [DI-497](#)).

OK:

DTC B0115/47 is not output.

HINT:


Codes other than code B0115/47 may be output at this time, but they are not relevant to this check.

NG

Replace airbag sensor assembly.

OK

4 Check side squib (LH).

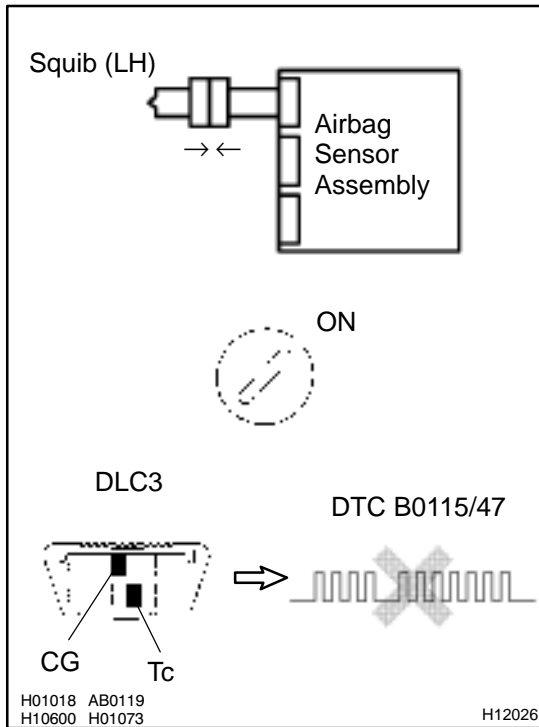

PREPARATION:

- Turn the ignition switch to LOCK.
- Disconnect negative (–) terminal cable from the battery, and wait at least for 90 seconds.
- Connect the front side airbag assembly (LH) connector.
- Connect negative (–) terminal cable to the battery, and wait at least for 2 seconds.

CHECK:

- Turn the ignition switch to LOCK, and wait at least for 20 seconds.
- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Clear the DTC stored in memory (See page [DI-497](#)).
- Turn the ignition switch to LOCK, and wait at least for 20 seconds.
- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Check the DTC (See page [DI-497](#)).

OK:

DTC B0115/47 is not output.

HINT:

Codes other than code B0115/47 may be output at this time, but they are not relevant to this check.

NG

Replace side airbag assembly (LH).

OK

From the results of the above inspection, the malfunctioning part can now be considered normal. To make sure of this, use the simulation method to check.

DTC	B0116/48	Open in Side Squib (LH) Circuit
------------	-----------------	--

CIRCUIT DESCRIPTION

The side squib (LH) circuit consists of the airbag sensor assembly and side airbag assembly (LH). It causes the SRS to deploy when the SRS deployment conditions are satisfied. For details of the function of each component, see OPERATION on page RS-2. DTC B0116/48 is recorded when an open is detected in the side squib (LH) circuit.


DTC No.	DTC Detecting Condition	Trouble Area
B0116/48	<ul style="list-style-type: none"> • Open circuit in FL+ wire harness or FL- wire harness of squib • Side squib (LH) malfunction • Airbag sensor assembly malfunction 	<ul style="list-style-type: none"> • Side airbag assembly (LH) • Airbag sensor assembly • Wire harness

WIRING DIAGRAM


See page DI-553.

INSPECTION PROCEDURE

1	Prepare for inspection. (See step 1 on page DI-629)
----------	--



2	Check side squib (LH) circuit.
----------	---------------------------------------

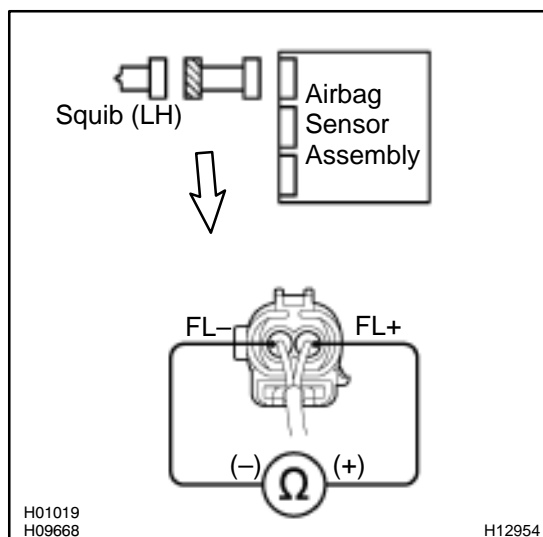

CHECK:

For the connector (on the front side airbag assembly side) between the front side airbag assembly (LH) and the airbag sensor assembly, measure the resistance between FL+ and FL-.

OK:


Resistance: Below 1 Ω

NG

Repair or replace harness or connector between side airbag assembly (LH) and airbag sensor assembly.

OK

3 Check airbag sensor assembly.

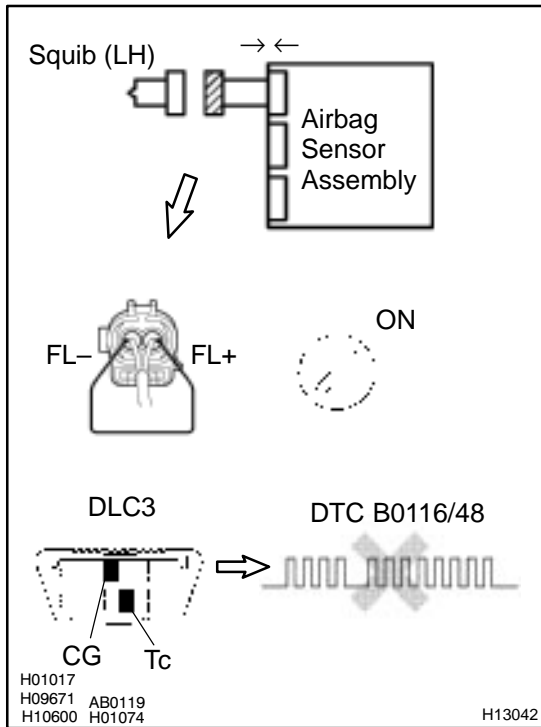

PREPARATION:

- Connect the connector to the airbag sensor assembly.
- Using a service wire, connect FL+ and FL- of the connector (on the side airbag assembly side) between the side airbag assembly (LH) and the airbag sensor assembly.
- Connect negative (-) terminal cable to the battery, and wait at least 2 seconds.

CHECK:

- Turn the ignition switch to ON and wait at least for 20 seconds.
- Clear the DTC stored in memory (See page [DI-497](#)).
- Turn the ignition switch to LOCK, and wait at least for 20 seconds.
- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Check the DTC (See page [DI-497](#)).

OK:

DTC B0116/48 is not output.

HINT:


Codes other than code B0116/48 may be output at this time, but they are not relevant to this check.

NG

Replace side airbag sensor assembly.

OK

4 Check side squib (LH).

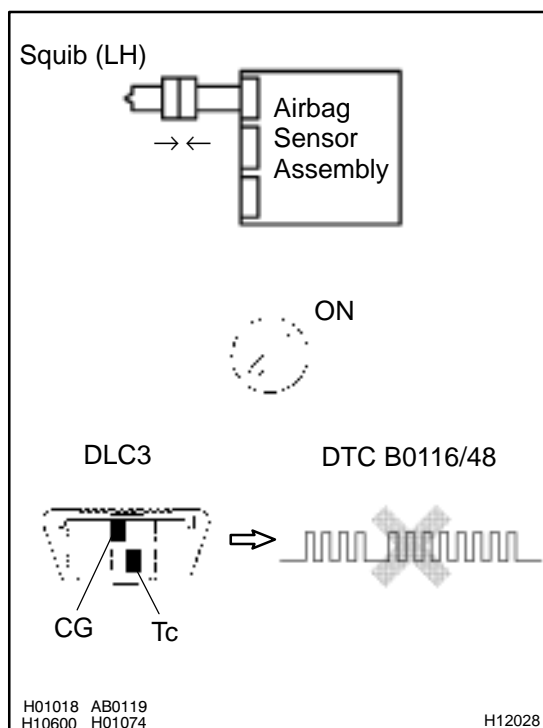

PREPARATION:

- Turn the ignition switch to LOCK.
- Disconnect negative (–) terminal cable from the battery, and wait at least for 90 seconds.
- Connect the side airbag assembly (LH) connector.
- Connect negative (–) terminal cable to the battery, and wait at least for 2 seconds.

CHECK:

- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Clear the DTC stored in memory (See page [DI-497](#)).
- Turn the ignition switch to LOCK, and wait at least for 20 seconds.
- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Check the DTC (See page [DI-497](#)).

OK:

DTC B0116/48 is not output.

HINT:

Codes other than code B0116/48 may be output at this time, but they are not relevant to this check.

NG

Replace side airbag assembly (LH).

OK

From the results of the above inspection, the malfunctioning part can now be considered normal. To make sure of this, use the simulation method to check.

DTC	B0117/45	Short in Side Squib (LH) Circuit (to Ground)
------------	-----------------	---

CIRCUIT DESCRIPTION

The side squib (LH) circuit consists of the airbag sensor assembly and side airbag assembly (LH). It causes the SRS to deploy when the SRS deployment conditions are satisfied. For details of the function of each component, see OPERATION on page RS-2. DTC B0117/45 is recorded when ground short is detected in the side squib (LH) circuit.


DTC No.	DTC Detecting Condition	Trouble Area
B0117/45	<ul style="list-style-type: none"> • Short circuit in side squib (LH) wire harness (to ground) • Side squib (LH) malfunction • Airbag sensor assembly malfunction 	<ul style="list-style-type: none"> • Side airbag assembly (LH) • Airbag sensor assembly • Wire harness

WIRING DIAGRAM


See page DI-553.

INSPECTION PROCEDURE

1	Prepare for inspection (See step 1 on page DI-629).
----------	--



2	Check side squib (LH) circuit.
----------	---------------------------------------

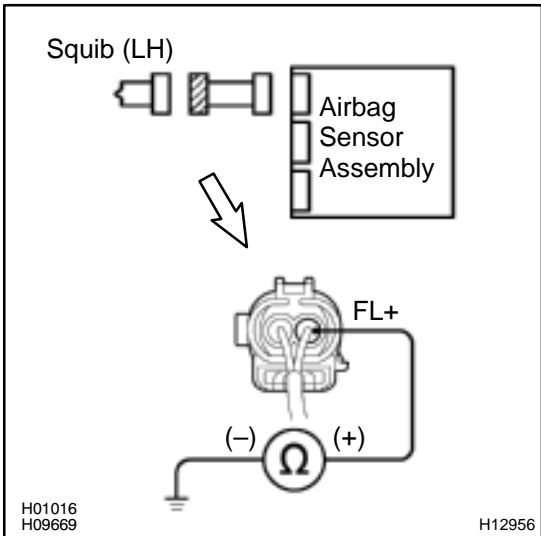

CHECK:


For the connector (on the side airbag assembly side) between the side airbag assembly (LH) and the airbag sensor assembly, measure the resistance between FL+ and body ground.

OK:


Resistance: 1 MΩ or Higher



Repair or replace harness or connector between side airbag assembly (LH) and airbag sensor assembly.



3 Check airbag sensor assembly.

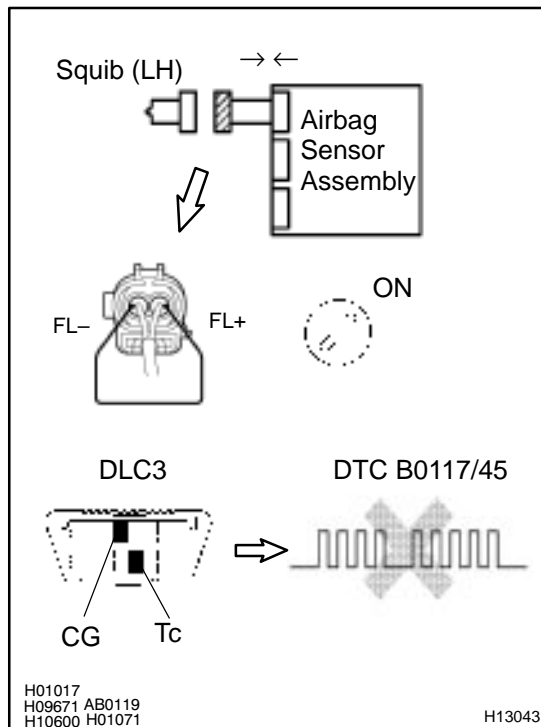

PREPARATION:

- Connect the connector to the airbag sensor assembly.
- Using a service wire, connect FL+ and FL- of the connector (on the side airbag assembly side) between the side airbag assembly (LH) and the airbag sensor assembly.
- Connect negative (-) terminal cable to the battery, and wait at least for 2 seconds.

CHECK:

- Turn the ignition switch to ON and wait at least for 20 seconds.
- Clear the DTC stored in memory (See step 5 on page [DI-497](#)).
- Turn the ignition switch to LOCK, and wait at least for 20 seconds.
- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Check the DTC (See page [DI-497](#)).

OK:

DTC B0117/45 is not output.

HINT:


Codes other than code B0117/45 may be output at this time, but they are not relevant to this check.

NG

Replace airbag sensor assembly.

OK

4 Check side squib (LH).

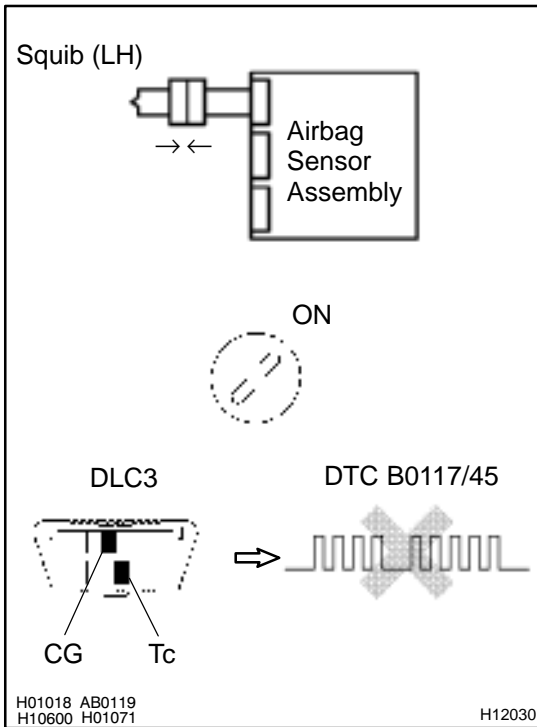

PREPARATION:

- Turn the ignition switch to LOCK.
- Disconnect negative (–) terminal cable from the battery, and wait at least for 90 seconds.
- Connect the front side airbag assembly (LH) connector.
- Connect negative (–) terminal cable to the battery, and wait at least for 2 seconds.

CHECK:

- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Clear the DTC stored in memory (See step 5 on page [DI-497](#)).
- Turn the ignition switch to LOCK, and wait at least for 20 seconds.
- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Check the DTC (See page [DI-497](#)).

OK:

DTC B0117/45 is not output.

HINT:

Codes other than code B0117/45 may be output at this time, but they are not relevant to this check.

NG

Replace front side airbag assembly (LH).

OK

From the results of the above inspection, the malfunctioning part can now be considered normal. To make sure of this, use the simulation method to check. If the malfunctioning part can not be detected by the simulation method, replace all SRS components including the wire harness.

DTC	B0118/46	Short in Side Squib (LH) Circuit (to B+)
------------	-----------------	---

CIRCUIT DESCRIPTION

The side squib (LH) circuit consists of the airbag sensor assembly and side airbag assembly (LH).

It causes the SRS to deploy when the SRS deployment conditions are satisfied.

For details of the function of each component, see OPERATION on page RS-2.

DTC B0118/46 is recorded when a B+ short is detected in the side squib (LH) circuit.


DTC No.	DTC Detecting Condition	Trouble Area
B0118/46	<ul style="list-style-type: none"> • Short circuit in side squib (LH) wire harness (to B+) • Side squib (LH) malfunction • Airbag sensor assembly malfunction 	<ul style="list-style-type: none"> • Side airbag assembly (LH) • Airbag sensor assembly • Wire harness

WIRING DIAGRAM


See page DI-553.

INSPECTION PROCEDURE

1	Prepare for inspection (See step 1 on page DI-629).
----------	--



2	Check side squib (LH) circuit.
----------	---------------------------------------

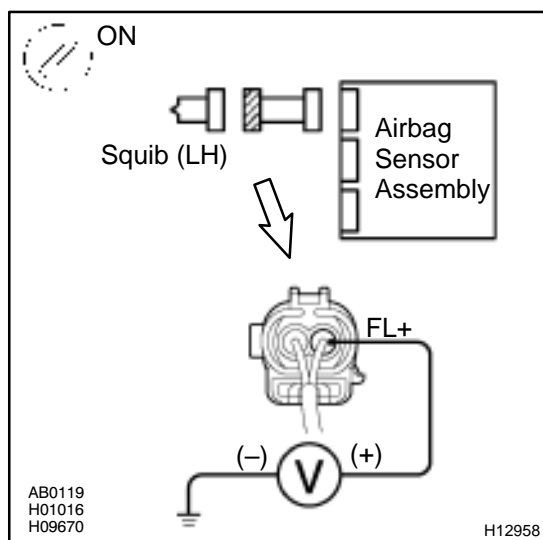

CHECK:

- Turn the ignition switch to ON.
- For the connector (on the side airbag assembly side) between the side airbag assembly (LH) and the airbag sensor assembly, measure the voltage between FL+ and body ground.

OK:


Voltage: 0 V

NG

Repair or replace harness or connector between side airbag assembly (LH) and airbag sensor assembly.

OK

3 Check airbag sensor assembly.

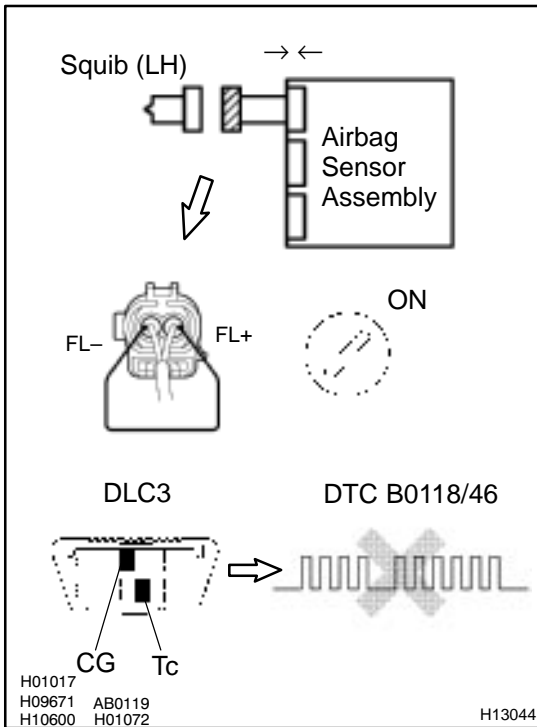

PREPARATION:

- Connect the connector to the airbag sensor assembly.
- Using a service wire, connect FL+ and FL- of the connector (on the side airbag assembly side) between the side airbag assembly (LH) and the airbag sensor assembly.
- Connect negative (-) terminal cable to the battery, and wait at least for 2 seconds.

CHECK:

- Turn the ignition switch to ON and wait at least for 20 seconds.
- Clear the DTC stored in memory (See step 5 on page [DI-497](#)).
- Turn the ignition switch to LOCK, and wait at least for 20 seconds.
- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Check the DTC (See page [DI-497](#)).

OK:

DTC B0118/46 is not output.

HINT:


Codes other than code B0118/46 may be output at this time, but they are not relevant to this check.

NG

Replace airbag sensor assembly.

OK

4 Check side squib (LH).

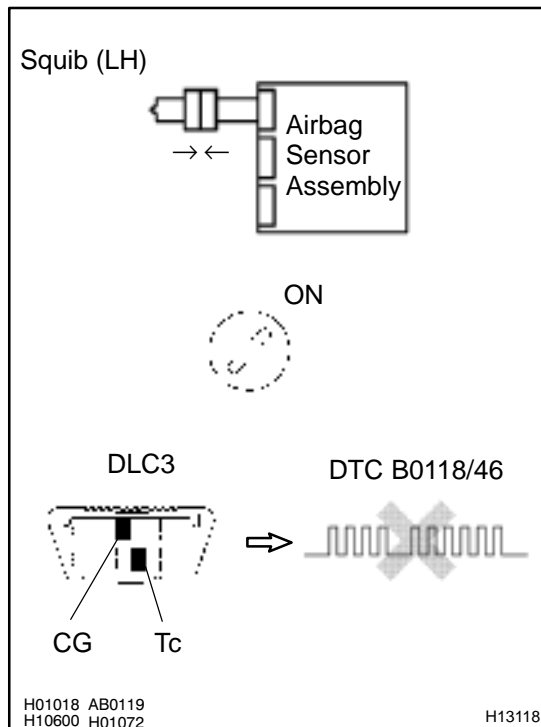

PREPARATION:

- Turn the ignition switch to LOCK.
- Disconnect negative (–) terminal cable from the battery, and wait at least for 90 seconds.
- Connect the side airbag assembly (LH) connector.
- Connect negative (–) terminal cable to the battery, and wait at least for 2 seconds.

CHECK:

- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Clear the DTC stored in memory (See step 5 on page [DI-497](#)).
- Turn the ignition switch to LOCK, and wait at least for 20 seconds.
- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Check the DTC (See page [DI-497](#)).

OK:

DTC B0118/46 is not output.

HINT:

Codes other than code B0118/46 may be output at this time, but they are not relevant to this check.

NG

Replace side airbag assembly (LH).

OK

From the results of the above inspection, the malfunctioning part can now be considered normal. To make sure of this, use the simulation method to check. If the malfunctioning part can not be detected by the simulation method, replace all SRS components including the wire harness.


DTC	B0130/63	Short in P/T Squib (RH) Circuit
------------	-----------------	--

CIRCUIT DESCRIPTION

The P/T squib (RH) circuit consists of the airbag sensor assembly and seat belt pretensioner (RH). It causes the SRS to deploy when the SRS deployment conditions are satisfied. For details of the function of each component, see OPERATION on page RS-2. DTC B0130/63 is recorded when a short is detected in the P/T squib (RH) circuit.


DTC No.	DTC Detecting Condition	Trouble Area
B0130/63	<ul style="list-style-type: none"> • Short circuit between PR+ wire harness and PR– wire harness of squib • P/T squib (RH) malfunction • Airbag sensor assembly malfunction 	<ul style="list-style-type: none"> • Seat belt pretensioner (RH) • Airbag sensor assembly • Wire harness

WIRING DIAGRAM

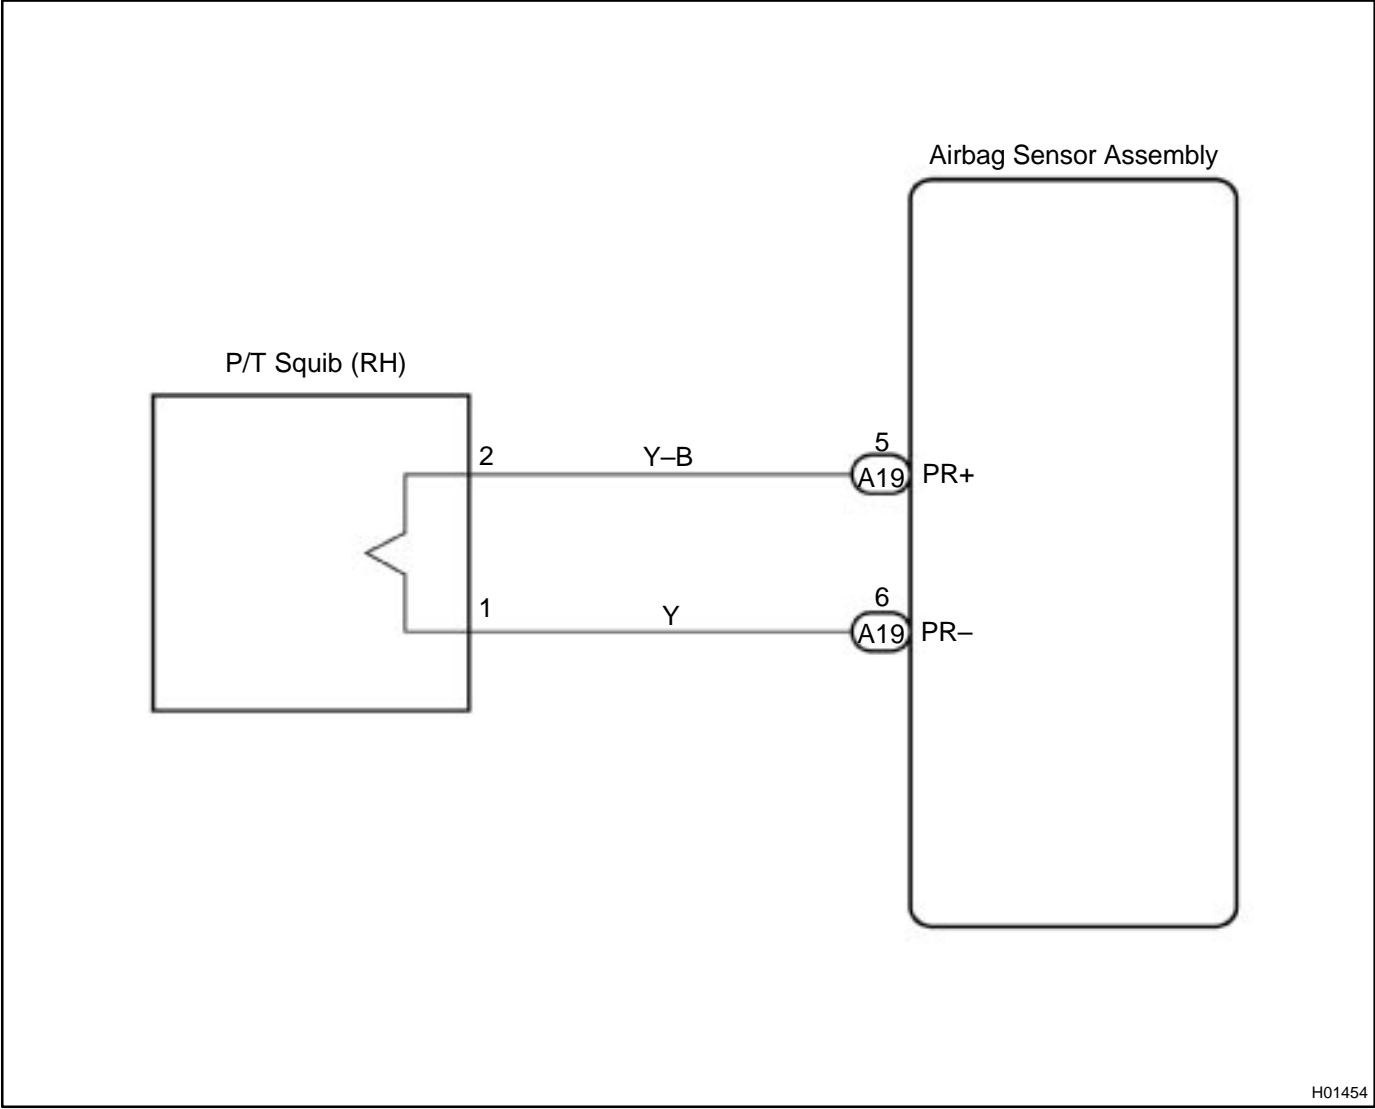


INSPECTION PROCEDURE

- | | |
|---|--|
| 1 | Prepare for inspection (See step 1 on page DI-629). |
|---|--|



- | | |
|---|-------------------------------|
| 2 | Check P/T squib (RH) circuit. |
|---|-------------------------------|

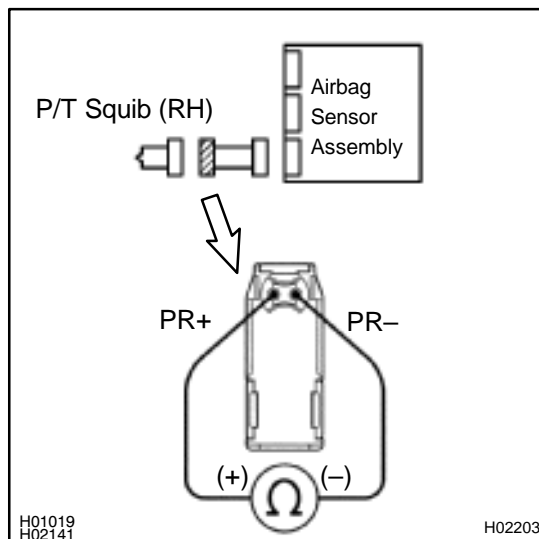**PREPARATION:**

Release the airbag activation prevention mechanism of the connector (on the airbag sensor assembly side) between the airbag sensor assembly and the seat belt pretensioner (RH) (See page [DI-497](#)).

CHECK:

For the connector (on the seat belt pretensioner side) between the seat belt pretensioner (RH) and the airbag sensor assembly, measure the resistance between PR+ and PR-.

OK:


Resistance: 1 MΩ or Higher

NG

Repair or replace harness or connector between seat belt pretensioner (RH) and airbag sensor assembly.

OK

3 Check airbag sensor assembly.

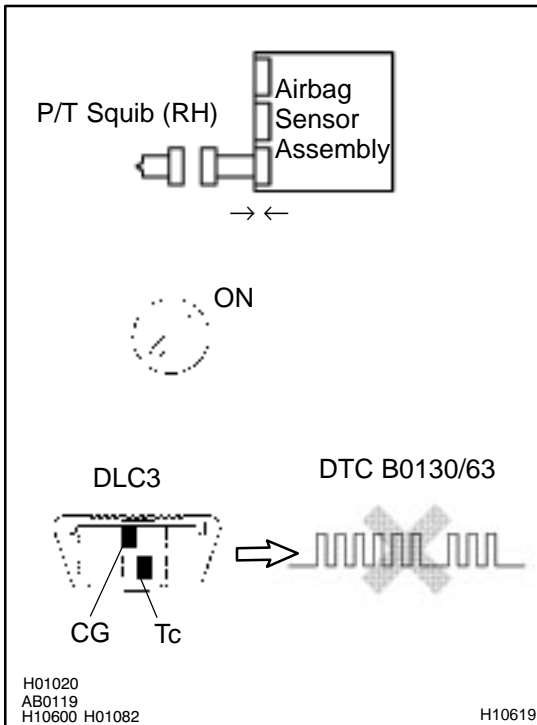

PREPARATION:

- Connect the connector to the airbag sensor assembly.
- Connect negative (–) terminal cable to the battery, and wait at least for 2 seconds.

CHECK:

- Turn the ignition switch to ON and wait at least for 20 seconds.
- Clear the DTC stored in memory (See page [DI-497](#)).
- Turn the ignition switch to LOCK, and wait at least for 20 seconds.
- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Check the DTC (See page [DI-497](#)).

OK:

DTC B0130/63 is not output.

HINT:


Codes other than code B0130/63 may be output at this time, but they are not relevant to this check.

NG

Replace airbag sensor assembly.

OK

4 Check P/T squib (RH).

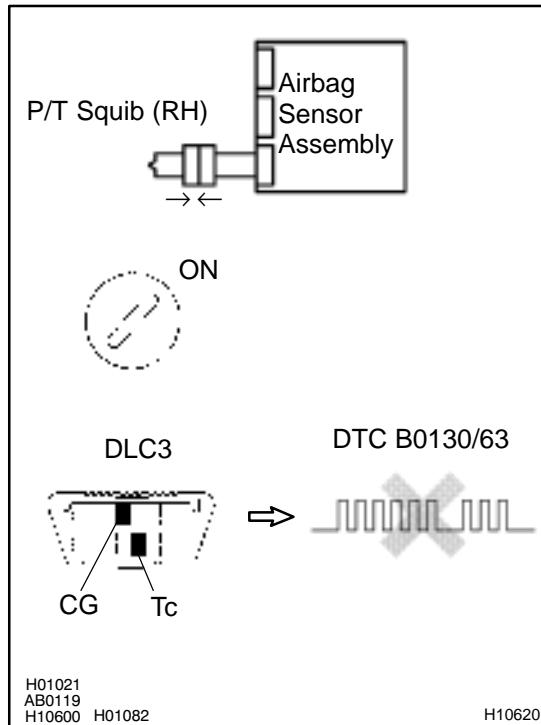

PREPARATION:

- Turn the ignition switch to LOCK.
- Disconnect negative (–) terminal cable from the battery, and wait at least for 90 seconds.
- Connect the seat belt pretensioner (RH) connector.
- Connect negative (–) terminal cable to the battery, and wait at least for 2 seconds.

CHECK:

- Turn the ignition switch to LOCK, and wait at least for 20 seconds.
- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Clear the DTC stored in memory (See page [DI-497](#)).
- Turn the ignition switch to LOCK, and wait at least for 20 seconds.
- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Check the DTC (See page [DI-497](#)).

OK:

DTC B0130/63 is not output.

HINT:

Codes other than code B0130/63 may be output at this time, but they are not relevant to this check.

NG

Replace seat belt pretensioner (RH).

OK

From the results of the above inspection, the malfunctioning part can now be considered normal. To make sure of this, use the simulation method to check.

DTC	B0131/64	Open in P/T Squib (RH) Circuit
------------	-----------------	---------------------------------------

CIRCUIT DESCRIPTION

The P/T squib circuit (RH) consists of the airbag sensor assembly and seat belt pretensioner (RH). It causes the SRS to deploy when the SRS deployment conditions are satisfied. For details of the function of each component, see OPERATION on page RS-2. DTC B0131/64 is recorded when an open is detected in the P/T squib (RH) circuit.


DTC No.	DTC Detecting Condition	Trouble Area
B0131/64	<ul style="list-style-type: none"> • Open circuit in PR+ wire harness or PR- wire harness of squib • P/T squib (RH) malfunction • Airbag sensor assembly malfunction 	<ul style="list-style-type: none"> • Seat belt pretensioner (RH) • Airbag sensor assembly • Wire harness

WIRING DIAGRAM


See page DI-566.

INSPECTION PROCEDURE

1	Prepare for inspection (See step 1 on page DI-629).
----------	--




2	Check P/T squib (RH) circuit.
----------	--------------------------------------

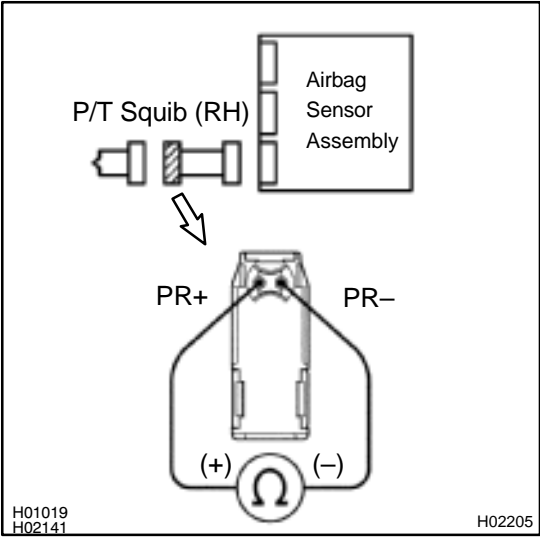


CHECK:
For the connector (on the seat belt pretensioner side) between the seat belt pretensioner (RH) and the airbag sensor assembly, measure the resistance between PR+ and PR-.

OK:
Resistance: Below 1 Ω

NG → **Repair or replace harness or connector between seat belt pretensioner (RH) and airbag sensor assembly.**



3 Check airbag sensor assembly.

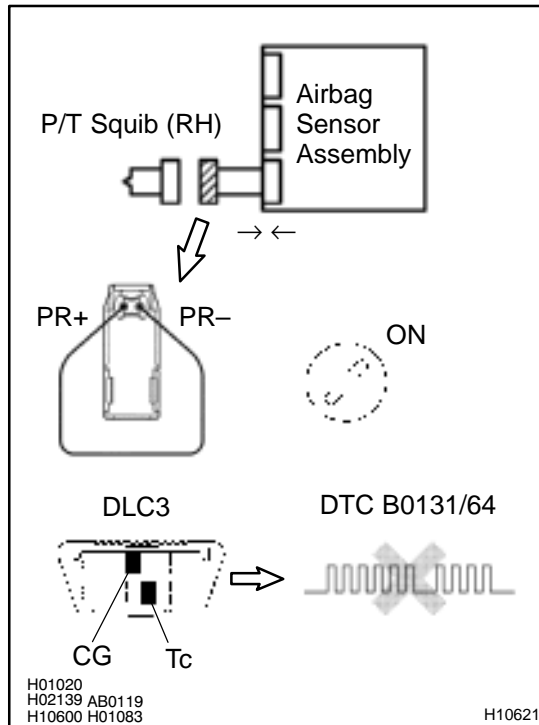

PREPARATION:

- Connect the connector to the airbag sensor assembly.
- Using a service wire, connect PR+ and PR- of the connector (on the seat belt pretensioner side) between the seat belt pretensioner (RH) and the airbag sensor assembly.
- Connect negative (-) terminal cable to the battery, and wait at least for 2 seconds.

CHECK:

- Turn the ignition switch to ON and wait at least for 20 seconds.
- Clear the DTC stored in memory (See page [DI-497](#)).
- Turn the ignition switch to LOCK, and wait at least for 20 seconds.
- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Check the DTC (See page [DI-497](#)).

OK:

DTC B0131/64 is not output.


HINT:

Codes other than code B0131/64 may be output at this time, but they are not relevant to this check.

NG

Replace airbag sensor assembly.

OK

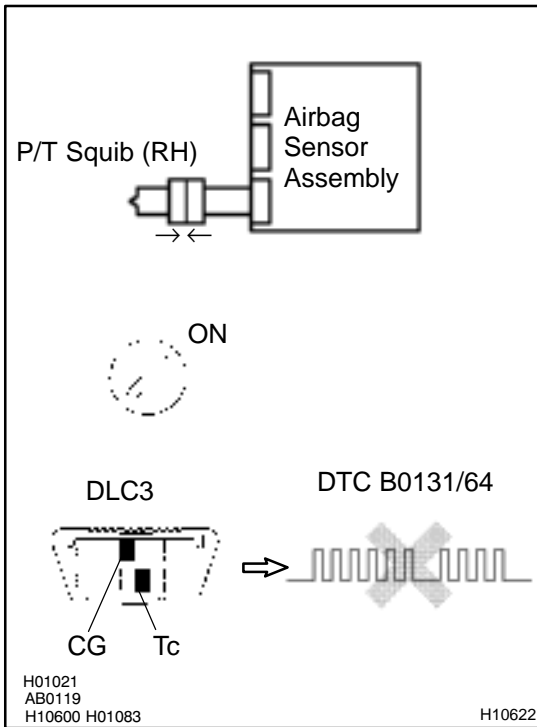4 Check P/T squib (RH).**PREPARATION:**

- Turn the ignition switch to LOCK.
- Disconnect negative (–) terminal cable from the battery, and wait at least for 90 seconds.
- Connect the seat belt pretensioner (RH) connector.
- Connect negative (–) terminal cable to the battery, and wait at least for 2 seconds.

CHECK:

- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Clear the DTC stored in memory (See page [DI-497](#)).
- Turn the ignition switch to LOCK, and wait at least for 20 seconds.
- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Check the DTC (See page [DI-497](#)).

OK:

DTC B0131/64 is not output.

HINT:

Codes other than code B0131/64 may be output at this time, but they are not relevant to this check.

NG

Replace seat belt pretensioner (RH).

OK

From the results of the above inspection, the malfunctioning part can now be considered normal. To make sure of this, use the simulation method to check.

DTC	B0132/61	Short in P/T Squib (RH) Circuit (to Ground)
------------	-----------------	--

CIRCUIT DESCRIPTION

The P/T squib (RH) circuit consists of the airbag sensor assembly and seat belt pretensioner (RH). It causes the SRS to deploy when the SRS deployment conditions are satisfied.

For details of the function of each component, see OPERATION on page RS-2.

DTC B0132/61 is recorded when a ground short is detected in the P/T squib (RH) circuit.


DTC No.	DTC Detecting Condition	Trouble Area
B0132/61	<ul style="list-style-type: none"> • Short circuit in P/T squib (RH) wire harness (to ground) • P/T squib (RH) malfunction • Airbag sensor assembly malfunction 	<ul style="list-style-type: none"> • Seat belt pretensioner (RH) • Airbag sensor assembly • Wire harness

WIRING DIAGRAM


See page DI-566.

INSPECTION PROCEDURE

1	Prepare for inspection (See step 1 on page DI-629).
----------	--



2	Check P/T squib (RH) circuit.
----------	--------------------------------------

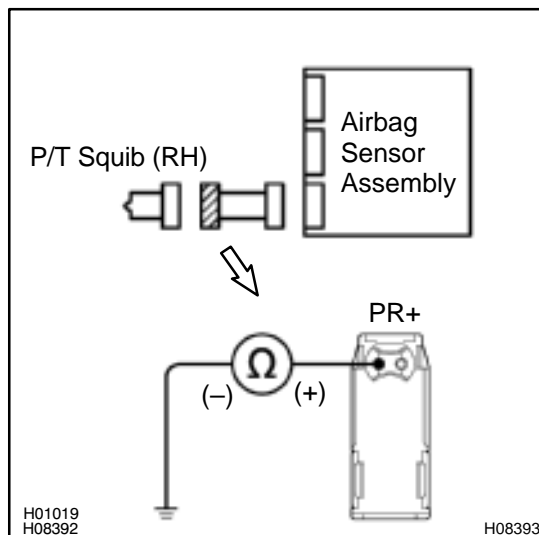

CHECK:

For the connector (on the seat belt pretensioner side) between the seat belt pretensioner (RH) and the airbag sensor assembly, measure the resistance between PR+ and body ground.

OK:


Resistance: 1 MΩ or Higher

NG

Repair or replace harness or connector between seat belt pretensioner (RH) and airbag sensor assembly.

OK

3 Check airbag sensor assembly.

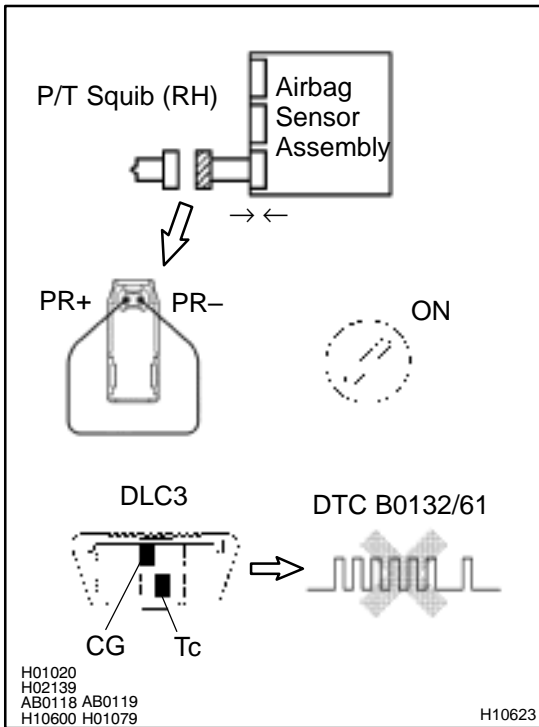

PREPARATION:

- Connect the connector to the airbag sensor assembly.
- Using a service wire, connect PR+ and PR- of the connector (on the seat belt pretensioner side) between the seat belt pretensioner (RH) and the airbag sensor assembly.
- Connect negative (-) terminal cable to the battery, and wait at least for 2 seconds.

CHECK:

- Turn the ignition switch to ON and wait at least for 20 seconds.
- Clear the DTC stored in memory (See step 5 on page [DI-497](#)).
- Turn the ignition switch to LOCK, and wait at least for 20 seconds.
- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Check the DTC (See page [DI-497](#)).

OK:

DTC B0132/61 is not output.

HINT:


Codes other than code B0132/61 may be output at this time, but they are not relevant to this check.

NG

Replace airbag sensor assembly.

OK

4 Check P/T squib (RH).

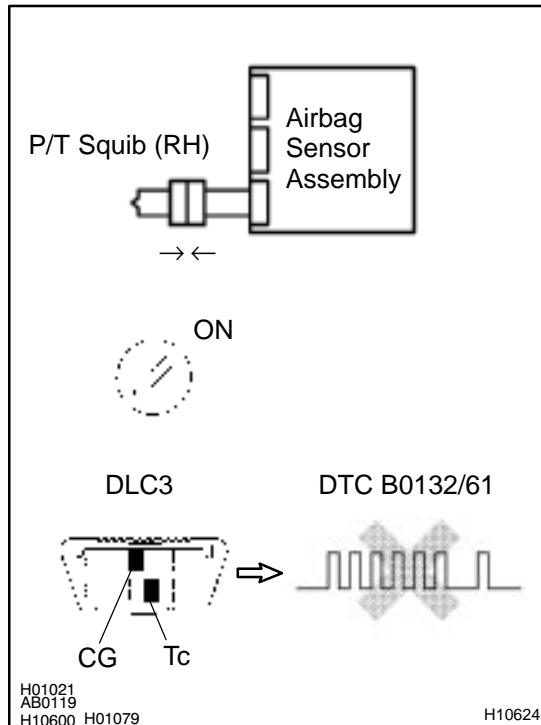

PREPARATION:

- Turn the ignition switch to LOCK.
- Disconnect negative (–) terminal cable from the battery, and wait at least for 90 seconds.
- Connect the seat belt pretensioner (RH) connector.
- Connect negative (–) terminal cable to the battery, and wait at least for 2 seconds.

CHECK:

- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Clear the DTC stored in memory (See step 5 on page [DI-497](#)).
- Turn the ignition switch to LOCK, and wait at least for 20 seconds.
- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Check the DTC (See page [DI-497](#)).

OK:

DTC B0132/61 is not output.

HINT:

Codes other than code B0132/61 may be output at this time, but they are not relevant to this check.

NG

Replace seat belt pretensioner (RH).

OK

From the results of the above inspection, the malfunctioning part can now be considered normal. To make sure of this, use the simulation method to check. If the malfunctioning part can not be detected by the simulation method, replace all SRS components including the wire harness.

DTC	B0133/62	Short in P/T Squib (RH) Circuit (to B+)
------------	-----------------	--

CIRCUIT DESCRIPTION

The P/T squib (RH) circuit consists of the airbag sensor assembly and seat belt pretensioner (RH). It causes the SRS to deploy when the SRS deployment conditions are satisfied.

For details of the function of each component, see OPERATION on page RS-2.

DTC B0133/62 is recorded when a B+ short is detected in the P/T squib (RH) circuit.


DTC No.	DTC Detecting Condition	Trouble Area
B0133/62	<ul style="list-style-type: none"> • Short circuit in seat belt pretensioner (RH) wire harness (to B+) • P/T squib (RH) malfunction • Airbag sensor assembly malfunction 	<ul style="list-style-type: none"> • Seat belt pretensioner (RH) • Airbag sensor assembly • Wire harness

WIRING DIAGRAM


See page DI-566.

INSPECTION PROCEDURE

1	Prepare for inspection (See step 1 on page DI-629).
----------	--



2	Check P/T squib (RH) circuit.
----------	--------------------------------------

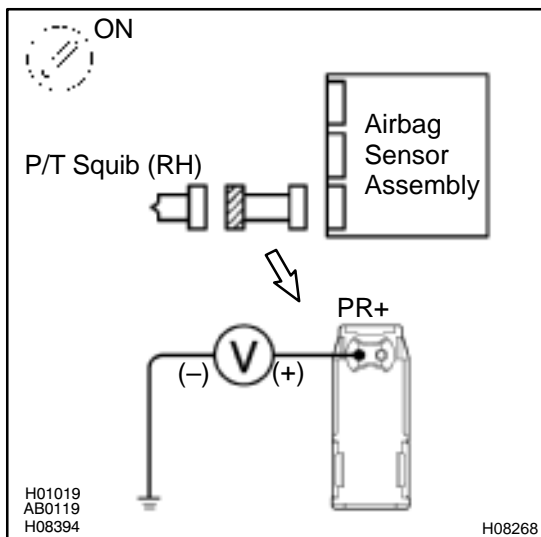

CHECK:

- Turn the ignition switch to ON.
- For the connector (on the seat belt pretensioner side) between the seat belt pretensioner (RH) and the airbag sensor assembly, measure the voltage between PR+ and body ground.

OK:


Voltage: 0 V

NG

Repair or replace harness or connector between seat belt pretensioner (RH) and airbag sensor assembly.

OK

3 Check airbag sensor assembly.

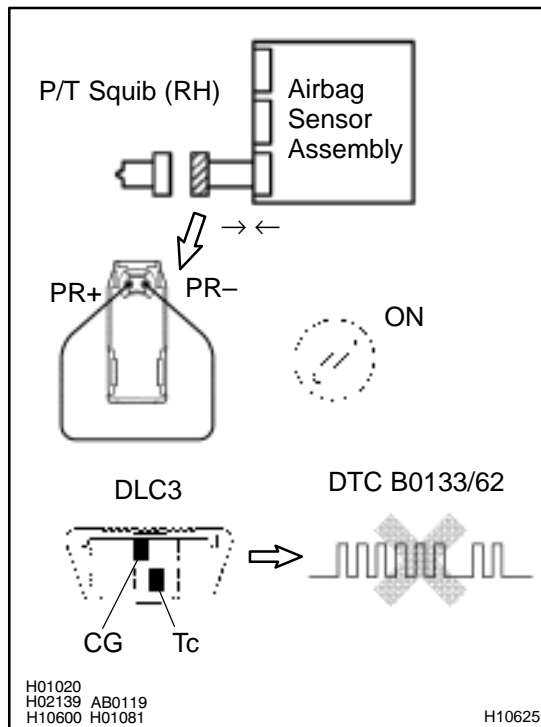

PREPARATION:

- Connect the connector to the airbag sensor assembly.
- Using a service wire, connect PR+ and PR- of the connector (on the seat belt pretensioner side) between the seat belt pretensioner (RH) and the airbag sensor assembly.
- Connect negative (-) terminal cable to the battery, and wait at least for 2 seconds.

CHECK:

- Turn the ignition switch to ON and wait at least for 20 seconds.
- Clear the DTC stored in memory (See step 5 on page [DI-497](#)).
- Turn the ignition switch to LOCK, and wait at least for 20 seconds.
- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Check the DTC (See page [DI-497](#)).

OK:

DTC B0133/62 is not output.


HINT:

Codes other than code B0133/62 may be output at this time, but they are not relevant to this check.

NG

Replace airbag sensor assembly.

OK

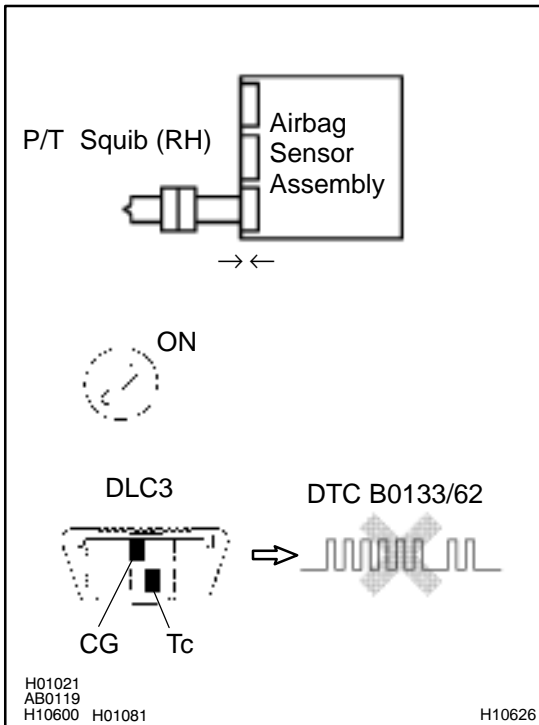4 Check P/T squib (RH).**PREPARATION:**

- Turn ignition switch to LOCK.
- Disconnect negative (–) terminal cable from the battery, and wait at least for 90 seconds.
- Connect the seat belt pretensioner (RH) connector.
- Connect negative (–) terminal cable to the battery, and wait at least for 2 seconds.

CHECK:

- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Clear the DTC stored in memory (See step 5 on page [DI-497](#)).
- Turn the ignition switch to LOCK, and wait at least for 20 seconds.
- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Check the DTC (See page [DI-497](#)).

OK:

DTC B0133/62 is not output.

HINT:

Codes other than code B0133/62 may be output at this time, but they are not relevant to this check.

NG

Replace seat belt pretensioner (RH).

OK

From the results of the above inspection, the malfunctioning part can now be considered normal. To make sure of this, use the simulation method to check. If the malfunctioning part can not be detected by the simulation method, replace all SRS components including the wire harness.


DTC	B0135/73	Short in P/T Squib (LH) Circuit
-----	----------	---------------------------------

CIRCUIT DESCRIPTION

The P/T squib (LH) circuit consists of the airbag sensor assembly and seat belt pretensioner (LH). It causes the SRS to deploy when the SRS deployment conditions are satisfied. For details of the function of each component, see OPERATION on page RS-2. DTC B0135/73 is recorded when a short is detected in the P/T squib (LH) circuit.

DTC No.	DTC Detecting Condition	Trouble Area
B0135/73	<ul style="list-style-type: none">• Short circuit between PL+ wire harness and PL- wire harness of squib• P/T squib (LH) malfunction• Airbag sensor assembly malfunction	<ul style="list-style-type: none">• Seat belt pretensioner (LH)• Airbag sensor assembly• Wire harness


WIRING DIAGRAM

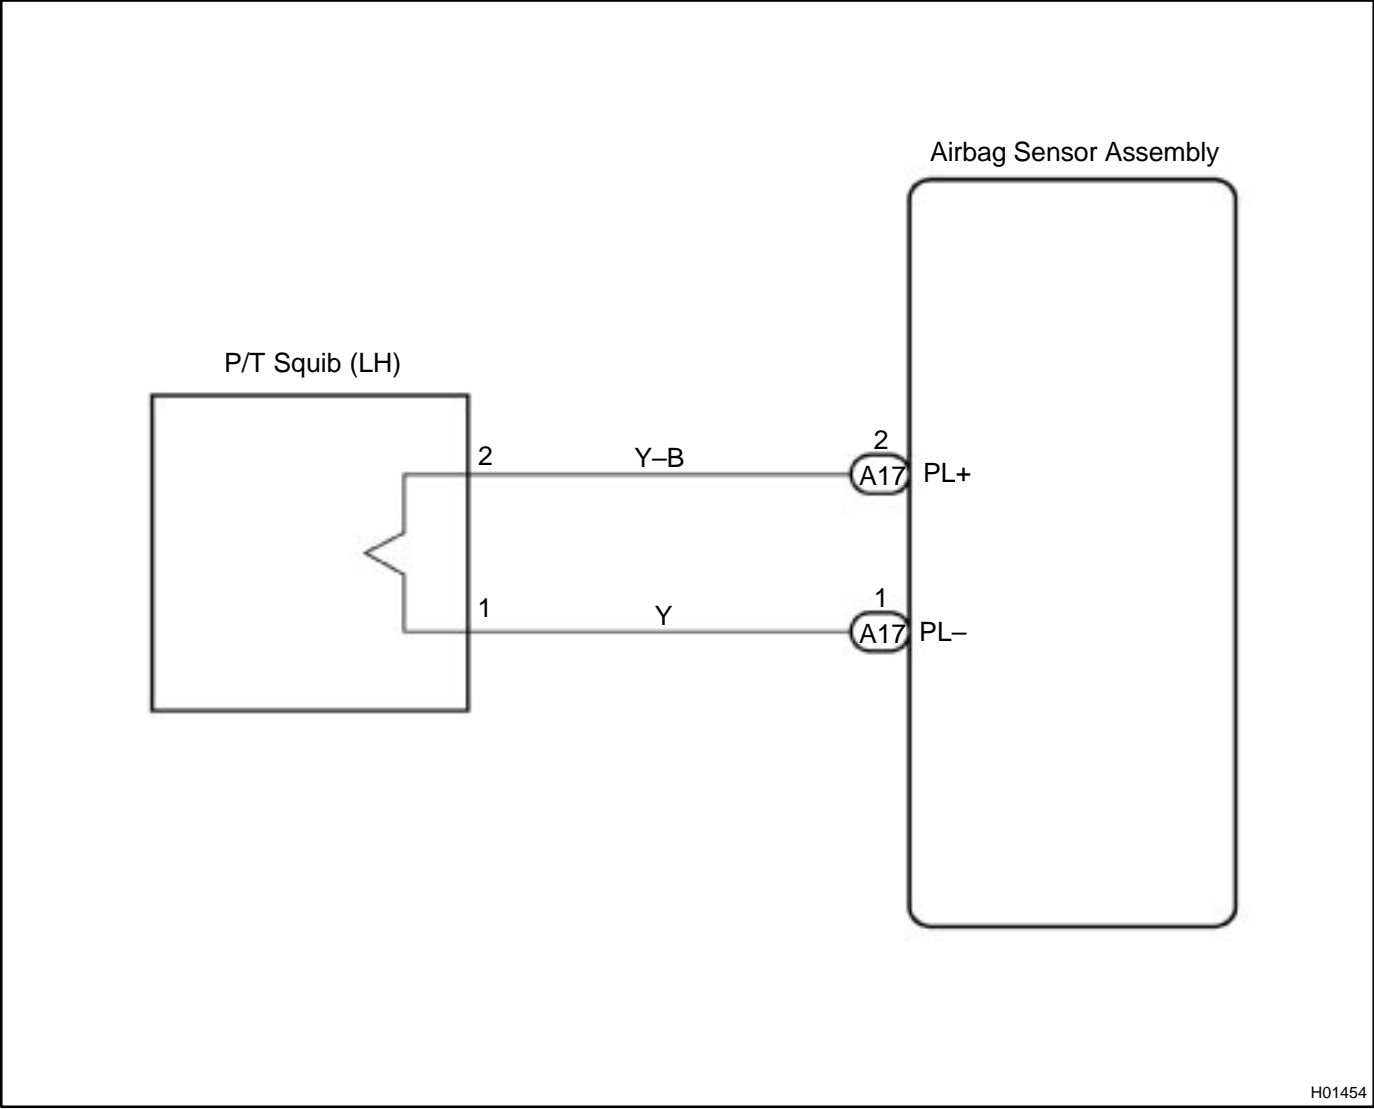


cardiagn.com

INSPECTION PROCEDURE

- 1 Prepare for inspection (See step 1 on page [DI-629](#)).

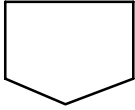

- 2 Check P/T squib (LH) circuit.

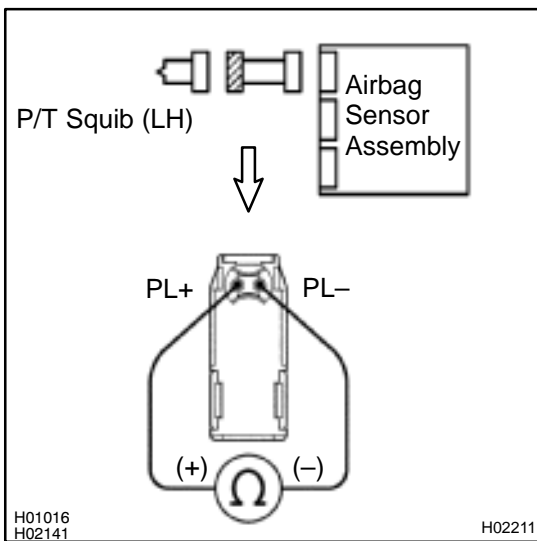**PREPARATION:**

Release the airbag activation prevention mechanism of the connector (on the airbag sensor assembly side) between the airbag sensor assembly and the seat belt pretensioner (LH) (See page [DI-497](#)).

CHECK:

For the connector (on the seat belt pretensioner side) between the seat belt pretensioner (LH) and the airbag sensor assembly, measure the resistance between PL+ and PL-.

OK:


Resistance: 1 MΩ or Higher

NG

Repair or replace harness or connector between seat belt pretensioner (LH) and airbag sensor assembly.

OK

3 Check airbag sensor assembly.

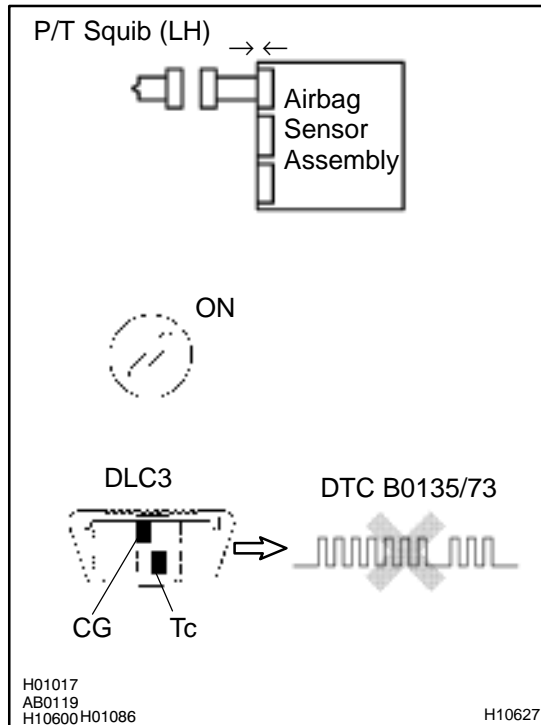

PREPARATION:

- Connect the connector to the airbag sensor assembly.
- Connect negative (–) terminal cable to the battery, and wait at least for 2 seconds.

CHECK:

- Turn the ignition switch to ON and wait at least for 20 seconds.
- Clear the DTC stored in memory (See page [DI-497](#)).
- Turn the ignition switch to LOCK, and wait at least for 20 seconds.
- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Check the DTC (See page [DI-497](#)).

OK:

DTC B0135/73 is not output.

HINT:


Codes other than code B0135/73 may be output at this time, but they are not relevant to this check.

NG

Replace airbag sensor assembly.

OK

4 Check P/T squib (LH).

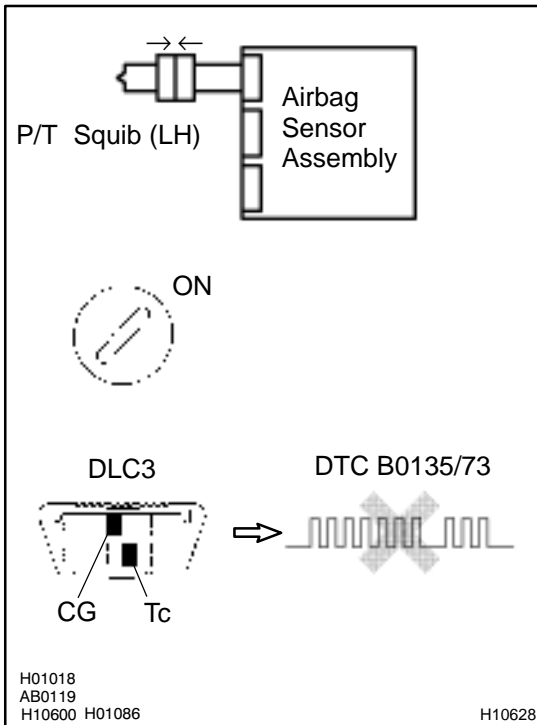

PREPARATION:

- Turn the ignition switch to LOCK.
- Disconnect negative (–) terminal cable from the battery, and wait at least for 90 seconds.
- Connect the seat belt pretensioner (LH) connector.
- Connect negative (–) terminal cable to the battery, and wait at least for 2 seconds.

CHECK:

- Turn the ignition switch to LOCK, and wait at least for 20 seconds.
- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Clear the DTC stored in memory (See page [DI-497](#)).
- Turn the ignition switch to LOCK, and wait at least for 20 seconds.
- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Check the DTC (See page [DI-497](#)).

OK:

DTC B0135/73 is not output.

HINT:

Codes other than code B0135/73 may be output at this time, but they are not relevant to this check.

NG

Replace seat belt pretensioner (LH).

OK

From the results of the above inspection, the malfunctioning part can now be considered normal. To make sure of this, use the simulation method to check.

DTC	B0136/74	Open in P/T Squib (LH) Circuit
------------	-----------------	---------------------------------------

CIRCUIT DESCRIPTION

The P/T squib circuit (LH) consists of the airbag sensor assembly and seat belt pretensioner (LH). It causes the SRS to deploy when the SRS deployment conditions are satisfied. For details of the function of each component, see OPERATION on page RS-2. DTC B0136/74 is recorded when an open is detected in the P/T squib (LH) circuit.


DTC No.	DTC Detecting Condition	Trouble Area
B0136/74	<ul style="list-style-type: none"> • Open circuit in PL+ wire harness or PL- wire harness of squib • P/T squib (LH) malfunction • Airbag sensor assembly malfunction 	<ul style="list-style-type: none"> • Seat belt pretensioner (LH) • Airbag sensor assembly • Wire harness

WIRING DIAGRAM


See page DI-579.

INSPECTION PROCEDURE

1	Prepare for inspection (See step 1 on page DI-629).
----------	--



2	Check P/T squib (LH) circuit.
----------	--------------------------------------

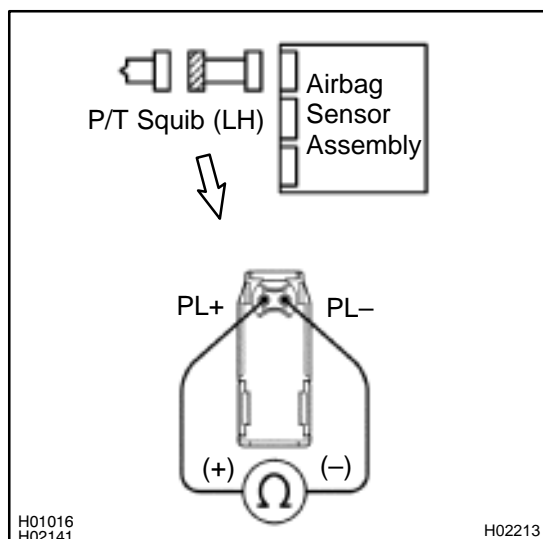

CHECK:

For the connector (on the seat belt pretensioner side) between the seat belt pretensioner (LH) and the airbag sensor assembly, measure the resistance between PL+ and PL-.

OK:


Resistance: Below 1 Ω

NG

Repair or replace harness or connector between seat belt pretensioner (LH) and airbag sensor assembly.

OK

3 Check airbag sensor assembly.

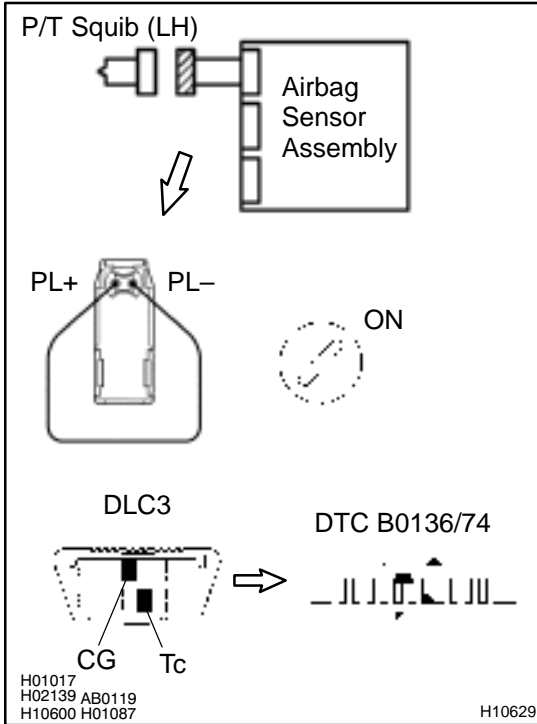

PREPARATION:

- Connect the connector to the airbag sensor assembly.
- Using a service wire, connect PL+ and PL- of the connector (on the seat belt pretensioner side) between the seat belt pretensioner (LH) and the airbag sensor assembly.
- Connect negative (-) terminal cable to the battery, and wait at least for 2 seconds.

CHECK:

- Turn the ignition switch to ON and wait at least for 20 seconds.
- Clear the DTC stored in memory (See page [DI-497](#)).
- Turn the ignition switch to LOCK, and wait at least for 20 seconds.
- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Check the DTC (See page [DI-497](#)).

OK:

DTC B0136/74 is not output.

HINT:


Codes other than code B0136/74 may be output at this time, but they are not relevant to this check.

NG

Replace airbag sensor assembly.

OK

4 Check P/T squib (LH).

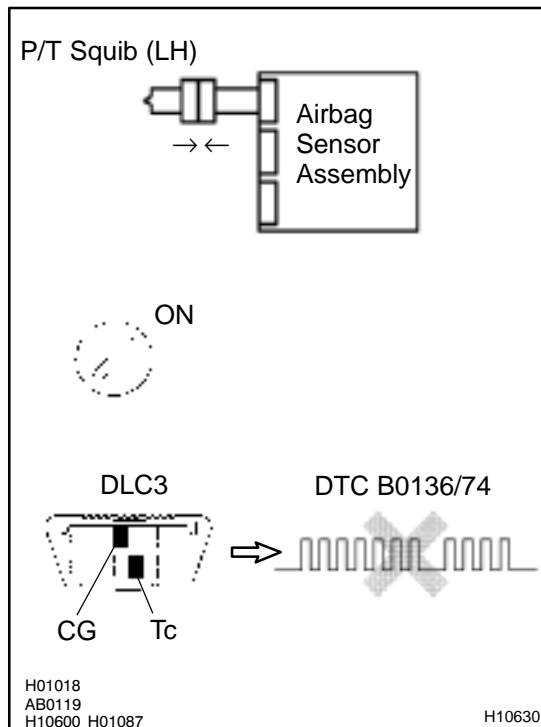

PREPARATION:

- Turn the ignition switch to LOCK.
- Disconnect negative (–) terminal cable from the battery, and wait at least for 90 seconds.
- Connect the seat belt pretensioner (LH) connector.
- Connect negative (–) terminal cable to the battery, and wait at least for 2 seconds.

CHECK:

- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Clear the DTC stored in memory (See page [DI-497](#)).
- Turn the ignition switch to LOCK, and wait at least for 20 seconds.
- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Check the DTC (See page [DI-497](#)).

OK:

DTC B0136/74 is not output.

HINT:

Codes other than code B0136/74 may be output at this time, but they are not relevant to this check.

NG

Replace seat belt pretensioner (LH).

OK

From the results of the above inspection, the malfunctioning part can now be considered normal. To make sure of this, use the simulation method to check.

DTC	B0137/71	Short in P/T Squib (LH) Circuit (to Ground)
------------	-----------------	--

CIRCUIT DESCRIPTION

The P/T squib (LH) circuit consists of the airbag sensor assembly and seat belt pretensioner (LH). It causes the SRS to deploy when the SRS deployment conditions are satisfied.

For details of the function of each component, see OPERATION on page RS-2.

DTC B0137/71 is recorded when a ground short is detected in the P/T squib (LH) circuit.


DTC No.	DTC Detecting Condition	Trouble Area
B0137/71	<ul style="list-style-type: none"> • Short circuit in P/T squib (LH) wire harness (to ground) • P/T squib (LH) malfunction • Airbag sensor assembly malfunction 	<ul style="list-style-type: none"> • Seat belt pretensioner (LH) • Airbag sensor assembly • Wire harness

WIRING DIAGRAM


See page DI-579.

INSPECTION PROCEDURE

1	Prepare for inspection (See step 1 on page DI-629).
----------	--



2	Check P/T squib (LH) circuit.
----------	--------------------------------------

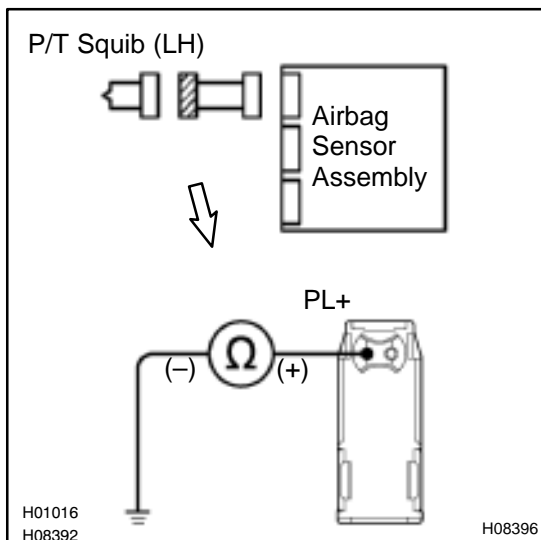

CHECK:

For the connector (on the seat belt pretensioner side) between the seat belt pretensioner (LH) and the airbag sensor assembly, measure the resistance between PL+ and body ground.

OK:


Resistance: 1 MΩ or Higher

NG

Repair or replace harness or connector between seat belt pretensioner (LH) and airbag sensor assembly.

OK

3 Check airbag sensor assembly.

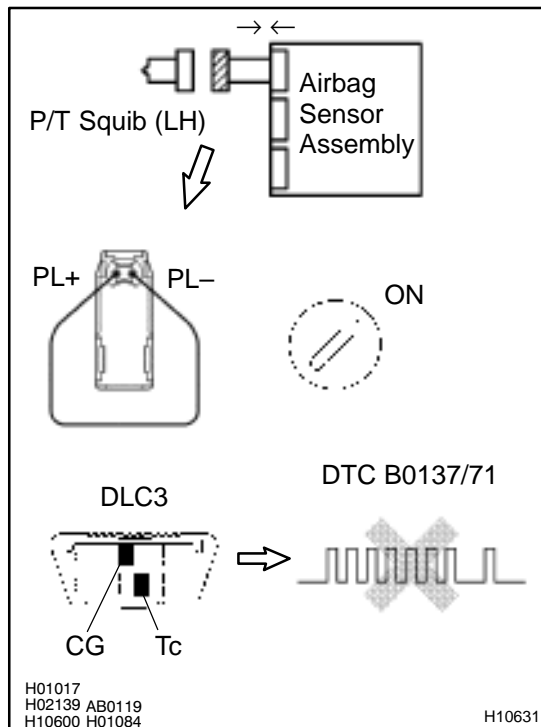

PREPARATION:

- Connect the connector to the airbag sensor assembly.
- Using a service wire, connect PL+ and PL- of the connector (on the seat belt pretensioner side) between the seat belt pretensioner (LH) and the airbag sensor assembly.
- Connect negative (-) terminal cable to the battery, and wait at least for 2 seconds.

CHECK:

- Turn the ignition switch to ON and wait at least for 20 seconds.
- Clear the DTC stored in memory (See step 5 on page [DI-497](#)).
- Turn the ignition switch to LOCK, and wait at least for 20 seconds.
- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Check the DTC (See page [DI-497](#)).

OK:

DTC B0137/71 is not output.

HINT:


Codes other than code B0137/71 may be output at this time, but they are not relevant to this check.

NG

Replace airbag sensor assembly.

OK

4 Check P/T squib (LH).

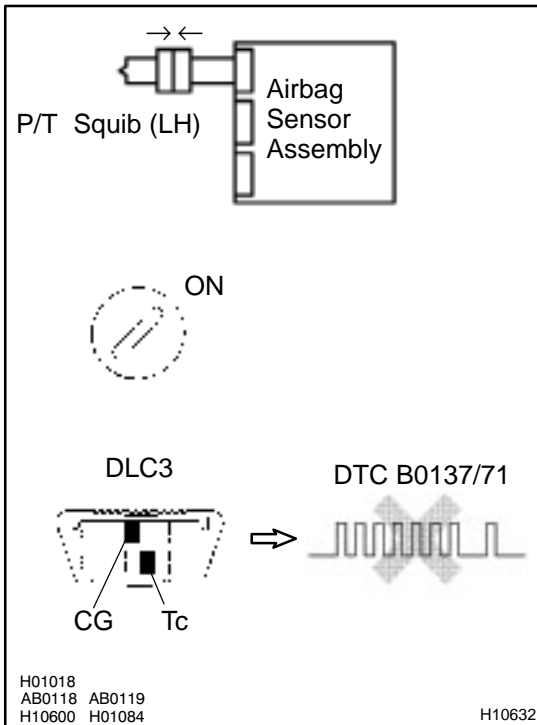

PREPARATION:

- Turn the ignition switch to LOCK.
- Disconnect negative (–) terminal cable from the battery, and wait at least for 90 seconds.
- Connect the seat belt pretensioner (LH) connector.
- Connect negative (–) terminal cable to the battery, and wait at least for 2 seconds.

CHECK:

- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Clear the DTC stored in memory (See step 5 on page [DI-497](#)).
- Turn the ignition switch to LOCK, and wait at least for 20 seconds.
- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Check the DTC (See page [DI-497](#)).

OK:

DTC B0137/71 is not output.

HINT:

Codes other than code B0137/71 may be output at this time, but they are not relevant to this check.

NG

Replace seat belt pretensioner (LH).

OK

From the results of the above inspection, the malfunctioning part can now be considered normal. To make sure of this, use the simulation method to check. If the malfunctioning part can not be detected by the simulation method, replace all SRS components including the wire harness.

DTC	B0138/72	Short in P/T Squib (LH) Circuit (to B+)
------------	-----------------	--

CIRCUIT DESCRIPTION

The P/T squib (LH) circuit consists of the airbag sensor assembly and seat belt pretensioner (LH).

It causes the SRS to deploy when the SRS deployment conditions are satisfied.

For details of the function of each component, see OPERATION on page RS-2.

DTC B0138/72 is recorded when a B+ short is detected in the P/T squib (LH) circuit.


DTC No.	DTC Detecting Condition	Trouble Area
B0138/72	<ul style="list-style-type: none"> • Short circuit in seat belt pretensioner (LH) wire harness (to B+) • P/T squib (LH) malfunction • Airbag sensor assembly malfunction 	<ul style="list-style-type: none"> • Seat belt pretensioner (LH) • Airbag sensor assembly • Wire harness

WIRING DIAGRAM


See page DI-579.

INSPECTION PROCEDURE

1	Prepare for inspection (See step 1 on page DI-629).
----------	--



2	Check P/T squib (LH) circuit.
----------	--------------------------------------

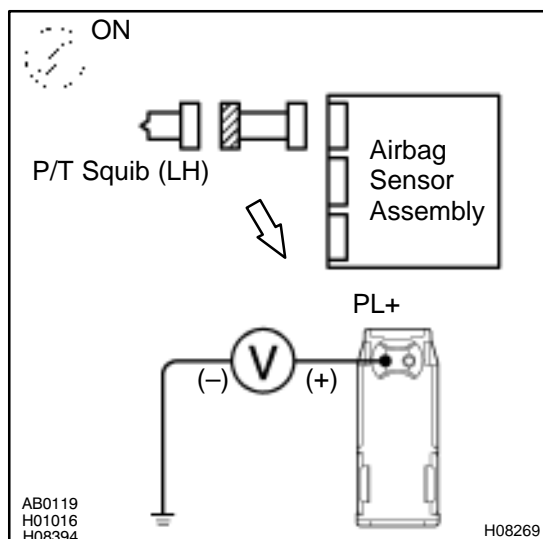

CHECK:

- Turn the ignition switch to ON.
- For the connector (on the seat belt pretensioner side) between the seat belt pretensioner (LH) and the airbag sensor assembly, measure the voltage between PL+ and body ground.

OK:


Voltage: 0 V

NG

Repair or replace harness or connector between seat belt pretensioner (LH) and airbag sensor assembly.

OK

3 Check airbag sensor assembly.

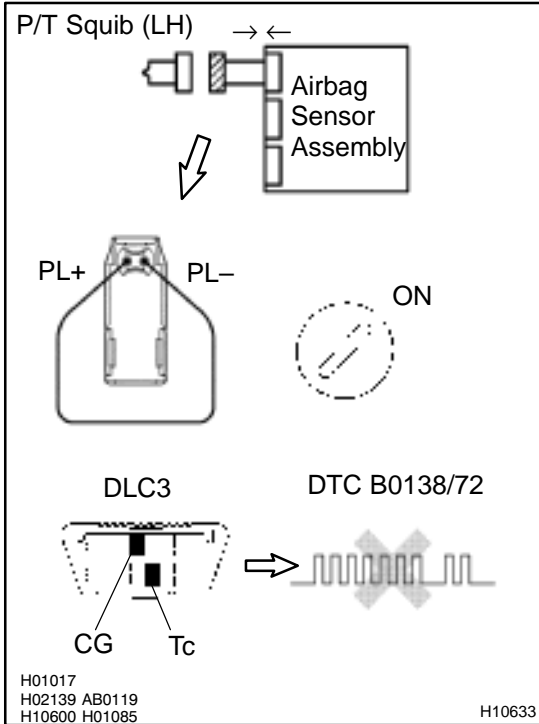

PREPARATION:

- Connect the connector to the airbag sensor assembly.
- Using a service wire, connect PL+ and PL- of the connector (on the seat belt pretensioner side) between the seat belt pretensioner (LH) and the airbag sensor assembly.
- Connect negative (-) terminal cable to the battery, and wait at least for 2 seconds.

CHECK:

- Turn the ignition switch to ON and wait at least for 20 seconds.
- Clear the DTC stored in memory (See step 5 on page [DI-497](#)).
- Turn the ignition switch to LOCK, and wait at least for 20 seconds.
- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Check the DTC (See page [DI-497](#)).

OK:

DTC B0138/72 is not output.

HINT:


Codes other than code B0138/72 may be output at this time, but they are not relevant to this check.

NG

Replace airbag sensor assembly.

OK

4 Check P/T squib (LH).

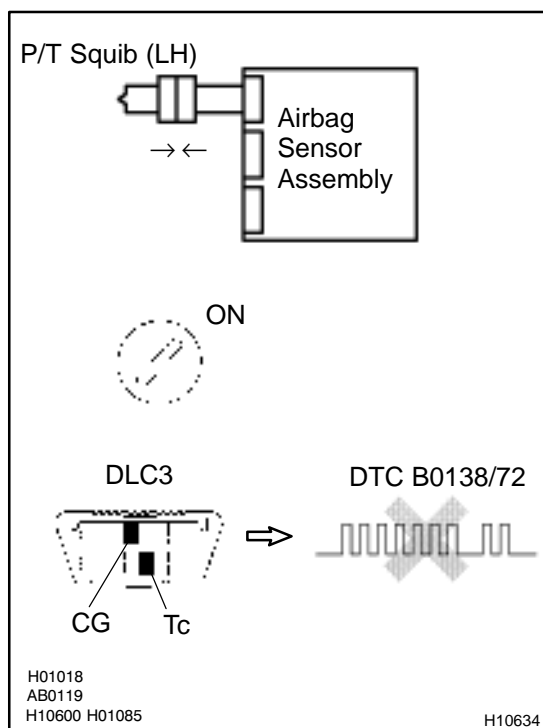

PREPARATION:

- Turn the ignition switch to LOCK.
- Disconnect negative (–) terminal cable from the battery, and wait at least for 90 seconds.
- Connect the seat belt pretensioner (LH) connector.
- Connect negative (–) terminal cable to the battery, and wait at least for 2 seconds.

CHECK:

- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Clear the DTC stored in memory (See step 5 on page [DI-497](#)).
- Turn the ignition switch to LOCK, and wait at least for 20 seconds.
- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Check the DTC (See page [DI-497](#)).

OK:

DTC B0138/72 is not output.

HINT:

Codes other than code B0138/72 may be output at this time, but they are not relevant to this check.

NG

Replace seat belt pretensioner (LH).

OK

From the results of the above inspection, the malfunctioning part can now be considered normal. To make sure of this, use the simulation method to check. If the malfunctioning part can not be detected by the simulation method, replace all SRS components including the wire harness.

DTC	B1100/31	Airbag Sensor Assembly Malfunction
------------	-----------------	---

CIRCUIT DESCRIPTION

The airbag sensor assembly consists of a airbag sensor, safing sensor, drive circuit, diagnosis circuit and ignition control, etc.

It receives signals from the airbag sensor, judges whether or not the SRS must be activated, and detects diagnosis system malfunction.

DTC B1100/31 is recorded when occurrence of a malfunction in the airbag sensor assembly is detected.


DTC No.	DTC Detecting Condition	Trouble Area
B1100/31	• Airbag sensor assembly malfunction	• Airbag sensor assembly

INSPECTION PROCEDURE


HINT:

When a malfunction code other than code B1100/31 is displayed at the same time, first repair the malfunction indicated by the malfunction code other than code B1100/31.

1	Prepare for inspection (See step 1 on page DI-629).
----------	--



2	Check voltage at IG1 and IG2 of airbag sensor assembly.
----------	--

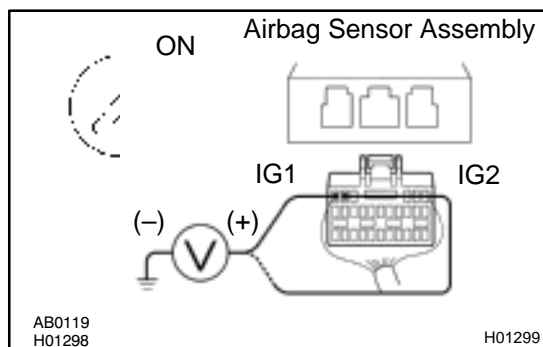

CHECK:


- Turn the ignition switch to ON.
- Measure the voltage between body ground and each of terminals IG1 and IG2 of the airbag sensor assembly connector.

OK:

Voltage: 10 – 14 V


NG

Check that an abnormality occurs on the battery and charging system.



OK

3 Is DTC B1100/31 output again?

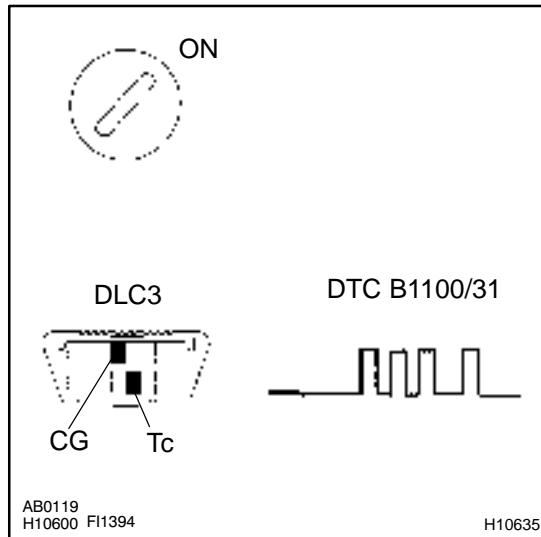**PREPARATION:**

Clear the DTC (See step 5 on page [DI-497](#)).

CHECK:

- Turn the ignition switch to LOCK, and wait at least for 20 seconds.
- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Repeat operation in step (a) and (b) at least 5 times.
- Check the DTC (See page [DI-497](#)).

HINT:

Codes other than code B1100/31 may be output at this time, but they are not relevant to this check.

NO

Using simulation method, reproduce malfunction symptoms (See page [IN-30](#)).

YES

Replace airbag sensor assembly.

DTC	B1135/24	Harf Connection in Airbag Sensor Assembly Connector
------------	-----------------	--

CIRCUIT DESCRIPTION

The airbag sensor assembly detects partial connection of connector.

For details of the function of each component, see OPERATION on page [RS-2](#).

DTC B1135/24 is recorded when the airbag sensor assembly detects an open in the electrical connection check mechanism of the airbag sensor connector or in the airbag sensor circuit.

DTC No.	DTC Detecting Condition	Trouble Area
B1135/24	<ul style="list-style-type: none"> • Malfunction of electrical connection check mechanism of airbag sensor assembly connector • Airbag sensor assembly malfunction 	<ul style="list-style-type: none"> • Electrical connection check mechanism • Airbag sensor assembly

INSPECTION PROCEDURE

1	Are connector of center airbag sensor assembly properly connected?
----------	---


NG

Connect connectors.

OK

2	Prepare for inspection (See step 1 on page DI-629).
----------	--

3 Check airbag sensor assembly.

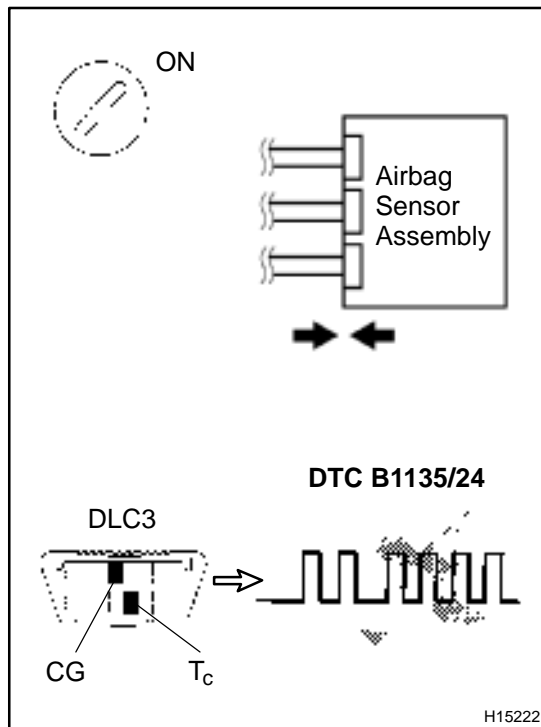

PREPARATION:

- Connect the connectors to the airbag sensor assembly.
- Connect negative (–) terminal cable to the battery, and wait at least for 2 seconds.

CHECK:

- Turn the ignition switch to LOCK, and wait at least for 20 seconds.
- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Clear the DTC stored in memory (See page [DI-497](#)).
- Turn the ignition switch to LOCK, and wait at least for 20 seconds.
- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Check the DTC (See page [DI-497](#)).

OK:

DTC B1135/24 is not output.

HINT:

Codes other than code B1135/24 may be output at this time, but they are not relevant to this check.


NG

Go to the next step.

OK

From the results of the inspection, the malfunctioning part can now be considered normal. To make sure of this, use the simulation method to check.

4 Check disconnection detection pin in the center airbag sensor assembly connector.

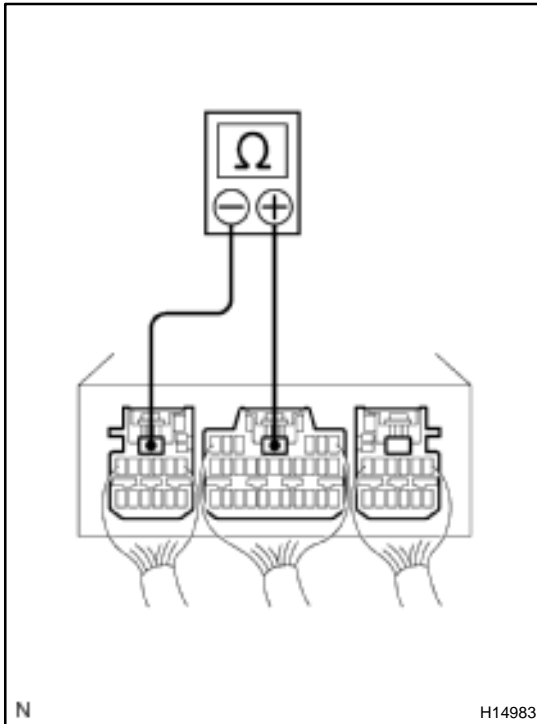

CHECK:

With 3 connectors connected to the sensor assembly, place tester leads onto any 2 of 3 disconnection detection pins and check for continuity.

OK:

Continuity


NG

Go to the next step.

OK

From the results of the inspection, the malfunctioning part can now be considered normal. To make sure of this, use the simulation method to check.

5 Perform a visual check of the disconnection detection pin.

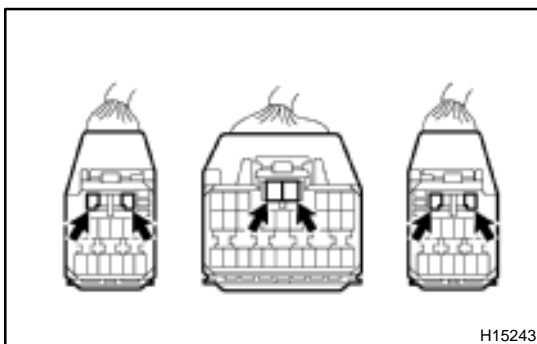

OK:

No deformation is identified.

HINT:

Compare it with the other 2 connector pins.

NG

Repair or replace airbag sensor assembly connector.

OK

Replace airbag sensor assembly.

DTC	B1140/32	Side Airbag Sensor Assembly (RH) Malfunction
-----	----------	--

CIRCUIT DESCRIPTION


The side airbag sensor assembly (RH) consists of the safing sensor, diagnosis circuit and lateral deceleration sensor, etc.

It receives signals from the lateral deceleration sensor, judges whether or not the SRS must be activated, and detects diagnosis system malfunction.

DTC B1140/32 is recorded when occurrence of a malfunction in the side airbag sensor assembly (RH) is detected.


DTC No.	DTC Detecting Condition	Trouble Area
B1140/32	• Side airbag sensor assembly (RH) malfunction	• Side airbag sensor assembly (RH) • Wire harness • Airbag sensor assembly

WIRING DIAGRAM

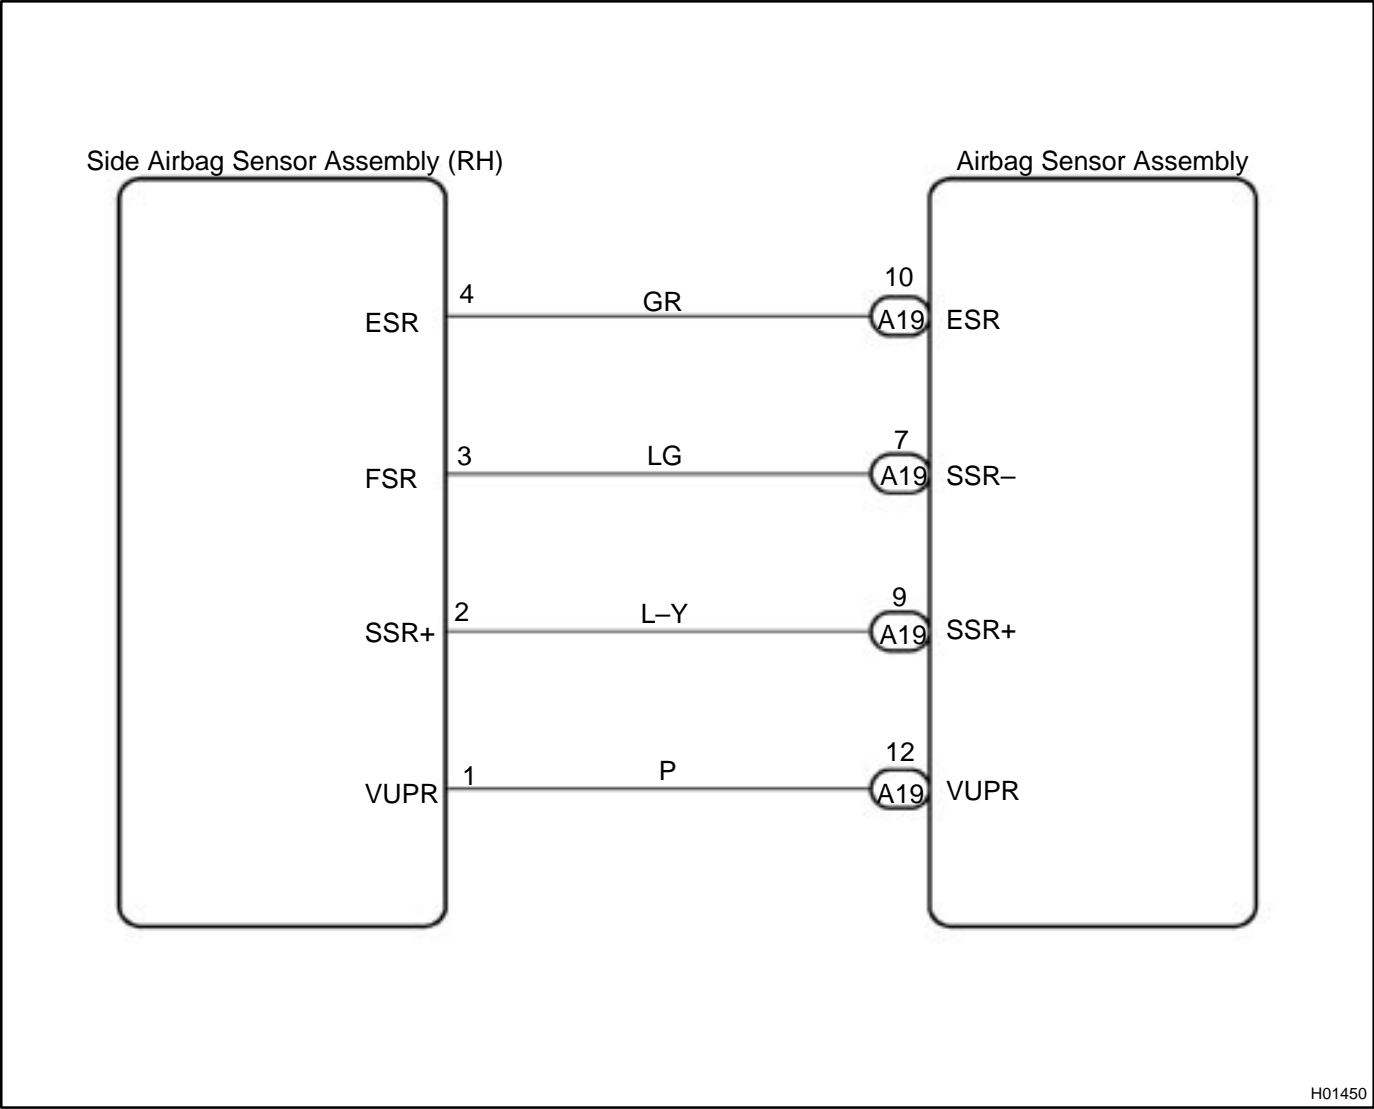

INSPECTION PROCEDURE

1	Is DTC B1140/32 out put?
---	--------------------------

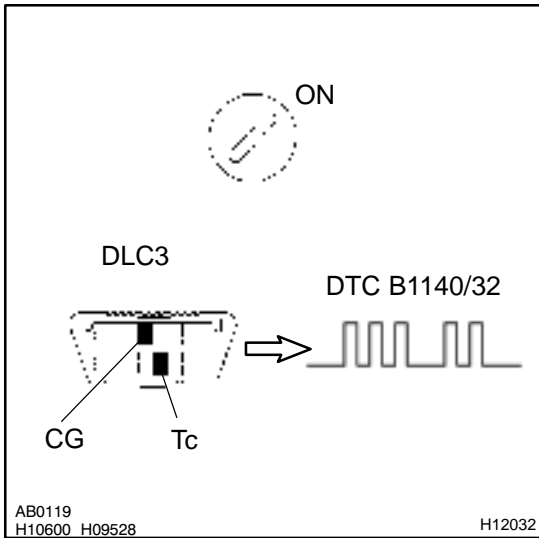**CHECK:**

- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Clear the DTC stored in memory (See page [DI-497](#)).
- Turn the ignition switch to LOCK, and wait at least for 20 seconds.
- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Check the DTC (See page [DI-497](#)).

HINT:

Codes other than code B1140/32 may be output at this time, but they are not relevant to this check.


YES	The malfunctioning part can now be considered normal. To make sure of this, use the simulation method to check.

NO

2	Is connector of side airbag sensor assembly (RH) properly connected?
---	--

3	Prepare for inspection (See step 1 on DI-629).
---	---

4 Check wire harness.

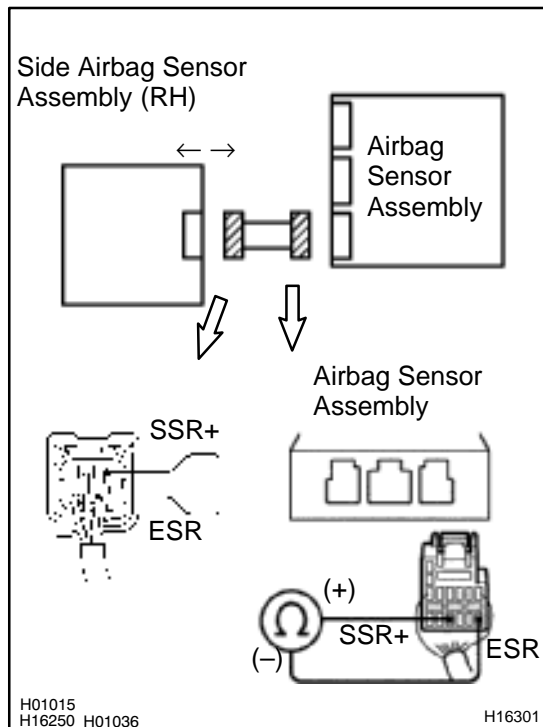

PREPARATION:

- Disconnect the side airbag sensor assembly (RH) connector.
- Using a service wire, connect SSR+ and ESR of the connector (on the side airbag sensor assembly side) between the side airbag sensor assembly (RH) and airbag sensor assembly.

CHECK:

For the connector (on the airbag sensor assembly side) between the side airbag sensor assembly (RH) and the airbag sensor assembly, measure the resistance between SSR+ and ESR.

OK:

Resistance: Below 1 Ω


NG

Repair or replace harness or connector between side airbag sensor assembly (RH) and airbag sensor assembly.

OK

5 Check wire harness.

Side Airbag Sensor Assembly (RH)

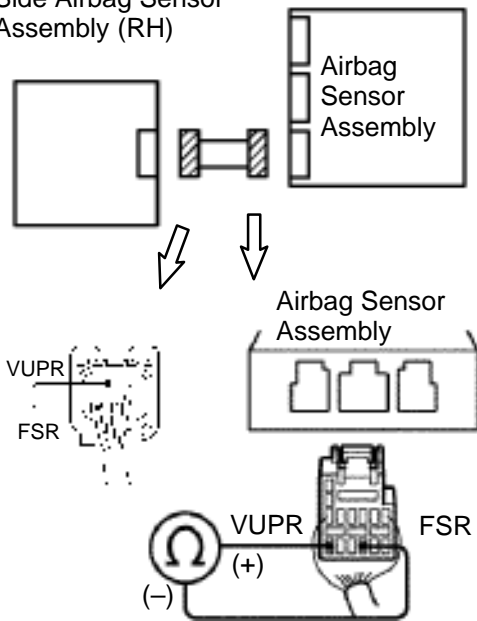

H01015
H16249
H01037

H16302

PREPARATION:

Using a service wire, connect VUPR and FSR of the connector (on the side airbag sensor assembly side) between the side airbag sensor assembly (RH) and airbag sensor assembly.

CHECK:

For the connector (on the airbag sensor assembly side) between the side airbag sensor assembly (RH) and the airbag sensor assembly, measure the resistance between VUPR and FSR.

OK:


Resistance: Below 1 Ω

NG

Repair or replace harness or connector between side airbag sensor assembly (RH) and airbag sensor assembly.

OK

6 Check wire harness (to ground).

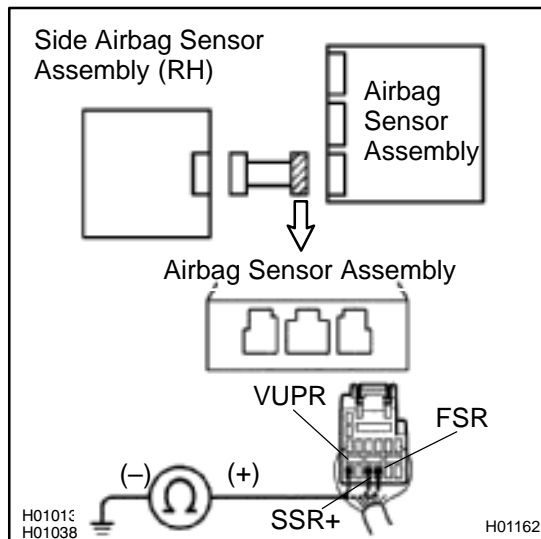

CHECK:

For the connector (on the airbag sensor assembly side) between the side airbag sensor assembly (RH) and the airbag sensor assembly, measure the resistance between body ground and each of SSR+, VUPR and FSR.

OK:


Resistance: Below 1 Ω

NG

Repair or replace harness or connector between side airbag sensor assembly (RH) and airbag sensor assembly.

OK

7 Check wire harness (to B+).

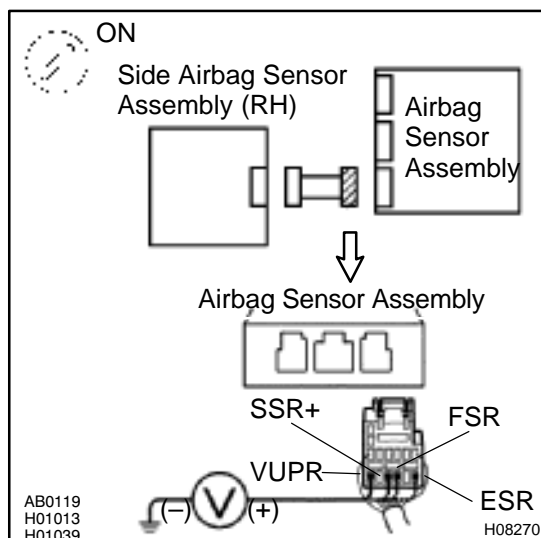

CHECK:

- Turn ignition switch to ON.
- For the connector (on the airbag sensor assembly side) between the side airbag sensor assembly (RH) and the airbag sensor assembly, measure the voltage between the body ground and each of SSR+, VUPR, ESR and FSR.

OK:


Voltage: 0 V

NG

Repair or replace harness or connector between side airbag sensor assembly (RH) and airbag sensor assembly.

OK

8 Is DTC B1140/32 out put again?

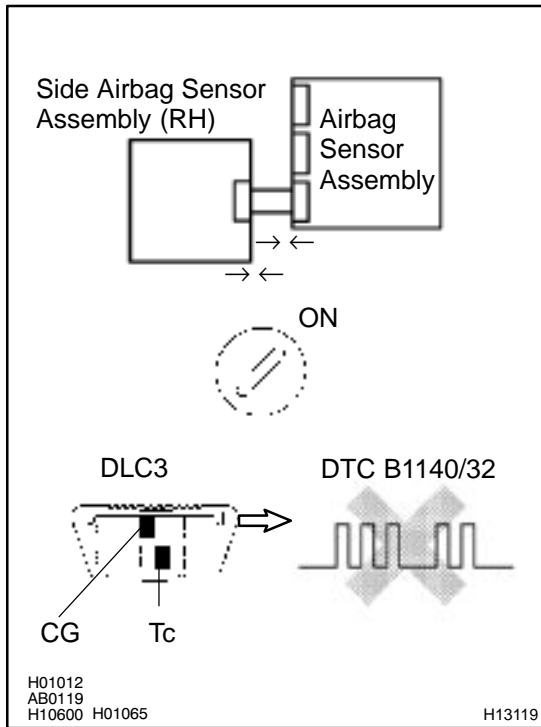

PREPARATION:

- Connect the connector to the side airbag sensor assembly (RH).
- Connect the connector to the airbag sensor assembly.
- Connect negative (–) terminal cable to the battery, and wait at least for 2 seconds.

CHECK:

- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Clear the DTC stored in memory (See step 5 on page [DI-497](#)).
- Turn the ignition switch to LOCK, and wait at least for 20 seconds.
- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Check the DTC (See page [DI-497](#)).

OK:

DTC B1140/32 is not output.

HINT:

Codes other than code B1140/32 may be output at this time, but they are not relevant to this check.


NG

Go to step 9.

OK

From the results of the above inspection, the malfunctioning part can now be considered normal. To make sure of this, use the simulation method to check.

9 Check airbag sensor assembly.

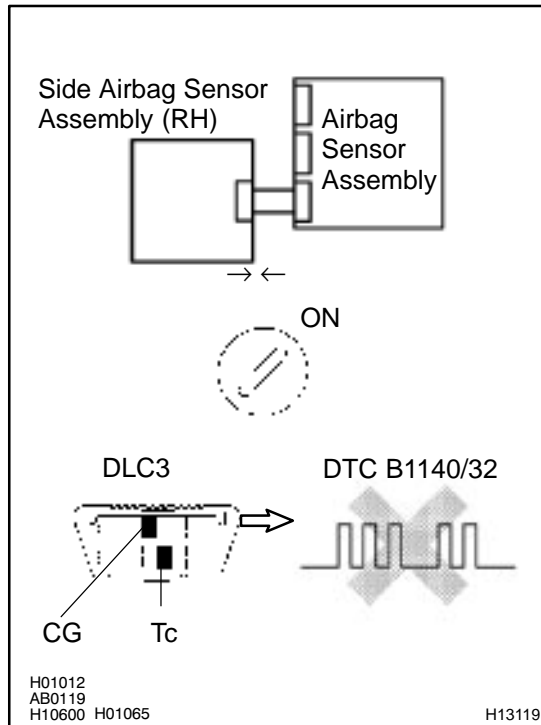

PREPARATION:

- Turn the ignition switch to LOCK.
- Disconnect negative (–) terminal cable from the battery, and wait at least for 90 seconds.
- Disconnect the side airbag sensor (RH) from the connector and connect the side airbag sensor (LH) to the connector.
- Connect negative (–) terminal cable to the battery, and wait at least for 2 seconds.

CHECK:

- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Clear the DTC stored in memory (See step 5 on page [DI-497](#)).
- Turn the ignition switch to LOCK, and wait at least for 20 seconds.
- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Check the DTC (See page [DI-497](#)).

OK:

DTC B1140/32 is not output.

HINT:


Codes other than code B1140/32 may be output at this time, but they are not relevant to this check.

NG

Replace airbag sensor assembly.

OK

10 Check side airbag sensor assembly (RH).

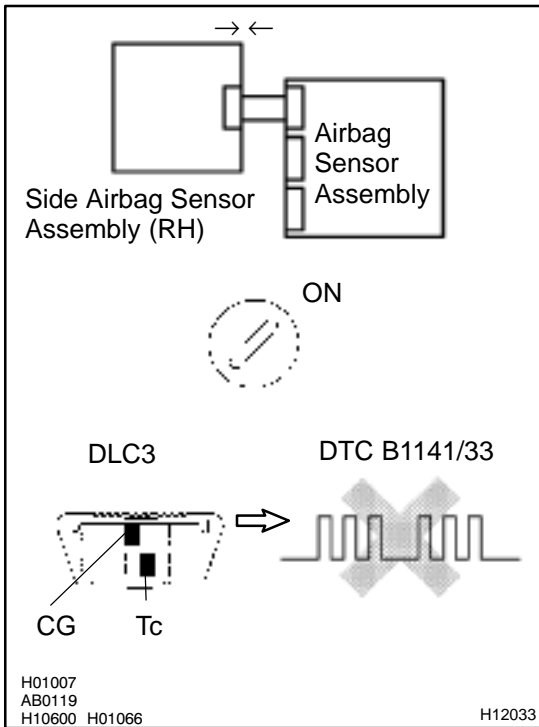

PREPARATION:

- Turn the ignition switch to LOCK.
- Disconnect negative (–) terminal cable from the battery, and wait at least for 90 seconds.
- Connect the side airbag sensor (RH) to the connector that the side airbag sensor (LH) was connected to.
- Connect negative (–) terminal cable to the battery, and wait at least for 2 seconds.

CHECK:

- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Clear the DTC stored in memory (See step 5 on page [DI-497](#)).
- Turn the ignition switch to LOCK, and wait at least for 20 seconds.
- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Check the DTC (See page [DI-497](#)).

OK:

DTC B1141/33 is not output.

HINT:

Codes other than code B1141/33 may be output at this time, but they are not relevant to this check.

NG

Replace side airbag sensor assembly (RH).

OK

From the results of the above inspection, the malfunctioning part can now be considered normal. To make sure of this, use the simulation method to check.

DTC	B1141/33	Side Airbag Sensor Assembly (LH) Malfunction
-----	----------	--

CIRCUIT DESCRIPTION


The side airbag sensor assembly (LH) consists of the safing sensor, diagnosis circuit and lateral deceleration sensor, etc.

It receives signals from the lateral deceleration sensor, judges whether or not the SRS must be activated, and detects diagnosis system malfunction.

DTC B1141/33 is recorded when occurrence of a malfunction in the side airbag sensor assembly (LH) is detected.

DTC No.	DTC Detecting Condition	Trouble Area
B1141/33	• Side airbag sensor assembly (LH) malfunction	• Side airbag sensor assembly (LH) • Wire harness • Airbag sensor assembly


WIRING DIAGRAM

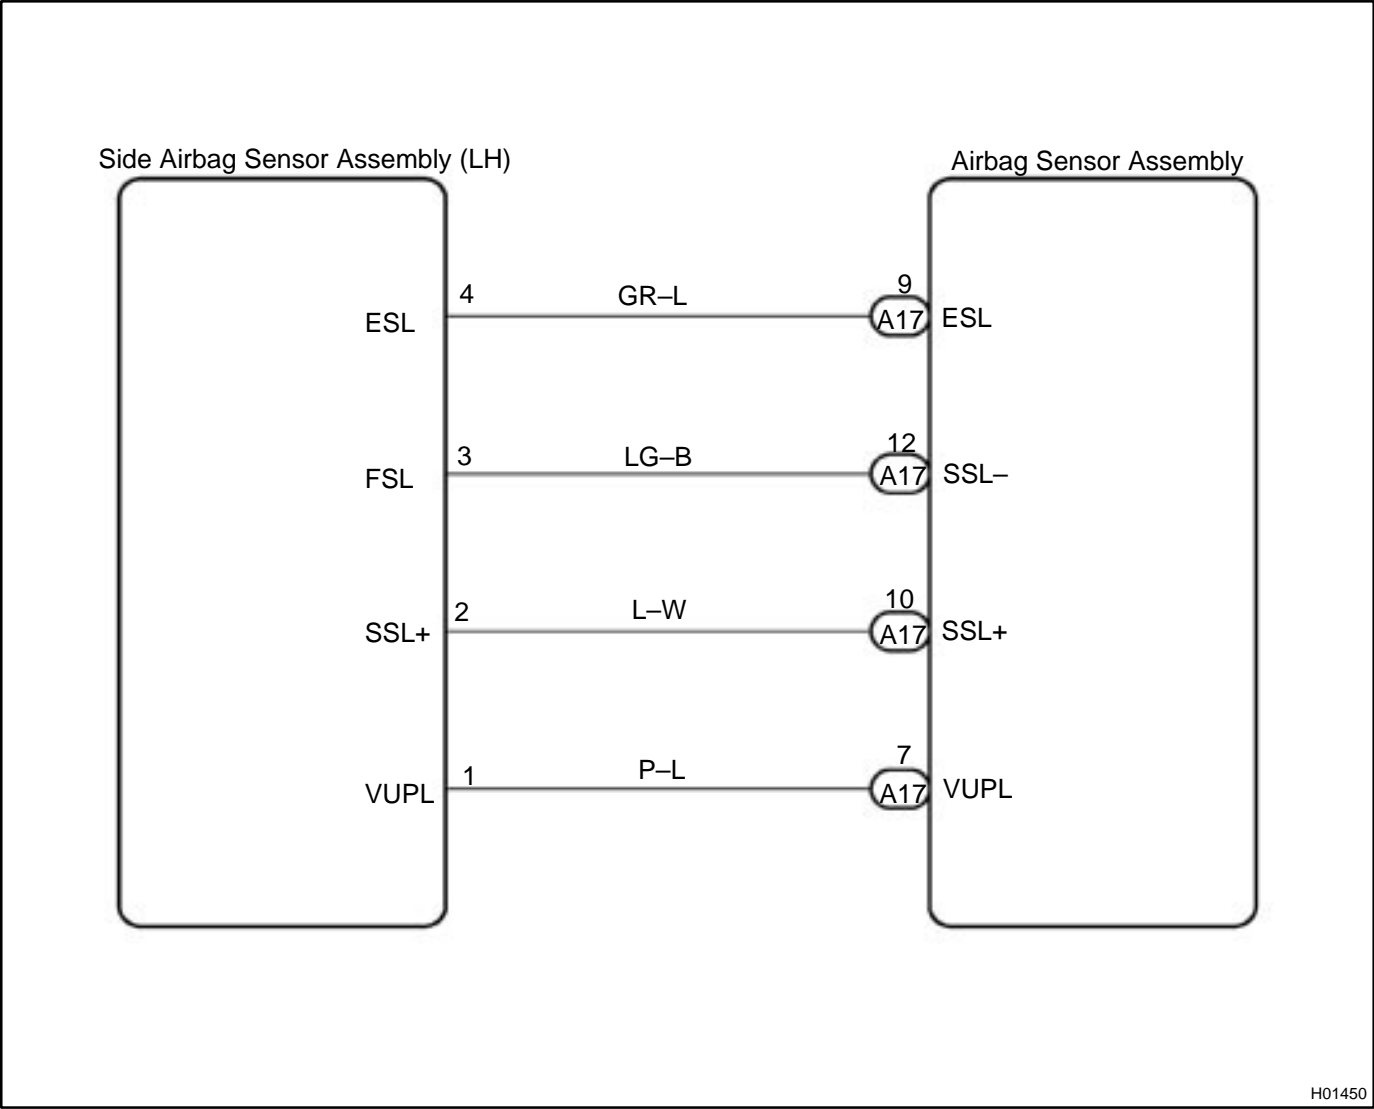

H01450

INSPECTION PROCEDURE

1 Is DTC B1141/33 out put?

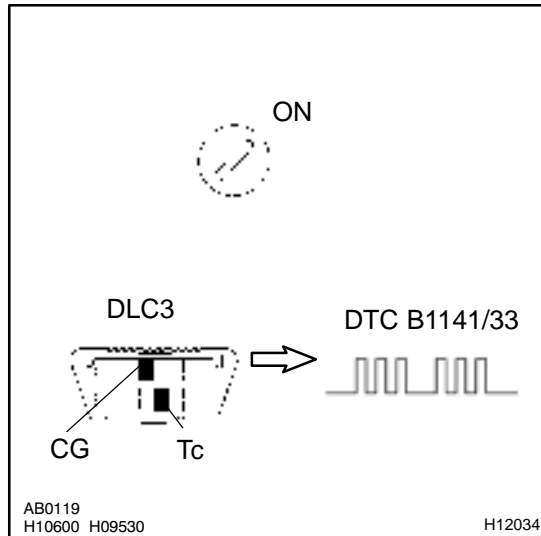**CHECK:**

- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Clear the DTC stored in memory (See step 5 on page [DI-497](#)).
- Turn the ignition switch to LOCK, and wait at least for 20 seconds.
- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Check the DTC (See page [DI-497](#)).

HINT:

Codes other than code B1141/33 may be output at this time, but they are not relevant to this check.

YES


The malfunctioning part can now be considered normal. To make sure of this, use the simulation method to check.

NO

2 Is connector of side airbag sensor assembly (LH) properly connected?

3 Prepare for inspection (See step 1 on page [DI-629](#)).

4 Check wire harness.

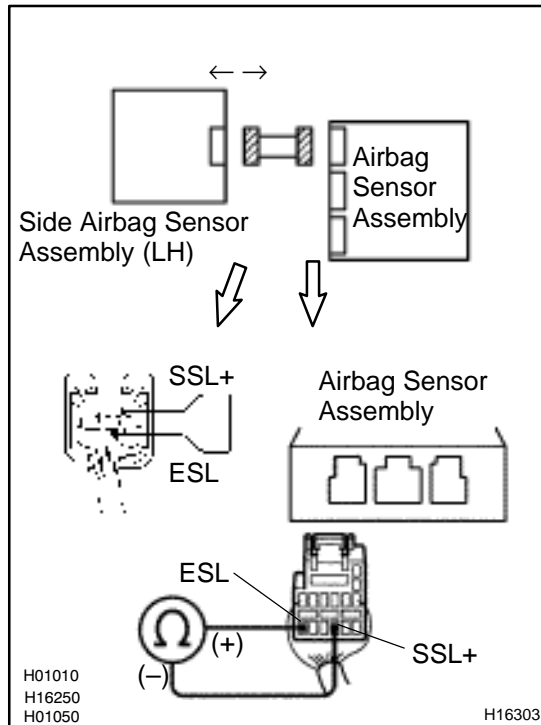

PREPARATION:

- Disconnect the side airbag sensor assembly (LH).
- Using a service wire, connect SSL+ and ESL of the connector (on the side airbag sensor assembly side) between the side airbag sensor assembly (LH) and the airbag sensor assembly.

CHECK:

For the connector (on the airbag sensor assembly side) between the side airbag sensor assembly (LH) and the airbag sensor assembly, measure the resistance between SSL+ and ESL.

OK:


Resistance: Below 1 Ω

NG

Repair or replace harness or connector between side airbag sensor assembly (LH) and airbag sensor assembly.

OK

5 Check wire harness.

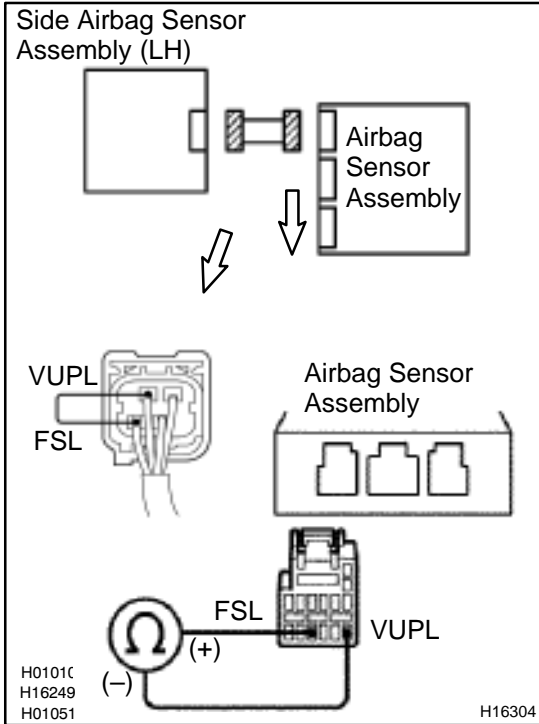

PREPARATION:

Using a service wire, connect VUPL and FSL of the connector (on the side airbag sensor assembly side) between the side airbag sensor assembly (LH) and the airbag sensor assembly.

CHECK:

For the connector (on the airbag sensor assembly side) between the side airbag sensor assembly (LH) and the airbag sensor assembly, measure the resistance between VUPL and FSL.


OK:

Resistance: Below 1 Ω

NG

Repair or replace harness or connector between side airbag sensor assembly (LH) and airbag sensor assembly.

OK

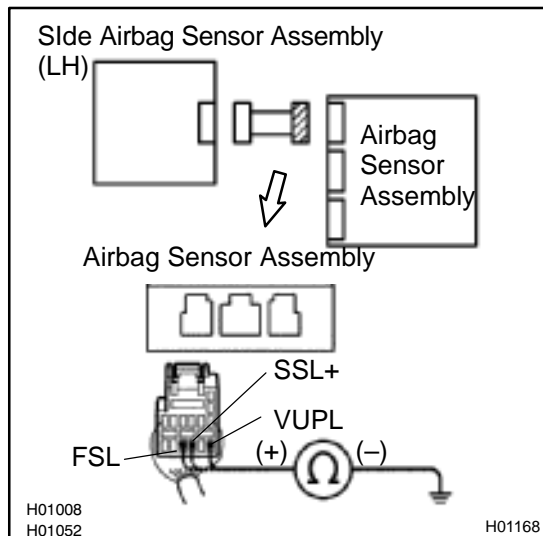6 Check wire harness (to ground).**CHECK:**


For the connector (on the airbag sensor assembly side) between the side airbag sensor assembly (LH) and the airbag sensor assembly, measure the resistance between body ground and each of SSL+, VUPL and FSL.

OK:

Resistance: 1 MΩ or Higher

NG

Repair or replace harness or connector between side airbag sensor assembly (LH) and airbag sensor assembly.

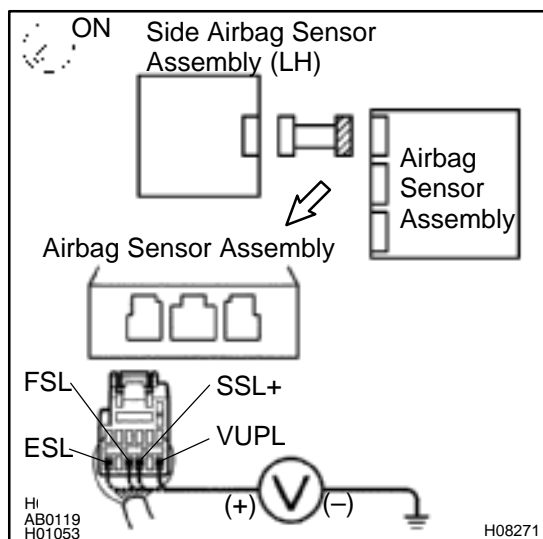OK**7 Check wire harness (to B+).****CHECK:**

- Turn ignition switch to ON.
- For the connector (on the airbag sensor assembly side) between the side airbag sensor assembly (LH) and the airbag sensor assembly, measure the voltage between body ground and each of SSL+, ESL, VUPL and FSL.

OK:


Voltage: 0 V

NG

Repair or replace harness or connector between side airbag sensor assembly (LH) and airbag sensor assembly.

OK

8 Is DTC B1141/33 out put again?

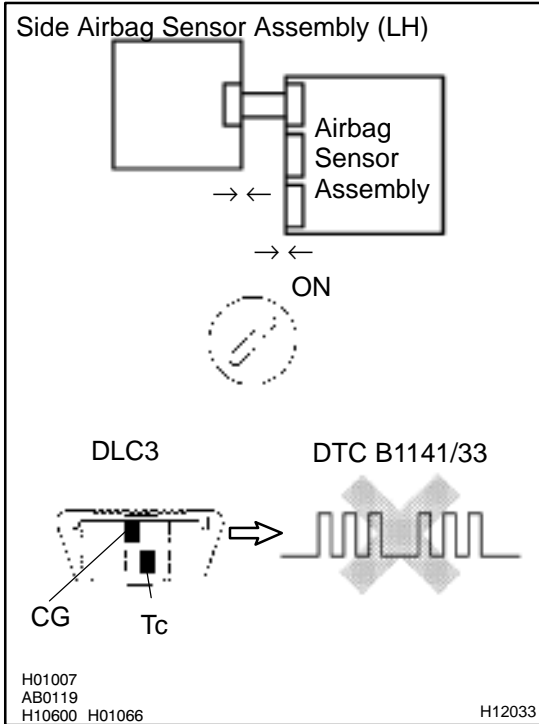

PREPARATION:

- Connect the connector to the side airbag sensor assembly (LH).
- Connect the connector to the airbag sensor assembly.
- Connect negative (–) terminal cable to the battery, and wait at least for 2 seconds.

CHECK:

- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Clear the DTC stored in memory (See step 5 on page [DI-497](#)).
- Turn the ignition switch to LOCK, and wait at least for 20 seconds.
- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Check the DTC (See page [DI-497](#)).

OK:

DTC B1141/33 is not output.

HINT:

Codes other than code B1141/33 may be output at this time, but they are not relevant to this check.


NO

Go to step 9.

YES

From the results of the above inspection, the malfunctioning part can now be considered normal. To make sure of this, use the simulation method to check.

9 Check airbag sensor assembly.

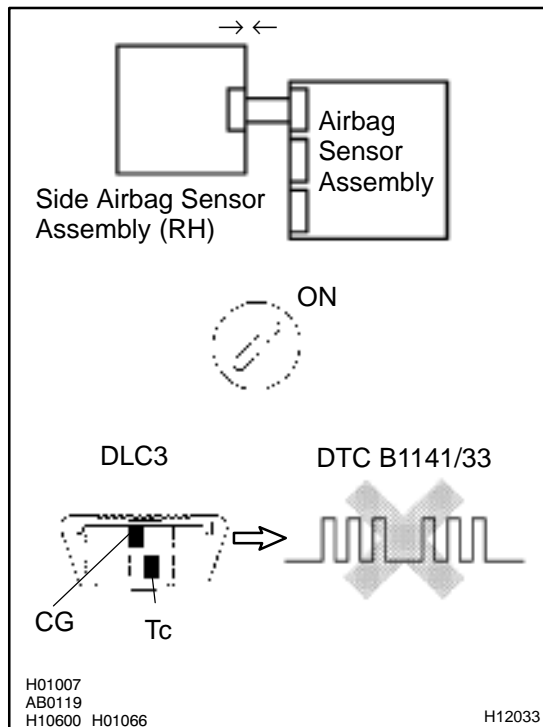

PREPARATION:

- Turn the ignition switch to LOCK.
- Disconnect negative (–) terminal cable from the battery, and wait at least for 90 seconds.
- Disconnect the side airbag sensor (LH) from the connector and connect the side airbag sensor (RH) to the connector.
- Connect negative (–) terminal cable to the battery, and wait at least for 2 seconds.

CHECK:

- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Clear the DTC stored in memory (See step 5 on page [DI-497](#)).
- Turn the ignition switch to LOCK, and wait at least for 20 seconds.
- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Check the DTC (See page [DI-497](#)).

OK:

DTC B1141/33 is not output.

HINT:


Codes other than code B1141/33 may be output at this time, but they are not relevant to this check.

NG

Replace airbag sensor assembly.

OK

10 Check side airbag sensor assembly (LH).

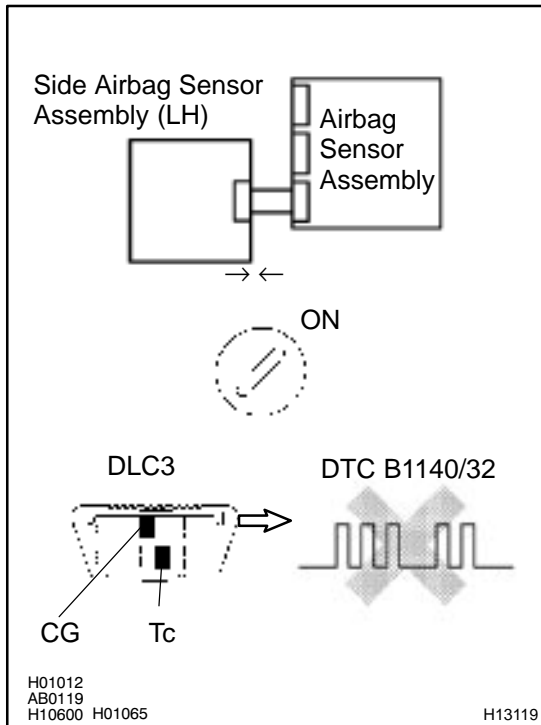

PREPARATION:

- Turn the ignition switch to LOCK.
- Disconnect negative (–) terminal cable from the battery, and wait at least for 90 seconds.
- Connect the side airbag sensor (LH) to the connector that the side airbag sensor (RH) was connected to.
- Connect negative (–) terminal cable to the battery, and wait at least for 2 seconds.

CHECK:

- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Clear the DTC stored in memory (See step 5 on page [DI-497](#)).
- Turn the ignition switch to LOCK, and wait at least for 20 seconds.
- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Check the DTC (See page [DI-497](#)).

OK:

DTC B1140/32 is not output.

HINT:

Codes other than code B1140/32 may be output at this time, but they are not relevant to this check.

NG

Replace side airbag sensor assembly (LH).

OK

From the results of the above inspection, the malfunctioning part can now be considered normal. To make sure of this, use the simulation method to check.


DTC	B1156/B1157/15	Front Airbag Sensor (RH) Malfunction
-----	----------------	--------------------------------------

CIRCUIT DESCRIPTION

The front airbag sensor (RH) circuit consists of the airbag sensor assembly and front airbag sensor (RH). For details of the function of each component, see OPERATION on page RS-2. DTC B1156/B1157/15 is recorded when a malfunction is detected in the front airbag sensor (RH) circuit.

DTC No.	DTC Detecting Condition	Trouble Area
B1156/B1157/15	• Front airbag sensor (RH) malfunction	• Front airbag sensor (RH) • Airbag sensor assembly • Wire harness • Engine room No. 2 wire harness


WIRING DIAGRAM

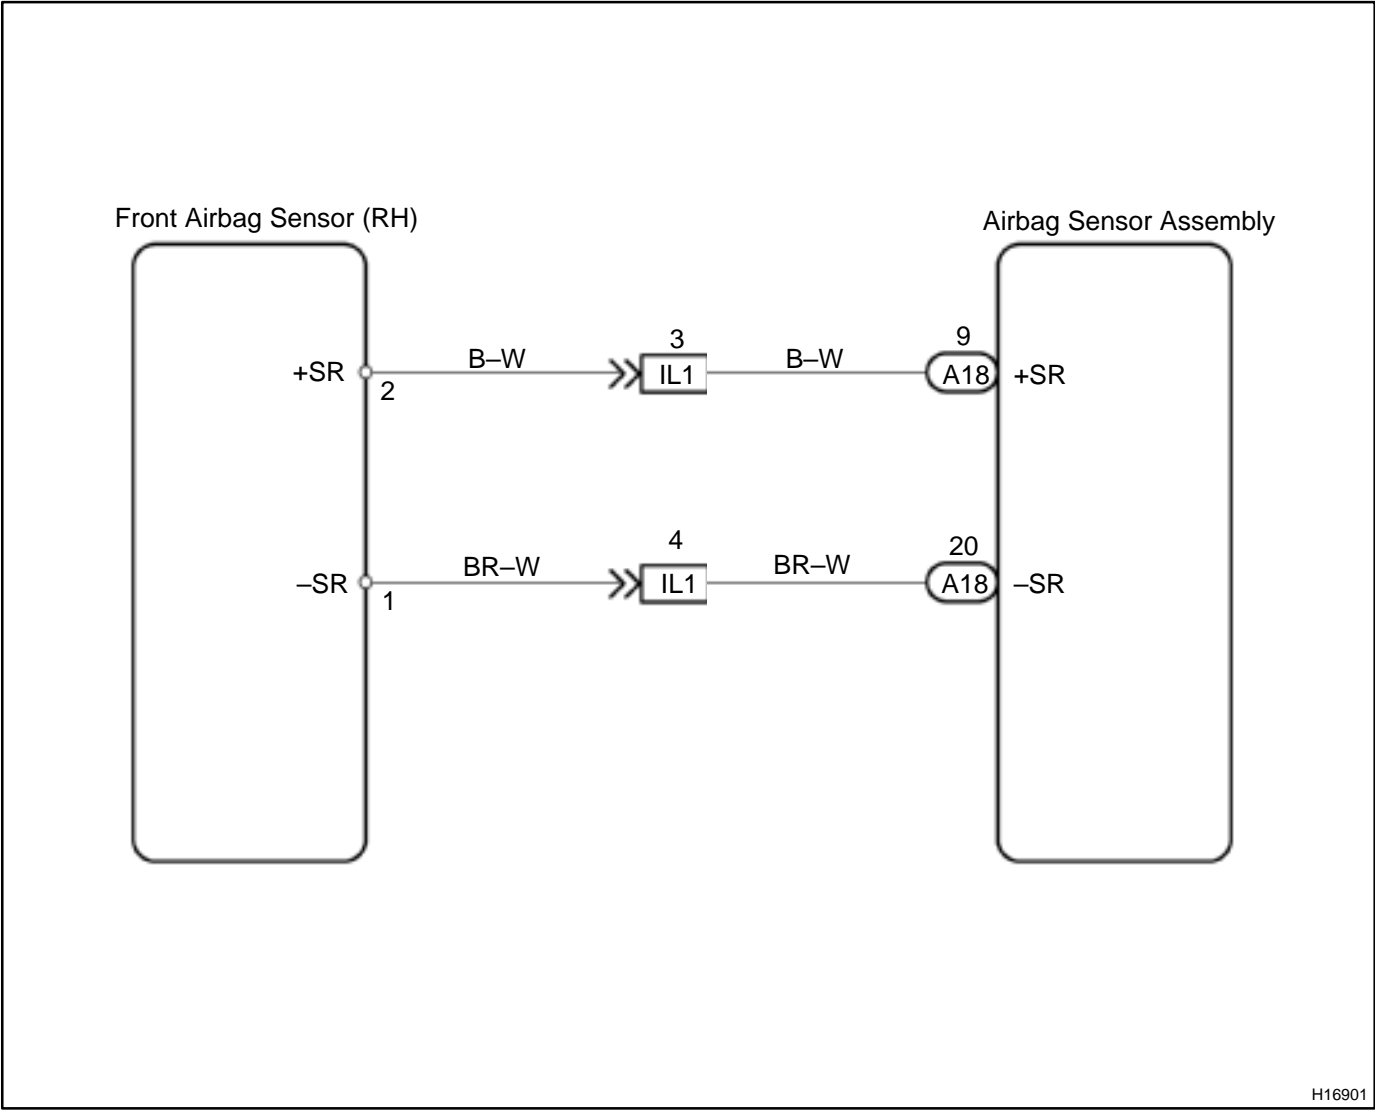

INSPECTION PROCEDURE

1 Prepare for inspection (See step 1 on page DI-629).

2 Check wire harness (to B+).

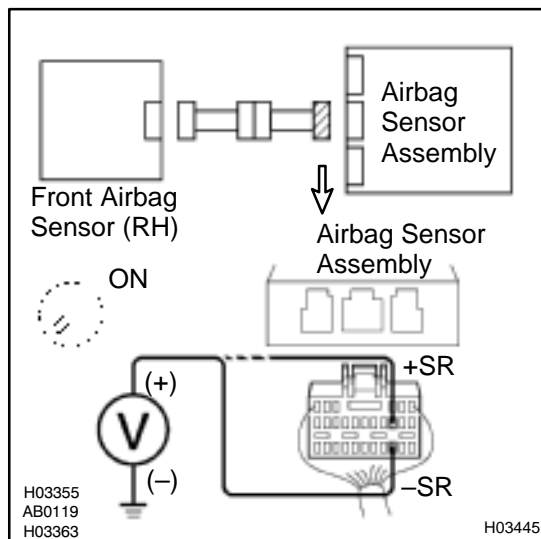**CHECK:**

- (a) Turn the ignition switch to ON.
- (b) For the connector (on the airbag sensor assembly side) between the front airbag sensor (RH) and the airbag sensor assembly, measure the voltage between body ground and each of +SR and -SR.

OK:


Voltage: Below 1 V

NG

Go to step 8.

OK

3 Check wire harness (to ground).

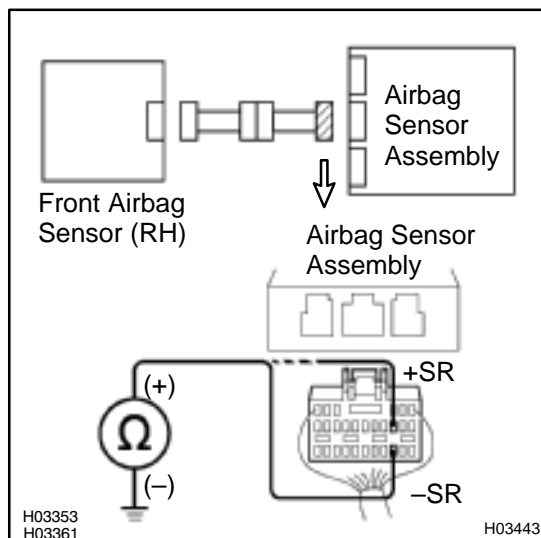**CHECK:**

For the connector (on the airbag sensor assembly side) between the front airbag sensor (RH) and the airbag sensor assembly, measure the resistance between body ground and each of +SR and -SR.


OK:

Resistance: 1 MΩ or Higher

NG

Go to step 9.


OK

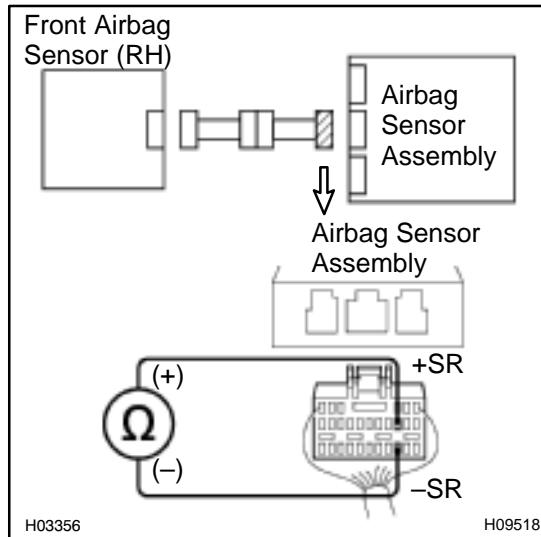4 Check wire harness.**CHECK:**

For the connector (on the airbag sensor assembly side) between the front airbag sensor (RH) and the airbag sensor assembly, measure the resistance between +SR and –SR.

OK:

Resistance: 1 MΩ or Higher

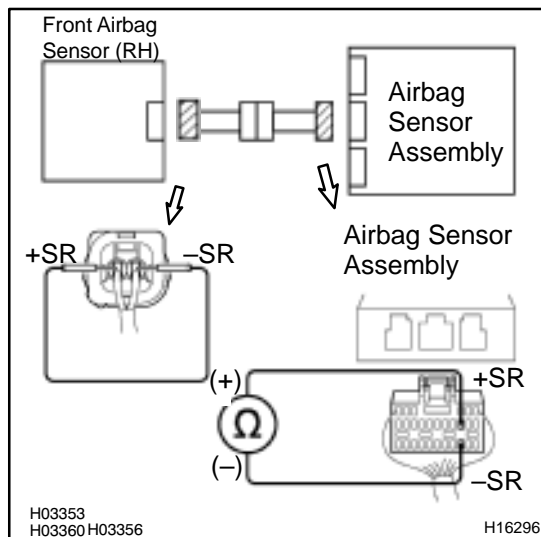NG**Go to step 10.****OK****5 Check wire harness.****PREPARATION:**

Using a service wire, connect +SR and –SR of the connector (on the front airbag sensor (RH) side) between the airbag sensor assembly and the front airbag sensor (RH).


CHECK:

For the connector (on the airbag sensor assembly side) between the front airbag sensor (RH) and the airbag sensor assembly, measure the resistance between +SR and –SR.

OK:

Resistance: Below 1 Ω

NG**Go to step 11.****OK**

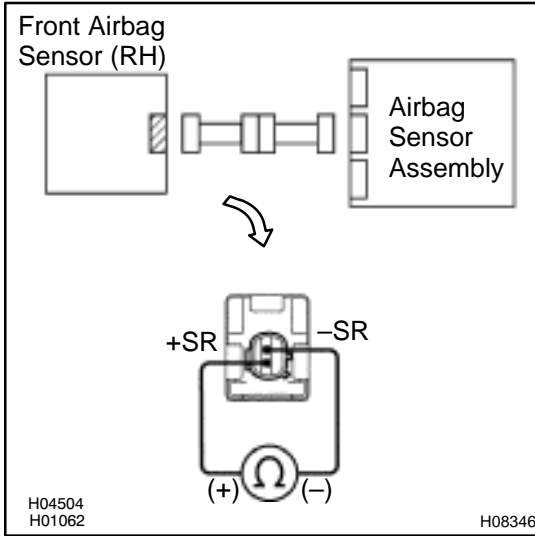6 Check front airbag sensor (RH).**CHECK:**


For the connector of the front airbag sensor (RH), measure the resistance between +SR and -SR.

OK:

Resistance: 300 – 1500 Ω

NG**Replace front airbag sensor (RH).****OK**

7 Check airbag sensor assembly.

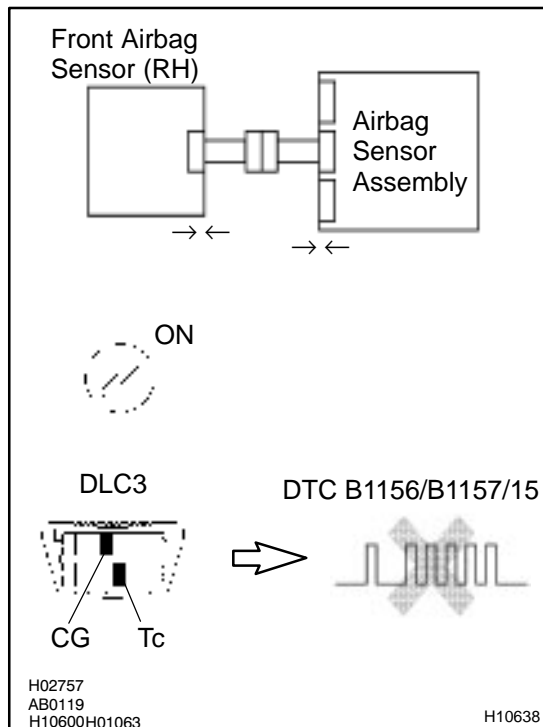

PREPARATION:

- Turn the ignition switch to LOCK.
- Disconnect negative (–) terminal cable from the battery, and wait at least for 90 seconds.
- Connect the front airbag sensor (RH) connector and airbag sensor assembly connector.
- Connect negative (–) terminal cable to the battery, and wait at least for 2 seconds.

CHECK:

- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Clear the DTC stored in memory (See page [DI-497](#)).
- Turn the ignition switch to LOCK, and wait at least for 20 seconds.
- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Check the DTC (See page [DI-497](#)).

OK:

DTC B1156/B1157/15 is not output.

HINT:


Codes other than code B1156/B1157/15 may be output at this time, but they are not relevant to this check.

NG

Replace airbag sensor assembly.

OK

From the results of the above inspection, the malfunctioning part can now be considered normal. To make sure of this, use the simulation method to check.

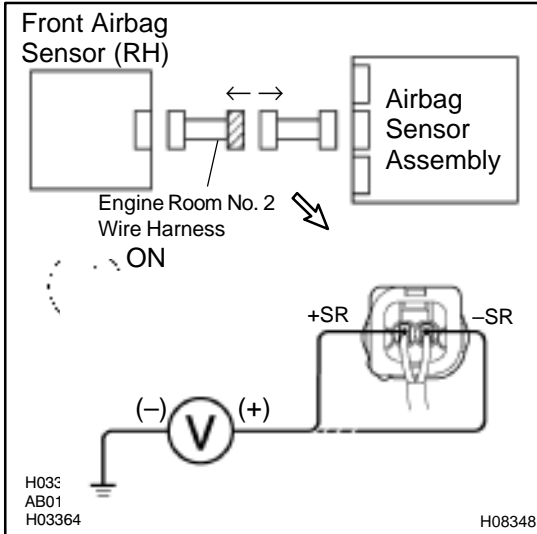8 Check engine room No. 2 wire harness (to B+).**PREPARATION:**

Disconnect the engine room No. 2 wire harness connector on the airbag sensor assembly side.

CHECK:

- Turn the ignition switch to ON.
- For the connector (on the RH front door wire harness side) between the airbag sensor assembly and the engine room No. 2 wire harness, measure the voltage between body ground and each of +SR and -SR.

OK:


Voltage: Below 1 V

NG

Repair or replace engine room No. 2 wire harness.

OK

Repair or replace harness or connector between airbag sensor assembly and engine room No. 2 wire harness.

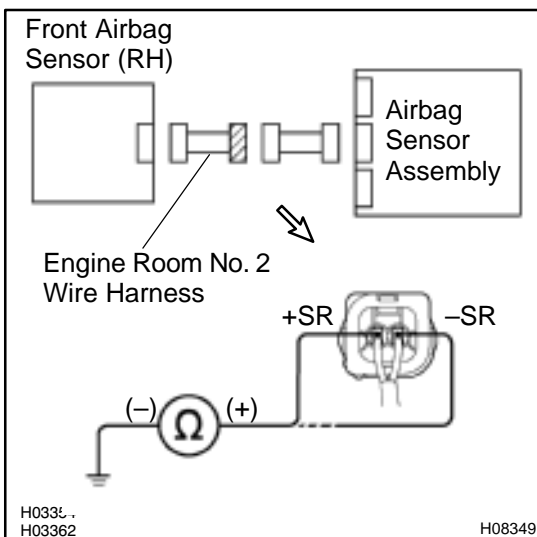9 Check engine room No. 2 wire harness (to ground).**PREPARATION:**

Disconnect the engine room No. 2 wire harness connector on the airbag sensor assembly side.

CHECK:

For the connector (on the engine room No. 2 wire harness side) between the airbag sensor assembly and the engine room No. 2 wire harness, measure the resistance between body ground and each of +SR and -SR.

OK:


Resistance: 1 MΩ or Higher

NG

Repair or replace engine room No. 2 wire harness.

OK

Repair or replace harness or connector between airbag sensor assembly and engine room No. 2 wire harness.

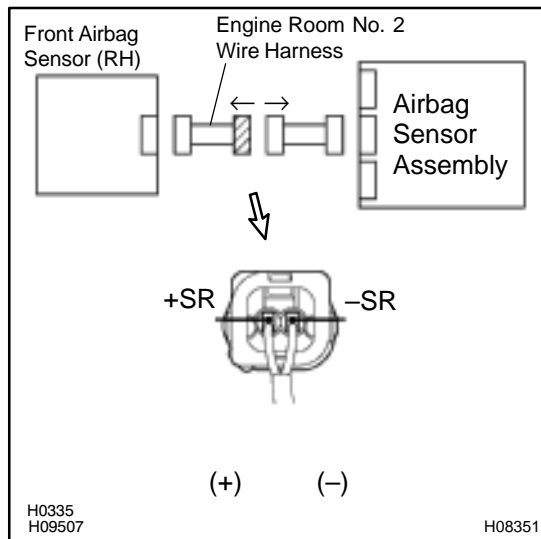10 Check engine room No. 2 wire harness.**PREPARATION:**

Disconnect the engine room No. 2 wire harness connector on the airbag sensor assembly side.

CHECK:

For the connector (on the engine room No. 2 wire harness side) between the airbag sensor assembly and the engine room No. 2 wire harness, measure the resistance between +SR and -SR.

OK:

Resistance: 1 MΩ or Higher


NG

Repair or replace engine room No. 2 wire harness.

OK

Repair or replace harness or connector between airbag sensor assembly and engine room No. 2 wire harness.

11 Check engine room No. 2 wire harness.

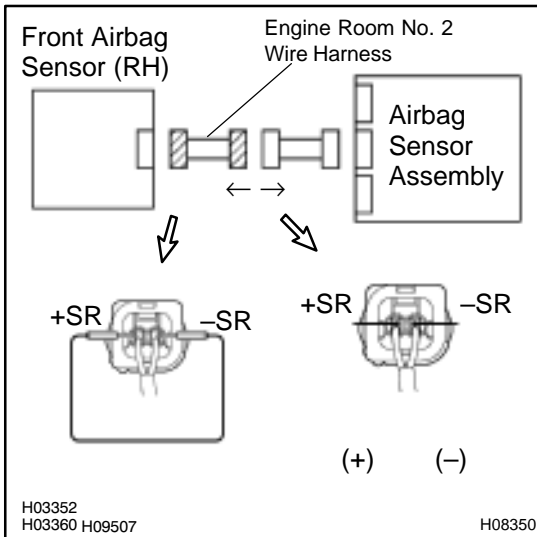

PREPARATION:

- Disconnect the engine room No. 2 wire harness connector on the airbag sensor assembly side.
- Using a service wire, connect +SR and -SR of the connector (on the engine room No. 2 wire harness side) between the engine room No. 2 wire harness and the front airbag sensor (RH).

CHECK:

For the connector (on the engine room No. 2 wire harness side) between the airbag sensor assembly and the engine room No. 2 wire harness, measure the resistance between +SR and -SR.

OK:

Resistance: Below 1 Ω

NG

Repair or replace engine room No. 2 wire harness.

OK

Repair or replace harness or connector between airbag sensor assembly and engine room No. 2 wire harness.


DTC	B1158/B1159/16	Front Airbag Sensor (LH) Malfunction
-----	----------------	--------------------------------------

CIRCUIT DESCRIPTION

The front airbag sensor (LH) circuit consists of the airbag sensor assembly and front airbag sensor (LH). For details of the function of each component, see OPERATION on page RS-2. DTC B1158/B1159/16 is recorded when malfunction is detected in the front airbag sensor (LH) circuit.

DTC No.	DTC Detecting Condition	Trouble Area
B1158/B1159/16	• Front airbag sensor (LH) malfunction	• Front airbag sensor (LH) • Airbag sensor assembly • Wire harness • Engine room main wire harness


WIRING DIAGRAM

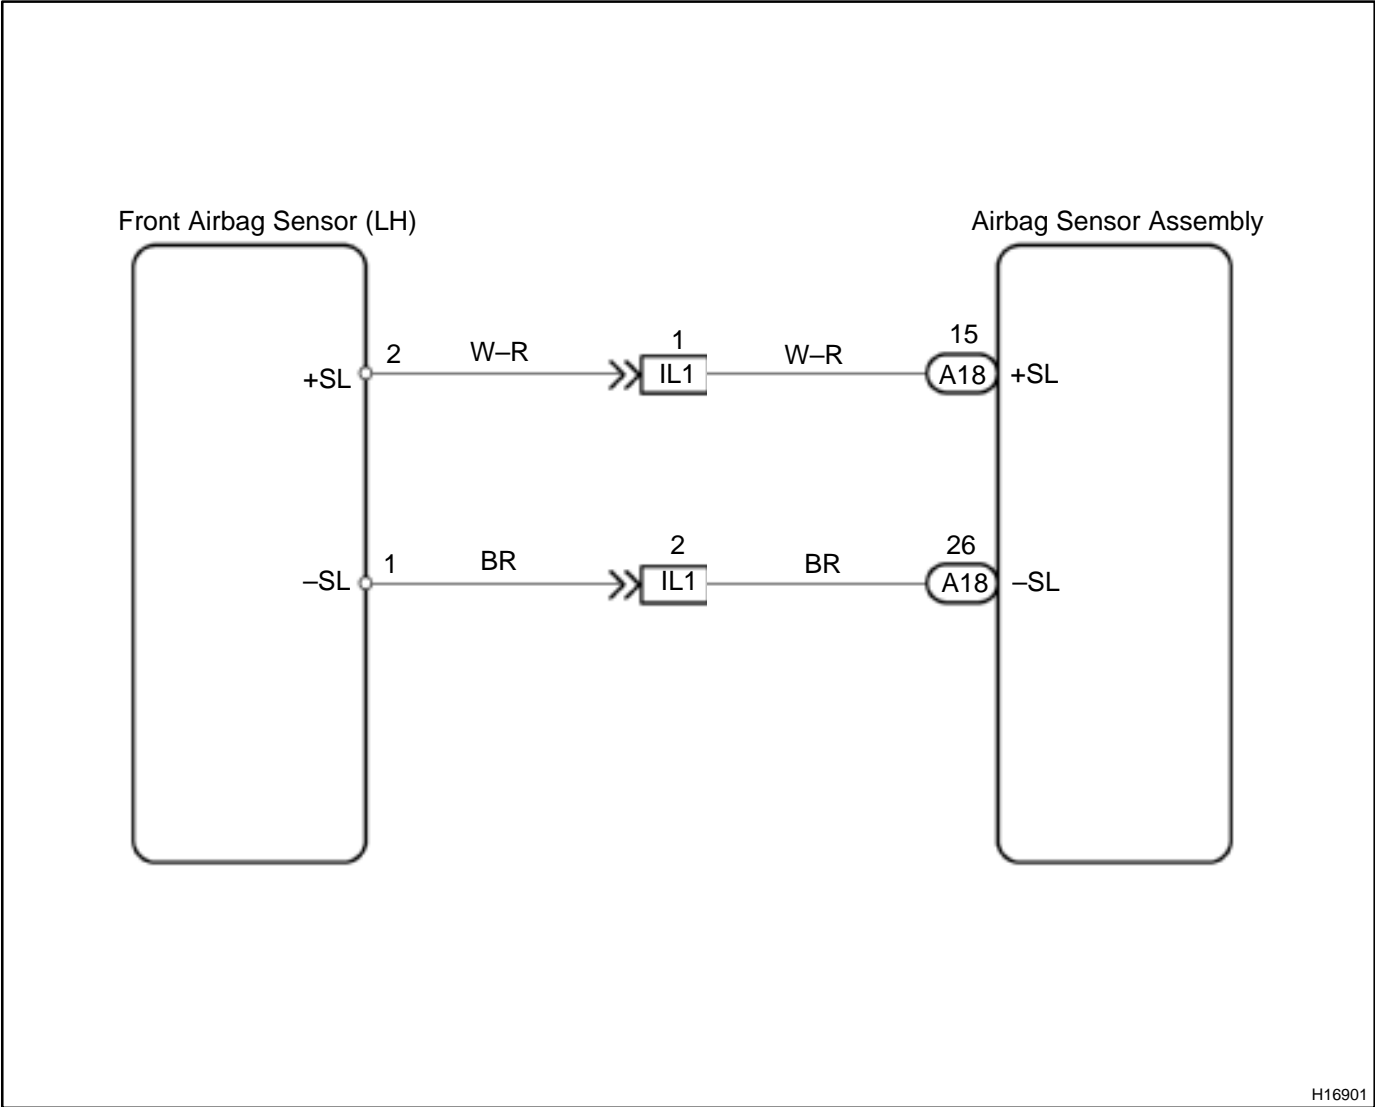

INSPECTION PROCEDURE

1 Prepare for inspection (See step 1 on page DI-629).

2 Check wire harness (to B+).

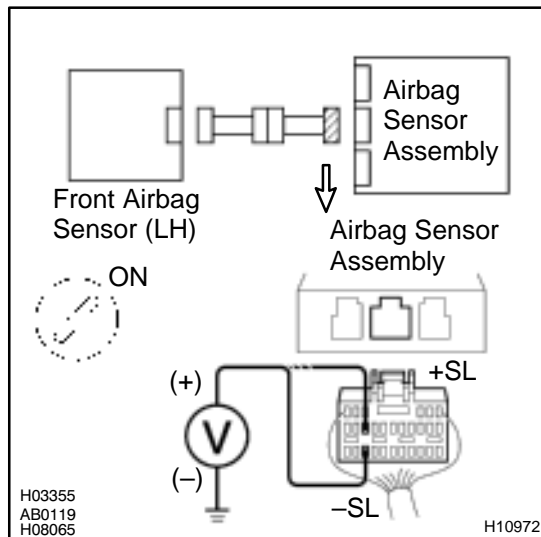**CHECK:**

- (a) Turn the ignition switch to ON.
- (b) For the connector (on the airbag sensor assembly side) between the front airbag sensor (LH) and the airbag sensor assembly, measure the voltage between body ground and each of +SL and -SL.

OK:


Voltage: Below 1 V

NG

Go to step 8.

OK

3 Check wire harness (to ground).

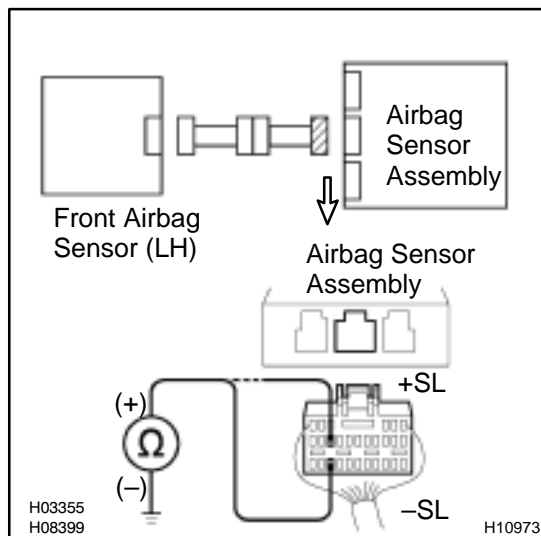**CHECK:**

For the connector (on the airbag sensor assembly side) between the front airbag sensor (LH) and the airbag sensor assembly, measure the resistance between body ground and each of +SL and -SL.


OK:

Resistance: 1 MΩ or Higher

NG

Go to step 9.


OK

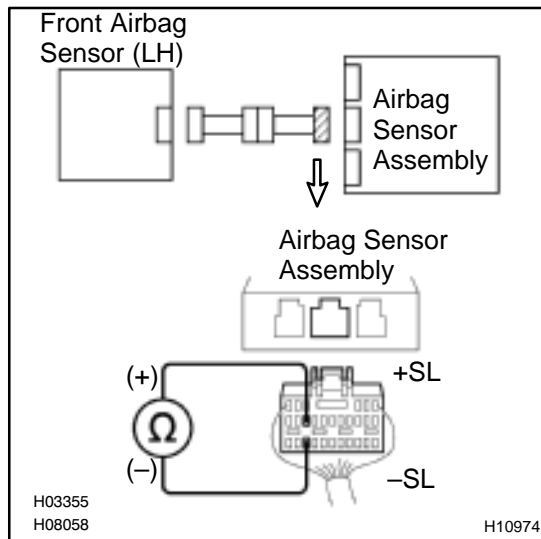4 Check wire harness.**CHECK:**

For the connector (on the airbag sensor assembly side) between the front airbag sensor (LH) and the airbag sensor assembly, measure the resistance between +SL and -SL.

OK:

Resistance: 1 M Ω or Higher

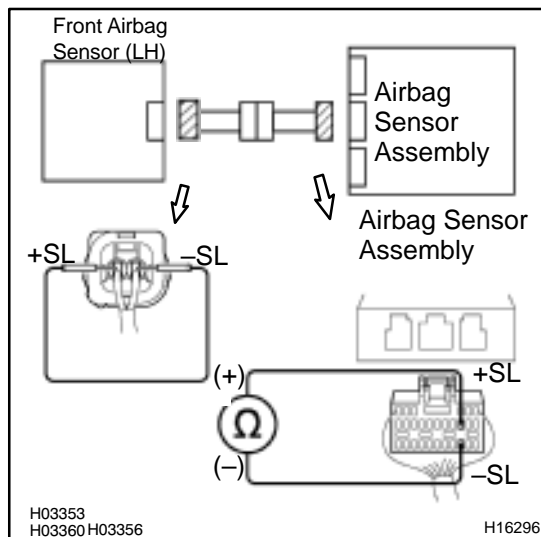NG**Go to step 10.****OK****5 Check wire harness.****PREPARATION:**

Using a service wire, connect +SL and -SL of the connector (on the front airbag sensor (LH) side) between the airbag sensor assembly and the front airbag sensor (LH).


CHECK:

For the connector (on the airbag sensor assembly side) between the front airbag sensor (LH) and the airbag sensor assembly, measure the resistance between +SL and -SL.

OK:

Resistance: Below 1 Ω

NG**Go to step 11.****OK**

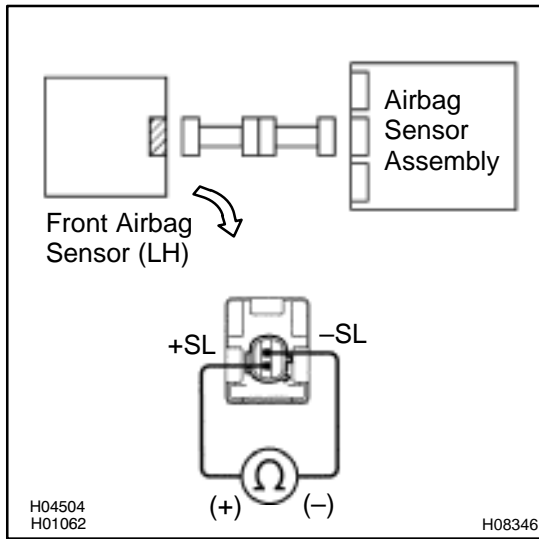6 Check front airbag sensor (LH).**CHECK:**


For the connector (on the front airbag sensor (LH)), measure the resistance between +SL and -SL.

OK:

Resistance: 300 – 1500 Ω

NG**Replace front airbag sensor (LH).****OK**

7 Check airbag sensor assembly.

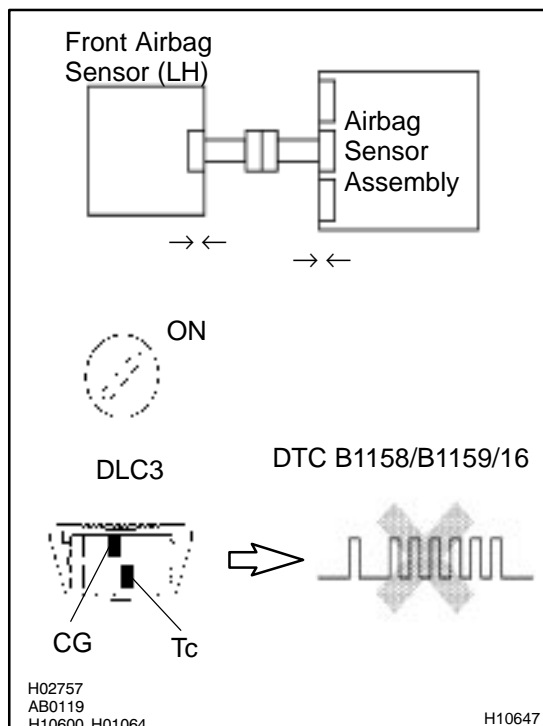

PREPARATION:

- Turn the ignition switch to LOCK.
- Disconnect negative (–) terminal cable from the battery, and wait at least for 90 seconds.
- Connect the front airbag sensor (LH) connector and airbag sensor assembly connector.
- Connect negative (–) terminal cable to the battery, and wait at least for 2 seconds.

CHECK:

- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Clear the DTC stored in memory (See page [DI-497](#)).
- Turn the ignition switch to LOCK, and wait at least for 20 seconds.
- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Check the DTC (See page [DI-497](#)).

OK:

DTC B1158/B1159/16 is not output.

HINT:

Codes other than code B1158/B1159/16 may be output at this time, but they are not relevant to this check.


NG

Replace airbag sensor assembly.

OK

From the results of the above inspection, the malfunctioning part can now be considered normal. To make sure of this, use the simulation method to check.

8 Check engine room main wire harness (to B+).

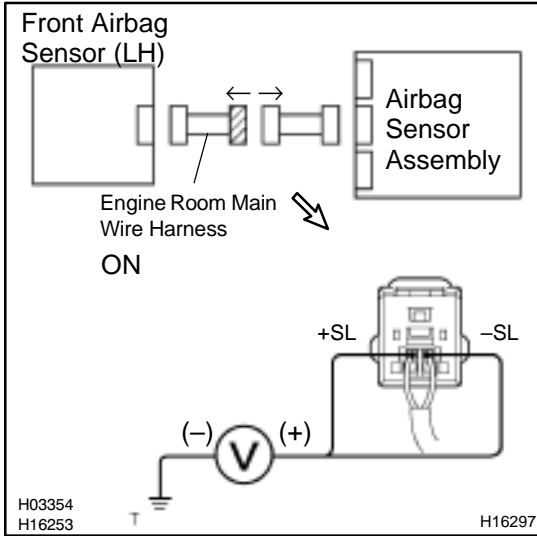

PREPARATION:

Disconnect the engine room main wire harness connector on the airbag sensor assembly side.

CHECK:

- Turn the ignition switch to ON.
- For the connector (on the LH front door wire harness side) between the airbag sensor assembly and the engine room main wire harness, measure the voltage between body ground and each of +SL and -SL.

OK:

Voltage: Below 1 V


NG

Repair or replace engine room main wire harness.

OK

Repair or replace harness or connector between airbag sensor assembly and engine room main wire harness.

9 Check engine room main wire harness (to ground).

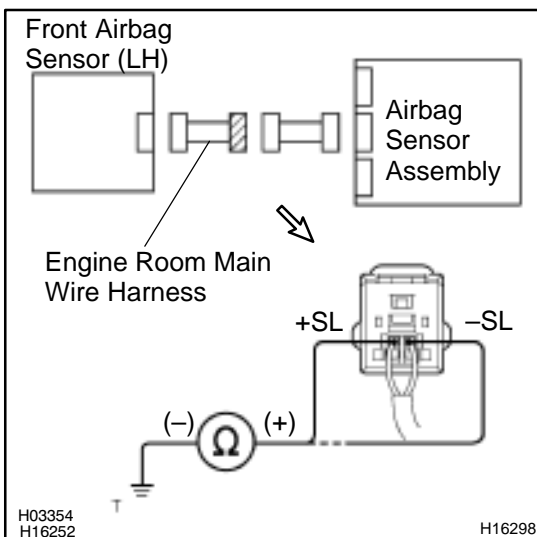

PREPARATION:

Disconnect the engine room main wire harness connector on the airbag sensor assembly side.

CHECK:

For the connector (on the engine room main wire harness side) between the airbag sensor assembly and the engine room main wire harness, measure the resistance between body ground and each of +SL and -SL.

OK:

Resistance: 1 MΩ or Higher


NG

Repair or replace engine room main wire harness.

OK

Repair or replace harness or connector between airbag sensor assembly and engine room main wire harness.

10 Check engine room main wire harness.

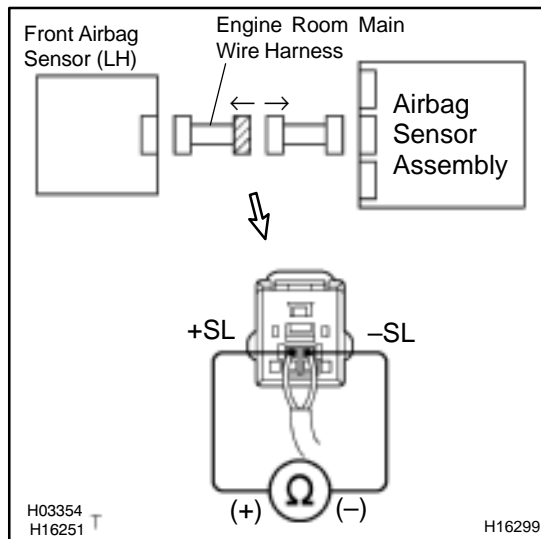

PREPARATION:

Disconnect the engine room main wire harness connector on the airbag sensor assembly side.

CHECK:

For the connector (on the engine room main wire harness side) between the airbag sensor assembly and the engine room main wire harness, measure the resistance between +SL and -SL.

OK:

Resistance: 1 MΩ or Higher


NG

Repair or replace engine room main wire harness.

OK

Repair or replace harness or connector between airbag sensor assembly and engine room main wire harness.

11 Check engine room main wire harness.

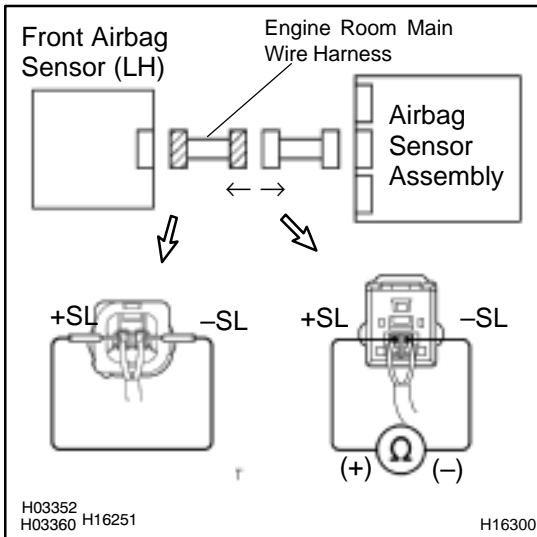

PREPARATION:

- Disconnect the engine room main wire harness connector on the airbag sensor assembly side.
- Using a service wire, connect +SL and -SL of the connector (on the engine room main wire harness side) between the engine room main wire harness and the front airbag sensor (LH).

CHECK:

For the connector (on the engine room main wire harness side) between the airbag sensor assembly and the engine room main wire harness, measure the resistance between +SL and -SL.

OK:

Resistance: Below 1 Ω

NG

Repair or replace engine room main wire harness.

OK

Repair or replace harness or connector between airbag sensor assembly and engine room main wire harness.

DTC	Normal	Source Voltage Drop
------------	---------------	----------------------------

CIRCUIT DESCRIPTION

The SRS is equipped with a voltage-increase circuit (DC-DC converter) in the airbag sensor assembly in case the source voltage drops.


When the battery voltage drops, the voltage-increase circuit (DC-DC converter) functions to increase the voltage of the SRS to normal voltage.

The diagnosis system malfunction display for this circuit is different from other circuits that is when the SRS warning light remains lit up and the DTC is a normal code, source voltage drop is indicated.

Malfunction in this circuit is not recorded in the airbag sensor assembly, and the source voltage returns to normal, the SRS warning light automatically goes off.

DTC No.	Diagnosis
(Normal)	Source voltage drop


WIRING DIAGRAM

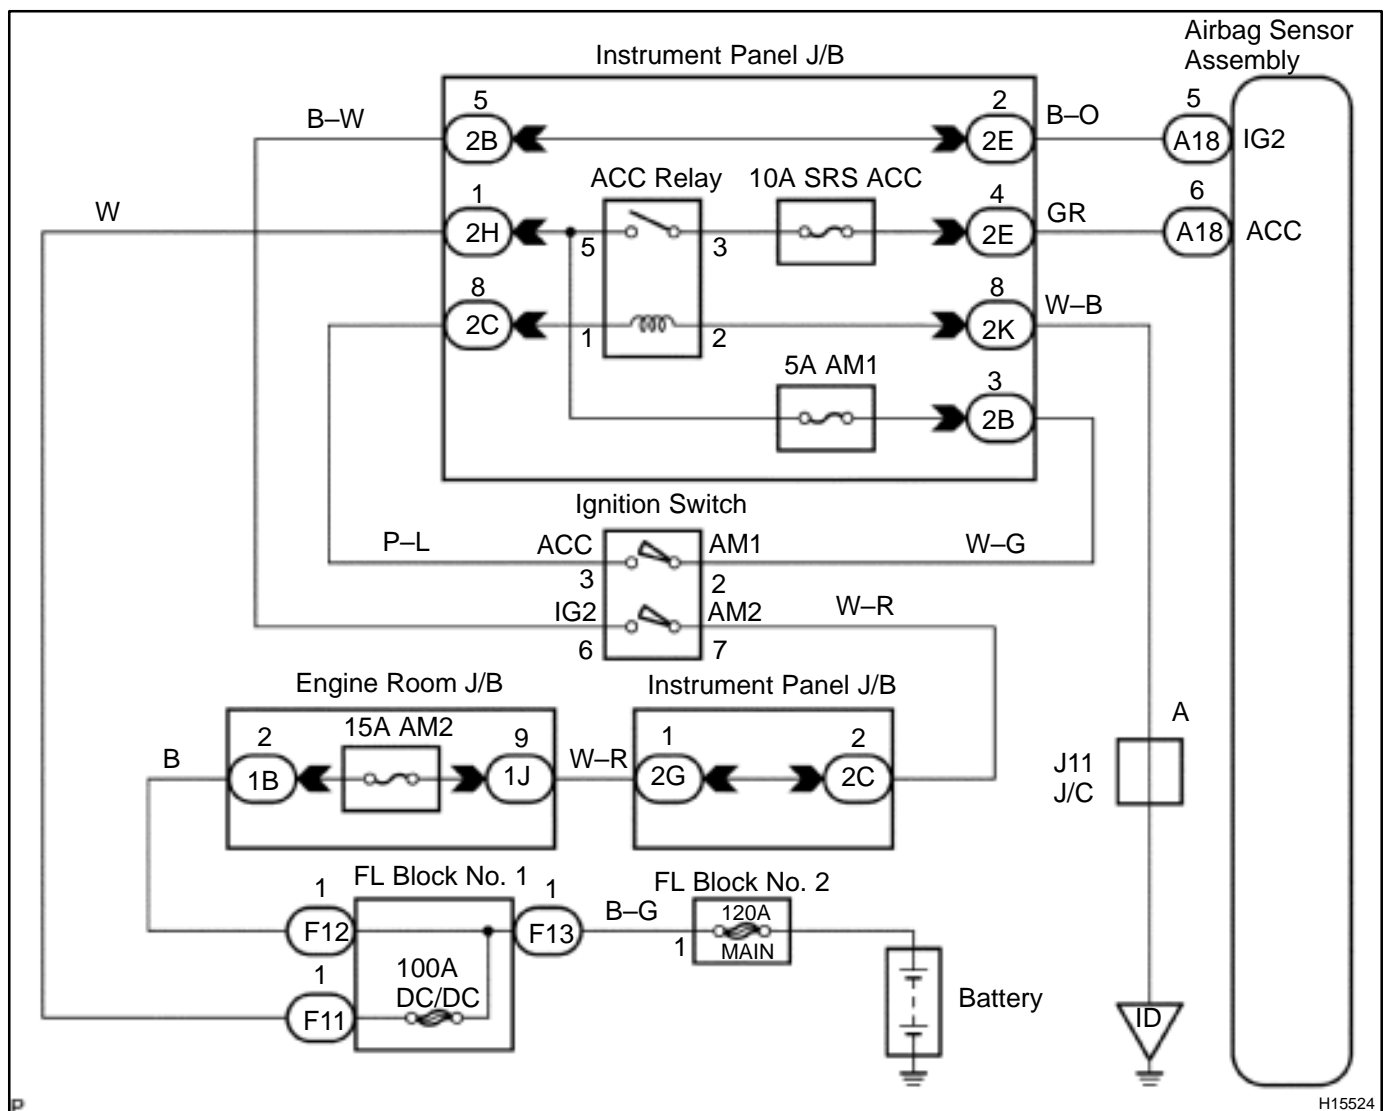

H15524

INSPECTION PROCEDURE

1	Prepare for inspection.
---	-------------------------

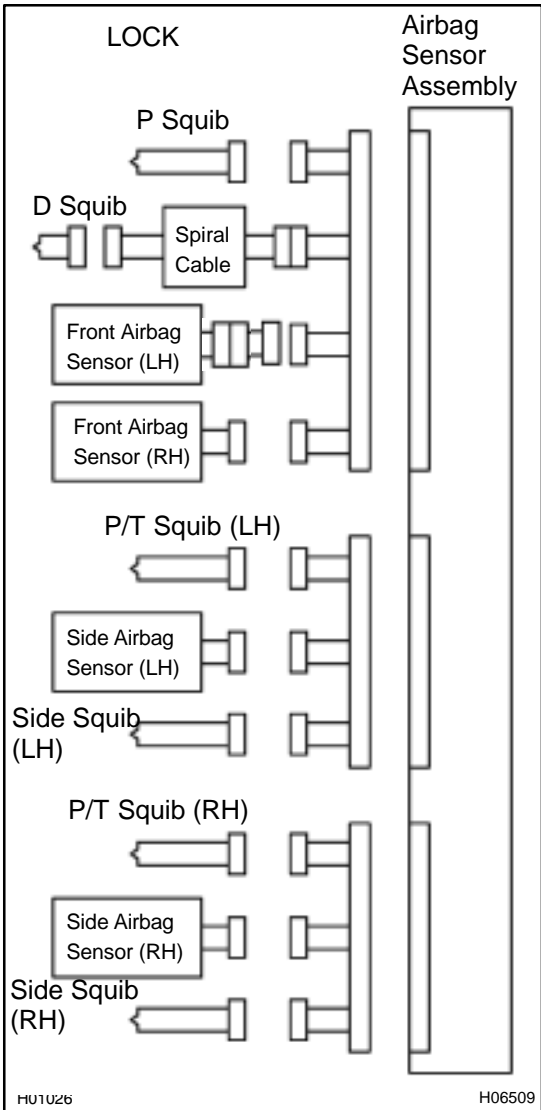


PREPARATION:


- Disconnect negative (–) terminal cable from the battery, and wait at least for 90 seconds.
- Remove the steering wheel pad (See page [SR-6](#)).
- Disconnect the connector of the front passenger airbag assembly (See page [RS-27](#)).
- Disconnect the connector of the side airbag assembly RH and LH (See page [RS-40](#)).
- Disconnect the connector of the seat belt pretensioner RH and LH (See page [BO-90](#)).
- Disconnect the connectors of the airbag sensor assembly (See page [RS-52](#)).
- Disconnect the connector of the front airbag sensor RH and LH (See page [RS-57](#)).
- Disconnect the connector of the side airbag sensor assembly RH and LH (See page [RS-62](#)).

CAUTION:

Store the steering wheel pad, front passenger airbag assembly and side airbag assembly with the front surface facing upward.



2 Check source voltage.

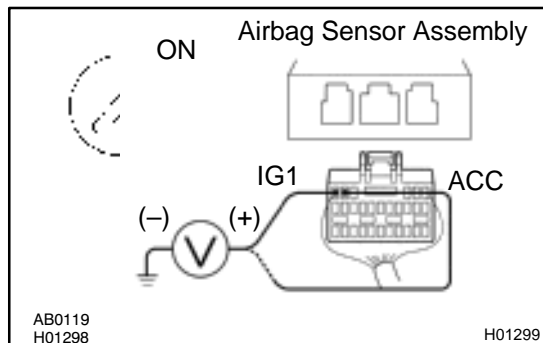

PREPARATION:

Connect negative (–) terminal cable to the battery.

CHECK:

- Turn ignition switch ON.
- Measure the voltage between body ground and each of IG1 and IG2 on the sensor and operate electric system (defogger, wiper, headlight, heater blower, etc.).

OK:


Voltage: 10 – 14 V

NG

Check harness between battery and airbag sensor assembly, and check battery and charging system.

OK

3 Does SRS warning light turn off?

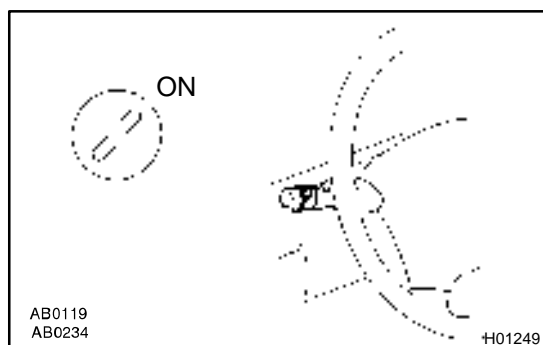

PREPARATION:

- Turn the ignition switch to LOCK.
- Connect the steering wheel pad connector.
- Connect the front passenger airbag assembly connector.
- Connect the side airbag assembly connectors.
- Connect the seat belt pretensioner connectors.
- Connect the airbag sensor assembly connectors.
- Connect the front airbag sensor connectors.
- Connect the side airbag sensor assembly connectors.
- Turn the ignition switch to ON.

CHECK:

Operate electric system (defogger, wiper, headlight, heater blower, etc.) and check that SRS warning light goes off.

NO

Check for DTCs. If a DTC is output, perform troubleshooting for the DTC. If a normal code is output, replace airbag sensor assembly.

YES

From the results of the above inspection, the malfunctioning part can now be considered normal. To make sure of this, use the simulation method to check.

SRS Warning Light Circuit Malfunction


CIRCUIT DESCRIPTION

The SRS warning light is located on the combination meter.

When the SRS is normal, the SRS warning light lights up for approx. 6 seconds after the ignition switch is turned from the LOCK position to ON position, and then turns off automatically.


If there is a malfunction in the SRS, the SRS warning light lights up to inform the driver of the abnormality. When terminals Tc and CG of the DLC3 are connected, the DTC is displayed by blinking the SRS warning light.

WIRING DIAGRAM

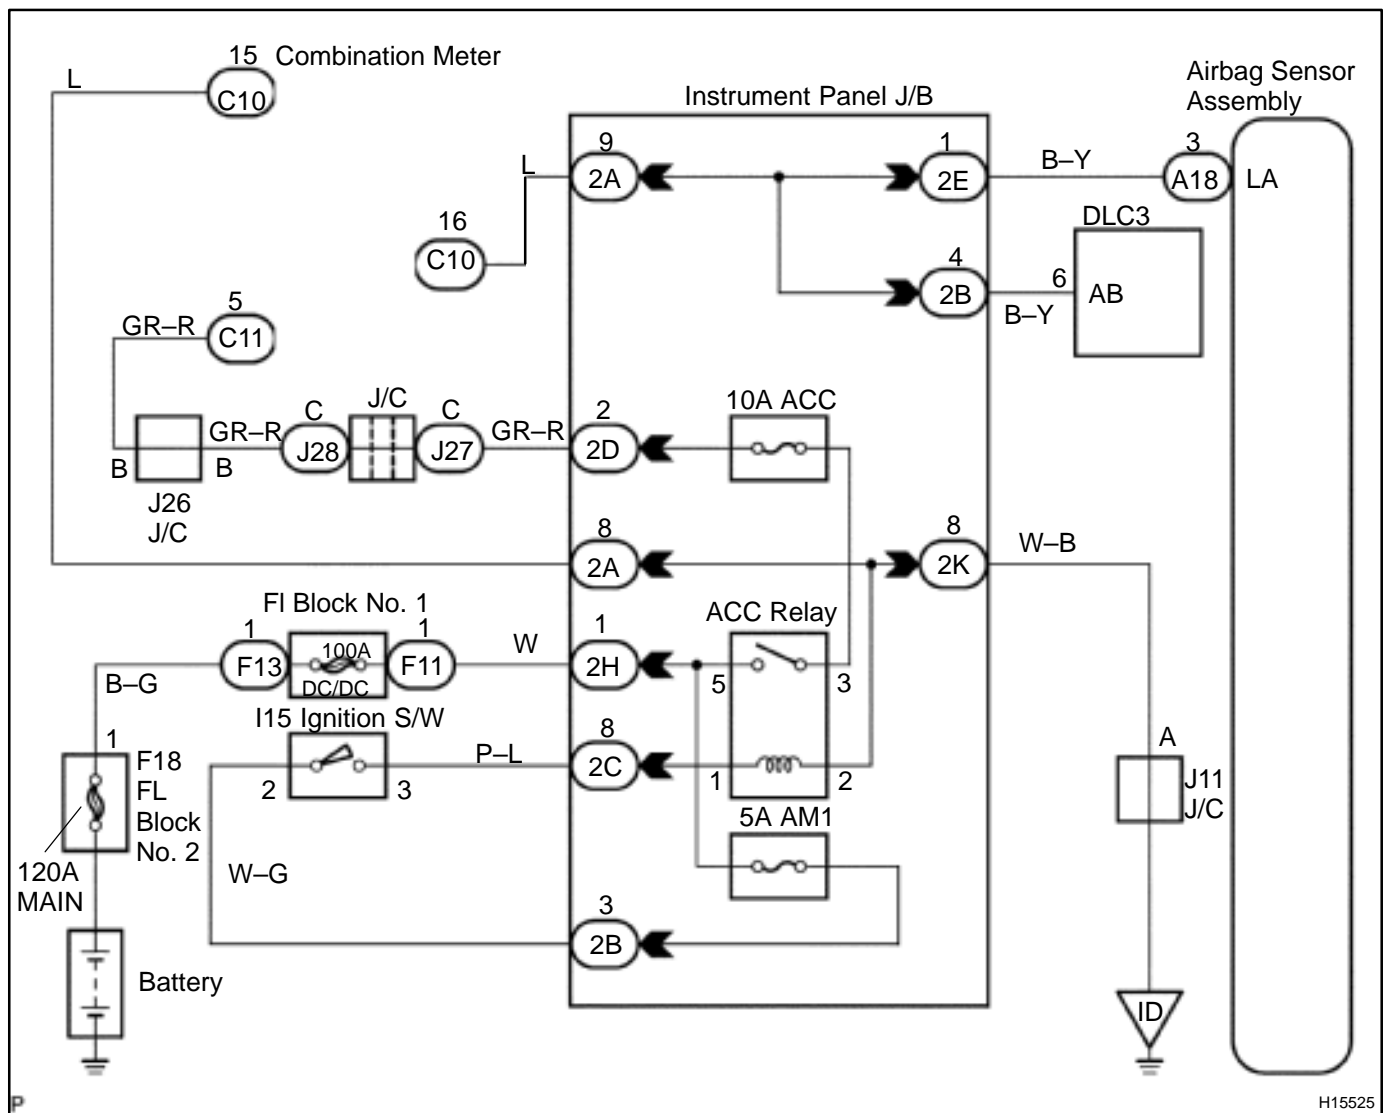


INSPECTION PROCEDURE**Always lights up, when ignition switch is in LOCK position**

- | | |
|---|--|
| 1 | Prepare for inspection (See step 1 on page DI-629). |
|---|--|



- | | |
|---|----------------------------------|
| 2 | Does SRS warning light turn off? |
|---|----------------------------------|

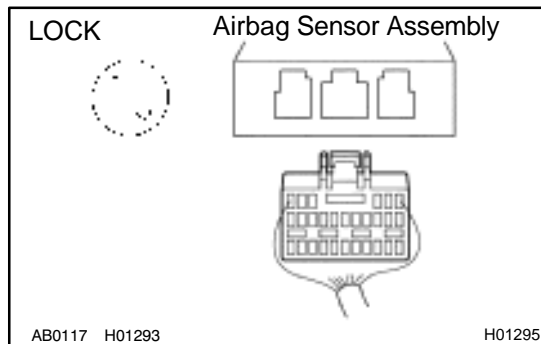
**PREPARATION:**

- (a) Turn the ignition switch to LOCK.
- (b) Disconnect negative (–) terminal cable from the battery, and wait at least for 90 seconds.
- (c) Disconnect the airbag sensor assembly connector.
- (d) Connect negative (–) terminal cable to the battery.

CHECK:

Check operation of SRS warning light.

NO**Check SRS warning light circuit or terminal A/B circuit of DLC3.****YES****Replace airbag sensor assembly.**

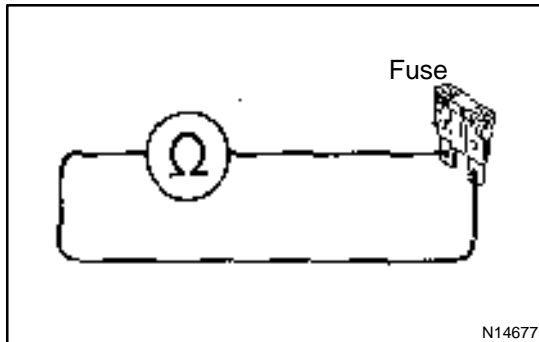Does not light up, when ignition switch is turned to ON**1 Check AM2 Fuse.****PREPARATION:**


Remove the AM2 fuse.

CHECK:

Check continuity of the AM2 fuse.

OK:**Continuity****HINT:**

- Fuse may be burnt out even if it appears to be OK during visual inspection.
- If fuse is OK, install it.

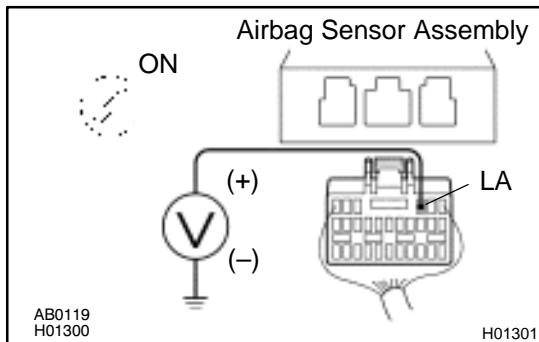NG**Go to step 4.****OK****2 Prepare for inspection (See step 1 on page DI-629).****3 Check SRS warning light circuit.****PREPARATION:**

- Disconnect the airbag sensor assembly connector.
- Connect negative (–) terminal cable to the battery.
- Turn the ignition switch to ON.

CHECK:

Measure the voltage between body ground and LA terminal of the harness side connector of the airbag sensor assembly.

OK:**Voltage: 10 – 14 V****NG****Check combination meter or repair SRS warning light circuit.****OK****Replace airbag sensor assembly.**

4	Is new AM2 fuse burnt out again?
---	----------------------------------

NO

Using simulation method, reproduce malfunction symptoms (See page [IN-30](#)).

YES


Check harness between AM2 fuse and SRS warning light.

Tc Terminal Circuit

CIRCUIT DESCRIPTION

By connecting terminals Tc and CG of the DLC3 the airbag sensor assembly is set in the DTC output mode. The DTCs are displayed by blinking the SRS warning light.


WIRING DIAGRAM

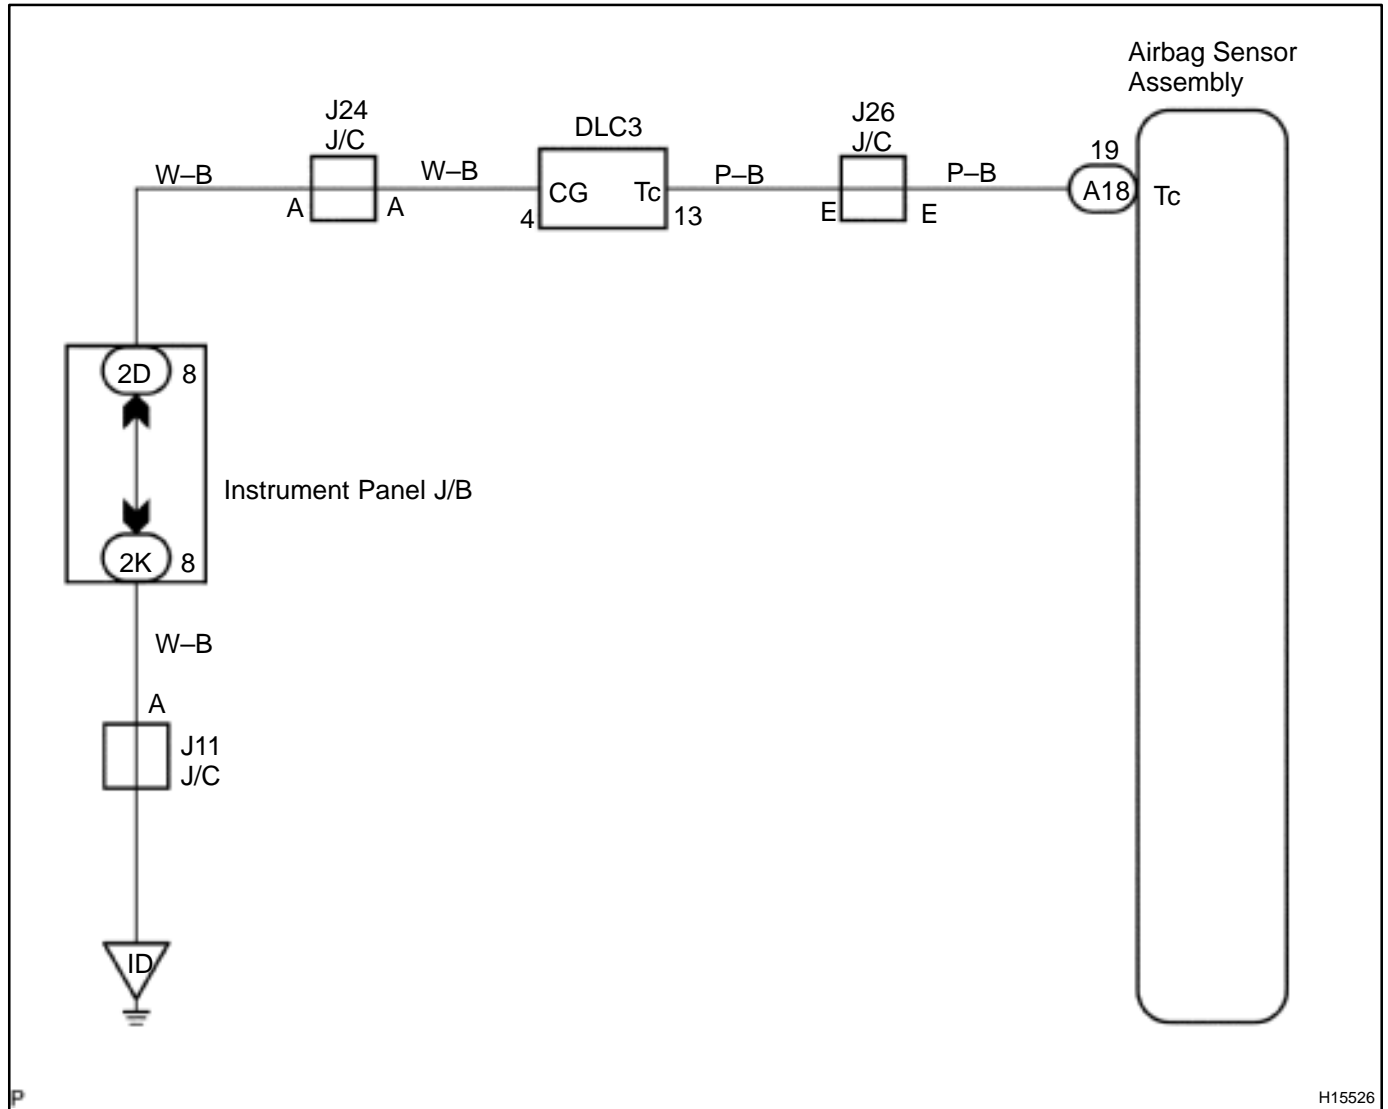

INSPECTION PROCEDURE

If the DTC is not displayed, do the following troubleshooting.

1 Does SRS warning light light up for approx. 6 seconds?

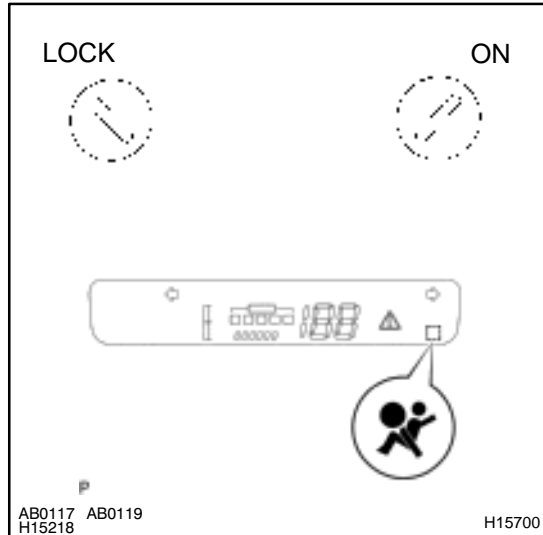**PREPARATION:**


Check operation of the SRS warning light after ignition switch is turned from LOCK position to ON position.

NO

Check SRS warning light system (See page DI-632).

YES

2 Check voltage between terminals Tc and CG of DLC3.

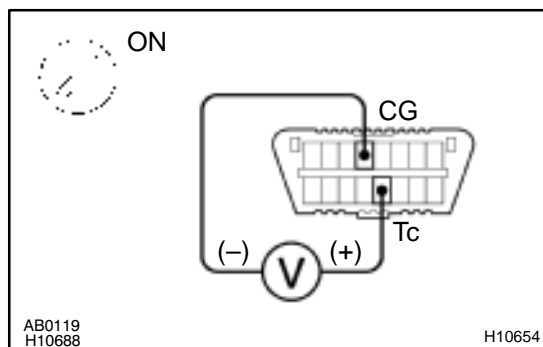**PREPARATION:**

Turn the ignition switch to ON.

CHECK:

Measure the voltage between terminals Tc and CG of DLC3.

OK:


Voltage: 10 – 14 V

OK

Go to step 4.

NG

3 Check voltage between terminal Tc of DLC3 and body ground.

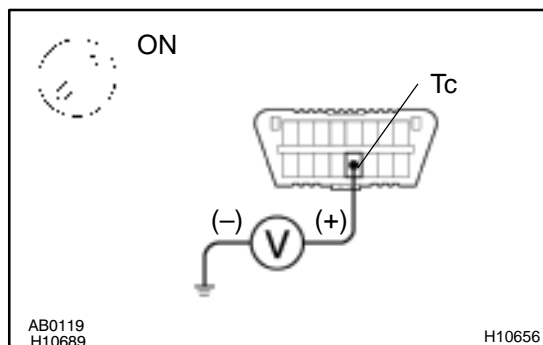**CHECK:**

Measure the voltage between terminal Tc of DLC3 and body ground.

OK:


Voltage: 10 – 14 V

OK

Check harness between terminal E1 of DLC3 and body ground.

NG

4 Check airbag sensor assembly.

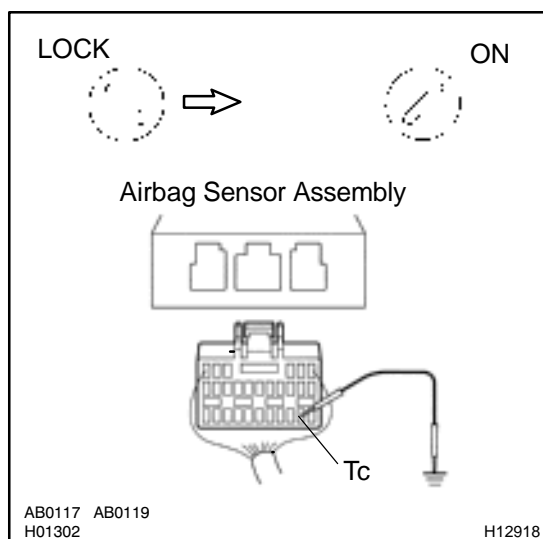**PREPARATION:**

- Turn the ignition switch to LOCK.
- Disconnect negative (–) terminal cable from the battery, and wait at least for 90 seconds.
- Disconnect the airbag sensor assembly connector.
- Insert service wire into terminal Tc from back side as shown in the illustration.
- Connect the airbag sensor assembly connector with service wire.
- Connect negative (–) terminal cable to the battery.
- Turn the ignition switch to ON and wait at least for 20 seconds.
- Connect service wire of terminal Tc to body ground.

CHECK:

Check operation of the SRS warning light.

OK:

SRS warning light comes on.

NOTICE:

Pay due attention to the terminal connecting position to avoid a malfunction.

OK


Check harness between the airbag sensor assembly and DLC3.

NG

Replace airbag sensor assembly.

If the DTC is displayed without a DTC check procedure, perform the following troubleshooting.

- | | |
|---|---|
| 1 | Check resistance between terminal Tc of airbag sensor assembly and body ground. |
|---|---|

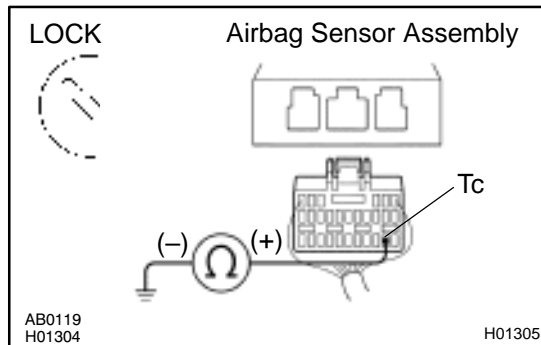

PREPARATION:

- (a) Turn the ignition switch to LOCK.
- (b) Disconnect negative (-) terminal cable from the battery, and wait at least for 90 seconds.
- (c) Disconnect the airbag sensor assembly connector.

CHECK:

Check resistance between terminal Tc of the airbag sensor assembly connector and body ground.

OK:


Resistance: 1 MΩ or Higher

NG

Repair or replace harness or connector.

OK


Replace airbag sensor assembly.

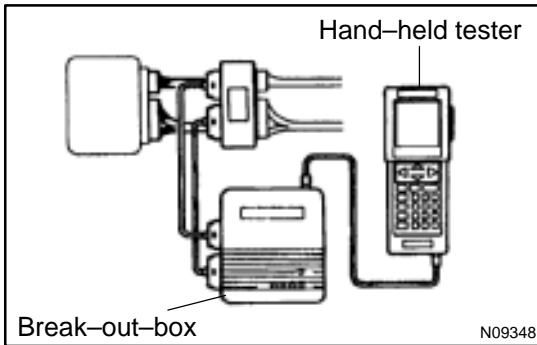

PRE-CHECK

1. ECU TERMINAL VALUES MEASUREMENT BY USING BREAK-OUT-BOX AND HAND-HELD TESTER

- Hook up the break-out-box and hand-held tester to the vehicle.
- Read the ECU input/output values by following the prompts on the tester screen.
- Please refer to the hand-held tester has a "Snapshot" function. This records the measured data and is effective in the diagnosis of intermittent problems.

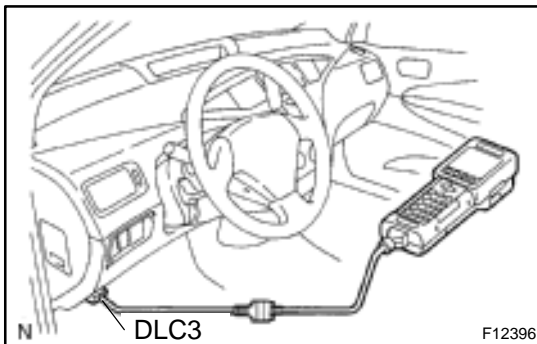

2. USING HAND-HELD TESTER

- Hook up the hand-held tester to the DLC3.
- Monitor the ECU data by following the prompts on the tester screen.


HINT:

Hand-held tester has a "Snapshot" function which records the monitored data.

Please refer to the hand-held tester operator's manual for further details.


3. DTC CLEARANCE

DTC can be deleted using a hand-held tester. If there is no hand-held tester or it cannot be used, disconnect the auxiliary battery for 1 min. or more and connect it again.

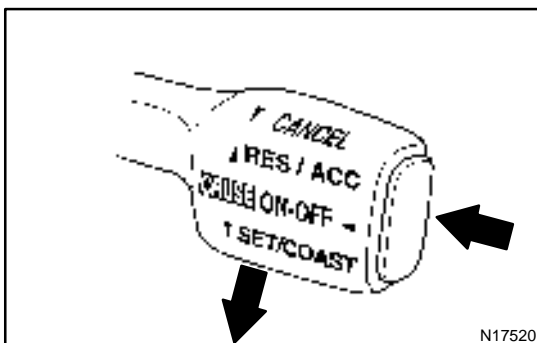


4. PROBLEM SYMPTOM CONFIRMATION (ROAD TEST)


- Inspect the SET switch.
 - Push the main switch ON.
 - Drive at a desired speed (40 km/h (25 mph) or higher).
 - Press the control switch to the SET/COAST.
 - After releasing the switch, check that the vehicle cruises at the desired speed.

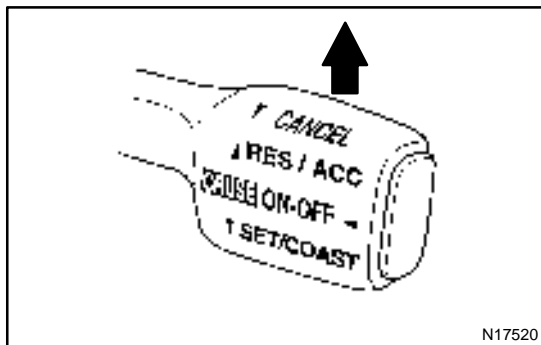

- (b) Inspect the ACCEL switch.
- (1) Push the main switch ON.
 - (2) Drive at a desired speed (40 km/h (25 mph) or higher).
 - (3) Check that the vehicle speed increases while the control switch is turned to RES/ACC, and that the vehicle cruises at the set speed when the switch is released.
 - (4) Momentarily press the control switch upward in the RES/ACC and then immediately release it. Check that the vehicle speed increases by about 1.5 km/h (Tap-up function).

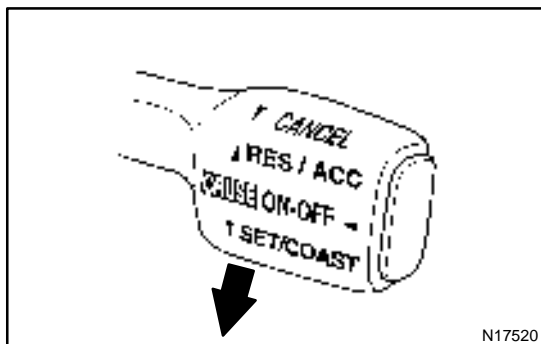


- (c) Inspect the COAST switch.
- (1) Push the main switch ON.
 - (2) Drive at a desired speed (40 km/h (25 mph) or higher).
 - (3) Check that the vehicle speed decreases while the control switch is turned to SET/COAST, and the vehicle cruises at the set speed when the switch is released.
 - (4) Momentarily press the control switch is turned to SET/COAST, and then immediately release it. Check that the vehicle speed decreases by about 1.5 km/h (Tap-down function).

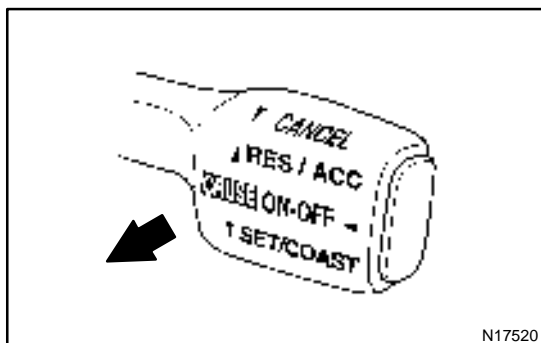


- (d) Inspect the CANCEL switch.
- (1) Push the main switch ON.
 - (2) Drive at a desired speed (40 km/h (25 mph) or higher).
 - (3) When operating one of the followings, check that the cruise control system is cancelled and that the normal driving mode is reset.
 - Depress the brake pedal
 - Shift to except D range (A/T)
 - Push the main switch OFF

- Pull the cruise control switch to CANCEL

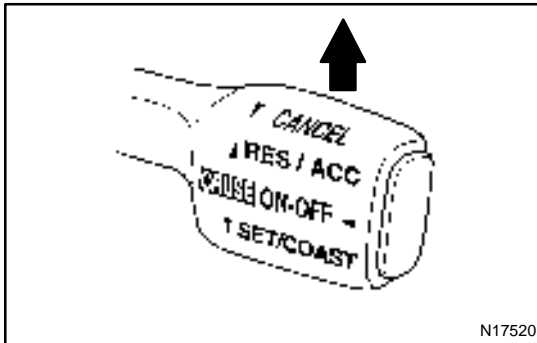

- (e) Inspect the RESUME switch.
- (1) Push the main switch ON.
 - (2) Drive at a desired speed (40 km/h (25 mph) or higher).
 - (3) When operating one of the followings, check that the cruise control system is cancelled and that the normal driving mode is reset.
 - Depress the brake pedal
 - Shift to except D range (A/T)
 - Pull the cruise control switch to CANCEL
 - (4) After the control switch is turned to RES/ACC at the driving speed of more than 40 km/h (25 mph), check that the vehicle restores the speed prior to the cancellation.

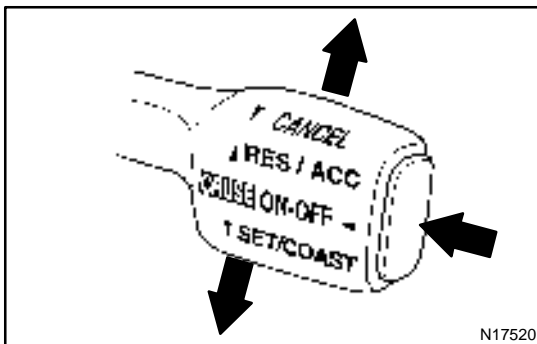

5. INPUT SIGNAL CHECK (Using hand-held tester)

- (a) Connect the hand-held tester to DLC3
- (b) Check the control switch (MAIN, CANCEL, SET/COAST, RES/ACC)

CIRCUIT INSPECTION

D17NI-01

DTC	P1520	Stop light switch circuit
------------	--------------	----------------------------------

CIRCUIT DESCRIPTION

When the brake pedal is depressed, the stop light switch sends a signal to the hybrid vehicle control ECU. When the hybrid vehicle control ECU receives this signal, it cancels the cruise control.

A fail-safe function is provided so that the cancel functions normally, even if there is a malfunction in the stop light signal circuit.

The cancel condition is that battery voltage is supplied to terminal STP.

When the brake is on, battery voltage is normally applied through the STOP fuse and stop light switch to terminal STP of the hybrid vehicle control ECU, and the hybrid vehicle control ECU turns the cruise control OFF.

If the harness connected to terminal STP has an open circuit, terminal STP will have battery voltage and the cruise control will be turned OFF.

DTC No.	Detection Item	Trouble Area
P1520	Stop light switch circuit.	<ul style="list-style-type: none"> • Stop light switch • Harness or connector between hybrid vehicle control ECU and stop light switch circuit • Hybrid vehicle control ECU

INSPECTION PROCEDURE

1 Check operation of stop light.

CHECK:


Check that stop light comes on when brake pedal is depressed, and turns off when brake pedal is released.

NG

Check stop light system (See page [BE-2](#)).

OK

2 Check voltage between terminal STP of hybrid vehicle control ECU connector and body ground.

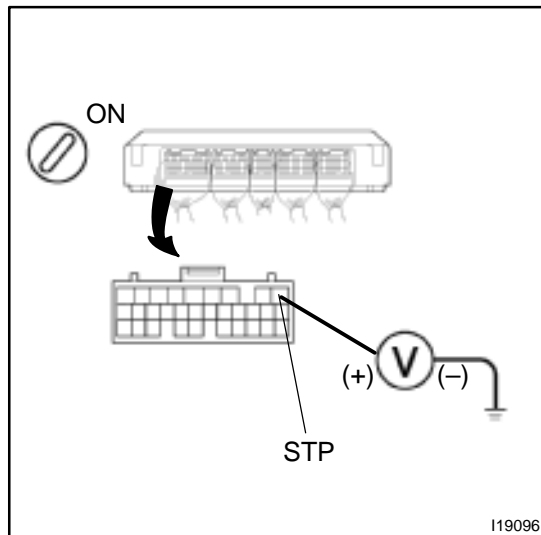**PREPARATION:**

- (a) Remove the hybrid vehicle control ECU with connectors still connected.
- (b) Turn ignition switch ON.

CHECK:

Measure voltage between terminal STP of hybrid vehicle control ECU connector and body ground, when the brake pedal is depressed and released.

OK:


Depressed	10 – 14 V
Released	Below 1 V

OK

Proceed to next circuit inspection shown in problem symptom table (See page [DI-648](#)).

NG

3 Check voltage between terminal ST1– of hybrid vehicle control ECU connector and body ground.

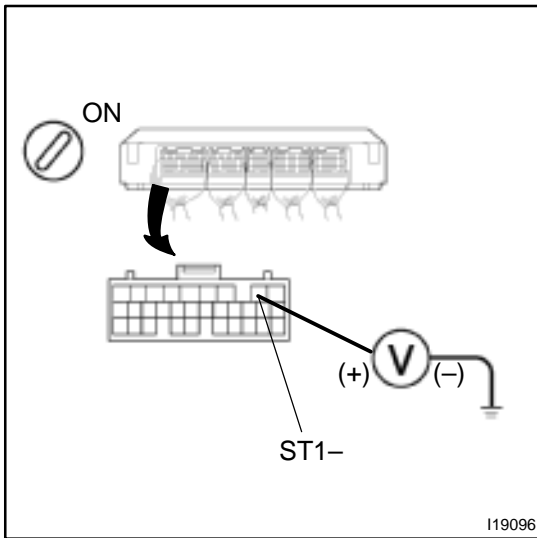

PREPARATION:

- Remove the hybrid vehicle control ECU with connectors still connected.
- Turn ignition switch ON.

CHECK:

Measure voltage between terminal ST1– of hybrid vehicle control ECU connector and body ground, when the brake pedal is depressed and released.

OK:

Depressed	Below 1 V
Released	10 – 14 V

OK

Proceed to next circuit inspection shown in problem symptoms table (See page [DI-648](#)).

NG

4 Check wire harness and connector between terminal STP of hybrid vehicle control ECU and stop light switch, and terminal ST1– of hybrid vehicle control ECU and stop light switch (See page [IN-41](#)).

NG

Repair or replace harness or connector.

OK

Check and replace hybrid vehicle control ECU (See page [DI-174](#)).

Power source circuit

CIRCUIT DESCRIPTION

This circuit provides power to operate the hybrid vehicle control ECU.

WIRING DIAGRAM

See page [DI-156](#).

INSPECTION PROCEDURE

1	Check IGN and EFI fuse.
---	-------------------------

CHECK:

Check continuity of IGN and EFI fuse.

OK:

Continuity

NG

Replace the failure fuse.

OK

2	Check voltage between terminals IGSW, BATT and GND of hybrid vehicle control ECU connector (See page IN-41).
---	---

PREPARATION:

- (a) Turn ignition switch OFF.
- (b) Disconnect the hybrid vehicle control ECU connector.

CHECK:

Measure voltage between terminals IGSW, BATT and GND

OK:

Voltage: 10 – 14 V

OK

Proceed to next circuit inspection shown in problem symptoms table (See page [DI-648](#)).

NG

3	Check wireharness and connector between hybrid vehicle control ECU and body ground (See page IN-41).
---	---

NG

Repair or replace wireharness or connector.

OK


Check and repair wireharness and connector between hybrid vehicle control ECU and battery (See page [IN-41](#)).

CRUISE MAIN Indicator Light Circuit

CIRCUIT DESCRIPTION

When the cruise control main switch is turned ON, CRUISE MAIN indicator light lights up.

WIRING DIAGRAM

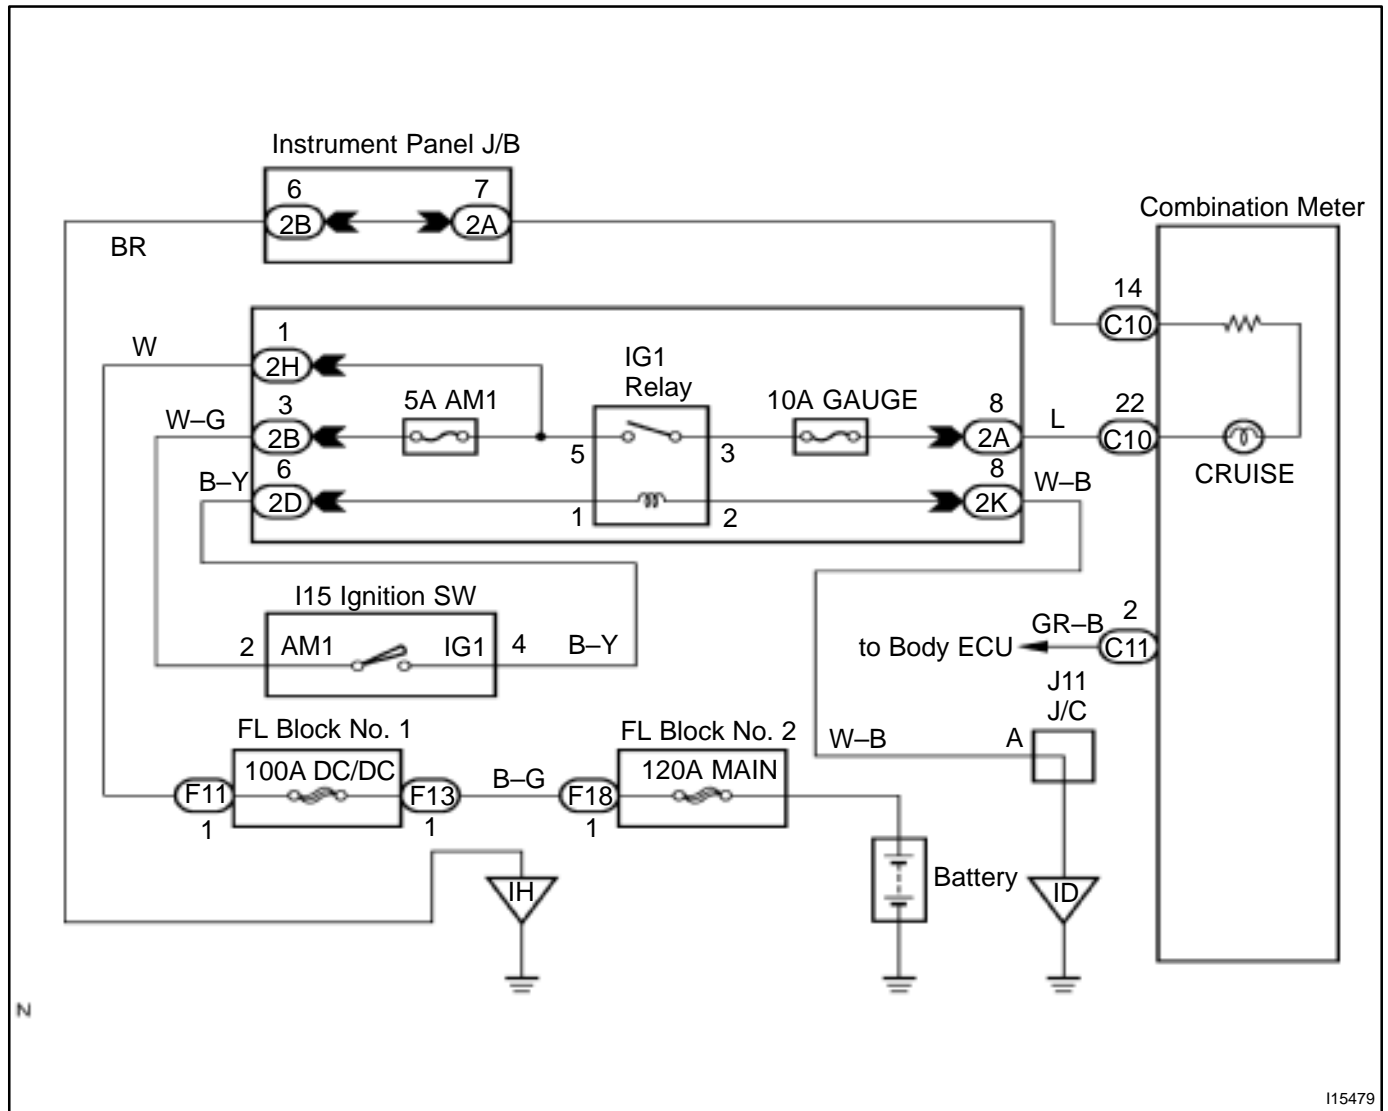

cardiagn.com

INSPECTION PROCEDURE

1	Check combination meter (See page BE-2).
---	---

NG**Replace combination meter.****OK****Check and replace hybrid vehicle control ECU (See page [DI-174](#)).**

PRE-CHECK

1. BEFORE CHECK

Since a trouble symptom may result from multiple causes, check not only the part where a user complains of but also the following items in order to be sure no other trouble is identified.

- Fuse related parts
- Wire harness related parts
- Valve related parts

NOTICE:

- **Setting the ignition switch to START temporarily stops all meter operation, however, this is not an error.**
- **When replacing the combination meter ECU, carefully avoid any contact with the IC.**
- **Removing a battery terminal during engine operation may cause a reversed current and lead to malfunction.**
- **When disconnecting any connector or terminal, be sure to disconnect the battery terminal.**

2. FUEL GAUGE DIAGNOSIS CHECK

(a) Fuel emergency display

HINT:


If FR voltage input to the fuel sender gauge is abnormal (4.8 V or more, or 0.06 V or less) due to any error, an emergency will be displayed.

(b) Display:


Immediately after the ignition switch is ON, all of the segments flash.

Diagnosis display	Trouble Item	Plausible Cause
All segments flashing (Flashing pattern No. 1) Cycle: 1.2 sec Duty: 50 %	Multiple communication error	Communication is cut off. 4. Body ECU faulty 5. Engine ECU faulty 6. Open or short in wire harness for communication HINT: Referring to the attached reference material 1 or 2, specify the main cause
All segments flashing (Flashing pattern No. 2) (300 msec. ON, 300 msec OFF) x 2 + 1.2 sec. OFF	Sender gauge related trouble	1. Sender gauge faulty 2. Open or short in wire harness
Display segments and "E" flashing. (Flashing pattern No. 1) Cycle: 1.2 sec Duty: 50 %	Temperature sensor (located in the tank) related trouble	1. Temperature sensor faulty 2. Open or short in wire harness
Display segments and "E" flashing. (Flashing pattern No. 2) (300 msec. ON, 300 msec. OFF) x 2 + 1.2 sec. OFF	Indication sensor (located in the meter) trouble	1. Combination meter faulty
Segment No. 1 flashing (Flashing pattern No. 1) Cycle: 1.2 sec Duty: 50 %	This does not mean any failure. When a battery is connected, it continues flashing until the volume is confirmed.	This occurs when the battery is turned ON. HINT: Low fuel warning: Cycle: 0.6 sec.; Duty: 50 %

Flashing pattern No.1

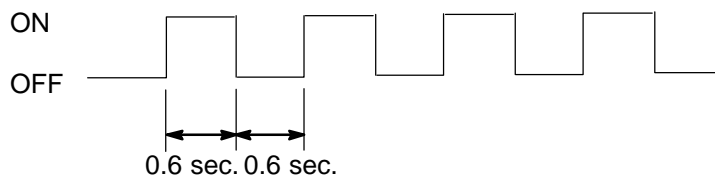


Flashing pattern No.2

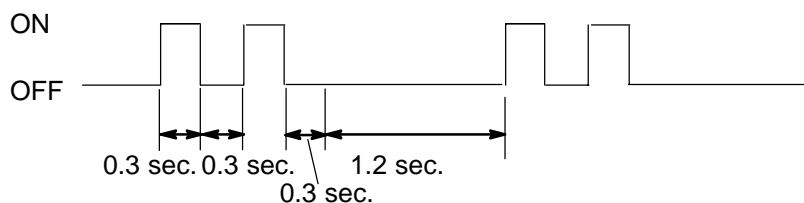

TERMINALS OF ECU

Disconnect connector "A" and "B" from the combination meter and inspect the connectors on the wire harness side as shown in the table.

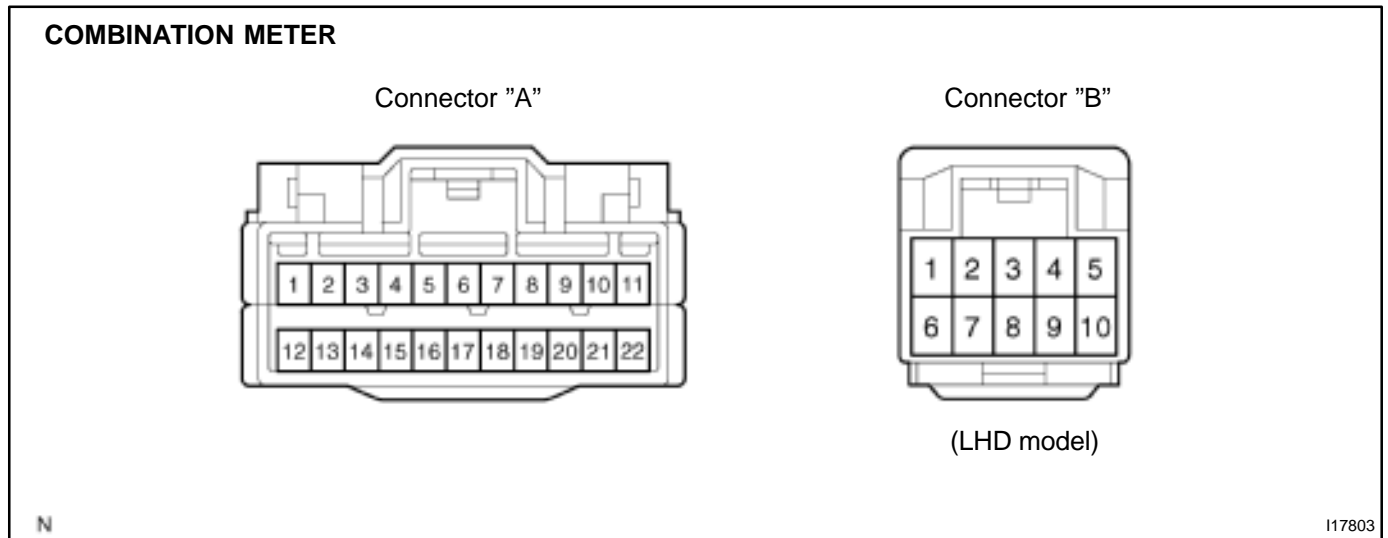

Tester connection	Condition	Specified condition
A1 – Ground (ILL – Body ground)	Ignition switch ON and tail cancel switch ON or OFF	Below 1V or 4.5 – 5.5 V
A2 – Ground (E – Body ground)	Constant	Continuity
A3 – Ground (OPO – Body ground)	Ignition switch ON and trip reset switch ON or OFF	Below 1V or 4.5 – 5.5 V
A9 – Ground (SI – Body ground)	Ignition switch ON and slowly turn drive wheel	Below 1V or 10 – 14 V
A10 – Ground (LP – Body ground)	Ignition switch ON and ABS indicator ON or OFF	Below 1V or 10 – 14 V
A11 – Ground (L – Body ground)	Ignition switch ON	Pulse generation
A13 – Ground (+S – Body ground)	Ignition switch ON and slowly turn drive wheel	Below 1V or 10 – 14 V
		Below 1V or 4.5 – 5.5 V
A14 – Ground (ES – Body ground)	Constant	Continuity
A15 – Ground (EP – Body ground)	Constant	Continuity
A16 – Ground (SW – Body ground)	Ignition switch ON and air bag indicator light ON or OFF	Below 1V or 10 – 14 V
A17 – Ground (S – Body ground)	Headlight dimmer switch Hi or Low	Below 1V or 10 – 14 V
A18 – Ground (B – Body ground)	Ignition switch ON and turn signal switch right	Below 1V or 10 – 14 V
A19 – Ground (B – Body ground)	Ignition switch ON and turn signal switch left	Below 1V or 10 – 14 V
A21 – Ground (B – Body ground)	Constant	10 – 14 V
A22 – Ground (IG – Body ground)	Ignition switch OFF or ON	Below 1V or 10 – 14 V

DIAGNOSTICS – COMBINATION METER SYSTEM

B1 – Ground (ROUT – Body ground)	Ignition switch ON and shift lever position is "R" or except "R"	Below 1V or 10 – 14 V
B2 – Ground (MPX+ – Body ground)	Ignition switch ON	Pulse generation
B3 – Ground (MPX – Body ground)	Ignition switch ON	Pulse generation
B5 – Ground (ACC – Body ground)	Ignition switch ACC	10 – 14 V

PROBLEM SYMPTOMS TABLE

TROUBLESHOOTING:

Flow chart No.	Symptom	See page
1	Check the communication between the combination meter and the multiplex communication circuit.	DI-671
2	The whole meter does not function	DI-672
3	The margin of error in speedometer is large. Or it remains as 0 mph.	DI-673
4	Fuel receiver gauge is inoperative or improper.	DI-674
5	Indicators or warning lights do not light up.	DI-676

Fuel gauge:

Symptom	Suspect Area	See page
Displayed level is higher or lower than the actual level.	1. Inclination sensor resetting 2. Body ECU	BE-47 IN-41

General:

Symptom	Suspect area
Meter display does not properly function.	3. Combination meter ECU
Entirely black screen appears.	1. Fuse 2. Wire harness and connector 3. Combination meter ECU
Turning the light control switch ON does not dim the light.	1. Illumination switch 2. Wire harness and connector 3. Combination meter ECU
Brightness cannot be changed by the illumination switch operation.	1. Illumination switch 2. Wire harness and connector 3. Combination meter ECU

Speedometer:

Symptom	Suspect area
Improper display (Remained as 0 km/h)	1. Accessory that utilizes vehicle speed signals 2. Brake ECU 3. Combination meter ECU 4. Wire harness and connector
Speedometer only does not light up.	1. Combination meter ECU
Abnormal display (Incomplete numbers displayed)	1. Combination meter ECU
Displayed value changes frequently or sharply.	1. Accessory that utilizes vehicle speed signals 2. Brake ECU 3. Combination meter ECU 4. Wire harness and connector
Margin of error in speedometer is large.	1. Accessory that utilizes vehicle speed signals 2. Brake ECU 3. Combination meter ECU 4. Wire harness and connector

ODO/TRIP Meter:

Symptom	Suspect area
ODO/TRIP only does not light up.	1. Combination meter ECU
Abnormal display (Incomplete number displayed)	1. Combination meter ECU
Both meters do not integrate values. (When speedometer is normal)	1. Combination meter ECU
Trip meter only does not integrate values.	1. ODO/TRIP switch 2. Combination meter ECU

DIAGNOSTICS – COMBINATION METER SYSTEM

Trip meter cannot be reset.	1. ODO/TRIP switch 2. Combination meter ECU
Display cannot be shifted among ODO, TRIPA and TRIPB.	1. ODO/TRIP switch 2. Combination meter ECU
Without resetting, the display returns to 0.0 km.	1. ODO/TRIP switch 2. +B wire harness 3. Combination meter ECU
Error of accumulated distance is large.	1. Accessory that utilizes vehicle speed signals. 2. GND wire harness 3. Brake ECU 4. Wire harness and connector 5. Combination meter ECU


Others:

Symptom	Suspect area
Some indicators or warning lights are always ON.	1. Meter circuit plate 2. Corresponding switch and ECU 3. Combination meter ECU 4. Multiplex communication circuit
Some indicators or warning lights do not light up.	1. Bulb 2. Meter circuit plate 3. Corresponding switch and ECU 4. Combination meter ECU 5. Multiplex communication circuit
Buzzer does not stop.	1. Combination meter ECU 2. Corresponding switch and ECU

5. Indicators or warning lights do not light up. (*multiplex communication circuit input indicator or warning)

INSPECTION PROCEDURE



1	Multiplex communication circuit input indicator or warning.
---	---



2	Communication check.
---	----------------------

CHECK:

Check if the communication between the combination meter and the multiplex communication circuit is normal or not.





Communication error. Wire harness faulty.

3	Check the bulb or circuit plate.
---	----------------------------------

CHECK:

Check if the bulb circuit plate is normal or not. Check open or short circuit in wire harness.






Bulb or circuit plate faulty.

4	Check the corresponding switch or ECU.
---	---

CHECK:

Check if the corresponding switch or ECU is normal or not.




*:

Multiplex communication input	Single Communication Input
OPEN DOOR WARNING	HI-BEAM INDICATOR
BRAKE WARNING	TURN SIGNAL IND
OUTPUT CONTROL INDICATOR	SRS WARNING
SHIFT POSITION INDICATOR	ABS WARNING
SEAT BELT WARNING	CHECK ENGINE WARNING
READY INDICATOR	
WATER TEMPERATURE WARNING	
OIL PRESSURE WARNING	
CRUISE CONTROL INDICATOR	
TAIL INDICATOR	
DISCHARGE WARNING	

TERMINALS OF ECU

BODY ECU

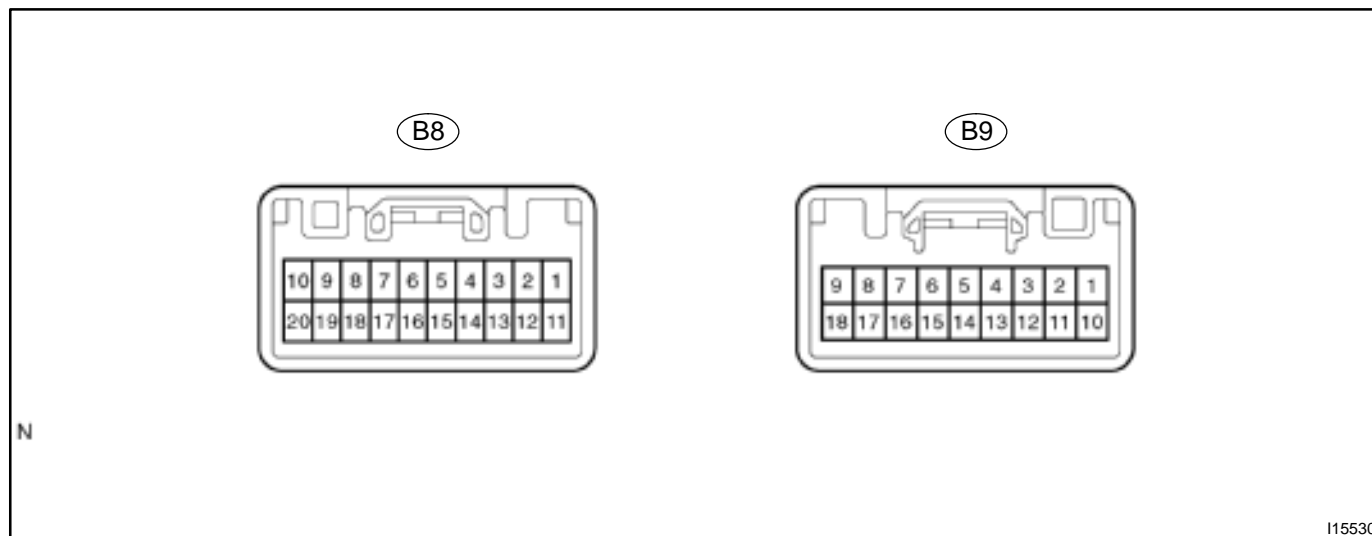

Symbols (Terminals No.)	Wiring Color	Condition	STD Voltage (V)
FLD ↔ E (B8-2 – B9-1)	G – B ↔ W – B	Power window (FR LH) is not operating	Below 1 v
		Power window (FR LH) is operating downward	10 – 14 v
FLU ↔ E (B8-3 – B9-1)	R – W ↔ W – B	Power window (FR LH) is not operating	Below 1 v
		Power window (FR LH) is operating upward	10 – 14 v
LUG ↔ E (B8-5 – B9-1)	L – B ↔ W – B	Luggage compartment door key lock and unlock switch is ON	Below 1 v
		Luggage compartment door key lock and unlock switch is OFF	10 – 14 v
RX (B8-6)	Y	AVC – LAN communication circuit	—
PRG (B8-7)	B – R	Wireless door lock ECU communication circuit	—
RDA (B8-8)	L	Wireless door lock ECU communication circuit	—
HR ↔ E (B8-10 – B9-1)	B – R ↔ W – B	Horn switch is ON	Below 1 v
		Horn switch is OFF	10 – 14 v
BDR – – Body ground (B8-11 – Body ground)	W – L ↔ Body ground	Constant	10 – 14 v
PCTY ↔ E (B8-12 – B9-1)	R – W ↔ W – B	Passenger door courtesy switch is OFF	Below 1 v
		Passenger door courtesy switch is ON	10 – 14 v
HCTY ↔ E (B8-13 – B9-1)	R – W ↔ W – B	Engine hood courtesy switch is OFF	Below 1 v
		Engine hood courtesy switch is ON	10 – 14 v
LCTY ↔ E (B8-14 – B9-1)	R – L ↔ W – B	Luggage door courtesy switch is OFF	Below 1 v
		Luggage door courtesy switch is ON	10 – 14 v
MPX+ (B8-15)	GR – B	Multiplex communication circuit	—
MPX- (B8-16)	GR	Multiplex communication circuit	—
LSWP ↔ E (B8-17 – B9-1)	W ↔ W – B	Passenger door unlock detection switch OFF (door unlocked)	Below 1 v
		Passenger door unlock detection switch ON (door locked)	10 – 14 v
LSR ↔ E (B8-18 – B9-1)	W – L ↔ W – B	Rear door unlock detection switch OFF (door unlocked)	Below 1 v
		Rear door unlock detection switch ON (door locked)	10 – 14 v
SH ↔ E (B8-20 – B9-1)	B – W ↔ W – B	Theft deterrent system is not operating	Below 1 v
		Theft deterrent system is operating	10 – 14 v
E – Body ground (B9-1 – Body ground)	W – B ↔ Body ground	Constant	Below 1 v

DIAGNOSTICS – BODY CONTROL SYSTEM

Symbols (Terminals No.)	Wiring Color	Condition	STD Voltage (V)
HRLY ↔ E (B9-2 – B9-1)	R – W ↔ W – B	Light control switch OFF	Below 1 v
		Light control switch TAIL or HEAD	10 – 14 v
PKBL ↔ E (B9-3 – B9-1)	P – L ↔ W – B	Passenger side buckle switch ON (belt fastened)	Below 1 v
		Passenger side buckle switch OFF (belt fastened)	10 – 14 v
DKBL ↔ E (B9-5 – B9-1)	G – O ↔ W – B	Driver side buckle switch ON (belt fastened)	Below 1 v
		Driver side buckle switch OFF (belt fastened)	10 – 14 v
L2 ↔ E (B9-7 – B9-1)	G ↔ W – B	Door lock manual switch OFF or UNLOCK	Below 1 v
		Door lock manual switch LOCK	10 – 14 v
B ↔ Body ground (B9-9 – Body ground)	R – G ↔ Body ground	Constant	10 – 14 v
ACTD ↔ E (B9-10 – B9-1)	R ↔ W – B	Driver door is operating	10 – 14 v
TRLY ↔ E (B9-11 – B9-1)	LG ↔ W – B	Light control switch OFF	Below 1 v
		Light control switch TAIL or HEAD	10 – 14 v
IND ↔ E (B9-13 – B9-1)	LG – B ↔ W – B	During set is theft deterrent system	10 – 14 v
L1 ↔ E (B9-14 – B9-1)	G – B ↔ W – B	Door key lock and unlock switch OFF or UNLOCK	Below 1 v
		Door key lock and unlock switch LOCK	10 – 14 v
UL1 ↔ E (B9-15 – B9-1)	R – B ↔ W – B	Door key lock and unlock switch OFF or LOCK	Below 1 v
		Door key lock and unlock switch UNLOCK	10 – 14 v
UL2 ↔ E (B9-16 – B9-1)	L – B ↔ W – B	Door lock manual switch OFF or LOCK	Below 1 v
		Door lock manual switch UNLOCK	10 – 14 v
H ↔ E (B9-17 – B9-1)	R ↔ W – B	Light control switch OFF or TAIL	Below 1 v
		Light control switch HEAD	10 – 14 v
T ↔ E (B9-18 – B9-1)	LG – B ↔ W – B	Light control switch OFF	Below 1 v
		Light control switch TAIL or HEAD	10 – 14 v

PROBLEM SYMPTOMS TABLE

POWER WINDOW CONTROL SYSTEM

Symptom	Suspect Area	See page
All the power windows does not operate.	3. Master switch circuit 4. Driver door ECU with master switch 5. Body ECU	DI-724 DI-730 IN-41
Power window does not operate.	1. Power window switch circuit 2. Body ECU	DI-726 IN-41

DOOR LOCK CONTROL

Symptom	Suspect Area	See page
Lock or unlock cannot be operated with door lock control S/W.	1. Door lock control switch circuit (Master switch) 2. Body ECU	DI-706 DI-724 IN-41
Door key linked function does not operate.	1. Door key lock and unlock switch circuit 2. Body ECU	DI-708 IN-41
Key confinement prevention function does not operate.	1. Key unlock switch circuit 2. Body ECU	DI-695 IN-41
Does not lock and unlock each door only.	1. Door lock motor circuit 2. Body ECU	DI-712 IN-41
Luggage compartment door opener function does not operate.	1. Luggage component door courtesy switch circuit 2. Body ECU	DI-722 IN-41

WIRELESS DOOR LOCK CONTROL

Symptom	Suspect Area	See page
All function of wireless door lock control system do not operate.	1. Transmitter 2. Wireless tuner circuit 3. Key unlock warning switch circuit 4. Body ECU	BE-83 DI-728 DI-695 IN-41
Lock (or unlock) function does not operate.	1. Door key lock and unlock switch circuit 2. Door unlock detection switch circuit 3. Body ECU	DI-708 DI-710 IN-41
Automatic lock function operates even if any door is opened within 30 seconds after all doors are unlocked by wireless door lock control system .	1. Door courtesy switch circuit 2. Body ECU	DI-714 IN-41

ILLUMINATED ENTRY

Symptom	Suspect Area	See page
Illuminated entry does not operate.	1. Driver door courtesy switch circuit 2. Illumination circuit 3. Body ECU	DI-714 DI-702 IN-41

HEADLIGHT AND TAILLIGHT SYSTEM:

Symptom	Suspect Area	See page
Headlight does not light up.	1. Light control switch circuit 2. Headlight control relay circuit 3. Body ECU	DI-689 DI-693 IN-41
Taillight does not light up.	1. Light control switch circuit 2. Taillight control relay circuit 3. Body ECU	DI-689 DI-691 IN-41
Auto turn-off system does not operate.	1. Driver door courtesy switch circuit 2. Body ECU	DI-714 IN-41

OTHERS

Symptom	Suspect Area	See page
Does not turn off the driver seat belt warning light	1. Driver buckle switch circuit 2. Body ECU	DI-716 IN-41
Does not turn off the passenger seat belt warning light.	1. Passenger buckle switch circuit 2. Body ECU	DI-718 IN-41
Theft deterrent indicator light does not blink when system is set.	1. Indicator light circuit 2. Body ECU	DI-704 IN-41
Body ECU does not operate.	1. Power source circuit 2. Body ECU	DI-685 IN-41


CIRCUIT INSPECTION

Power Source Circuit

CIRCUIT DESCRIPTION

This circuit provides power to operate the Body ECU.

WIRING DIAGRAM

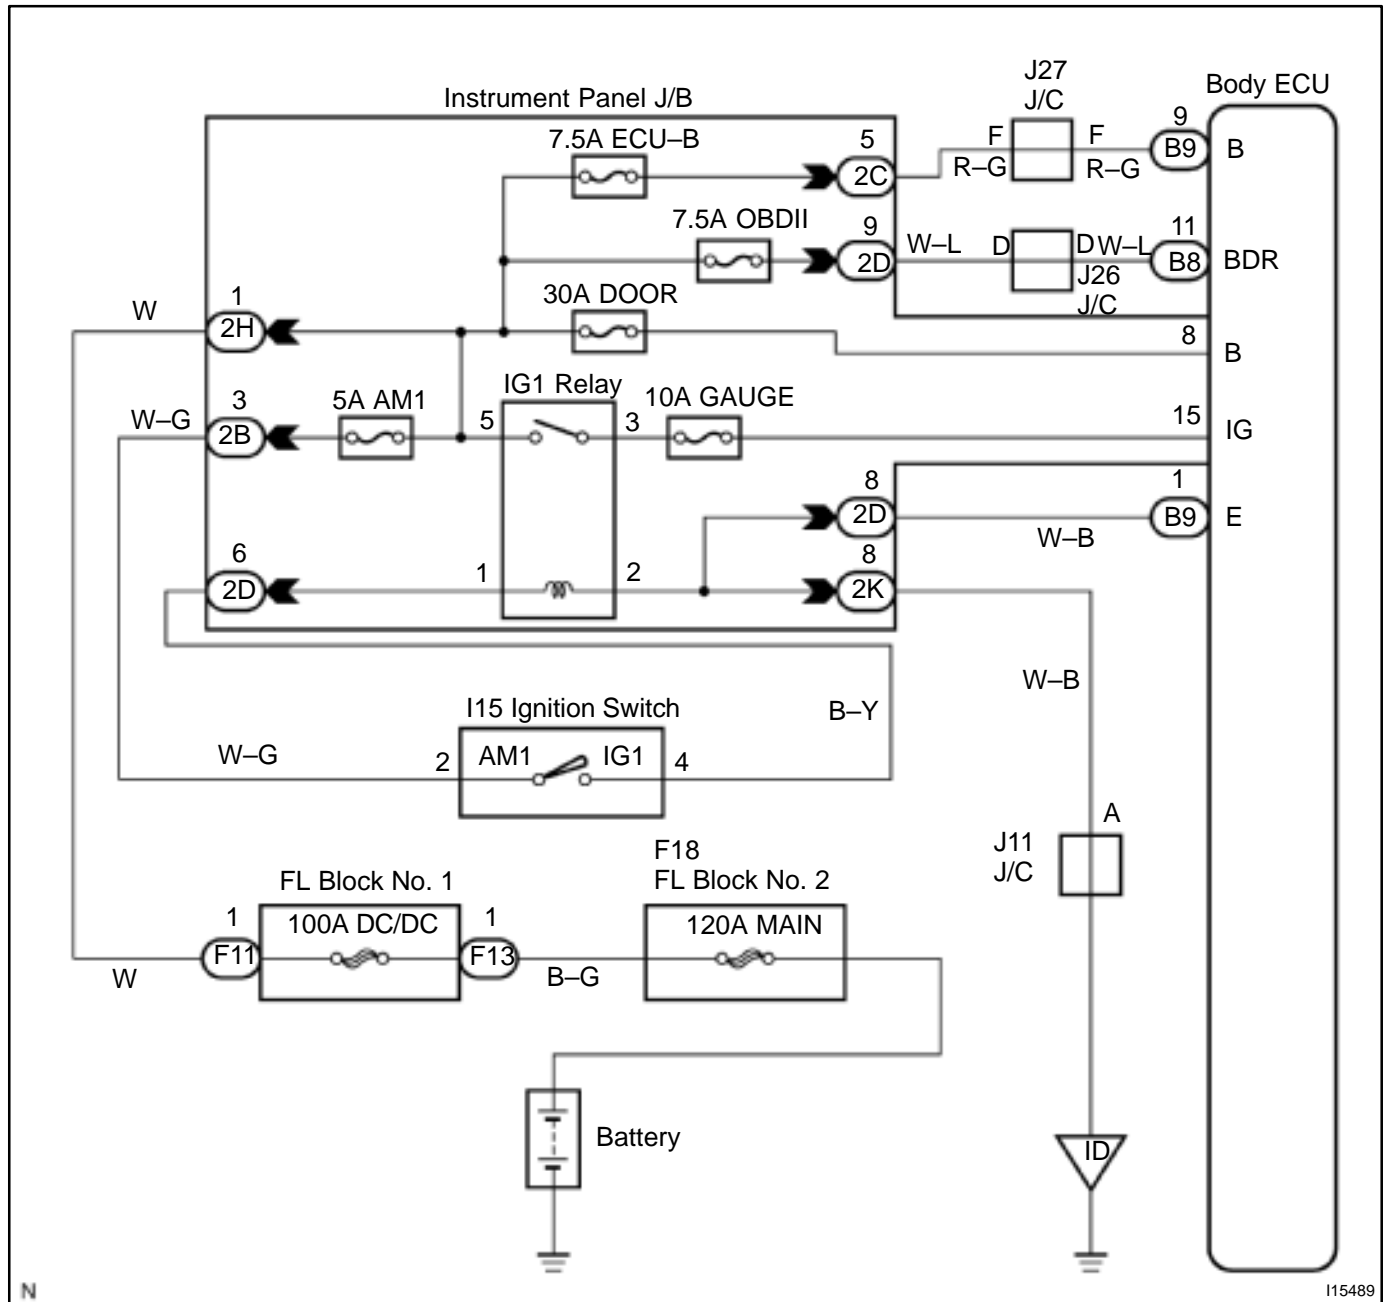

cardiagn.com

INSPECTION PROCEDURE


1	Check ECU-B, DC/DC, GAUGE and DOOR fuse.
---	--

CHECK:

Check continuity of ECU-B, DC/DC, GAUGE and DOOR fuse.

OK:

Continuity



2	Check voltage between terminals B, BDR and E of body ECU connector.
---	---

PREPARATION:



- (a) Turn ignition switch OFF.
- (b) Disconnect the Body ECU connector.

CHECK:



Measure voltage between terminals B, BDR and E.

OK:

Voltage: 10 – 14V



3	Check wireharness and connector between body ECU and body ground (See page IN-41).
---	--




Check and repair wireharness and connector between Body ECU and battery.

Ignition Switch Power Source Circuit

CIRCUIT DESCRIPTION

When the ignition switch is turned to the ACC position, battery voltage is applied to the terminal ACC of the ECU and when the ignition switch is turned to the ON position, battery voltage is applied to the terminal IG of the ECU.

WIRING DIAGRAM

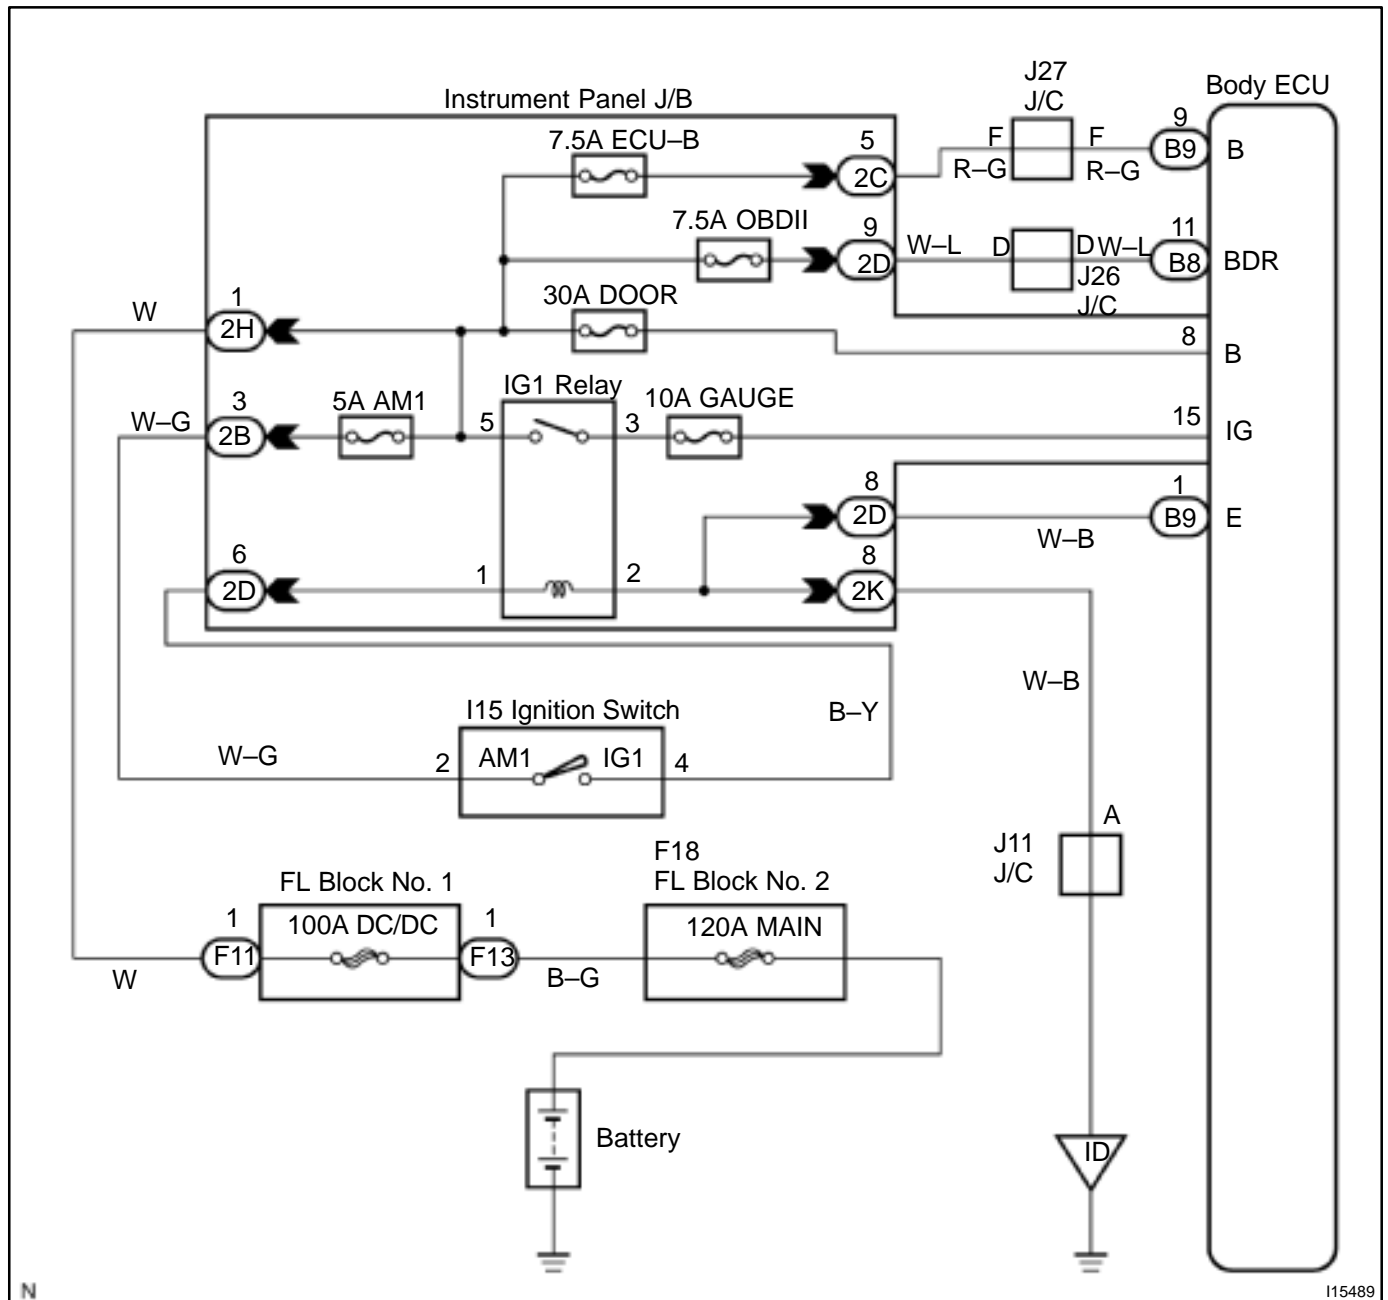

INSPECTION PROCEDURE

1	Check AM1 fuse.
---	------------------------

CHECK:

Check continuity of AM1 fuse.

OK:

Continuity

NG

Replace the failure fuse.

OK

2	Check voltage between terminals 8, 15 and E of body ECU connector.
---	---

PREPARATION:

Turn ignition switch ON.

CHECK:

Measure voltage between terminals 8, 15 and E.

OK:

Voltage: 10 – 14V

OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-683](#)).

NG

3	Check wireharness and connector between body ECU and body ground (See page IN-41).
---	---

NG

Repair or replace wireharness or connector.

OK


Check and repair wireharness and connector between body ECU and battery.

Light Control Switch Circuit

CIRCUIT DESCRIPTION

This circuit detects the state of the light control switch.

WIRING DIAGRAM

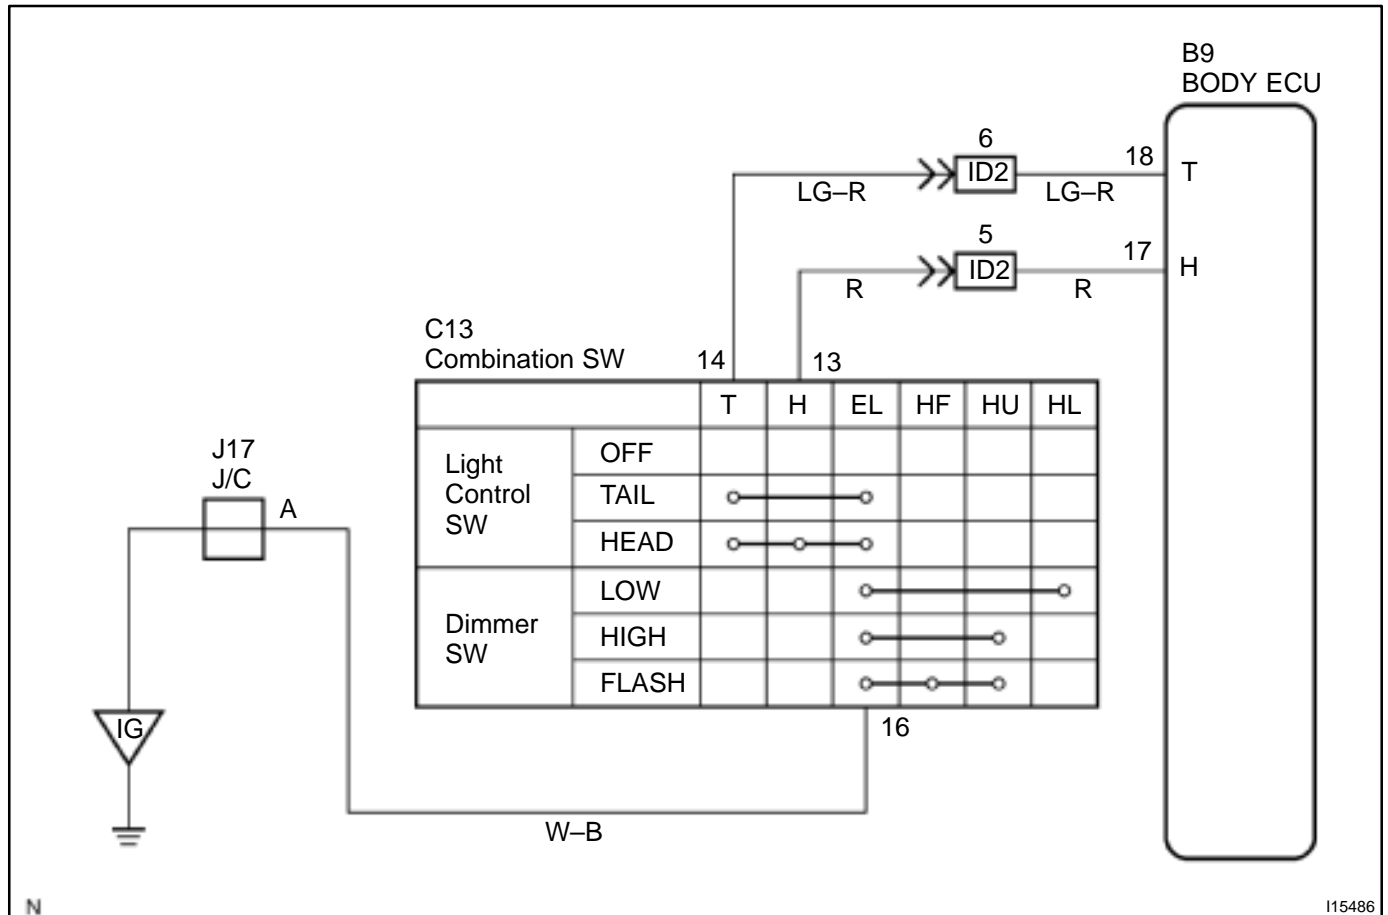

INSPECTION PROCEDURE

1 Check light control switch (See page [DI-689](#)).

NG

Replace the headlight control switch.

OK

2 Check wireharness and connector between headlight control switch and body ECU (See page [IN-41](#)).

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-683](#)).

Taillight Relay Circuit

CIRCUIT DESCRIPTION


Taillight relay will be "ON" by operating the taillight switch. The transistor which activates the tail light relay has two sorts: one activates by the tail light switch for fail safe and the other activates by CPU.

When the theft deterrent system is activated, it causes the transistor in the ECU to switch ON and OFF at approximately 0.4 sec. intervals. This switches the taillight control relay ON and OFF, thus flashing the taillights (See the wiring diagram below).

In this condition, if any of the following operations is done, the transistor in the ECU goes OFF and the taillight control relay switches OFF, thus stopping the taillights flashing:

- (1) Unlock the front LH or RH door with a key.
- (2) Turn the ignition switch to ACC or ON position.
- (3) Unlock the doors with the wireless door lock control system.
- (4) Wait for approximately 60 seconds.

WIRING DIAGRAM

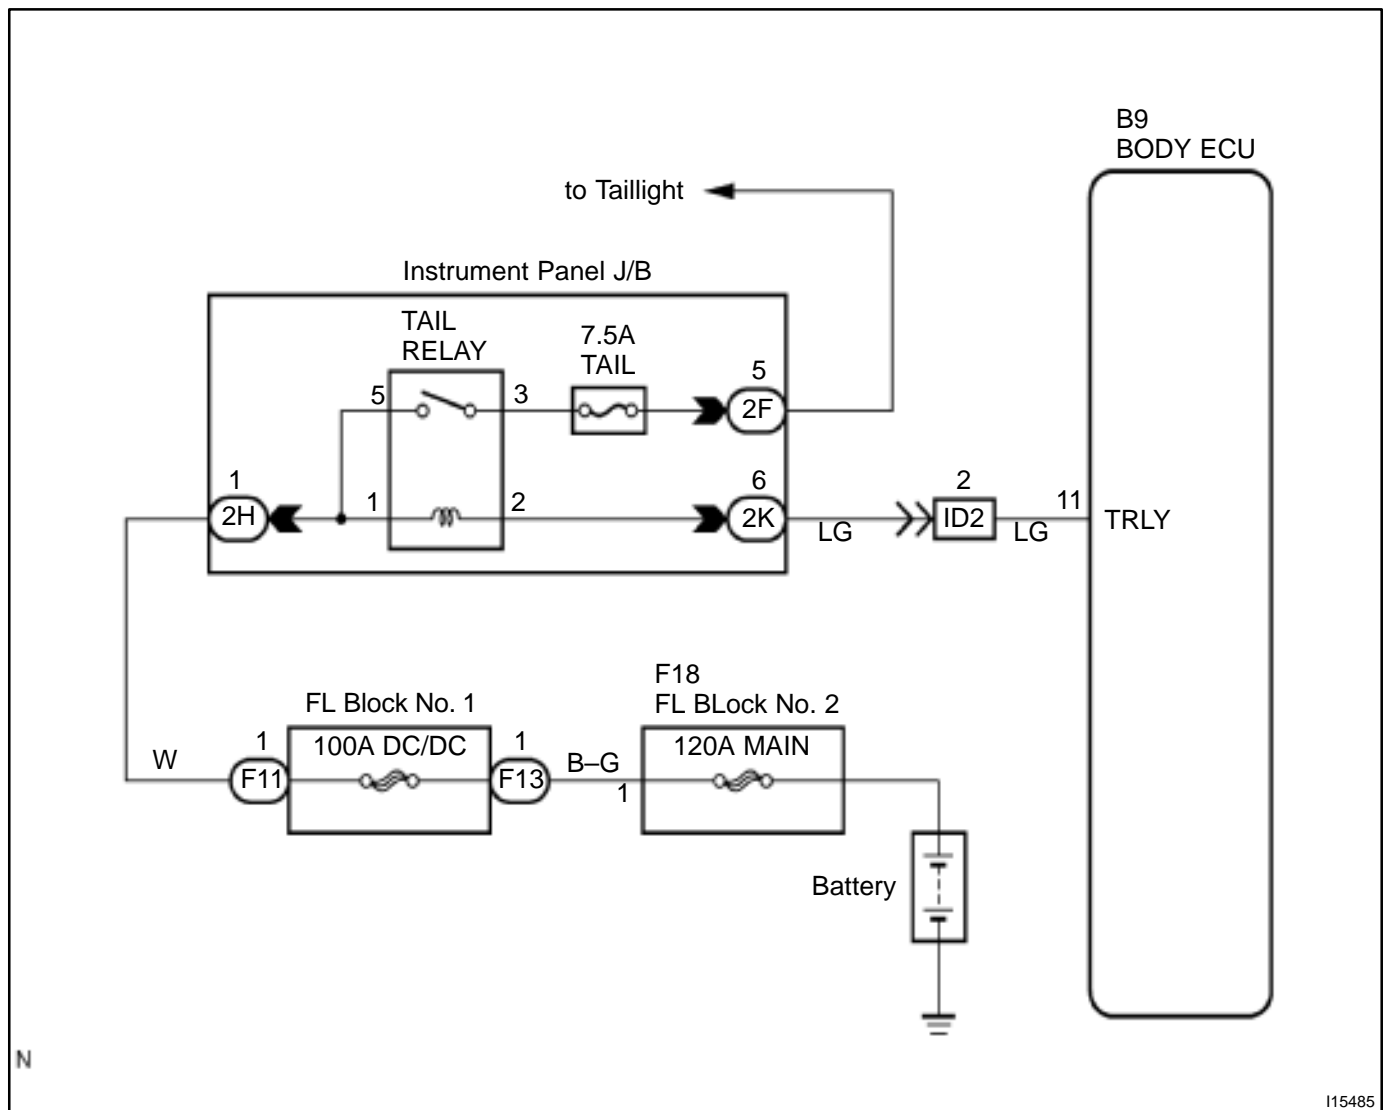

INSPECTION PROCEDURE

1	Check taillight relay (See page DI-691).
----------	---

NG**Replace the taillight relay.****OK**

2	Check wireharness and connector between taillight relay and body ECU, battery and taillight relay (See page IN-41).
----------	--

NG**Repair or replace wireharness or connector.****OK**

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-683](#)).

Headlight Relay Circuit

CIRCUIT DESCRIPTION


Head light relay will be "ON" by operating the headlight switch. The transistor which activates the headlight relay has two sorts: one activates directly by the headlight switch for fail safe and the other activates by CPU. the one that activates by CPU has two systems and prevents the headlight from turning off at the time of one system trouble in the automatic operation circuit.

When the theft deterrent system is activated, it causes the transistor in the ECU to switch ON and OFF at approximately 0.25 sec. intervals. This switches the headlight control relay ON and OFF, thus flashing the headlights (See the wiring diagram below).

In this condition, if any of the following operations is done, the transistor in the ECU goes OFF and the headlight control relay switches OFF, thus stopping the headlights flashing:

- (1) Unlock the front LH or RH door with a key.
- (2) Turn the ignition switch to ACC or ON position.
- (3) Unlock the doors with the wireless door lock control system.
- (4) Wait for approximately 60 seconds.

WIRING DIAGRAM

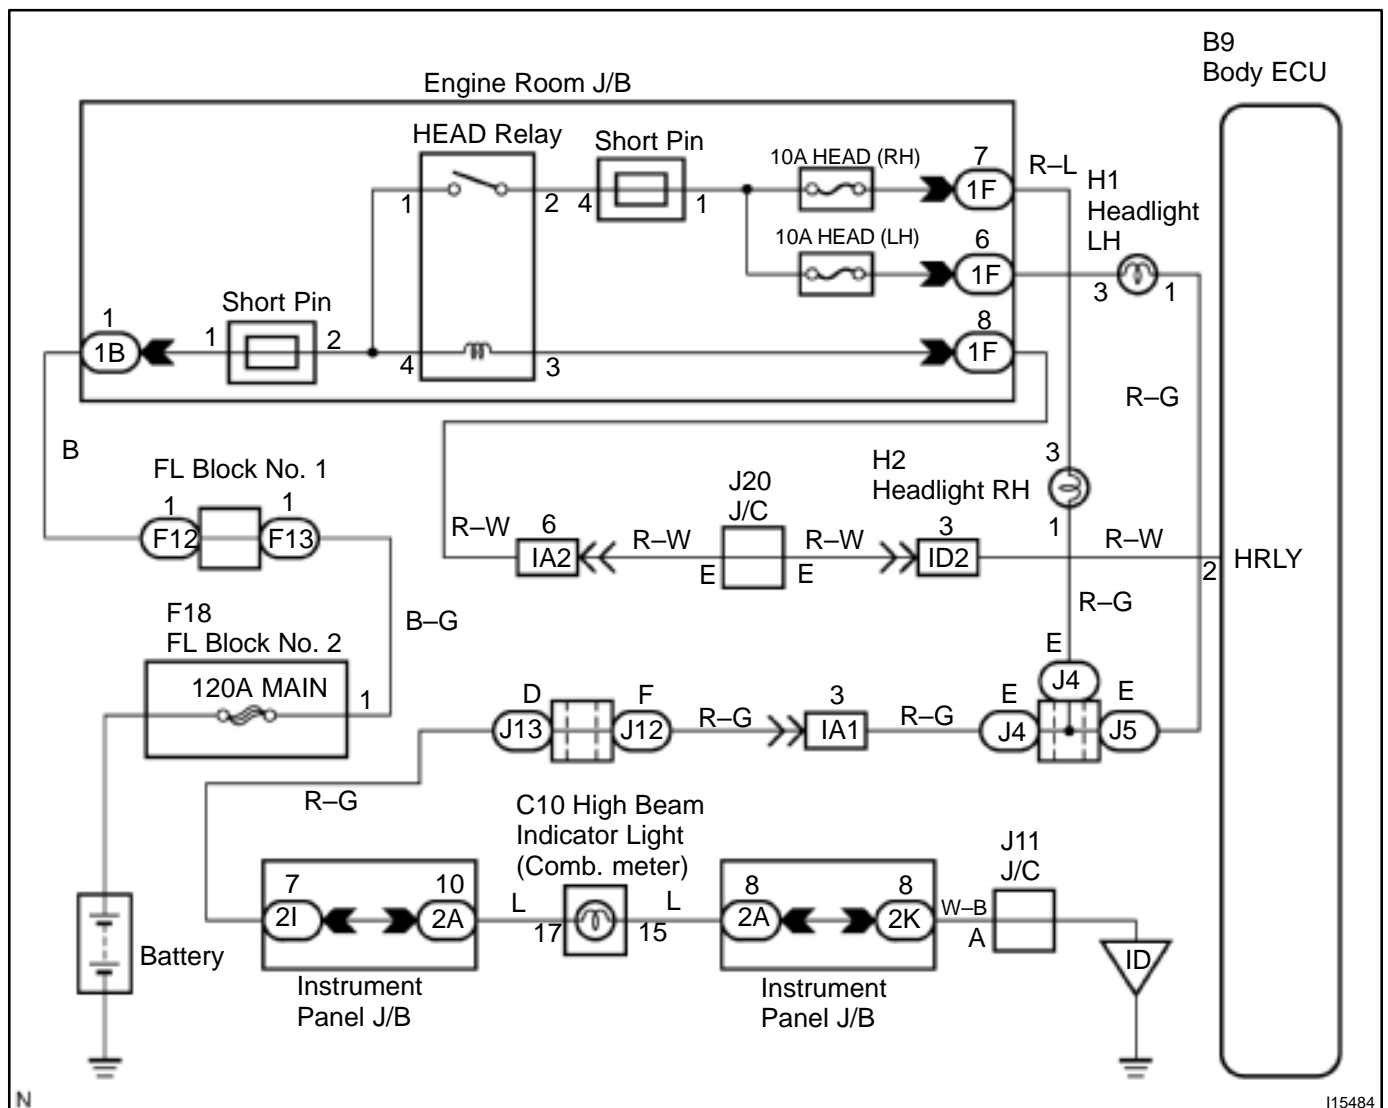

INSPECTION PROCEDURE

1	Check headlight relay (See page DI-693).
----------	---

NG**Replace the headlight relay.****OK**

2	Check wireharness and connector between headlight relay and body ECU, battery and headlight relay (See page IN-41).
----------	--

NG**Repair or replace wireharness or connector.****OK**

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-683](#)).


Key unlock warning switch circuit

CIRCUIT DESCRIPTION

The key unlock warning switch goes on when the ignition key is inserted in the key cylinder and goes off when the ignition key is removed.

The ECU operates the key confinement prevention function while the key unlock warning switch is on.

WIRING DIAGRAM

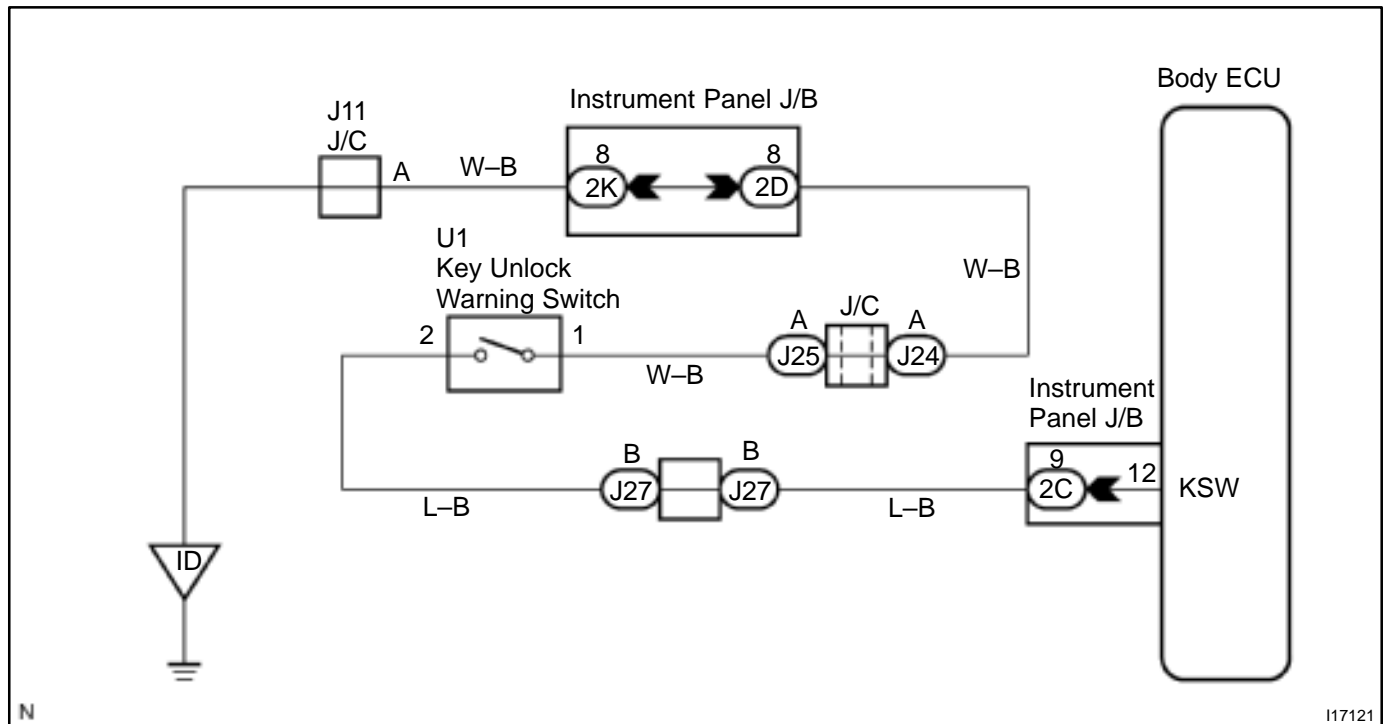

INSPECTION PROCEDURE

- 1 Check key unlock warning switch (See page [BE-62](#)).

NG

Replace the key unlock warning switch.

OK

- 2 Check wireharness and connector between key unlock warning switch and body ECU.

NG

Repair or replace wireharness or connector.

A button with a black border and a downward-pointing arrow shape at the bottom, containing the text "OK".

OK


Proceed to next circuit inspection shown on
problem symptoms table
(See page [DI-683](#)).

Horn Circuit

CIRCUIT DESCRIPTION

The horn is connected to the body ECU and activated by the body ECU.

WIRING DIAGRAM

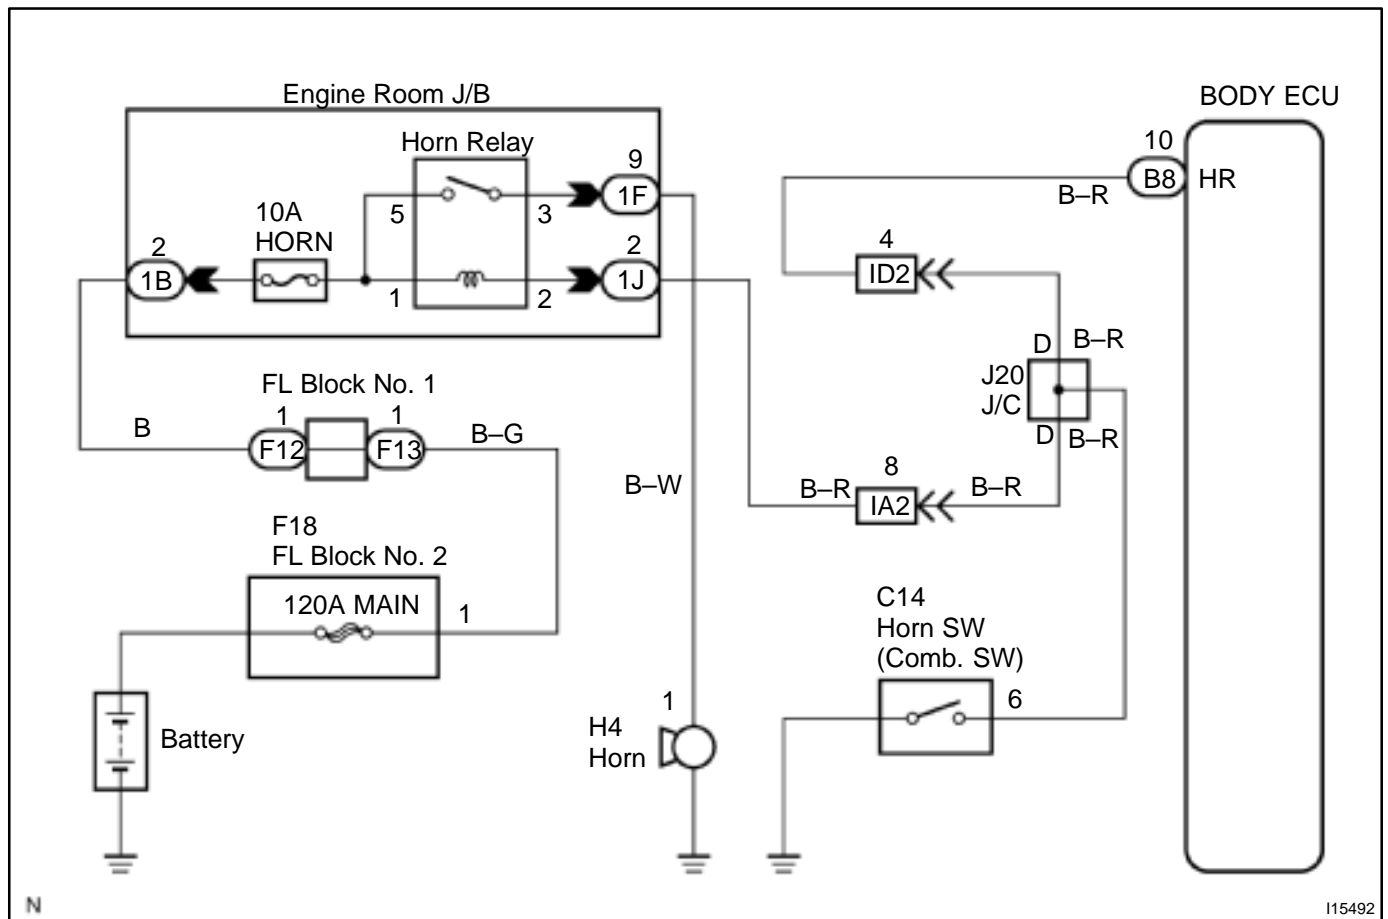

INSPECTION PROCEDURE

1	Check horn (See page DI-697).
----------	--

NG**Replace the horn.****OK**

2	Check wireharness and connector between horn relay and body ECU, battery and horn relay (See page IN-41).
----------	--

NG**Repair or replace wireharness or connector.****OK**

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-683](#)).

Theft Deterrent Horn Circuit

CIRCUIT DESCRIPTION


When the theft deterrent system is activated, the relay in the ECU turns ON and OFF cycles of approximately 0.2 sec., causing the theft deterrent horn to blow (See the wiring diagram below).

In this condition, if any of the following operations is done, the relay in the ECU turns OFF, thus stopping the theft deterrent horn from blowing:

- (1) Unlock the front LH or RH door with key.
- (2) Turn the ignition switch to ACC or ON position.
- (3) Unlock the doors with the wireless door lock control system.
- (4) Wait for approximately 60 seconds.
- (5) Push the panic switch of the wireless door lock control system.

Except for the anti-theft purpose, the theft deterrent horn is used as a high-pitched horn.

WIRING DIAGRAM

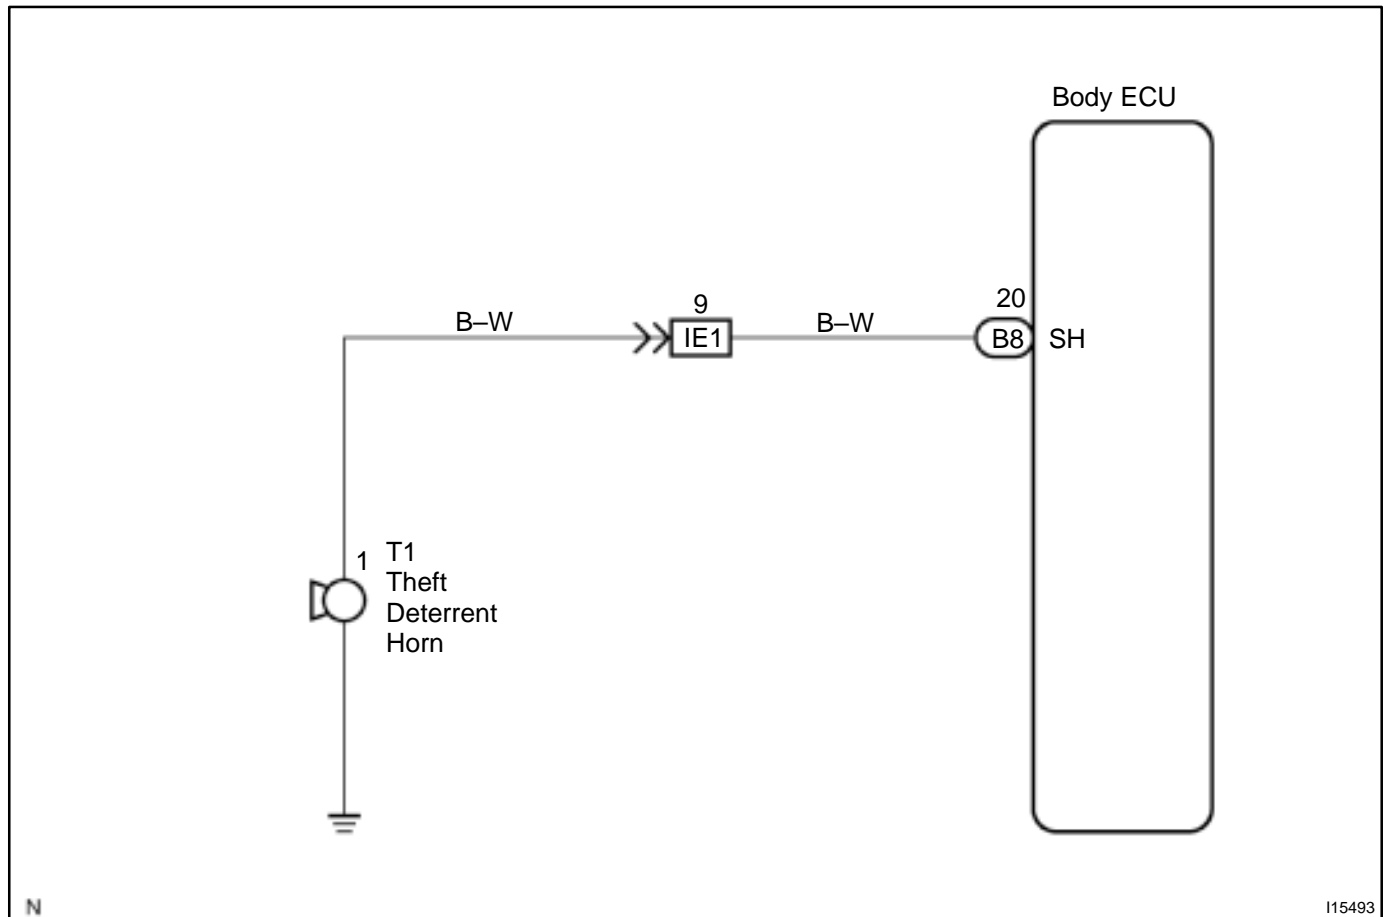


INSPECTION PROCEDURE

HINT:

The flow chart below is based on the premise that the horns blow normally whenever the horn switch is operated. If horn operation is not normal when the horn switch is operated, check the horn switch.

- | | |
|----------|--|
| 1 | Check voltage between terminal 1 of theft deterrent horn connector and body ground. |
|----------|--|

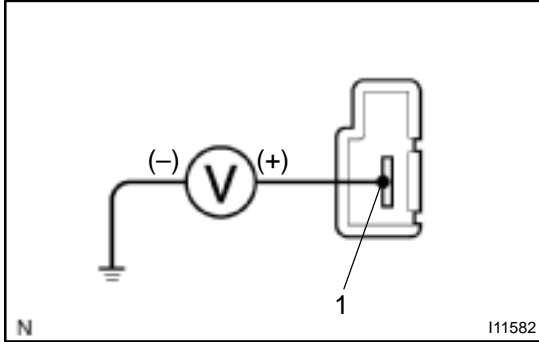

PREPARATION:

Remove the theft deterrent horn and disconnect the connector.

CHECK:

Measure voltage between terminal 1 of theft deterrent horn connector and body ground.

OK:


Voltage: 10 – 14 V

NG

Check and repair harness and connector between HORN fuse and theft deterrent horn.

OK

- | | |
|----------|------------------------------------|
| 2 | Check theft deterrent horn. |
|----------|------------------------------------|

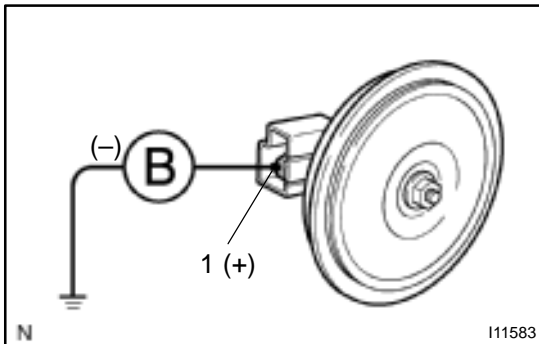

CHECK:

Connect positive (+) lead to terminal 1 and negative (-) lead to ground to theft deterrent horn connector.

OK:

Theft deterrent horn blows.

NG

Replace theft deterrent horn.

OK

3	Check harness and connector between body ECU and theft deterrent horn (See page IN-41).
---	--

NG

Check and repair harness or connector.

OK


Check and replace body ECU.

Illumination circuit

CIRCUIT DESCRIPTION

Receiving the courtesy signal from either of the door ECU, the Body ECU will make the interior light, ignition light, and foot light come on.

WIRING DIAGRAM

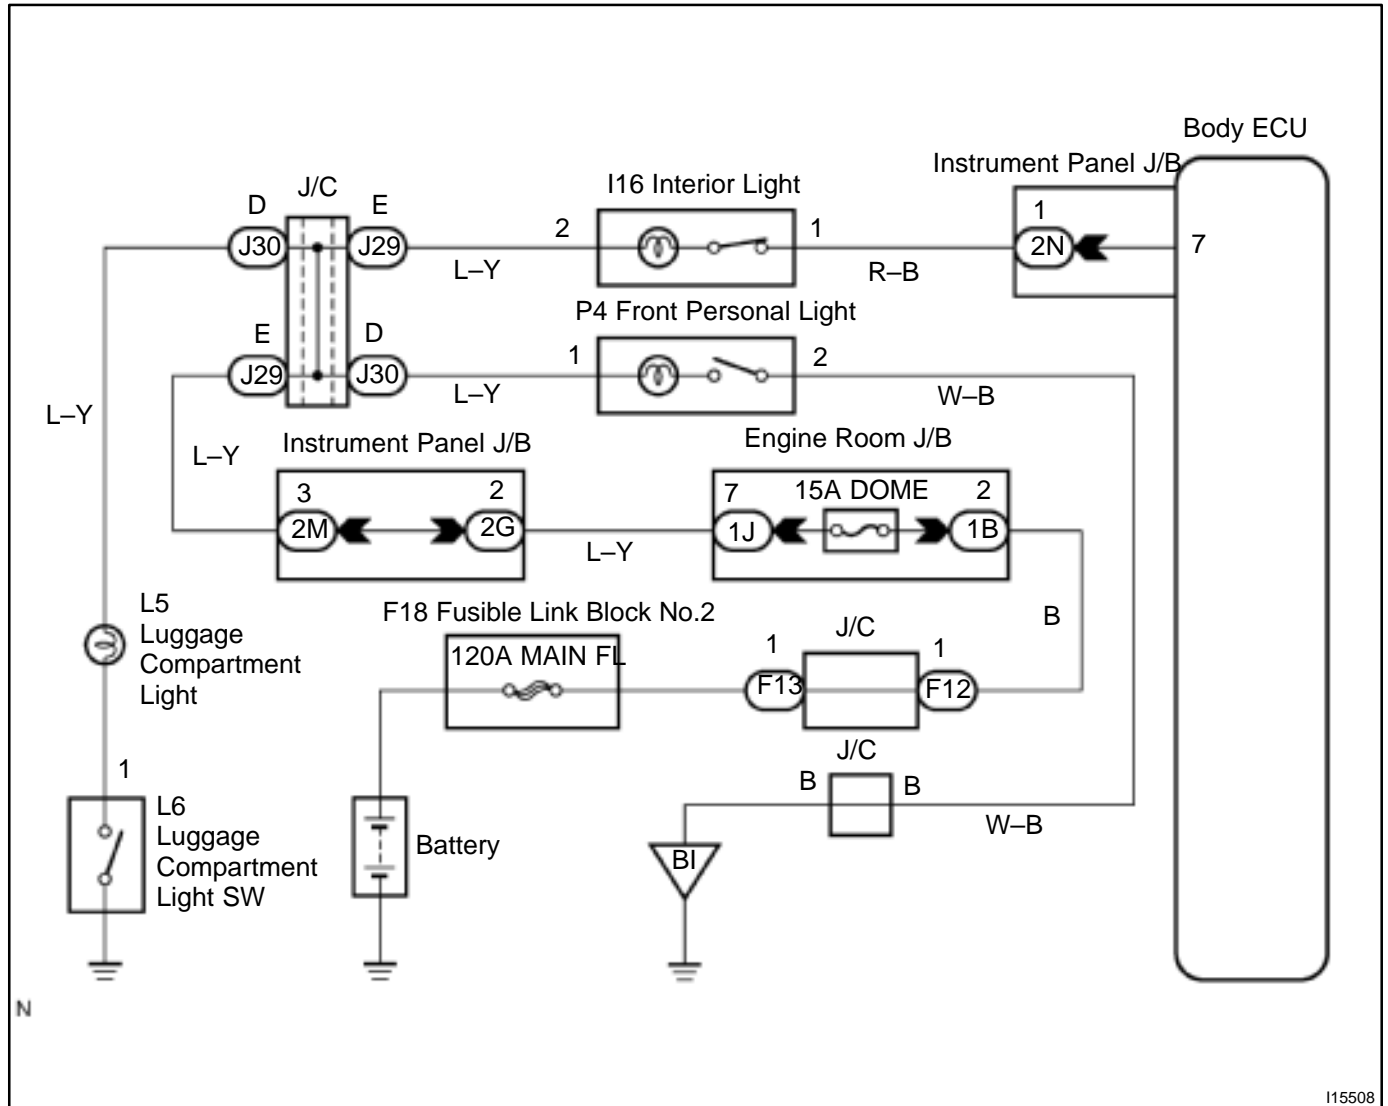

cardiagn.com

INSPECTION PROCEDURE

- | | |
|---|--|
| 1 | Check illumination light (Interior light system)(See page BE-27). |
|---|--|

NG

Replace the failure light.

OK

- | | |
|---|--|
| 2 | Check wireharness and connector between each illumination light and Body ECU, battery and each illumination light (See page IN-41). |
|---|--|

NG

Repair or replace wireharness or connector.

OK


Proceed to next circuit inspection shown on problem symptoms table (See page [DI-683](#)).

Indicator Light Circuit

CIRCUIT DESCRIPTION

When the theft deterrent system is preparing to set, this circuit lights up the indicator light. When the system has been set, it continuously turns the indicator light on for 0.2 secs. and turns it off for 1.8 secs., thus blinking the indicator light.

WIRING DIAGRAM

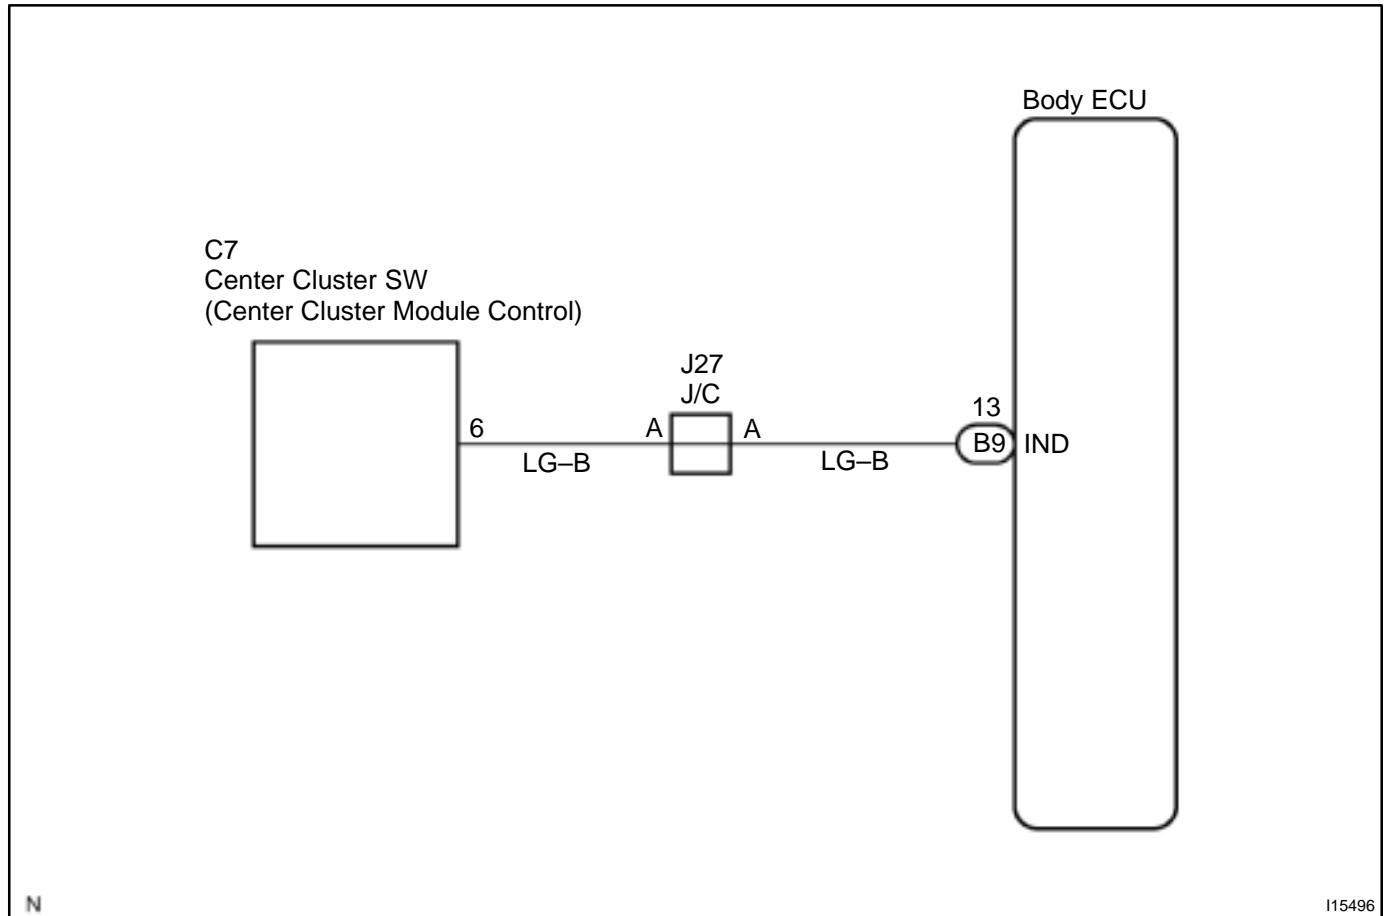

INSPECTION PROCEDURE

1	Check indicator light. (center cluster module control)
----------	---

NG**Replace center cluster module control.****OK**

2	Check harness and connector between body ECU and indicator light, indicator light and body ground (See page IN-41).
----------	--

NG**Repair or replace harness or connector.****OK****Check and replace body ECU.*1**


*1: When there is a malfunction that the theft deterrent system cannot be set, proceed to the next numbered circuit inspection shown on problem symptom table (See page [DI-683](#)).

Door lock control switch circuit

CIRCUIT DESCRIPTION

Door lock control switch circuit can be checked using DTC check. (Refer to [DI-765](#))

WIRING DIAGRAM

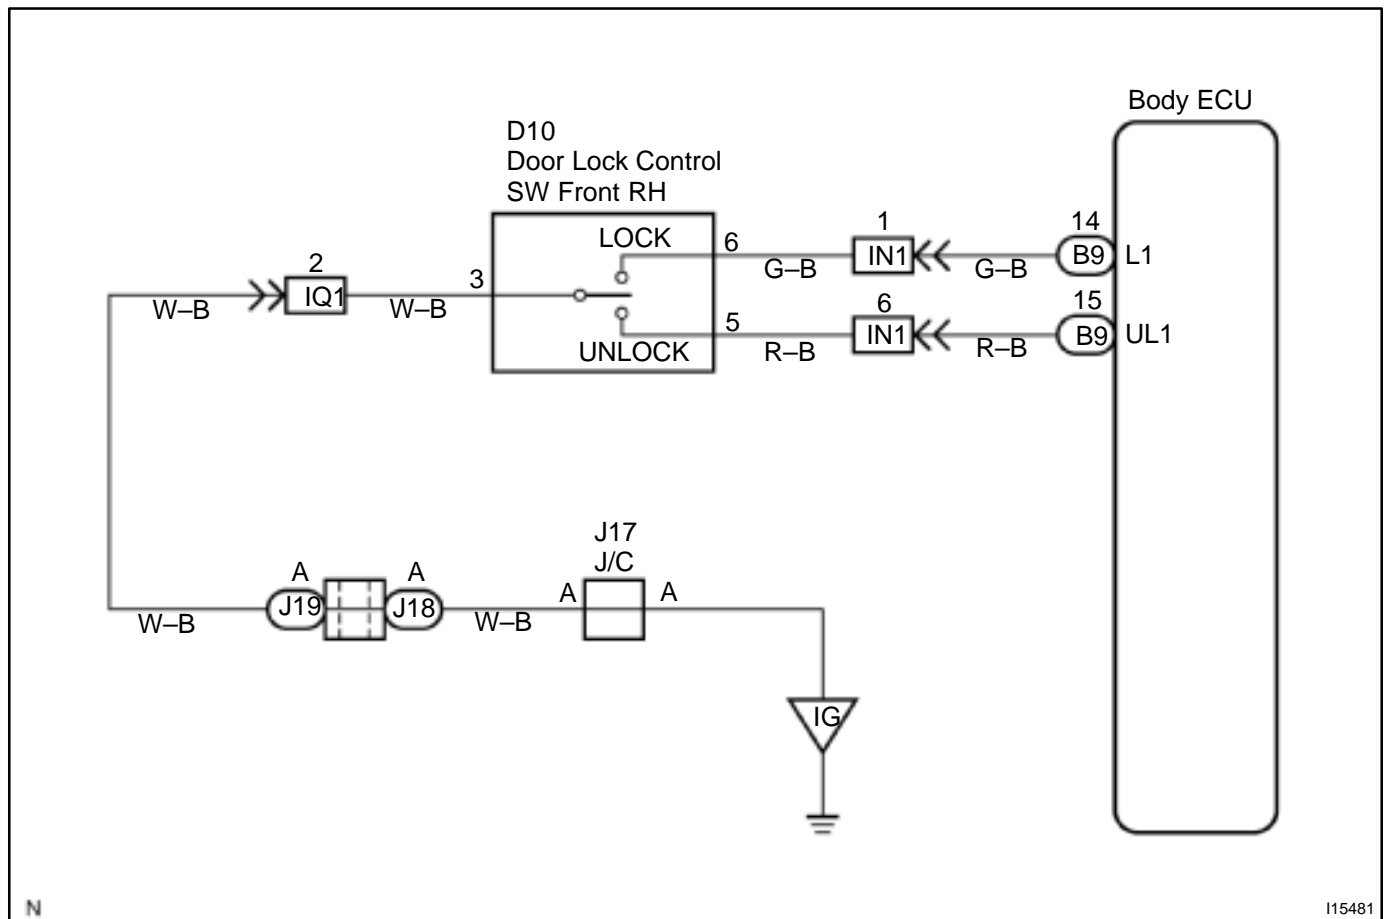

INSPECTION PROCEDURE

1	Check the door lock control switch (See page BE-62).
----------	---

NG**Replace the door lock control switch.****OK**

2	Check wireharness and connector between door lock control switch and body ECU.
----------	---

NG**Repair or replace wireharness or connector.****OK**


Proceed to next circuit inspection shown on problem symptoms table (See page [DI-683](#)).

Door Key Lock and Unlock Switch Circuit

CIRCUIT DESCRIPTION

The door key lock and unlock switch is built in the door key cylinder. When the key is turned to the lock side, terminal 3 of the switch is grounded and when the key is turned to the unlock side, terminal 2 of the switch is grounded.

WIRING DIAGRAM

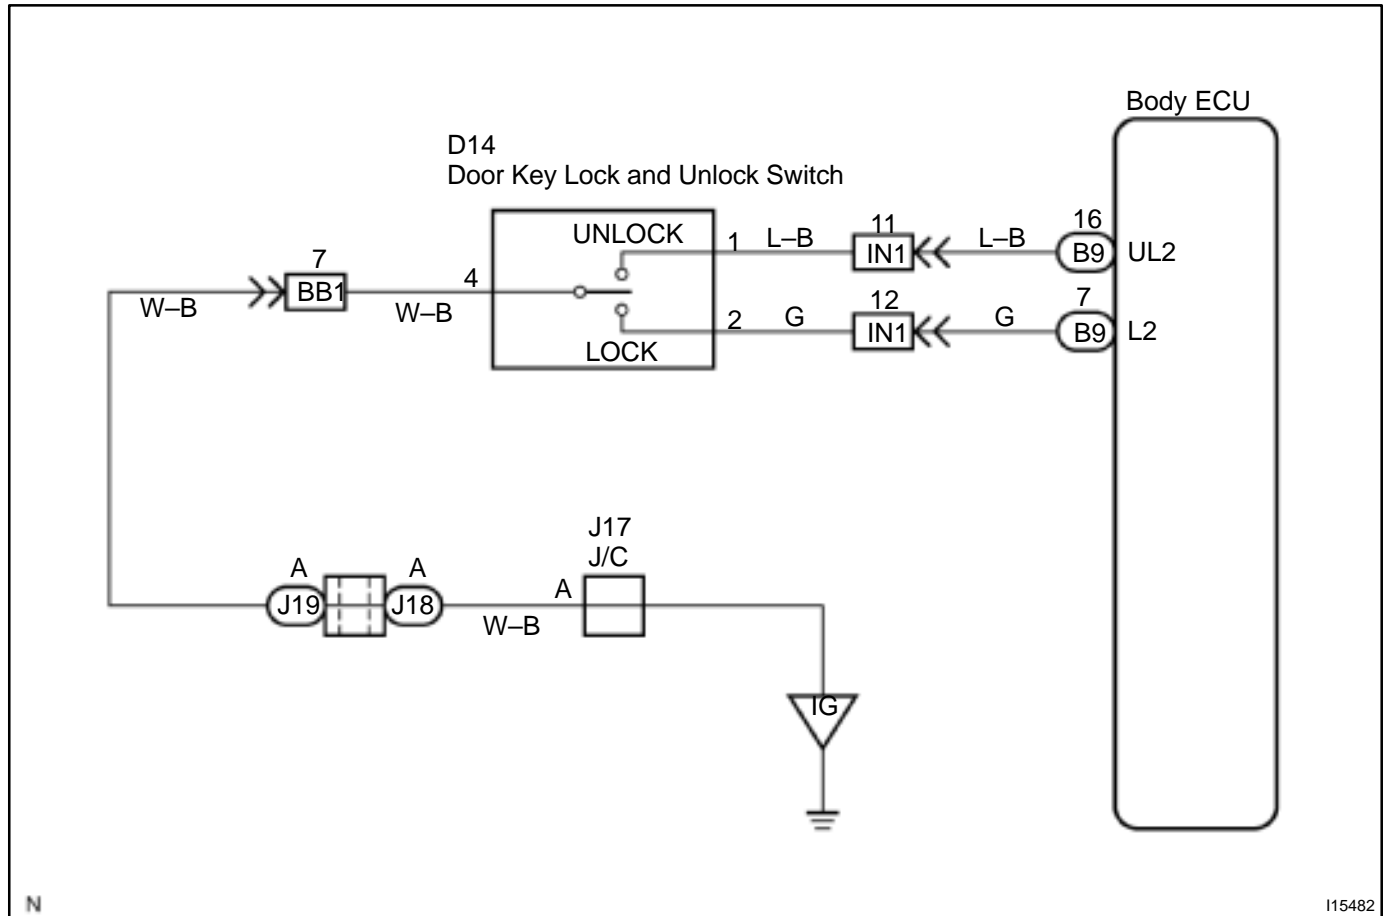

N

I15482

INSPECTION PROCEDURE

1	Check the door key lock and unlock switch (See page DI-708).
----------	---

NG**Replace the door key lock and unlock switch.****NG**

2	Check wireharness and connector between door key lock and unlock switch and body ECU (See page IN-41).
----------	---

NG**Repair or replace wireharness or connector.****OK**


Proceed to next circuit inspection shown on problem symptoms table (See page [DI-683](#)).

Door unlock detection switch

CIRCUIT DESCRIPTION

The door unlock detection switch is built in the door lock motor assembly. This switch is ON when the door lock knob is in the unlock position and OFF when the lock knob is in the lock position. The ECU detects the door lock knob conditions is this circuit. It is used as one of the operating conditions for the key confinement prevention function.

WIRING DIAGRAM

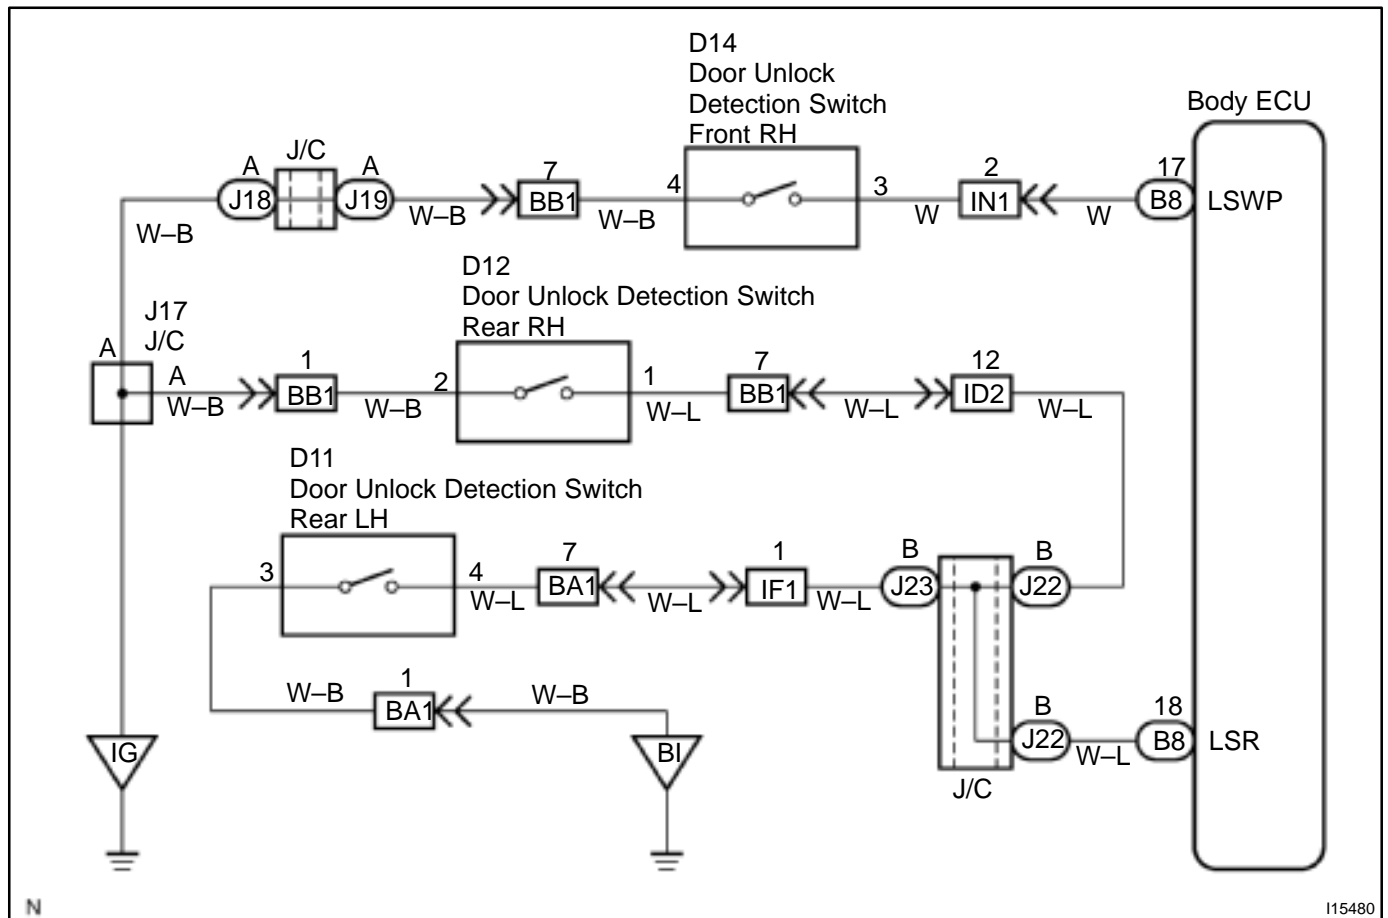

INSPECTION PROCEDURE

1	Check door unlock detection switch (See page DI-710).
----------	--

NG**Replace the door lock motor.****OK**


2	Check wireharness and connector between door unlock detection switch and body ECU.
----------	---

NG**Repair or replace wireharness or connector.****OK**

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-683](#)).

Door lock motor circuit

WIRING DIAGRAM

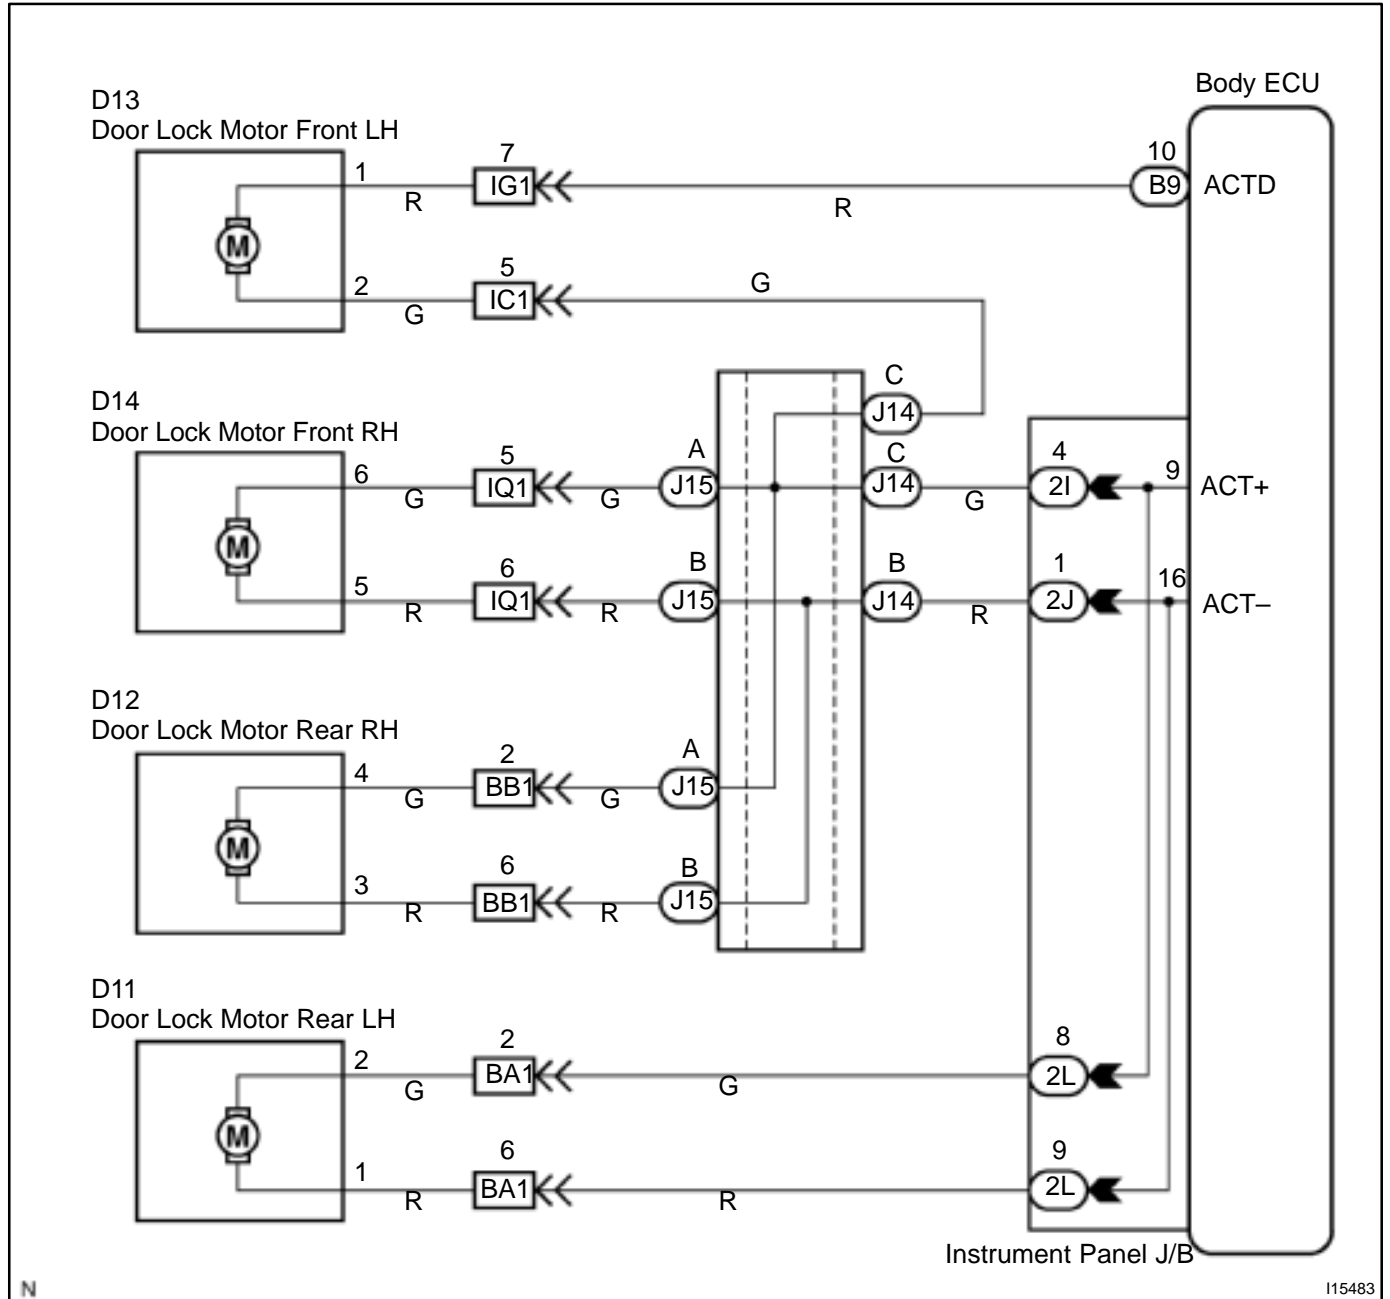

N

I15483

INSPECTION PROCEDURE

1	Check door lock motor (See page BE-62).
----------	--

NG**Replace the door lock motor.****OK**

2	Check wireharness and connector between door lock motor and body ECU.
----------	--

NG**Repair or replace wireharness or connector.****OK**


**Proceed to next circuit inspection shown on
problem symptoms table
(See page [DI-683](#)).**

Door Courtesy Switch Circuit

CIRCUIT DESCRIPTION

The door courtesy switch goes on when the door is opened and goes off when door is closed.

WIRING DIAGRAM

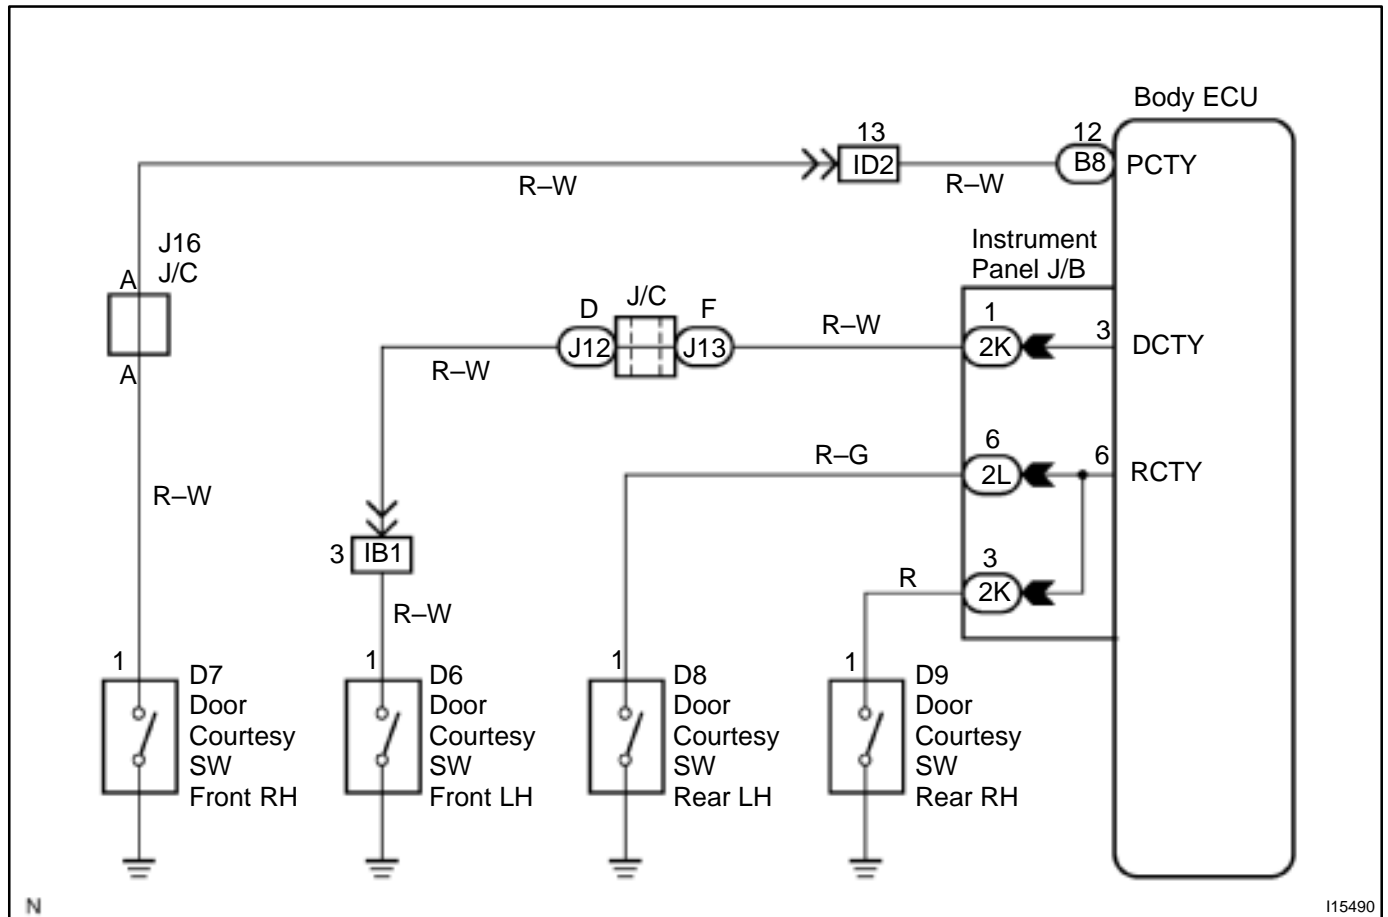

INSPECTION PROCEDURE

1	Check courtesy switch (See page BE-27).
----------	--

NG**Replace the courtesy switch.****OK**

2	Check that there is a grounding malfunction caused by looseness of the tighten screw.
----------	--

NG**Install screw.****OK**

3	Check wireharness and connector between courtesy switch and body ECU (See page IN-41).
----------	---

NG**Repair or replace wireharness or connector.****OK**

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-683](#)).


Driver Buckle Switch Circuit

CIRCUIT DESCRIPTION

When the buckle switch of the driver's seat is ON with the ignition switch ON, the body ECU sends a signal to make the seat belt warning light for the driver's seat light up and to sound a buzzer.

When the buckle switch of the passenger seat is ON and the passenger seat belt occupant detecting sensor is ON with the ignition switch ON, the body ECU sends a signal to make the seat belt warning light for the passenger seat light up.

WIRING DIAGRAM

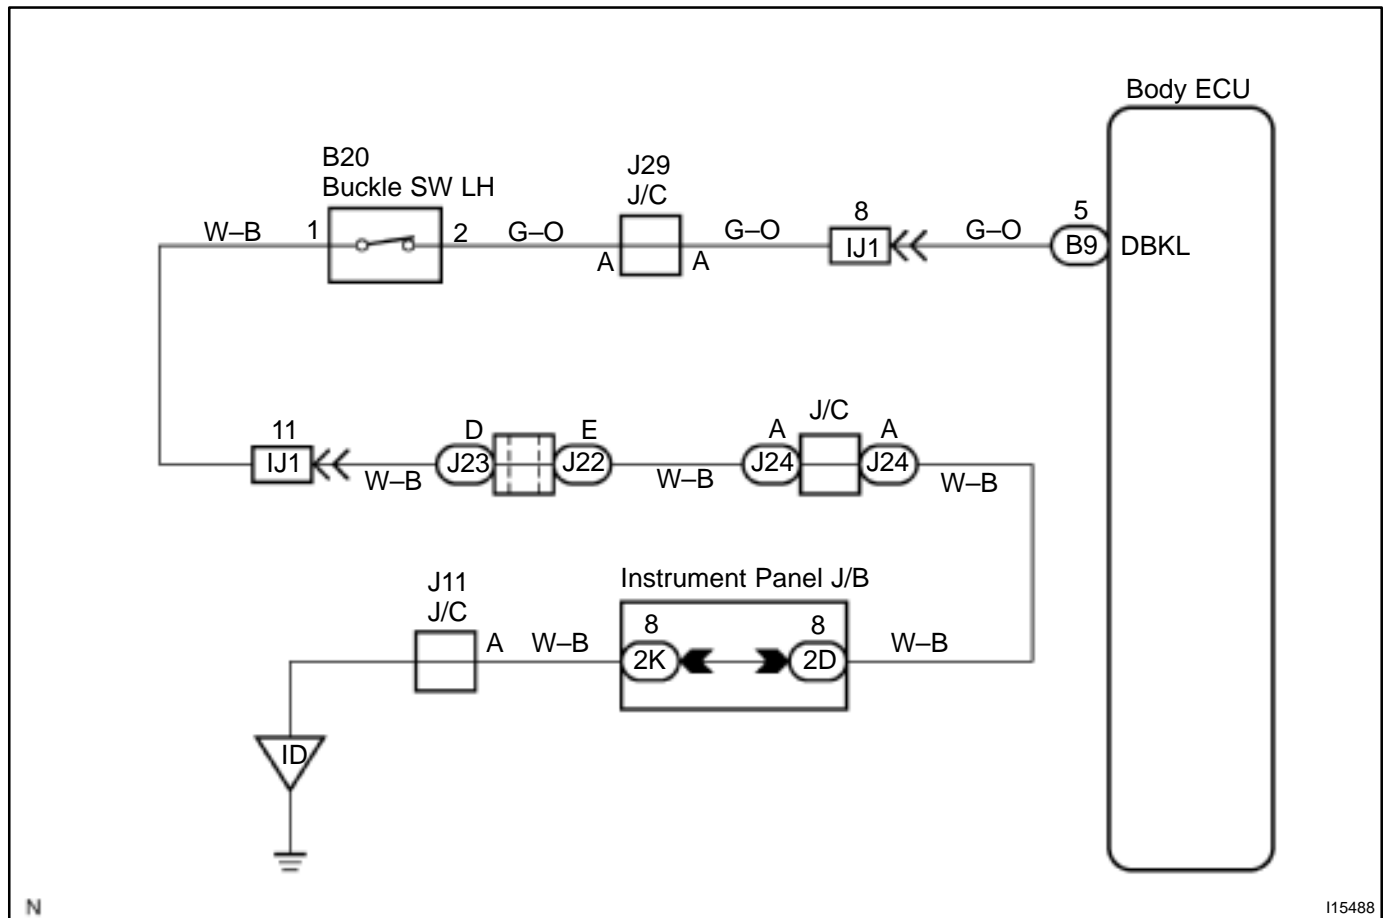

INSPECTION PROCEDURE

1	Check buckle switch (See page DI-716).
----------	---

NG**Replace the buckle switch.****OK**

2	Check wire harness and connector between buckle switch and body ground (See page IN-41).
----------	---

NG**Repair or replace wire harness or connector.****OK**


Proceed to next circuit inspection shown on problem symptoms table (See page [DI-683](#)).

Passenger buckle switch and seat belt warning occupant detection sensor

CIRCUIT DESCRIPTION

This circuit detects the conditions of the passenger buckle switch and the seat belt warning occupant detection sensor, and makes the passenger seat belt warning flash.

WIRING DIAGRAM

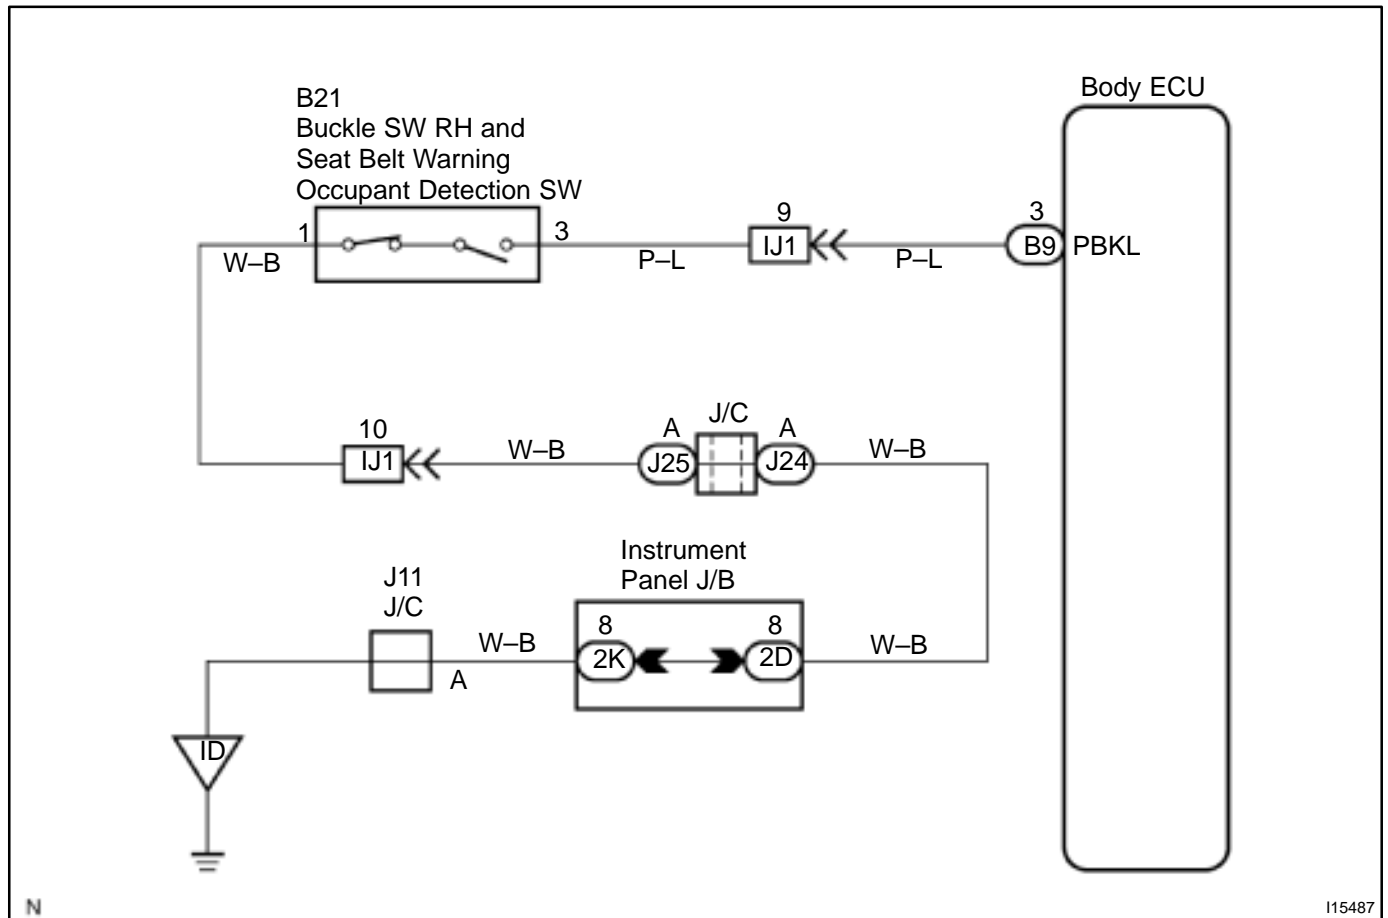

cardiagn.com

INSPECTION PROCEDURE

- | | |
|----------|---|
| 1 | Check passenger buckle switch (See page DI-718). |
|----------|---|

NG

Replace the passenger buckle switch.

OK

- | | |
|----------|--|
| 2 | Check seat belt warning occupant detection sensor (See page BE-42). |
|----------|--|

NG

Replace the seat belt warning occupant detection sensor.

OK

- | | |
|----------|--|
| 3 | Check wireharness and connector between seat belt warning occupant detection sensor and body ECU, passenger buckle switch and seat belt warning occupant detection sensor, passenger buckle switch and body ground. |
|----------|--|

NG

Repair or replace wireharness or connector.

OK


Proceed to next circuit inspection shown on problem symptoms table (See page [DI-683](#)).

Engine Hood Courtesy Switch Circuit

CIRCUIT DESCRIPTION


The engine hood courtesy switch is built into the engine hood lock assembly and goes ON when the engine hood is opened and goes OFF when the engine hood is closed.

WIRING DIAGRAM

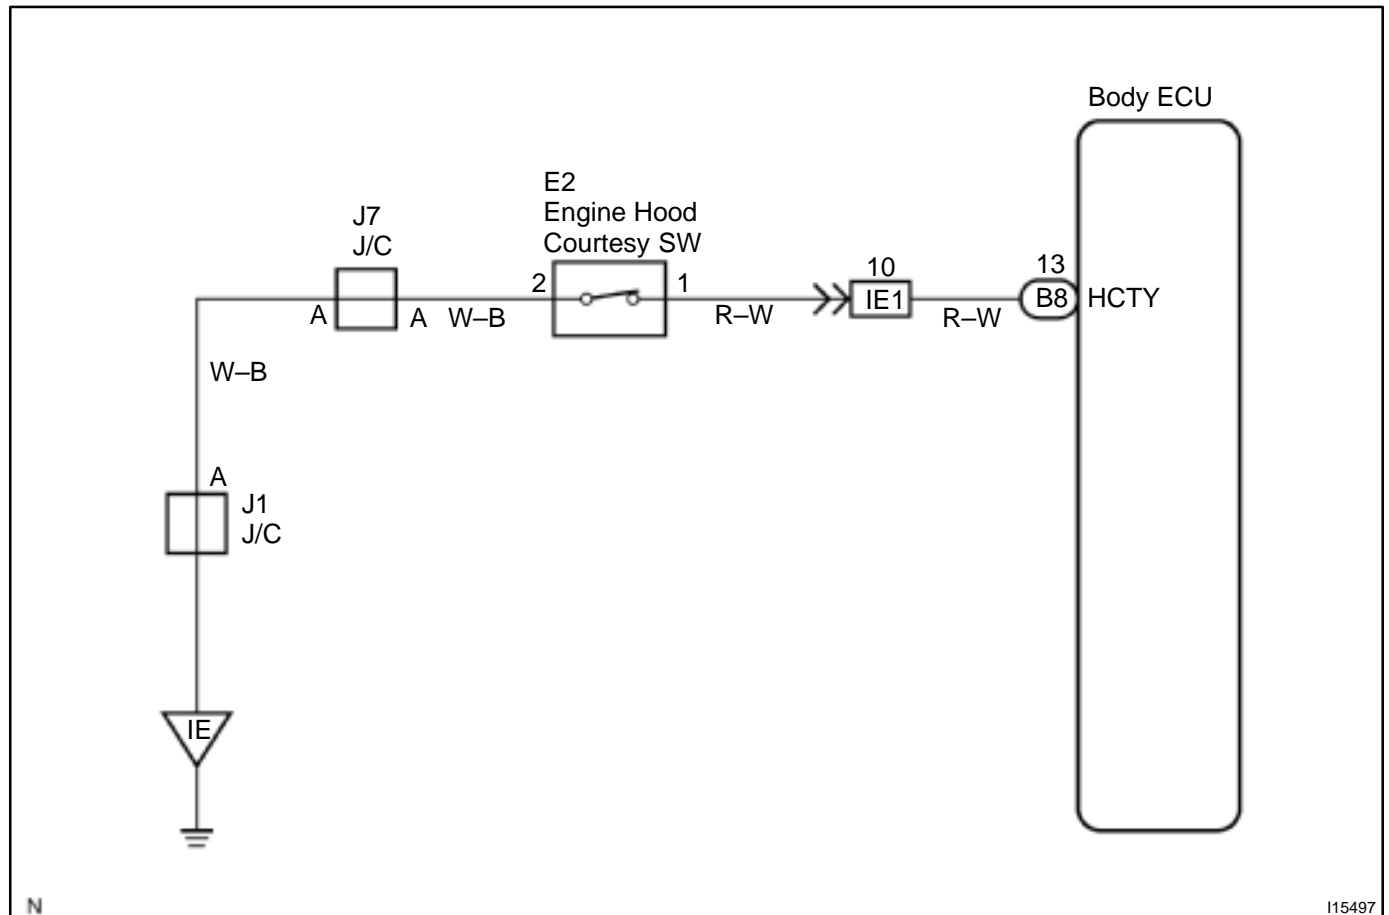

INSPECTION PROCEDURE

1 Check engine hood courtesy switch.

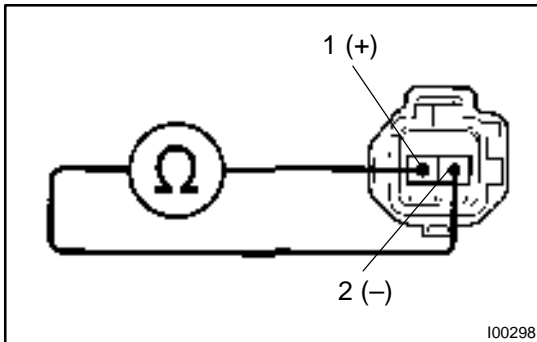**PREPARATION:**

- (a) Remove engine hood lock assembly.
- (b) Disconnect engine hood courtesy switch connector.

CHECK:

Check continuity between terminals 1 and 2 when engine hood lock is locked and unlocked.

OK:

Engine hood lock	Tester connection	Specified condition
LOCK	–	No continuity
UNLOCK	1 – 2	Continuity

NG**Replace engine hood courtesy switch.****OK**2 Check harness and connector between body ECU and switch, switch and body ground (See page [IN-41](#)).**NG****Repair or replace harness or connector.****OK**


Check and replace body ECU (See page [IN-41](#)).

Luggage Courtesy Switch Circuit

CIRCUIT DESCRIPTION

The luggage courtesy switch goes on when luggage compartment door is opened and goes off when luggage compartment door is closed.

WIRING DIAGRAM

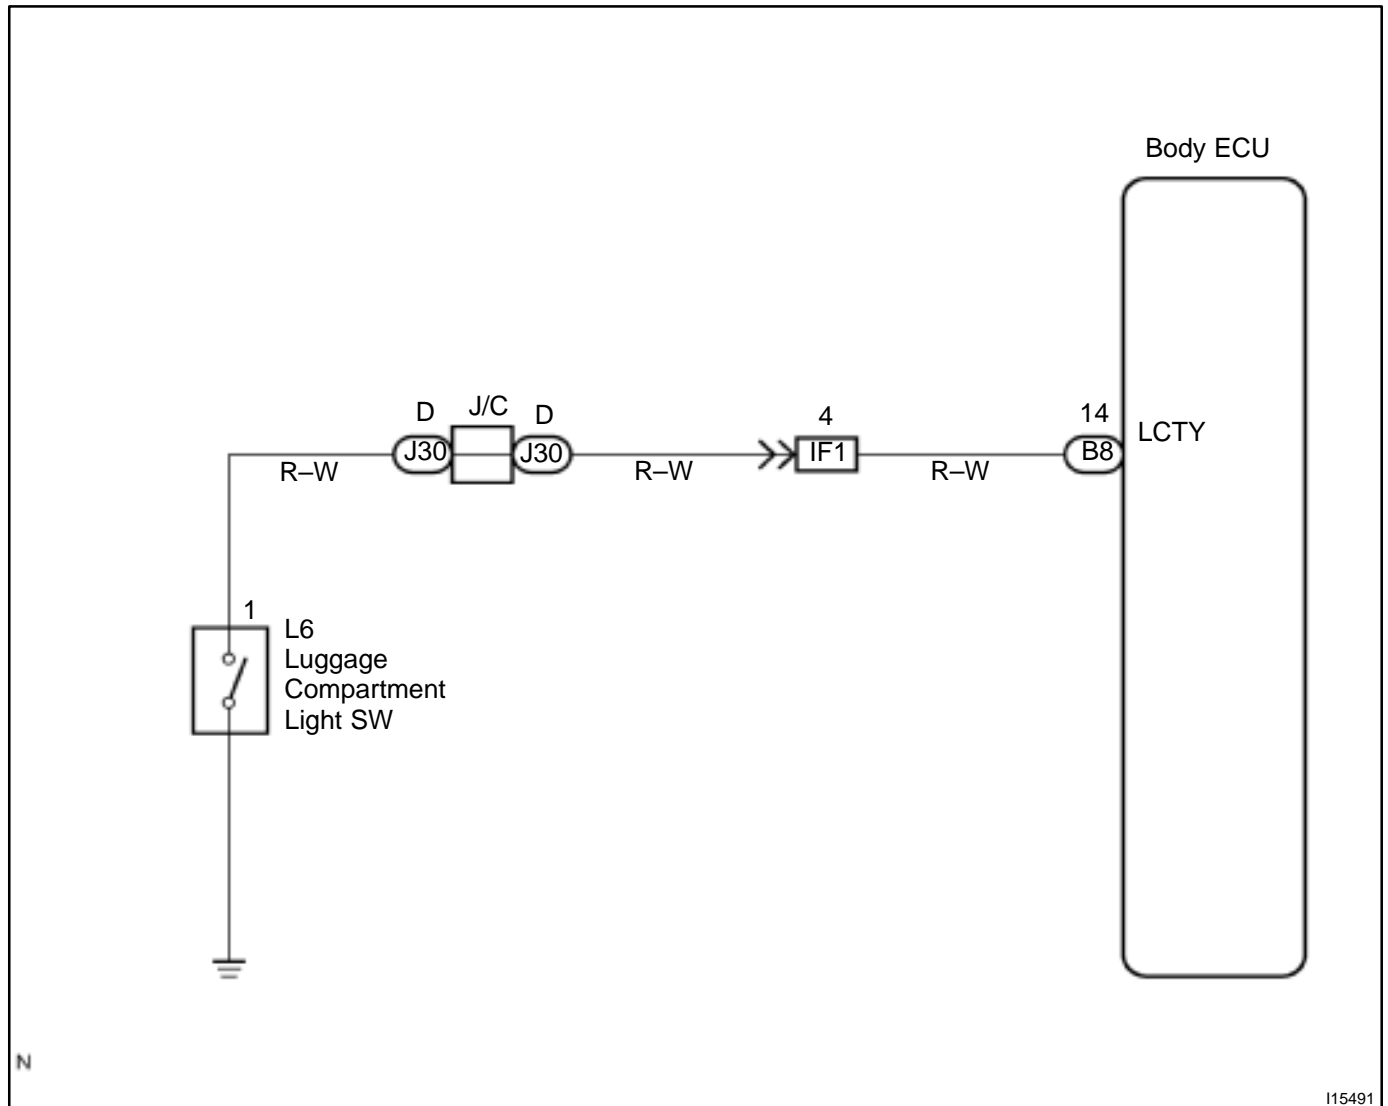

INSPECTION PROCEDURE

1	Check luggage courtesy switch (See page BE-27).
---	--

NG

Replace the luggage courtesy switch.

OK

2	Check wire harness and connector between luggage courtesy switch and body ECU (See page IN-41).
---	--

NG

Repair or replace wire harness or connector.

OK


Proceed to next circuit inspection shown on problem symptoms table (See page [DI-683](#)).

Power window master switch circuit

CIRCUIT DESCRIPTION

Power window master switch circuit can be checked using DTC check. (See page [DI-765](#))

WIRING DIAGRAM

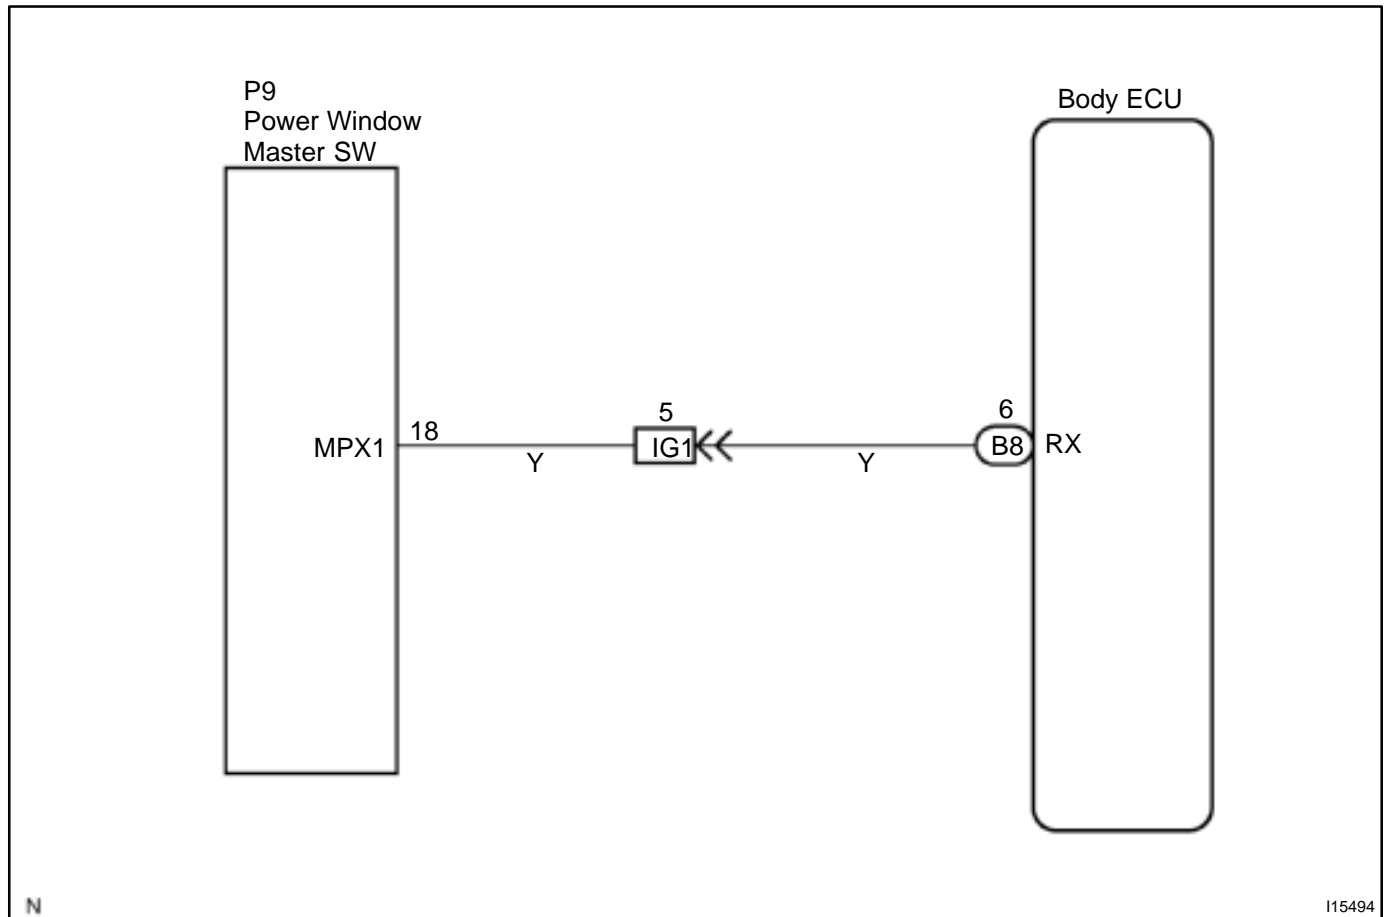

INSPECTION PROCEDURE

1	Check the power window master switch circuit using DTC check. (See page DI-765)
---	---

OK

Proceed to next circuit inspection shown on problem symptom table
(See page [DI-683](#)).

OK

2	Check the power window master switch (See page BE-56).
---	---

NG

Replace the power window master switch.

OK

3	Check wireharness and connector between power window master switch and body ECU.
---	--

NG

Repair or replace wireharness or connector.

OK


Proceed to next circuit inspection shown on problem symptom table
(See page [DI-683](#)).

Power window switch circuit

CIRCUIT DESCRIPTION

Power window switch circuit can be checked using DTC check. (Refer to [DI-762](#))

WIRING DIAGRAM

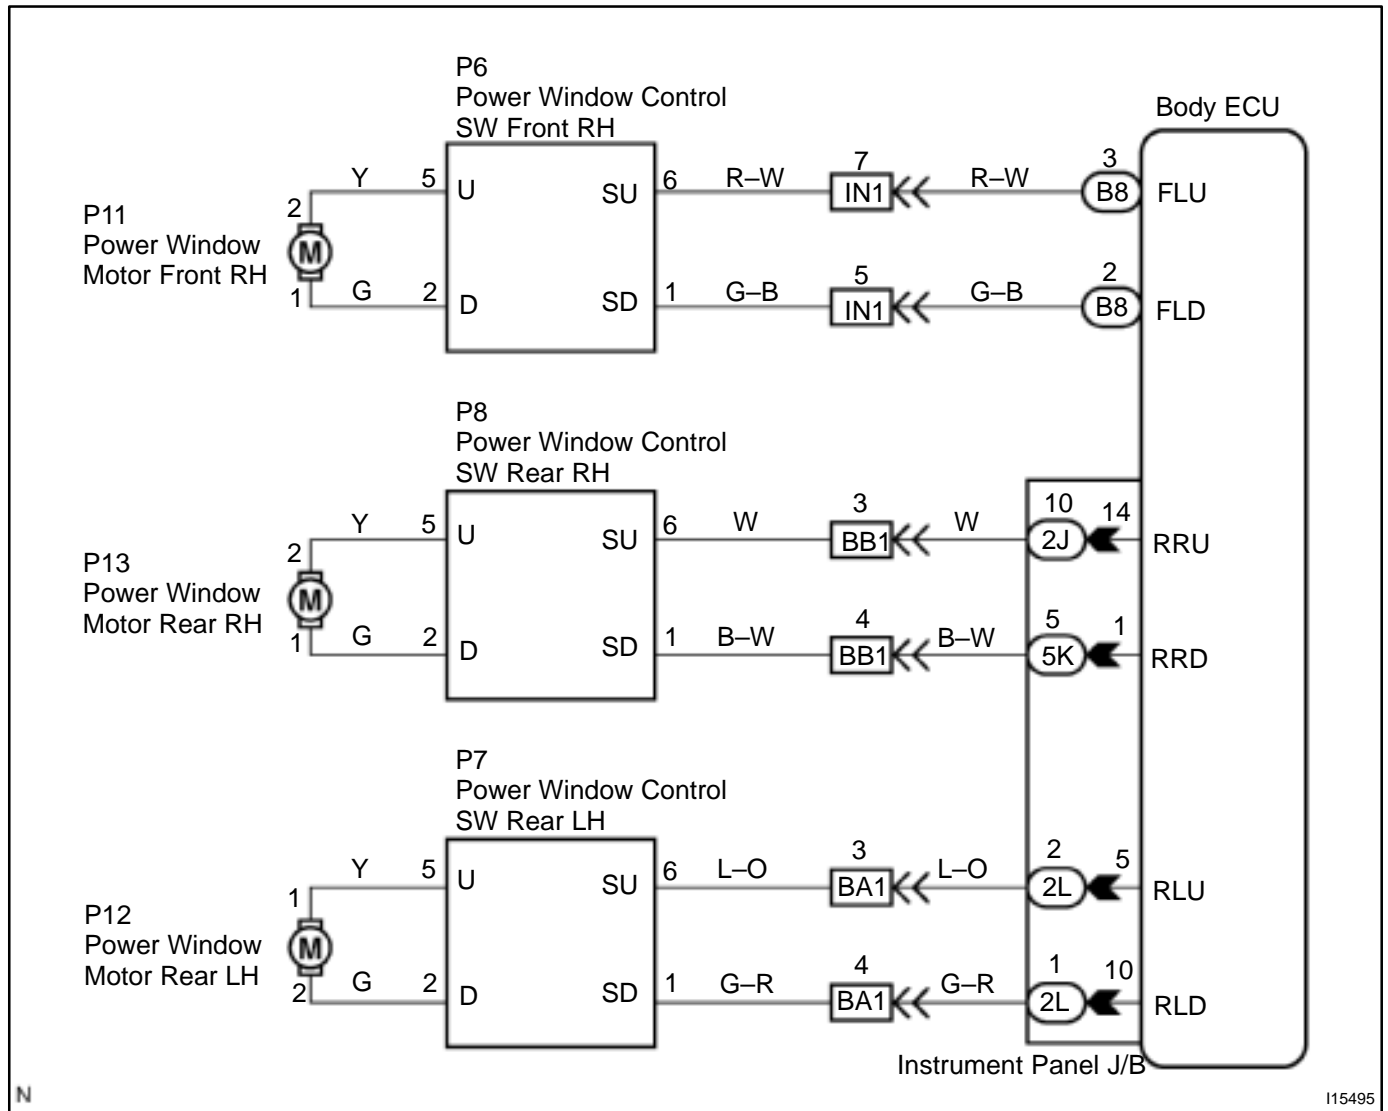

INSPECTION PROCEDURE

1	Check the power window switch (See page DI-726).
----------	---

NG**Replace the power window switch.****OK**

2	Check wireharness and connector between power window switch and body ECU (See page IN-41).
----------	---

NG**Repair or replace wireharness or connector.****OK**


Proceed to next circuit inspection shown on problem symptoms table (See page [DI-683](#)).

Wireless door lock tuner circuit


CIRCUIT DESCRIPTION

The signal from the transmitter will be input to the body ECU through RDA line. RDA line is diagnosed by the body ECU, so check DTC also in case of the failure of the wireless function.

WIRING DIAGRAM

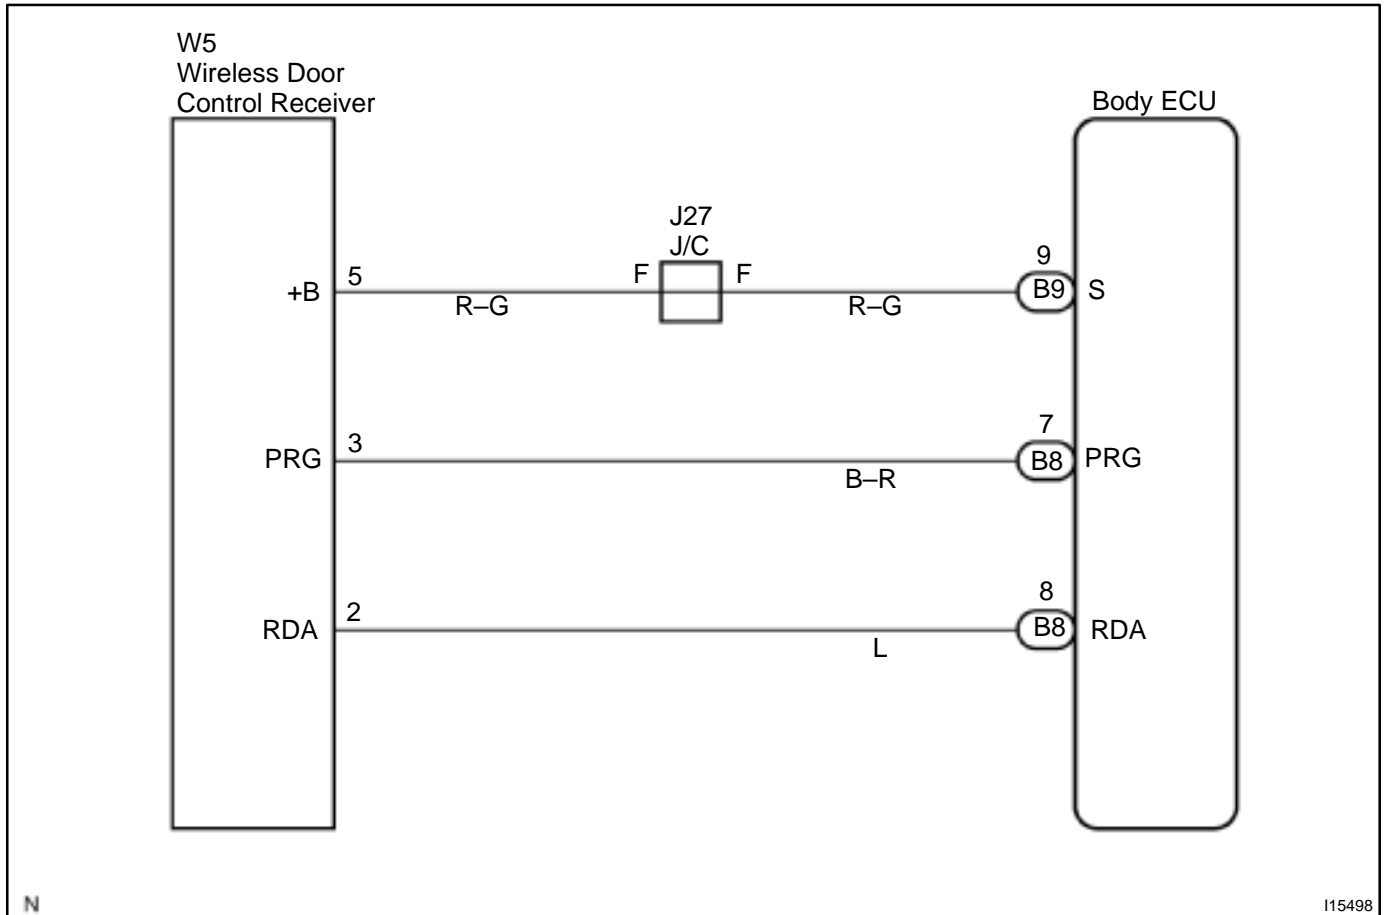

INSPECTION PROCEDURE

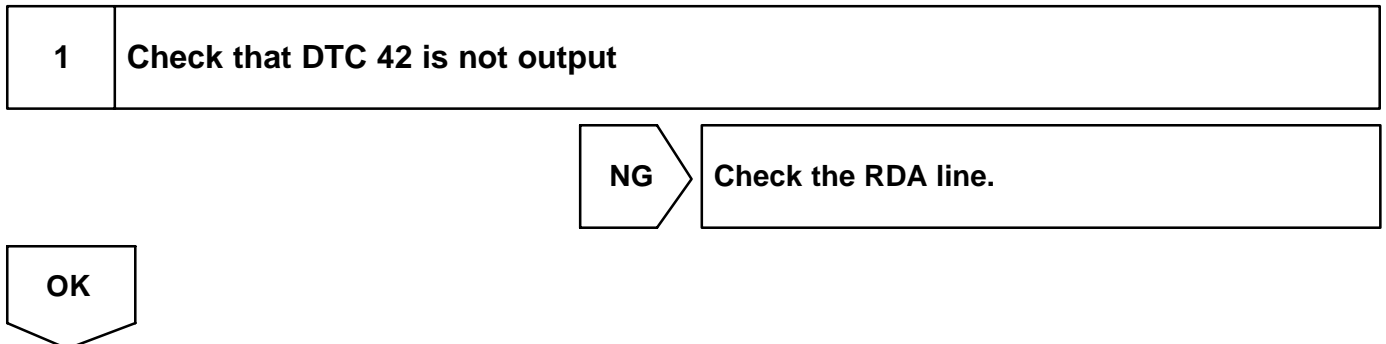

2	Check wireharness
---	-------------------

PREPARATION:

Disconnect connectors of wireless door lock tuner and of body ECU.

CHECK:

Check continuity between terminals RCO of wireless door lock tuner and RCO of body ECU.

OK:

Continuity

NG

Repair or replace wireharness

OK

3	Check the wireless door lock tuner
---	------------------------------------

CHECK:

Replace the wireless door lock tuner and check if it recovers normally.

OK:

Must be recovered normally.

NG

Proceed to next circuit inspection shown on problem symptoms table.(See page [DI-683](#))

NG

Failure of the original wireless door lock tuner.


CIRCUIT INSPECTION

Power source circuit

CIRCUIT DESCRIPTION

This circuit provides power to operate the driver door ECU.

WIRING DIAGRAM

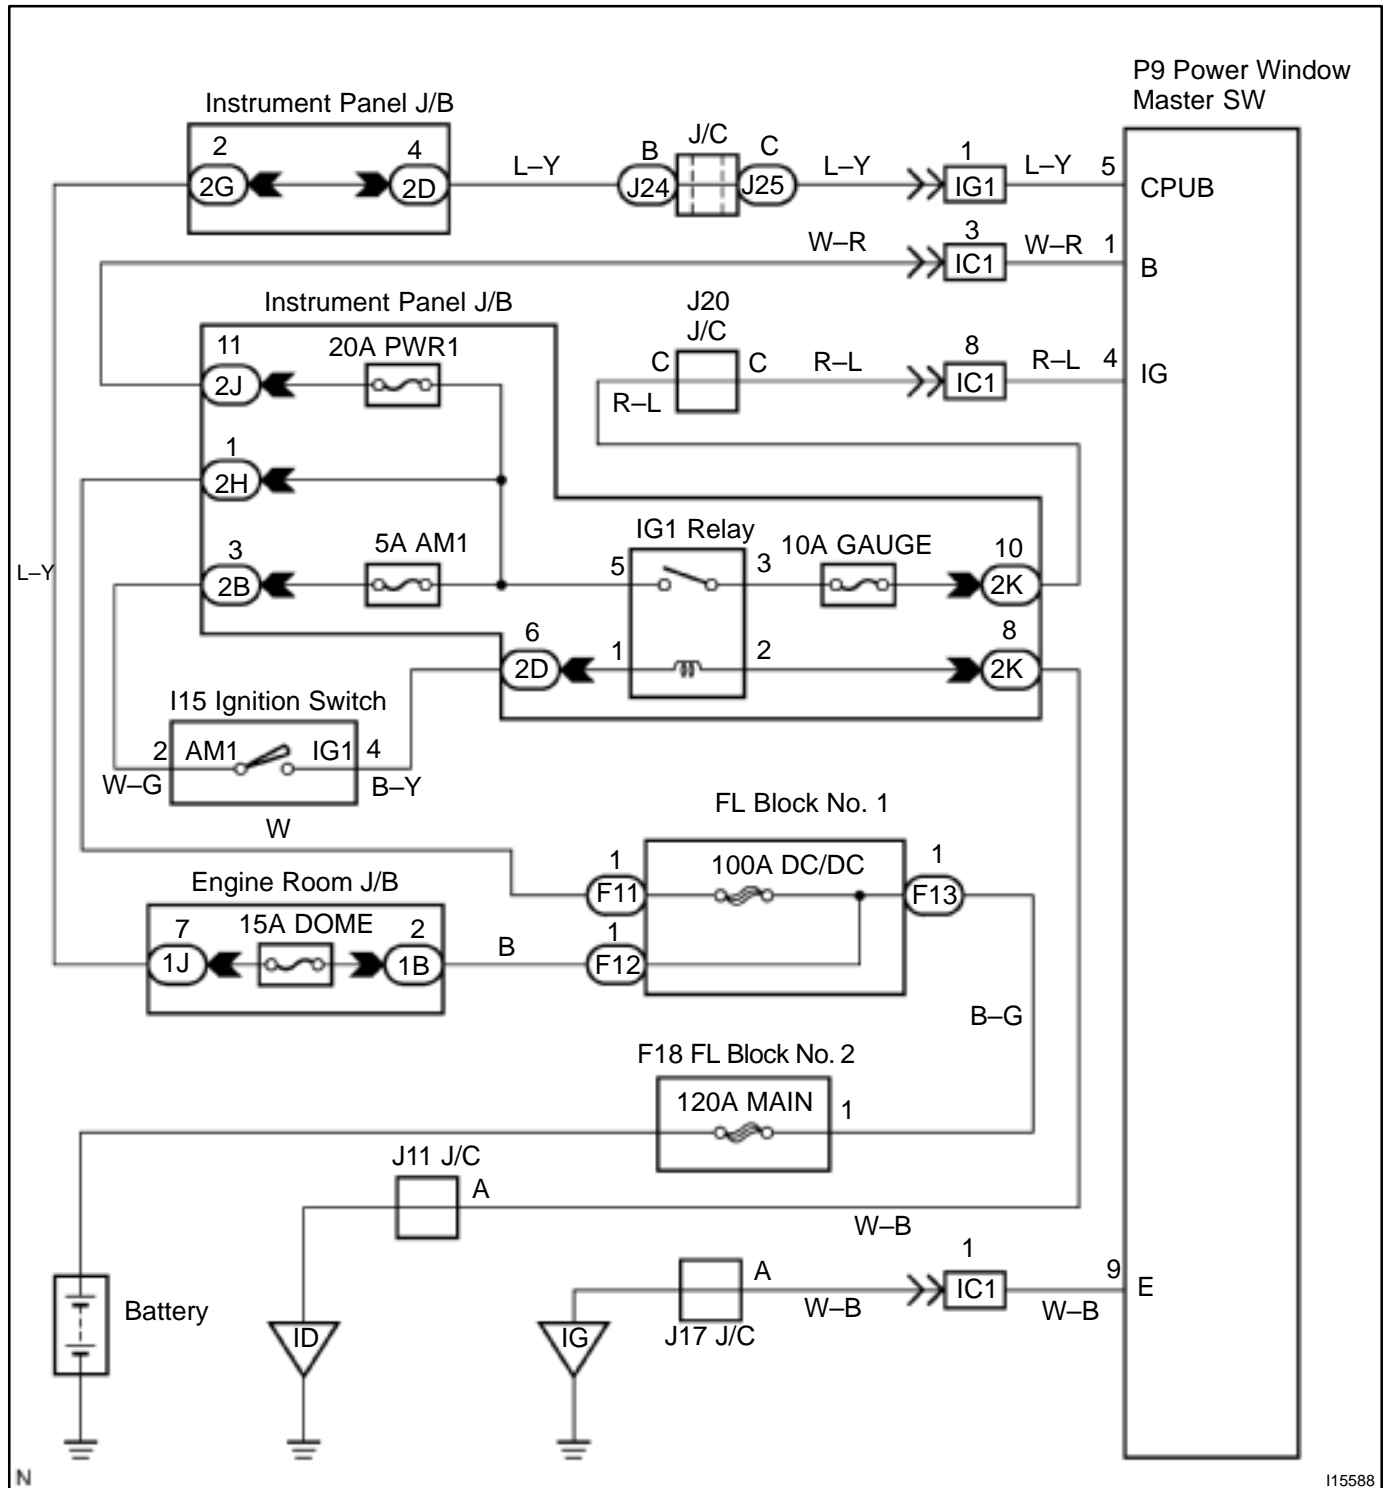

cardiagn.com

INSPECTION PROCEDURE

1	Check PWR1, AM1 and DOME fuse.
---	--------------------------------

CHECK:

Check continuity of PWR1, AM1 and DOME fuse.

OK:

Continuity

NG

Replace the failure fuse.

OK

2	Check voltage between terminals B, CPUB, IG and GND of driver door ECU connector.
---	---

PREPARATION:

Turn ignition switch ON.

CHECK:

Measure voltage between terminals IG, and GND.

OK:

Voltage: 10 – 14V

PREPARATION:

(a) Turn ignition switch OFF.

(b) Disconnect the driver door ECU connector.

CHECK:

Measure voltage between terminals B, CPUB and GND.

OK:

Voltage: 10 – 14V

OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-734](#)).

NG

3	Check wireharness and connector between ECU and body ground.
---	--


NG**Repair or replace wireharness or connector****OK****Check and repair wireharness and connector
between ECU and battery.**

Door unlock detection switch circuit

CIRCUIT DESCRIPTION

The door unlock detection switch is built in the door lock motor assembly. This switch is ON when the door lock knob is in the unlock position and OFF when the lock knob is in the lock position. The ECU detects the door lock knob conditions is this circuit. It is used as one of the operating conditions for the key confinement prevention function.

WIRING DIAGRAM

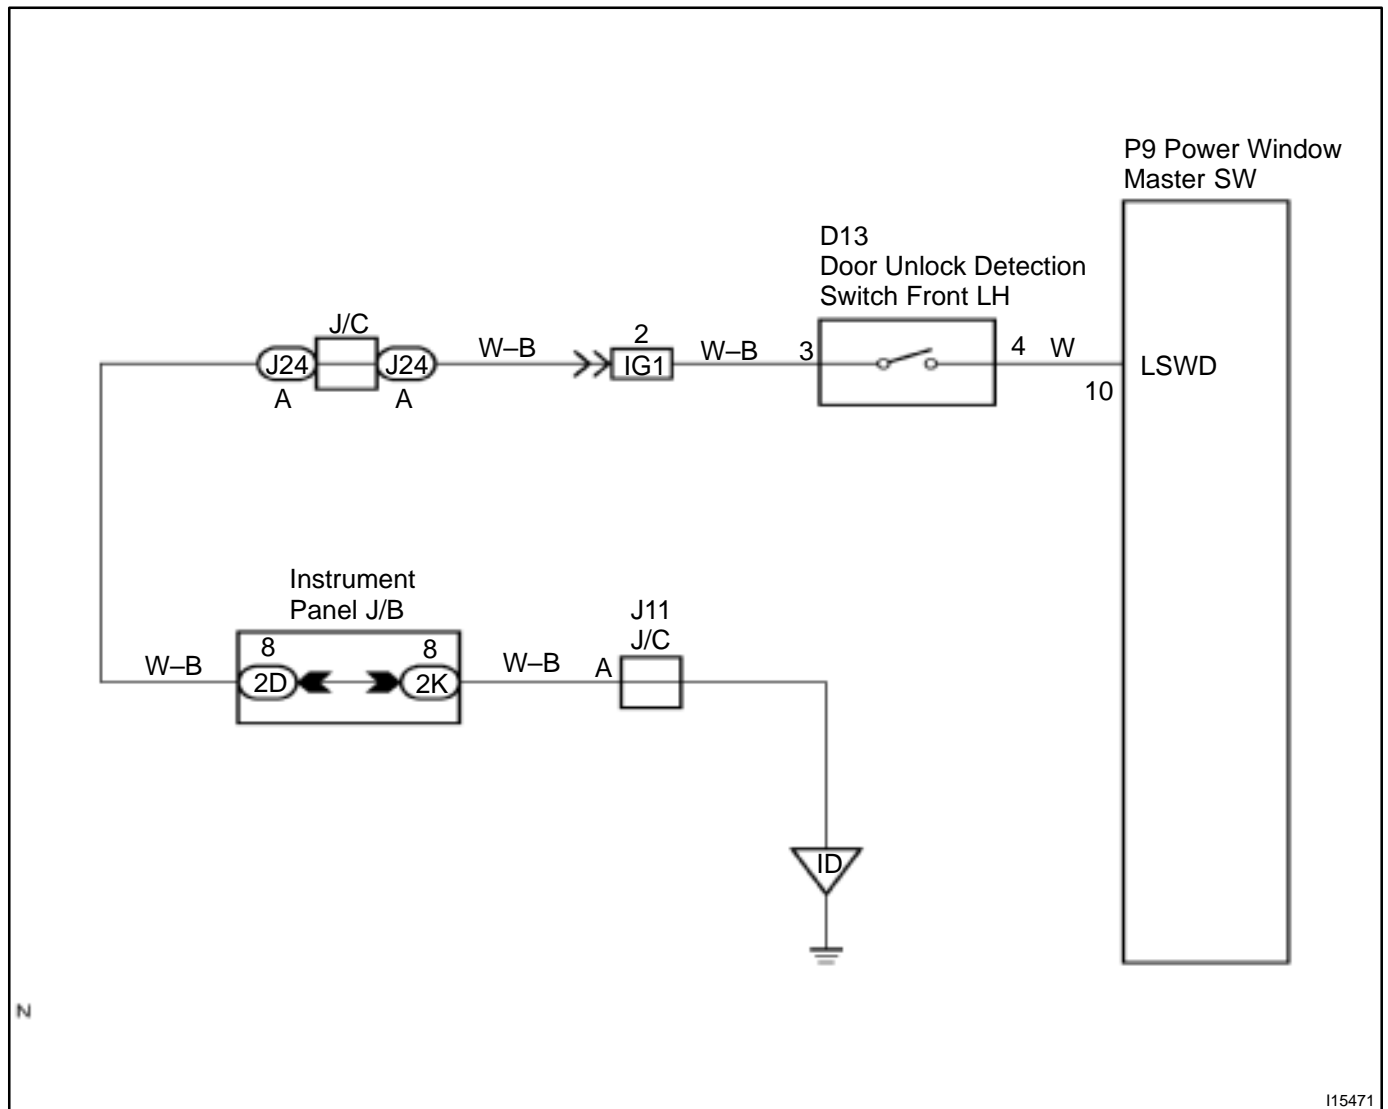

I15471

INSPECTION PROCEDURE

1	Check door unlock detection switch (See page BE-62).
----------	---

NG**Replace the door lock motor.****OK**

2	Check wireharness and connector between door unlock detection switch and driver door ECU.
----------	--

NG**Repair or replace wireharness or connector.****OK**

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-734](#)).


Door key lock and unlock switch circuit

CIRCUIT DESCRIPTION

The door key lock and unlock switch is built in the door key cylinder. When the key is turned to the lock side, terminal 3 of the switch is grounded and when the key is turned to the unlock side, terminal 2 of the switch is grounded.

Door key lock and unlock switch can be checked using DTC check. (Refer to [DI-765](#))

WIRING DIAGRAM

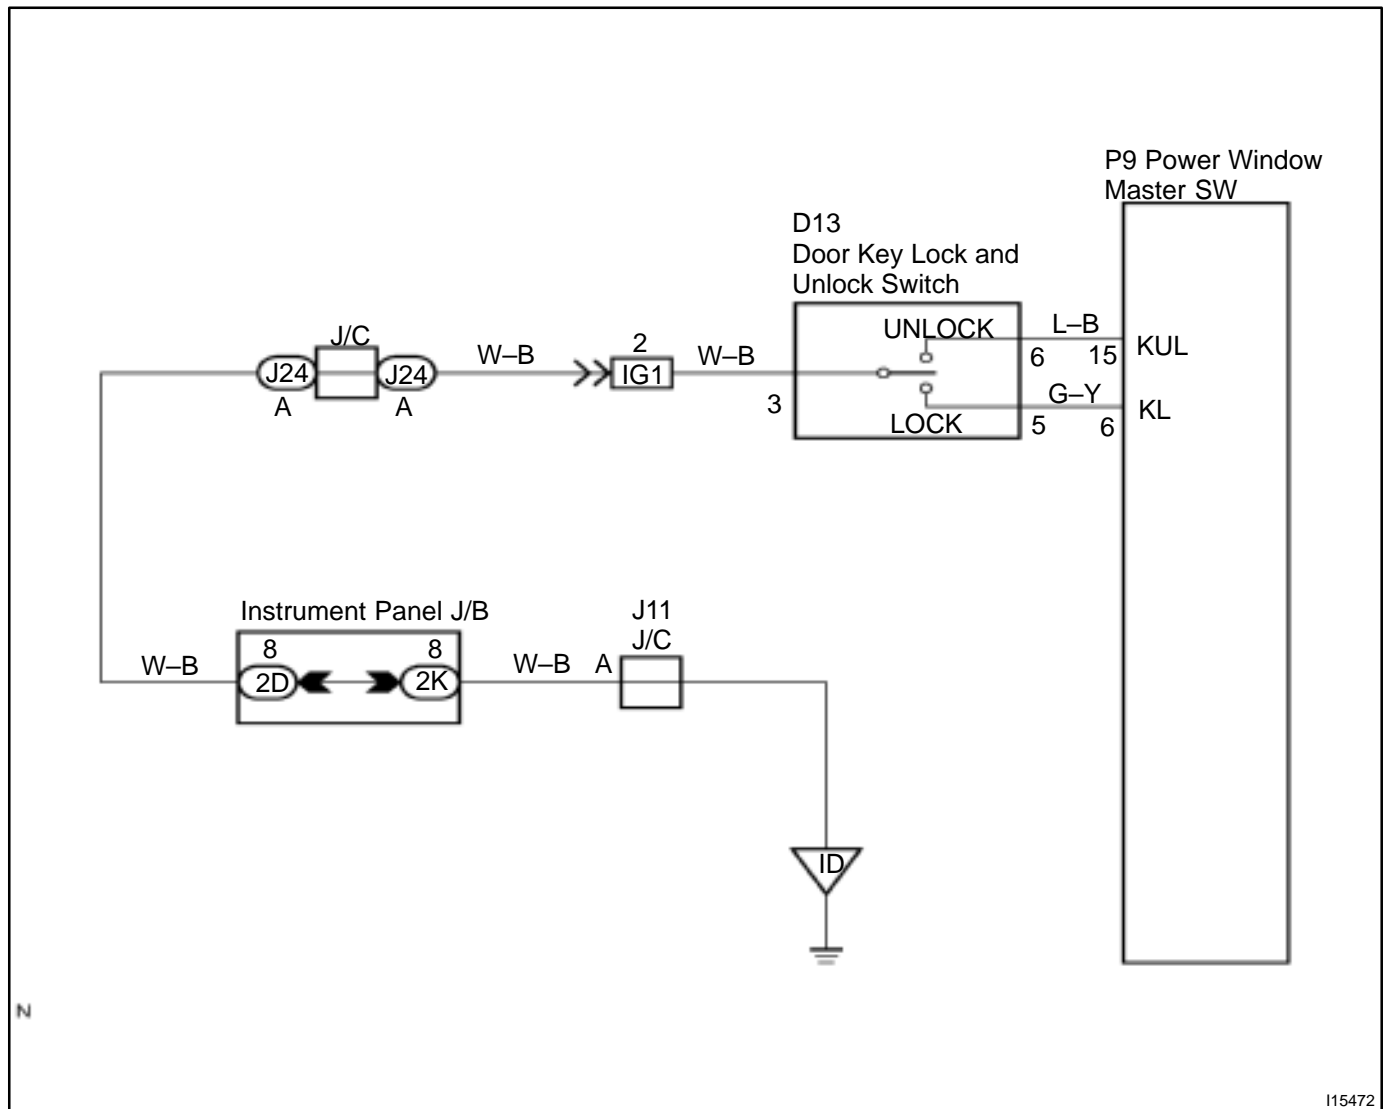

INSPECTION PROCEDURE

1	Check the door key lock and unlock switch using DTC check (See page DI-765).
---	---

OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-683](#)).

NG

2	Check the door key lock and unlock switch (See page BE-62).
---	--

NG

Replace the door key lock and unlock switch.

NG

3	Check wireharness and connector between door key lock and unlock switch and driver door ECU.
---	--

NG

Repair or replace wireharness or connector.

OK


Proceed to next circuit inspection shown on problem symptoms table (See page [DI-734](#)).

Door courtesy light and courtesy switch circuit

CIRCUIT DESCRIPTION

The door courtesy switch goes on when the door is opened and goes off when door is closed.

WIRING DIAGRAM

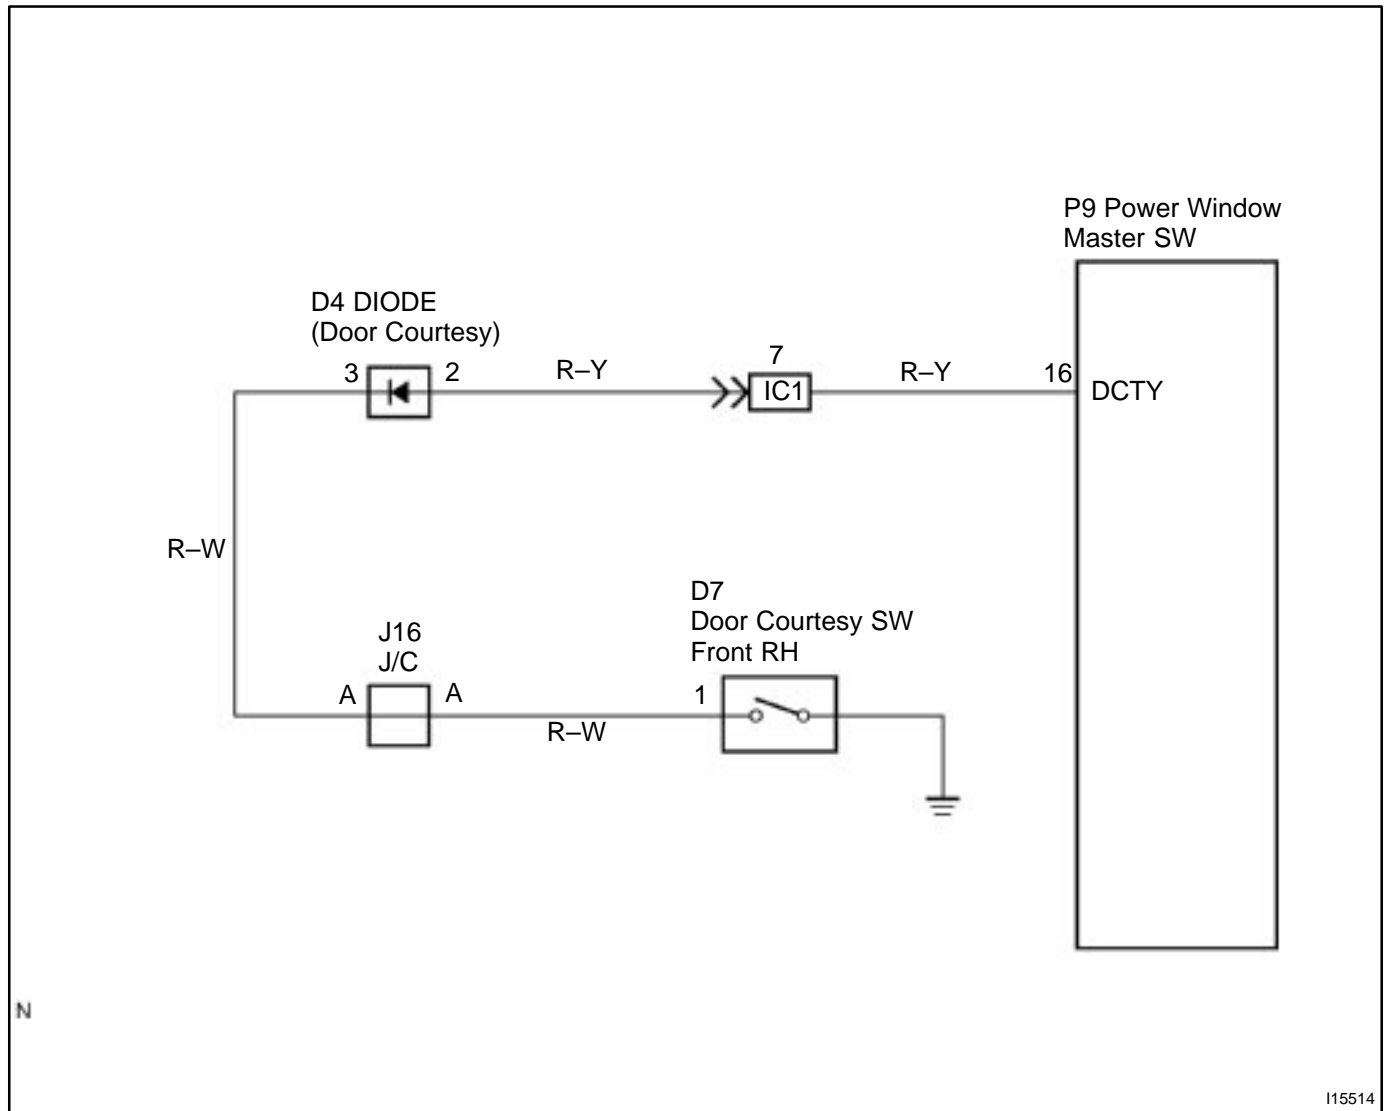

INSPECTION PROCEDURE

1	Check operation of door courtesy light.
----------	--

CHECK:

Check that door courtesy light comes on when door opened, and goes off when door is closed.

OK:

Must be operated normally.

OK

Proceed to next circuit inspection shown on problem symptom table (See page [DI-734](#)).

NG

2	Check courtesy light (See page BE-27).
----------	---

NG

Replace the courtesy light.

OK

3	Check courtesy switch (See page BE-27).
----------	--

NG

Replace the courtesy switch.

OK

4	Check wireharness and connector between courtesy light and driver door ECU, courtesy switch and driver door ECU.
----------	---

NG


Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-734](#)).

Power window motor circuit

WIRING DIAGRAM

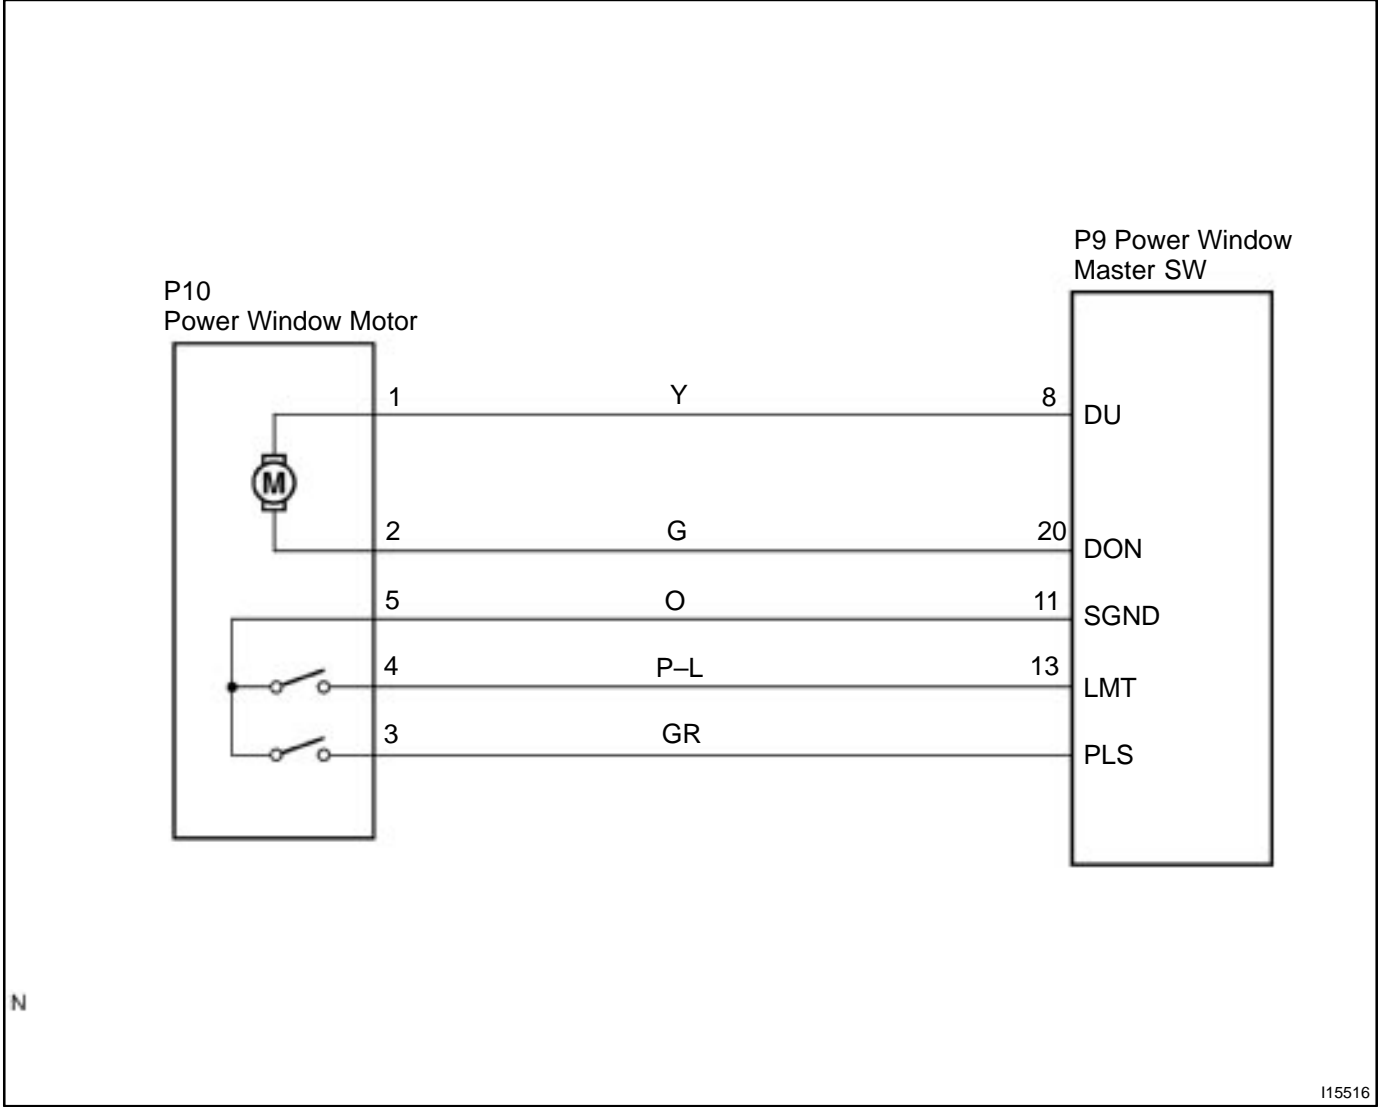

cardiagn.com

INSPECTION PROCEDURE

1	Check power window motor (See page BE-56).
----------	---

NG**Replace the power window motor.****OK**

2	Check wireharness and connector between power window motor and driver door ECU.
----------	--

NG**Repair or replace wireharness or connector.****OK**


**Proceed to next circuit inspection shown on
problem symptoms table
(See page [DI-734](#)).**

Jam protection limit switch circuit

CIRCUIT DESCRIPTION

Jam protection limit switch is built-in the power window motor. This switch functions to turn "OFF" before the top dead center, and ECU reads this "OFF" signal resulting in closing the window fully.

WIRING DIAGRAM

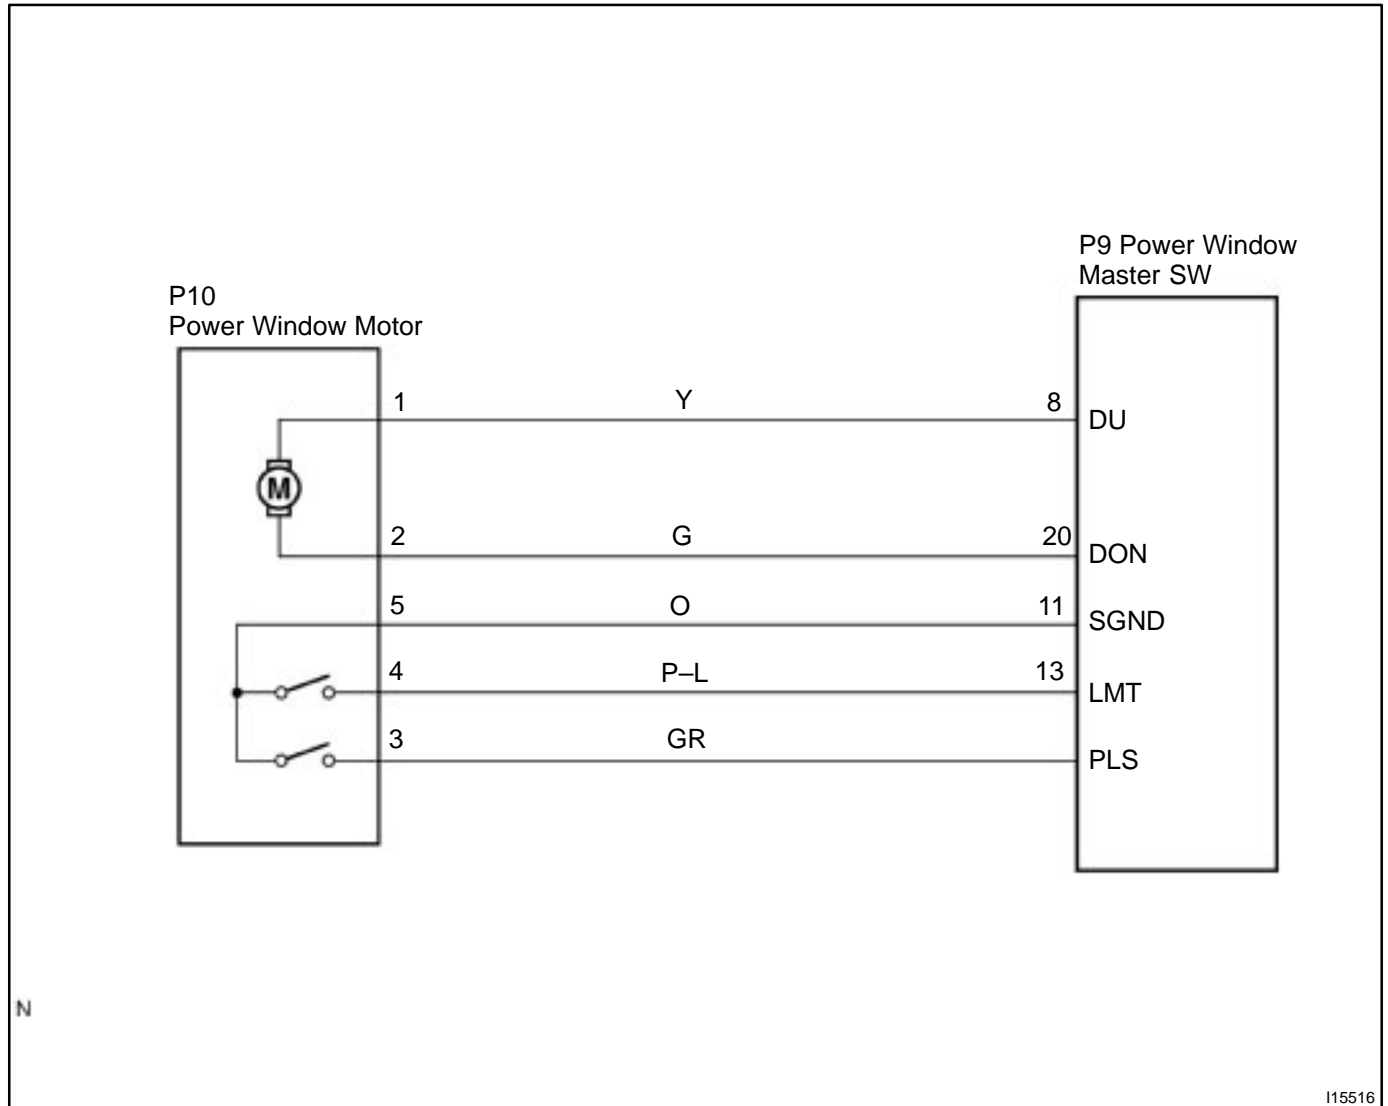

INSPECTION PROCEDURE

1	Check jam protection limit switch (See page BE-56).
----------	--

NG**Replace the power window motor.****OK**

2	Check wireharness and connector between jam protection limit switch and driver door ECU.
----------	---

NG**Repair or replace wireharness or connector.****OK**


Proceed to next circuit inspection shown on problem symptoms table (See page [DI-734](#)).

Jam protection pulse switch circuit

CIRCUIT DESCRIPTION

Jam protection pulse switch is built-in the power window motor. Pulse switch outputs ON/OFF pulse when the motor rotates.

WIRING DIAGRAM

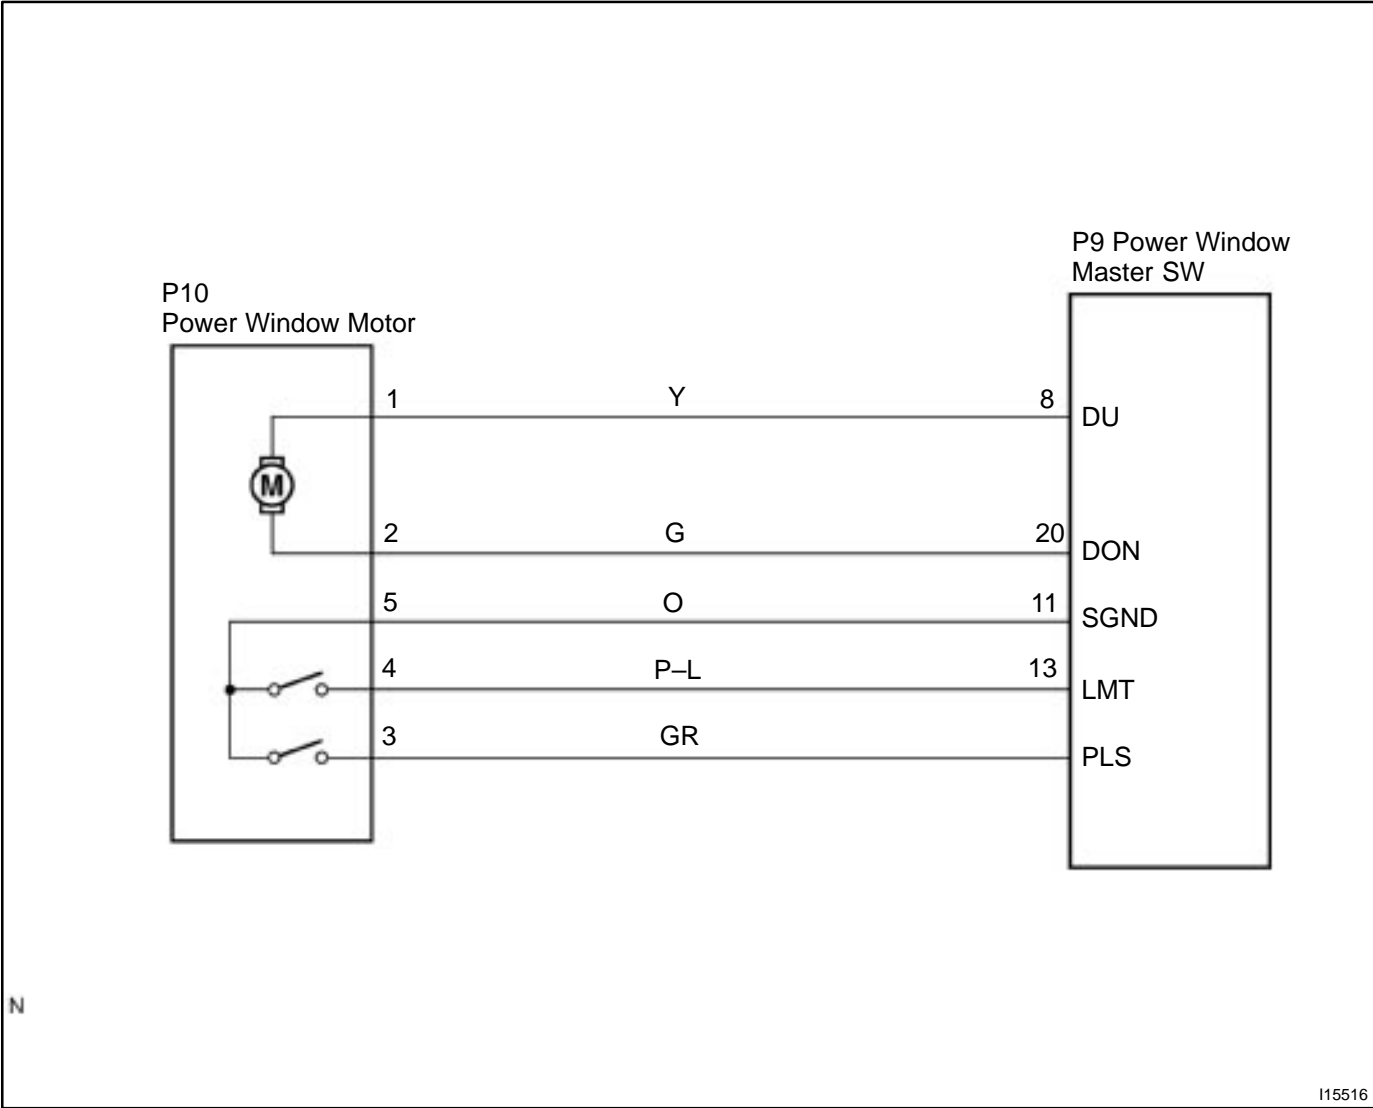

cardiagn.com

INSPECTION PROCEDURE

1	Check jam protection pulse switch (See page BE-56).
----------	--

NG**Replace the power window motor.****OK**

2	Check wireharness and connector between jam protection pulse switch and driver door ECU.
----------	---


NG**Repair or replace wireharness or connector.****OK**


Proceed to next circuit inspection shown on problem symptoms table (See page [DI-734](#)).

PRE-CHECK


1. DIAGNOSIS SYSTEM

- (a) As shown in the following illustration, each ECU of this vehicle is connected by communication bus and it transmits each signal by communication. This communication bus is self-diagnosed by Body ECU and it memorizes DTC when it detects communication stop to ECU or communication bus +B short or GND short. There is a possibility that Body ECU cannot self-diagnose accurately unless it doesn't work normal. So, please note that the troubleshooting of Body Electrical System should be done after confirming if Body ECU and Open door indicator works normal by 2. "BASIC INSPECTION" described later.

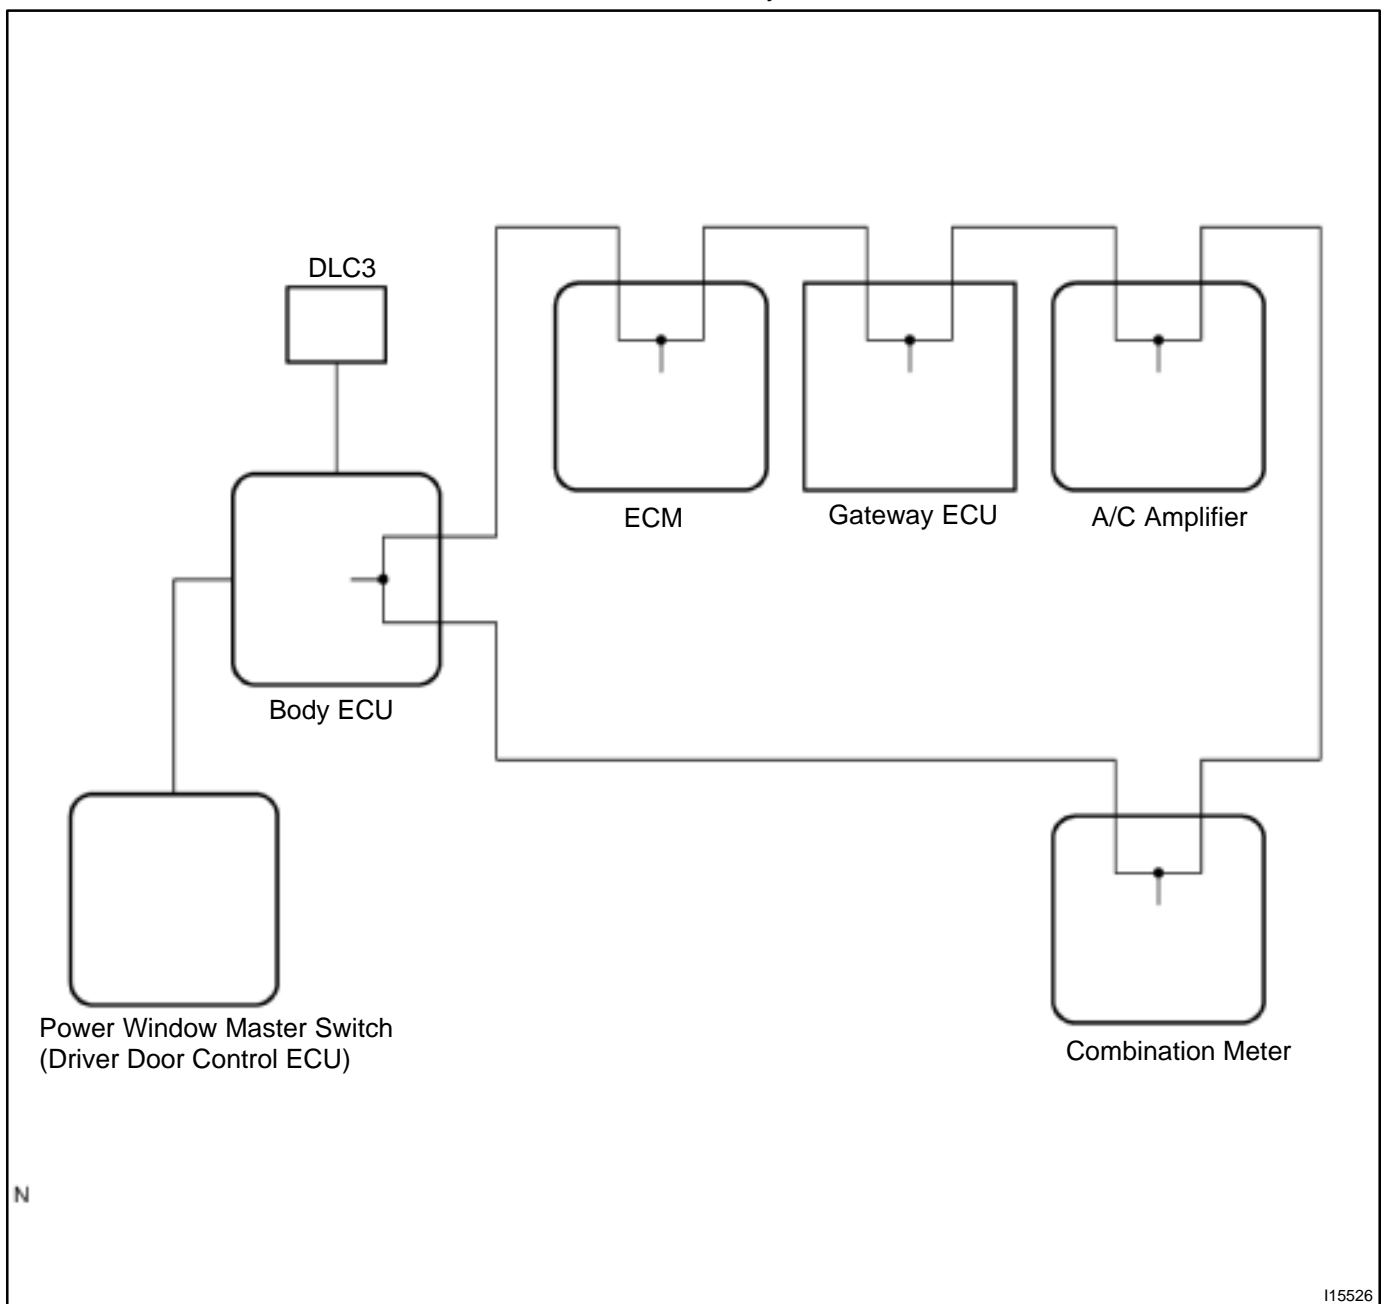

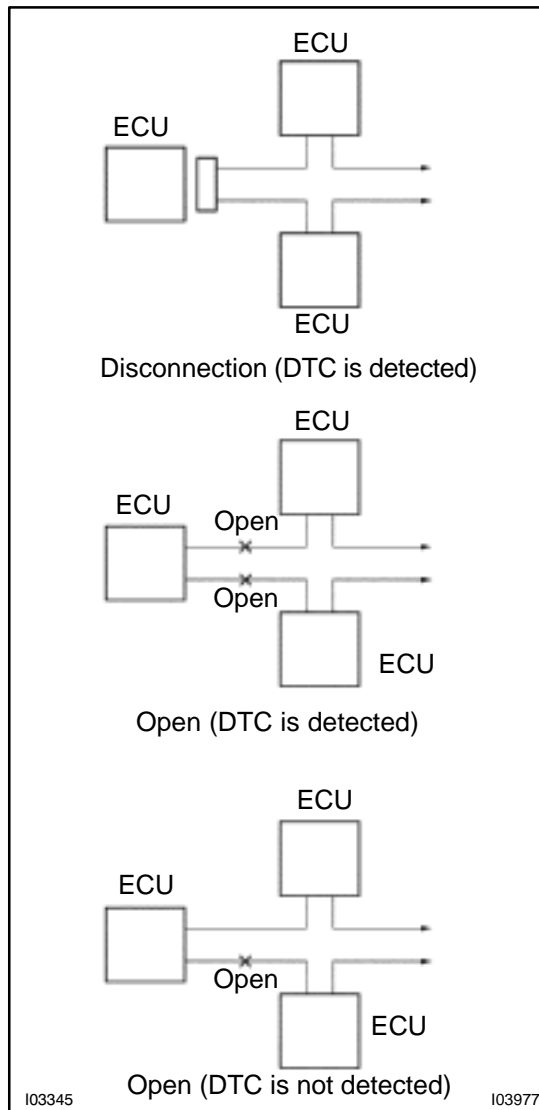

- (b) If DTC of ECU communication stop is output, there is a possibility of connector disconnection or 2 communication buses open. It will not become abnormal with only 1 communication bus open.

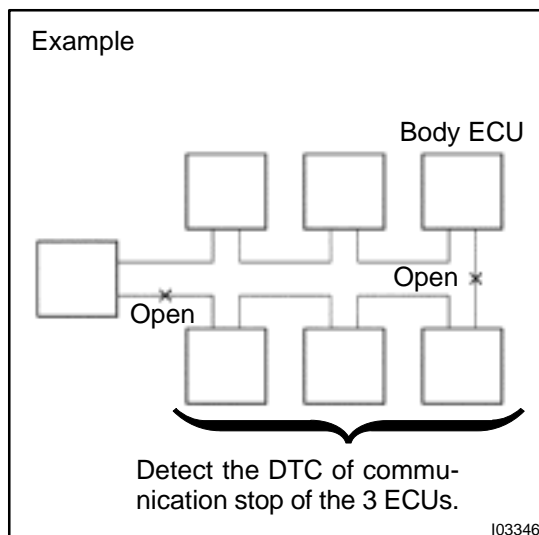

- (c) If 2 communication buses are open at the position as shown in the illustration, DTC of ECU communication stop between those 2 buses is output.

2. BASIC INSPECTION**INSPECT BODY ECU**

- | | |
|----------|------------------------------------|
| 1 | Check room light operation. |
|----------|------------------------------------|

HINT:

With this inspection body ECU CPU can be diagnosed if it works normal or not.

CHECK:

Check if the room light works normal at DOOR position.


OK**Go to next step "OPEN DOOR INDICATOR LIGHT INSPECTION".****NG**

- | | |
|----------|--|
| 2 | Check interior light system (Except body ECU) (See page BE-27). |
|----------|--|

OK**Replace the body ECU.****NG****Repair or replace malfunction part.**

INSPECT OPEN DOOR INDICATOR LIGHT

1 Check open door indicator light.

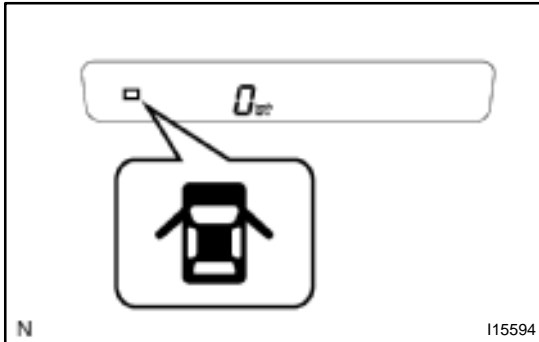

CHECK:

Check if open door Indicator light is turned on when either door open.

HINT:


If open door Indicator light is not turned on, DTC will not be output.

OK

Go to step 3. "DTC CHECK".


NG

Repair the open door indicator light (See page [BE-39](#)).

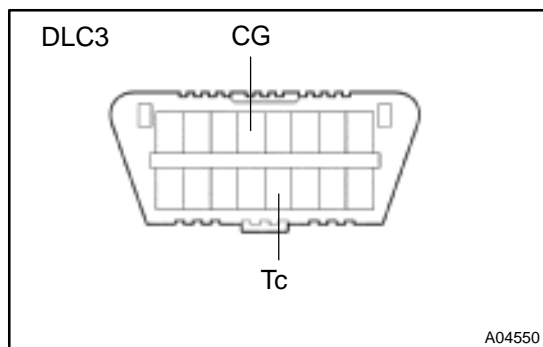


3. DTC CHECK (Using diagnosis check wire)

- Using SST, connect terminals Tc and CG of DLC3.
SST 09843-18020
- Turn the ignition switch ON.
- Read the DTC on the open door indicator light.

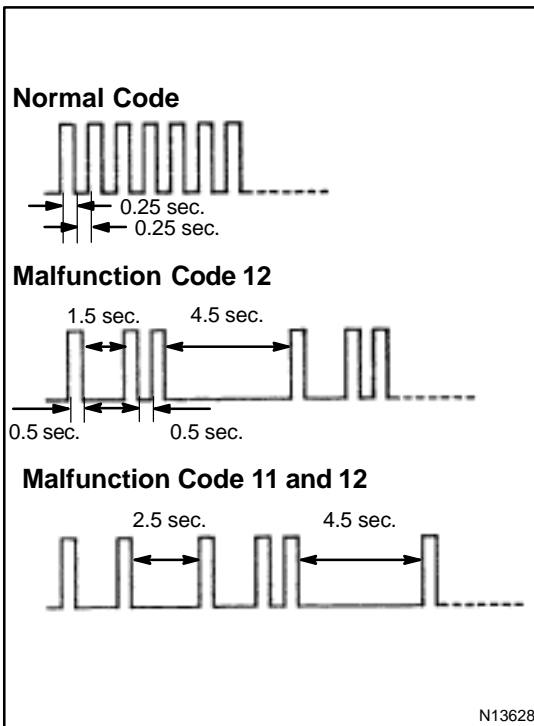

As an example, the blinking patterns for codes; normal, 12, and 11 and 12 are shown in the illustration.

- (d) Check for the problem using the DTC table on the next page.
- (e) After completing the check, turn the ignition switch off, and disconnect terminals Tc and E1.

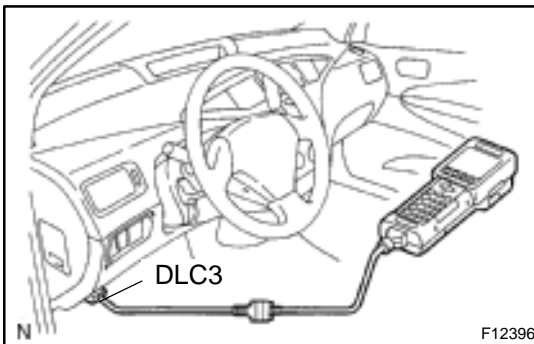




4. DTC CHECK (Using hand-held tester)

- (a) Prepare the hand-held tester.
- (b) Connect the hand-held tester to DLC3.
- (c) Turn the ignition switch ON and switch the hand-held tester main switch ON.
- (d) Use the hand-held tester to check the DTCs, note them down. (For opening instructions, see the hand-held tester's instruction book.)
- (e) See page [DI-757](#) to confirm the details of the DTCs.


5. DTC CLEARANCE

DTC will be cleared when the trouble output to DTC is recovered normally.


TERMINALS OF ECU

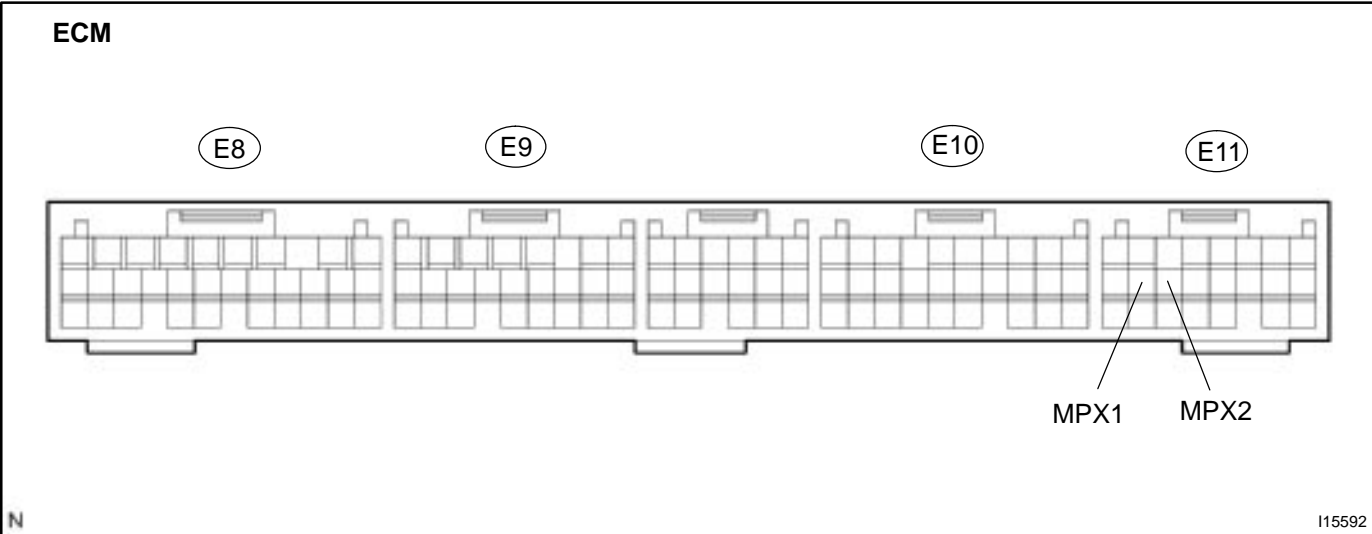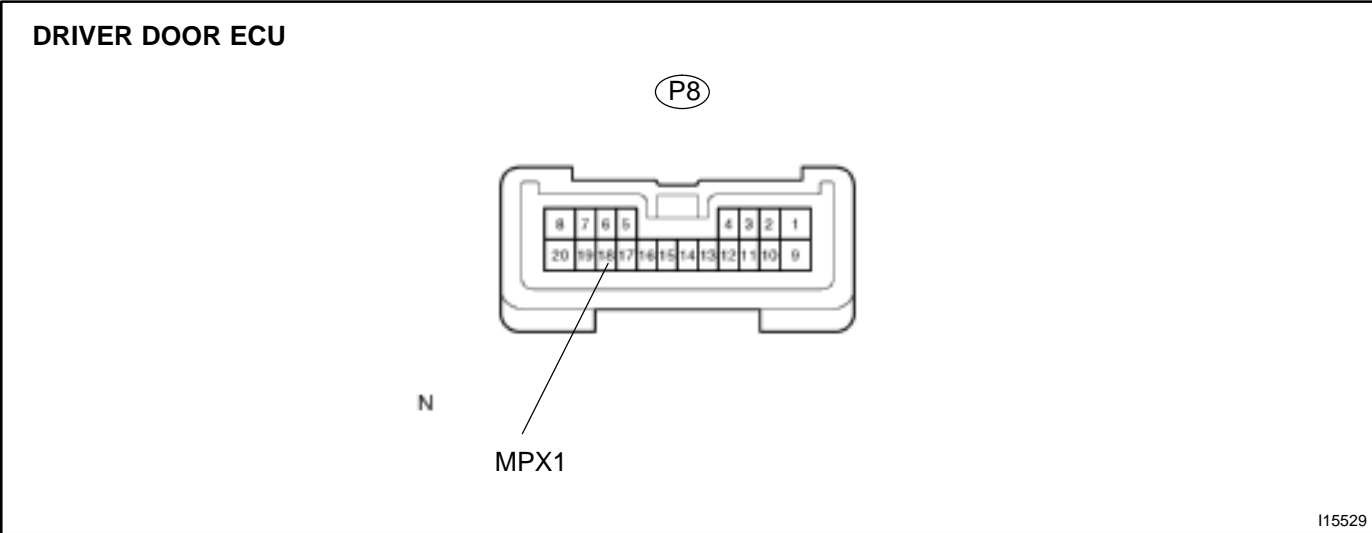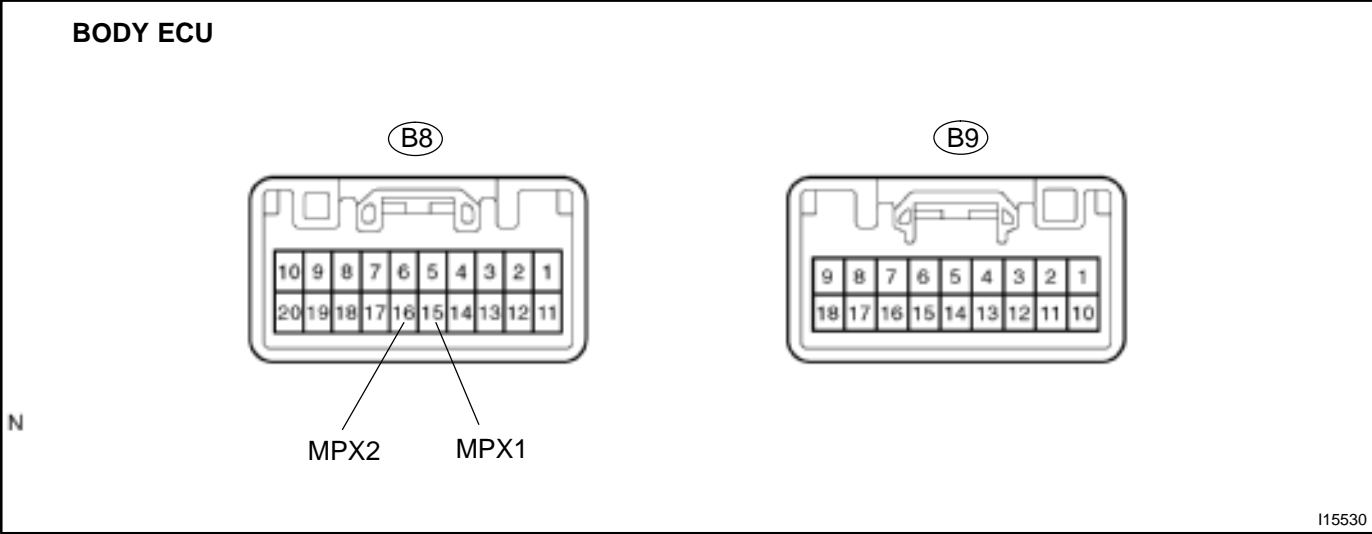


A/C amplifier

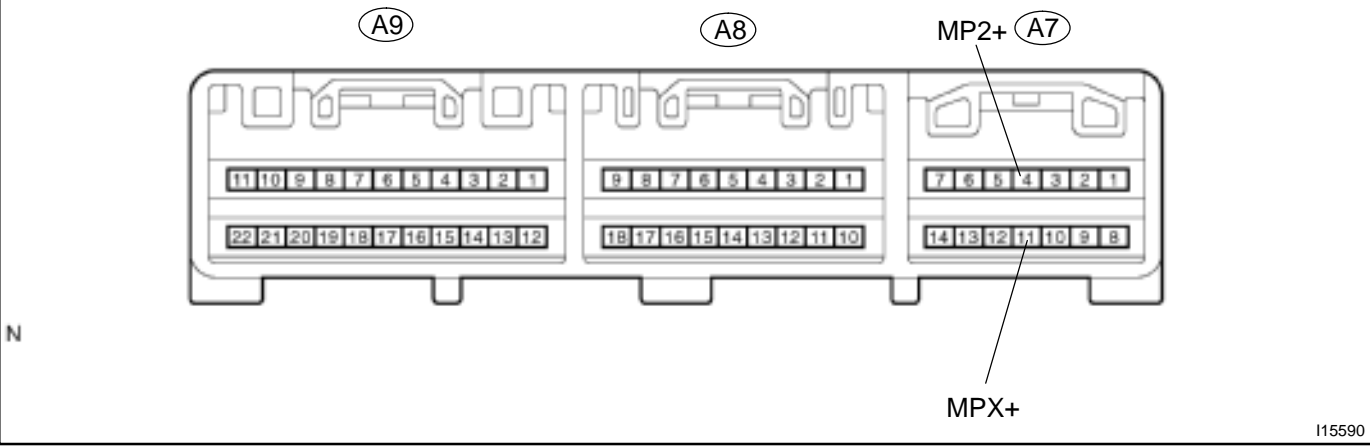


Combination Meter ECU

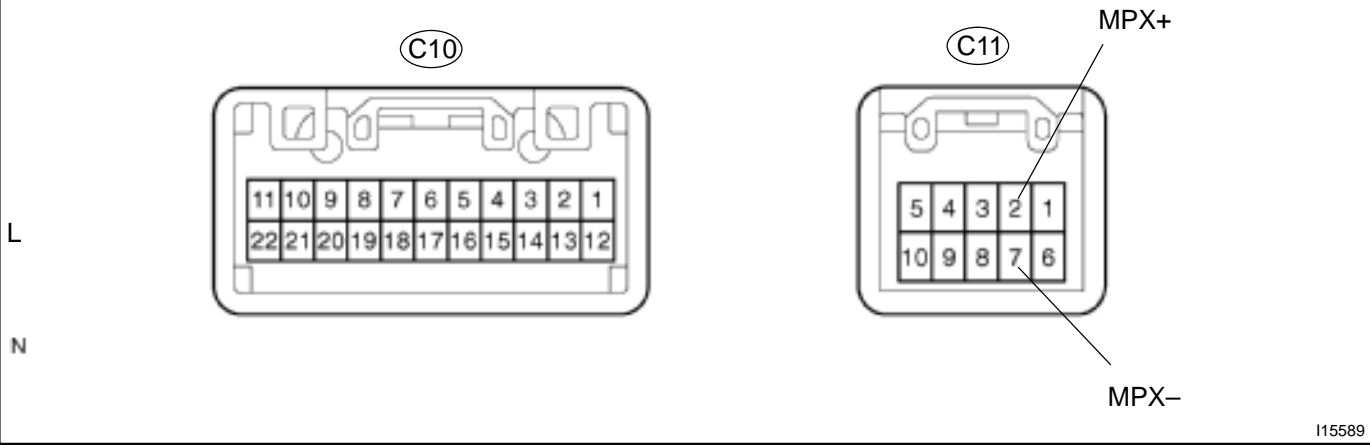

Multi Display

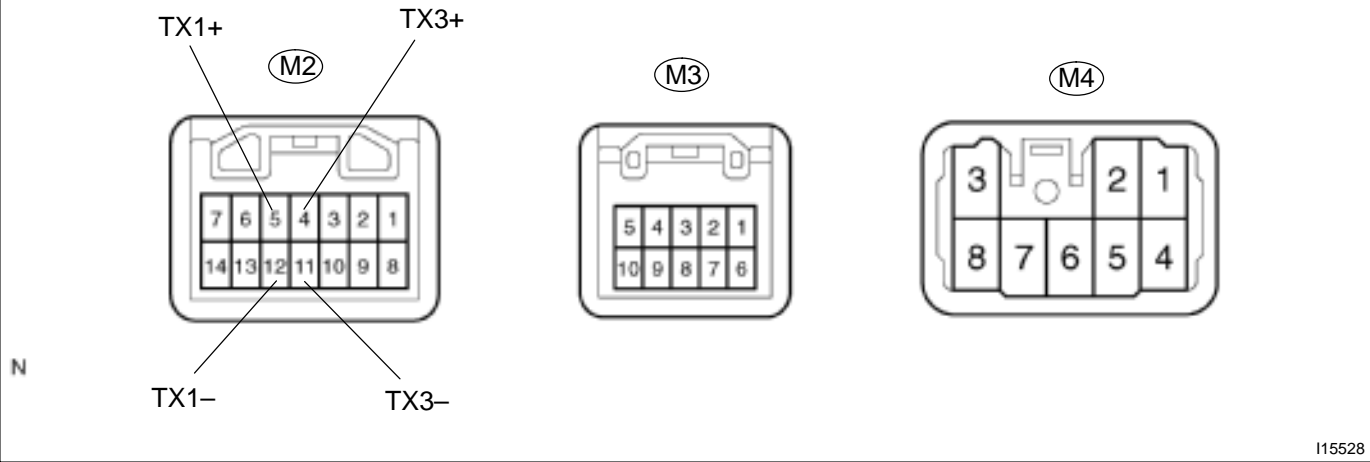

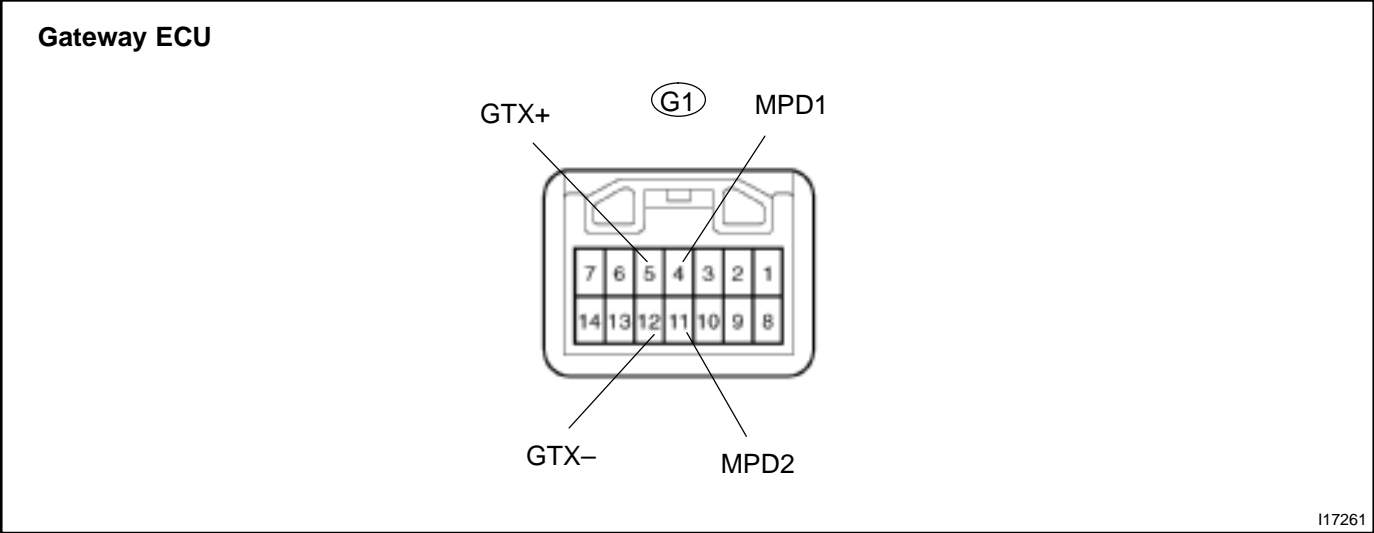

Symbols (Terminals No.)	Wiring Color	Condition	STD Value (V)
IG ↔ GND (2 ↔ 14)	B-Y ↔ W-B	Ignition switch OFF or ACC	Below 1 V
		Ignition switch ON	10 – 14 V
MDP1 (4)	GR-B	A/C ECU communication circuit	–
GTX+ (5)	R	AVC-LAN communication circuit	–
CG ↔ Body ground (7 ↔ Body ground)	W-B ↔ Body ground	Constant	Below 1 V
BATT ↔ GND (8 ↔ 14)	R-G ↔ W-B	Constant	10 – 14 V
ACC ↔ GND (9 ↔ 14)	GR-R ↔ W-B	Ignition switch OFF	Below 1 V
		Ignition switch ACC or ON	10 – 14 V
MDP2 (11)	GR-L	Engine and ECT ECU communication circuit	–
GTX- (12)	G	AVC-LAN communication circuit	–
GND ↔ Body ground (14 ↔ Body ground)	W-B ↔ Body ground	Constant	Below 1 V

CIRCUIT INSPECTION


DTC	B1211 / 11	Driver door ECU communication stop
------------	-------------------	---

CIRCUIT DESCRIPTION

This DTC is output when communication stops between driver door ECU and body ECU.

DTC No.	DTC Detecting Condition	Trouble Area
B1211/11	No communication from driver door ECU more than 10 seconds.	<ul style="list-style-type: none"> • Driver door ECU • Wireharness

WIRING DIAGRAM

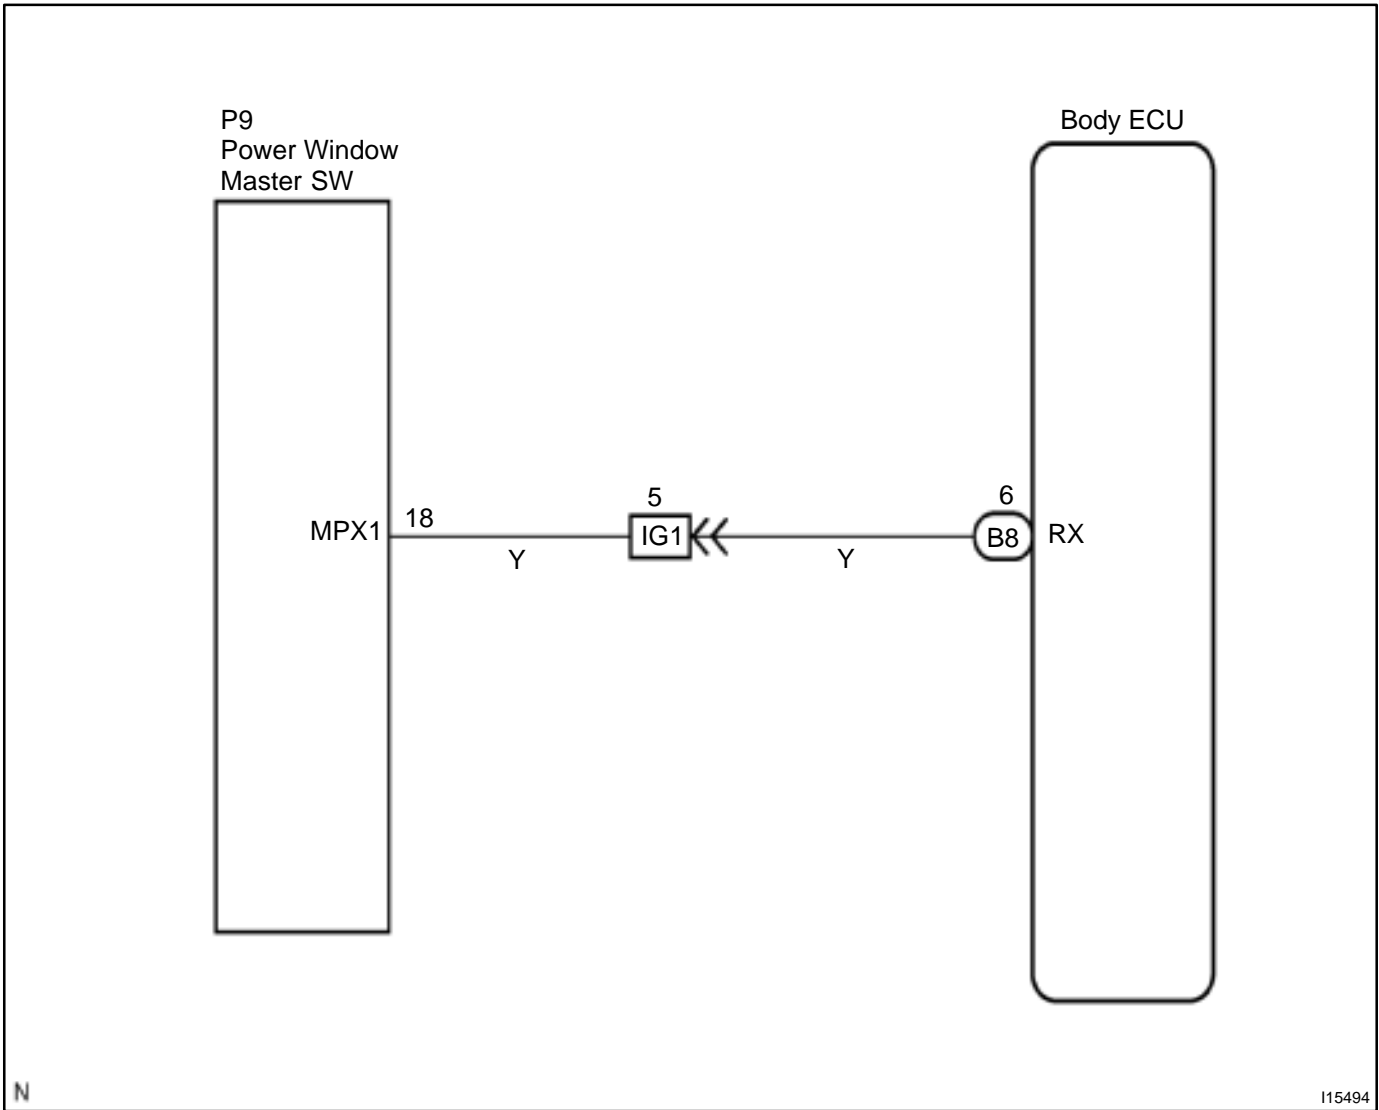

cardiagn.com

INSPECTION PROCEDURE

1	Check driver door ECU.
----------	-------------------------------


CHECK:

Check if the driver door window glass auto up.

HINT:

With this inspection, the driver door ECU CPU can be diagnosed if it works normally or not.

NG**Replace the driver door ECU.****OK**

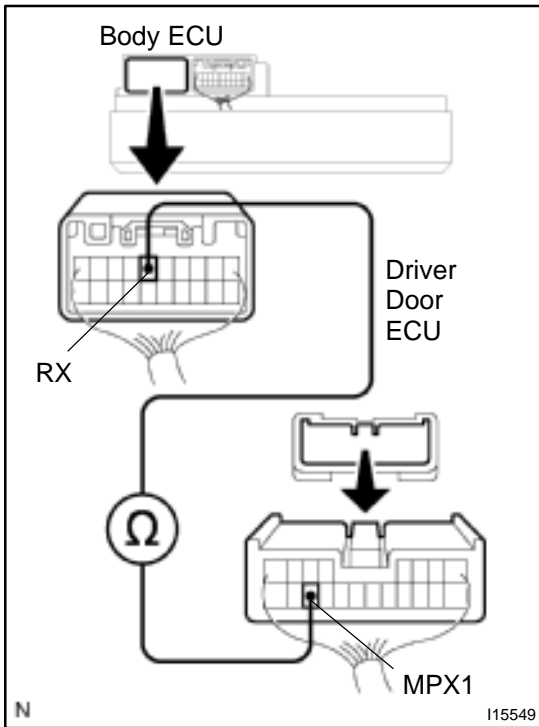2**Check wireharness.****PREPARATION:**

Disconnect connector "B8" of body ECU and "P9" of driver door ECU.

CHECK:

Check continuity between terminal RX of body ECU and MPX1 of driver door ECU.

OK:

There is a continuity in wireharness.

HINT:

If there is OPEN in wireharness, please repair it.

NG**Repair or replace wireharness.****OK****Replace the driver door ECU.**


DTC	B1242 / 42	Wireless door lock tuner circuit malfunction
------------	-------------------	---

CIRCUIT DESCRIPTION

This DTC is output when GND short of RDA terminal is detected.


DTC No.	DTC Detecting Condition	Trouble Area
B1242/42	GND short of RDA terminal	<ul style="list-style-type: none"> • Wireharness • Wireless door lock tuner • Body ECU

WIRING DIAGRAM

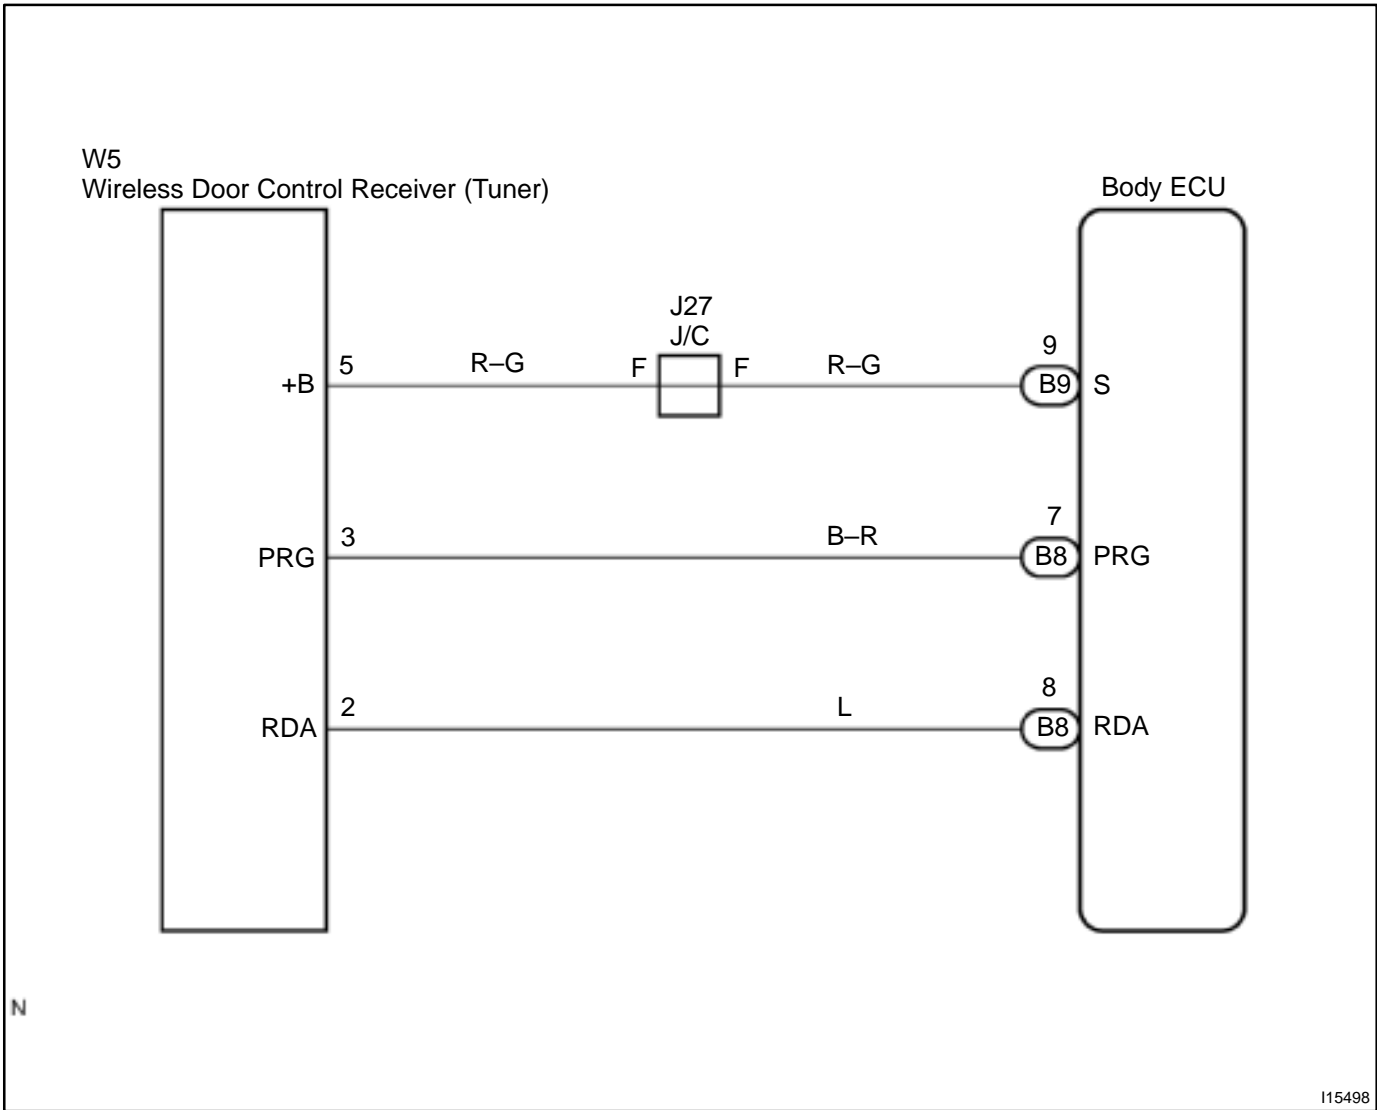

INSPECTION PROCEDURE

1 Check wireharness.

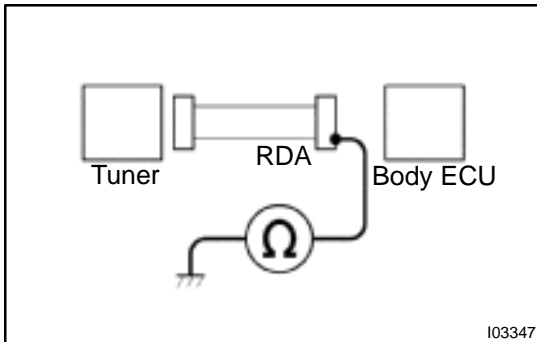**PREPARATION:**

Disconnect the connector of tuner and body ECU.

CHECK:

Check the continuity between wireharness and body ground.

OK:


No continuity.

NG

Repair or replace the wireharness.

OK

2 Check body ECU.

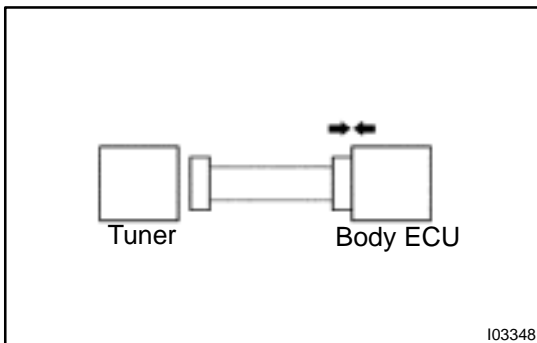**PREPARATION:**

Connect the connector of body ECU.

CHECK:

Check the DTC.

OK:

B1242/42 is not output.

NG

Replace the body ECU.

OK

Replace the tuner.

DTC	B1248/48	AVC-LAN circuit communication stop
------------	-----------------	---

CIRCUIT DESCRIPTION


This DTC is output when communication stops between gateway ECU and AVC-LAN circuit.

The body ECU performs the diagnosis check of the gateway ECU communication error to "AVC-LAN".

The condition of registration can be checked by DTC of the body ECU.

DTC No.	DTC Detecting Condition	Trouble Area
B1248/48	Condition that the gateway ECU cannot register to AVC-LAN.	<ul style="list-style-type: none"> • Gateway ECU • Wireharness

WIRING DIAGRAM

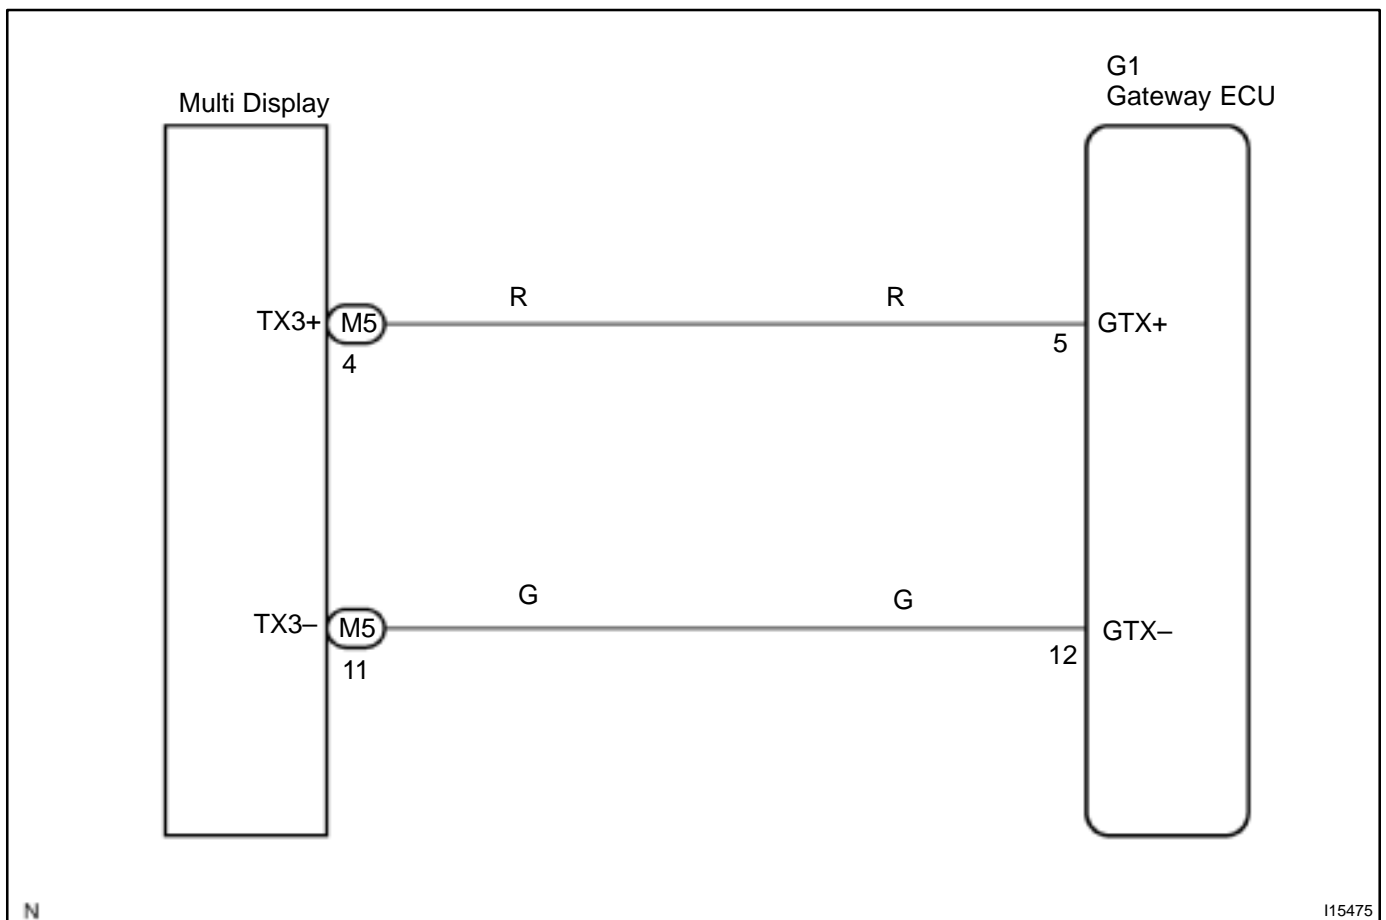

INSPECTION PROCEDURE

1	Check "Service check mode" of audio system. (AVC-LAN diagnosis check) (See page DI-791)
---	---

CHECK:

Connection of the gateway ECU can be checked by AVC-LAN diagnosis. ("Service check mode" of audio system)

OK:

Display

G/W: OK (System is normal)

G/W: NG (Communication error)


G/W: None (Never registered)

NG

Replace the gateway ECU.

OK

2	Check wireharness
---	-------------------

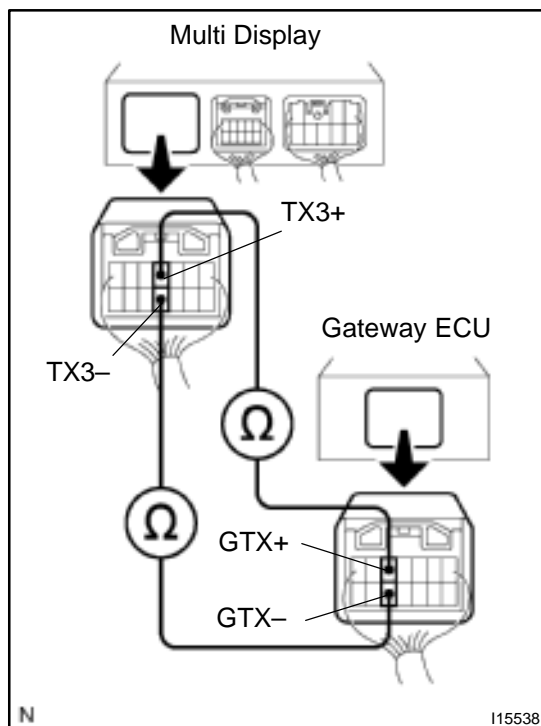**PREPARATION:**

Disconnect connector "G1" of gateway ECU and "M2" of multi display.

CHECK:

- Check continuity between terminals GTX+ of gateway ECU and TX3+ of multi display.
- Check continuity between terminals GTX- of gateway ECU and TX3- of multi display.

OK:

There is a continuity in wireharness of both (a) and (b), or either (a) or (b).

HINT:

If there is OPEN in wireharness of either (a) or (b), please repair it.

NG

Repair or replace wireharness.

OK

Replace the gateway ECU.


DTC	B1261 / 61	ECM communication stop
------------	-------------------	-------------------------------

CIRCUIT DESCRIPTION

This DTC is output when communication stops between ECM and body ECU.

DTC No.	DTC Detecting Condition	Trouble Area
B1261/61	No communication from ECM more than 10 seconds.	<ul style="list-style-type: none"> • ECM • Wireharness

WIRING DIAGRAM

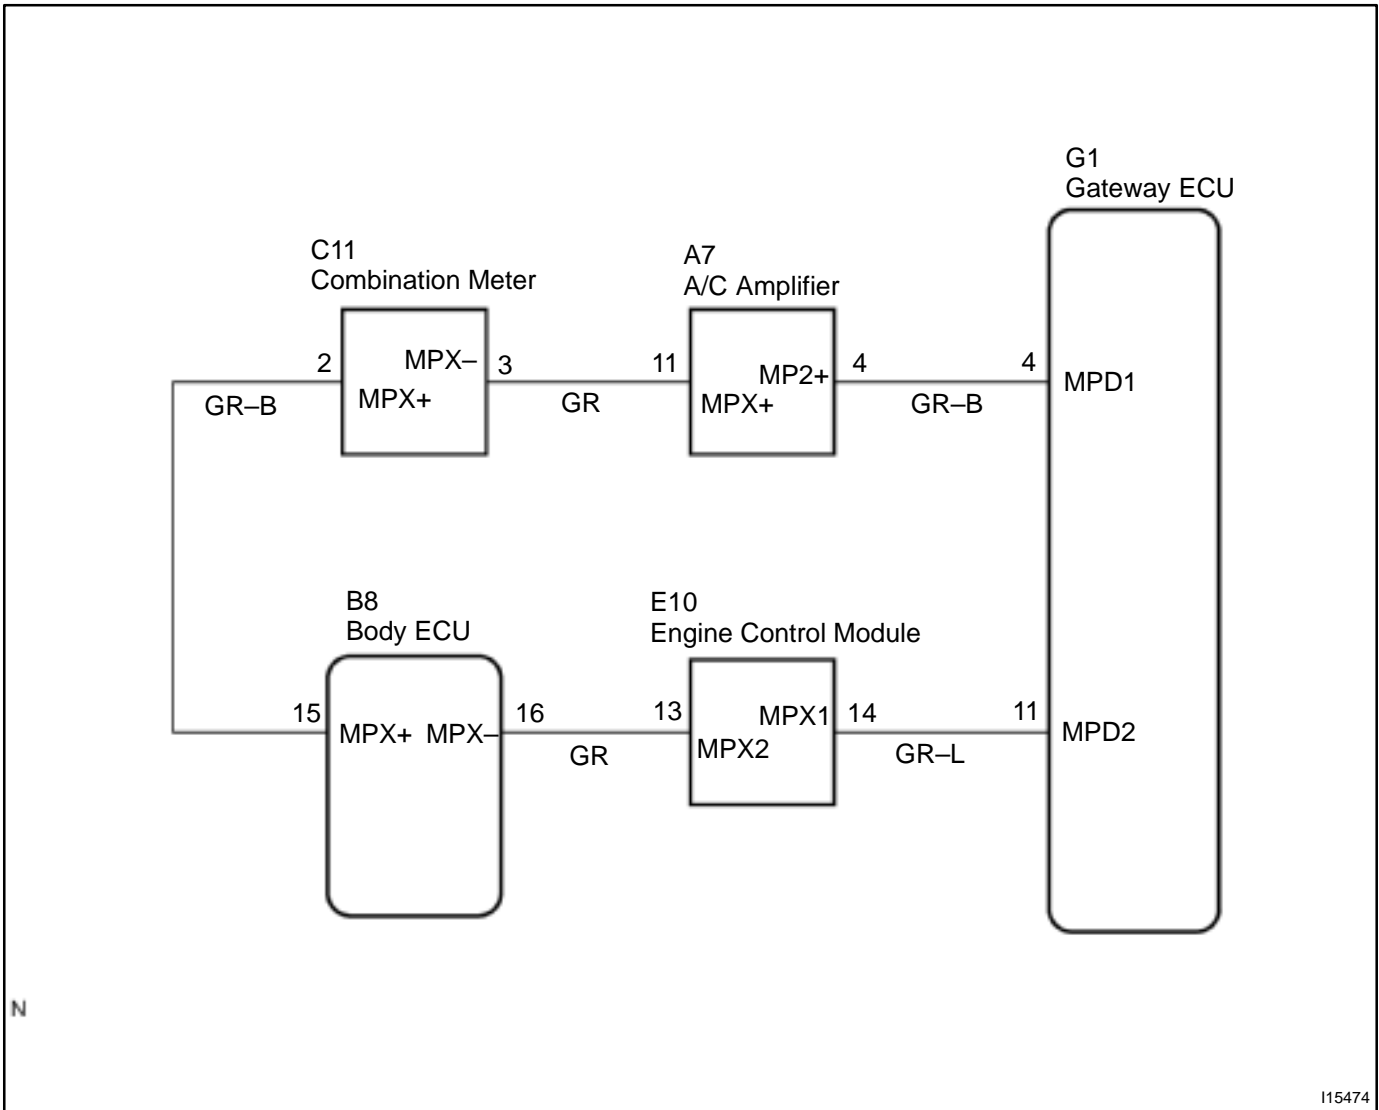

INSPECTION PROCEDURE

1	Check ECM.
----------	-------------------

CHECK:

Check that the engine starts normally.


HINT:

With this inspection, ECM CPU can be diagnosed if it works normally or not.

NG**Replace the ECM.****OK**

2

Check wireharness

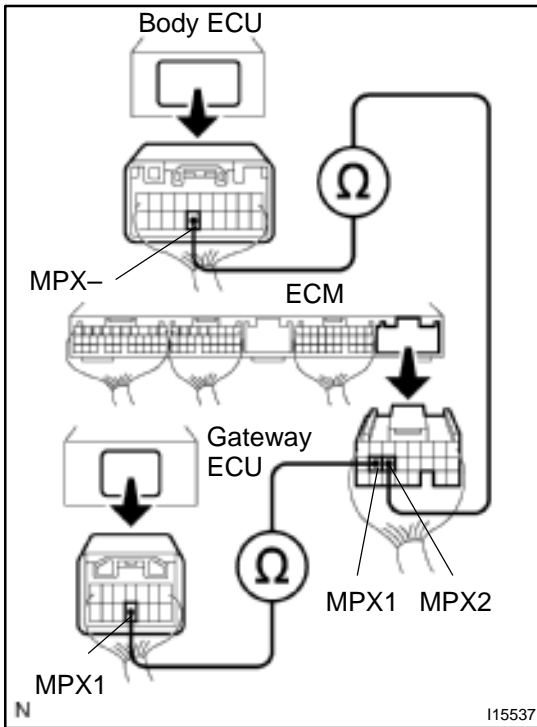**PREPARATION:**

Disconnect connector "B8" of body ECU, "E11" of ECM and "G1" of gateway ECU.

CHECK:

- Check continuity between terminals MPX- of body ECU and MPX2 of ECM.
- Check continuity between terminals MPX1 of ECM and MPX1 of gateway ECU.

OK:

There is a continuity in wireharness of both (1) and (2), or either (1) or (2).

HINT:

If there is OPEN in wireharness of either (1) or (2), please repair it.

NG

Repair or replace wireharness.

OK

Replace the ECM.


DTC	B1266 / 66	Instrument panel system communication bus malfunction (+B short)
------------	-------------------	---

DTC	B1267 / 67	Instrument panel system communication bus malfunction (GND short)
------------	-------------------	--

CIRCUIT DESCRIPTION

This DTC is output when +B or GND short occurs on instrument panel system communication bus. If +B or GND short is detected on instrument panel system communication bus, separate it by bus cut relay in body ECU to prevent while communication buses' failure.

WIRING DIAGRAM

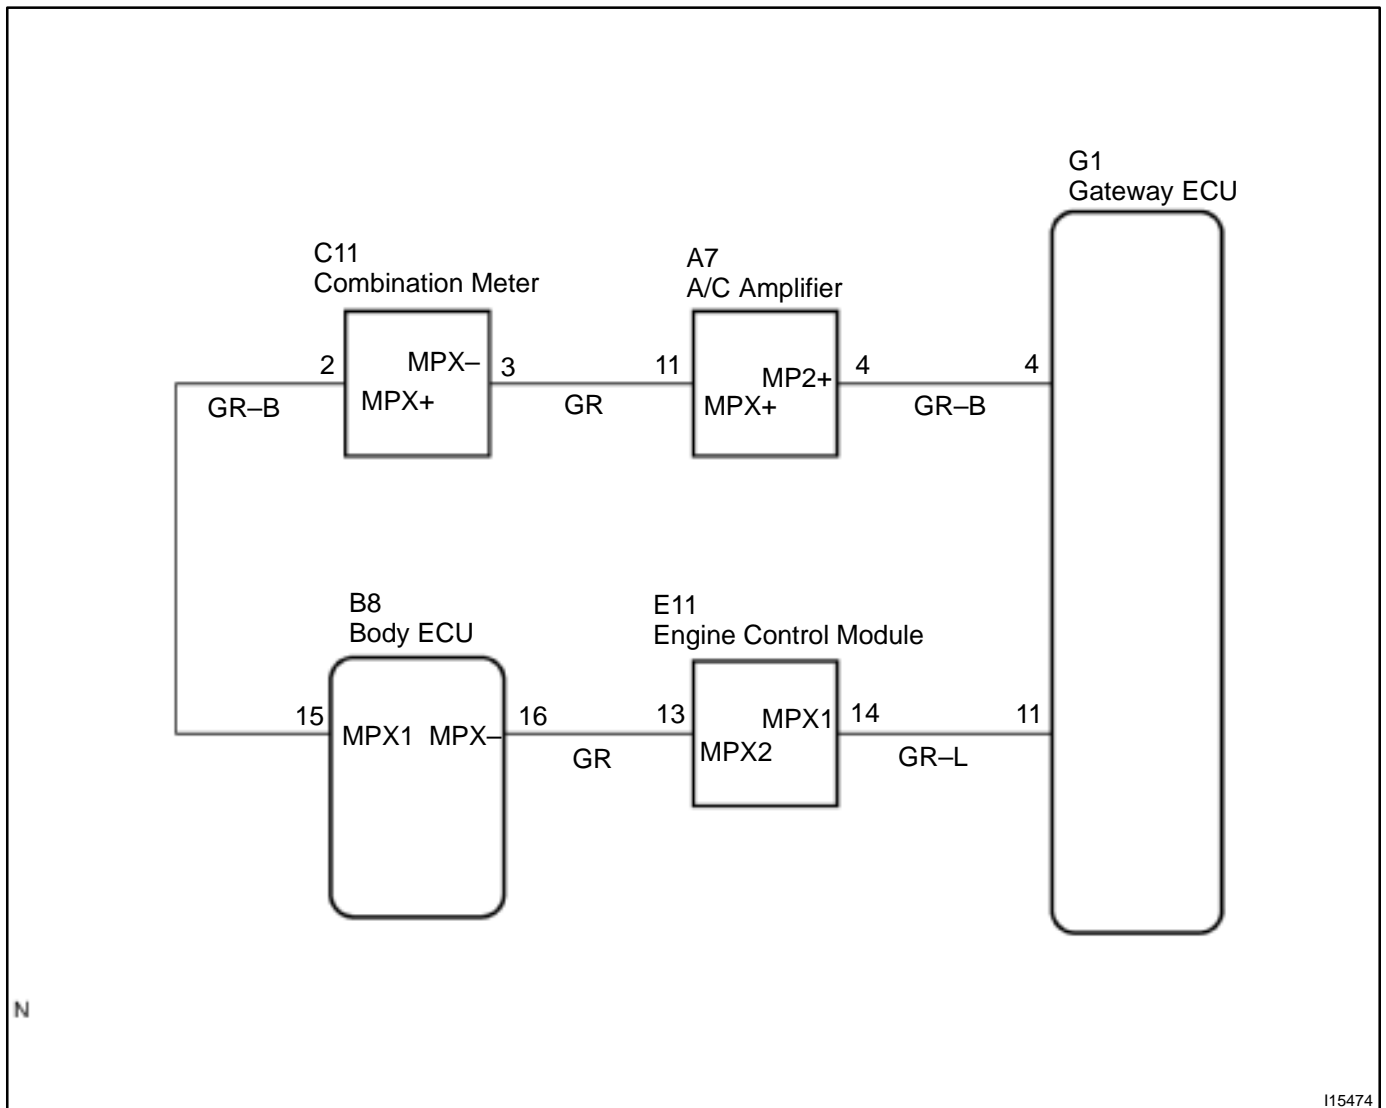


INSPECTION PROCEDURE

HINT: 

On the system structure point of view, this DTC cannot display meter. In case of checking DTC, please use hand-held tester.

1 Check the communication circuit inside ECM.

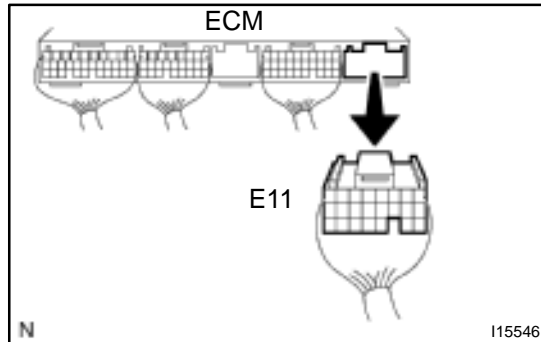

PREPARATION:

Disconnect the connector "E11" of ECM.

CHECK:

Check the DTC.

OK:


Code B1266 or B1267 is not output

OK

Replace the ECM.

NG

2 Check the communication circuit inside gateway ECU.

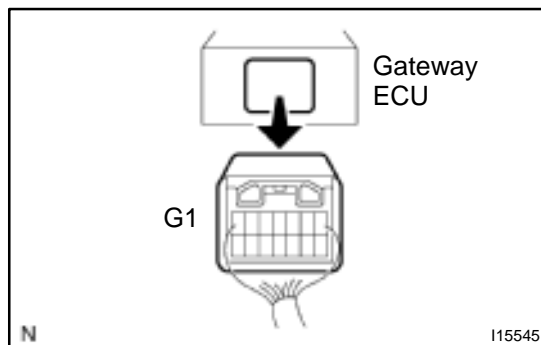

PREPARATION:

(a) Connect the connector "E11" of ECM.

(b) Disconnect the connector "G1" of gateway ECU.

CHECK:

Check the DTC.

OK:


Code B1266 or B1267 is not output

OK

Replace the gateway ECU.

NG

3

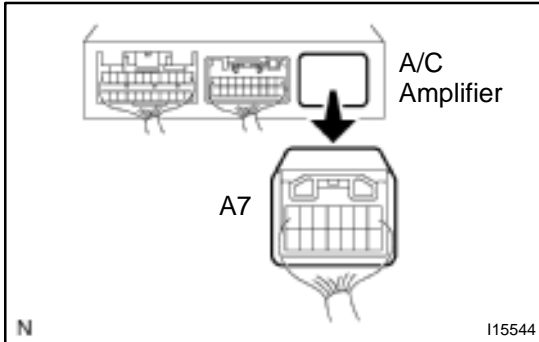Check the communication circuit inside A/C amplifier.**PREPARATION:**

- (a) Connect the connector of "G1" of gateway ECU.
- (b) Disconnect the connector "A7" of A/C amplifier.

CHECK:

Check the DTC.

OK:


Code B1266 or B1267 is not output

OK

Replace the A/C amplifier.

NG

4

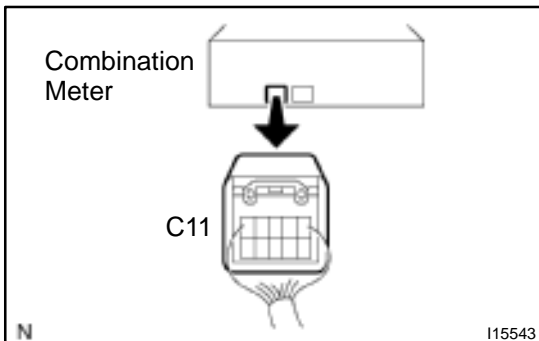Check the communication circuit inside combination meter ECU.**PREPARATION:**

- (a) Connect the connector "A7" of A/C amplifier.
- (b) Disconnect the connector "C11" of combination meter ECU.

CHECK:

Check the DTC.

OK:


Code B1266 or B1267 is not output

OK

Replace the combination meter ECU.

NG

5 Check for short circuit between combination meter ECU and body ECU.

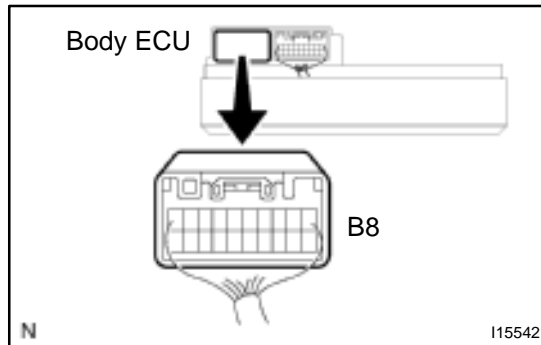

PREPARATION:

Disconnect the connector "B8" of body ECU.

CHECK:

Check the DTC.

OK:


Code B1266 or B1267 is not output

OK

Repair or replace the wireharness between combination meter ECU and body ECU.

NG

6 Check for short circuit between body ECU and ECM.

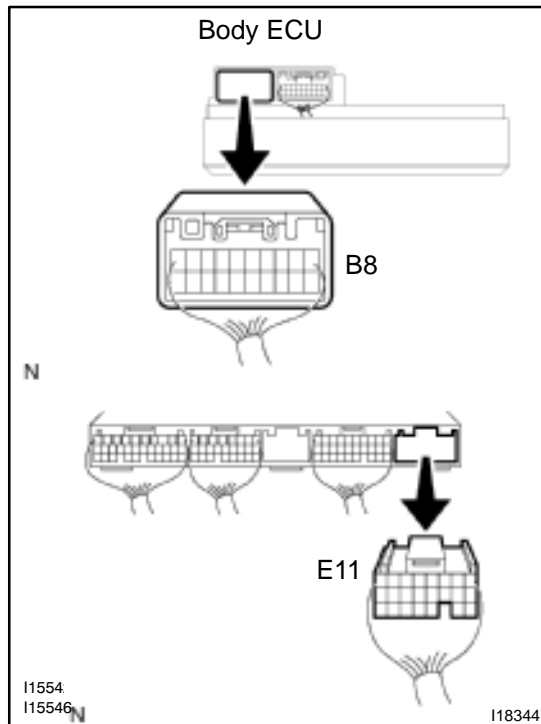

PREPARATION:

Connect the connector "B8" of body ECU.

Disconnect the connector "E11" of ECM.

CHECK:

Check the DTC.

OK:


Code B1266 or B1267 is not output

OK

Repair or replace the wireharness between body ECU and ECM.

NG

7 Check for short circuit between ECM and gateway ECU.

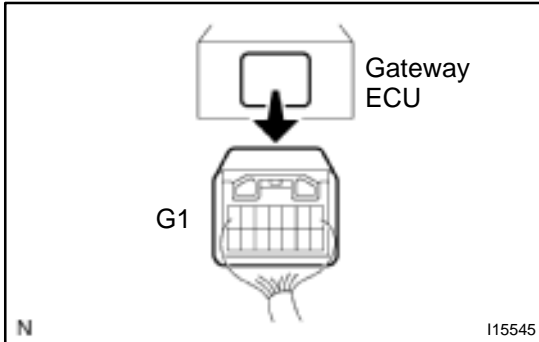

PREPARATION:

Connect the connector "B8" of body ECU.
Disconnect the connector "G1" of gateway ECU.

CHECK:

Check the DTC.

OK:


Code B1266 or B1267 is not output

OK

Repair or replace the wireharness between ECM and gateway ECU.

NG

8 Check for short circuit between gateway ECU and A/C amplifier.

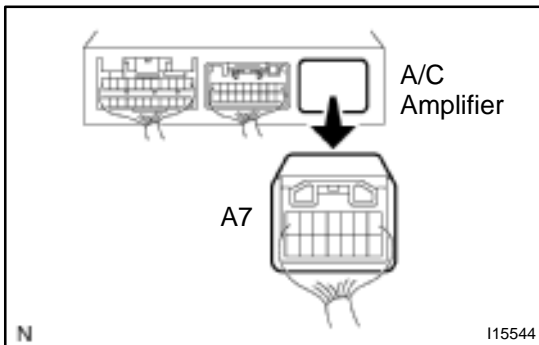

PREPARATION:

Connect the connector "E11" of ECM.
Disconnect the connector "A7" of A/C amplifier.

CHECK:

Check the DTC.


OK:

Code B1266 or B1267 is not output

OK

Repair or replace the wireharness between ECM and A/C amplifier.

NG

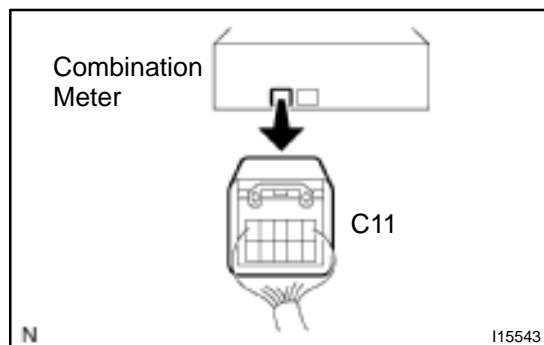9 Check for short circuit between A/C amplifier and combination meter ECU.**PREPARATION:**

Connect the connector "A7" of A/C amplifier.

Disconnect the connector "C11" of combination meter ECU.

CHECK:

Check the DTC.

OK:

Code B1266 or B1267 is not output

OK

Repair or replace the wireharness between A/C amplifier and combination meter ECU.

NG

Replace the body ECU.

DTC	B1271 / 71	Combination meter ECU communication stop
------------	-------------------	---

CIRCUIT DESCRIPTION

This DTC is output when communication stops between combination meter ECU and body ECU.

DTC No.	DTC Detecting Condition	Trouble Area
B1271/71	No communication from Combination meter ECU more than 10 seconds.	<ul style="list-style-type: none"> • Combination meter ECU • Wireharness

WIRING DIAGRAM

See page [DI-770](#)

INSPECTION PROCEDURE

1	Check combination meter ECU.
----------	-------------------------------------

CHECK:

Start the engine and check that the speed meter and tacometer operate normally.

HINT:


With this inspection, the combination meter ECU CPU can be diagnosed if it works normally or not.

NG

Replace the combination meter ECU.

OK

2 Check wireharness

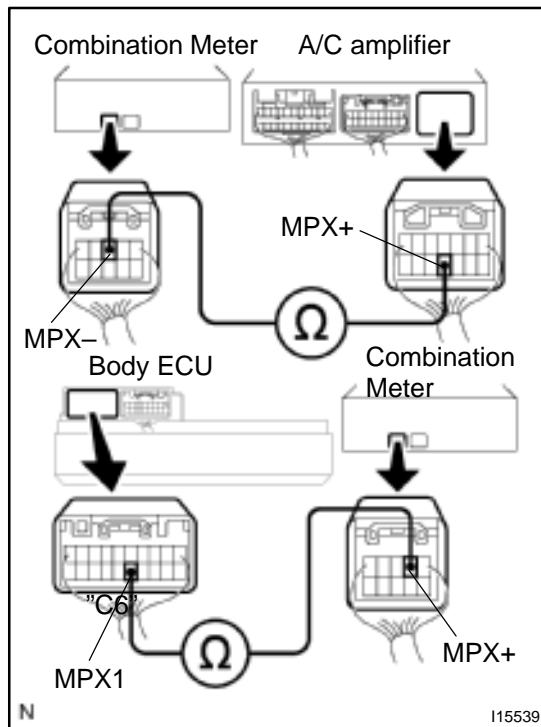

PREPARATION:

Disconnect connector "A7" of A/C amplifier, "C11" of combination meter ECU and "B8" of body ECU.

CHECK:

- Check continuity between terminals MPX+ of A/C amplifier and MPX- of combination meter ECU.
- Check continuity between terminals MPX+ of combination meter ECU and MPX1 of body ECU.

OK:

There is a continuity in wireharness of both (a) and (b), or either (a) or (b).

HINT:

If there is OPEN in wireharness of either (a) or (b), please repair it.

NG

Repair or replace wireharness.

OK

Replace the combination meter ECU.

DTC	B1274/74	Multi display communication stop
------------	-----------------	---

CIRCUIT DESCRIPTION

This DTC is output when communication stops between multi display and body ECU.

DTC No.	DTC Detecting Condition	Trouble Area
B1274/74	No communication from multi display more than 10 seconds.	<ul style="list-style-type: none"> • Multi display • Wireharness

WIRING DIAGRAM

See Page [DI-770](#)

INSPECTION PROCEDURE

1 Check multi display ECU.

CHECK:


Check that the multi display operate normally.

HINT:

With this inspection, the multi display CPU can be diagnosed if it works normally or not.

NG**Replace the multi display.****OK**

2 Check wireharness.

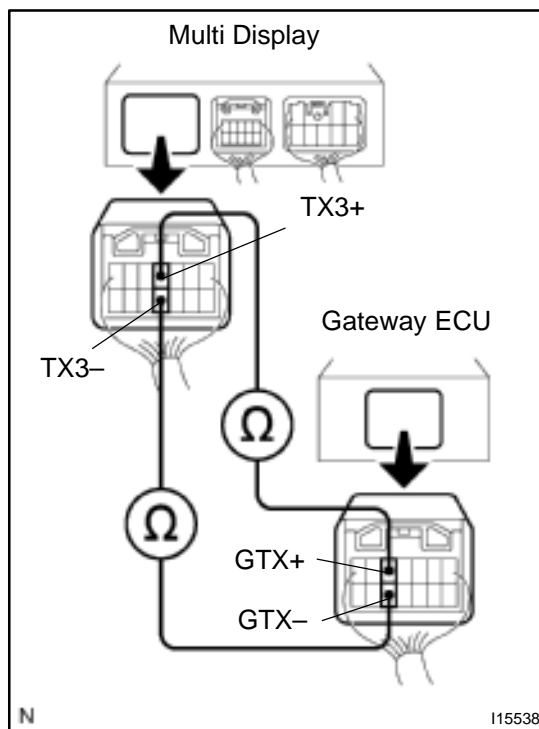**PREPARATION:**

Disconnect connector "M2" of multi display and "G1" of gateway ECU.

CHECK:

- (a) Check continuity between terminals TX3+ of multi display and GTX+ of gateway ECU.
- (b) Check continuity between terminals TX3- of multi display and GTX- of gateway ECU.

OK:

There is a continuity in wireharness.

HINT:

If there is OPEN in wireharness, please repair it.

NG**Repair or replace wireharness.****OK****Replace the multi display.**

DTC	B1293/93	Gateway ECU communication stop
------------	-----------------	---------------------------------------

CIRCUIT DESCRIPTION

This DTC is output when communication stops between gateway ECU and body ECU.

DTC No.	DTC Detecting Condition	Trouble Area
B1293/93	No communication from gateway ECU more than 10 seconds.	<ul style="list-style-type: none"> • Gateway ECU • Wireharness

WIRING DIAGRAM

See page [DI-770](#)


INSPECTION PROCEDURE

1	Check open door warning light.
----------	---------------------------------------

CHECK:


Connection that the gateway ECU and BEAN (Body Electrical Area Network) can be checked by DTC transmitted by the body ECU.

See "INSPECT OPEN DOOR INDICATOR LIGHT on page [DI-752](#).



2

Check wireharness

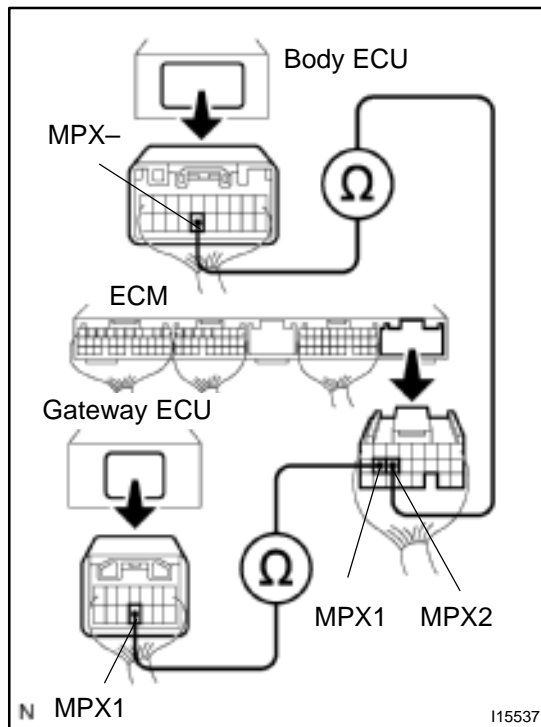**PREPARATION:**

Disconnect connector "B8" of body ECU, "E11" of ECM and "G1" of gateway ECU.

CHECK:

- Check continuity between terminals MPX- of body ECU and MPX2 of ECM.
- Check continuity between terminals MPX1 of ECM and MPX1 of gateway ECU.

OK:

There is a continuity in wireharness of both (a) and (b), or either (a) or (b).

HINT:

If there is OPEN in wireharness of either (a) or (b), please repair it.

NG**Repair or replace wireharness.****OK****Replace the gateway ECU.**

Power Source Circuit

CIRCUIT DESCRIPTION

This circuit provides power to operate the gateway ECU.

The diagram illustrates the electrical system for the 2001 Prius (RM778U). Key components and their connections include:

- Battery:** Connected to the system via a main fuse (F11) and a 100A DC/DC converter (F13).
- Instrument Panel J/B:** Contains the ACC Relay, IG1 Relay, and I15 Ignition Switch. It manages power distribution to various components.
- ACC (Accessory) Circuit:** Controlled by the ACC Relay, providing power to the 10A ACC fuse and the 7.5 A ECU-B fuse.
- IG (Ignition) Circuit:** Controlled by the IG1 Relay, providing power to the 5A AM1 fuse and the 5A ECU-IG fuse.
- FL Blocks (Fuses):** F11 (100A DC/DC) and F13 (120A MAIN FL) are used for main power distribution.
- Gateway ECU (G1):** Manages communication and power distribution between the battery, instrument panel, and other ECUs.
- Wiring Colors and Labels:** Various colors (e.g., GR-R, R-G, P-L, W, B-Y, W-G, W-B) and labels (e.g., 2D, 2C, 2H, 2B, 2I, 2K) are used to identify specific wires and terminals.

cardiagn.com

INSPECTION PROCEDURE**1 Check ECU-B and ECU-IG fuse.****CHECK:**

Check continuity of ECU-B and ECU-IG fuse.

OK:

Continuity

NG**Replace the failure fuse.****OK****2 Check voltage between terminals BATT, IG and GND of body ECU connector.****PREPARATION:**

- (a) Turn ignition switch OFF.
- (b) Disconnect the gateway ECU connector.

CHECK:

Measure voltage between terminals BATT and GND.

OK:

Voltage: 10 – 14 V


OK**Check and repair wireharness and connector between gateway ECU and battery.****NG****3 Check wireharness and connector between gateway ECU and body ground (See page [IN-41](#)).****NG****Repair or replace wireharness or connector.****OK****Check and repair wireharness and connector between gateway ECU and battery.**

PRE-CHECK

1. DIAGNOSIS SYSTEM MODE


HINT:

Diagnosis System Mode is operated as follows.

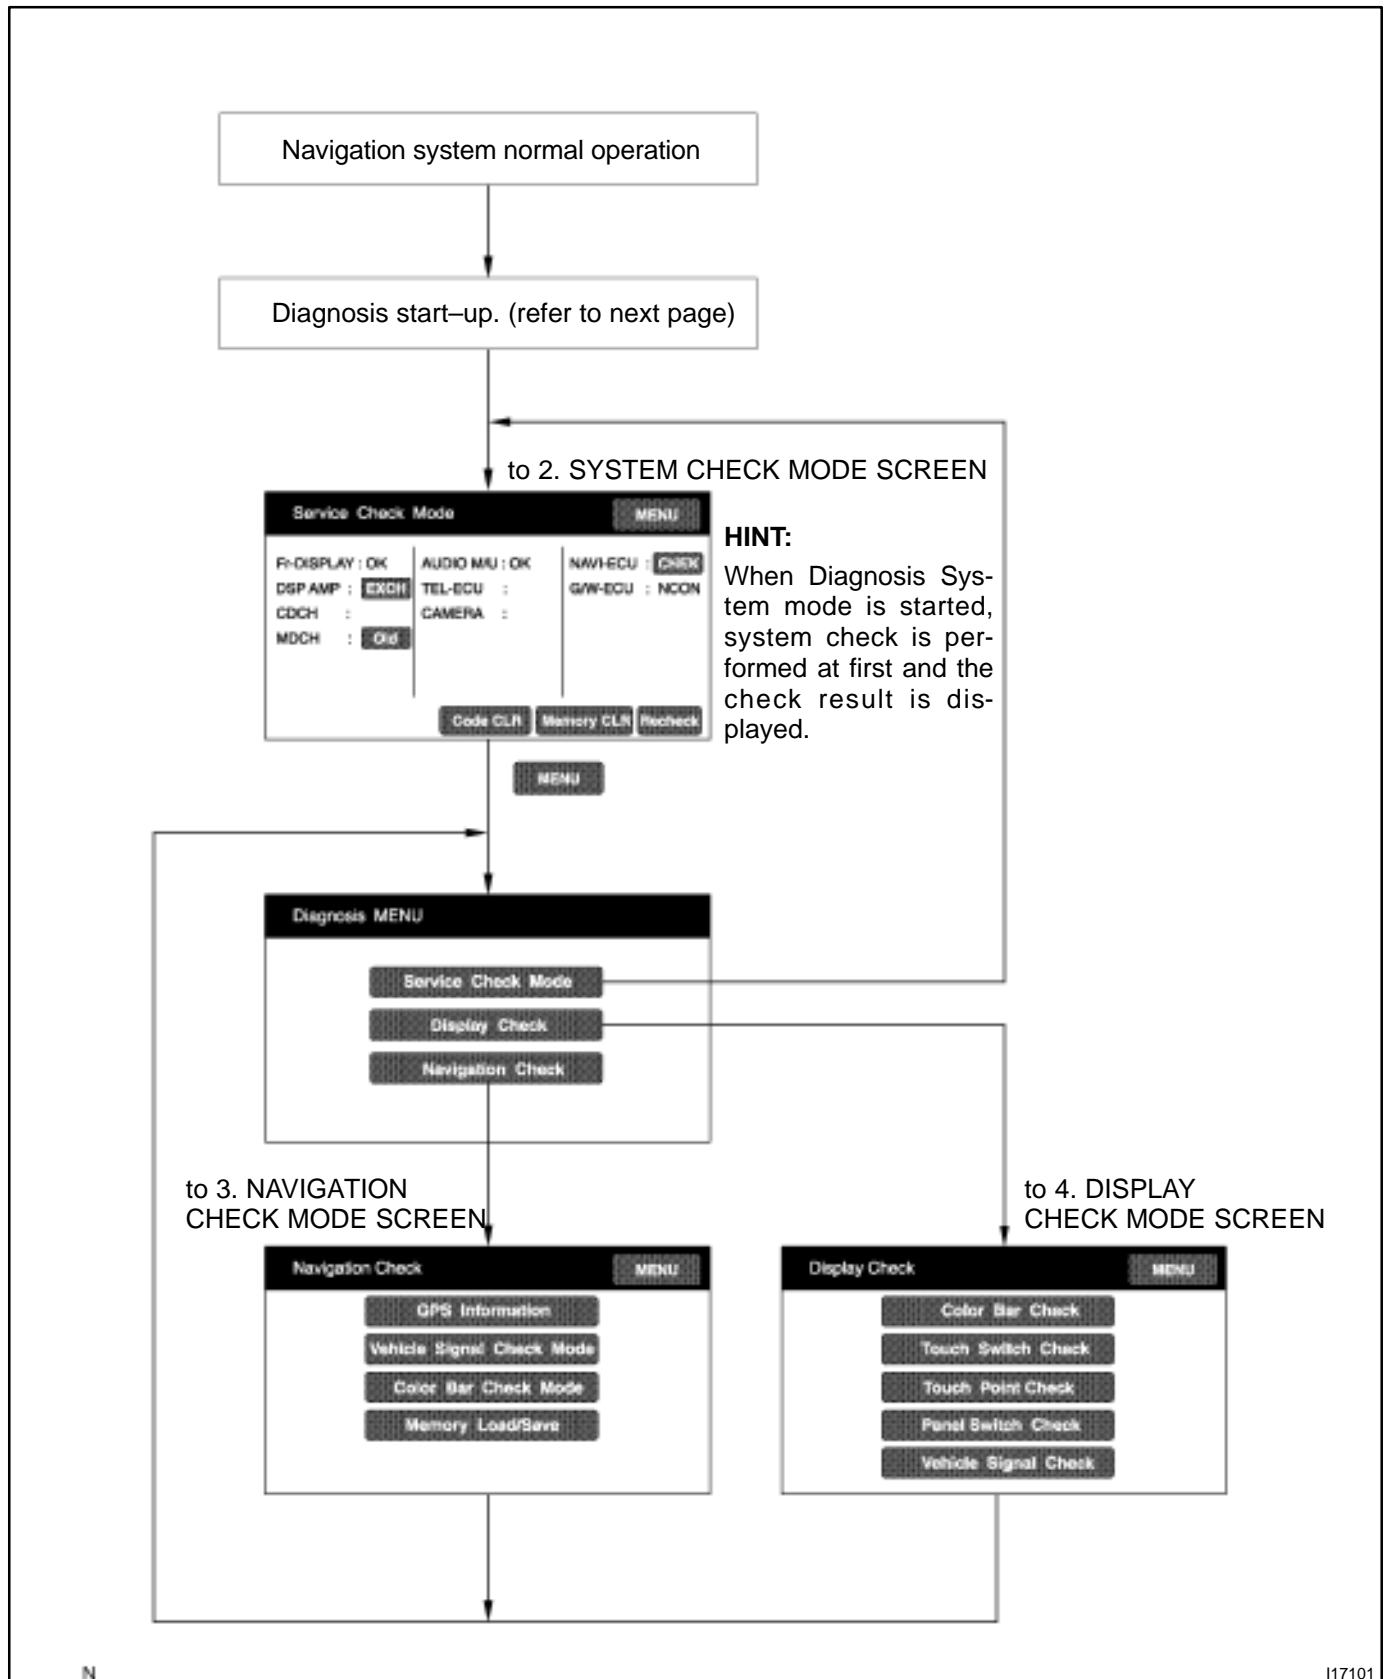


(a) DIAGNOSIS START-UP

To start the diagnosis menu, there are 2 ways: using a diagnosis check wire and using a switch.

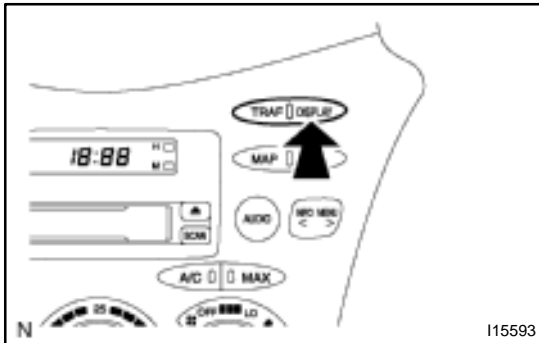

(b) START-UP BY SWITCH OPERATION

- (1) Vehicle speed is 0 km/h (0 mph).
- (2) Parking brake switch is pressed.
- (3) Press the Display switch to display the Screen Adjustment screen.

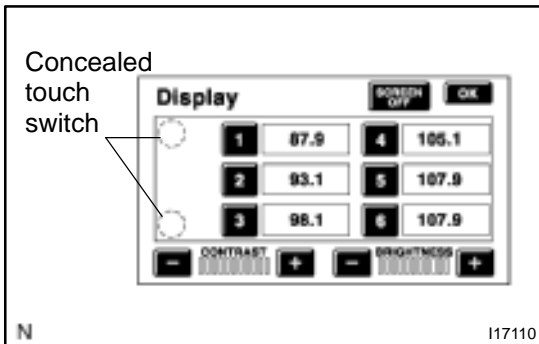

- (4) Repeatedly touch the upper and lower bottom parts of the left end of the screen 3 times.


(c) FINISHING DIAGNOSIS SYSTEM MODE

Turn the ignition switch from ACC to OFF to finish the mode. If it is started by switch operation.


2. SERVICE CHECK MODE

HINT:

Service Check Mode is operated as follows.

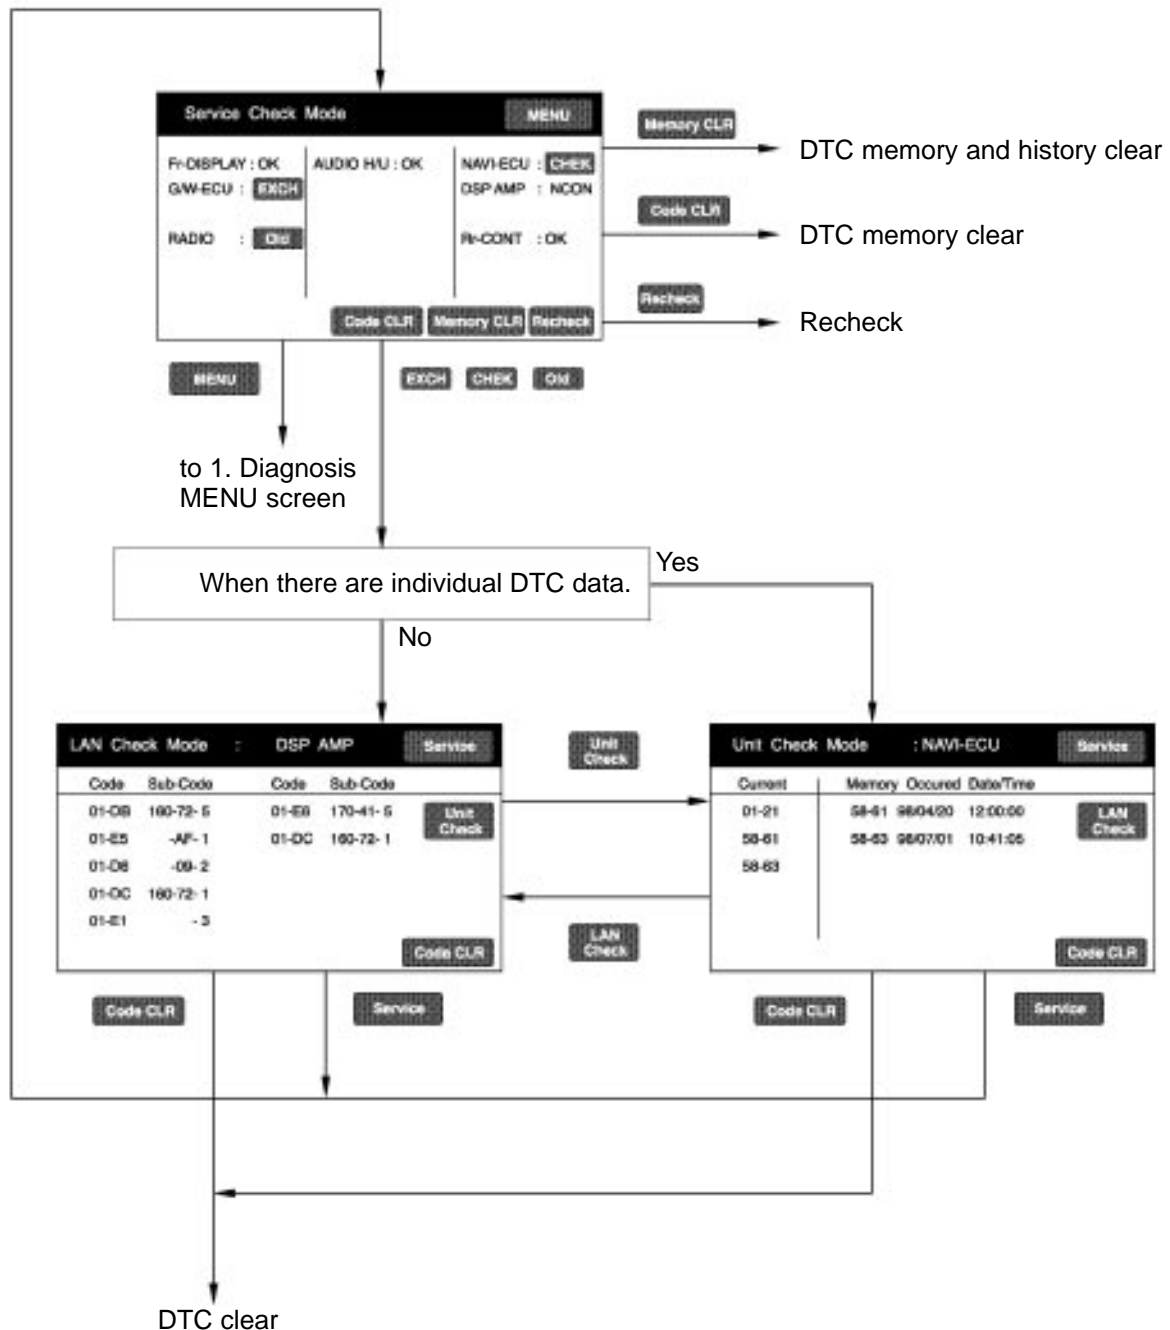


(a) SERVICE CHECK SCREEN

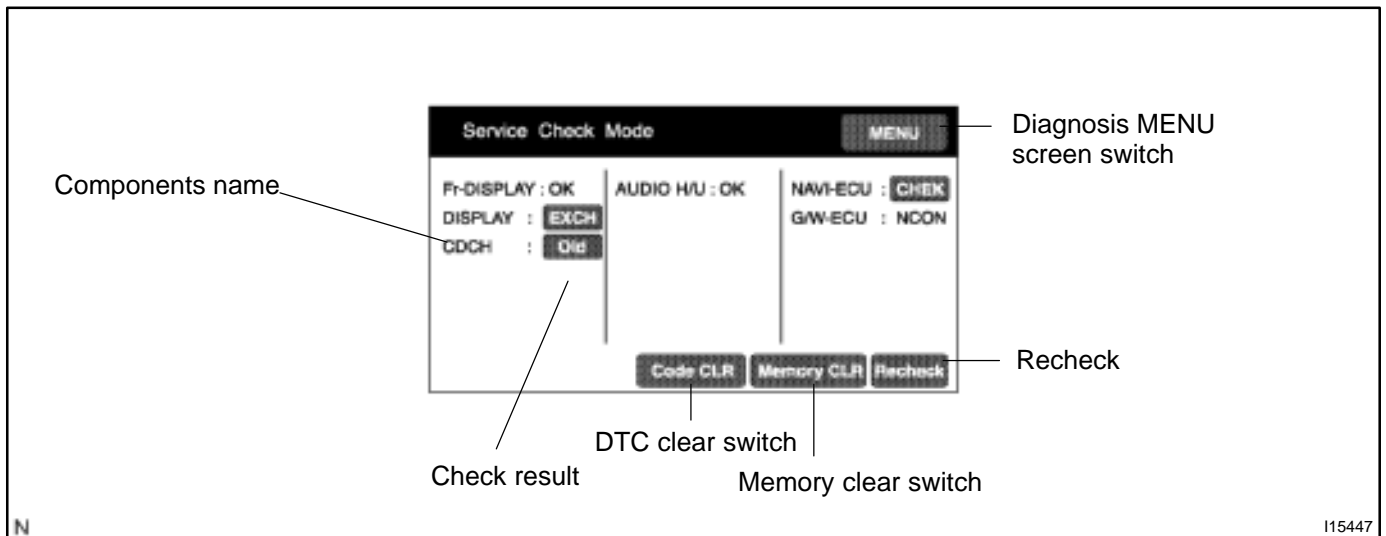


- (1) By performing system check and collecting data of diagnosis memory, this mode checks the current and past condition of the vehicle.
- (2) List of all components name or physical addresses.
It displays only the components that have been connected at least once.
- (3) The check result is displayed for all components.
- (4) The check result is displayed by 6 abbreviations: "OK", "EXCH", "CHEK", "NCON", "NRES" and "Old". ("EXCH", "CHEK" and "Old" have a function as switches.)
- (5) Based on all information obtained from "System Check Request", "Diagnosis Memory Request" and "Current Diagnosis Result" command, the following results are displayed:
OK: No error is identified.
EXCH: One or more error codes requesting for exchange are detected in any check result.
CHEK: Except the conditions for "EXCH", one or more error codes requesting for check are detected in any check result.
- (6) The other check results are as follows:
NCON: No response to "Diagnosis ON Instruction" command and it is not connected when the system is started.
Old: One or more error codes are detected when responding to "Diagnosis ON Instruction" command because of the old version .
NRES: No response to all commands of "System Check Request", "Diagnosis Memory Request" and "Current Diagnosis Result". Or no error is detected by any one of "System Check Request" or "Diagnosis Memory Request" when no response to the other command.
- (7) "EXCH", "CHEK" and "Old" are functioned as switches any by pressing these, LAN Check Mode and Unit Check Mode are activated.
- (8) Memory Clear Switch
Pressing this switch for 3 sec. deletes all information about master component registration and diagnosis memory of all components.
- (9) DTC Clear Switch
Pressing this switch for 3 sec. deletes diagnosis memory of all components.
- (10) Recheck Switch
Pressing this switch rechecks the system.
- (11) Menu Switch
Pressing this switch activated the Diagnosis Menu Screen.

(b) LAN CHECK MODE SCREEN

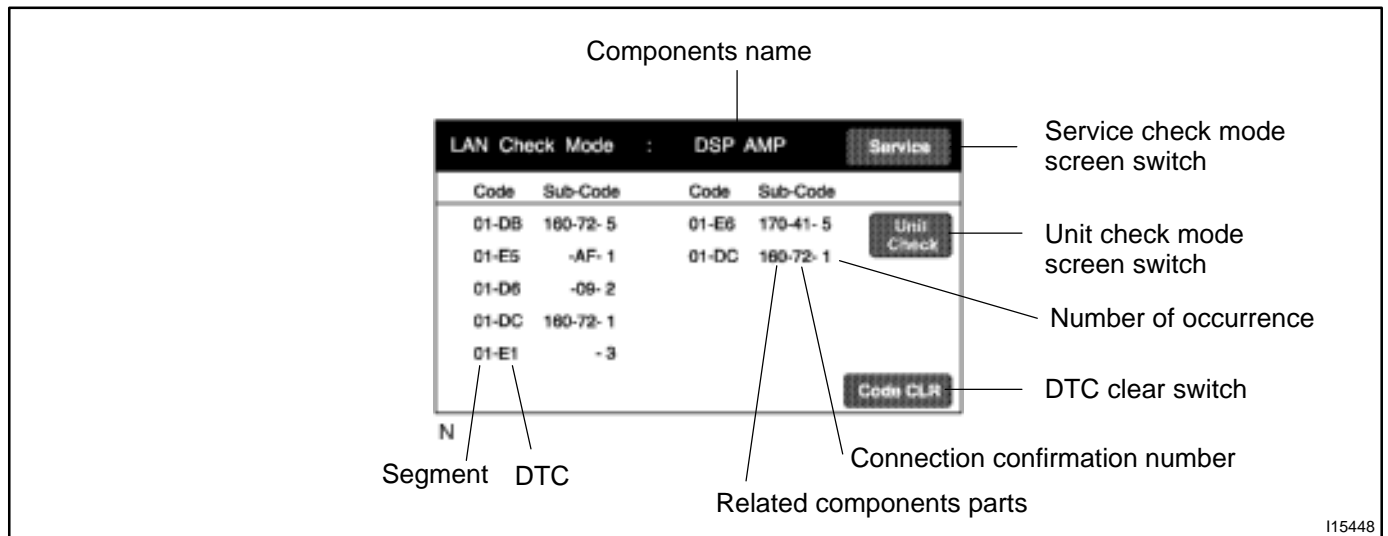

- (1) As a detailed screen in the System Check Mode, LAN Check Mode is displayed.
- (2) Communication codes (logical address "01") are extracted from the diagnosis data obtained by "Diagnosis Memory Request" and displayed.
- (3) Component Name
Names of the components to be checked are displayed.
- (4) Segment
Logical address codes corresponding to DTC are displayed.
- (5) DTC
DTC displayed.
- (6) Related components address
Physical address codes corresponding to DTC are displayed.
- (7) Connection Confirmation Number
Connection confirmation numbers corresponding to DTC is displayed.
- (8) Number of Occurrence
The number of occurrence of the same DTC is displayed.
- (9) DTC Clear Switch
Pressing this switch for 3 sec. deletes DTC memory of the selected diagnosis component. When returning to the System Check Mode, the check result is shown as a blank.
- (10) Unit Check Mode Screen Switch
Pressing this switch activates the Unit Check Mode screen.
- (11) System Check Mode Screen Switch
Pressing this switch activates the System Check Mode screen.

(c) UNIT CHECK MODE SCREEN

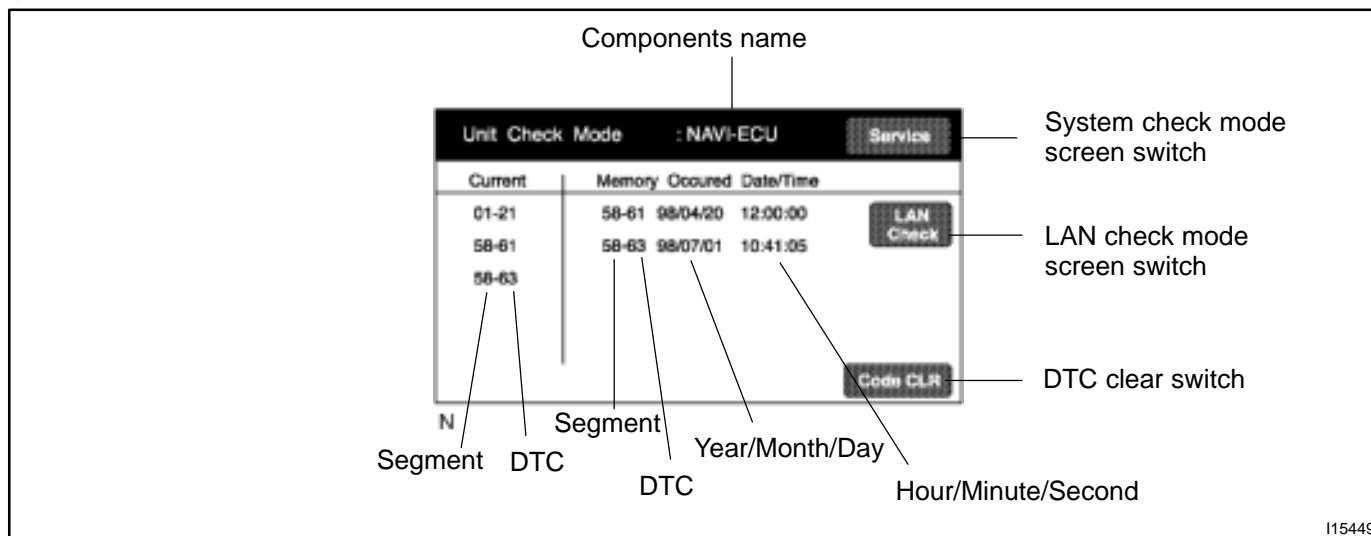

- (1) As a detailed screen in the System Check Mode, the Unit Check Mode is displayed.
- (2) Up to 6 error codes detected by "The DTC obtained during the system check (including when starting the diagnosis mode)" can be displayed as "Current".
- (3) Up to 6 error codes detected by "DTC stored in the past" can be displayed as "Memory".
- (4) Component Name
Names of the components are displayed.
- (5) Segment
Logical address numbers corresponding to DTC are displayed.
- (6) DTC
DTC is displayed.
- (7) Year/Month/Day/Hour/Minute/Second
The date and time stamped at the time of code occurrence is displayed in the order of year-month-day-hour-minute-second. (Year is shown in 2-digit number.) If the date and time data is invalid, it is displayed as a blank.

HINT:

Time data is obtained after turning the ignition from ACC to ON. Until the valid time data is obtained, the data shown in the display shall be considered as invalid.


If stored before a valid time data is obtained, the data shall not be displayed.

- (8) DTC Clear Switch
Pressing this switch for 3 sec. deletes all diagnosis memory of the component. When returning to the System Check Mode, the check result is displayed as a blank.
- (9) Lan Check Mode Screen Switch
Pressing this switch activates the LAN Check Mode screen.
- (10) System Check Mode Screen .Switch
Pressing this switch activates the System Check Mode screen.

3. NAVIGATION CHECK MODE


HINT:

Navigation Check Mode is operated as follows.

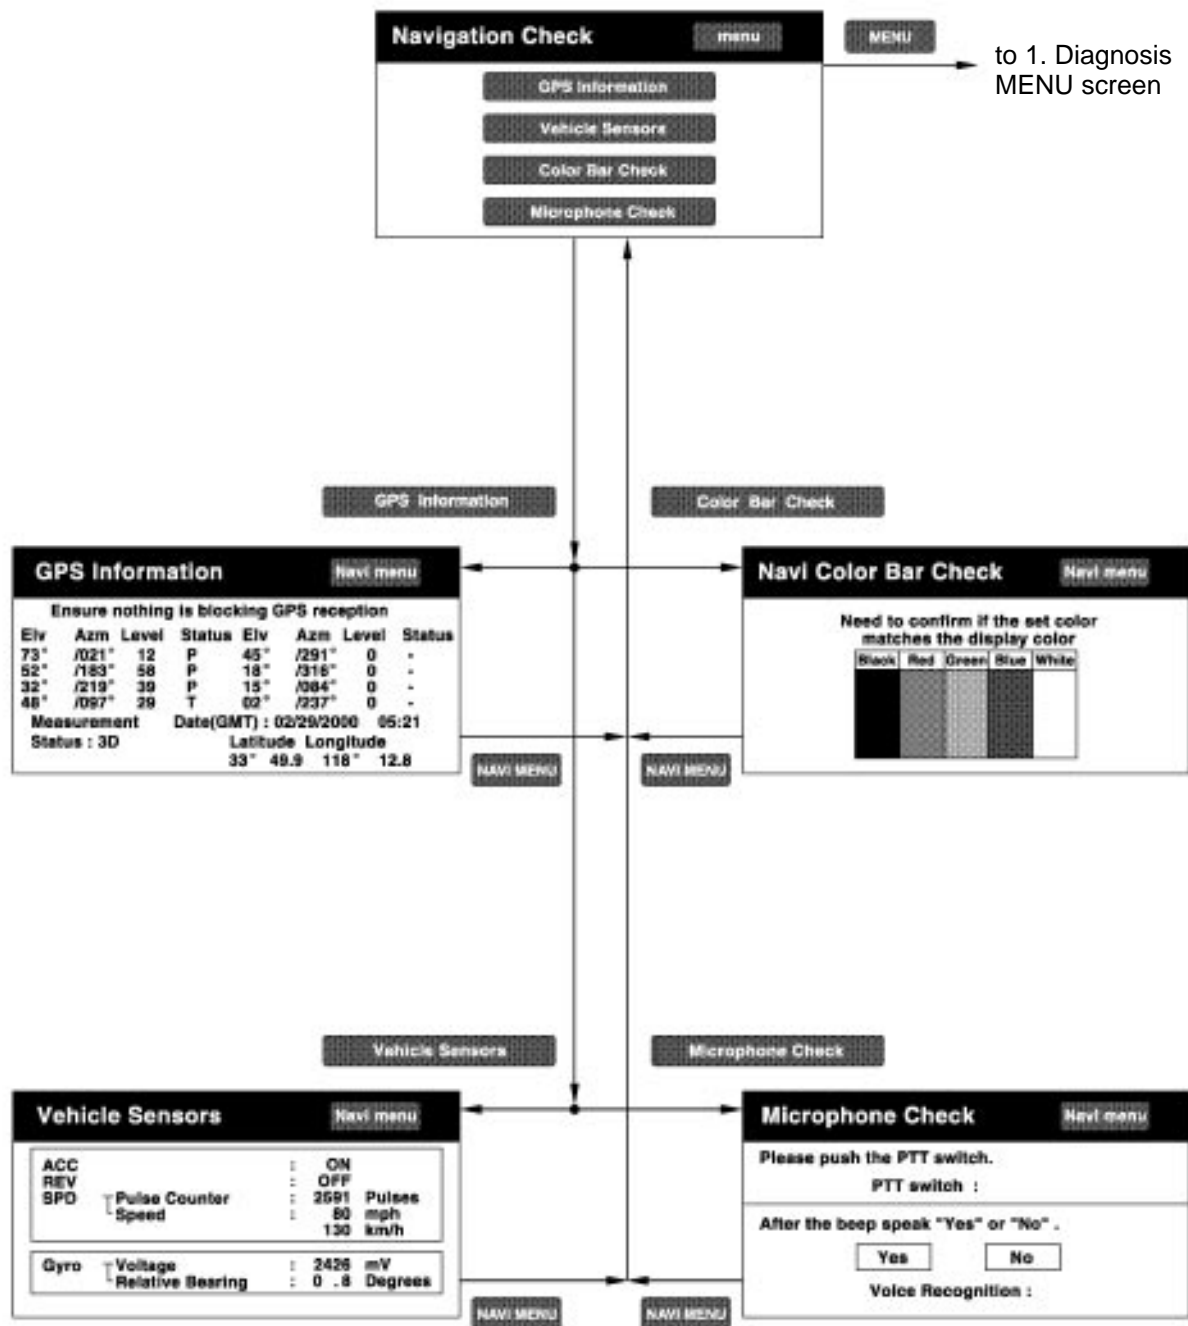


The Microphone Check screen is not applicable to the Prius.

(a) NAVIGATION CHECK MODE SCREEN

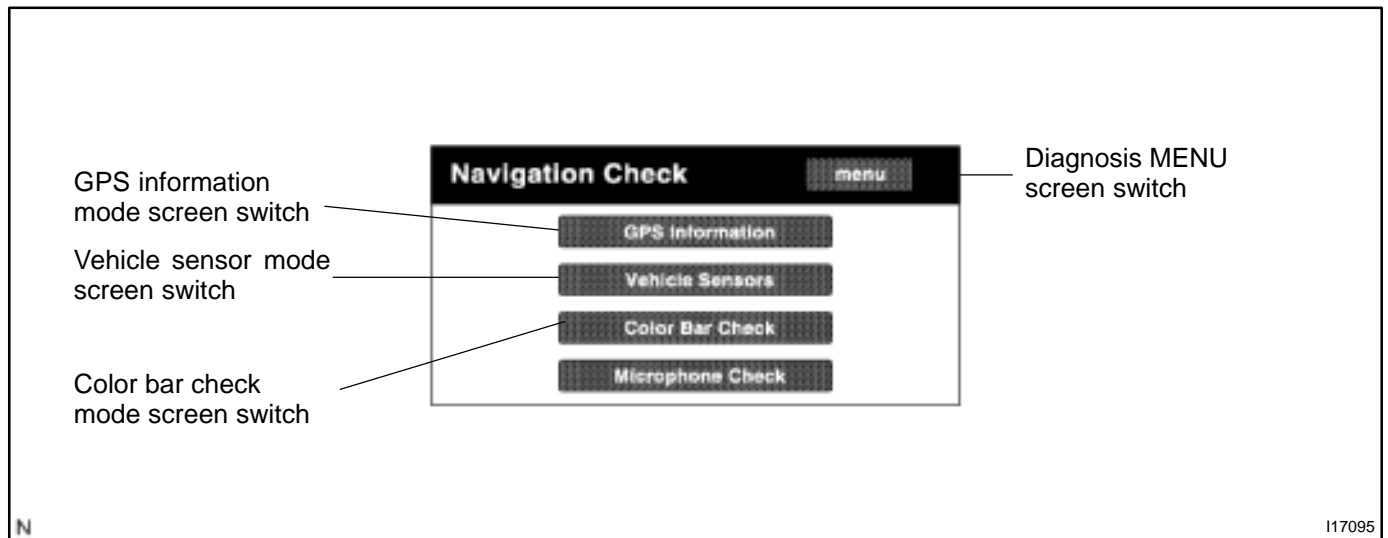

- (1) Various check screens for the Navigation ECU can be started from this menu screen.
- (2) GPS Information Mode Screen Switch
Pressing this switch activates GPS Information Mode Screen.
- (3) Vehicle Sensor Mode Screen Switch
Pressing this switch activates the Vehicle Signal Mode screen.
- (4) Color Bar Check Mode Screen Switch
Pressing this switch activates the Color Bar Check Mode screen.
- (5) Diagnosis Menu Screen Switch
Pressing this switch activates the Diagnosis Menu screen.

(b) GPS INFORMATION MODE SCREEN

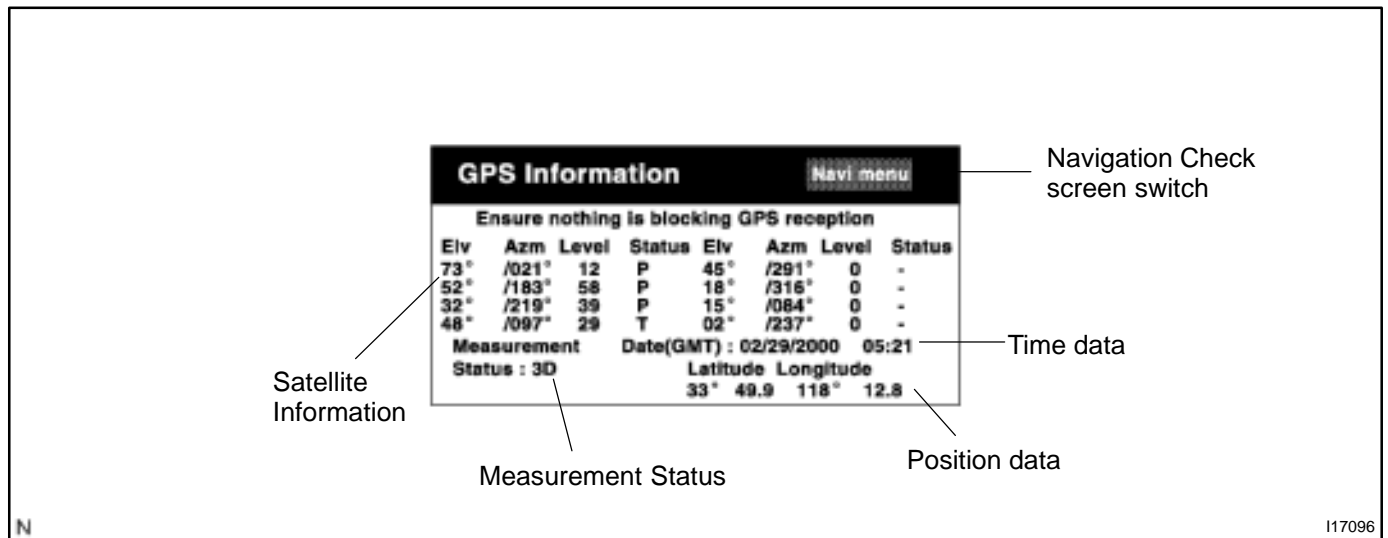

- (1) This screen displays GPS related data.

HINT:

Data are updated every 1 sec.

- (2) Satellite Information

The angle of elevation of relevant satellite, azimuth signal level, and receiving condition of signals are displayed.

HINT:

The reception status shows receiving.

"T": means in operation but measurement is not being used for positioning.

"P": means measurement is being used for positioning.


"-": means no data can be received.

Display area for up to 8 satellites is ensured.

Data shall be updated corresponding to change of information.

- (3) Time data: The time data obtained from a GPS receiver is displayed in month, day, year, hour and minute.
- (4) The displayed time is Greenwich Mean Time.
- (5) Position Data: The latitude and longitude of the current location are displayed in degree and minute.
- (6) Measurement Status is displayed in the following 5 items.
2D: 2 dimensions.
3D: 3 dimensions.
NG: GPS information cannot be used.
error: Receiving error occurs.
-: Other than the above.
- (7) Navigation Check Screen Switch
Pressing this switch activates the Navigation Check screen.

(c) VEHICLE SIGNAL CHECK MODE SCREEN

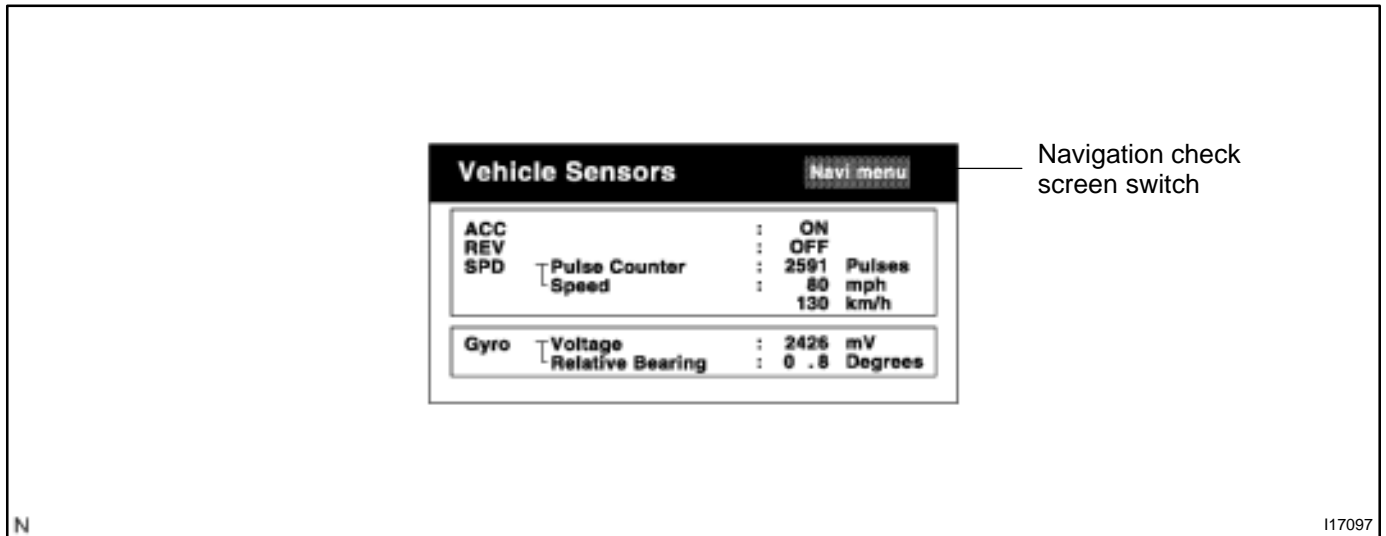

- (1) Status of the vehicle sensor which are input to the Navigation ECU is checked in this screen.


HINT:

Data are updated every 1 sec.

- (2) ACC signal status: Displayed as ON/OFF.
- (3) REV signal status: Displayed as ON/OFF.
- (4) SPD signal status: The following is displayed:
 - The cumulative value of the input pulse after displaying this screen. (shown in 5 digits)
 - Vehicle speed (Unit: km/h, mph)
- (5) Output condition of the gyro sensor: The following is displayed:
 - Voltage (Unit: mV, LSB: 1mV)
 - Relative azimuthal angle to the current point (0 degree).

Assuming the angle at a point when this screen is activated as 0 degree.
- (6) Navigation Check Menu Screen Switch
Pressing this switch displays the Navigation Check screen.

(d) COLOR BAR CHECK MODE SCREEN

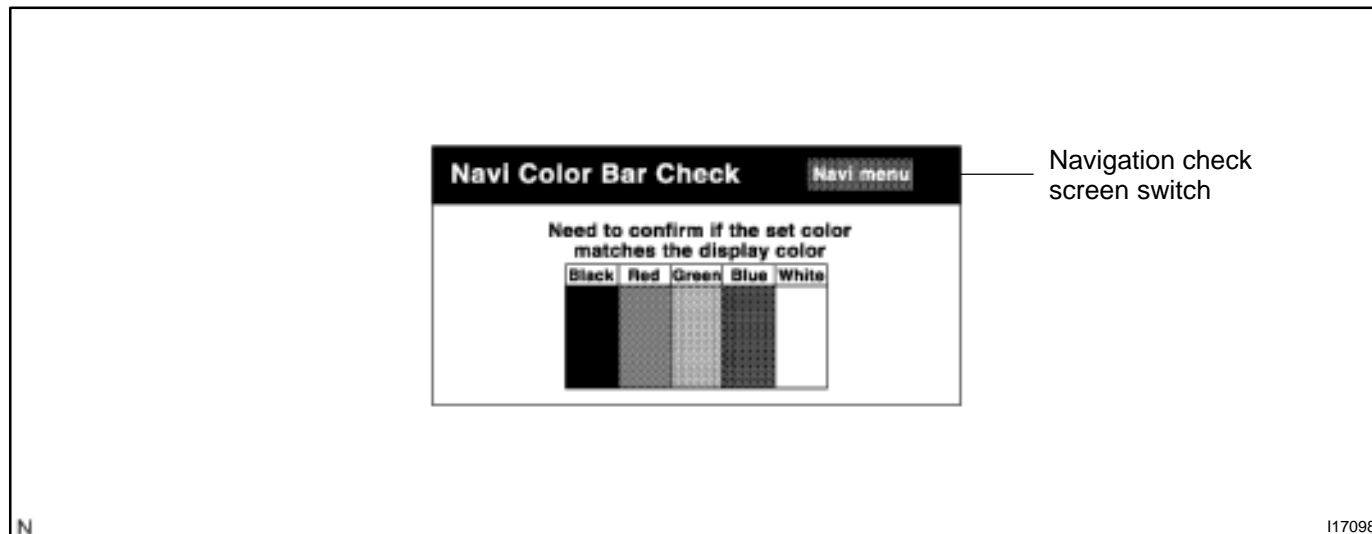


- (1) Color display of the Navigation ECU is checked in this screen.
- (2) Color Bars:
Five colors of "BLACK", "RED", "GREEN", "BLUE" and "WHITE" are displayed as bars.
- (3) Navigation Check Screen Switch
Pressing this switch displays the Navigation Check screen.

4. DISPLAY CHECK MODE

HINT:


Display Check Mode is operated as follows.

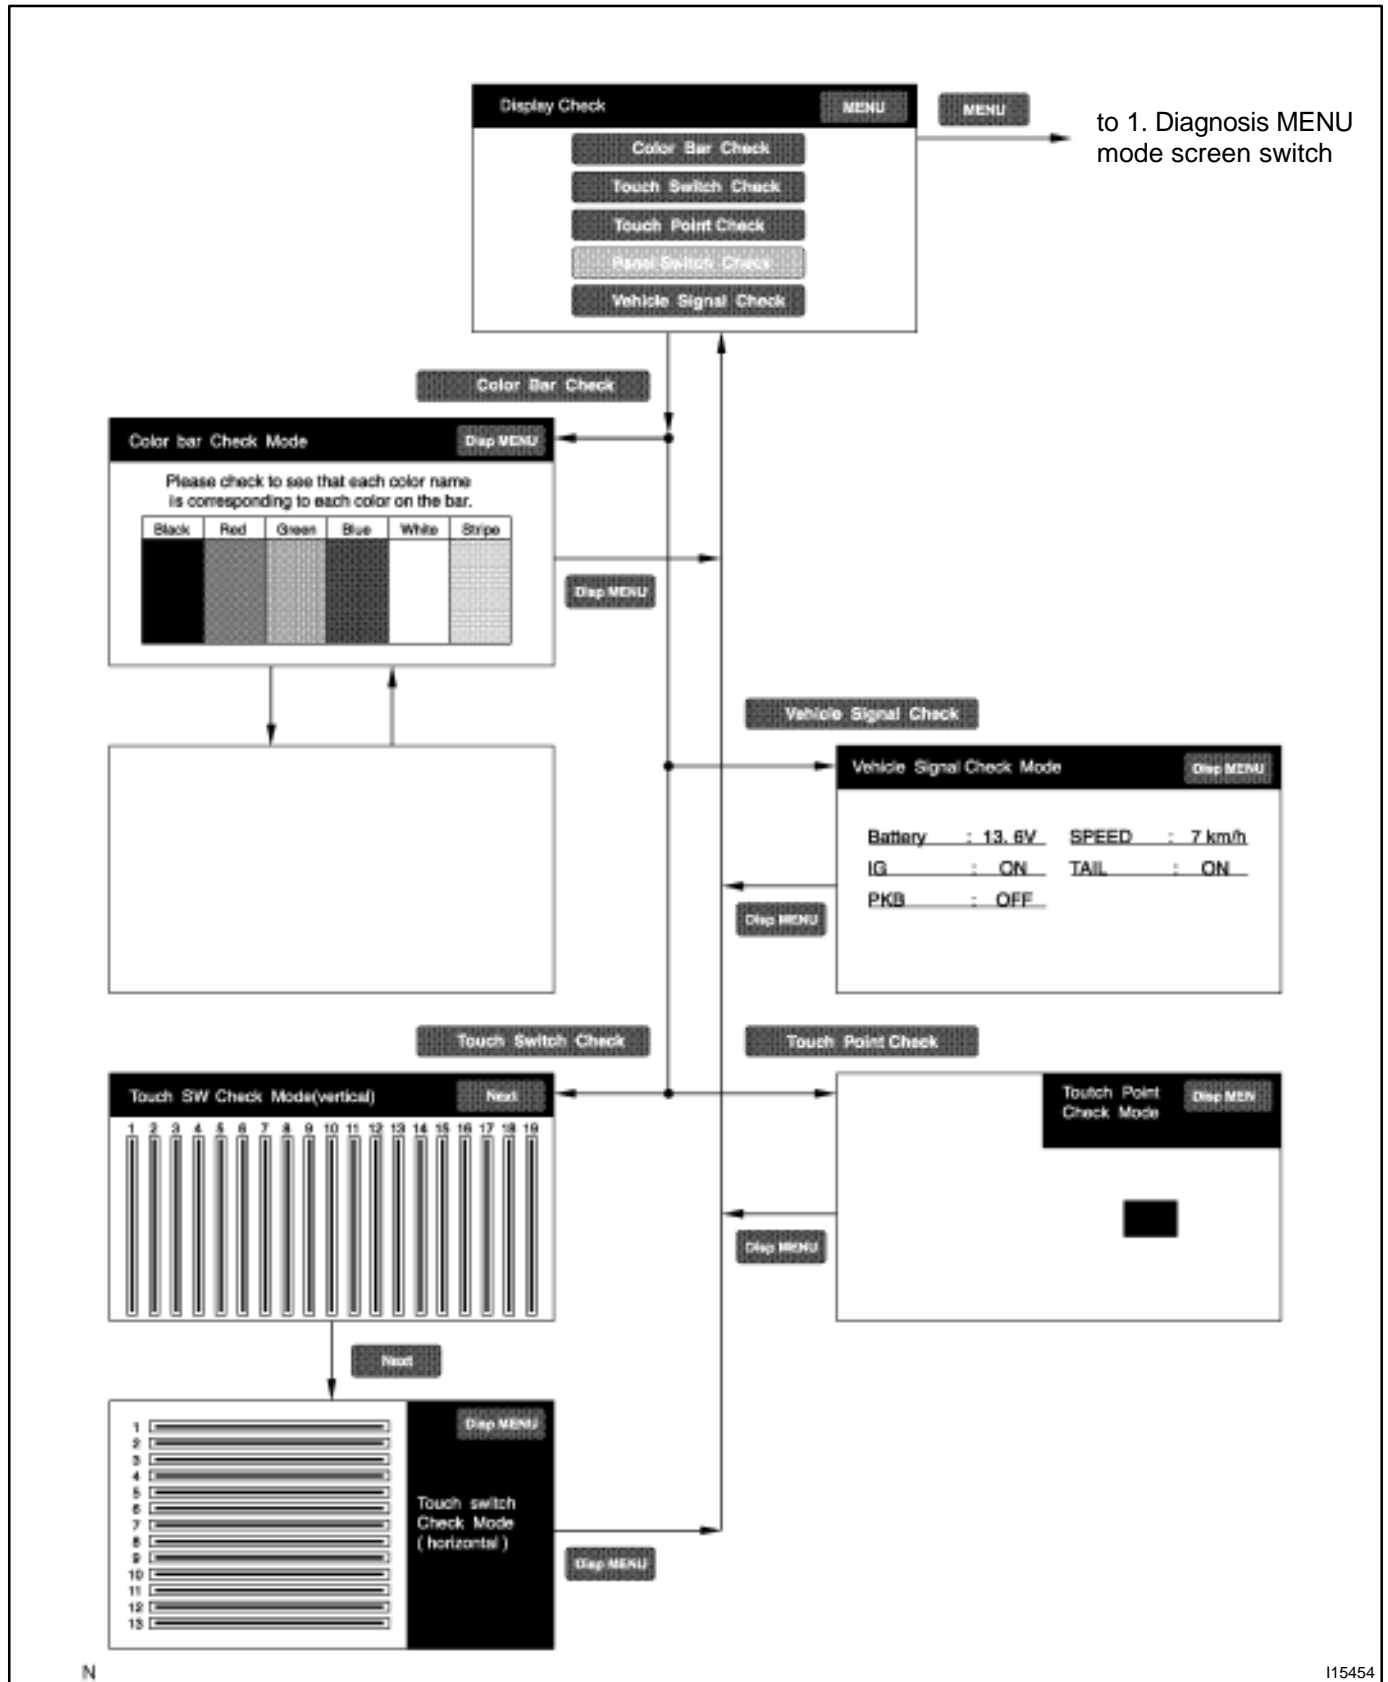

N


I15454

(a) DISPLAY CHECK MENU SCREEN

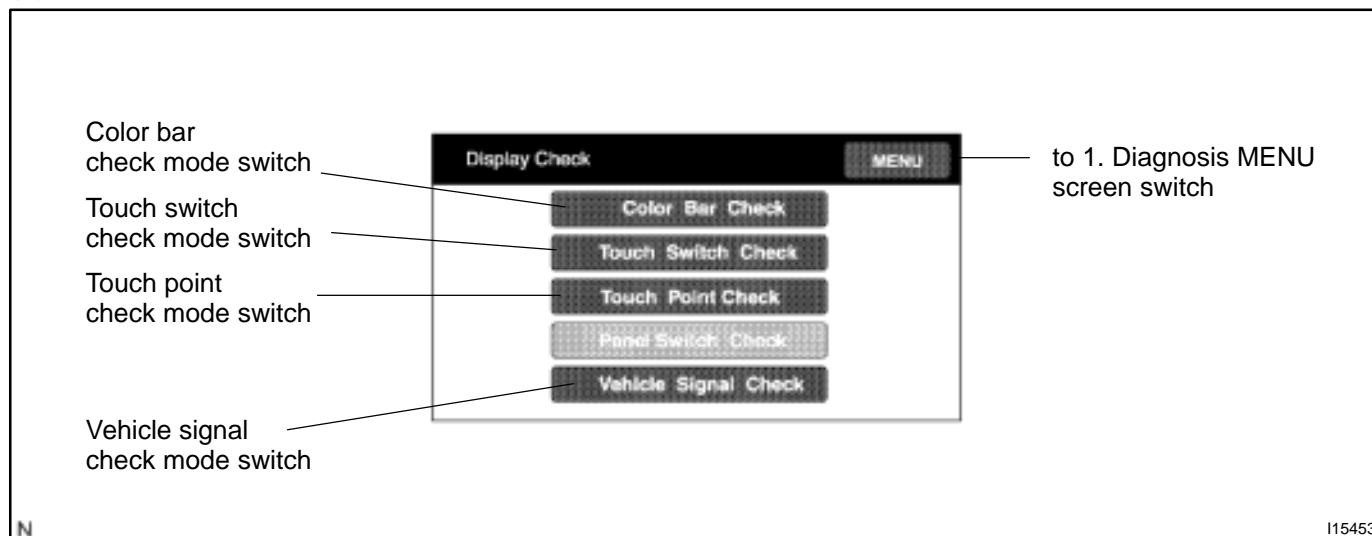

- (1) Various screens to check the display are started from this screen.
- (2) Color Bar Check Mode Switch
Pressing this switch activates the Color Bar Check Mode screen.
- (3) Touch Switch Check Mode Switch
Pressing this switch activates the Touch Switch Check Mode screen.
- (4) Touch Point Check Mode Switch
Pressing this switch activates the Touch Point Check Mode screen.
- (5) Vehicle Signal Check Mode Switch
Pressing this switch activates the Vehicle Signal Check Mode screen.
- (6) Diagnosis MENU Screen Switch
Pressing this switch activates the Diagnosis MENU screen.

(b) COLOR BAR CHECK MODE SCREEN

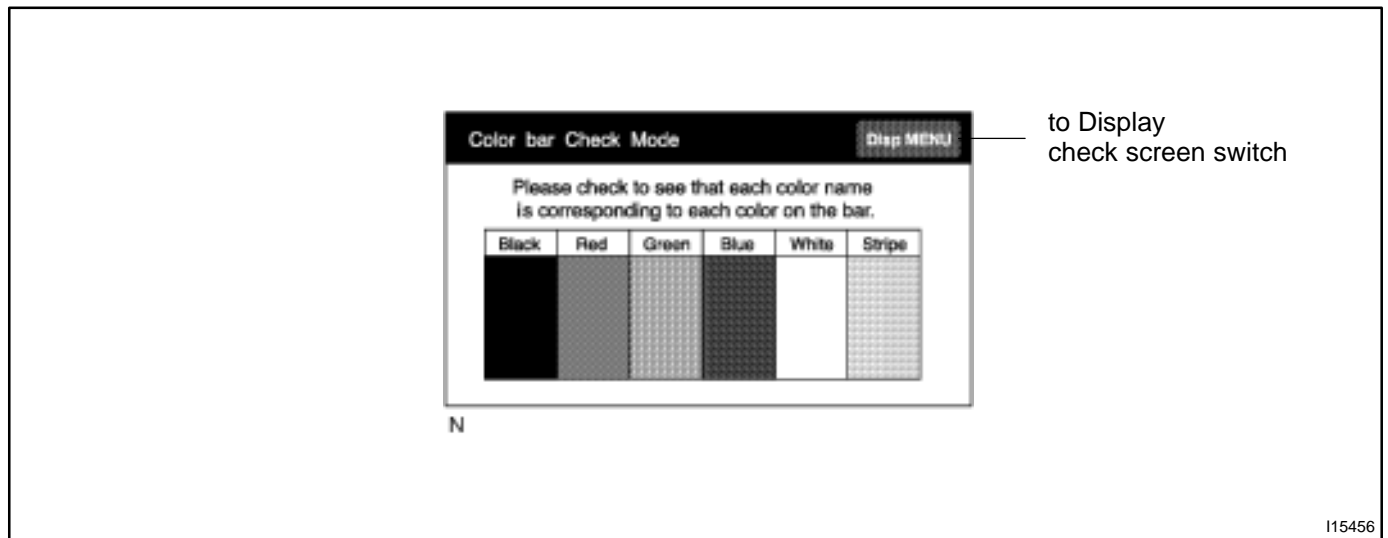

(1) Color display is checked in this screen.

(2) Color Bar:


Black, Red, Green, Blue, White and Stripe is displayed in bars.

If a bar is touched, color or stripe of the bar is appeared all over the screen. When touched again, it returns to the previous screen.

(3) Display Check Screen Switch


Pressing this switch activates the Display Check Mode screen.

(c) TOUCH SWITCH CHECK MODE SCREEN

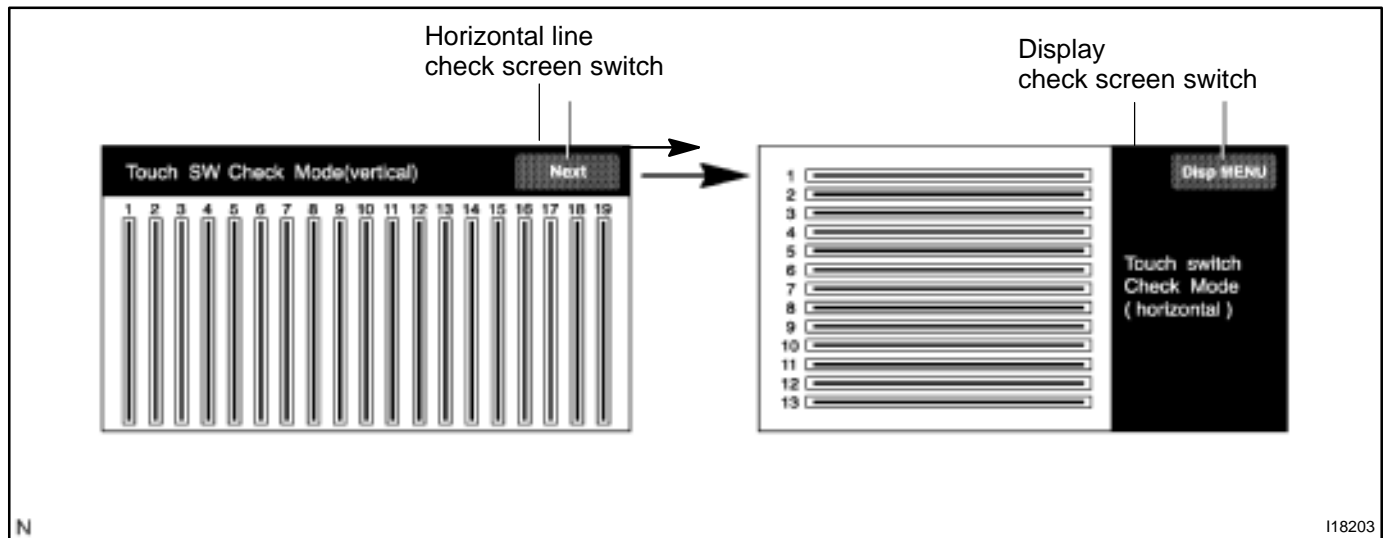


- (1) Operating condition is checked line by line in the Touch Switch Check Mode screen.
- (2) Check Line:
Lines are displayed by using infrared beams in this screen.
Once a beam is blocked off by touching the screen with a fingertip, the blocked part of the line is deleted.
- (3) Horizontal Line Check Screen Switch:
Pressing this switch activates a screen in which beams of horizontal lines are checked.
- (4) Display Check Mode Switch
Pressing this switch activates the Display Check Mode screen.

(d) TOUCH POINT CHECK MODE SCREEN

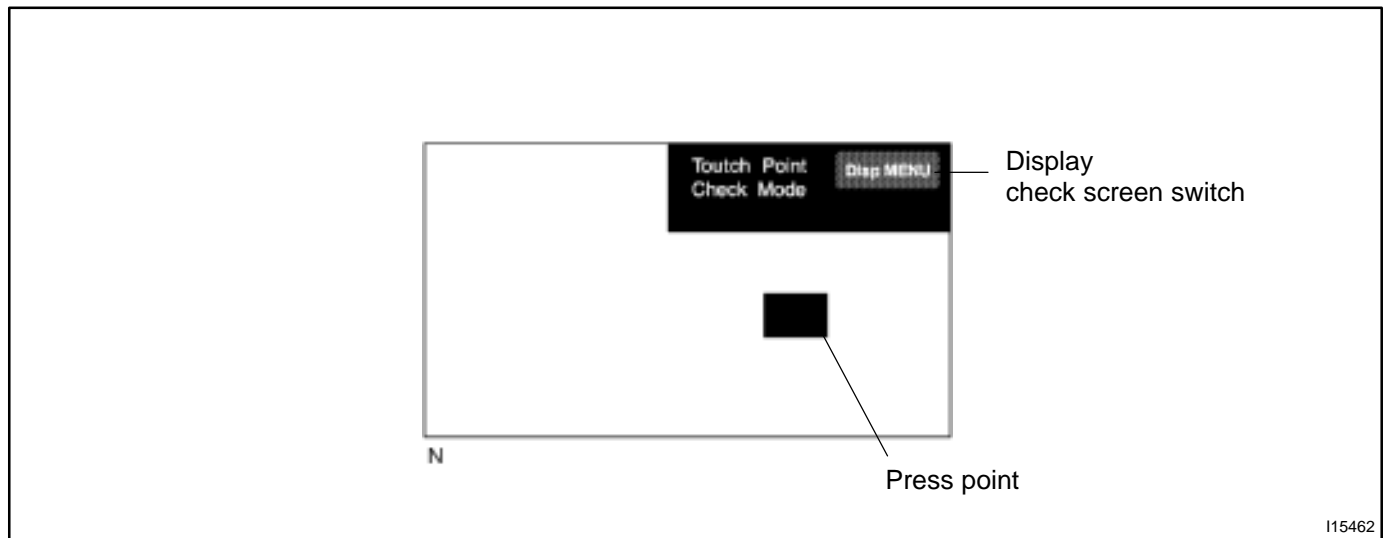

- (1) In this screen, the position detected by the pressure sensing touch switch is checked.
- (2) Press point:
The detected point is indicated by a cross-hair cursor.
- (3) Display Check Screen Switch
Pressing this switch activates the Display Check Mode screen.

(e) VEHICLE SIGNAL CHECK MODE SCREEN

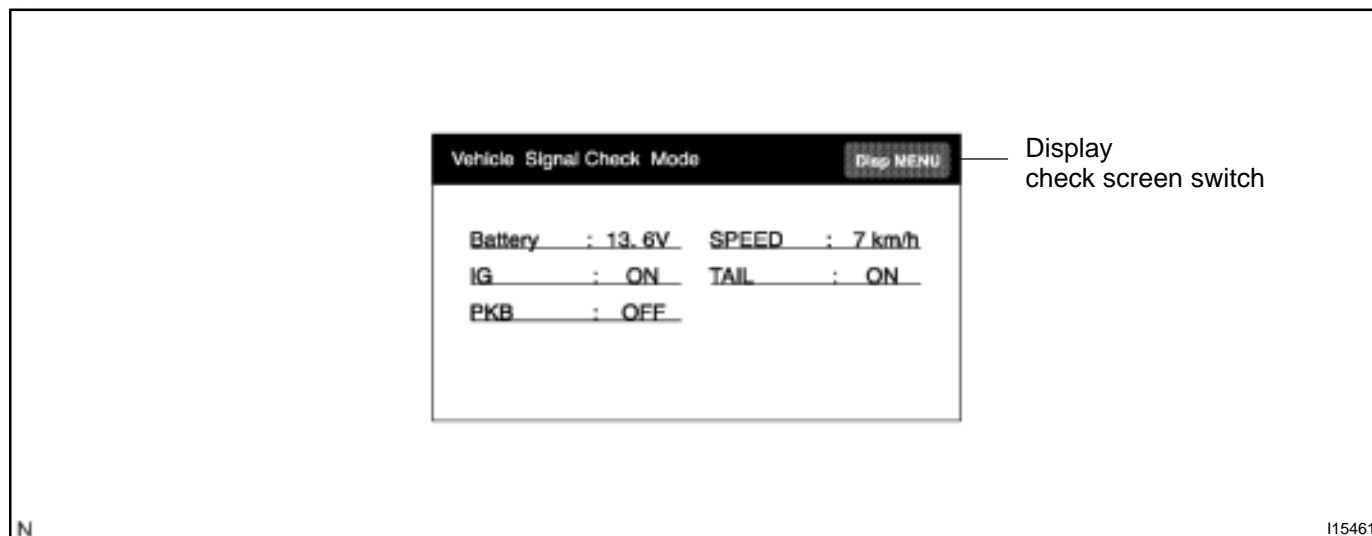

- (1) Status of the Vehicle Signal which has been loaded into the display is checked in this screen.
- (2) Signal Description
Battery: Displays battery voltage in V.
IG: Displays ON or OFF of the ignition switch.
PKB: Displays ON (applied) or OFF (released) of the parking brake.
SPEED: Displays the vehicle speed in km/h.
TAIL: Displays ON or OFF of the tail light switch.
- (3) Display Check Screen Switch
Pressing this switch activates the Display Check Mode screen.

DIAGNOSTIC TROUBLE CODE CHART

Terms	Meaning
Physical address	Three-digit code (shown in hexadecimal) which is given to each component comprising the AVC – LAN Corresponding to the function, individual symbols are specified..
Logical address	Two-digit code (shown in hexadecimal) which is given to each function comprising the inner system of the AVC – LAN.

Physical address: 110 Multi display

Logical address	DTC	Diagnosis item	Diagnosis content	Countermeasure and inspected parts
21 *1 (Switch)	10	Panel Switch Error	Error in panel switch input part is detected. (Error in switch control part, or internal communication error with switch control part is detected.)	<ul style="list-style-type: none"> Inspect all switches on touch switch test screen in display check mode. If any of lines and point does not react, replace multi-display assembly. If all switches function without problem, observe them for a while.
21 (Switch)	11	Touch Switch Error	Error in touch switch sensor is detected.	<ul style="list-style-type: none"> Inspect all touch switches on touch switch test screen in display check mode. If any of lines does not react, replace multi-display assembly. If all of vertical and horizontal lines react normally, observe them for a while.
34 (Front passenger monitor)	10	Error in Picture Circuit	Error in power supply system for picture circuit (abnormal voltage) is detected.	Replace multi-display assembly.
34 (Front passenger monitor)	11	Backlight Error (No current)	Decline in power output from inverter circuit for backlight.	Replace multi-display assembly.
34 (Front passenger monitor)	12	Backlight Error (Excess current)	Excess power output from inverter circuit for backlight.	Replace multi-display assembly.
01 (Communication control)	21	ROM Error	Abnormal condition of ROM is detected.	Replace multi-display assembly.
01 (Communication control)	22	RAM Error	Abnormal condition of RAM is detected.	Replace multi-display assembly.

*1: Check if the operation in Touch Point Check or Touch Switch Check screen is normal. If it operates without any problem, see how things go for a while.

Although this code is defined as Panel Switch Error, there are touch switches only on the display. If the internal communication is erroneous, however, this code is stored.

01 *2 (Communication Control)	D5	Registered component disconnected	Component shown by auxiliary code is or was disconnected from system with ignition switch in ACC or ON. Communication with component shown by auxiliary code is not established when engine is started.	<ul style="list-style-type: none"> ● Check harness for power supply of component shown by auxiliary code ● Check harness for communication system of component shown by auxiliary code
01 *3 (Communication Control)	D8	No response to connection check	Component shown by auxiliary code is or was disconnected from system after engine is started.	<ul style="list-style-type: none"> ● Check harness for power supply of component shown by auxiliary code ● Check harness for communication system of component shown by auxiliary code
01 *2 (Communication Control)	D9	Last Mode Error	Component operated (sound and/or image was provided) before engine stop is or was disconnected with ignition switch in ACC or ON.	<ul style="list-style-type: none"> ● Check harness for power supply of component shown by auxiliary code ● Check harness for communication system of component shown by auxiliary code
01 (Communication Control)	DA	No Response to ON/OFF Instruction	No response is identified when changing mode (audio and visual mode change). Detected when sound and picture does not change by button operation.	<ul style="list-style-type: none"> ● Check harness for power supply of component shown by auxiliary code. ● Check harness for communication system of component shown by auxiliary code. ● If error occurs again, replace component shown by auxiliary code.
01 *2 (Communication Control)	DB	Mode Status Error	Dual sound is detected.	<ul style="list-style-type: none"> ● Check harness for power supply system of component shown by auxiliary code. ● Check harness for communication system of component shown by auxiliary code.
01 *4 (Communication Control)	DC	Transmission Error	Transmission to component shown by auxiliary code has been failed. (This code does not necessarily mean actual failure.)	If same component shown by auxiliary code is recorded in other component(s), check harness for power supply and communication system of components shown sub code.
01 *5 (Communication Control)	DE	Slave Reset (Momentary Interruption)	After engine start, slave component has been disconnected. DB	<ul style="list-style-type: none"> ● Check harness for power supply system of component shown by auxiliary code. ● Check harness for communication system of component shown by auxiliary code.
01 *1 (Communication Control)	E4	Multiple Frame Abort	Multiple frame transmission is aborted.	Since this DTC is provided for engineering, it may be detected when no actual failure exists.

*2: Even if no failure is detected, it may be stored depending on the battery condition or voltage for starting an engine.

*3: It is stored when 180 sec. has passed after the power supply connector is pulled out after engine start.

*4: It may be stored when the engine key is turned again 1 min. after engine start.

*5: It may be stored when the engine key is turned again after engine start.

Physical address: 190 Radio receiver assembly

Logical address	DTC	Diagnosis item	Diagnosis content	Countermeasure and inspected parts
01 (Communication Control)	21	ROM Error	Error is detected in internal ROM.	Replace radio receiver assembly.
01 (Communication Control)	22	RAM Error	Error is detected in internal RAM.	Replace radio receiver assembly.
01 *2 (Communication Control)	D6	Absence of Master	Component in which this code is recorded has been disconnected from system with ignition in ACC or ON. Or, when this code was recorded, multi-display assembly was disconnected.	<ul style="list-style-type: none"> ● Check harness for power supply system of multi display. ● Check harness for communication system of multi display. ● Check harness for power supply system of radio receiver assembly. ● Check harness for communication system of radio receiver assembly.
01 *3 (Communication Control)	D8	No Response to Connection Check	Component shown by auxiliary code is or had been disconnected from system after engine start. D9	<ul style="list-style-type: none"> ● Check harness for power supply system of component shown by auxiliary code. ● Check harness for communication system of component shown by auxiliary code.
01 *2 (Communication Control)	D9	Last Mode Error	Component operated (sounds and/or images were provided) before engine stop is or has been disconnected with ignition switch in ACC or ON.	<ul style="list-style-type: none"> ● Check harness for power supply system of component shown by auxiliary code. ● Check harness for communication system of component shown by auxiliary code.
01 (Communication Control)	DA	No Response to ON/OFF Instruction	No response is identified when changing mode (audio and visual mode change). Detected when sound and picture does not change by button operation.	<ul style="list-style-type: none"> ● Check harness for power supply of component shown by auxiliary code. ● Check harness for communication system of component shown by auxiliary code. ● If error occurs again, replace component shown by auxiliary code.
01 *2 (Communication Control)	DB	Mode Status Error	Dual alarm is detected.	<ul style="list-style-type: none"> ● Check harness for power supply of component shown by auxiliary code. ● Check harness for communication system of component shown by auxiliary code.
01 *4 (Communication Control)	DC	Transmission Error	Transmission to component shown by auxiliary code has been failed. (Detecting this DTC does not necessarily mean actual failure.)	<ul style="list-style-type: none"> ● If same auxiliary code is recorded in other component, check harness for power supply and communication system of components shown sub code.
01 *5 (Communication Control)	DD	Master Reset (Momentary Interruption)	After engine is started, multi-display assembly was disconnected from system.	<ul style="list-style-type: none"> ● If this error occurs frequently, replace multi-display assembly.

01 *5 (Communication Control)	DE	Slave Reset (Momentary Interruption)	After engine is started, slave component was disconnected from system.	<ul style="list-style-type: none"> ● Check harness for power supply of component shown by auxiliary code. ● Check harness for communication system of component shown by auxiliary code.
01 *6 (Communication Control)	DF	Master Error	Due to defective condition of multi display, master function is switched to audio equipment. Error occurs in communication between sub-master (audio) and multi display.	<ul style="list-style-type: none"> ● Check harness for power supply of multi-display assembly. ● Check harness for communication system of multi-display assembly. ● Check harness for communication system between multi-display assembly and sub-master component.
01 (Communication Control)	E0	Registration Completion Instruction Error	"Registration Completion Instruction" command from multi display cannot be received.	● Since this DTC is provided for engineering purpose, it may be detected when no actual failure exists.
01 *2 (Communication Control)	E1	Audio processor ON error	While source equipment is operating, AMP output is stopped.	<ul style="list-style-type: none"> ● Check harness for power supply of multi-display assembly. ● Check harness for communication system of multi-display assembly.
01 (Communication Control)	E2	ON/OFF Instruction Parameter Error	Error occurs in ON/OFF controlling command from multi-display assembly.	● Replace multi-display assembly.
01 (Communication Control)	E3	Registration Request Transmission	Registration Request command is output from slave component. Receiving Connection Check Instruction, Registration Request command is output from sub-master component.	● Since this DTC is provided for engineering purpose, it may be detected when no actual failure exists.
01 (Communication Control)	E4	Plural Frame Abort	Plural frame transmission is aborted.	● Since this DTC is provided for engineering purpose, it may be detected when no actual failure exists.
60 (Radio receiver assembly)	43	AM Tuner Error	Abnormal condition is detected in AM tuner. Inspect radio receiver assembly.	Replace radio receiver assembly.
60 (Radio receiver assembly)	44	FM Tuner Error	Abnormal condition is detected in FM tuner.	Replace radio receiver assembly.
61 (Cassette switch)	40	Mechanical or Media Error	Malfunction due to mechanical failure is identified. Or, cassette tape is cut or entangled.	Inspect cassette tape.
61 (Cassette switch)	41	EJECT Malfunction	Malfunction due to mechanical failure.	Replace radio receiver assembly.
62 (CD player)	42	No Disc Readout	Disc cannot be read.	Inspect CD.
62 (CD player)	44	CD Error	Error is detected in CD player.	Replace radio receiver assembly.

62 (CD player)	45	EJECT Error	Magazine cannot be ejected.	Replace radio receiver assembly.
62 (CD player)	46	Scratched/ Reversed Disc	Scratches or dirt is found on CD surface or CD is set upside down.	Inspect CD.

*2: Even if no failure is detected, it may be stored depending on the battery condition or voltage for starting an engine.

*3: It is stored when 180 sec. has passed after the power supply connector is pulled out after engine start.

*4: It may be stored when the engine key is turned again 1 min. after engine start.

*5: It may be stored when the engine key is turned again after engine start.

*6: When 210 sec. has passed after pulling out the power supply connector of the master component with the ignition switch in ACC or ON, this code is stored.

Physical address: 178 Navigation ECU


58 (Navigation ECU)	10	Gyro Error	Error in gyro sensor is detected. (Abnormal value in voltage output from sensor is detected for more than specified time.)	<ul style="list-style-type: none"> Check the Gyro voltage in the diagnosis system mode.
58 (GPS receiver)	11	GPS Receiver Error	Operation error of GPS receiver is detected.	<ul style="list-style-type: none"> At an outdoor site with a clear view, operate to display the GPS information screen of the diagnosis system. If GPS time stamp is not properly displayed after 15 min. or more, replace navigation ECU.
58 (GPS receiver)	40	GPS Antenna Error	Operation condition of GPS antenna cable is detected. (Open circuit, connection failure of connectors, etc.)	<ul style="list-style-type: none"> Check if the GPS antenna is correctly connected or positioned or not. After replacing the antenna, if the error remains, replace the navigation ECU.
58 (GPS receiver)	41	Power Supply Error of GPS Antenna	Abnormal voltage of GPS antenna cable or short circuit is detected.	<ul style="list-style-type: none"> Inspect GPS antenna and replace if necessary. (When no continuity is identified between connector's core and sealed part, GPS antenna is normal.) If GPS antenna is normal, replace navigation ECU.
58 (Navigation ECU)	42	Map Disc Error	Data cannot be read for a specified time due to scratches or dirt on disc surface or insertion of music CD.	<ul style="list-style-type: none"> Inspect disc and replace if necessary. (Visually check disc surface and wipe it with soft cloth.)
58 (Navigation ECU)	43	Vehicle speed sensor Signal Error	Input error of vehicle speed sensor signal is detected. (When no vehicle speed sensor signal has been input for a specified time.)	<ul style="list-style-type: none"> Check the vehicle speed signal in the diagnosis system mode. Inspect wire harness for vehicle speed signal. If wire harness is normal, replace navigation ECU.
58 (Navigation ECU)	44	Player Error	Malfunction of player continues for a specified length of time.	<ul style="list-style-type: none"> Check if disc can be inserted/taken out or not. If not, replace navigation ECU. When the same code is detected in recheck after deleting the DTC memory.
58 (Navigation ECU)	45	Player Temp. Too High	Readout cannot be done because temperature around player's pickup (reading part) is too high.	<ul style="list-style-type: none"> With IG switch OFF, leave vehicle in cool shaded place for a while and recheck. After deleting the DTC memory, If same code detected, replace navigation ECU.

01 (Communication Control)	D6	Absence of Master	Component in which this code is recorded has been disconnected from system with ignition in ACC or ON. Or, when this code was recorded, multi-display assembly was disconnected.	<ul style="list-style-type: none"> ● Check harness for power supply system of multi display. ● Check harness for communication system of multi display. ● Check harness for power supply system of navigation ECU. ● Check harness for communication system of navigation ECU.
01 *6 (Communication Control)	D7	Connection Check Error	Component in which this code is recorded has been disconnected from system after engine start. Or, when this code was recorded, multi-display assembly was disconnected. D6	<ul style="list-style-type: none"> ● Check harness for power supply system of multi display. ● Check harness for communication system of multi display. ● Check harness for power supply system of navigation ECU. ● Check harness for communication system of navigation ECU.
01 (Communication Control)	DC	Transmission Error	Transmission to component shown by auxiliary code has been failed. (This code does not necessarily mean actual failure.)	If same auxiliary code is recorded in other component(s), check harness for power supply and communication system of components shown sub code.
01 (Communication Control)	DD	Master Reset (Momentary Interruption)	After engine is started, multi-display assembly was disconnected from system.	<ul style="list-style-type: none"> ● Check harness for power supply system of multi-display assembly. ● Check harness for communication system of multi-display assembly. ● If error occurs frequently, replace multi-display assembly.
01 (Communication Control)	DF	Master Error	Due to defective condition of component with a display, master function is switched to audio equipment. Error occurs in communication between sub-master (audio) and master component.	<ul style="list-style-type: none"> ● Check harness for power supply of multi-display assembly. ● Check harness for communication system of multi-display assembly. ● Check harness for communication system between multi-display assembly and sub-master component.
01 (Communication Control)	E0	Registration Completion Instruction Error	"Registration Completion Instruction" command from multi display cannot be received.	Since this DTC is provided for engineering, it may be detected when no actual failure exists.
01 (Communication Control)	E2	ON/OFF Instruction Parameter Error	Error is detected in ON/OFF control command from multi-display assembly.	Replace multi-display assembly.
01 (Communication Control)	E3	Registration Request Transmission	<ul style="list-style-type: none"> ● Registration Request command is output from slave component. ● By reception of connection check instruction, Registration Request command is output from sub-master component. 	Since this DTC is provided for engineering, it may be detected when no actual failure exists.
01 (Communication Control)	E4	Plural Frame Abort	Plural frame transmission is aborted.	<ul style="list-style-type: none"> ● Since this DTC is provided for engineering purpose, it may be detected when no actual failure exists.

*6: When 210 sec. has passed after pulling out the power supply connector of the master component with the ignition switch in ACC or ON, this code is stored.

TERMINALS OF ECU

MULTI DISPLAY

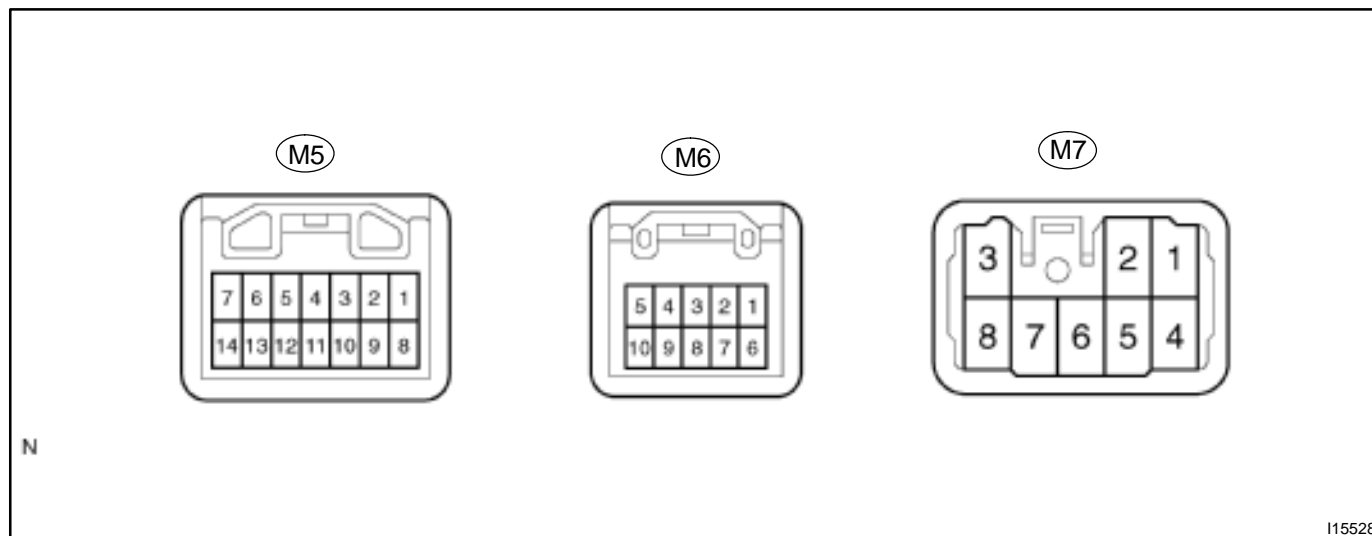


Symbols (Terminals NO.)	Condition	STD Voltage (V)	Problem symptom when open circuit is detected.
			Problem symptom when short circuit is detected.
TX+ (M5-3)	Ignition switch ACC or ON	About 2.5 V	Screen is in disorder.
TX3+ (M5-4)	Ignition switch ACC or ON	About 2.5 V	Screen is in disorder.
SPD – GND (M5-5 – M7-6)	Ignition switch ON, and driving wheel rotated slowly	Repeatedly changes from below 1 to 9 V	Fuel efficiency cannot be calculated.
TX- (M5-10)	Ignition switch ACC or ON	About 2.5 V	Screen is in disorder.
TX3- (M5-11)	Ignition switch ACC or ON	About 2.5 V	Screen is in disorder.
PKB – GND (M5-13 – M7-6)	Parking brake switch ON (parking brake lever released)	5 V	The system cannot enter Diagnosis System mode.
TC – GND (M5-14 – M7-6)	Ignition switch OFF and connect terminals TC and E1 of diagnosis check connector	Continuity	Navigation system is normal.
			The system cannot exit Service Check mode.
VR – VG (M6-1 – M6-6)	Constant	Continuity	Screen noise or other types of noise occur.
R – VG (M6-2 – M6-6)	Diagnosis display check screen is white (Using an oscilloscope)	$0.7\text{ V} \pm 0.1\text{ V} \times 2$	Screen color turns to blue.
B – VG (M6-3 – M6-6)	Diagnosis display check screen is white (Using an oscilloscope)	$0.7\text{ V} \pm 0.1\text{ V} \times 2$	Screen color turns to yellow.
TX1+ (M6-5)	AVC-LAN communication circuit	–	Navigation system does not operate.
VG – GND (M6-6 – M7-6)	Constant	Continuity	Screen noise or other types of noise occur.
			Navigation system does not operation.
G – VG (M6-7 – M6-6)	Diagnosis display check screen is white (Using an oscilloscope)	$0.7\text{ V} \pm 0.1\text{ V} \times 2$	Screen color turns to red-purple.

DIAGNOSTICS – NAVIGATION SYSTEM


SYNC – VG (M6-8 – M6-6)	Display ON (Using an oscilloscope)	0.5 V – 1.3 V *1	Screen is in disorder
TX1- (M6-10)	AVC-LAN communication circuit	–	Navigation system does not operate.
+B1 – GND (M7-1 – M7-6)	Constant	10 – 14 V	Navigation system does not operate.
IG – GND (M7-2 – M7-6)	Ignition switch ON	10 – 14 V	Navigation system does not operate.
DR – GND (M7-3 – M7-6)	Light control switch TAIL or HEAD and cover the top of automatic light control sensor	9 V or more	No problem is identified in the display.
ACC – GND (M7-4 – M7-6)	Ignition switch ACC	10 – 14 V	Navigation system does not operate.
GND – Body ground (M7-6 – Body ground)	Constant	Below 1 V	Audio system is normal.
TAIL – GND (M7-8 – M7-6)	Light control switch TAIL or HEAD	9 V or more	Switching between Night and Day mode cannot be done.

NAVIGATION ECU

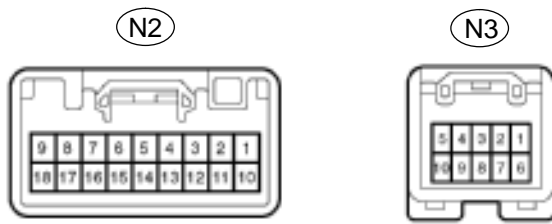

Symbols (Terminals NO.)	Condition	STD Voltage (V)	Problem symptom when open circuit is detected.
			Problem symptom when short circuit is detected.
AUI+ – GND (N2-1 – N2-17)	Radio switch ON	5 – 7 V	Driver's side speaker does not sound.
AUO+ – GND (N2-2 – N2-17)	Radio switch ON	5 – 7 V	Driver's side speaker does not sound.
SPD – GND (N2-5 – N2-17)	Ignition switch ON and driving wheel rotated slowly	Repeatedly changes from below 1 to 9 V	Navigation operation is available during, or a cursor on present site does not move.
+B – GND (N2-9 – N2-17)	Constant	10 – 14 V	The set route can not be memorized. (The route disappears by turning the ignition switch OFF.)
			Fuse is blown.
AUI- – GND (N2-10 – N2-17)	Radio switch ON	5 – 7 V	Driver's side speaker does not sound.
AUO- – GND (N2-11 – N2-17)	Radio switch ON	5 – 7 V	Driver's side speaker does not sound.
REV – GND (N2-14 – N2-17)	A/T shift position R	5 V	The direction of advance of the vehicle is different from that of the cursor.
GND – Body ground (N2-17 – Body ground)	Constant	Below 1 V	Audio system is normal.
ACC – GND (N2-18 – N2-17)	Ignition switch ACC or ON	10 – 14 V	Audio system does not sound.
VR – VG (N3-1 – N3-6)	Constant	Continuity	Screen noise or other types of noise occur.
			Navigation system does not operation.
R – VG (N3-2 – N3-6)	Diagnosis display check screen is white (Using an oscilloscope)	0.7 V \pm 0.1 V*1	Screen color turns to blue.

+B – GND (N3-3 – N2-17)	Constant	10 – 14 V	The set route can not be memorized. (The route disappears by turning the ignition switch OFF.)
			Fuse is blown.
B – VG (N3-3 – N3-6)	Diagnosis display check screen is white (Using an oscilloscope)	$0.7 \pm 0.1 \text{ V}^*2$	Screen color turns to yellow.
TX1+ – GND (N3-5 – N2-17)	Ignition switch ACC or ON	2 – 3 V	Navigation system does not operate.
VG – GND (N3-6 – N2-17)	Constant	Continuity	Screen noise or other types of noise occur.
			Navigation system does not operation.
G – VG (N3-7 – N3-6)	Diagnosis display check screen is white (Using an oscilloscope)	$0.7 \pm 0.1 \text{ V}^*2$	Screen color turns to red-purple.
SYNC – VG (N3-8 – N3-6)	Display ON (Using an oscilloscope)	$0.5 - 1.3 \text{ V}^*1$	Screen is in disorder.
TX1- – GND (N3-10 – N2-17)	Ignition switch ACC or ON	2 – 3 V	Navigation system does not operate.

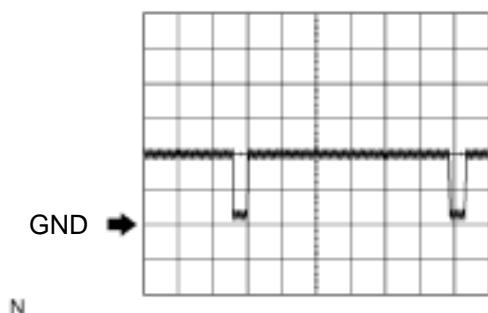


Oscilloscope

*1: wave1

- Measure terminal: SYNC ↔ GND1
- Measure set: 500 mV/DIV 10 μs/DIV
- Condition: Navigation display is displayed

I15531

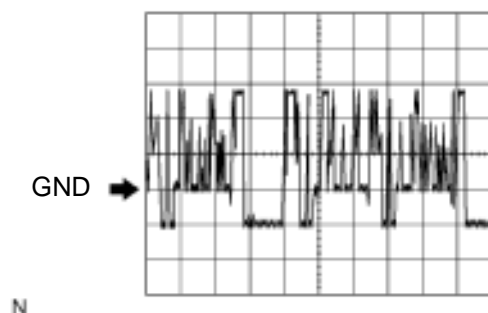

*2: wave2

- Measure terminal: R, G, B ↔ GND1
- Measure set: 200 mV/DIV 10 μs/DIV
- Condition: Navigation map is switched

I15532

3. No navigation screen displayed when "MAP", "Menu", or "DEST" switch pressed. (Screen cannot be switched.)

INSPECTION PROCEDURE

1	Service check mode. (Check the navigation ECU)
---	--

NG	Troubleshoot for each diagnosis.
OK	Go to step 6.

Ncon

2	Check the navigation ECU.
---	---------------------------

PREPARATION:

Disconnect the navigation ECU connector.

CHECK:

Check voltage terminals +B.

OK:

+B: 10 – 14 V

CHECK:

Check voltage terminal ACC when turn ignition switch ACC or ON position.

OK:

ACC: 10 – 14 V

CHECK:

Check continuity terminal GND.

OK:

GND: Continuity

NG	Replace or repair wire harness or connector.
----	--

OK

3 Check the navigation ECU.**CHECK:**

Check terminal R, G and B.

OK:

R, G, B: See "Navigation ECU" of "TERMINAL OF ECU".

NG**Replace the navigation ECU.****OK****4 Check the multi display.****PREPARATION:**

Disconnect the multi display connector.

CHECK:

Check voltage terminals +B.

OK:

+B: 10 – 14 V

CHECK:

Check voltage terminal ACC when turn ignition switch ACC or ON position.

OK:

ACC: 10 – 14 V

CHECK:

Check continuity terminal GND.

OK:

GND: Continuity

NG**Replace or repair wire harness or connector.****OK****5 Check the multi display.****CHECK:**

Check terminal R, G and B.

OK:

R, G, B: See "multi display" of "TERMINAL OF ECU".

NG**Replace the multi display.****OK**

Replace the multi display.

6

All of the switches (MAP, Menu, DEST etc.) does not function.

No

Replace the center cluster module control.

Yes

7

Check each switch (A/C switch e.t.c.) of the center cluster module control does not function.

No

Replace the center cluster module control.

Yes

Replace the multi display.

5. No navigation displayed, "Audio OFF" on audio screen and no audio sound.

INSPECTION PROCEDURE

1 Service check mode.

NG

Troubleshoot for each diagnosis.

OK

2 Check the radio receiver assembly.

PREPARATION:

Disconnect the radio receiver assembly connector.

CHECK:

Check voltage terminals +B.

OK:

+B: 10 – 14 V

CHECK:

Check voltage terminal ACC when turn ignition switch ACC or ON position.

OK:

ACC: 10 – 14 V

CHECK:

Check continuity terminal GND.

OK:

GND: Continuity

NG

Replace or repair wire harness.

OK

3 Check "AVC-LAN communication circuit" (See page [DI-860](#)).

NG

Replace the AVC-LAN circuit or radio receiver assembly.

OK

Replace the multi display.

6. Screen cannot be dimmed in night time.

INSPECTION PROCEDURE

- | | |
|---|--|
| 1 | Check if the screen is dimmed at night. (With the light control switch ON), do all screens except the navigation screen appear in Night Mode?) |
|---|--|

NG

Check the light control switch.

OK

- | | |
|---|--------------------------|
| 2 | Check the multi display. |
|---|--------------------------|

CHECK:

Check terminal TAIL.

OK:

TAIL: See "Multi display" of "TERMINAL OF ECU".

NG

Replace or repair wire harness.

OK

- | | |
|---|--------------------------|
| 3 | Check the multi display. |
|---|--------------------------|

PREPARATION:

Disconnect the multi display connector.

CHECK:

Check voltage terminals +B.

OK:

+B: 10 – 14 V

CHECK:

Check voltage terminal ACC when turn ignition switch ACC or ON position.

OK:

ACC: 10 – 14 V

CHECK:

Check continuity terminal GND.

OK:

GND: Continuity

NG

Replace or repair wire harness.

OK

Replace the multi display.

8. Color on navigation screen is unusual (RGB signal error).

INSPECTION PROCEDURE

1 Display check mode (Color bar check).

NG

Replace the multi display.

2 Navigation check mode (Color bar check).

NG

Go to step 4.

OK

3 Check the screen setting. (Day or Night mode)

OK

Normal.

NG

4 Check the navigation ECU.

CHECK:

Check terminals +B.

OK:

+B: 10 – 14 V

CHECK:

Check terminal ACC when turn ignition switch ACC or ON position.

OK:

ACC: 10 – 14 V

CHECK:

Check terminal R, G, B, VR or VG.

OK:

R, G, B, VR or VG: See "Navigation ECU" of "TERMINAL OF ECU"

NG

Replace the wire harness when all terminals are faulty. Replace the wire harness when SYNC terminal is faulty.

OK

Replace the multi display.

11. No sound (radio, cassette tape, CD) can be heard from driver side door speaker only.**INSPECTION PROCEDURE****1 Service check mode.****NG****Troubleshoot for each diagnosis.****OK****2 Check wire harness (between navigation ECU and radio receiver assembly).****PREPARATION:**

Disconnect the navigation ECU and radio receiver assembly connector.

CHECK:

- (a) Check continuity between terminal AUI+ of navigation ECU connector and terminal FL+ of radio receiver assembly.
- (b) Check continuity between terminal AUI– of navigation ECU connector and terminal FL– of radio receiver assembly.

OK:**Continuity****NG****Replace or repair wire harness.****OK****3 Check the navigation system voice.****OK****Go to step 6.****NG**

4	Check wire harness (between navigation ECU and driver side door speaker).
----------	--

PREPARATION:

Disconnect the navigation ECU and driver side door speaker connector.

CHECK:

- (a) Check continuity between terminal AUO+ of navigation ECU connector and terminal 1 of driver side door speaker.
- (b) Check continuity between terminal AUO– of navigation ECU connector and terminal 2 of driver side door speaker.

OK:

Continuity

NG

Replace or repair wire harness.

OK

5	Check the driver side door speaker.
----------	--

NG

Replace the speaker.

OK

Replace the navigation ECU.

6	Check the navigation ECU.
----------	----------------------------------

CHECK:

Check terminal AUO+, AUO–, AUI+ and AUI–.

OK:

AUO+, AUO–, AUI+ and AUI–: See "Navigation ECU" of "TERMINAL OF ECU".

NG

Replace the navigation ECU.

OK

Replace the radio receiver assembly.

12. Map DISC cannot be inserted.

INSPECTION PROCEDURE

1 Check the MAP DISC.

NG

Replace the MAP DISC.

OK

2 Insert a MAP DISC without tilt.

OK

Normal.

NG

3 Check the navigation ECU.

PREPARATION:

Disconnect the navigation ECU connector.

CHECK:

Check voltage terminals +B.

OK:

+B: 10 – 14 V

CHECK:

Check voltage terminal ACC when turn ignition switch ACC or ON position.

OK:

ACC: 10 – 14 V

CHECK:

Check continuity terminal GND.

OK:

GND: Continuity

NG

Replace or repair wire harness.

OK

Replace the navigation ECU.

15. Navigation screen cannot change to the night mode color.

INSPECTION PROCEDURE

- 1 Check the setting. (Is it set to Day Mode in screen adjustment?)

Yes

Normal.

No

- 2 Check if the screen is dimmed at night. (With the light control switch ON, do all screens except the navigation screen appear in Night Mode?)

NG

Go to step 5.

OK

- 3 Does the beep sound by operating switches on the navigation screen?

OK

Replace the navigation ECU.

NG

- 4 Check "AVC-LAN communication circuit" (See page [DI-860](#)).

NG

Replace or repair AVC-LAN circuit.

OK

Replace the navigation ECU.

5	Check the multi display.
---	--------------------------

CHECK:

Check terminal TAIL.

OK:

TAIL: See "Multi Display" of "TERMINAL OF ECU".

OK

Replace the multi display.

NG

Replace or repair wire harness.

17. Vehicle position is deviated from correct point badly.

INSPECTION PROCEDURE

1

Check the mark display. (At a place with a fine view, is GPS mark displayed or not?)

No

Go to step 7.

Yes

2

Does the trouble occur in the specific area or not?

Yes

Normal. (If the vehicle is positioned in the place where it is difficult to be identified, the current vehicle position may be incorrectly displayed.)

No

3

Check the setting (Color of the automatic calibration button on the calibration screen).

Green

Normal. (Drive the vehicle (10 km or more) until calibration is completed.)

Blue

4

Service check mode. (Is "58-43" displayed in the unit check mode of the navigation ECU?)

Yes

Troubleshoot for each diagnosis.

No

5	Navigation check mode (vehicle signal check mode: SPD).
---	---

NG

Replace or repair speed sensor wire harness.

OK

6	Recurrence Test (Confirm the phenomenon) (Correct the current position and drive the vehicle for a while with the GPS mark displayed).
---	--

OK

Normal.

NG

Replace the navigation ECU.

7	Check if the harness is caught or sharply bent or not.
---	--

NG

Navigation antenna is surely connected.

OK

8	Check optional components. (Does it become if the optionals such as the theft deterrent system is removed?)
---	---

Yes

Remove or change the position of the components.

HINT:

Some optionals receive radio signals, and if this happens, GPS reception may be affected.

No

9	Is there anything such as a film stuck to the window?
----------	--

Yes**Reception may be affected by a screen such as a film.****No**

10	Service check mode. (Is "80-40, 41" is displayed in the unit check mode of the navigation ECU?)
-----------	--

Yes**Troubleshoot for each diagnosis.****No****Replace the navigation antenna.****HINT:**

If the trouble still occurs, replace the navigation ECU.

18. GPS mark does not appear.

INSPECTION PROCEDURE

1

Check the mark display. (At a place with a fine view, is GPS mark displayed or not?)

Yes

Normal.

No

2

Check if the harness is caught or sharply bent or not.

NG

Navigation antenna is surely connected.

OK

3

Check optional components. (Does it become normal if the optionals such as the theft deterrent system is removed?)

Yes

Remove or change the position of the components.

HINT:

Some optionals receive radio signals, and if this happens, GPS reception may be affected.

No

4	Is there anything such as a film stuck to the window?
----------	--

Yes**Reception may be affected by a screen such as a film.****No**

5	Service check mode. (Is "80-40, 41" is displayed in the unit check mode of the navigation ECU?)
----------	--

Yes**Troubleshoot for each diagnosis.****No****Replace the navigation antenna.****HINT:**

If the trouble still occurs, replace the navigation ECU.

20. Vehicle position rotates without control. (Map rotates without control)

INSPECTION PROCEDURE

1	Recheck. (While not rotating the vehicle, turn the ignition switch ON from OFF again.)
---	--

OK

Normal. (While the vehicle was turning, the ignition switch was turned ON.)

NG

2	System check mode. (Is "58-10" is displayed in the unit check mode of the navigation ECU?)
---	--

Yes

Replace the navigation ECU.

No

3	System check mode. (Is "58-43" is displayed in the unit check mode of the navigation ECU?)
---	--

Yes

Replace and repair SPD terminal wire harness.

No

4	Navigation check mode (vehicle signal check mode: SPD and gyro).
---	--

OK

Replace the navigation ECU.

NG

Replace or repair wire harness.

27. No AM, FM or CD screen is displayed.

INSPECTION PROCEDURE

- | | |
|---|--|
| 1 | Check the sound. (Check if the sound of the radio, cassette or CD can be heard.) |
|---|--|

OK

System check mode. (Check radio receiver assembly)

NG

- | | |
|---|------------------------------------|
| 2 | Check the radio receiver assembly. |
|---|------------------------------------|

PREPARATION:

Disconnect the radio receiver assembly connector.

CHECK:

Check voltage terminals +B.

OK:

+B: 10 – 14 V

CHECK:

Check voltage terminal ACC when turn ignition switch ACC or ON position.

OK:

ACC: 10 – 14 V

CHECK:

Check continuity terminal GND.

OK:

GND: Continuity

NG

Replace or repair wire harness.

OK

3

Check "AVC-LAN communication circuit" (See page [DI-860](#)).**NG****Replace or repair AVC-LAN circuit.****OK****Replace the radio receiver assembly.**

AVC-LAN (Communication bus) Circuit

CIRCUIT DESCRIPTION


Each unit of navigation system connected with AVC-LAN (communication bus) transfers the signal of each switch by communication.

When +B short and GND short occur in this AVC-LAN, navigation system will not function normally as the communication is discontinued.

In this AVC-LAN, multi display becomes the master of the communication, and the radio receiver assembly has a terminator necessary for transmitting the communication.


multi display is connected between navigation ECU and radio receiver assembly, navigation system has the structure that makes communication impossible without navigation ECU, multi display or radio receiver assembly.

AVC-LAN

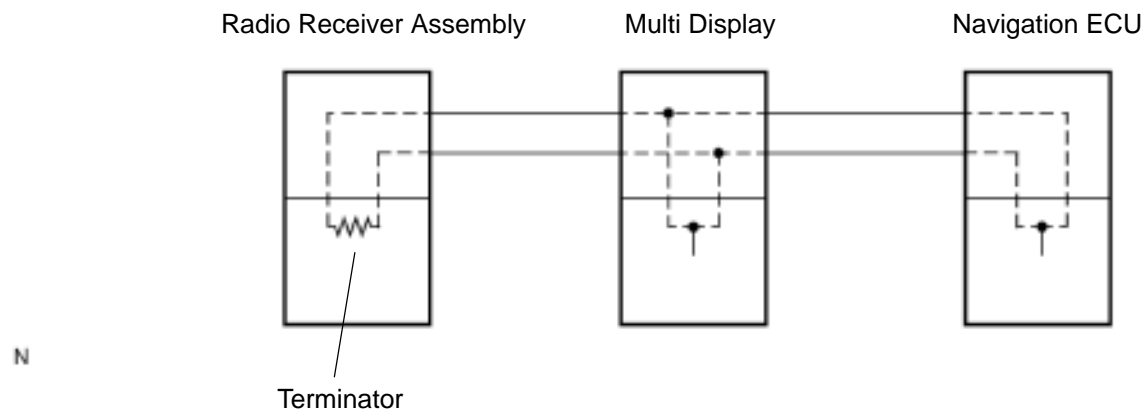

I11572

WIRING DIAGRAM

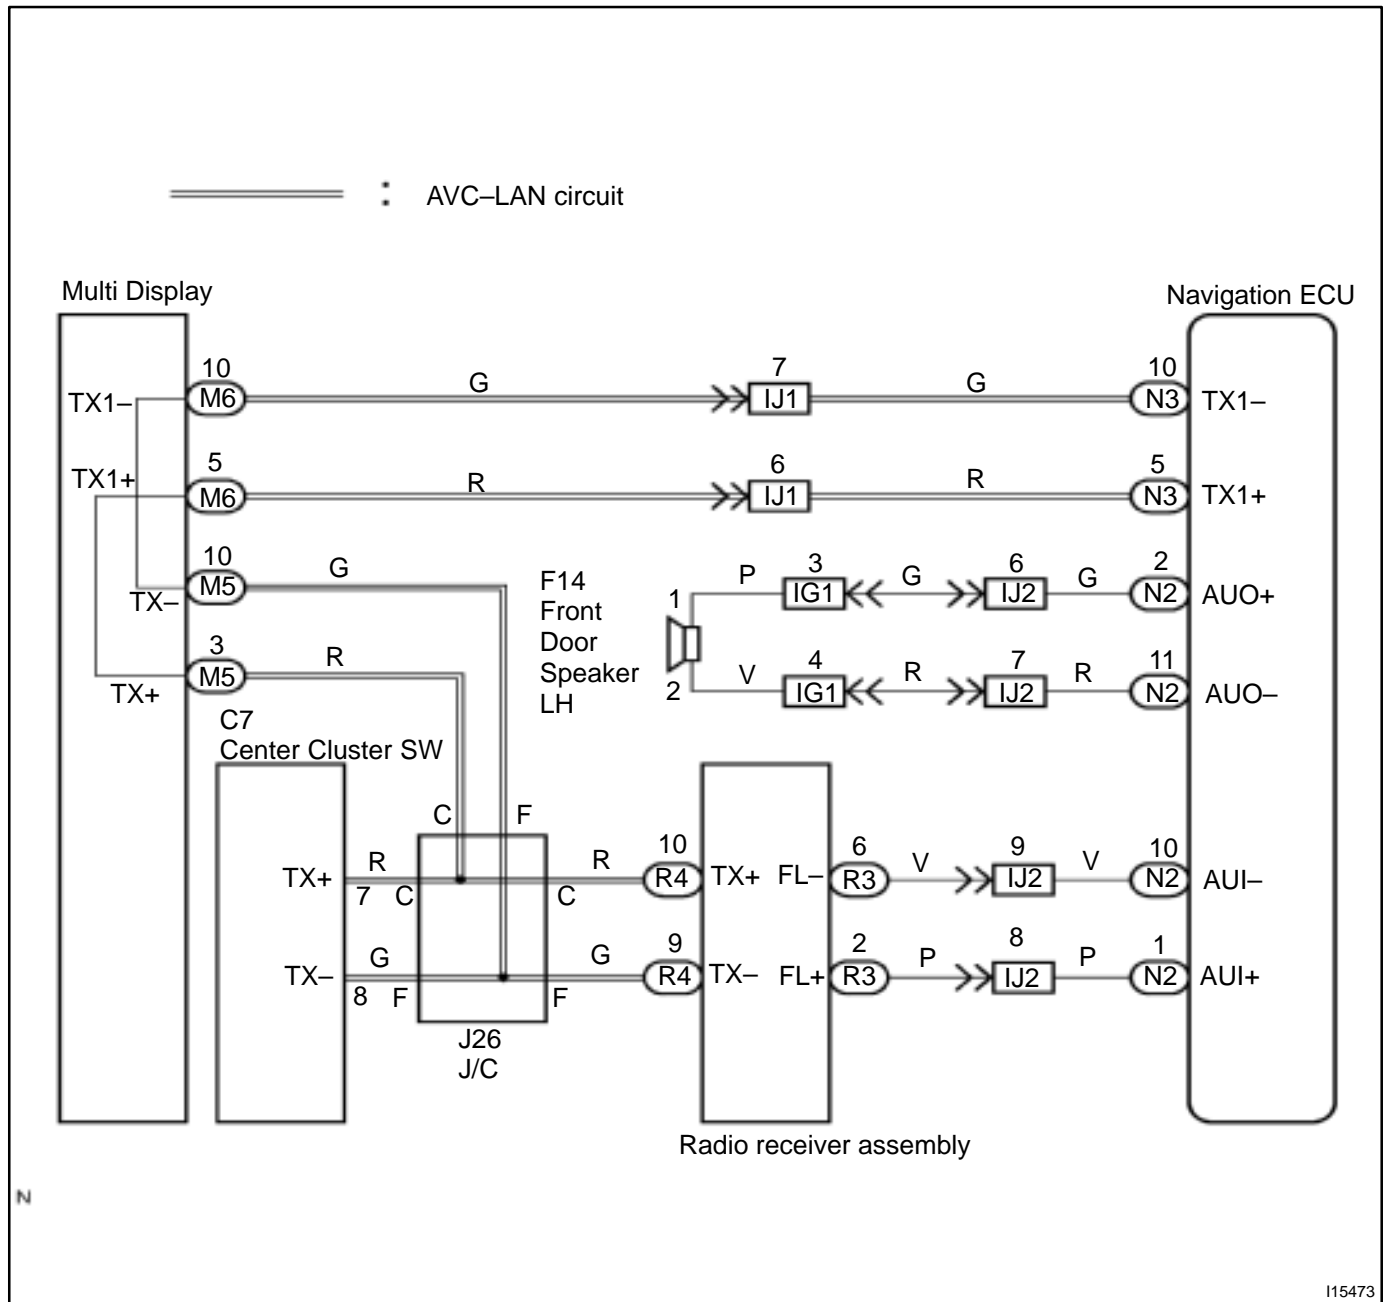

INSPECTION PROCEDURE

1	Check wire harness and connector between radio receiver assembly and navigation ECU (See page IN-41).
---	--

NG

Repair or replace wire harness or connector between radio receiver assembly and navigation ECU.

OK


2	Check wire harness and connector between multi display and navigation ECU (See page IN-41).
---	--

NG

Repair or replace wire harness or connector between multi display and navigation ECU.

OK

3 Skip radio receiver assembly and check AVC-LAN.

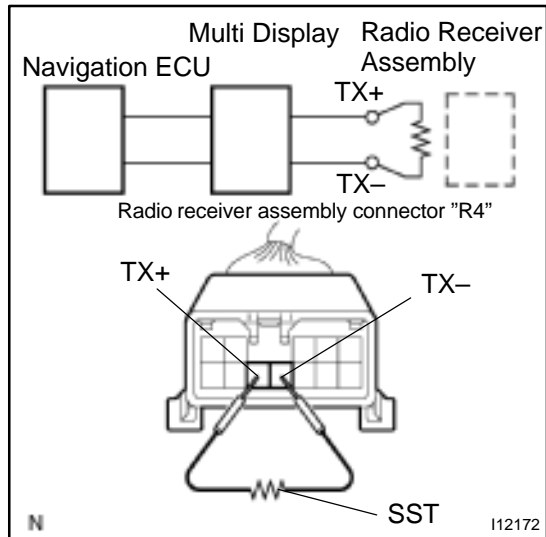

PREPARATION:

- Connect Multi Display connector.
- Disconnect radio receiver assembly "R4" connector.
- Using SST (Navigation Check Wire P/N 09843-18050), connect the terminal TX+ to terminal TX- of "R4" connector of radio receiver assembly.

CHECK:


Operate the panel switch and the touch switch of the display and check that the navigation functions.
(Check that AVC-LAN is recovered.)

OK

Replace the radio receiver assembly.

NG

Replace the Navigation ECU.

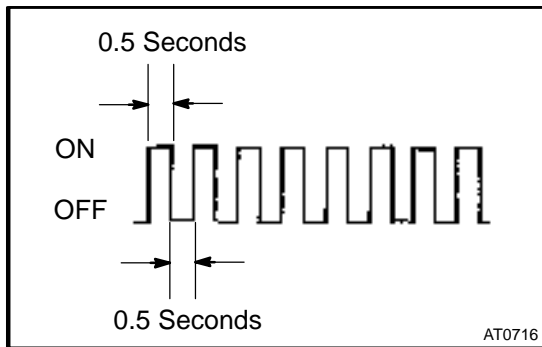

PRE-CHECK

1. WARNING FOR A/C COMPRESSOR LOCK


If compressor lock occurs during A/C operation, the A/C switch indicator on the A/C control assembly starts blinking.

When this occurs, check for compressor lock (DTC 22) using diagnosis trouble code check then proceed to inspect the circuit or the component.


Compressor lock sensor circuit. → (See page [DI-891](#))

2. LIST OF OPERATION METHODS

By operating each of the A/C control switches as shown in the diagram below, it is possible to enter the diagnosis check mode.

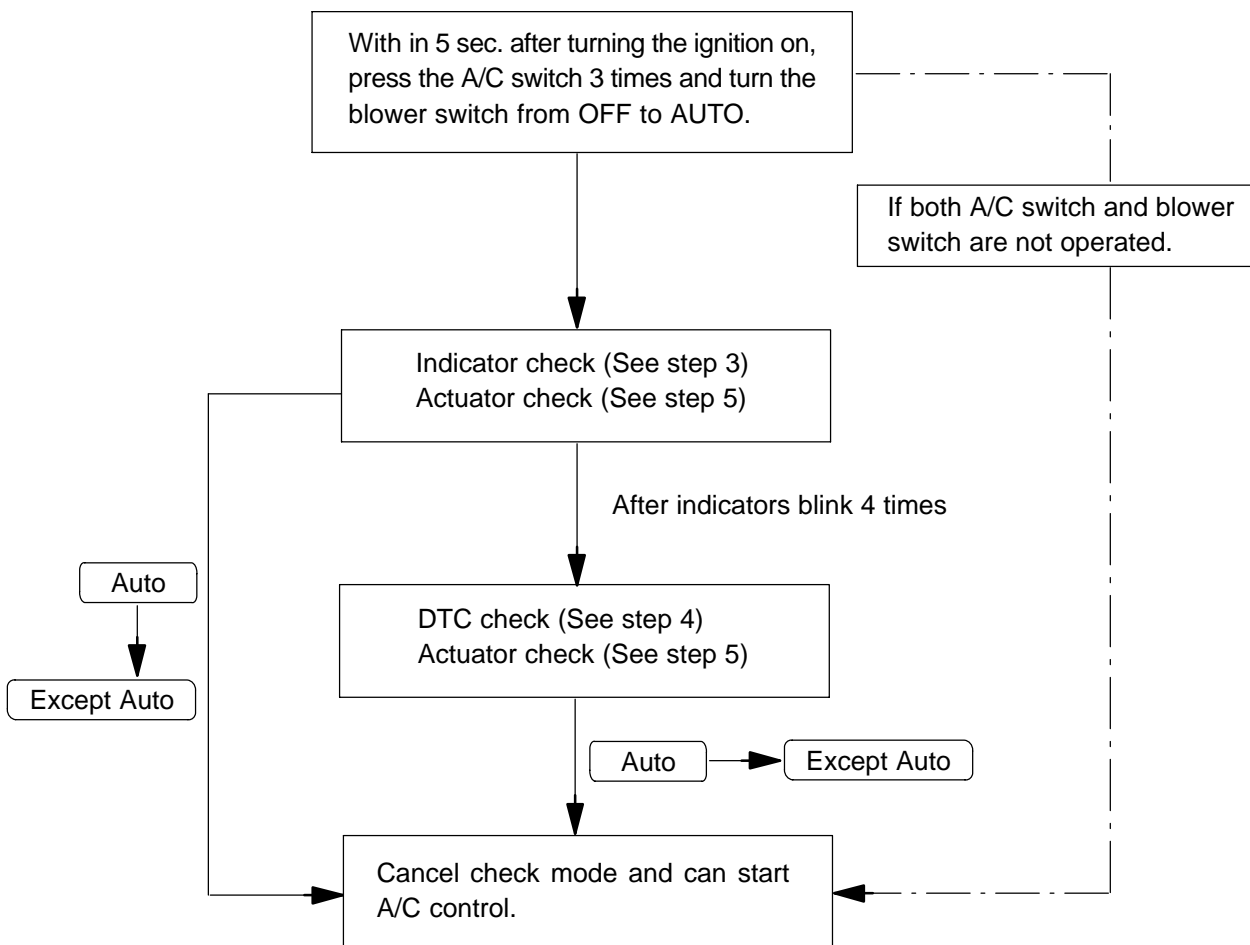


 : Indicates a blower switch operation

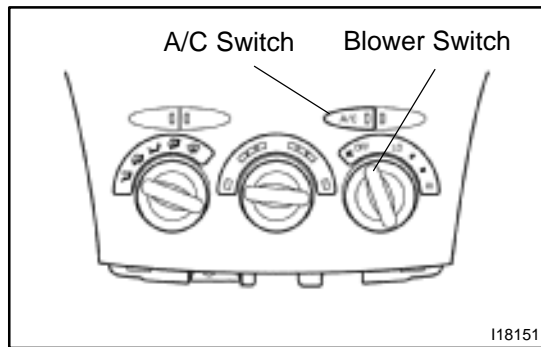

3. INDICATOR CHECK


- (a) Within 5 sec. after turning the ignition switch on, press the A/C switch 3 times and turn the blower switch from OFF to AUTO.

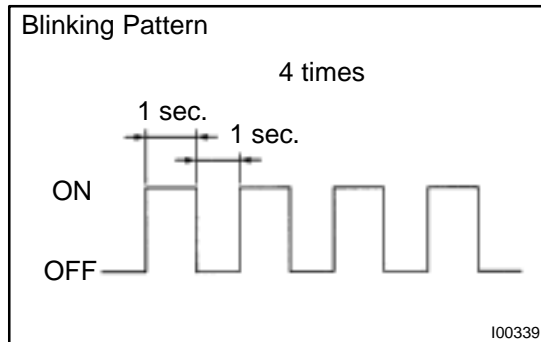

- (b) Check that all the indicators light up and go off at 1 second intervals 4 times in succession.

HINT:

- After the indicator check is ended, the system enters the DTC begins automatically.
- Operate the blower switch from AUTO to except AUTO position when desiring to cancel the check mode.

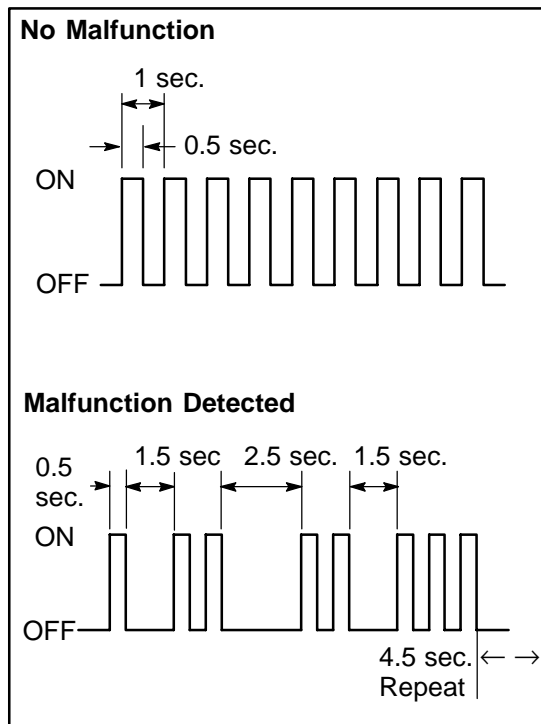


4. DTC CHECK (SENSOR CHECK)

- (a) Perform an indicator check. After the indicator check is completed, the system enters the DTC check mode automatically.
- (b) Read the DTC as indicated by the number of blinks of the A/C indicator.

HINT:

The illustration shows the blinking pattern associated with the DTC 12 and 23. If 2 or more DTCs (abnormalities) are indicated, the lowest number (code) is output first.

- (c) Identify the problem using the chart of the DTC.

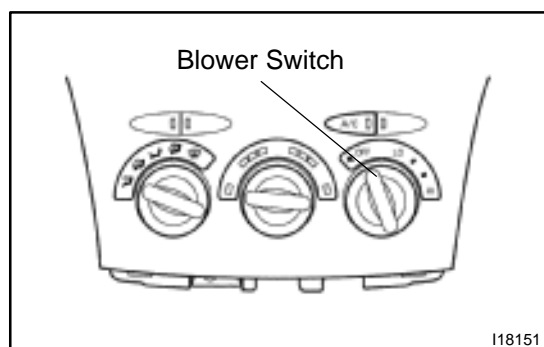

5. ACTUATOR CHECK

- Actuator check mode is started at the same time with DTC check mode.
- Check visually on by hand that the air flow, amount of damper operating and operation of the compressor changes according to the set temperature of the A/C control panel, as shown in the chart.

HINT:

To cancel the check mode, turn blower switch from AUTO to except AUTO.

Step No.	Temp. setting °C (°F)	Blower Level	Air Mix Damper	Air Inlet Damper	Air Outlet Damper	Compressor
1	Max. Cool ↔ 20.5 (66)	4	–10 % (Cool)	REC (–1 %)	FACE (–10 %)	ON
2	21.0 ↔ 23.5 (67 ↔ 72)	↑	↑	R/F (82.0 %)	B/L (15 %)	↑
3	24.0 ↔ 26.0 (73 ↔ 77)	17	50 % (Cool/Warm)	R/F (102.0 %)	FOOT (50 %)	OFF
4	26.5 ↔ 29.0 (78 ↔ 83)	↑	↑	FRS (110.0 %)	DEF (110 %)	↑
5	29.5 (84) ↔ Max. Warm	31	100 % (Warm)	FRS (110.0 %)	F/D (90 %)	↑

DIAGNOSTIC TROUBLE CODE CHART


DTC No. (See Page)	Detection Item	Trouble Area
11*1 (DI-876)	Room temp. sensor circuit	<ul style="list-style-type: none"> Room temp. sensor Harness or connector between room temp. sensor and A/C amplifier A/C amplifier
12*2 (DI-879)	Ambient temp. sensor circuit	<ul style="list-style-type: none"> Ambient temp. sensor Harness and connector between ambient temp. sensor and ECM ECM Harness and connector between ECM and A/C amplifier A/C amplifier
13 (DI-882)	Evaporator temp. sensor circuit	<ul style="list-style-type: none"> Evaporator temp. sensor Harness and connector between evaporator temp. sensor and A/C amplifier A/C amplifier
14 (DI-885)	Engine coolant temp. sensor circuit	<ul style="list-style-type: none"> Water temp. sensor Harness and connector between engine coolant temp. sensor and ECM ECM Harness and connector between ECM and A/C amplifier
21*3 (DI-888)	Solar sensor circuit	<ul style="list-style-type: none"> Solar sensor Harness or connector between room temp. sensor and A/C amplifier A/C amplifier
22*4 (DI-891)	All conditions below are detected for 3 sec. or more (g) Engine speed: 500 rpm or more (h) Ratio between engine and compressor rpm deviates 20 % or more in comparison to normal operation	<ul style="list-style-type: none"> Compressor drive belt Compressor lock sensor Compressor Harness and connector between compressor lock sensor and A/C amplifier
23 (DI-894)	Open in pressure switch circuit Abnormal refrigerant pressure [below 196 kPa (2.0 kgf/cm ² , 28 psi) over 3,140 kPa (32.0 kgf/cm ² , 455 psi)]	<ul style="list-style-type: none"> Pressure switch Harness or connector between pressure switch and A/C amplifier A/C amplifier
31 (DI-897)	Air mix damper position sensor circuit	<ul style="list-style-type: none"> Air mix control servomotor Harness or connector between air mix control servomotor and A/C amplifier A/C amplifier
32 (DI-900)	Air inlet damper position sensor circuit	<ul style="list-style-type: none"> Air inlet control servomotor Harness or connector between air inlet control servomotor and A/C amplifier A/C amplifier
33 (DI-903)	Air outlet damper position sensor circuit	<ul style="list-style-type: none"> Air outlet control servomotor Harness or connector between air outlet control servomotor and A/C amplifier A/C amplifier
41 (DI-906)	Air mix control servomotor circuit	<ul style="list-style-type: none"> Air mix control servomotor Air mix damper position sensor Harness or connector between air mix control servomotor and A/C amplifier A/C amplifier

42 (DI-909)	Air inlet control servomotor circuit	<ul style="list-style-type: none"> • Air inlet control servomotor • Air inlet damper position sensor • Harness or connector between air inlet control servomotor and A/C amplifier • A/C amplifier
43 (DI-912)	Air outlet control servomotor circuit	<ul style="list-style-type: none"> • Air outlet control servomotor • Air outlet damper position sensor • Harness or connector between air outlet control servomotor and A/C amplifier • A/C amplifier

HINT:

- *1: If the room temp. is approx. -18.6°C (-3.7°F) or lower, trouble code 11 may be output even though the system is normal.
- *2: If the ambient temp. is approx. -52.9°C (-61.4°F) or lower, a malfunction code may be output even though the system is normal.
- *3: If the check is being performed in a dark place, DTC 21 (solar sensor circuit abnormal) could be displayed.
- *4: To confirm DTC 22, perform the following steps.
 - (1) With the engine is running, enter the DTC check mode.
 - (2) Enter actuator check mode and set the operation to step NO. 1.
 - (3) Check that the DTC 22 is output.

TERMINALS OF ECU

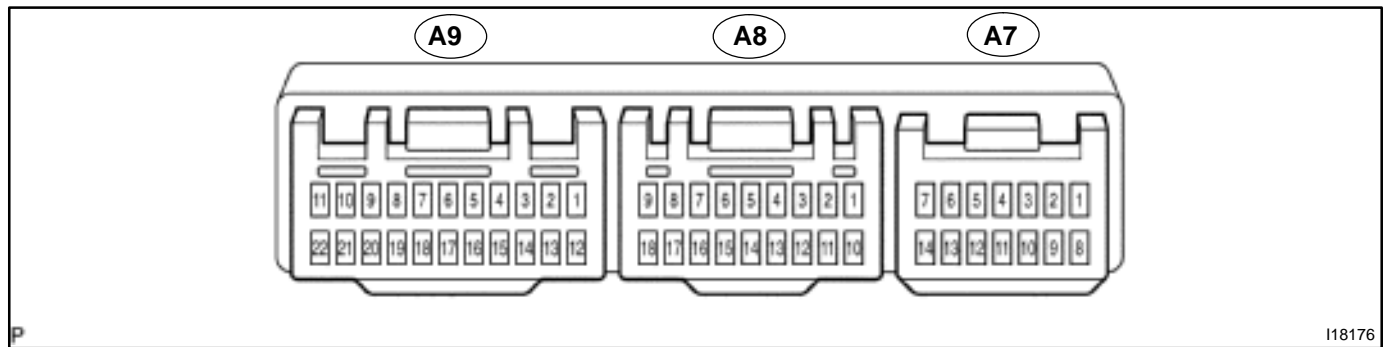

Symbols (Terminals No.)	Wiring Color	Condition	STD Voltage (V)
IG ↔ GND (A7-1 ↔ A7-7)	R ↔ W-B	IG ON.	10 – 14
BLW ↔ GND (A7-3 ↔ A7-7)	V ↔ W-B	IG ON. Blower motor: Operate	Pulse generation
MP2+ ↔ GND (A7-4 ↔ A7-7)	GR-B ↔ W-B	IG ON.	Pulse generation
GND ↔ Body ground (A7-7 ↔ Body ground)	W-B ↔ Body ground	Always	Continuity
+B ↔ GND (A7-8 ↔ A7-7)	R-G ↔ W-B	Always	10 – 14
IDH ↔ GND (A8-10 ↔ A7-7)	Y ↔ W-B	IG ON. Head lamp: ON Rear defogger: ON Set temp.: MAX. HOT	10 – 14
		IG ON. Head lamp: OFF Rear defogger: OFF	Below 1.0
MPX+ ↔ GND (A7-11 ↔ A7-7)	GR ↔ W-B	IG ON.	Pulse generation
RF ↔ GND (A8-1 ↔ A7-7)	R-W ↔ W-B	Start engine. Water temp.: Below 90 °C Refrigerant pressure: Below 1,520 kPa	10 – 14
		Start engine. Water temp.: Approx. 90 °C Refrigerant pressure: Above 1,520 kPa	Below 1.0
CF ↔ GND (A8-2 ↔ A7-7)	V-Y ↔ W-B	Start engine. A/C compressor: ON	Below 1.0
		Start engine. A/C compressor: OFF	10 – 14
WP ↔ GND (A8-3 ↔ A7-7)	L-R ↔ W-B	Engine speed: Above 500 rpm Blower motor: Operate	Below 1.0
		Engine speed: Above 500 rpm Blower motor: Not operate	10 – 14
NE ↔ GND (A8-4 ↔ A7-7)	LG ↔ W-B	Start engine	Pulse generation
ACT ↔ GND (A8-5 ↔ A7-7)	P-G ↔ W-B	Engine speed: Idle speed	10 – 14
HTR0 ↔ GND (A8-6 ↔ A7-7)	P-B ↔ W-B	Start engine Head lamp: OFF Rear defogger: OFF Set temp.: MAX. WARM Blower mode dial: HI Mode selector: F/D Water temp.: Below 55 °C	Below 0.7

DIAGNOSTICS – AIR CONDITIONING SYSTEM

LOCK ↔ SGLOCK (A8-9 ↔ A7-18)	W-L ↔ BR-W	Start engine. A/C compressor ON.	Pulse generation
MGC ↔ GND (A8-11 ↔ A7-7)	LG-R ↔ W-B	Start engine. A/C compressor: ON	Below 1.0
		Start engine. A/C compressor: OFF	10 – 14
PSW ↔ GND (A8-11 ↔ A7-7)	L-Y ↔ W-B	A/C refrigerant pressure: less than 0.19 Mpa (2.0 kgf/cm ²) or more than 3.14 Mpa (3,140 kgf/cm ²)	From 10 – 14 to Below 1.0
HTR2 ↔ GND (A8-13 ↔ A7-7)	P ↔ W-B	Start engine Head lamp: OFF Rear defogger: OFF Set temp.: MAX. WARM Blower mode dial: HI Mode selector: F/D Water temp.: 55 – 70°C	Below 0.7
SGLOCK ↔ GND (A8-18 ↔ A7-7)	BR-W ↔ W-B	Always	Continuity
TE ↔ SGTE (A9-1 ↔ A9-2)	W ↔ W	IG ON. Ambient temp. 25°C (77°F)	1.35 – 1.75
		IG ON. Ambient temp. 40°C (104°F)	0.85 – 1.25
SGTE ↔ GND (A9-2 ↔ A7-7)	W ↔ W-B	Always	Continuity
SGTR ↔ GND (A9-3 ↔ A7-7)	W ↔ W-B	Always	Continuity
TR ↔ SGTR (A9-4 ↔ A9-3)	W ↔ W	IG ON. Room temp. 25°C (77°F)	1.8 – 2.2
		IG ON. Room temp. 40°C (104°F)	1.2 – 1.6
TS ↔ S5TS (A9-5 ↔ A9-6)	W ↔ W	IG ON. Solar sensor subject to electric light	1.0 or more
		IG ON. Solar sensor cover by a cloth	Below 1.0
S5TS ↔ GND (A9-6 ↔ A7-7)	W ↔ W-B	IG ON.	4.5 – 5.5
S5TPM ↔ SGTPM (A9-7 ↔ A9-9)	W ↔ W	IG ON.	4.5 – 5.5
TPM ↔ SGTPM (A9-8 ↔ A9-9)	W ↔ W	IG ON. Mode selector: FACE	Below 1.0
		IG ON. Mode selector: DEF	4.5 – 5.5
SGTPM ↔ GND (A9-9 ↔ A7-7)	W ↔ W-B	Always	Continuity
AOF ↔ GND (A9-10 ↔ A7-7)	W ↔ W-B	IG ON. Mode selector: FACE	10 – 14
		IG ON. Mode selector: DEF	Below 1.0
AOD ↔ GND (A9-11 ↔ A7-7)	W ↔ W-B	IG ON. Mode selector: FACE	Below 1.0
		IG ON. Mode selector: DEF	10 – 14
AMH ↔ GND (A9-13 ↔ A7-7)	W ↔ W-B	IG ON. Set temp.: Max. COOL	10 – 14
		IG ON. Set temp.: Max. WARM	Below 1.0
AMC ↔ GND (A9-14 ↔ A7-7)	W ↔ W	IG ON. Set temp.: Max. COOL	Below 1.0
		IG ON. Set temp.: Max. WARM	10 – 14
SGTP ↔ GND (A9-15 ↔ A7-7)	W ↔ W-B	Always	Continuity
TP ↔ SGTP (A9-16 ↔ A9-15)	W ↔ W	IG ON. Set temp.: Max. COOL	Below 1.0
		IG ON. Set temp.: Max. WARM	4.5 – 5.5
S5TP ↔ SGTP (A9-17 ↔ A9-15)	W ↔ W	IG ON.	4.5 – 5.5
S5TPI ↔ SGTP (A9-18 ↔ A9-20)	W ↔ W	IG ON.	4.5 – 5.5

TPI ↔ SGTP1 (A9-19 ↔ A9-20)	W ↔ W	IG ON. Air intake selector: FRESH	Below 1.0
		IG ON. Air intake selector: RECIRCULATE	4.5 – 5.5
SGTP1 ↔ GND (A9-20 ↔ A7-7)	W ↔ W-B	Always	Continuity
AIR ↔ GND (A9-21 ↔ A7-7)	W ↔ W-B	IG ON. Air intake selector: FRESH	Below 1.0
		IG ON. Air intake selector: RECIRCULATE	10 – 14
AIF ↔ GND (A9-22 ↔ A7-7)	W ↔ W-B	IG ON. Air intake selector: FRESH	10 – 14
		IG ON. Air intake selector: RECIRCULATE	Below 1.0

PROBLEM SYMPTOMS TABLE

Symptom	Suspect Area	See page
Whole function of the does not operate	3. A/C amplifier 4. IG power source circuit	IN-41 DI-916
Air Flow Control: No blower operation	1. IG power source circuit 2. Heater main relay circuit 3. Blower motor circuit 4. A/C amplifier	DI-916 DI-921 DI-924 IN-41
Air Flow Control: No blower control	1. Heater main relay circuit 2. Blower motor circuit 3. A/C amplifier	DI-921 DI-924 IN-41
Air Flow Control: Insufficient air flow	1. Blower motor circuit	DI-924
Temperature Control: No cool air comes out	1. Refrigerant volume 2. Drive belt tension 3. Refrigeration system inspection with manifold gauge set 4. Compressor circuit 5. Pressure switch circuit 6. Compressor lock sensor circuit 7. Air mix damper position sensor circuit 8. Air mix damper control servomotor circuit 9. Room temperature sensor circuit 10. Ambient temperature sensor circuit 11. A/C amplifier	AC-3 AC-15 AC-3 DI-927 DI-894 DI-891 DI-897 DI-906 DI-874 DI-879 IN-41
Temperature Control: No warm air comes out	1. Air mix damper position sensor circuit 2. Air mix damper control servomotor circuit 3. DC/DC converter circuit 4. PTC heater circuit 5. Room temperature sensor circuit 6. Ambient temperature sensor circuit 7. Evaporator temperature sensor circuit 8. A/C amplifier	DI-897 DI-906 DI-934 DI-937, DI-942 DI-876 DI-882 DI-885 IN-41
Temperature Control: Output air is warmer or cooler than the set temperature or response is slow	1. Refrigerant volume 2. Drive belt tension 3. Refrigeration system inspection with manifold gauge set 4. Radiator fan and condenser fan circuit 5. Solar sensor circuit 6. Room temperature sensor circuit 7. Ambient temperature sensor circuit 8. Evaporator temperature sensor circuit 9. Air mix damper position sensor circuit 10. Air mix damper control servomotor circuit 11. Evaporator 12. Heater radiator 13. Expansion valve 14. A/C amplifier	AC-3 AC-15 AC-3 DI-947 DI-888 DI-876 DI-879 DI-885 DI-897 DI-906 AC-28 AC-28 AC-52 IN-41
Temperature Control: No temperature control (only Max. cool or Max. warm)	1. Room temperature sensor circuit 2. Ambient temperature sensor circuit 3. Air mix damper position sensor circuit 4. Air mix damper control servomotor circuit 5. A/C amplifier	DI-876 DI-882 DI-897 DI-906 IN-41
No air inlet control	1. Air inlet damper position sensor circuit 2. Air inlet damper control servomotor circuit 3. A/C amplifier	DI-900 DI-909 IN-41

Engine idle up does not occur, or is continuous	1. Compressor circuit 2. A/C amplifier	DI-927 IN-41
Blinking of A/C indicator	1. Compressor lock sensor circuit 2. A/C amplifier	DI-891 IN-41

CIRCUIT INSPECTION


DTC	11	Room Temperature Sensor Circuit
-----	----	---------------------------------

CIRCUIT DESCRIPTION

This sensor detects the temperature inside the cabin and sends the appropriate signals to the A/C amplifier.

DTC No.	Detection Item	Trouble Area
11	Open or short in room temperature sensor circuit.	<ul style="list-style-type: none">Room temperature sensor.Harness or connector between room temp. sensor and A/C amplifier.A/C amplifier.


WIRING DIAGRAM

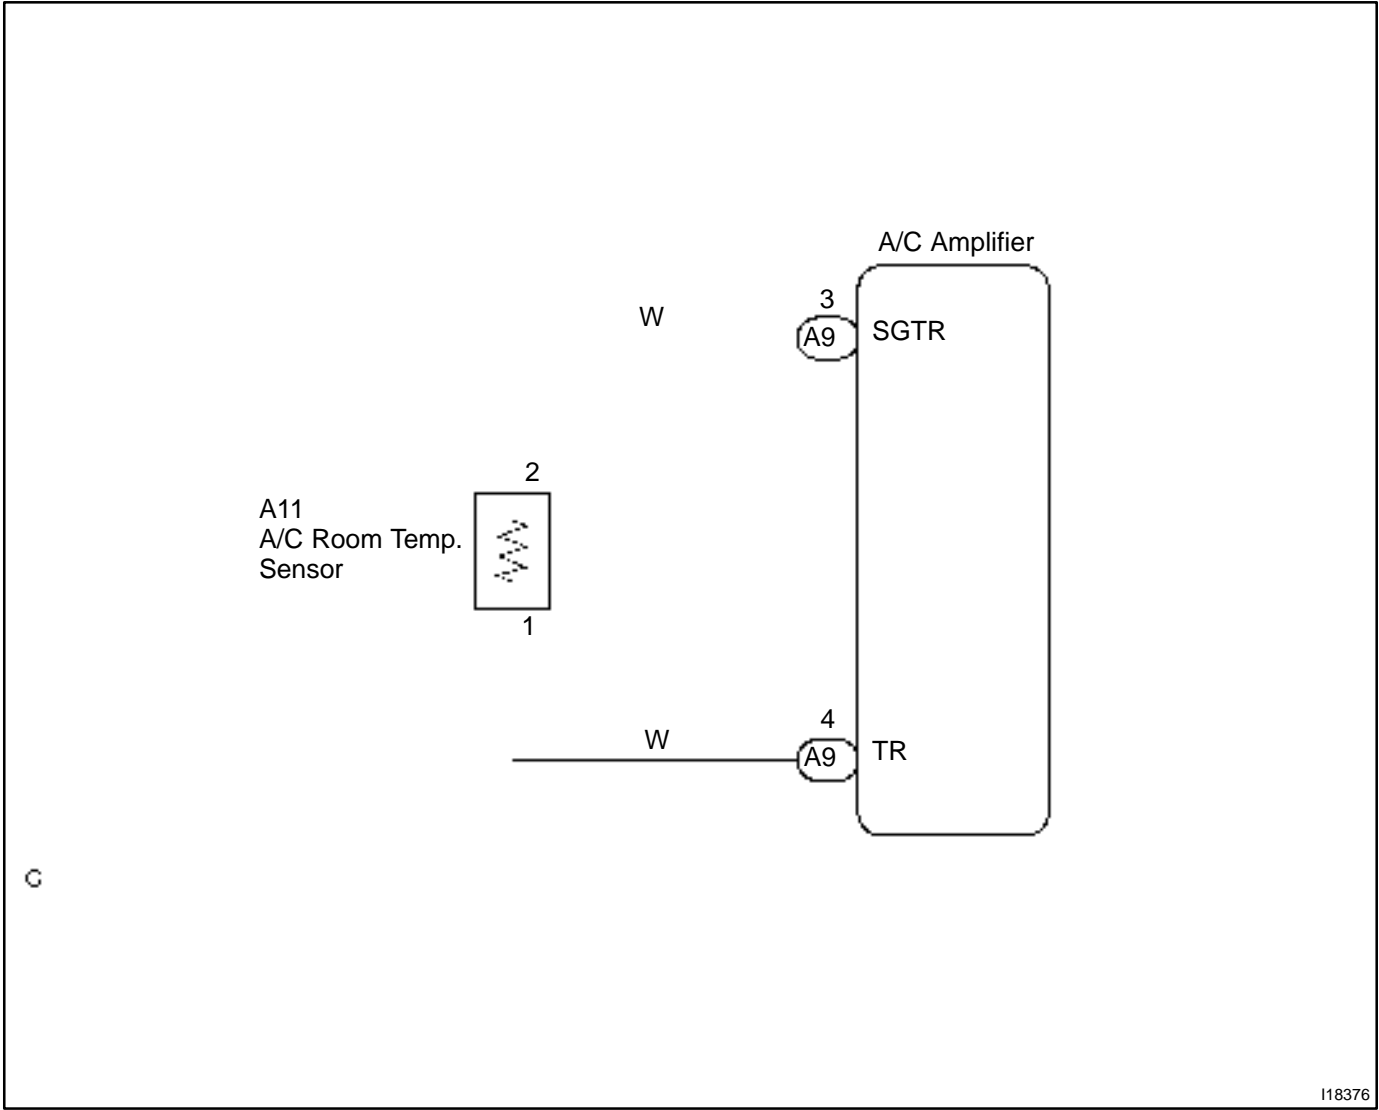

cardiagn.com

INSPECTION PROCEDURE

- | | |
|---|---|
| 1 | Check voltage between terminals TR and SGTR of A/C amplifier connector. |
|---|---|

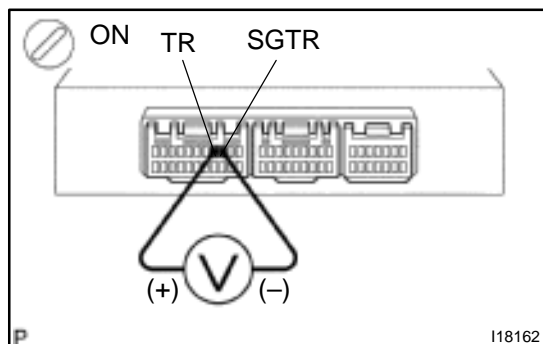**PREPARATION:**

- Remove center cluster module control with connectors still connected.
- Turn the ignition switch ON.

CHECK:

Check voltage between terminals TR and SGTR of A/C amplifier connector at each temperature.

OK:

at 25 °C (77 °F) : 1.8 – 2.2 V

at 40 °C (104 °F) : 1.2 – 1.6 V

HINT:

As the temperature increases, the voltage decreases.


NG

Go to step 2.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-874](#)). However, if DTC 11 is output, check and replace A/C amplifier.

- | | |
|---|--------------------------------|
| 2 | Check room temperature sensor. |
|---|--------------------------------|

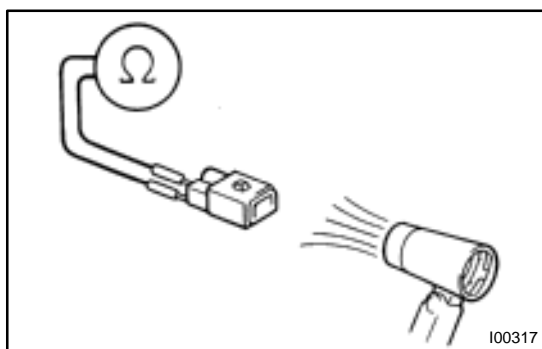**PREPARATION:**

Remove room temperature sensor (See page [AC-60](#)).

CHECK:

Check resistance between terminals 1 and 2 of room temperature sensor connector at each temperature.

OK:

at 25 °C (77 °F) : 1.6 – 1.8 kΩ

at 40 °C (104 °F) : 0.5 – 1.7 kΩ

HINT:

As the temperature increases, the resistance decreases.

NG

Replace room temperature sensor.

OK

3	Check harness and connector between A/C amplifier and room temperature sensor (See page IN-41).
---	--

NG

Repair or replace harness or connector.

OK

Check and replace A/C amplifier.


DTC	12	Ambient Temperature Sensor Circuit
-----	----	------------------------------------

CIRCUIT DESCRIPTION

This sensor detects the ambient temperature and sends the appropriate signals to the A/C amplifier.


DTC No.	Detection Item	Trouble Area
12	Open or short in ambient temperature sensor circuit	<ul style="list-style-type: none">• Ambient temperature sensor• Harness or connector between ambient temperature sensor and ECM• ECM• Harness or connector between ECM and A/C amplifier• A/C amplifier.

WIRING DIAGRAM

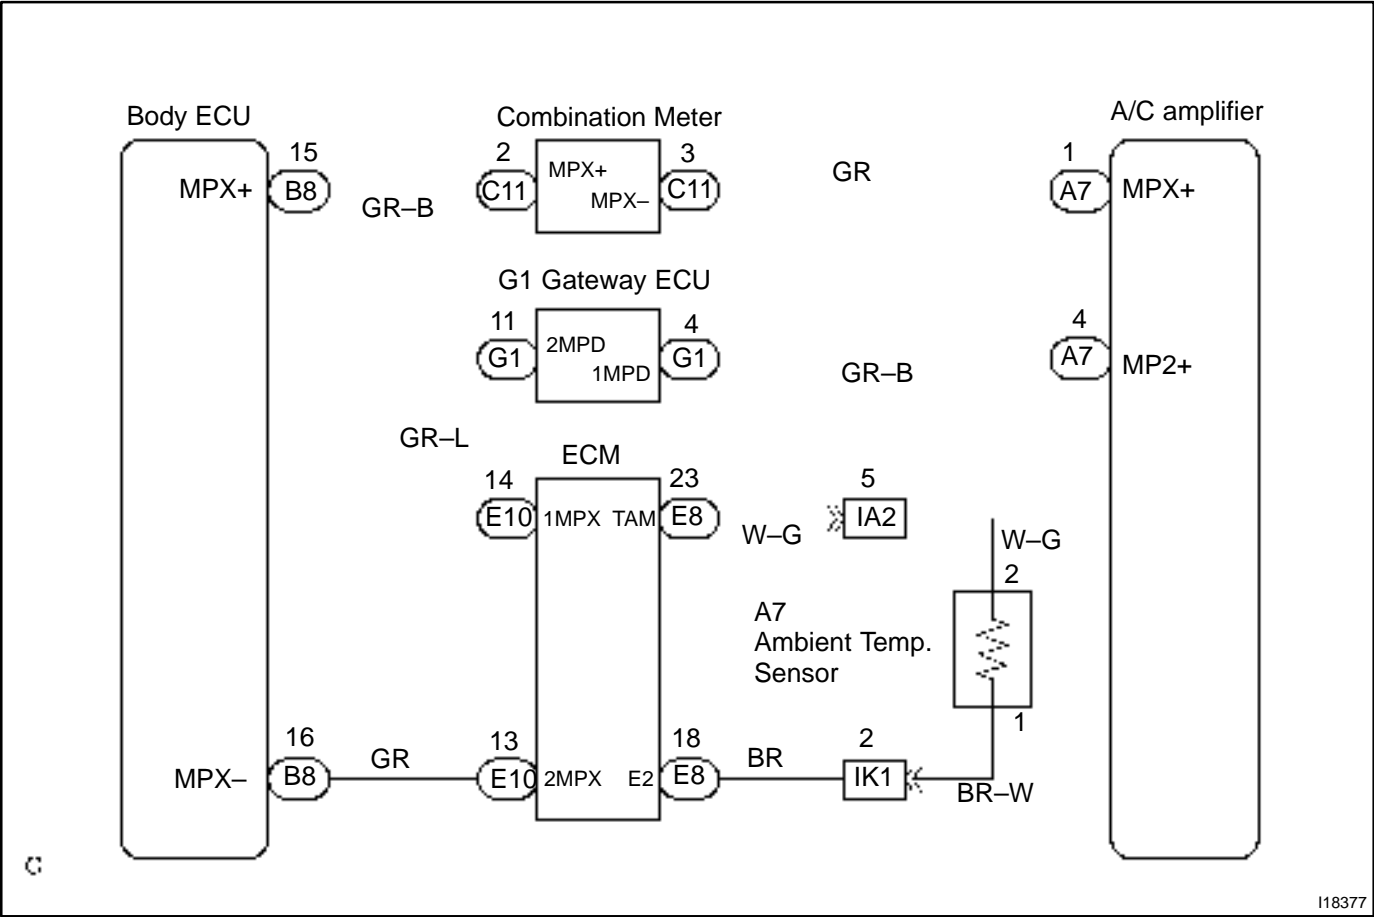

INSPECTION PROCEDURE

- | | |
|---|---|
| 1 | Check voltage between terminals TAM and E2 of ECM connector. |
|---|---|

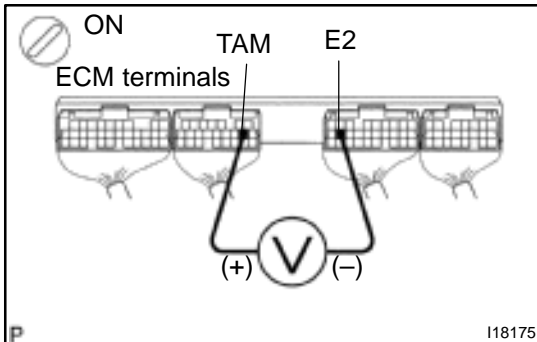**PREPARATION:**

- Remove ECM with connectors still connected.
- Turn ignition switch ON.

CHECK:

Check voltage between terminals TAM and E2 of ECM connector at each temperature .

OK:**Voltage**

at 25 °C (77 °F) : 1.35 – 1.75 V

at 40 °C (104 °F) : 0.85 – 1.25 V

HINT:


As the temperature increases, the voltage decreases.

NG

Go to step 2.

OK

Proceed to the next circuit inspection shown on problem symptoms table (See page [DI-874](#)). However, if DTC 12 is displayed, check and replace A/C amplifier.

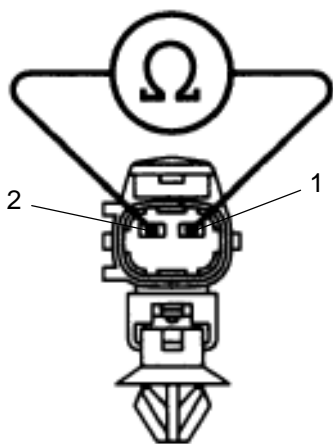2 Check ambient temperature sensor.**PREPARATION:**

Disconnect ambient temperature sensor connector.

CHECK:

Check resistance between terminals 1 and 2 of ambient temperature sensor connector at each temperature.

OK:**Resistance**

at 25 °C (77 °F) : 1.6 – 1.8 kΩ

at 40 °C (104 °F) : 0.5 – 0.7 kΩ

HINT:

As the temperature increases, the resistance decreases.

NG**Replace ambient temperature sensor.****OK****Check multiplex communication system (See page [DI-750](#)).**


DTC	13	Evaporator Temperature Sensor Circuit
-----	----	---------------------------------------

CIRCUIT DESCRIPTION


This sensor detects the temperature inside the cooling unit and sends the appropriate signals to the A/C amplifier.

DTC No.	Detection Item	Trouble Area
13	Open or short in evaporator temperature sensor circuit.	<ul style="list-style-type: none">• Evaporator temperature sensor.• Harness or connector between evaporator temperature sensor and A/C amplifier.• A/C amplifier.

WIRING DIAGRAM

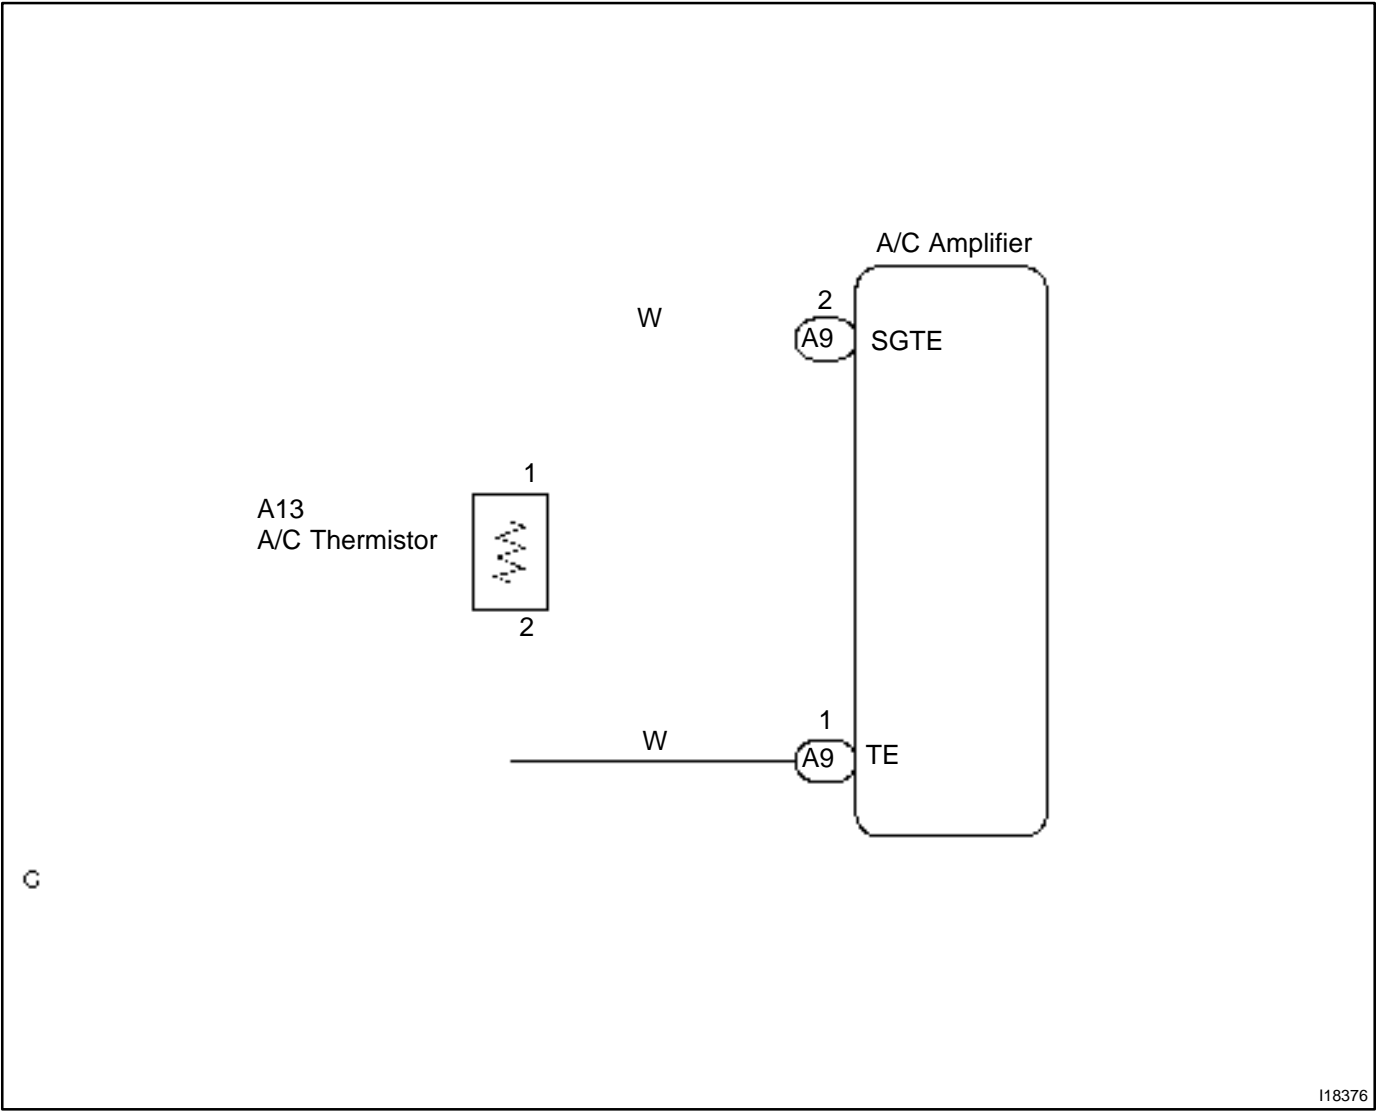

1 Check voltage between terminals TE and SGTE of A/C amplifier connector.

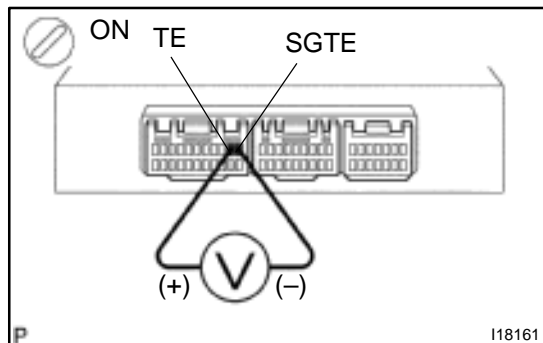

PREPARATION:

- Remove center cluster module control with connectors still connected.
- Turn ignition switch ON.

CHECK:

Measure voltage between terminals TE and SGTE of A/C amplifier connector at each temperature.

OK:

Voltage

at 0 °C (32 °F) : 2.0 – 2.4 V

at 15 °C (59 °F) : 1.4 – 1.8 V

HINT:

As the temperature increases, the voltage decreases.


NG

Go to step 2.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-874](#)). However, if DTC 13 is displayed, check and replace A/C amplifier.

2 Check evaporator temperature sensor.

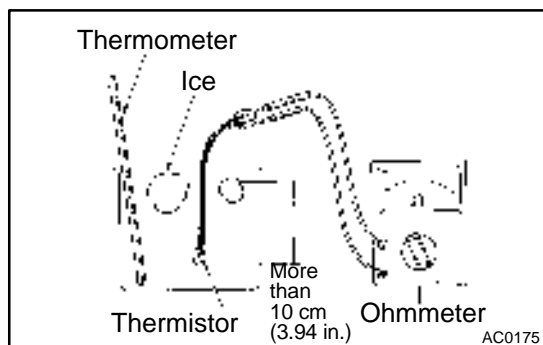

PREPARATION:

Remove evaporator temperature sensor (See page [AC-27](#)).

CHECK:

Check resistance between terminals 1 and 2 of evaporator temperature sensor connector at each temperature.

OK:

Resistance

at 0 °C (32 °F) : 4.6. – 5.1 kΩ

at 15 °C (59 °F) : 2.1 – 2.6 kΩ

HINT:

As the temperature increases, the voltage decreases.

NG

Replace evaporator temperature sensor.

OK

3	Check harness and connector between A/C amplifier and evaporator temperature sensor (See page IN-41).
---	--

NG

Repair or replace harness or connector.

OK

Check and replace A/C amplifier.


DTC	14	Engine Coolant Temperature Sensor Circuit
-----	----	---

CIRCUIT DESCRIPTION

This sensor detects the engine coolant temperature and sends the appropriate signals to the A/C amplifier. These signals are used for warm up control when the engine is cold.

DTC No.	Detection Item	Trouble Area
14	Open or short in water temperature sensor circuit.	<ul style="list-style-type: none">• Water temperature sensor• Harness or connector between engine coolant temp. sensor and ECM• Harness or connector between ECM and A/C amplifier• A/C amplifier

WIRING DIAGRAM

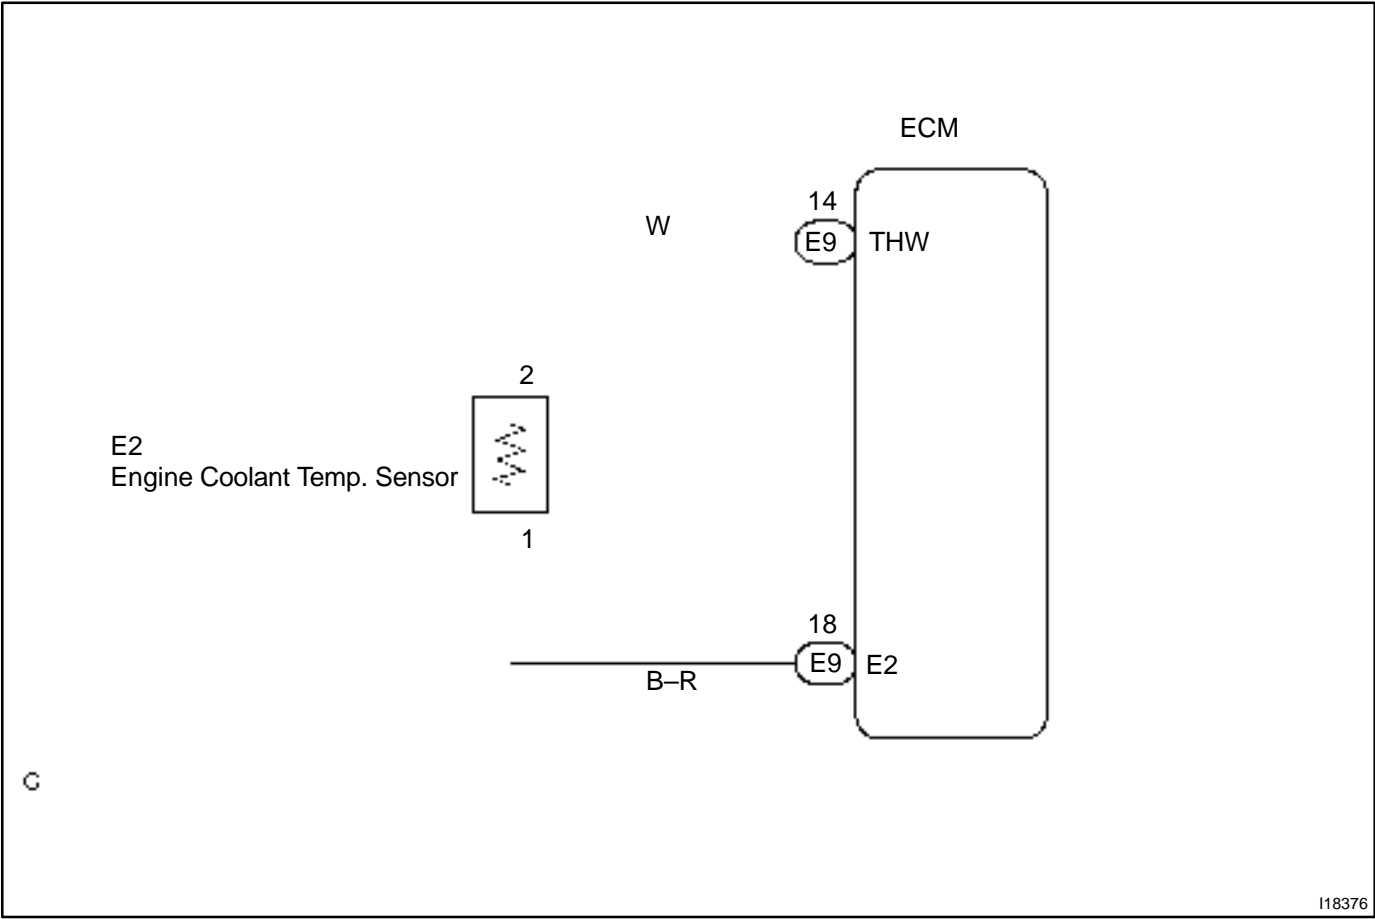

cardiagn.com

INSPECTION PROCEDURE

- 1** Check engine coolant temp. sensor using hand-held tester.

PREPARATION:

Connect the hand-held tester to the DLC3.

CHECK:


Check the engine coolant temp. sensor using DATA LIST.

OK

Check or replace A/C amplifier.

NG

- 2** Check engine coolant temp. sensor.

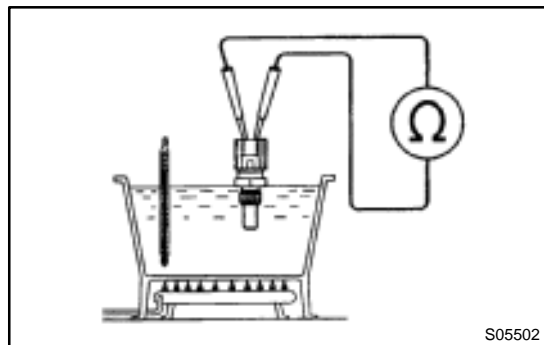

PREPARATION:

Remove engine coolant temp. sensor.

CHECK:

Measure resistance between terminals.

OK:

Resistance is within acceptable zone on chart.

Water temperature	Resistance
20°C (68°F)	2 – 3 kΩ
80°C (176°F)	0.2 – 0.4 kΩ

NG

Replace engine coolant temp. sensor.

OK

3

Check for open and short in harness and connector between ECM and engine coolant temp. sensor (See page [IN-41](#)).

NG


Repair or replace harness or connector.

OK

Check multiplex communication system (See page [DI-750](#)).

DTC	21	Solar Sensor Circuit
-----	----	----------------------


CIRCUIT DESCRIPTION

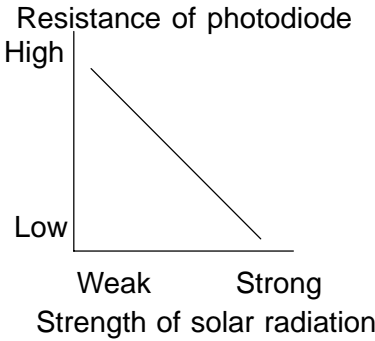

A photo diode in the solar sensor detects solar radiation and sends signals to the A/C amplifier.


DTC No.	Detection Item	Trouble Area
21	Open or short in solar sensor circuit. (Please note that display of DTC 21 is not abnormal when the sensor is not receiving solar radiation.)	<ul style="list-style-type: none">• Solar sensor• Harness or connector between solar sensor and A/C amplifier.• A/C amplifier.

WIRING DIAGRAM

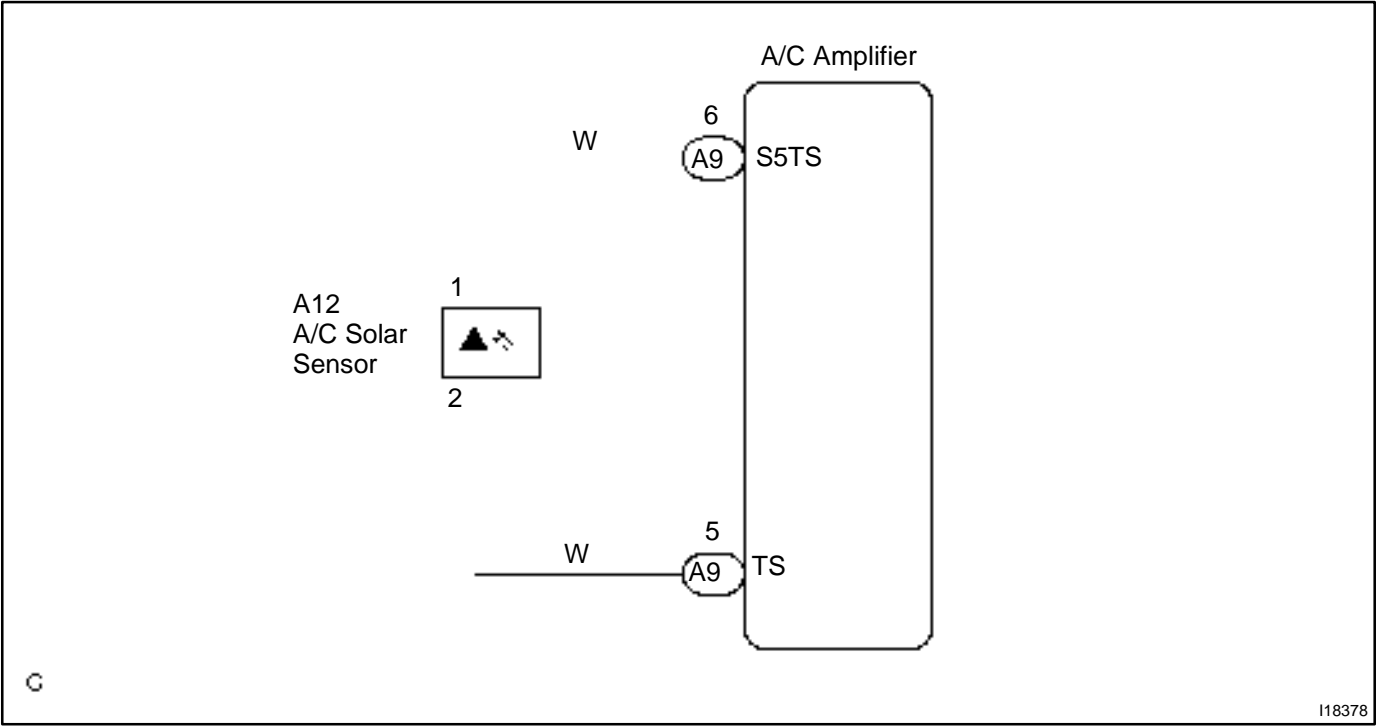

INSPECTION PROCEDURE

- | | |
|---|--|
| 1 | Check voltage between terminals S5TS and TS of A/C amplifier connector. |
|---|--|

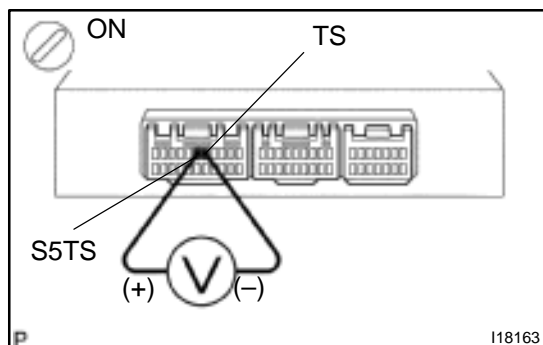**PREPARATION:**

- (a) Remove center cluster module control with connectors still connected.
- (b) Turn ignition switch ON.

CHECK:

Measure voltage between terminals S5TS and TS of A/C amplifier connector when the solar sensor is subjected to an electric light, and when the sensor is covered by a cloth.

OK:

Condition	Voltage
Sensor subjected to electric light	Below 4.0 V
Sensor covered by a cloth	4.0 – 4.5 V


HINT:

As the inspection light is gradually moved away from the sensor, the voltage increases.

NG**Go to step 2.****NG**

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-874](#)). However, if DTC 21 is displayed, check and replace A/C amplifier.

2

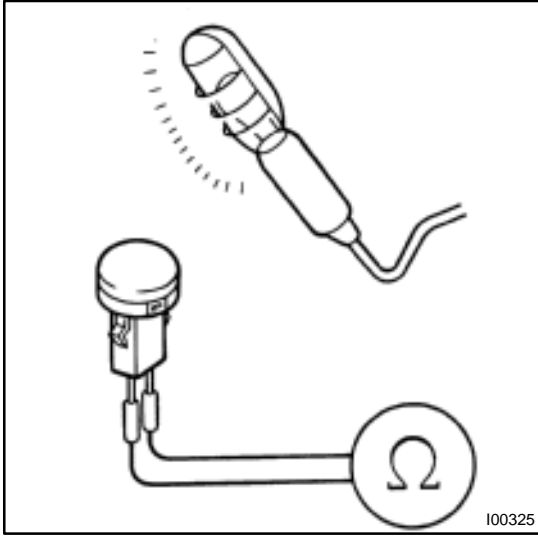Check solar sensor.**PREPARATION:**

Remove solar sensor (See page [AC-59](#)).

CHECK:

- (a) Cover the sensor by a cloth.
- (b) Measure resistance between terminals 1 and 2 of solar sensor connector.

HINT:

Connect positive (+) lead of ohmmeter to terminal 2 and negative (–) lead to terminal 1 of the solar sensor.

OK:

Resistance : $\infty \Omega$ (No continuity)

PREPARATION:

Remove the cloth from the solar sensor and subject the sensor to electric light.

CHECK:

Measure resistance.

OK:

Resistance : Below 10 k Ω (Continuity)

HINT:

As the electric light is moved gradually away from the sensor, the resistance increases.

NG**Replace solar sensor.****OK**

3

Check harness and connector between A/C amplifier and solar sensor (See page [IN-41](#)).**NG****Repair or replace harness or connector.****OK****Check and replace A/C amplifier.**


DTC	22	Compressor Lock Sensor Circuit
------------	-----------	---------------------------------------

CIRCUIT DESCRIPTION

This sensor sends 1 pulse per engine revolution to the A/C amplifier. If the number ratio of the compressor speed divided by the engine speed is smaller than a predetermined value, the A/C amplifier turns the compressor off. And, the indicator flashes at about 1 sec. intervals.

DTC No.	Detection Item	Trouble Area
22	All conditions below are detected for 3 secs. or more. (a) Engine speed : 450 rpm or more. (b) Ratio between engine and compressor speed deviates 20 % or more in comparison to normal operation.	<ul style="list-style-type: none"> • Compressor • Compressor drive belt • Compressor lock sensor • Harness or connector between compressor and A/C amplifier • A/C amplifier

WIRING DIAGRAM

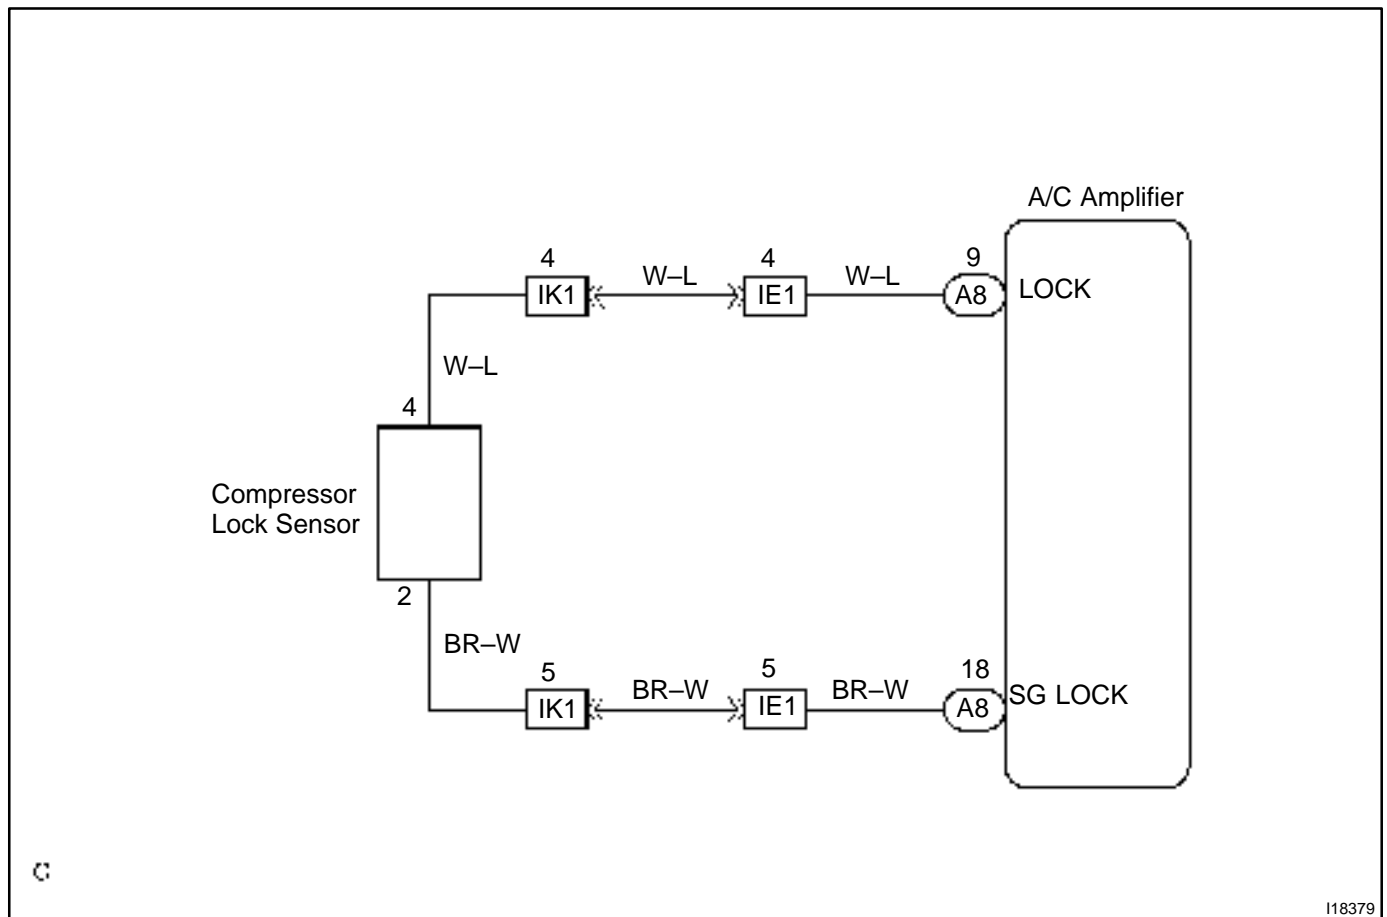

INSPECTION PROCEDURE

1 Check compressor.

PREPARATION:


- (a) Check compressor drive belt tension (See page AC-15).
- (b) Check if the compressor does not lock during operation with engine started and blower switch and A/C switch ON.

NG

Adjust drive belt tension or repair compressor.

OK

2 Check compressor lock sensor.

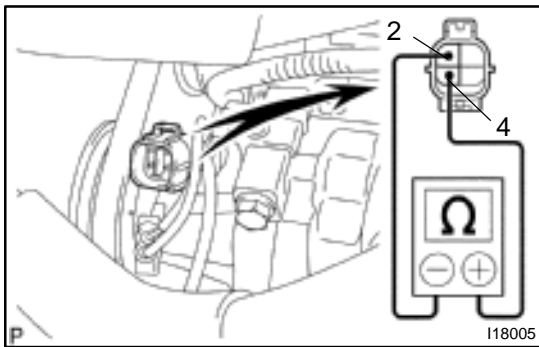

PREPARATION:

Disconnect compressor lock sensor connector.


CHECK:

Measure resistance between terminals 2 and 4 of compressor lock sensor connector.

OK:

Resistance : at 20 °C (68 °F) : 65 – 125 Ω

Reference : Inspection using oscilloscope

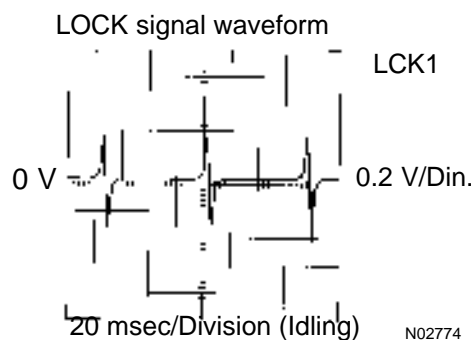

During cranking or idling, measure voltage between terminals LOCK and SGLOCK of A/C amplifier.

HINT:

The correct waveform appears as shown in the illustration on the left.

NG

Replace compressor.

OK

3	Check harness and connector between A/C amplifier and compressor lock sensor (See page IN-41).
---	---

NG

Repair or replace harness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-874](#)). However, if DTC 22 is displayed, check and replace A/C amplifier.


DTC	23	Pressure Switch Circuit
------------	-----------	--------------------------------

CIRCUIT DESCRIPTION

This pressure switch sends the appropriate signals to the A/C amplifier when the A/C refrigerant pressure drops too low or rises too high. When the A/C amplifier receives these signals, it outputs signals via the A/C amplifier to switch off the compressor relay and turns the magnetic clutch off.

DTC No.	Detection Item	Trouble Area
23	<ul style="list-style-type: none"> Open in pressure sensor circuit. Abnormal refrigerant pressure. below 196 kPa (2.0 kgf/cm². 28 psi) over 3,140 kPa (32.0 kgf/cm². 455 psi) 	<ul style="list-style-type: none"> Pressure switch Harness or connector between pressure switch and A/C amplifier Refrigerant pipe line A/C amplifier


WIRING DIAGRAM

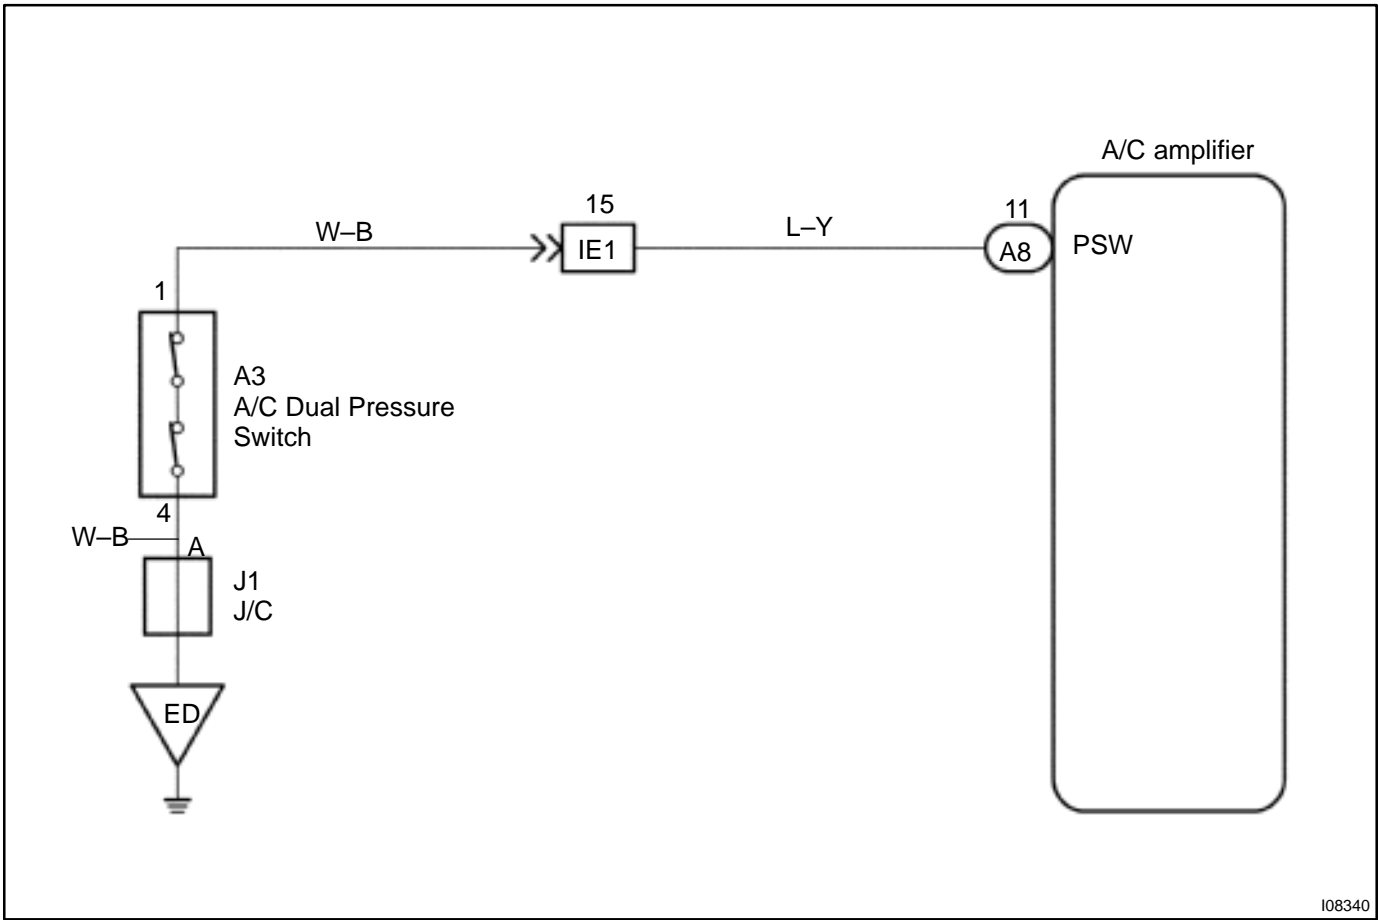

cardiagn.com

INSPECTION PROCEDURE

1	Check voltage between terminals PSW of A/C amplifier and body ground.
---	---

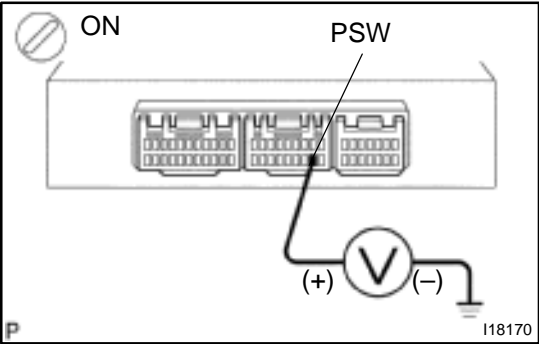

PREPARATION:

- (a) Install the manifold gauge set (See page AC-18).
- (b) Remove the center cluster module control with connectors still connected.
- (c) Turn ignition switch ON.

CHECK:

Check voltage between terminals PSW of A/C amplifier connector and body ground when refrigerant pressure is changed.

OK:

The voltage changes refrigerant pressure, as shown in the chart below.

Low Pressure Cut Side	Referaence : High Pressure Cut Side
ON (0 V) 196 kPa OFF (12V) 225 kPa	ON (0 V) 2,550 kPa 3,140 kPa OFF (12V)

OK


Proceed to next circuit inspection shown on problem symptoms table (See page DI-874).

NG

cardiagn.com

2

Check pressure switch.

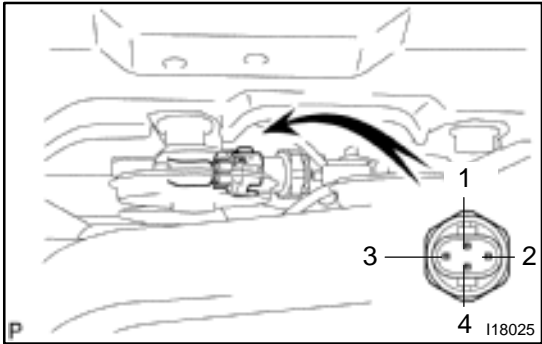

PREPARATION:

Disconnect pressure switch connector.

CHECK:

Check continuity between terminals 1 and 4 of pressure switch when refrigerant is changed.

OK:

The continuity changes with refrigerant pressure as shown in the chart below.

Low Pressure Cut Side	Reference : High Pressure Cut Side
ON (Continuity) 196 kPa OFF (No continuity) 225 kPa	ON (Continuity) 2,550 kPa OFF (No continuity) 3,140 kPa

NG

Replace pressure switch.

OK

3

Check harness and connector between A/C amplifier and pressure switch, pressure switch and body ground (See page [IN-41](#)).

NG


Repair or replace harness or connector.

OK

Check and replace A/C amplifier.

DTC	31, 41	Air Mix Damper Position Sensor Circuit
-----	--------	--


CIRCUIT DESCRIPTION

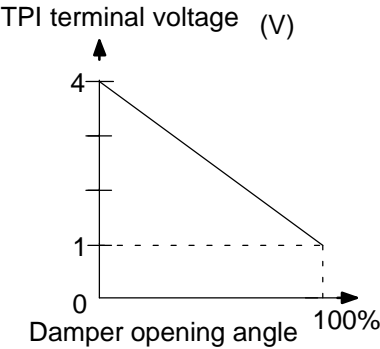

This sensor detects the position of the air mix damper and sends the appropriate signals to the A/C amplifier. The position sensor is built into the air mix control servomotor.


DTC No.	Detection Item	Trouble Area
31	Short to ground or power source circuit in air mix damper position sensor circuit.	<ul style="list-style-type: none">• Air mix damper position sensor.• Harness of connector between air mix control servomotor and A/C amplifier.• A/C amplifier.
41	Air mix damper position sensor value does not change even if A/C amplifier operates air mix control servomotor.	

WIRING DIAGRAM

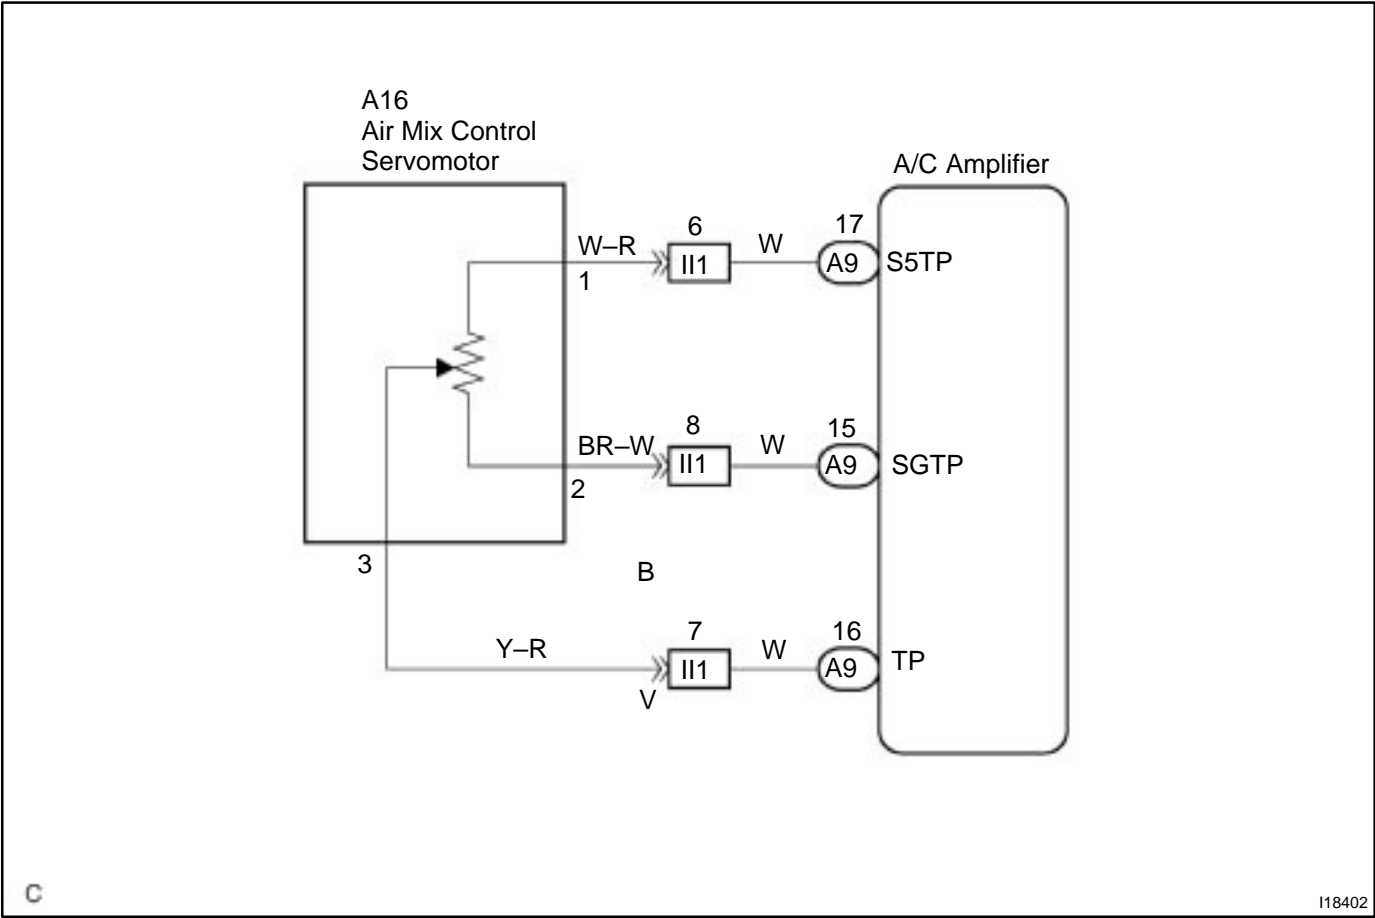

INSPECTION PROCEDURE

1	Check voltage between terminals TP and SGTP of A/C amplifier connector.
---	---

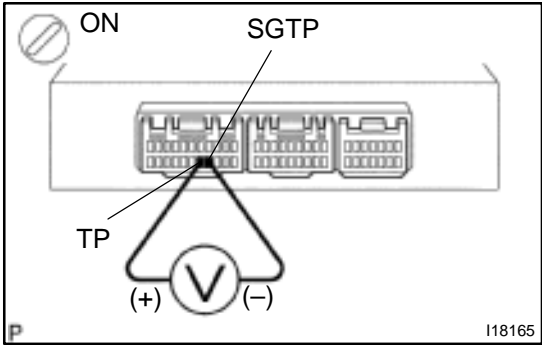

PREPARATION:

- Remove center cluster module control with connectors still connected.
- Turn ignition switch ON.

CHECK:

Change the set temperature to activate the air mix damper, and measure the voltage between terminals TP and SGTP of A/C amplifier connector each time when the set temperature is changed.

OK:

Set Temperature	Voltage
Max. COOL	3.5 – 4.5 V
Max. WARM	0.5 – 1.8 V

HINT:


As the set temperature increases, the voltage decreases gradually without interruption.

NG	Go to step 2.
----	---------------

OK

<p>Proceed to next circuit inspection shown on problem symptoms table (See page DI-874). However, if DTC 31 or 41 is displayed, check and replace A/C amplifier.</p>
--

2 Check air mix damper position sensor.

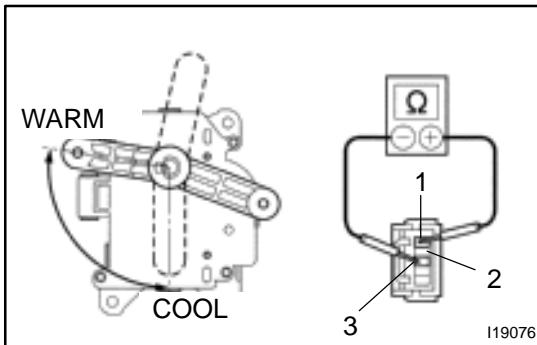**PREPARATION:**

Remove air mix control servomotor (See page [AC-56](#)).

CHECK:

Measure resistance between terminals 1 and 2 of air mix control servomotor connector.

OK:

Resistance : 4.2 – 7.8 kΩ

CHECK:

While operating air mix control servomotor as shown in the procedure on page [DI-906](#), measure resistance between terminals 2 and 3 of air mix control servomotor connector.

OK:

Position	Resistance
Max. COOL	3.6 – 6.7 kΩ
Max. WARM	0.6 – 1.1 kΩ

HINT:

As the air mix control servomotor moves from cool side to hot side, the resistance decreases gradually without interruption.

NG

Replace air mix control servomotor.

OK

3 Check harness and connector between A/C amplifier and air mix control servomotor (See page [IN-41](#)).

NG


Repair or replace harness or connector.

OK

Check and replace A/C amplifier.

DTC	32, 42	Air Inlet Damper Position Sensor Circuit
------------	---------------	---


CIRCUIT DESCRIPTION

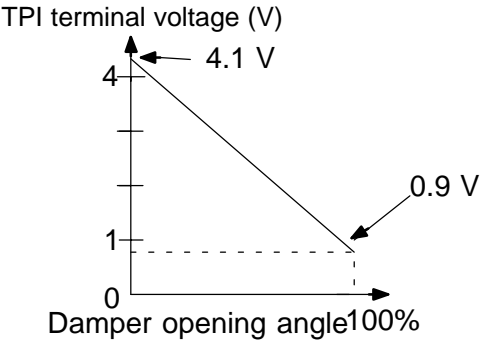

This sensor detects the position of the air inlet damper and sends the appropriate signals to the A/C amplifier. The position sensor is built into the air inlet control servomotor.


DTC No.	Detection Item	Trouble Area
32	Short to ground or power source circuit in air inlet damper position sensor circuit.	<ul style="list-style-type: none"> Air inlet damper position sensor Harness or connector between air inlet control servomotor and A/C amplifier
42	Air inlet damper position sensor value does not change even if A/C amplifier operates air inlet control servomotor.	<ul style="list-style-type: none"> A/C amplifier

WIRING DIAGRAM

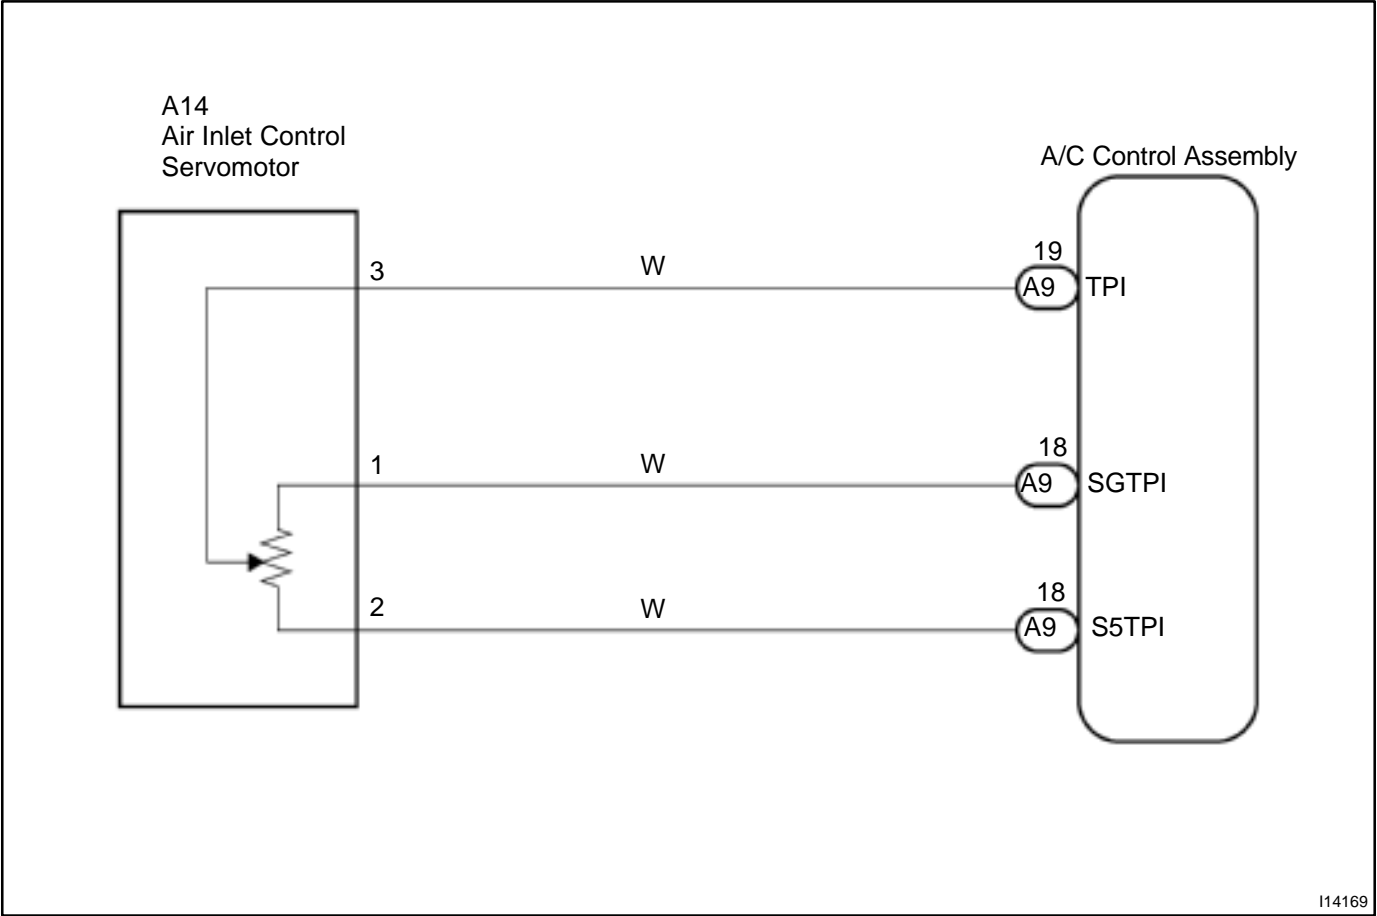

INSPECTION PROCEDURE

- 1 Check voltage between terminals TPI and SGTPI of A/C amplifier connector.**

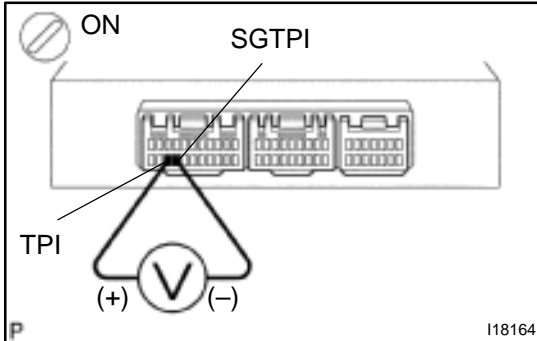**PREPARATION:**

- Remove center cluster module control with connectors still connected.
- Turn ignition switch ON.

CHECK:

Press REC/FRS switch to change air inlet between fresh and recirculation air and measure voltage between terminals TPI and SGTPI of A/C amplifier when the air inlet servomotor operates.

OK:

REC/FRS Switch	Voltage
REC	3.5 – 4.5 V
FRS	0.5 – 1.8 V


HINT:

As the air inlet control servomotor is moved from REC side to FRS side, the voltage decreases gradually without interruption.

NG**Go to step 2.****OK**

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-874](#)). However, if DTC 32 or 42 is displayed, check and replace A/C amplifier.

2 Check air inlet damper position sensor.

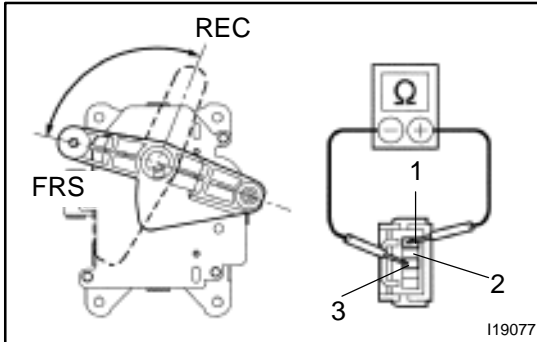

PREPARATION:

Remove air inlet control servomotor (See page [AC-33](#)).

CHECK:

Measure resistance between terminals 1 and 2 of air inlet control servomotor connector.

OK:

Resistance : 4.2 – 7.8 kΩ

CHECK:

While operating air inlet control servomotor as in the procedure on page [DI-909](#), measure resistance between terminals 2 and 3 of air inlet control servomotor connector.

OK:

Resistance :

Damper Position	Resistance
REC side	3.4 – 6.2 kΩ
FRS side	0.8 – 1.6 kΩ

HINT:

As the air inlet control servomotor is moved from REC side to FRS side, the resistance decreases gradually without interruption.

NG

Replace air inlet control servomotor.

OK

3 Check harness and connector between A/C amplifier and air inlet control servomotor (See page [IN-41](#)).

NG


Repair or replace harness or connector.

OK

Check and replace A/C amplifier.

DTC	33, 43	Air Outlet Damper Position Sensor Circuit
-----	--------	---


CIRCUIT DESCRIPTION

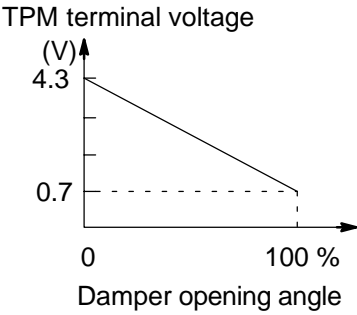


This sensor detects the position of the air outlet damper and sends the appropriate signals to the A/C amplifier. The position sensor is built into the air outlet damper control servomotor assembly.

DTC No.	Detection Item	Trouble Area
33	Short to ground or power source circuit in air outlet damper position sensor circuit.	<ul style="list-style-type: none">• Air outlet damper position sensor.• Harness or connector between air outlet damper control servomotor assembly and A/C amplifier.• A/C amplifier.
43	Air outlet damper position sensor value does not change even if A/C amplifier operates air outlet damper control servomotor.	

WIRING DIAGRAM

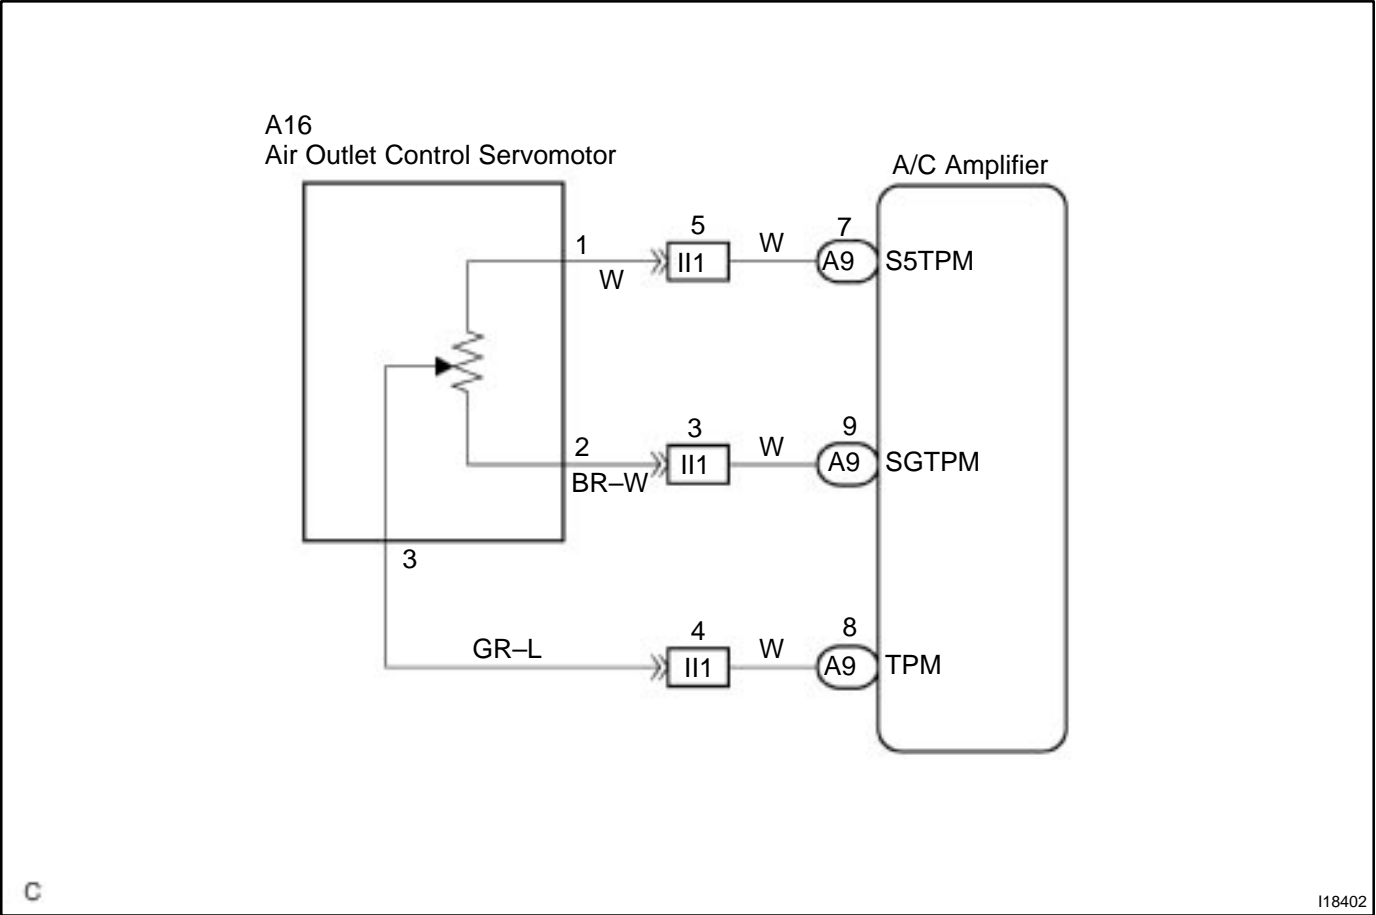

1

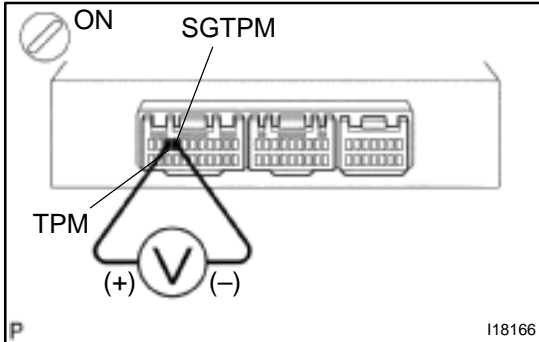Check voltage between terminals TPM and SGTPM of A/C amplifier connector.**PREPARATION:**

- (a) Remove center cluster module control with connectors still connected.
- (b) Turn ignition switch ON.

CHECK:

Measure the voltage between terminals TPM and SGTPM of A/C amplifier.

OK:

Air inlet selector	Voltage
FACE	3.5 – 4.5 V
DEF	0.5 – 1.5 V


HINT:

As the air outlet damper control servomotor is moved from FACE side to DEF side, the voltage decreases gradually without interruption.

NG**Go to step 2.****OK**

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-874](#)). However, if DTC 34 or 44 is displayed, check and replace A/C amplifier.

2 Check air outlet damper position sensor.

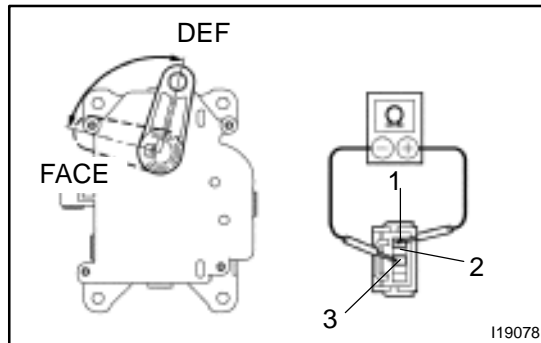

PREPARATION:

Remove air outlet servomotor (See page [AC-57](#)).

CHECK:

Measure resistance between terminals 1 and 2 of air outlet servomotor assembly connector.

OK:

Resistance : 4.2 – 7.8 kΩ

CHECK:

While operating air outlet damper control servomotor as in the procedure on page [DI-912](#), measure resistance between terminals 2 and 3 of air outlet damper control servomotor.

OK:

Resistance:

Damper Position	Resistance
DEF	3.6 – 6.7 kΩ
FACE	0.6 – 1.1 kΩ

HINT:

As the air outlet servomotor moves from DEF side to FACE side, the resistance decreases gradually without interruption.

NG

Replace air outlet control servomotor assembly.

OK

3 Check harness and connector between A/C amplifier and air outlet control servomotor assembly (See page [IN-41](#)).

NG

Repair or replace harness or connector.

OK

Check and replace A/C amplifier.


DTC	41	Air Mix Control Servomotor Circuit
------------	-----------	---

CIRCUIT DESCRIPTION

This air mix control servomotor is controlled by the A/C amplifier and moves the air mix damper to the desired position.

DTC No.	Detection Item	Trouble Area
41	Air mix damper position sensor value does not change even if A/C amplifier operates air mix control servomotor.	<ul style="list-style-type: none"> • Air mix control servomotor. • Air mix damper position sensor. • Harness or connector between A/C amplifier and air mix control servomotor, air mix damper position sensor. • A/C amplifier.

WIRING DIAGRAM

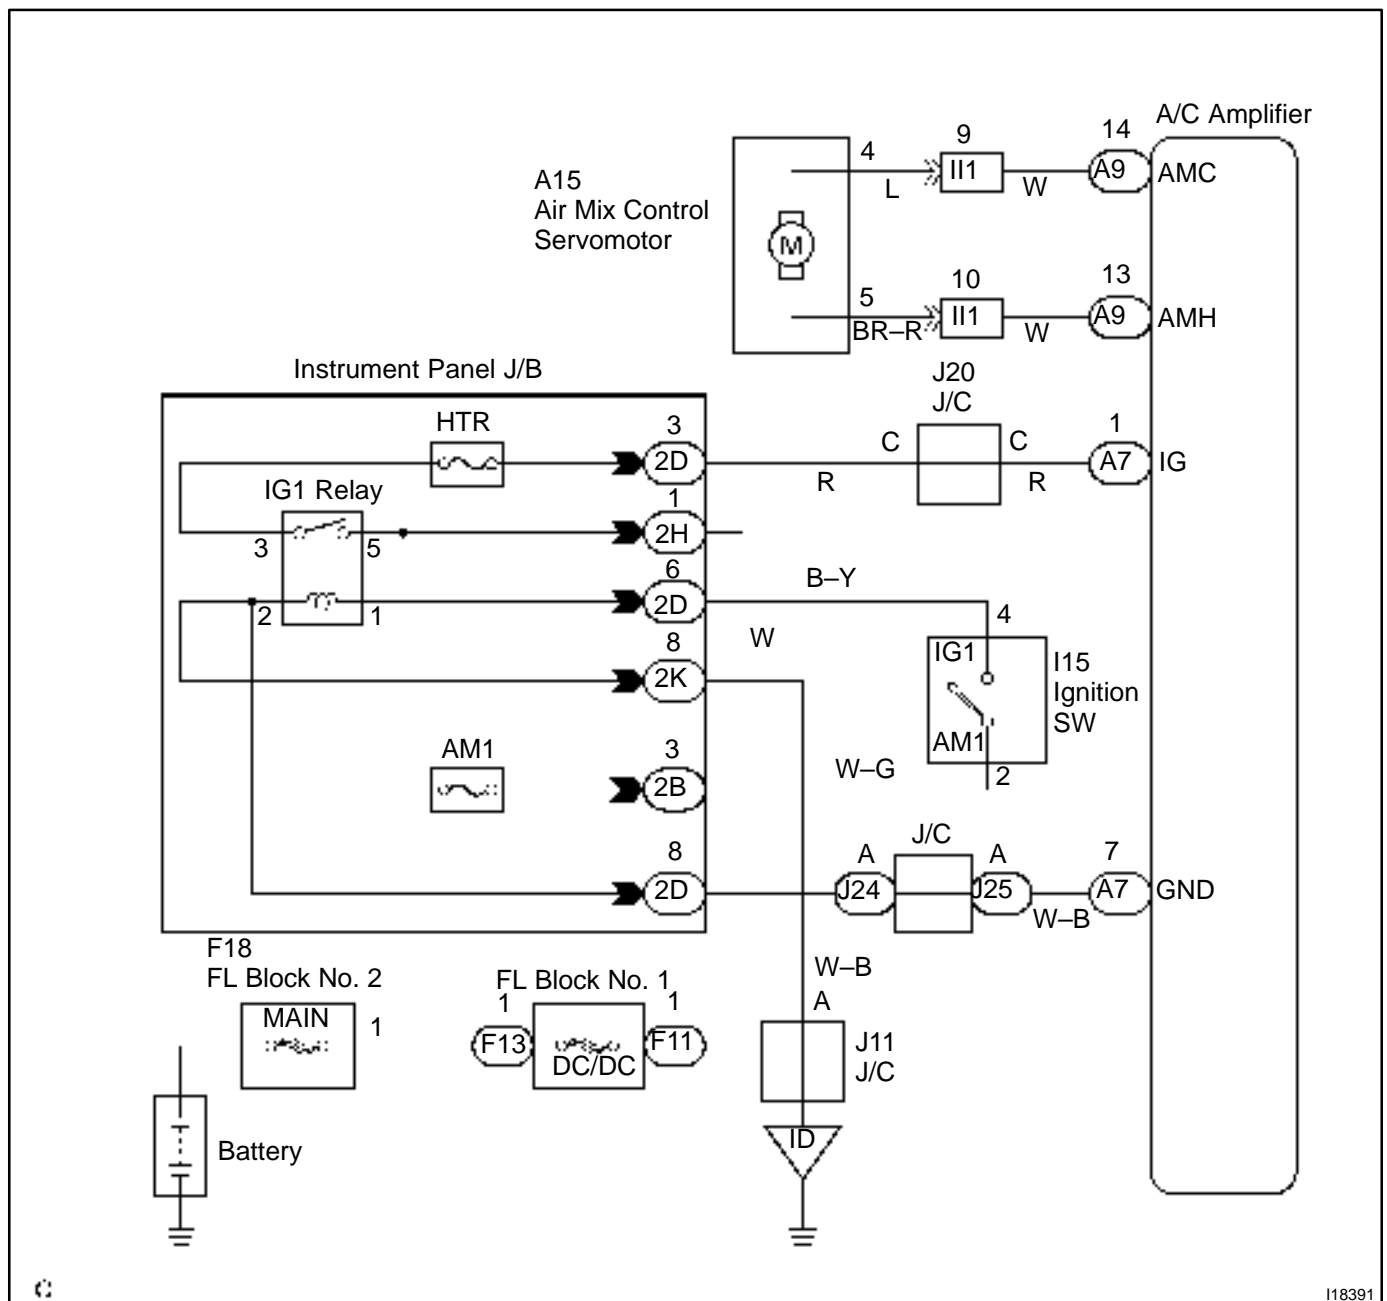

INSPECTION PROCEDURE

1	Actuator check.
---	-----------------

PREPARATION:

- (a) Warm up the engine.
 (b) Set to the actuator check mode (See page [DI-866](#)).

CHECK:

Operate the temperatur control switch and check the operation of the air mix damper and the condition of the blower.

OK:


Temp. Setting °C (°F)	Air Mix Damper	Condition
Max. COOL ↔ 20.5 (66)	–10 % (Fully closed)	Cool air comes out
21.0 ↔ 23.5 (67 ↔ 72)	↑	↑
24.0 ↔ 26.0 (73 ↔ 77)	50 %	
26.5 ↔ 29.0 (78 ↔ 83)	↑	
29.5 (84) ↔ Max. WARM	100 % (Fully opened)	Warm air comes out

OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-874](#)).

NG

2 Check air mix control servomotor.

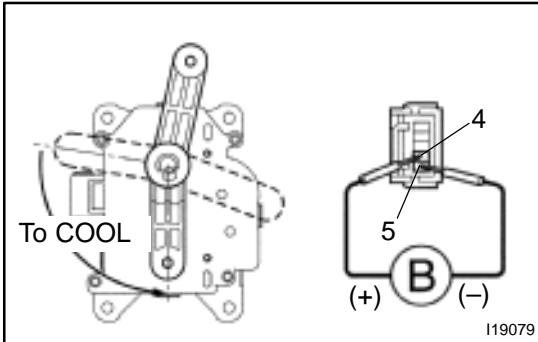**PREPARATION:**


Remove air mix control servomotor (See page [AC-56](#)).

CHECK:

Connect positive (+) lead to terminal 4 and the negative (-) lead to terminal 5.

OK:

The lever turns smoothly to COOL side.

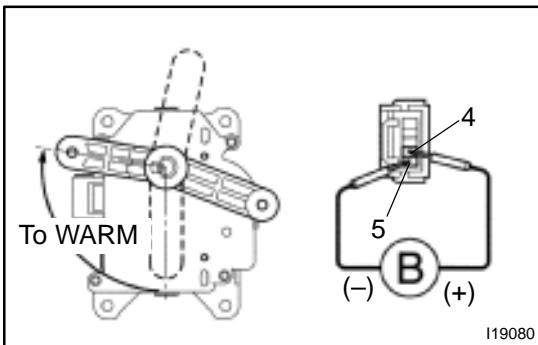**CHECK:**

Connect negative (-) lead to terminal 4 and positive (+) lead to terminal 5.

OK:

The lever turns smoothly to WARM side.

NG

Replace air mix control servomotor.

OK

3 Check harness and connector between A/C amplifier and air mix control servomotor (See page [IN-41](#)).

NG

Repair or replace harness or connector.

OK

Check and replace A/C amplifier.


DTC	42	Air Inlet Control Servomotor Circuit
------------	-----------	---

CIRCUIT DESCRIPTION

The air inlet control servomotor is controlled by the A/C amplifier and moves the air inlet damper to the desired position.


DTC No.	Detection Item	Trouble Area
42	Air inlet damper position sensor value does not change even if A/C amplifier operates air inlet control servomotor.	<ul style="list-style-type: none"> Air inlet damper position sensor Harness or connector between air inlet control servomotor and A/C amplifier A/C amplifier

WIRING DIAGRAM

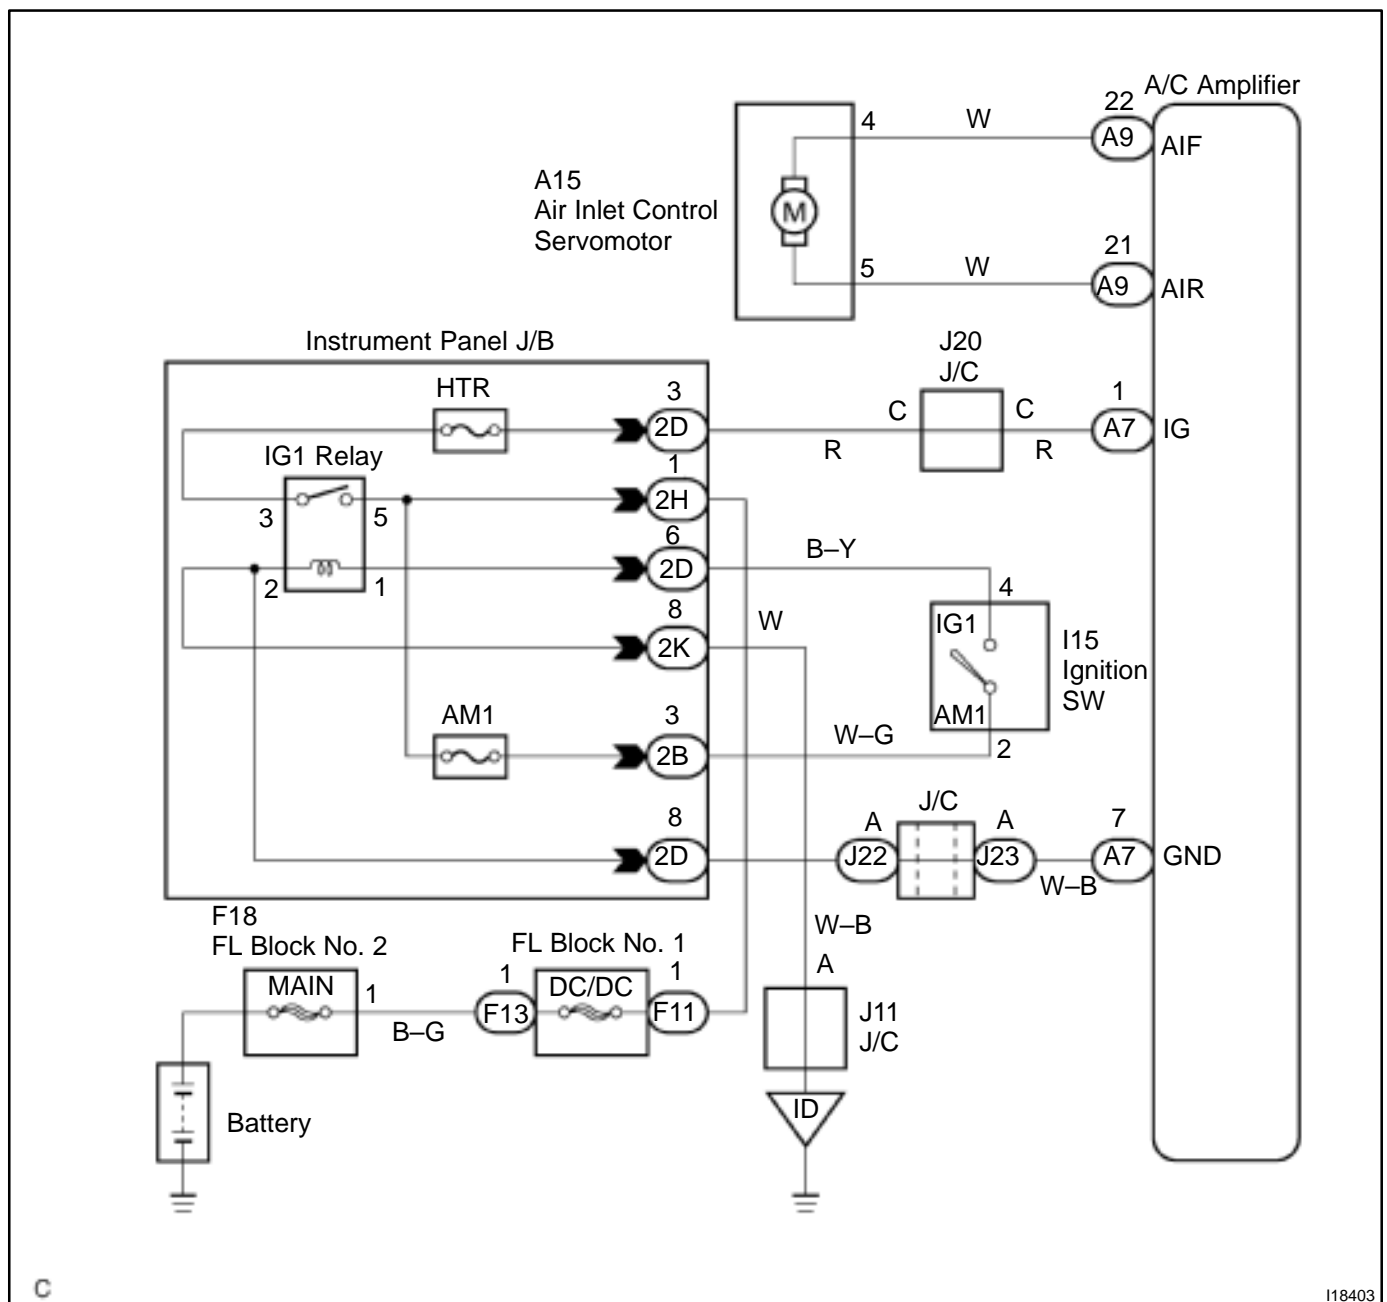

INSPECTION PROCEDURE

1	Actuator check.
---	-----------------

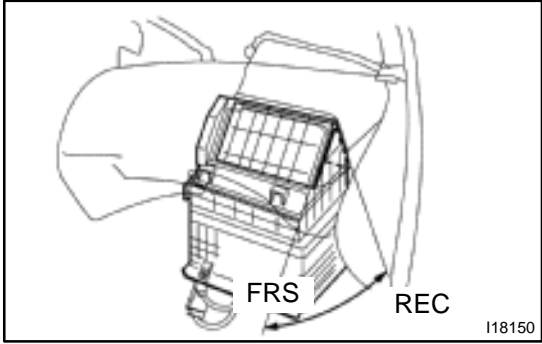

PREPARATION:

- (a) Remove glove compartment door to see and check the air inlet damper operation.
- (b) Set to the actuator check mode (See page [DI-866](#)).
- (c) Operate the temperature control switch and change it to step operation.


CHECK:


Operate the temperature control switch and check the operation air inlet damper.

OK:

Temp. setting °C (°F)	Air Inlet Damper
Max. COOL ↔ 20.5 (66)	REC
21.0 ↔ 26.0 (67 ↔ 77)	REC/FRS
26.5 (78) ↔ Max. WARM	FRS

OK	Proceed to next circuit inspection shown on problem symptoms table (See page DI-874).
----	--



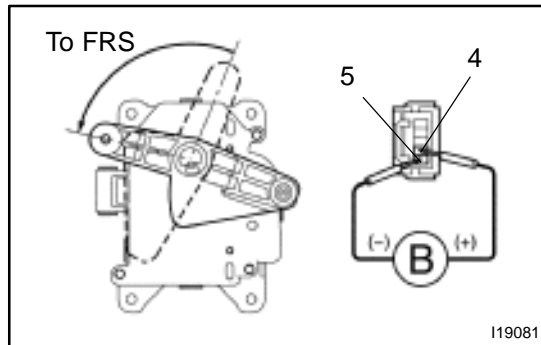2 Check air inlet control servomotor.**PREPARATION:**


Remove air inlet control servomotor (See page [AC-33](#)).

CHECK:

Connect positive (+) lead from the battery to terminal 4 and negative (-) lead to terminal 5.

OK:

The lever moves smoothly to FRS position.

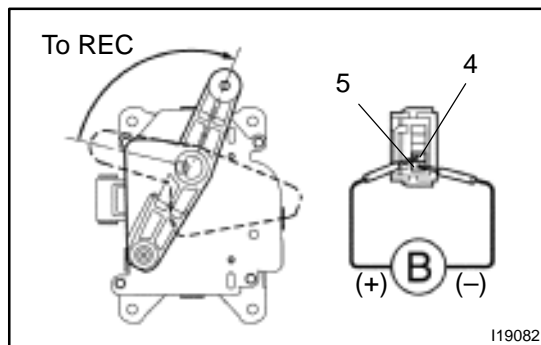**CHECK:**

Connect negative (+) lead from the battery to terminal 5 and positive (-) lead to terminal 4.

OK:

The lever moves smoothly to REC position.

NG**Replace air inlet control servomotor assembly.****OK****3 Check harness and connector between A/C amplifier and air inlet control servomotor (See page [IN-41](#)).****NG****Repair or replace harness or connector.****OK****Check and replace A/C amplifier.**

DTC	43	Air Outlet Damper Control Servomotor Circuit
------------	-----------	---

CIRCUIT DESCRIPTION

This circuit turns the servomotor and changes each mode damper position by the signals from the A/C amplifier. When the AUTO switch is on, the A/C amplifier changes the mode automatically between (FACE), (BI-LEVEL) and (FOOT) according to the temperature setting.

DTC No.	Detection Item	Trouble Area
43	Air outlet damper position sensor value does not change even if A/C amplifier operated air outlet damper control servomotor.	<ul style="list-style-type: none"> • Air outlet damper control servomotor. • Air outlet damper position sensor. • Harness or connector between A/C amplifier air outlet damper control servomotor, air outlet damper position sensor. • A/C amplifier.

The diagram illustrates the electrical connections between the Instrument Panel J/B and the A/C Amplifier. The Instrument Panel J/B includes components such as the HTR, IG1 Relay, AM1, and various terminals (2D, 2H, 2K, 2B, 2D). The A/C Amplifier includes the A16 Air Outlet Servomotor, J20 J/C, IG1, I15 Ignition SW, J22, J23, J11 J/C, and various terminals (A9, A7, GND). The diagram also shows a Battery, F18 FL Block No. 2, F13 DC/DC, and F11.

INSPECTION PROCEDURE

1	Actuator check.
---	-----------------

Temp. setting °C (°F)	Air Flow
Max. COOL ↔ 20.5 (66)	FACE
21.0 ↔ 23.5 (67 ↔ 72)	B/L
24.0 ↔ 26.0 (73 ↔ 77)	FOOT
26.5 ↔ 29.0 (78 ↔ 83)	DEF
29.5 (84) ↔ Max. WARM	FOOT/DEF

PREPARATION:

- (a) Set to the actuator check mode (See page [DI-866](#)).
 (b) Press the DEF switch and change to step operation.

CHECK:

Press the DEF switch in order and check the condition of air flow mode.


OK:

The mode changes with the change in the temperature setting as shown in the table.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-874](#)).

NG

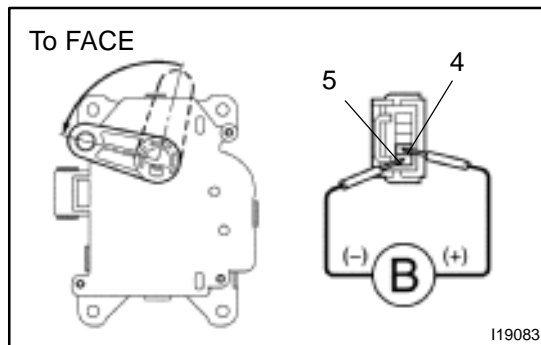2 Check air outlet control servomotor.**PREPARATION:**


Remove air outlet control servomotor (See page [AC-57](#)).

CHECK:

Connect positive (+) lead to terminal 4 and negative (-) lead to terminal 5.

OK:

The lever moves smoothly to FACE position.

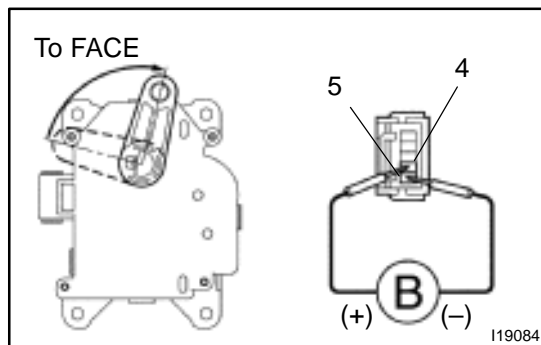**CHECK:**

Connect positive (+) lead to terminal 5 and negative (-) lead to terminal 4.

OK:

The lever moves smoothly to DEF position.

OK

NG

Replace air outlet servomotor.

3 Check for open and short in harness and connector between A/C amplifier and air outlet servomotor (See page [IN-41](#)).

NG


Repair or replace harness or connector.

OK

Check and replace A/C amplifier.

INSPECTION PROCEDURE

- | | |
|---|--|
| 1 | Check voltage between terminals IG and GND of A/C amplifier connector. |
|---|--|

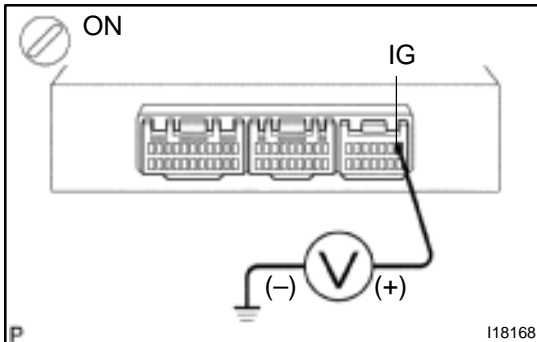**PREPARATION:**

- (a) Remove center cluster module control with connectors still connected.
- (b) Turn ignition switch ON.

CHECK:

Measure voltage between terminals IG and GND of A/C amplifier.

OK:


Voltage : 10 – 14 V

OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-874](#)).

NG

- | | |
|---|---|
| 2 | Check continuity between terminal GND of A/C amplifier and body ground. |
|---|---|

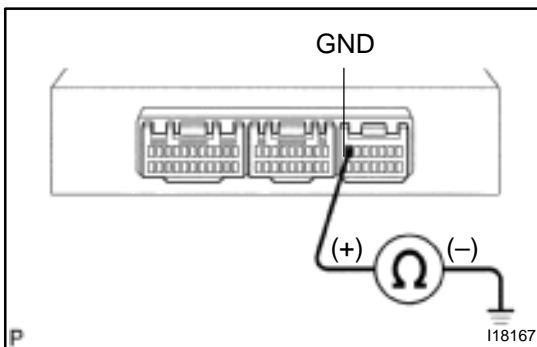**CHECK:**

Measure resistance between terminal GND of A/C amplifier and body ground.


OK:

Resistance : Below 1 Ω

NG

Repair or replace harness or connector.

OK

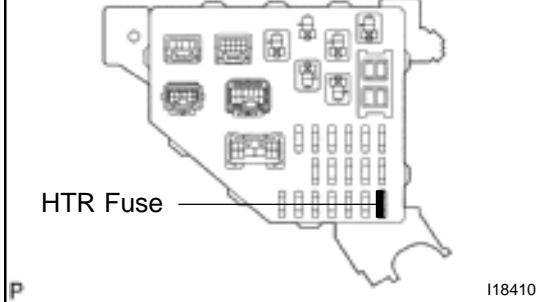3 Check HTR fuse.**Instrument Panel J/B****PREPARATION:**

Remove HTR fuse from instrument panel J/B.

CHECK:

Check continuity of HTR fuse.

OK:

Continuity exists.

NG

Check for short in all the harness and components connected to the HTR fuse.

OK


Check and repair harness and connector between A/C amplifier and battery.

Back Up Power Source Circuit

CIRCUIT DESCRIPTION


This is the back-up power source for the A/C amplifier. Power is supplied even when the ignition switch is off.

WIRING DIAGRAM

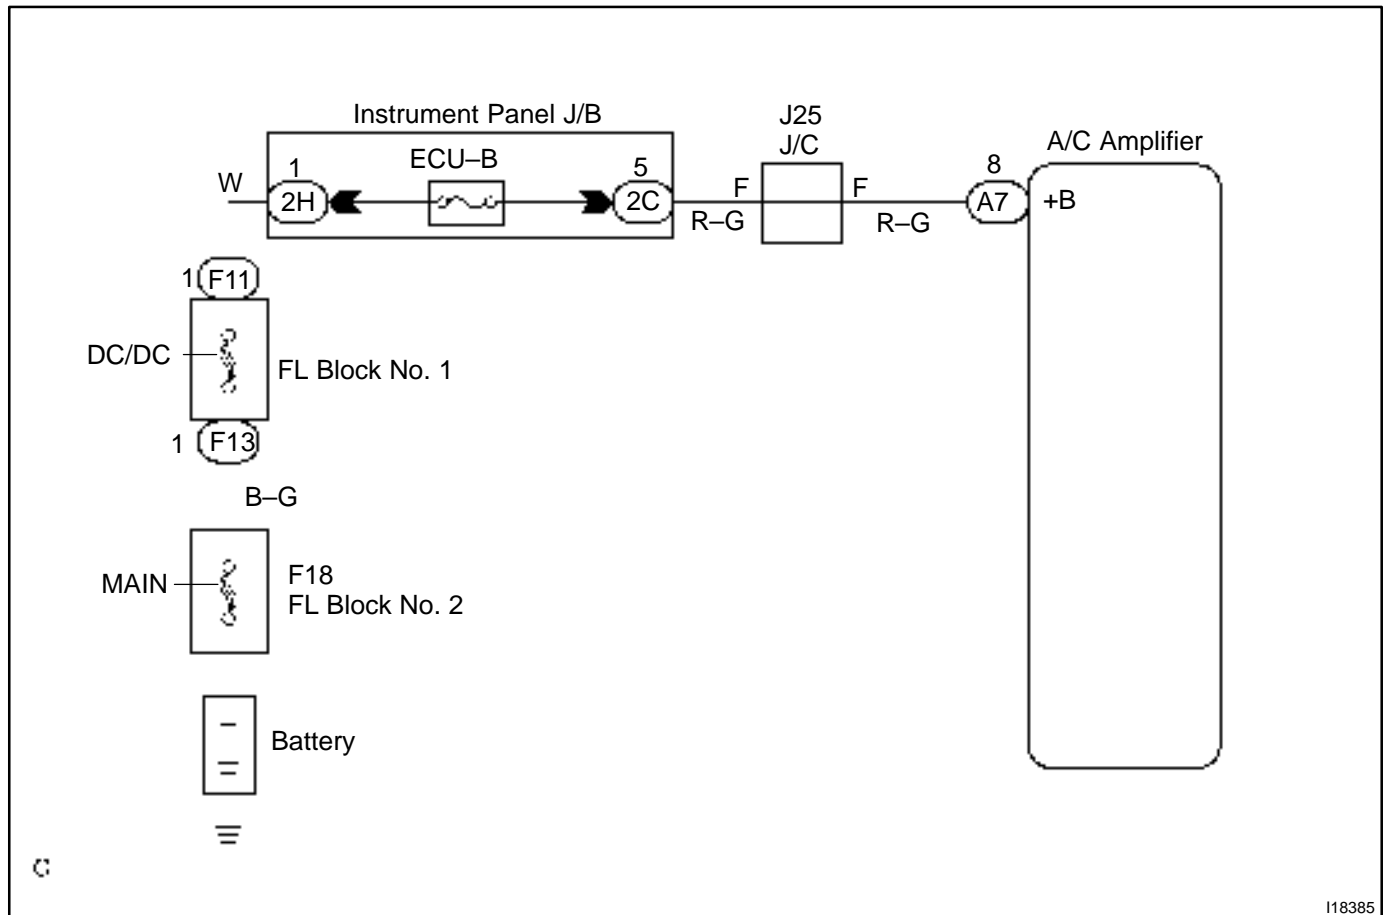

INSPECTION PROCEDURE

- 1 Check voltage between terminal +B of A/C amplifier connector and body ground.**

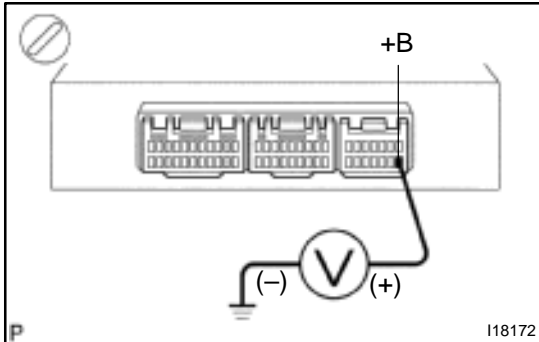**PREPARATION:**

Remove A/C amplifier with connectors still connected.

CHECK:

Measure voltage between terminal +B of A/C amplifier connector and body ground.

OK:


Voltage : 10 – 14 V

OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-874](#)).

NG

- 2 Check ECU-B fuse.**

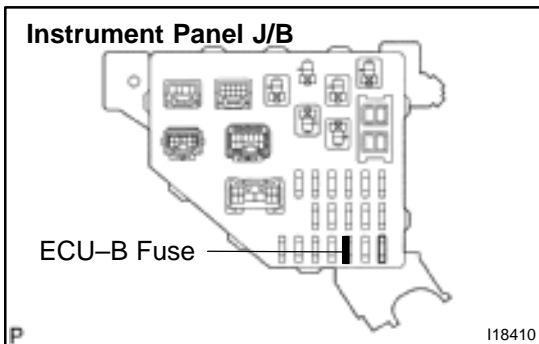**PREPARATION:**

Remove ECU-B fuse from instrument panel J/B.

CHECK:

Check continuity of ECU-B fuse.

OK:

Continuity exists.

NG

Check for short in all the harness and components connected to the ECU-B fuse (See page [IN-41](#)).

OK


Check and repair harness and connector between A/C amplifier and battery.

Heater Main Relay Circuit

CIRCUIT DESCRIPTION


The heater main relay is switched on by signals from the A/C amplifier. It supplies power to the blower motor.

WIRING DIAGRAM

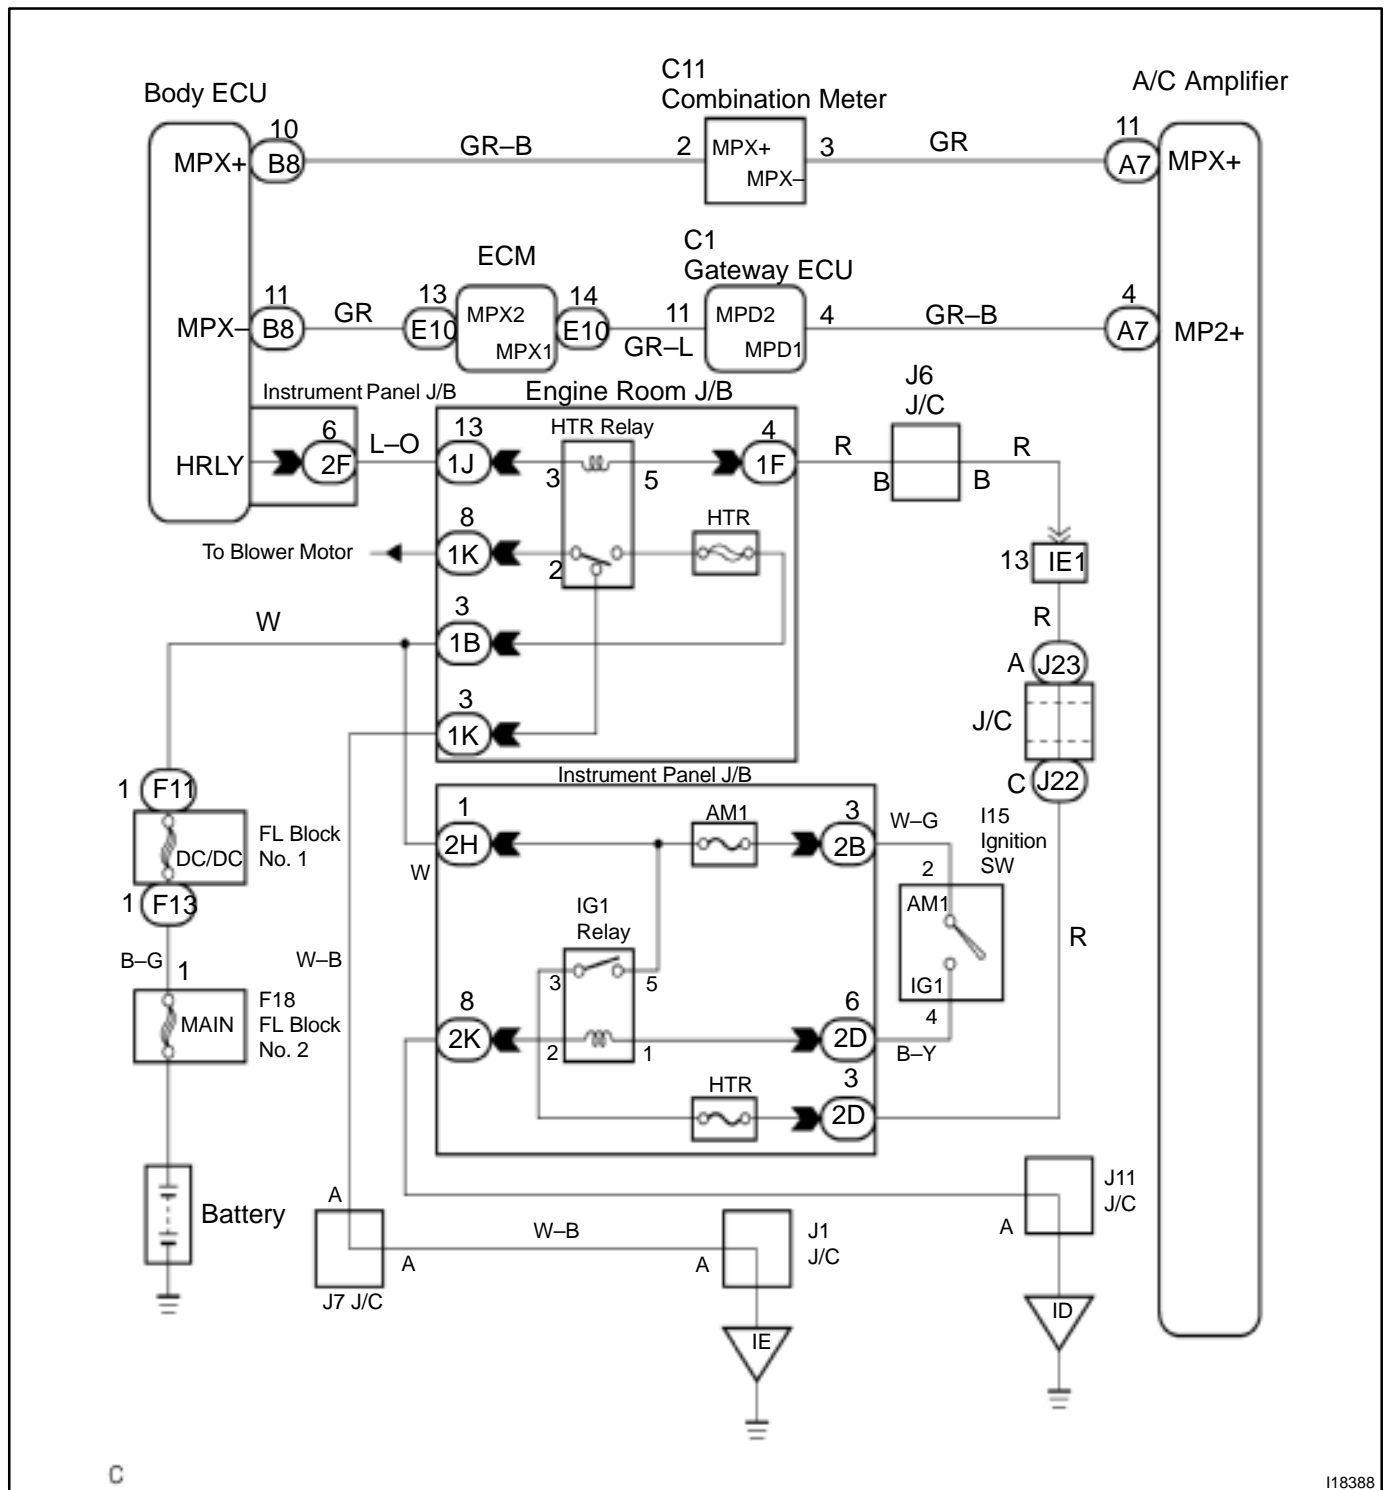

INSPECTION PROCEDURE

1	Check heater main relay.
---	--------------------------

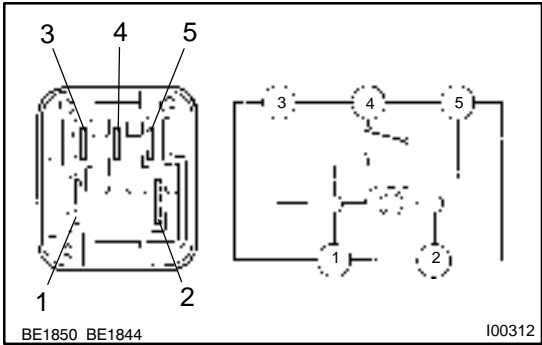

PREPARATION:

Remove heater main relay from engine room J/B.

CHECK:

Check continuity between each pair of terminals of heater main relay shown below.

OK:

Tester connection	Specified condition
1 – 4	No continuity
2 – 4	Continuity
3 – 5	62.5 – 90.9 Ω

PREPARATION:

Apply battery positive voltage between terminals 3 and 5.

CHECK:

Check continuity between each pair of terminal shown below.

OK:


Tester connection	Specified condition
1 – 2	Continuity
2 – 4	No continuity

NG

Replace hater main relay.

OK

2	Check HTR fuse
---	----------------

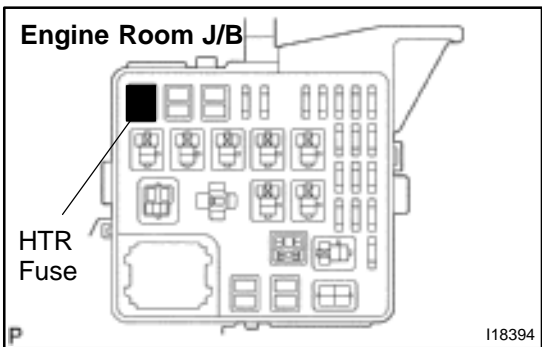

PREPARATION:

Remove HTR fuse from engine room J/B.

CHECK:

Check continuity of HTR fuse.

OK:

Continuity exists.

NG

Check for short in all the harness and components connected to the HTR fuse (See page [IN-41](#)).

OK

3	Check harness and connector between heater main relay and body ground, heater main relay and body ECU (See page IN-41).
---	--

NG


Check and replace harness and connector.

OK


Check multiplex communication system (See page [DI-750](#)).

Blower Motor Circuit

Blower Level

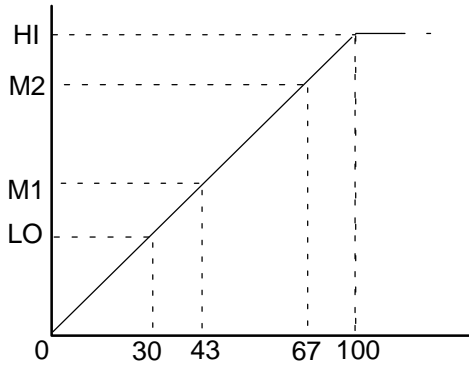

$$\text{Duty Ratio} = \frac{A}{A + B} \times 100 (\%)$$

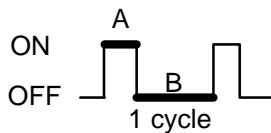


CIRCUIT DESCRIPTION


The blower motor is operated by signals from the A/C amplifier. Blower motor speed signals are transmitted by changes in the Duty Ratio.

Duty Ratio

The duty ratio is the ratio of the period of continuity in one cycle. For example, if A is the period of continuity in one cycle, and B is the period of non-continuity, then.

WIRING DIAGRAM

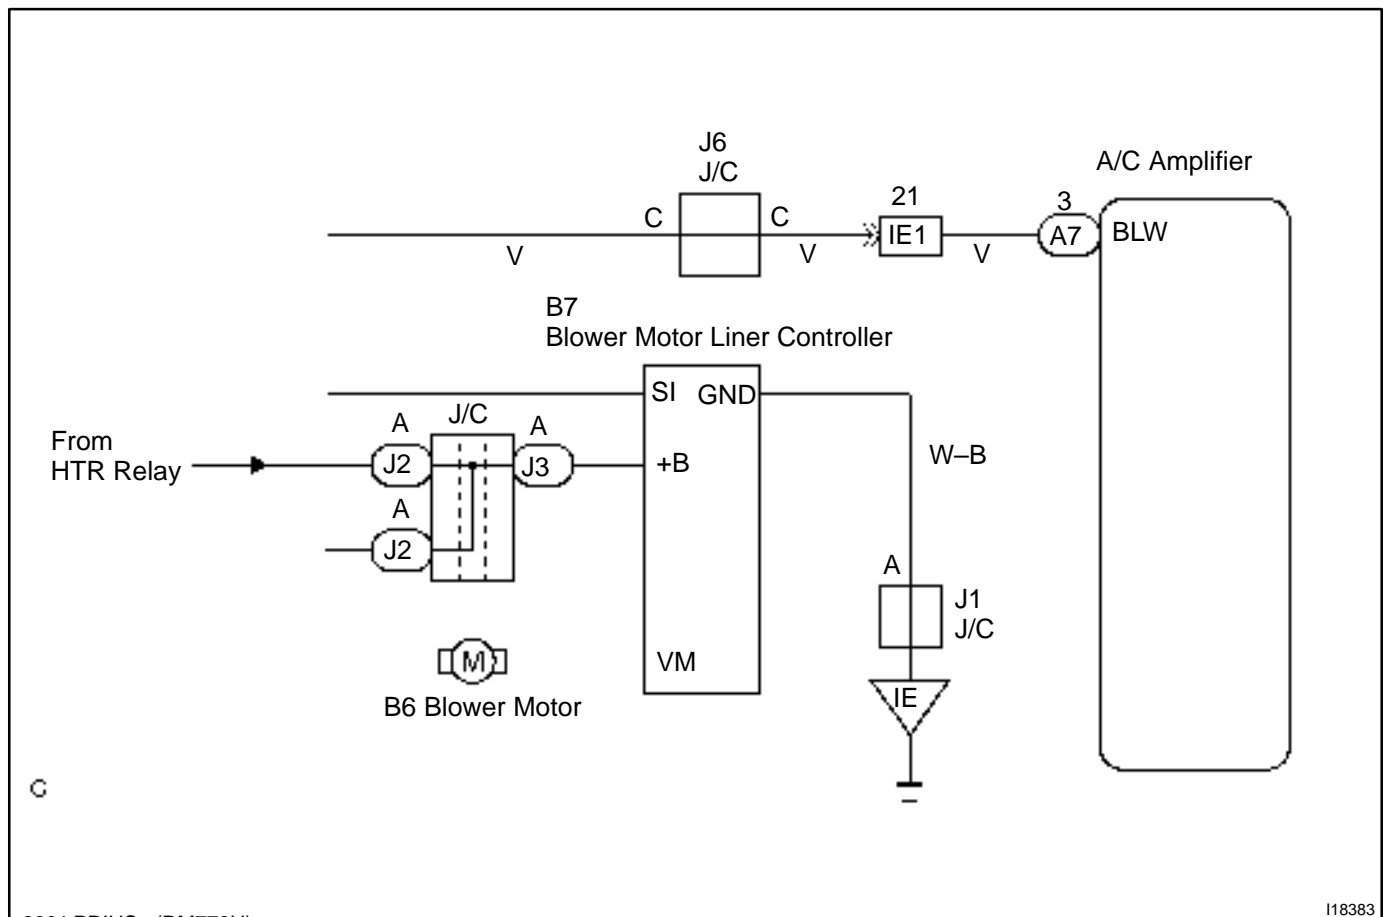

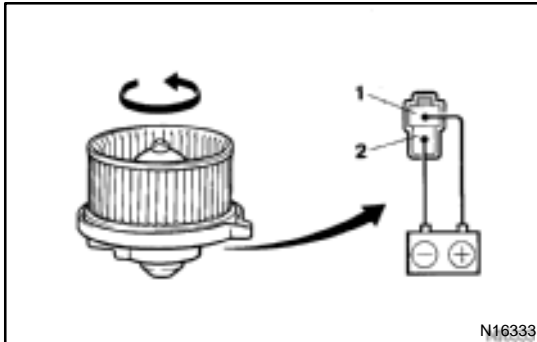INSPECTION PROCEDURE**1 Check blower motor.****PREPARATION:**

Remove blower motor (See page [AC-33](#)).

CHECK:

Connect positive (+) lead connected to terminal 2 of blower motor connector, negative (–) lead to terminal 1.

OK:

Blower motor operates smoothly.

NG**Replace blower motor.****OK****2 Check harness and connector between battery and blower motor, blower motor and body ground (See page [IN-41](#)).****NG****Repair or replace harness or connector.****OK****3 Check harness and connector between blower motor linear controller and A/C amplifier (See page [IN-41](#)).****NG****Repair or replace harness or connector.****OK**

4	Check A/C amplifier (See page IN-41).
---	--

NG

Replace A/C amplifier.

OK


Replace blower motor linear controller.

Compressor Circuit

CIRCUIT DESCRIPTION

A/C amplifier switches the A/C magnetic clutch relay ON, thus turning the A/C compressor magnetic clutch ON.


WIRING DIAGRAM

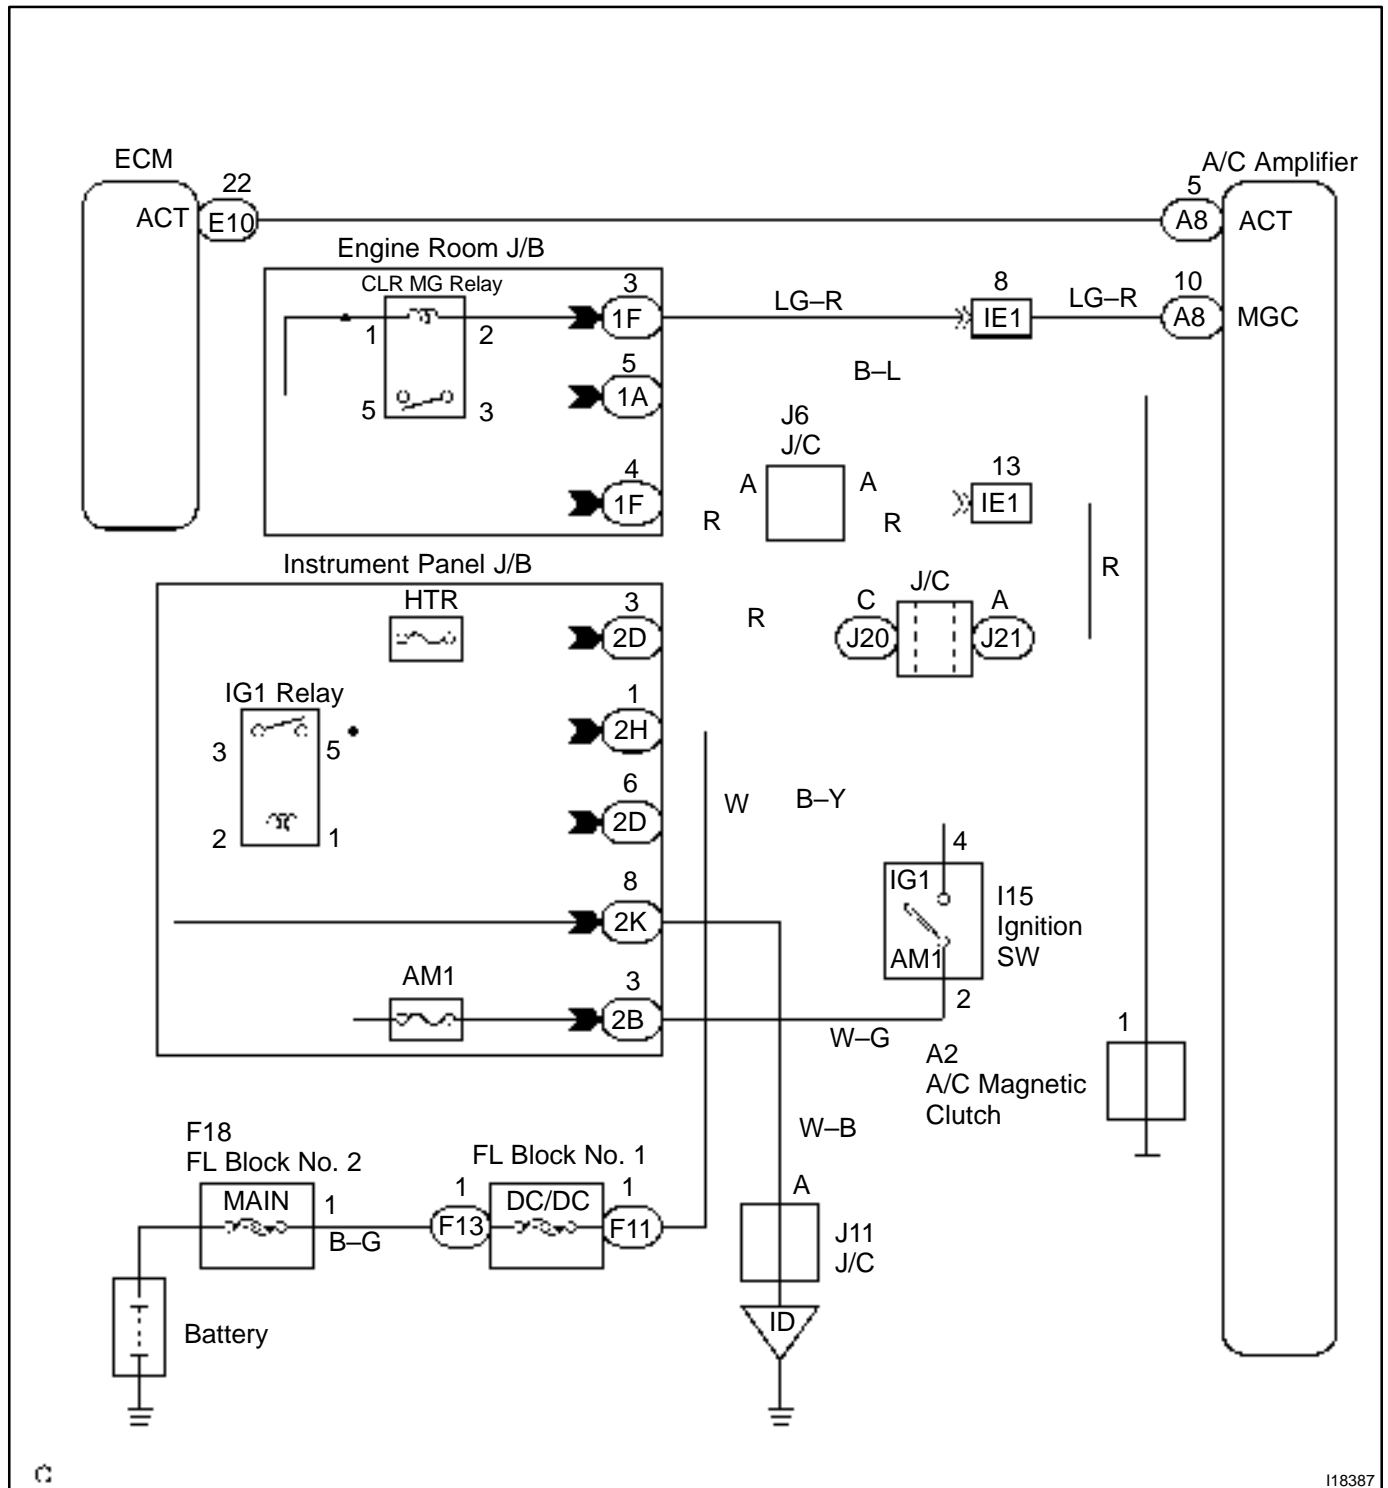

cardiagn.com

INSPECTION PROCEDURE

1 Check voltage between terminal MGC of A/C amplifier and body ground.

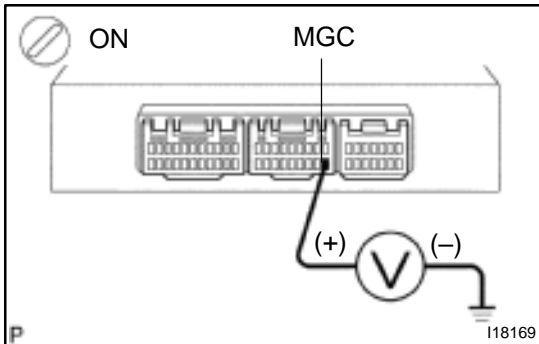**CHECK:**


- (a) Start engine.
- (b) Push AUTO SW.
- (c) Measure voltage between terminal MGC of A/C amplifier connector and body ground when A/C switch is On and OFF.

OK:

A/C switch	Voltage
ON	Below 0.7 V
OFF	10 – 14 V

OK**Go to step 5.****NG**

2 Check magnetic clutch relay.

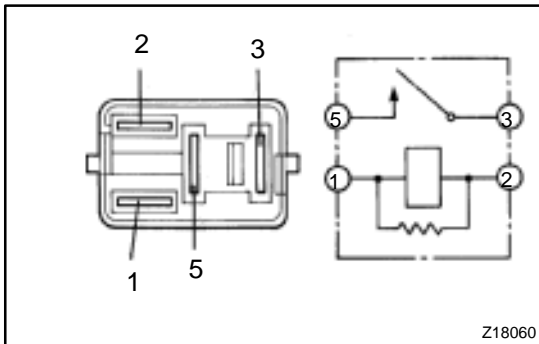**PREPARATION:**

Remove magnetic clutch relay from engine room J/B.

CHECK:

Check continuity between each pair of terminals shown below of magnetic clutch relay.

OK:

Tester connection	Specified condition
1 – 2	62.5 – 90.9 Ω
3 – 5	No continuity

PREPARATION:


Apply battery positive (+) voltage between terminals 1 and 2.

CHECK:

Check continuity between terminals 3 and 5.

OK:**Continuity exists.****NG****Replace magnetic clutch relay.****OK**

3 Check A/C magnetic clutch.

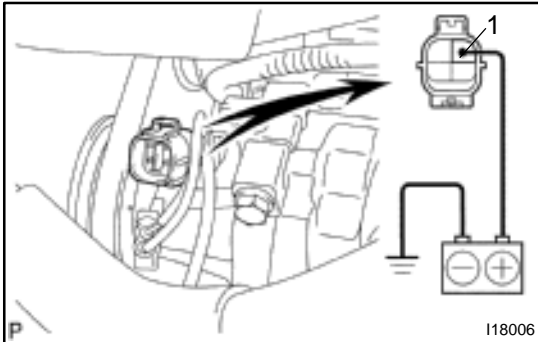**PREPARATION:**

Disconnect magnetic clutch connector.

CHECK:

Connect positive (+) lead connected to battery to magnetic clutch connector terminal 3 and negative (–) lead to body ground.

OK:

Magnetic clutch is energized.

NG

Repair A/C magnetic clutch.

OK

4 Check harness and connector between magnetic clutch relay and A/C amplifier, A/C compressor and body ground (See page IN-41).


NG

Repair or replace harness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page DI-874).

5 Check voltage between terminal ACT of A/C amplifier connector side and body ground.

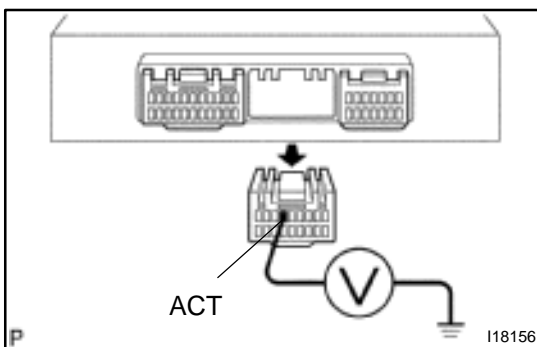**PREPARATION:**

- (a) Disconnect A/C amplifier connector.
- (b) Turn ignition switch ON.

CHECK:

Check voltage between terminal ACT of A/C amplifier harness side connector.

OK:


Voltage : 10 – 14 V

NG

Check and replace engine ECU.

OK

6 Check voltage between terminal ACT of A/C amplifier connector and body ground.

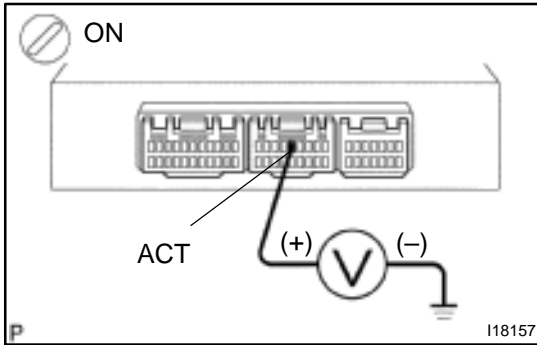

PREPARATION:

- Remove center cluster module control with connector still connected.
- Start the engine and push AUTO switch.

CHECK:

Check the voltage between terminal ACT of A/C amplifier connector and body ground when magnetic clutch is ON and OFF by A/C switch.

OK:

Magnetic clutch	Voltage
ON	10 – 14 V
OFF	Below 1.0 V

NG

Check and replace A/C amplifier.

OK

7 Check harness and connector between magnetic clutch relay and A/C amplifier (See page IN-41).

NG

Repair or replace harness or connector.

OK


Proceed to next circuit inspection shown on problem symptoms table (See page DI-874).

Water Pump Circuit

CIRCUIT DESCRIPTION

This is the power source for the water pump motor.


WIRING DIAGRAM

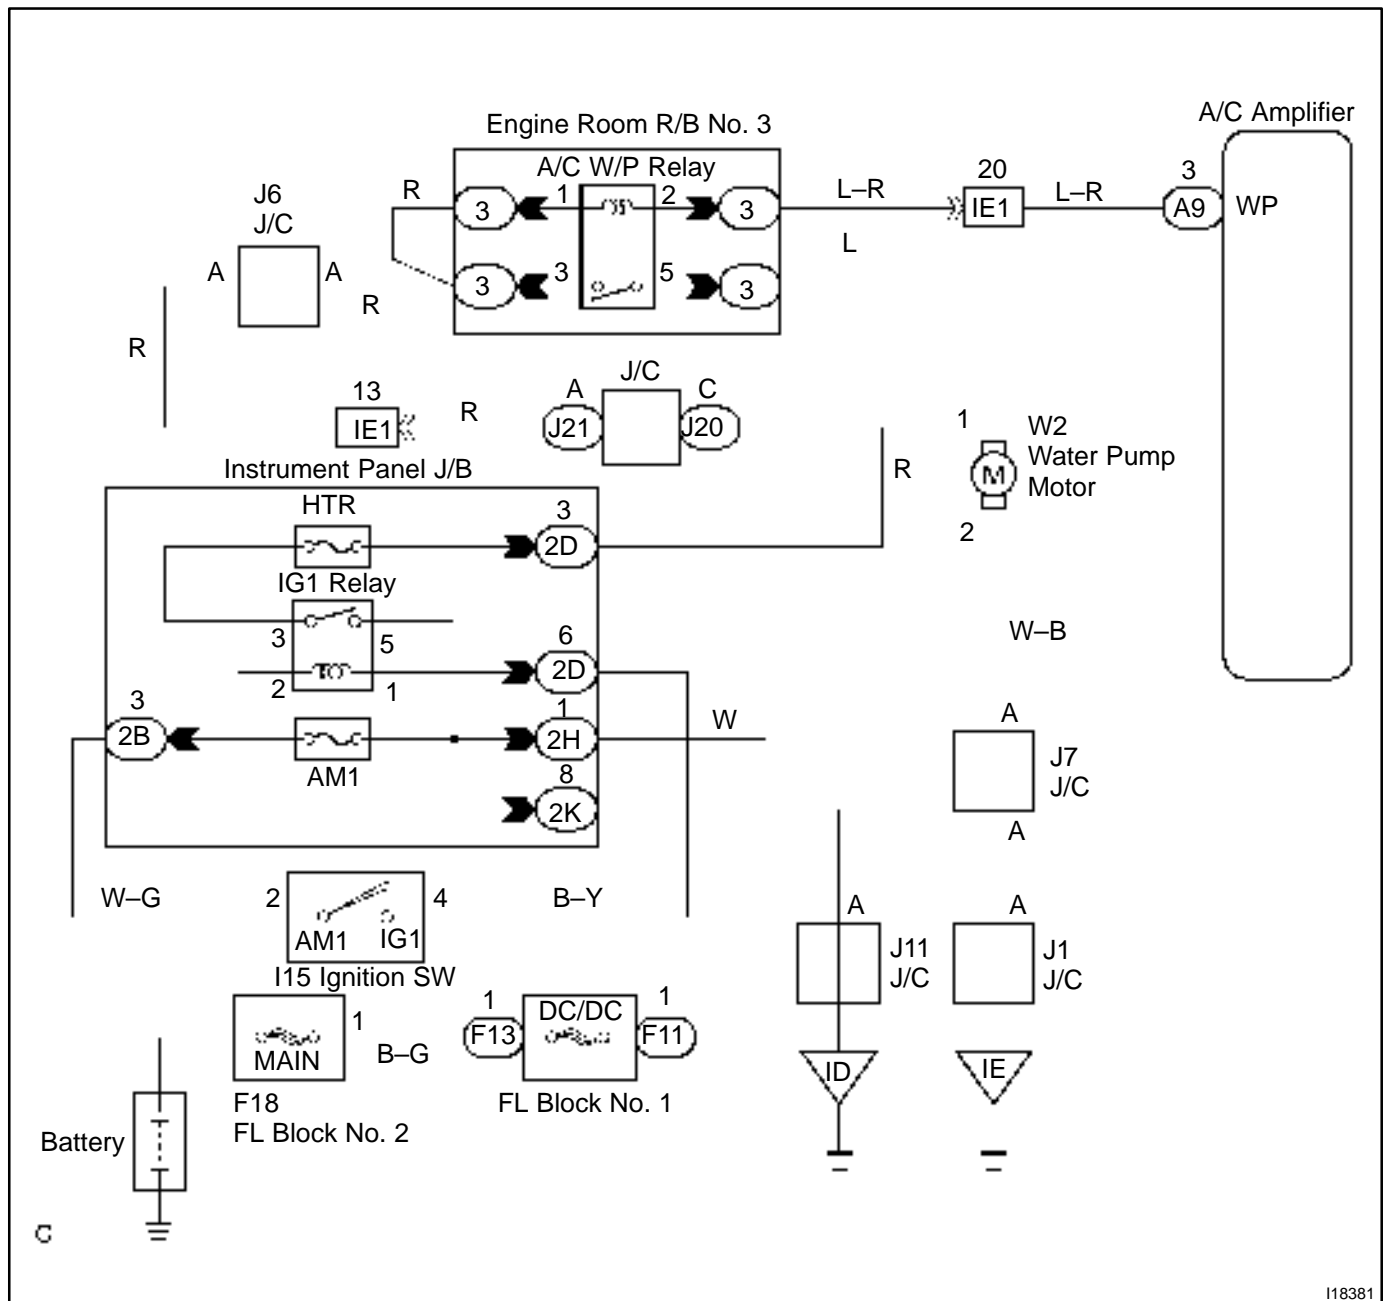

I18381

INSPECTION PROCEDURE

1 Check voltage between terminal WP of A/C amplifier and body ground.

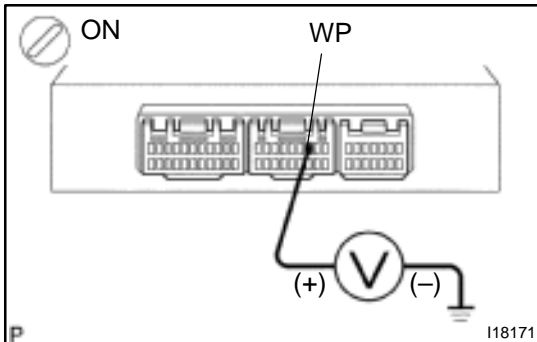**PREPARATION:**

- Remove the center cluster module control with connectors still connected.
- Start engine.
- Operate blower motor.

CHECK:

Measure voltage between terminal WP of A/C amplifier and body ground when each condition as shown in the chart.

OK:


condition	Voltage
Engine running	10 – 14 V
Engine stop	Below 1.0 V

OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-874](#)).

NG

2 Check A/C water pump relay.

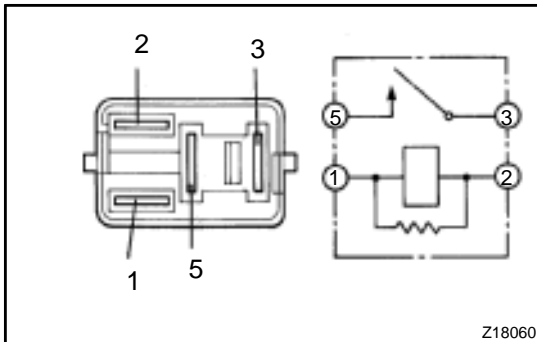**PREPARATION:**

Remove the A/C water pump relay from engine room R/B NO. 3.

CHECK:

Check continuity between each pair of terminals shown below of magnetic clutch relay.

OK:

Tester connection	Specified condition
1 – 2	62.5 – 90.9 Ω
3 – 5	No continuity

PREPARATION:

Apply battery positive (+) voltage between terminals 1 and 2.

CHECK:

Check continuity between terminals 3 and 5.

OK:


Continuity exists.

NG

Replace magnetic clutch relay.

OK

3 Check water pump motor.

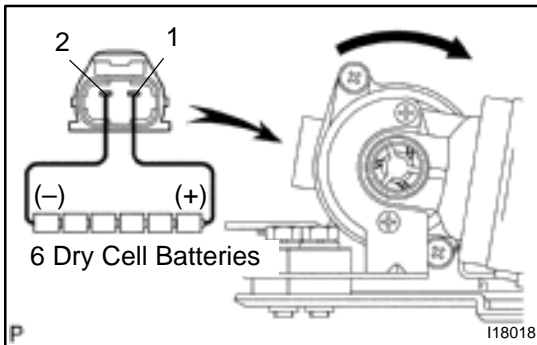

PREPARATION:

Remove the water pump (See page [AC-55](#)).

CHECK:

Connect the positive (+) lead from the 6 dry cell batteries (7 – 10.5 V) to terminal 1 and negative (–) lead to terminal 2, then check that the motor operation.

NOTICE:

- Do not apply battery voltage.
- Operate without water should be done within 10 sec.

OK:

Motor operation smoothly.

NG

Replace water pump.

OK

4 Check harness and connector between water pump motor and A/C amplifier, water pump motor and body ground (See page [IN-41](#)).

NG


Repair or replace harness or connector.

OK

Check and replace A/C amplifier.

Converter Circuit


WIRING DIAGRAM

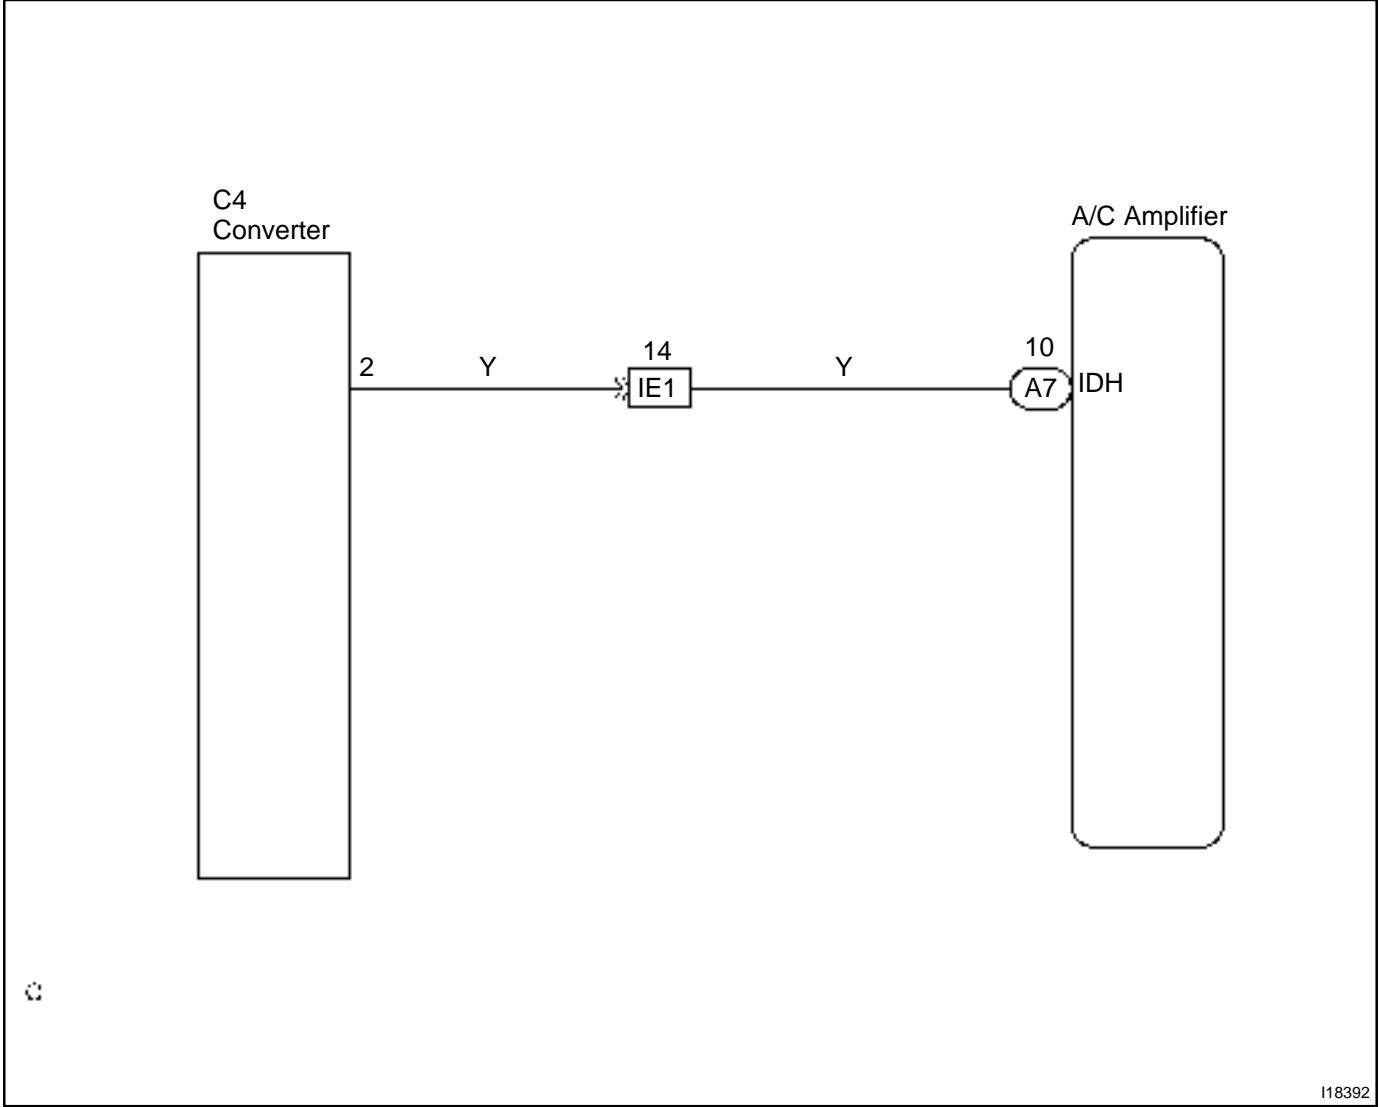

cardiagn.com

INSPECTION PROCEDURE

1	Check voltage between terminal IDH of A/C amplifier and body ground.
---	---

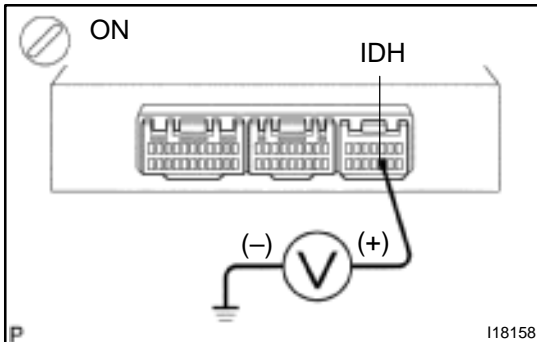**PREPARATION:**

Remove the center cluster module control with connectors still connected.

CHECK:

- (a) Turn ignition switch ON.
- (b) Turn light control switch OFF.
- (c) Turn rear defogger switch OFF.
- (d) Measure voltage between terminal IDH of A/C amplifier.

OK:


Voltage: Below 1.0 V

OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-874](#)).

NG

2	Check voltage between terminal IDH of A/C amplifier and body ground.
---	---

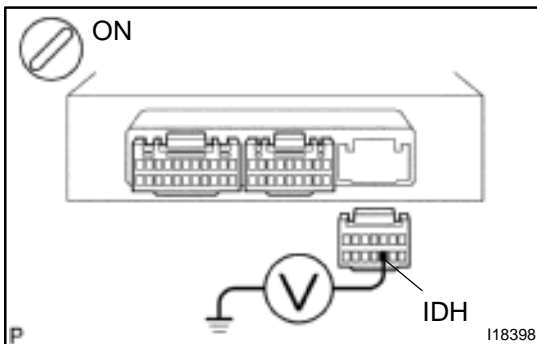**PREPARATION:**

Disconnect the connector from A/C amplifier.

CHECK:

- (a) Turn ignition switch ON.
- (b) Turn light control switch OFF.
- (c) Turn rear defogger switch OFF.
- (d) Measure voltage between terminal IDH of A/C amplifier on wire harness side connector.

OK:

Voltage: Below 1.0 V

OK

Check and replace A/C amplifier.

NG

3	Check harness and connector between A/C amplifier and converter (See page IN-41).
---	--

NG

Repair and replace harness and connector.

OK


Check and replace converter.

PTC Heater Circuit (Quick Heater)

CIRCUIT DESCRIPTION

A/C amplifier switches the HTR3 relay ON by signal from the A/C amplifier. It supplies power to PTC heater (Quick heater).

WIRING DIAGRAM

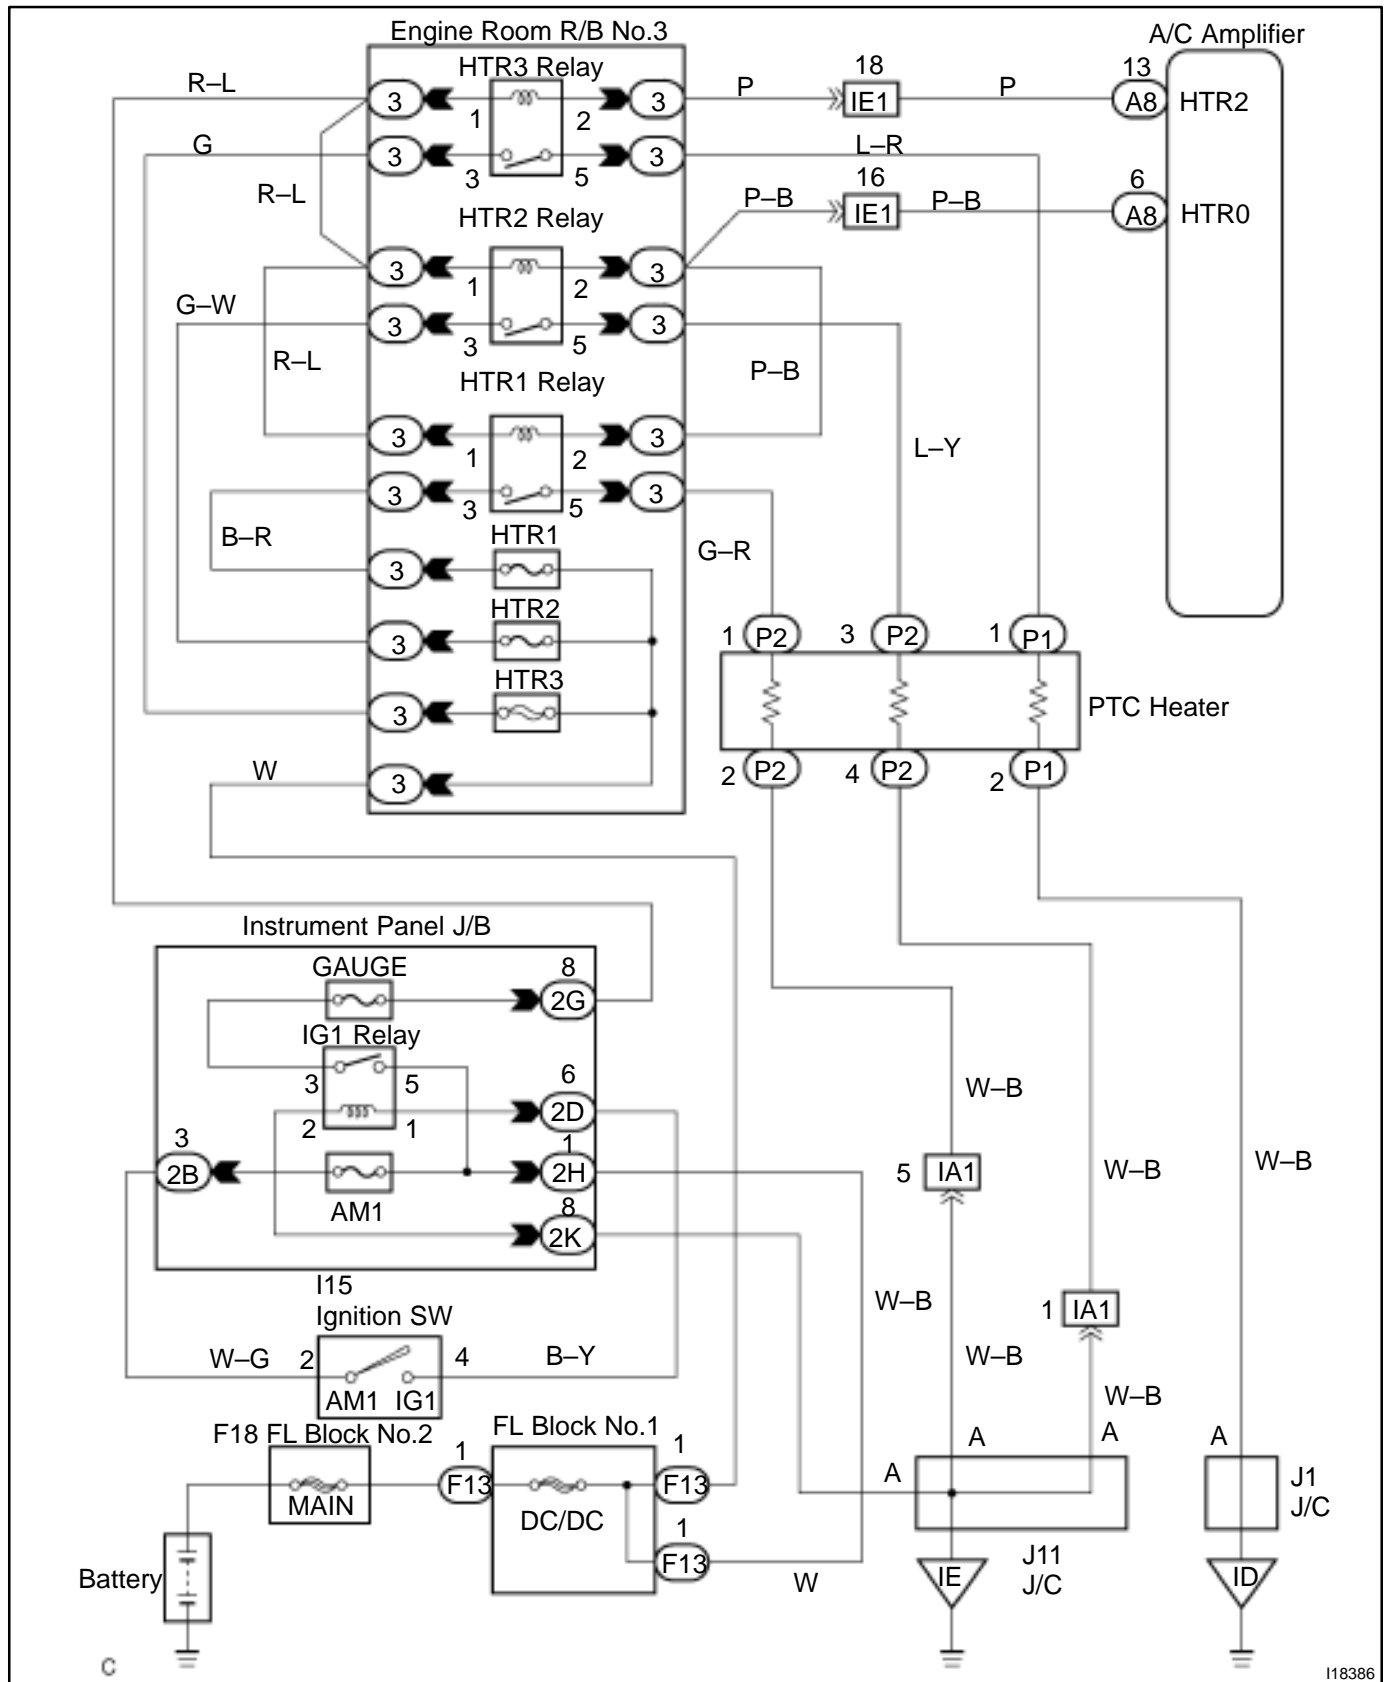


cardiagn.com


I18386

INSPECTION PROCEDURE

- 1 Check converter circuit (See page [DI-934](#)).



- 2 Check voltage between terminal HTR2 of A/C amplifier and body ground.

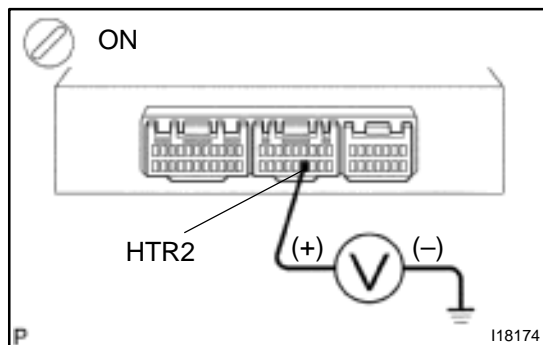**PREPARATION:**

Remove the center cluster module control with connectors still connected.

CHECK:

- (a) Start engine.
- (b) Set temperature control switch on "MAX. WARM" position.
- (c) Set blower switch on "HI" position.
- (d) Turn light control switch OFF.
- (e) Turn defogger switch OFF.
- (f) Check voltage between terminal HTR2 of A/C amplifier and body ground at each conditions, as shown in the chart.

OK:

Condition	Voltage
<ul style="list-style-type: none"> • Air flow selector: FOOT • Water temp. : Below 65°C (149°F) 	Below 0.7 V
<ul style="list-style-type: none"> • Air flow selector: FOOT/DEF • Water temp. : Below 60°C (140°F) 	Below 0.7 V
<ul style="list-style-type: none"> • Air flow selector: DEF • Water temp. : 75°C (167°F) 	Below 0.7 V


OK

Go to step 6.

NG

3 Check HTR3 fuses.**Engine Room R/B No. 3**

HTR3 Fuse

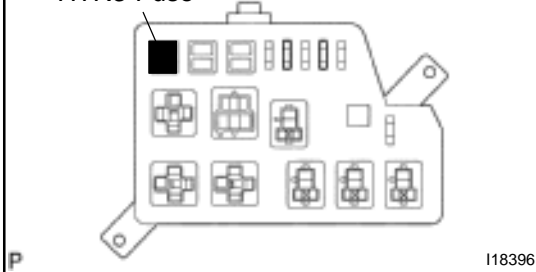**PREPARATION:**

Remove the HTR3 fuse from engine room R/B No. 3.

CHECK:


Check continuity of HTR1 and HTR2 fuses.

OK:

Continuity exists.

NG

Check for short in all the harness and components connected to the HTR1 and HTR2 fuses (See attached wiring diagram).

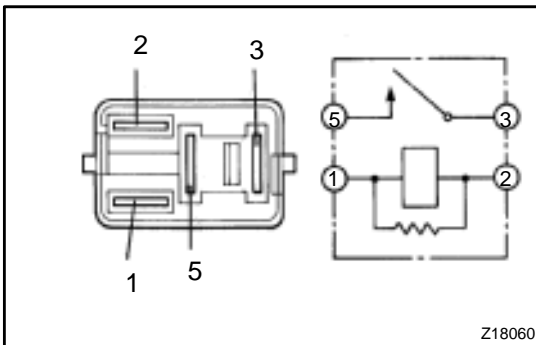OK**4 Check HTR3 relays.****PREPARATION:**

Remove the HTR3 relays from engine room relay block No. 3.

CHECK:

Check continuity between each pair of terminals shown below of magnetic clutch relay.

OK:

Tester connection	Specified condition
1 – 2	62.5 – 90.9 Ω
3 – 5	No continuity

PREPARATION:

Apply battery positive (+) voltage between terminals 1 and 2.

CHECK:

Check continuity between terminals 3 and 5.

OK:

Continuity exists.

NG

Replace HTR3 relay.

OK

- 5** Check harness and connector between A/C amplifier and HTR1 and HTR2 fuses (See page [IN-41](#)).


NG

Check and replace harness and connector.

OK

Check and replace A/C amplifier.

- 6** Check PTC heater.

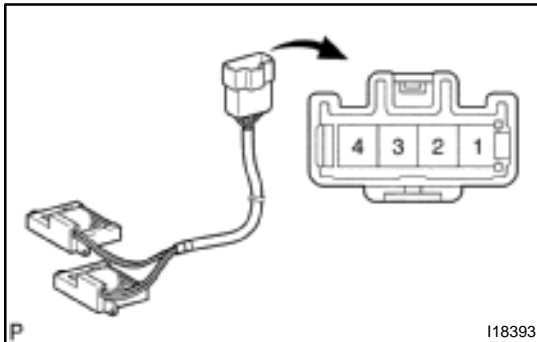

PREPARATION:

Remove the heater radiator (See page [AC-51](#)).

CHECK:

Check continuity between terminals of PTC heater connector, as shown in the chart.

OK:

Tester connection	Result
1 – 2	Continuity
3 – 4	Continuity

NG

Replace heater radiator.

OK


Check harness and connector between PTC heater and HTR1, HT2 relays, PTC heater and body ground (See page [IN-41](#)).

PTC Heater Circuit (Heater Radiator)

CIRCUIT DESCRIPTION

A/C amplifier switches the HTR1 relay and HTR2 relay ON by signal from the A/C amplifier. It supplies power to PTC heater (Heater radiator).

WIRING DIAGRAM

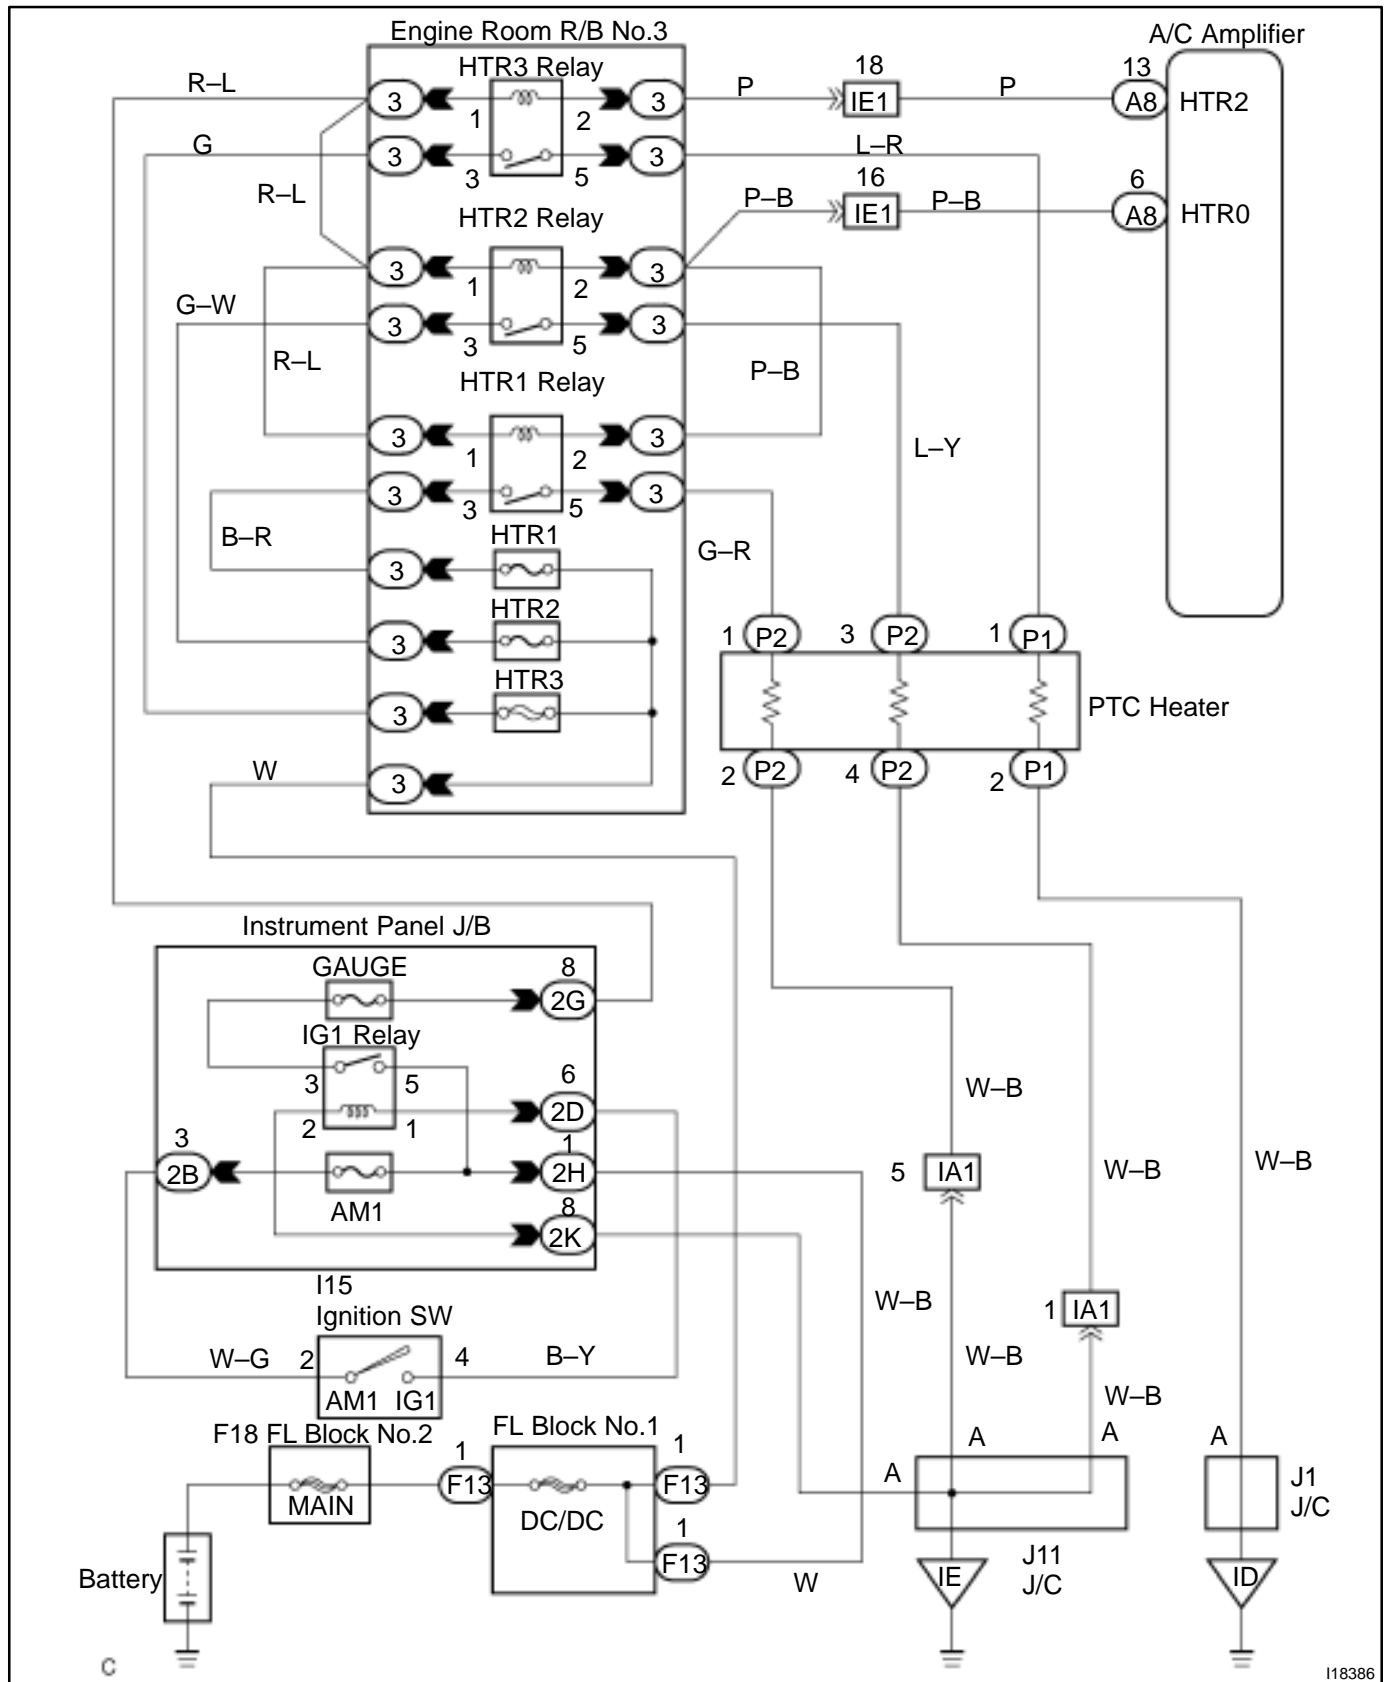


cardiagn.com


I18386

INSPECTION PROCEDURE

- 1 Check converter circuit (See page [DI-934](#)).



- 2 Check voltage between terminal HTR0, of A/C amplifier and body ground.

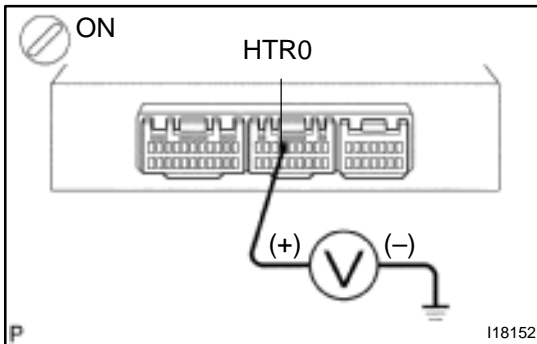**PREPARATION:**

Remove the center cluster module control with connectors still connected.

CHECK:

- Start engine.
- Set temperature control switch on "MAX WARM" position.
- Set blower switch on "HI" position.
- Turn light control switch to OFF.
- Turn defogger switch OFF.
- Check voltage between terminal HTR0 of A/C amplifier and body ground at each conditions, as shown in the chart.

OK:

Condition	Voltage
<ul style="list-style-type: none"> Air flow selector: FOOT Water temp. : Below 60°C (140°F) 	Below 0.7 V
<ul style="list-style-type: none"> Air flow selector: FOOT/DEF Water temp. : Below 50°C (122°F) 	Below 0.7 V


OK

Go to step 6.

NG

3 Check HTR1 and HTR2 fuses.**Engine Room R/B No. 3**

HTR1 Fuse HTR2 Fuse

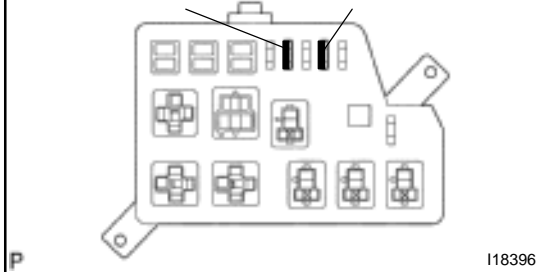**PREPARATION:**

Remove the HTR1 and HTR2 fuses from engine room R/B NO. 3.

CHECK:


Check continuity of HTR1 and HTR2 fuses.

OK:

Continuity exists.

NG

Check for short in all the harness and components connected to the HTR1 and HTR2 fuses (See attached wiring diagram).

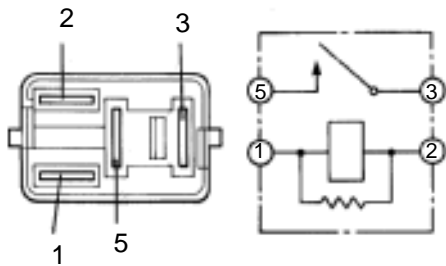OK**4 Check HTR1 and HTR2 relays.****PREPARATION:**

Remove the HTR1 and HTR2 relays from engine room relay block NO. 3.

CHECK:

Check continuity between each pair of terminals shown below of magnetic clutch relay.

OK:

Tester connection	Specified condition
1 – 2	62.5 – 90.9 Ω
3 – 5	No continuity

PREPARATION:

Apply battery positive (+) voltage between terminals 1 and 2.

CHECK:

Check continuity between terminals 3 and 5.

OK:

Continuity exists.

NG

Replace HTR1 and (or) HTR2 relay.

OK

- 5** Check harness and connector between A/C amplifier and HTR3 fuse (See page [IN-41](#)).


NG

Check and replace harness and connector.

OK

Check and replace A/C amplifier.

- 6** Check PTC heater (Heater Radiator).

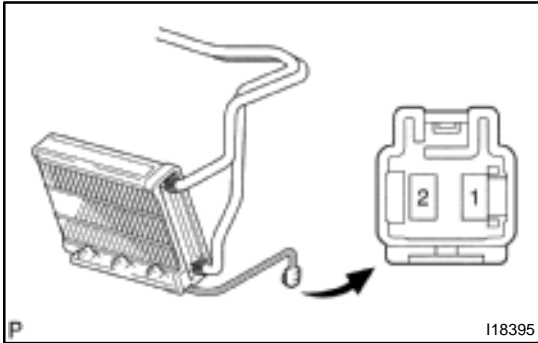

PREPARATION:

Remove the heater radiator (See page [AC-27](#)).

CHECK:

Check continuity between terminals of PTC heater connector.

OK:

Continuity exists.

NG

Replace heater radiator.

OK

Check harness and connector between PTC heater and HTR3 relay, PTC heater and body ground (See page [IN-41](#)).


Radiator Fan and Condenser Fan Circuit

CIRCUIT DESCRIPTION

The electric fan speed is controlled as described below, in accordance with the following signals:


- ON/OFF signal of A/C switch
- ON/OFF signal detected by the pressure switch (that cut out at medium pressure)
- ON/OFF signal detected by water temperature switch

WIRING DIAGRAM

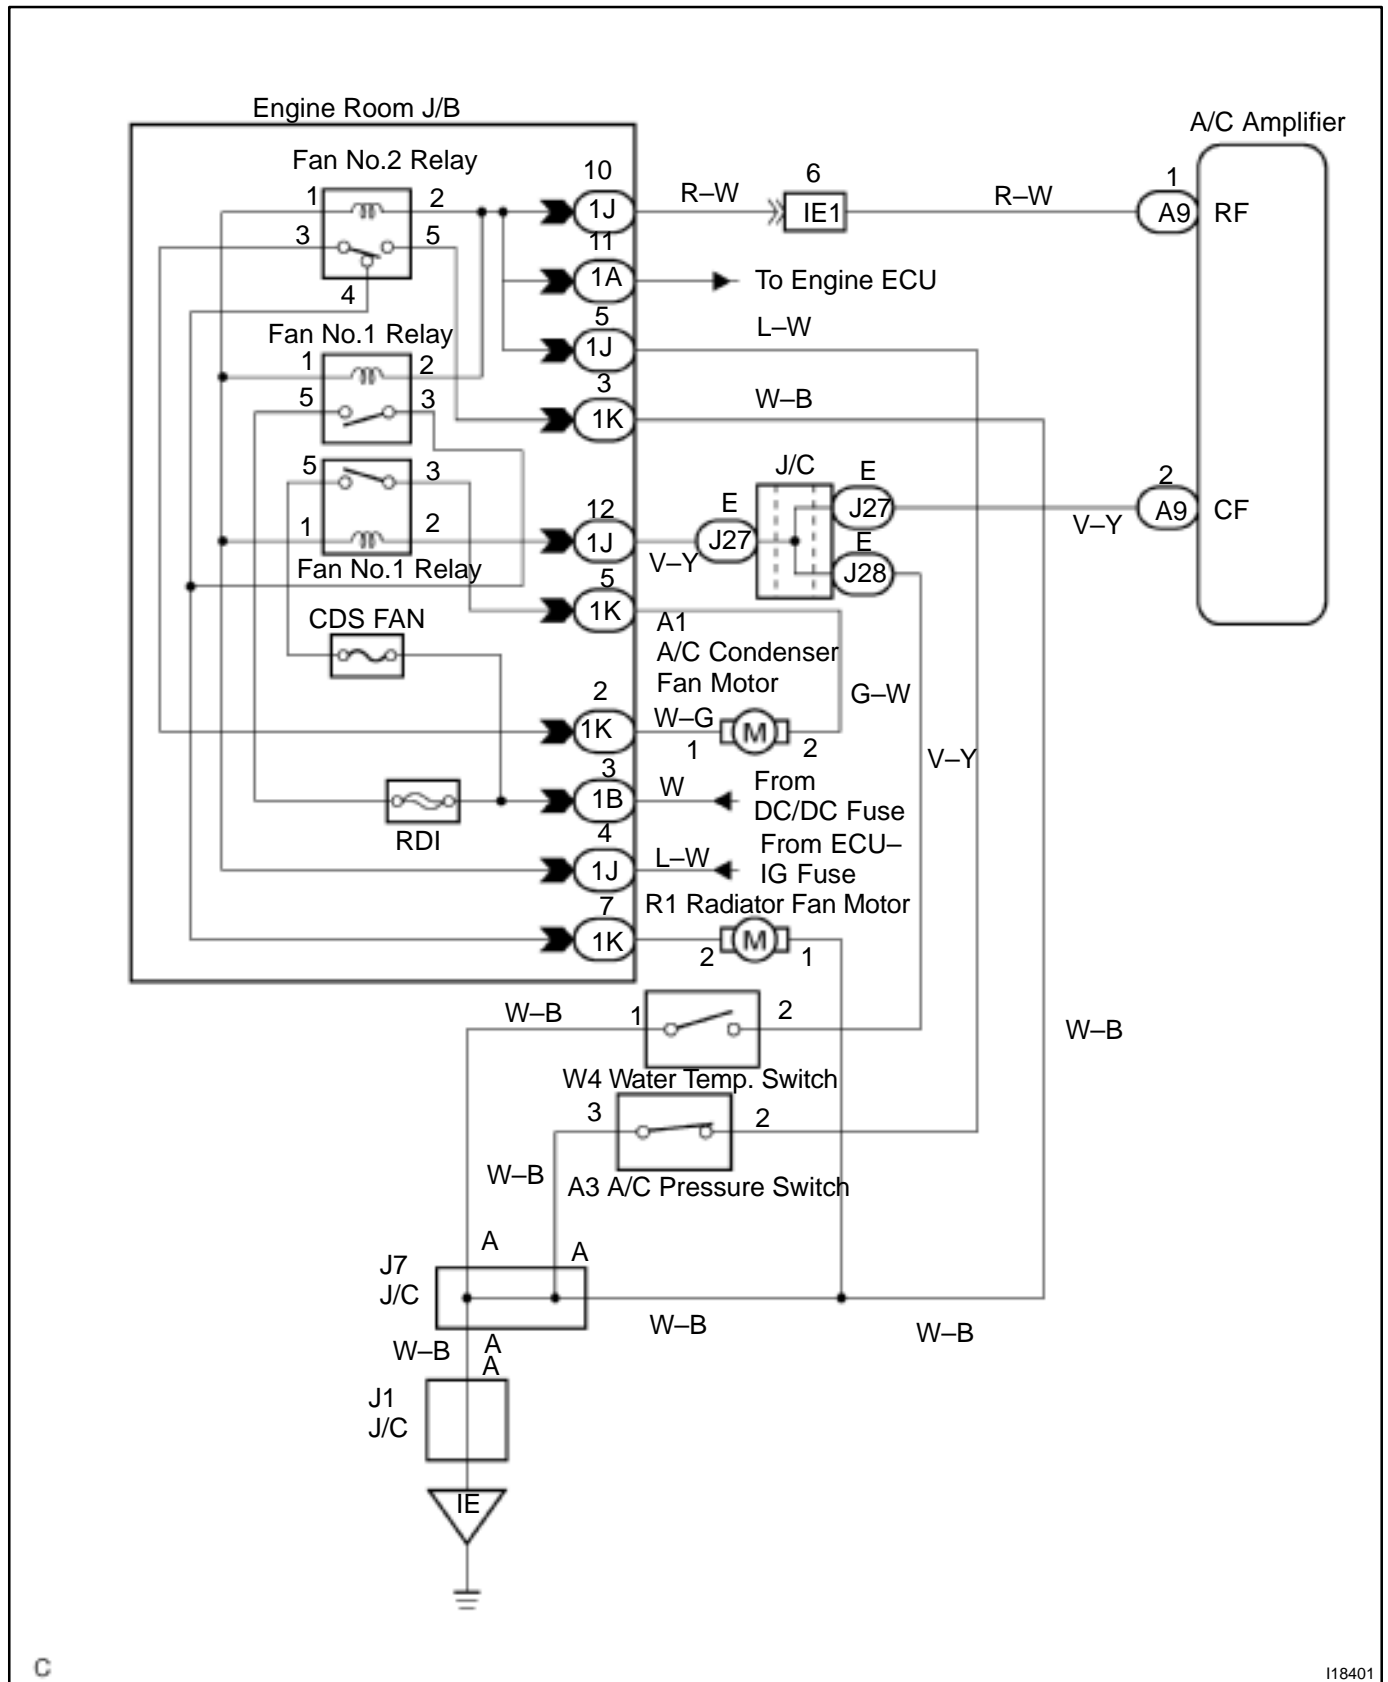

INSPECTION PROCEDURE

1 Check voltage between terminals RF, CF of A/C amplifier and body ground.

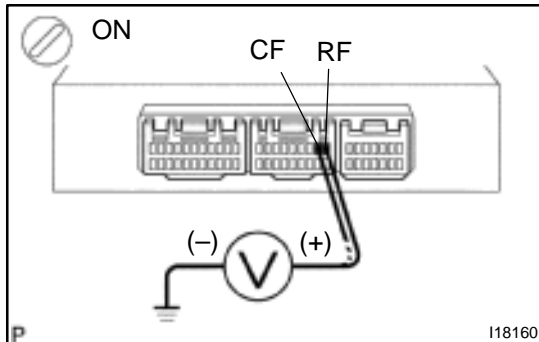**PREPARATION:**

Remove the center cluster module control with connectors still connected.

CHECK:

- Start engine.
- Turn A/C switch ON.
- Measure voltage between terminal RF, CF of A/C amplifier and body ground at each conditions as shown in the chart.

OK:

Terminal	Condition	Voltage
RF ↔ Body ground	Water temp.: Below 90°C (194 °F) Refrigerant pressure: Below 1,520 kPa (15.5 kgf/cm ² , 220 psi)	10 – 14 V
	Water temp.: Above 90°C (194 °F) Refrigerant pressure: Above 1,520 kPa (15.5 kgf/cm ² , 220 psi)	Below 1.0 V
CF ↔ Body ground	A/C switch: ON	Below 1.0 V
	A/C switch: OFF	10 – 14 V

OK

Go to step 4.


NG

2 Check Fan No. 1, No. 2 and No. 3 relays (See page [AC-65](#)).

NG

Replace faulty relay

OK

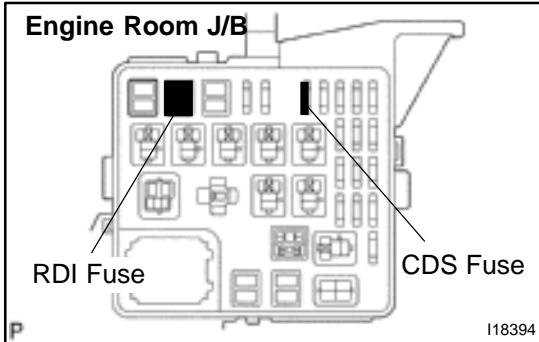3 Check RDI fuse and CDS fuse.**PREPARATION:**

Remove RDI fuse and CDS fuse from engine room J/B.

CHECK:

Check continuity of RDI fuse and CDS fuse.

OK:

Continuity exists.

NG

Check for short in all the harness and components connected to the RDI fuse (See attached wiring diagram).

OK

Check harness and connector between A/C control amplifier and battery (See page [IN-41](#)).

4 Check fan motor operation (See page [AC-67](#)).**NG**

Replace fan motor.

OK**5 Check pressure switch (See page [AC-62](#)).****NG**

Replace pressure switch.

OK

6 Check engine coolant temp. switch (See page [AC-84](#)).

NG

Replace water temp. switch.

OK

7 Check harness and connector between A/C amplifier and pressure switch, pressure switch and body ground (See page [IN-41](#)).

NG

Repair and replace harness and connector.

OK

8 Check harness and connector between A/C amplifier and water temp. switch, water temp. switch and body ground (See page [IN-41](#)).

NG

Repair and replace harness and connector.

OK

Check and replace A/C amplifier.

CO/HC INSPECTION

EM167-04

HINT:

This check is used only to determine whether or not the idle CO/HC complies with regulations.

1. INSTALL CONDITIONS


- (a) Air cleaner installed
- (b) Air pipes and hoses of air induction system connected
- (c) All accessories switched OFF
- (d) All vacuum lines properly connected
- (e) EFI system wiring connectors fully plugged
- (f) Ignition timing check correctly
- (g) Transmission in parking range
- (h) Tachometer and CO/HC meter calibrated by hand

2. ACTIVATE INSPECTION MODE AND WARM UP ENGINE (See page [IN-10](#))

3. RACE ENGINE AT 2,250 RPM FOR APPROX. 180 SECONDS

HINT:

At the accelerator opening angle of 60% or more, the engine speed is controlled at 2,250 rpm.

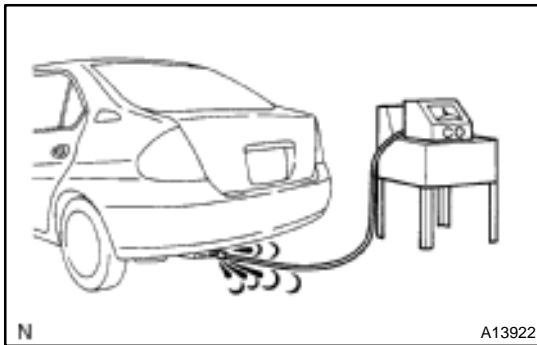

- 4. INSERT CO/HC METER TESTING PROBE AT LEAST 40 cm (1.3 ft) INTO TAILPIPE DURING IDLING
- 5. IMMEDIATELY CHECK CO/HC CONCENTRATION AT IDLE AND/OR 2,250 RPM

Complete the measuring with 3 minutes.

HINT:

When doing the 2 mode (idle and 2,250 rpm) test, these measurement order prescribed by the applicable local regulations.

6. STOP ENGINE

If the CO/HC concentration does not comply with regulations, troubleshoot in the order given below.

- Check heated oxygen sensor operation.
(See page [DI-44](#))
- See the table below for possible causes, and then inspect and correct the applicable causes if necessary.

CO	HC	Problems	Causes
Normal	High	Rough idle	1. Faulty ignitions: <ul style="list-style-type: none"> • Incorrect timing • Fouled, shorted or improperly gapped plugs • Open or crossed high-tension cords 2. Incorrect valve clearance 3. Leaky intake and exhaust valves 4. Leaky cylinders
Low	High	Rough idle (Fluctuating HC reading)	1. Vacuum leaks: <ul style="list-style-type: none"> • PCV hoses • Intake manifold • Throttle body 2. Lean mixture causing misfire
High	High	Rough idle (Black smoke from exhaust)	1. Restricted air filter 2. Plugged PCV valve 3. Faulty EFI systems: <ul style="list-style-type: none"> • Faulty pressure regulator • Defective water temperature sensor • Defective air flow meter • Faulty ECM • Faulty injectors • Faulty throttle position sensor
Normal	High		1. Faulty HCAC: <ul style="list-style-type: none"> • Faulty VSV • Faulty actuator

COMPRESSION INSPECTION

EM11T-02

HINT:

If there is lack of power, excessive oil consumption or poor fuel economy, measure the compression pressure.

NOTICE:


The measurement of compression pressure should be performed in the Cranking Mode.

1. WARM UP AND STOP ENGINE

Allow the engine to warm up to normal operating temperature.

2. REMOVE AIR CLEANER ASSEMBLY


3. REMOVE IGNITION COIL (See page IG-6)

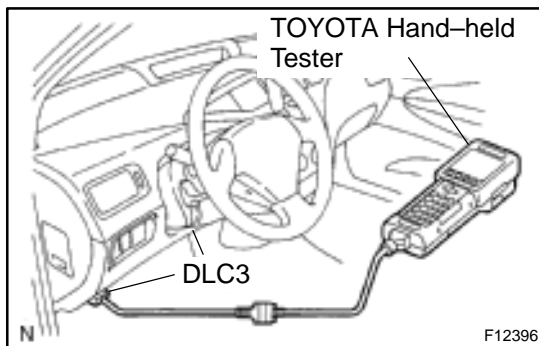

4. REMOVE SPARK PLUGS

5. CONNECT TOYOTA HAND-HELD TESTER

- Connect the TOYOTA hand-held tester to the DLC3.
- Select the cranking mode on the TOYOTA hand-held tester.
- Please refer TOYOTA hand-held tester operator's manual for further details.

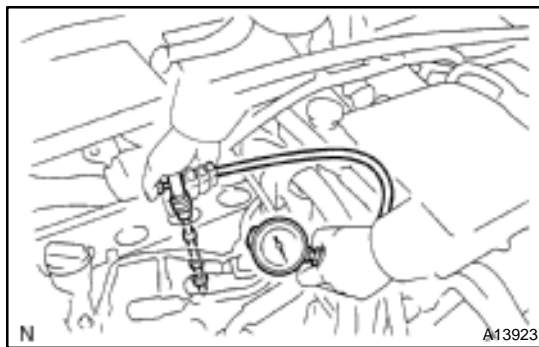

6. INSPECT CYLINDER COMPRESSION PRESSURE

- Insert a compression gauge into the spark plug hole.
- Fully open the throttle.
- While cranking the engine, measure the compression pressure.

HINT:

In the Cranking Mode, the engine speed is automatically controlled at 250 rpm and the throttle valve is also automatically set in fully-opened condition.

- Repeat steps (a) through (c) for each cylinder.

NOTICE:

This measurement must be done in as short a time as possible.

Compression pressure:

728 kPa (7.4 kgf/cm², 106 psi)

Minimum pressure:

534 kPa (5.4 kgf/cm², 77 psi)

Difference between each cylinder:

98 kPa (1.0 kgf/cm², 14 psi) or less

- (e) If the cylinder compression in one more cylinders is low, pour a small amount of engine oil into the cylinder through the spark plug hole and repeat steps (a) through (c) for cylinders with low compression.
- If adding oil helps the compression, it is likely that the piston rings and/or cylinder bore are worn or damaged.
 - If pressure stays low, a valve may be sticking or seating is improper, or there may be leakage past the gasket.
- 7. REINSTALL SPARK PLUGS**
- 8. REINSTALL IGNITION COIL (See page [IG-7](#))**

VALVE CLEARANCE ADJUSTMENT


EM169-02

HINT:

Inspect and adjust the valve clearance when the engine is cold.


1. REMOVE CYLINDER HEAD COVER

(See page EM-15)

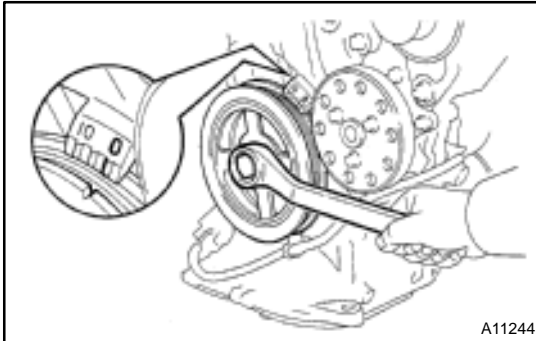


2. SET NO.1 CYLINDER TO TDC/COMPRESSION

- (a) Turn the crankshaft pulley, and align its groove with the timing mark "0" of the timing chain cover.

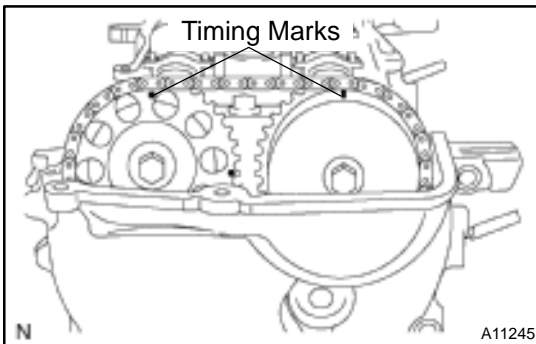

- (b) Check that both timing marks on the camshaft timing sprocket and valve timing controller assembly are facing right up as shown in the illustration.

If not, turn the crankshaft 1 revolution (360°) and align the marks as above.

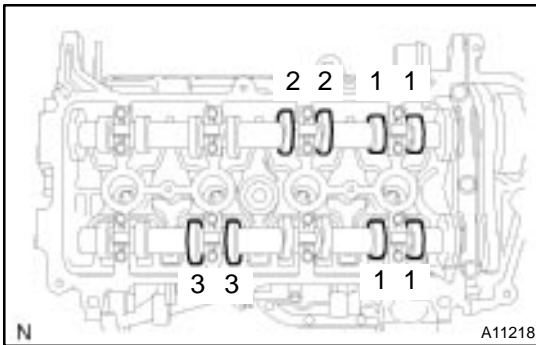

3. INSPECT VALVE CLEARANCE


- (a) Check only the valves indicated.
- Using a feeler gauge, measure the clearance between the valve lifter and camshaft.
 - Record the out-of-specification valve clearance measurements. They will be used later to determine the required replacement adjusting shim.


Valve clearance (Cold):

Intake 0.17 – 0.23 mm (0.007 – 0.009 in.)

Exhaust 0.27 – 0.33 mm (0.011 – 0.013 in.)


- (b) Turn the crankshaft 1 revolution (360°) and align the mark as above. (See procedure in step 2)
- (c) Check only the valves indicated as shown. Measure the valve clearance. (See procedure in step (a))

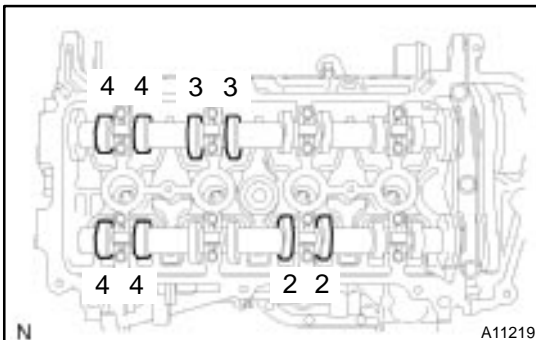

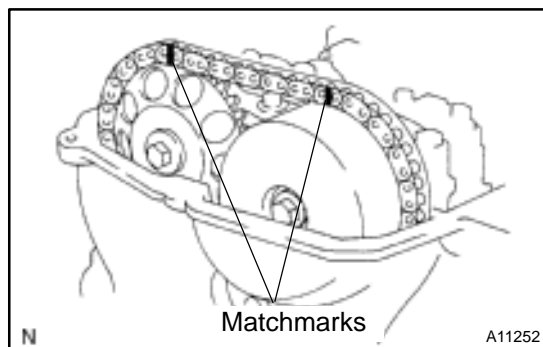

4. ADJUST VALVE CLEARANCE

- (a) Set the No.1 cylinder to the TDC/compression (See procedure in step 2).
- (b) Place matchmarks on the timing chain and camshaft timing sprockets.
- (c) Remove the 2 plug from the timing chain cover.

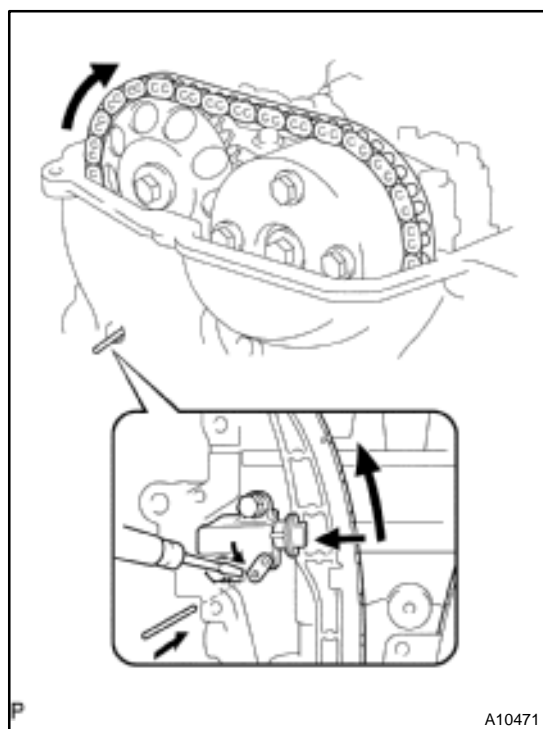

- (d) Using drivers or equipment, while rotating the stopper plate of the tensioner downward, turn the exhaust camshaft right a little and push in the plunger of the chain tensioner as shown in the illustration.

HINT:

When the stopper plate cannot be lowered easily, rotate the exhaust camshaft right and left a little.

- (e) Insert a bar of $\varnothing 2 - 3$ mm (0.08 – 0.12 in.) into the holes in the stopper plate and tensioner to fix the stopper plate.

HINT:

- At this time, it is easier to fix by installing the bar while rotate the camshaft right and left a little.
 - Fix the bar with tape so that the bar does not come off.
- (f) Remove the timing chain from the camshaft timing sprocket.

NOTICE:

- **Never rotate the crankshaft with the timing chain removed.**
- **When rotating the camshaft with the timing chain removed, rotate the crankshaft counterclockwise 40° from the TDC and align the oil jet hole with the paint mark before rotating it.**
- **When installing the timing chain, make sure to return it to the position of the matchmarks for camshaft and then rotate the crankshaft clockwise to return.**

HINT:

When the chain cannot be removed easily, rotate the intake camshaft right and left a little.

- (g) Hold the hexagonal portion of the camshaft with a wrench, and remove the bolt and valve timing controller assembly with the chain.


NOTICE:

Do not disassembled the valve timing controller assembly.

- (h) Remove the intake and exhaust camshaft assembly.

HINT:

When disconnect the timing chain from the camshaft timing sprocket, holding the timing chain.

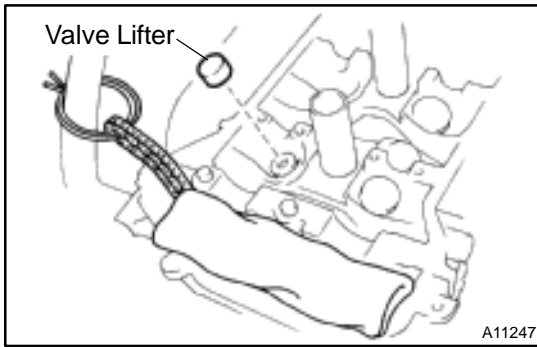


- (i) Tie the timing chain with a string as shown in the illustration.

NOTICE:

- **Be careful not to drop anything inside the timing chain cover.**
- **Do not allow the chain to come into contact with water or dust.**

- (j) Remove the valve lifters.

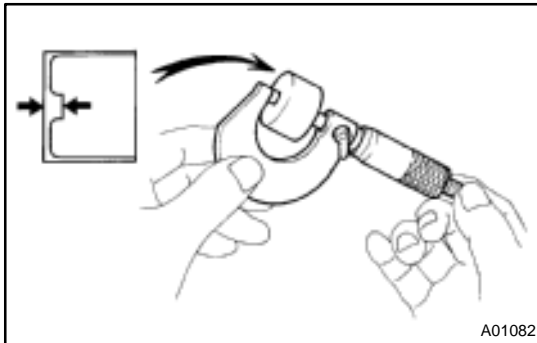

- (k) Determine the replacement valve lifter size according to these Formula or Charts:

- Using a micrometer, measure the thickness of the removed lifter.
- Calculate the thickness of a new lifter so the valve clearance comes within the specified value.

T..... Thickness of used lifter

A..... Measured valve clearance

N..... Thickness of new lifter

Intake $N = T + (A - 0.20 \text{ mm (0.008 in.)})$

Exhaust $N = T + (A - 0.30 \text{ mm (0.012 in.)})$

- Select a new lifter with a thickness as close as possible to the calculated values.

HINT:

Lifter are available in 35 sizes in increments of 0.020 mm (0.0008 in.), from 5.060 mm (0.1992 in.) to 5.740 mm (0.2260 in.).

Valve Lifter Selection Chart (Intake)

Installed (Per Thickness mm (in.))		Measured clearance mm (in.)		5.060 (0.1992)		5.080 (0.2000)		5.100 (0.2000)		5.120 (0.2010)		5.140 (0.2024)		5.160 (0.2031)		5.180 (0.2039)		5.200 (0.2051)		5.220 (0.2063)		5.240 (0.2075)		5.260 (0.2087)		5.280 (0.2099)		5.300 (0.2107)		5.320 (0.2113)		5.340 (0.2119)		5.360 (0.2125)		5.380 (0.2131)		5.400 (0.2137)		5.420 (0.2143)		5.440 (0.2149)		5.460 (0.2155)		5.480 (0.2161)		5.500 (0.2167)		5.520 (0.2173)		5.540 (0.2177)		5.560 (0.2183)		5.580 (0.2189)		5.600 (0.2195)		5.620 (0.2201)		5.640 (0.2207)		5.660 (0.2213)		5.680 (0.2219)		5.700 (0.2225)		5.720 (0.2231)		5.740 (0.2237)		5.760 (0.2243)		5.780 (0.2249)		5.800 (0.2255)		5.820 (0.2261)		5.840 (0.2267)		5.860 (0.2273)		5.880 (0.2279)		5.900 (0.2285)		5.920 (0.2291)		5.940 (0.2297)		5.960 (0.2303)		5.980 (0.2309)		6.000 (0.2315)		6.020 (0.2321)		6.040 (0.2327)		6.060 (0.2333)		6.080 (0.2339)		6.100 (0.2345)		6.120 (0.2351)		6.140 (0.2357)		6.160 (0.2363)		6.180 (0.2369)		6.200 (0.2375)		6.220 (0.2381)		6.240 (0.2387)		6.260 (0.2393)		6.280 (0.2399)		6.300 (0.2405)		6.320 (0.2411)		6.340 (0.2417)		6.360 (0.2423)		6.380 (0.2429)		6.400 (0.2435)		6.420 (0.2441)		6.440 (0.2447)		6.460 (0.2453)		6.480 (0.2459)		6.500 (0.2465)		6.520 (0.2471)		6.540 (0.2477)		6.560 (0.2483)		6.580 (0.2489)		6.600 (0.2495)		6.620 (0.2501)		6.640 (0.2507)		6.660 (0.2513)		6.680 (0.2519)		6.700 (0.2525)		6.720 (0.2531)		6.740 (0.2537)		6.760 (0.2543)		6.780 (0.2549)		6.800 (0.2555)		6.820 (0.2561)		6.840 (0.2567)		6.860 (0.2573)		6.880 (0.2579)		6.900 (0.2585)		6.920 (0.2591)		6.940 (0.2597)		6.960 (0.2603)		6.980 (0.2609)		7.000 (0.2615)		7.020 (0.2621)		7.040 (0.2627)		7.060 (0.2633)		7.080 (0.2639)		7.100 (0.2645)		7.120 (0.2651)		7.140 (0.2657)		7.160 (0.2663)		7.180 (0.2669)		7.200 (0.2675)		7.220 (0.2681)		7.240 (0.2687)		7.260 (0.2693)		7.280 (0.2699)		7.300 (0.2705)		7.320 (0.2711)		7.340 (0.2717)		7.360 (0.2723)		7.380 (0.2729)		7.400 (0.2735)		7.420 (0.2741)		7.440 (0.2747)		7.460 (0.2753)		7.480 (0.2759)		7.500 (0.2765)		7.520 (0.2771)		7.540 (0.2777)		7.560 (0.2783)		7.580 (0.2789)		7.600 (0.2795)		7.620 (0.2801)		7.640 (0.2807)		7.660 (0.2813)		7.680 (0.2819)		7.700 (0.2825)		7.720 (0.2831)		7.740 (0.2837)		7.760 (0.2843)		7.780 (0.2849)		7.800 (0.2855)		7.820 (0.2861)		7.840 (0.2867)		7.860 (0.2873)		7.880 (0.2879)		7.900 (0.2885)		7.920 (0.2891)		7.940 (0.2897)		7.960 (0.2903)		7.980 (0.2909)		8.000 (0.2915)		8.020 (0.2921)		8.040 (0.2927)		8.060 (0.2933)		8.080 (0.2939)		8.100 (0.2945)		8.120 (0.2951)		8.140 (0.2957)		8.160 (0.2963)		8.180 (0.2969)		8.200 (0.2975)		8.220 (0.2981)		8.240 (0.2987)		8.260 (0.2993)		8.280 (0.2999)		8.300 (0.3005)		8.320 (0.3011)		8.340 (0.3017)		8.360 (0.3023)		8.380 (0.3029)		8.400 (0.3035)		8.420 (0.3041)		8.440 (0.3047)		8.460 (0.3053)		8.480 (0.3059)		8.500 (0.3065)		8.520 (0.3071)		8.540 (0.3077)		8.560 (0.3083)		8.580 (0.3089)		8.600 (0.3095)		8.620 (0.3101)		8.640 (0.3107)		8.660 (0.3113)		8.680 (0.3119)		8.700 (0.3125)		8.720 (0.3131)		8.740 (0.3137)		8.760 (0.3143)		8.780 (0.3149)		8.800 (0.3155)		8.820 (0.3161)		8.840 (0.3167)		8.860 (0.3173)		8.880 (0.3179)		8.900 (0.3185)		8.920 (0.3191)		8.940 (0.3197)		8.960 (0.3203)		8.980 (0.3209)		9.000 (0.3215)		9.020 (0.3221)		9.040 (0.3227)		9.060 (0.3233)		9.080 (0.3239)		9.100 (0.3245)		9.120 (0.3251)		9.140 (0.3257)		9.160 (0.3263)		9.180 (0.3269)		9.200 (0.3275)		9.220 (0.3281)		9.240 (0.3287)		9.260 (0.3293)		9.280 (0.3299)		9.300 (0.3305)		9.320 (0.3311)		9.340 (0.3317)		9.360 (0.3323)		9.380 (0.3329)		9.400 (0.3335)		9.420 (0.3341)		9.440 (0.3347)		9.460 (0.3353)		9.480 (0.3359)		9.500 (0.3365)		9.520 (0.3371)		9.540 (0.3377)		9.560 (0.3383)		9.580 (0.3389)		9.600 (0.3395)		9.620 (0.3401)		9.640 (0.3407)		9.660 (0.3413)		9.680 (0.3419)		9.700 (0.3425)		9.720 (0.3431)		9.740 (0.3437)		9.760 (0.3443)		9.780 (0.3449)		9.800 (0.3455)		9.820 (0.3461)		9.840 (0.3467)		9.860 (0.3473)		9.880 (0.3479)		9.900 (0.3485)		9.920 (0.3491)		9.940 (0.3497)		9.960 (0.3503)		9.980 (0.3509)		10.000 (0.3515)		10.020 (0.3521)		10.040 (0.3527)		10.060 (0.3533)		10.080 (0.3539)		10.100 (0.3545)		10.120 (0.3551)		10.140 (0.3557)		10.160 (0.3563)		10.180 (0.3569)		10.200 (0.3575)		10.220 (0.3581)		10.240 (0.3587)		10.260 (0.3593)		10.280 (0.3599)		10.300 (0.3605)		10.320 (0.3611)		10.340 (0.3617)		10.360 (0.3623)		10.380 (0.3629)		10.400 (0.3635)		10.420 (0.3641)		10.440 (0.3647)		10.460 (0.3653)		10.480 (0.3659)		10.500 (0.3665)		10.520 (0.3671)		10.540 (0.3677)		10.560 (0.3683)		10.580 (0.3689)		10.600 (0.3695)		10.620 (0.3701)		10.640 (0.3707)		10.660 (0.3713)		10.680 (0.3719)		10.700 (0.3725)		10.720 (0.3731)		10.740 (0.3737)		10.760 (0.3743)		10.780 (0.3749)		10.800 (0.3755)		10.820 (0.3761)		10.840 (0.3767)		10.860 (0.3773)		10.880 (0.3779)		10.900 (0.3785)		10.920 (0.3791)		10.940 (0.3797)		10.960 (0.3803)		10.980 (0.3809)		11.000 (0.3815)		11.020 (0.3821)		11.040 (0.3827)		11.060 (0.3833)		11.080 (0.3839)		11.100 (0.3845)		11.120 (0.3851)		11.140 (0.3857)		11.160 (0.3863)		11.180 (0.3869)		11.200 (0.3875)		11.220 (0.3881)		11.240 (0.3887)		11.260 (0.3893)		11.280 (0.3899)		11.300 (0.3905)		11.320 (0.3911)		11.340 (0.3917)		11.360 (0.3923)		11.380 (0.3929)		11.400 (0.3935)		11.420 (0.3941)		11.440 (0.3947)		11.460 (0.3953)		11.480 (0.3959)		11.500 (0.3965)		11.520 (0.3971)		11.540 (0.3977)		11.560 (0.3983)		11.580 (0.3989)		11.600 (0.3995)		11.620 (0.4001)		11.640 (0.4007)		11.660 (0.4013)		11.680 (0.4019)		11.700 (0.4025)		11.720 (0.4031)		11.740 (0.4037)		11.760 (0.4043)		11.780 (0.4049)		11.800 (0.4055)		11.820 (0.4061)		11.840 (0.4067)		11.860 (0.4073)		11.880 (0.4079)		11.900 (0.4085)		11.920 (0.4091)		11.940 (0.4097)		11.960 (0.4103)		11.980 (0.4109)		12.000 (0.4115)		12.020 (0.4121)		12.040 (0.4127)		12.060 (0.4133)		12.080 (0.4139)		12.100 (0.4145)		12.120 (0.4151)		12.140 (0.4157)		12.160 (0.4163)		12.180 (0.4169)		12.200 (0.4175)		12.220 (0.4181)		12.240 (0.4187)		12.260 (0.4193)		12.280 (0.4199)		12.300 (0.4205)		12.320 (0.4211)		12.340 (0.4217)		12.360 (0.4223)		12.380 (0.4229)		12.400 (0.4235)		12.420 (0.4241)		12.440 (0.4247)		12.460 (0.4253)		12.480 (0.4259)		12.500 (0.4265)		12.520 (0.4271)		12.540 (0.4277)		12.560 (0.4283)		12.580 (0.4289)		12.600 (0.4295)		12.620 (0.4301)		12.640 (0.4307)		12.660 (0.4313)		12.680 (0.4319)		12.700 (0.4325)		12.720 (0.4331)		12.740 (0.4337)		12.760 (0.4343)		12.780 (0.4349)		12.800 (0.4355)		12.820 (0.4361)		12.840 (0.4367)		12.860 (0.4373)		12.880 (0.4379)		12.900 (0.4385)		12.920 (0.4391)		12.940 (0.4397)		12.960 (0.4403)		12.980 (0.4409)		13.000 (0.4415)		13.020 (0.4421)		13.040 (0.4427)		13.060 (0.4433)		13.080 (0.4439)		13.100 (0.4445)		13.120 (0.4451)		13.140 (0.4457)		13.160 (0.4463)		13.180 (0.4469)		13.200 (0.4475)		13.220 (0.4481)		13.240 (0.4487)		13.260 (0.4493)		13.280 (0.4499)		13.300 (0.4505)		13.320 (0.4511)		13.340 (0.4517)		13.360 (0.4523)		13.380 (0.4529)		13.400 (0.4535)		13.420 (0.4541)		13.440 (0.4547)		13.460 (0.4553)		13.480 (0.4559)		13.500 (0.4565)		13.520 (0.4571)		13.540 (0.4577)		13.560 (0.4583)		13.580 (0.4589)		13.600 (0.4595)		13.620 (0.4601)		13.640 (0.4607)		13.660 (0.4613)		13.680 (0.4619)		13.700 (0.4625)		13.720 (0.4631)		13.740 (0.4637)		13.760 (0.4643)		13.780 (0.4649)		13.800 (0.4655)		13.820 (0.4661)		13.840 (0.4667)		13.860 (0.4673)		13.880 (0.4679)		13.900 (0.4685)		13.920 (0.4691)		13.940 (0.4697)		13.960 (0.4703)		13.980 (0.4709)		14.000 (0.4715)		14.020 (0.4721)		14.040 (0.4727)		14.060 (0.4733)		14.080 (0.4739)		14.100 (0.4745)		14.120 (0.4751)		14.140 (0.4757)		14.160 (0.4763)		14.180 (0.4769)		14.200 (0.4775)		14.220 (0.4781)		14.240 (0.4787)		14.260 (0.4793)		14.280 (0.4799)		14.300 (0.4805)		14.320 (0.4811)		14.340 (0.4817)		14.360 (0.4823)		14.380 (0.4829)		14.400 (0.4835)		14.420 (0.4841)		14.440 (0.4847)		14.460 (0.4853)		14.480 (0.4859)		14.500 (0.4865)		14.520 (0.4871)		14.540 (0.4877)		14.560 (0.4883)		14.580 (0.4889)		14.600 (0.4895)		14.620 (0.4901)		14.640 (0.4907)		14.660 (0.4913)		14.680 (0.4919)		14.700 (0.4925)		14.720 (0.4931)		14.740 (0.4937)		14.760 (0.4943)		14.780 (0.4949)		14.800 (0.4955)		14.820 (0.4961)		14.840 (0.4967)		14.860 (0.4973)		14.880 (0.4979)		14.900 (0.4985)		14.920 (0.4991)		14.940 (0.4997)		14.960 (0.5003)		14.980 (0.5009)		15.000 (0.5015)		15.020 (0.5021)		15.040 (0.5027)		15.060 (0.5033)		15.080 (0.5039)		15.100 (0.5045)		15.120 (0.5051)		15.140 (0.5057)		15.160 (0.5063)		15.180 (0.5069)		15.200 (0.5075)		15.220 (0.5081)		15.240 (0.5087)		15.260 (0.5093)		15.280 (0.5099)		15.300 (0.5105)		15.320 (0.5111)		15.340 (0.5117)		15.360 (0.5123)		15.380 (0.5129)		15.400 (0.5135)		15.420 (0.5141)		15.440 (0.5147)		15.460 (0.5153)		15.480 (0.5159)		15.500 (0.5165)		15.520 (0.5171)		15.540 (0.5177)		15.560 (0.5183)		15.580 (0.5189)		15.600 (0.5195)		15.620 (0.5201)		15.640 (0.5207)		15.660 (0.5213)		15.680 (0.5219)		15.700 (0.5225)		15.720 (0.5231)		15.740 (0.5237)		15.760 (0.5243)		15.780 (0.5249)		15.800 (0.5255)		15.820 (0.5261)		15.840 (0.5267)		15.860 (0.5273)		15.880 (0.5279)		15.900 (0.5285)		15.920 (0.5291)		15.940 (0.5297)		15.960 (0.5303)		15.980 (0.5309)		16.000 (0.5315)		16.020 (0.5321)		16.040 (0.5327)		16.060 (0.5333)		16.080 (0.5339)		16.100 (0.5345)		16.120 (0.5351)		16.140 (0.5357)		16.160 (0.5363)		16.180 (0.5369)		16.200 (0.5375)		16.220 (0.5381)		16.240 (0.5387)		16.260 (0.5393)		16.280 (0.5399)		16.300 (0.5405)		16.320 (0.5411)		16.340 (0.5417)		16.360 (0.5423)		16.380 (0.5429)		16.400 (0.5435)		16.420 (0.5441)		16.440 (0.5447)		16.460 (0.5453)		16.480 (0.5459)		16.500 (0.5465)		16.520 (0.5471)		16.540 (0.5477)		16.560 (0.5483)		16.580 (0.5489)		16.600 (0.5495)		16.620 (0.5501)		16.640 (0.5507)		16.660 (0.5513)		16.680 (0.5519)		16.700 (0.5525)		16.720 (0.5531)		16.740 (0.5537)		16.760 (0.5543)		16.780 (0.5549)		16.800 (0.5555)		16.820 (0.5561)		16.840 (0.5567)		16.860 (0.5573)		16.880 (0.5579)		16.900 (0.5585)		16.920 (0.5591)		16.940 (0.5597)		16.960 (0.5603)		16.980 (0.5609)		17.000 (0.5615)		17.020 (0.5621)		17.040 (0	
---------------------------------------	--	--------------------------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------------	--	-----------	--

Intake valve clearance (Cold):
0.15 – 0.25 mm (0.006 – 0.010 in.)

EXAMPLE: The 5.250 mm (0.2067 in.) lifter is installed, and the measured clearance is 0.400 mm (0.0157 in.).

Replace the 5.250 mm (0.2067 in.) lifter with a new No. 46 lifter.

New lifter thickness mm (in.)					
Lifter No.	Thickness	Lifter No.	Thickness	Lifter No.	Thickness
06	5.060 (0.1992)	30	5.300 (0.2087)	54	5.540 (0.2181)
08	5.080 (0.2000)	32	5.320 (0.2094)	56	5.560 (0.2189)
10	5.100 (0.2008)	34	5.340 (0.2102)	58	5.580 (0.2197)
12	5.120 (0.2016)	36	5.360 (0.2110)	60	5.600 (0.2205)
14	5.140 (0.2024)	38	5.380 (0.2118)	62	5.620 (0.2213)
16	5.160 (0.2031)	40	5.400 (0.2126)	64	5.640 (0.2220)
18	5.180 (0.2039)	42	5.420 (0.2134)	66	5.660 (0.2228)
20	5.200 (0.2047)	44	5.440 (0.2142)	68	5.680 (0.2236)
22	5.220 (0.2055)	46	5.460 (0.2150)	70	5.700 (0.2244)
24	5.240 (0.2063)	48	5.480 (0.2157)	72	5.720 (0.2252)
26	5.260 (0.2071)	50	5.500 (0.2165)	74	5.740 (0.2260)
28	5.280 (0.2079)	52	5.520 (0.2173)		

Valve Lifter Selection Chart (Exhaust)

Measured clearance mm (in.)	Installed after thickness mm (in.)		5.060 (0.1992)		5.080 (0.2000)		5.100 (0.2008)		5.120 (0.2016)		5.140 (0.2024)		5.160 (0.2032)		5.180 (0.2040)		5.200 (0.2048)		5.220 (0.2056)		5.240 (0.2064)		5.260 (0.2072)		5.280 (0.2080)		5.300 (0.2088)		5.320 (0.2096)		5.340 (0.2104)		5.360 (0.2112)		5.380 (0.2120)		5.400 (0.2128)		5.420 (0.2136)		5.440 (0.2144)		5.460 (0.2152)		5.480 (0.2160)		5.500 (0.2168)		5.520 (0.2176)		5.540 (0.2184)		5.560 (0.2192)		5.580 (0.2200)		5.600 (0.2208)		5.620 (0.2216)		5.640 (0.2224)		5.660 (0.2232)		5.680 (0.2240)		5.700 (0.2248)		5.720 (0.2256)		5.740 (0.2264)																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																							
	0.030 - 0.036 (0.0012 - 0.0014)	0.037 - 0.043 (0.0015 - 0.0017)	0.044 - 0.050 (0.0017 - 0.0019)	0.051 - 0.057 (0.0020 - 0.0022)	0.058 - 0.064 (0.0023 - 0.0025)	0.065 - 0.071 (0.0026 - 0.0028)	0.072 - 0.078 (0.0029 - 0.0031)	0.079 - 0.085 (0.0032 - 0.0034)	0.086 - 0.092 (0.0035 - 0.0037)	0.093 - 0.099 (0.0038 - 0.0040)	0.100 - 0.106 (0.0041 - 0.0043)	0.107 - 0.113 (0.0044 - 0.0046)	0.114 - 0.120 (0.0047 - 0.0049)	0.121 - 0.127 (0.0050 - 0.0052)	0.128 - 0.134 (0.0053 - 0.0055)	0.135 - 0.141 (0.0056 - 0.0058)	0.142 - 0.148 (0.0059 - 0.0061)	0.149 - 0.155 (0.0062 - 0.0064)	0.156 - 0.162 (0.0065 - 0.0067)	0.163 - 0.169 (0.0068 - 0.0070)	0.170 - 0.176 (0.0071 - 0.0073)	0.177 - 0.183 (0.0074 - 0.0076)	0.184 - 0.190 (0.0077 - 0.0079)	0.191 - 0.197 (0.0080 - 0.0082)	0.198 - 0.204 (0.0083 - 0.0085)	0.205 - 0.211 (0.0086 - 0.0088)	0.212 - 0.218 (0.0089 - 0.0091)	0.219 - 0.225 (0.0092 - 0.0094)	0.226 - 0.232 (0.0095 - 0.0097)	0.233 - 0.239 (0.0098 - 0.0100)	0.240 - 0.246 (0.0101 - 0.0103)	0.247 - 0.253 (0.0104 - 0.0106)	0.254 - 0.260 (0.0107 - 0.0109)	0.261 - 0.267 (0.0110 - 0.0112)	0.268 - 0.274 (0.0113 - 0.0115)	0.275 - 0.281 (0.0116 - 0.0118)	0.282 - 0.288 (0.0119 - 0.0121)	0.289 - 0.295 (0.0122 - 0.0124)	0.296 - 0.302 (0.0125 - 0.0127)	0.303 - 0.309 (0.0128 - 0.0130)	0.310 - 0.316 (0.0131 - 0.0133)	0.317 - 0.323 (0.0134 - 0.0136)	0.324 - 0.330 (0.0137 - 0.0139)	0.331 - 0.337 (0.0140 - 0.0142)	0.338 - 0.344 (0.0143 - 0.0145)	0.345 - 0.351 (0.0146 - 0.0148)	0.352 - 0.358 (0.0149 - 0.0151)	0.359 - 0.365 (0.0152 - 0.0154)	0.366 - 0.372 (0.0155 - 0.0157)	0.373 - 0.379 (0.0158 - 0.0160)	0.380 - 0.386 (0.0161 - 0.0163)	0.387 - 0.393 (0.0164 - 0.0166)	0.394 - 0.400 (0.0167 - 0.0169)	0.401 - 0.407 (0.0170 - 0.0172)	0.408 - 0.414 (0.0173 - 0.0175)	0.415 - 0.421 (0.0176 - 0.0178)	0.422 - 0.428 (0.0179 - 0.0181)	0.429 - 0.435 (0.0182 - 0.0184)	0.436 - 0.442 (0.0185 - 0.0187)	0.443 - 0.449 (0.0188 - 0.0190)	0.450 - 0.456 (0.0191 - 0.0193)	0.457 - 0.463 (0.0194 - 0.0196)	0.464 - 0.470 (0.0197 - 0.0199)	0.471 - 0.477 (0.0200 - 0.0202)	0.478 - 0.484 (0.0203 - 0.0205)	0.485 - 0.491 (0.0206 - 0.0208)	0.492 - 0.498 (0.0209 - 0.0211)	0.499 - 0.505 (0.0212 - 0.0214)	0.506 - 0.512 (0.0215 - 0.0217)	0.513 - 0.519 (0.0218 - 0.0220)	0.520 - 0.526 (0.0221 - 0.0223)	0.527 - 0.533 (0.0224 - 0.0226)	0.534 - 0.540 (0.0227 - 0.0229)	0.541 - 0.547 (0.0230 - 0.0232)	0.548 - 0.554 (0.0233 - 0.0235)	0.555 - 0.561 (0.0236 - 0.0238)	0.562 - 0.568 (0.0239 - 0.0241)	0.569 - 0.575 (0.0242 - 0.0244)	0.576 - 0.582 (0.0245 - 0.0247)	0.583 - 0.589 (0.0248 - 0.0250)	0.590 - 0.596 (0.0251 - 0.0253)	0.597 - 0.603 (0.0254 - 0.0256)	0.604 - 0.610 (0.0257 - 0.0259)	0.611 - 0.617 (0.0260 - 0.0262)	0.618 - 0.624 (0.0263 - 0.0265)	0.625 - 0.631 (0.0266 - 0.0268)	0.632 - 0.638 (0.0269 - 0.0271)	0.639 - 0.645 (0.0272 - 0.0274)	0.646 - 0.652 (0.0275 - 0.0277)	0.653 - 0.659 (0.0278 - 0.0280)	0.660 - 0.666 (0.0281 - 0.0283)	0.667 - 0.673 (0.0284 - 0.0286)	0.674 - 0.680 (0.0287 - 0.0289)	0.681 - 0.687 (0.0290 - 0.0292)	0.688 - 0.694 (0.0293 - 0.0295)	0.695 - 0.701 (0.0296 - 0.0298)	0.702 - 0.708 (0.0299 - 0.0301)	0.709 - 0.715 (0.0302 - 0.0304)	0.716 - 0.722 (0.0305 - 0.0307)	0.723 - 0.729 (0.0308 - 0.0310)	0.730																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																									
0.030 - 0.036 (0.0012 - 0.0014)																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																														</


Exhaust valve clearance (Cold):

0.25 – 0.35 mm (0.010 – 0.014 in.)


EXAMPLE: The 5.340 mm (0.2102 in.) lifter is installed, and the measured clearance is 0.440 mm (0.0173 in.).

Replace the 5.340 mm (0.2102 in.) lifter with a new No. 48 lifter.


- (l) Reinstall the valve lifters (See page [EM-43](#)).
- (m) Align the crankshaft pulley groove with the timing mark "0" of the timing chain cover.
- (n) Hold the timing chain, and place the exhaust camshaft and timing sprocket assembly.
- (o) Align the matchmarks on the timing chain and camshaft timing sprocket.

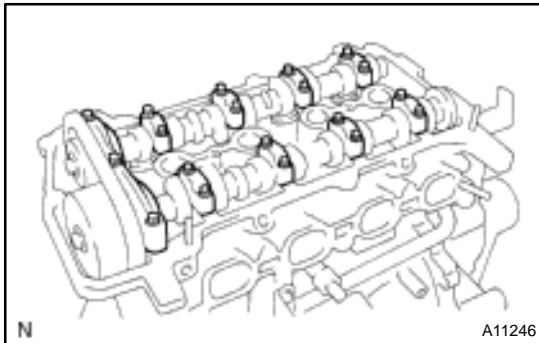

- (p) Reinstall the intake camshaft, valve timing controller assembly and camshaft bearing caps (See page [EM-45](#)).
- (q) Remove the bar from the timing chain tensioner.

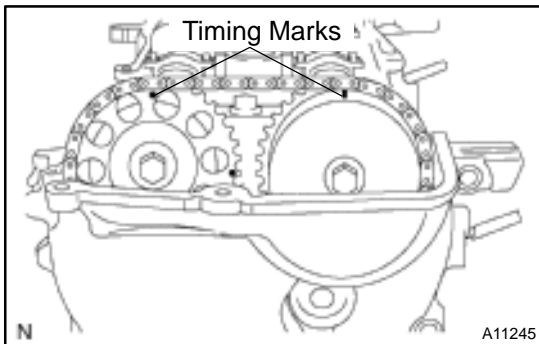

- (r) Check that both timing marks on the camshaft timing sprocket and valve timing controller assembly are facing right up as shown in the illustration.

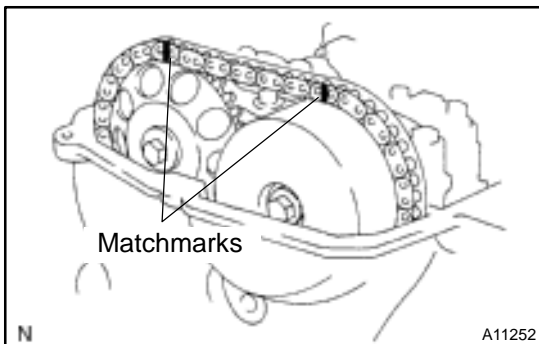



- (s) Check that the matchmarks on the timing chain and camshaft timing sprockets.
- (t) Install a new plug to the timing chain cover.
Torque: 15 N·m (150 kgf-cm, 11 ft-lbf)
- (u) Recheck the valve clearance (See procedure in step 3).
- (v) Check the valve timing (See page [EM-19](#)).

5. REINSTALL CYLINDER HEAD COVER
(See page [EM-21](#))

TIMING CHAIN COMPONENTS


EM173-04

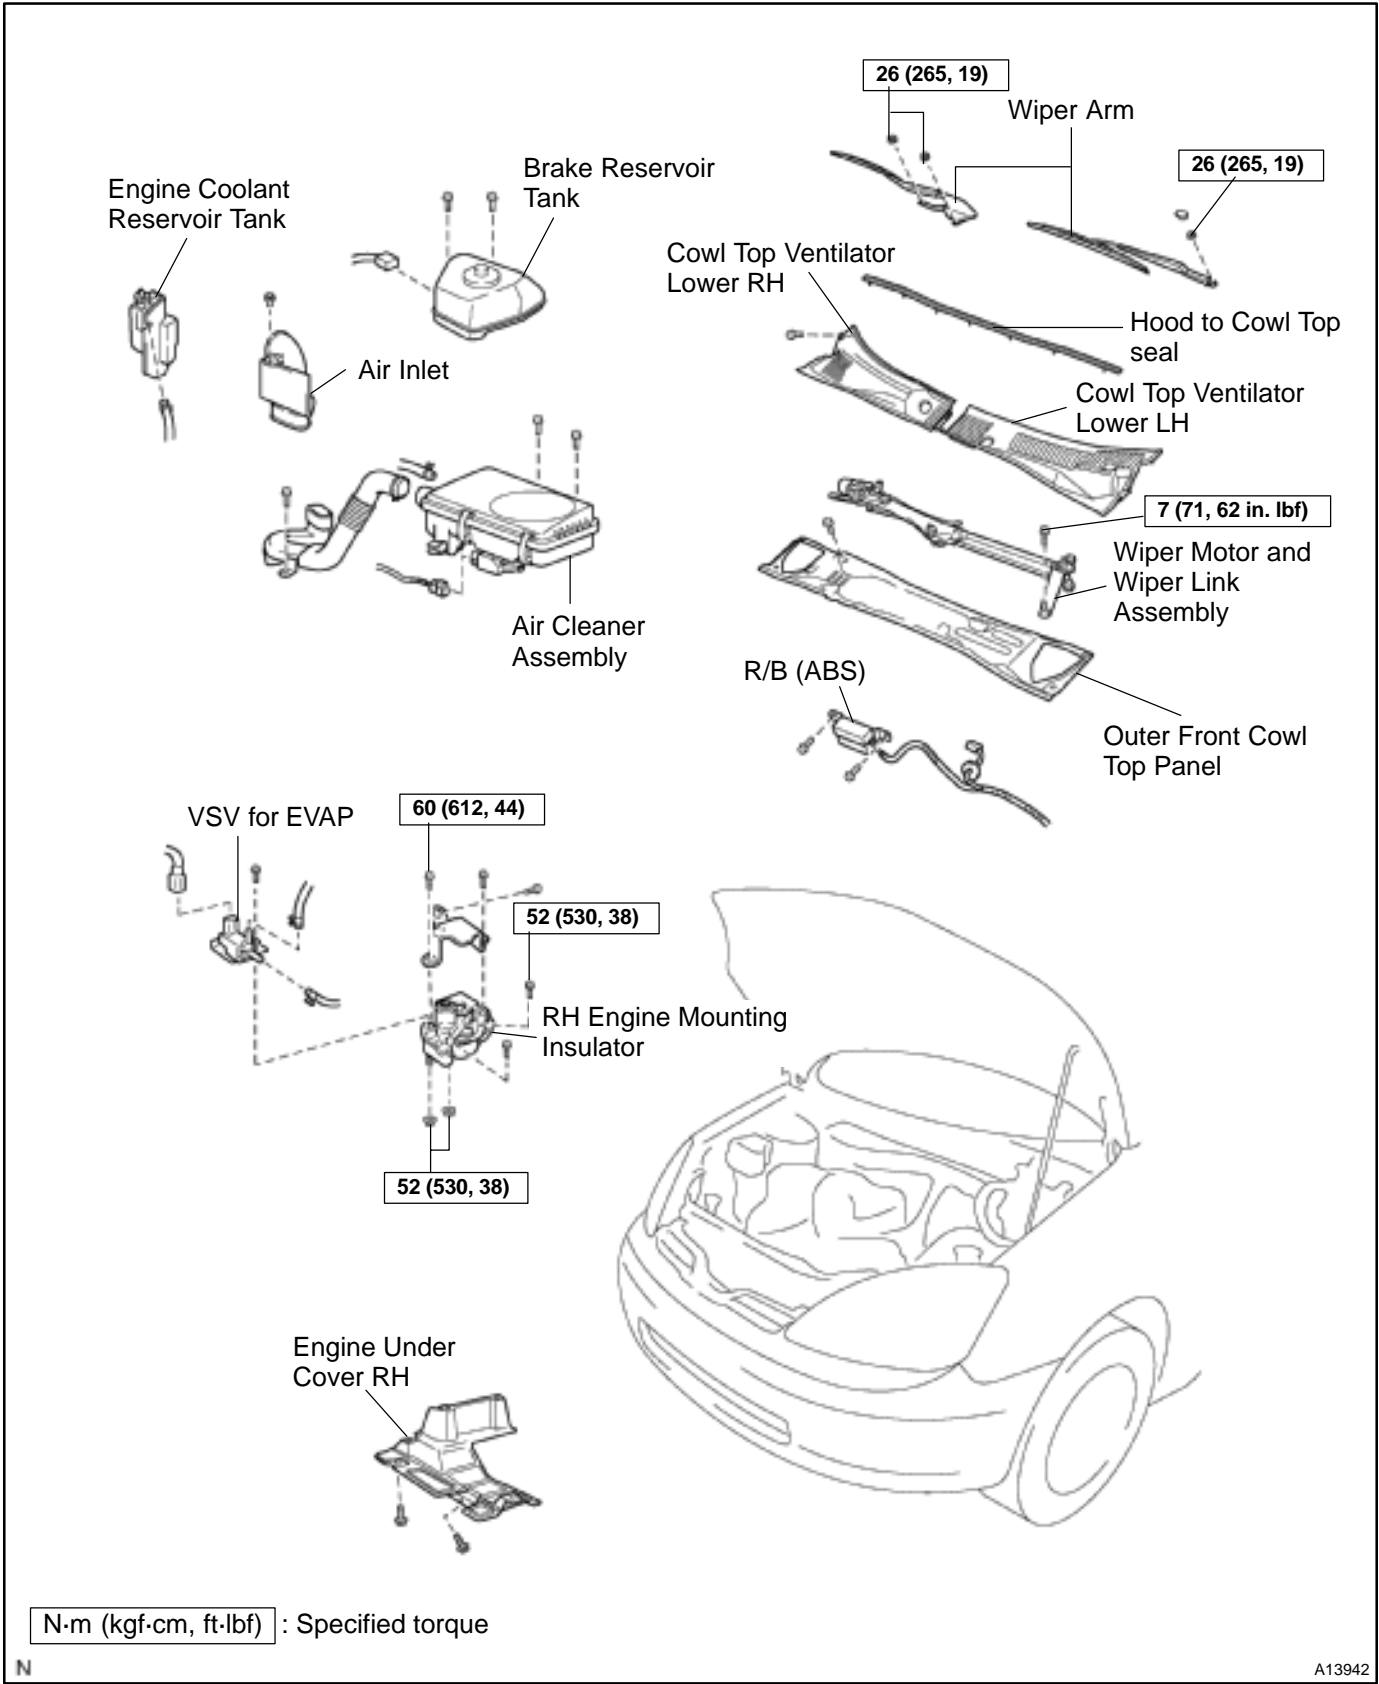

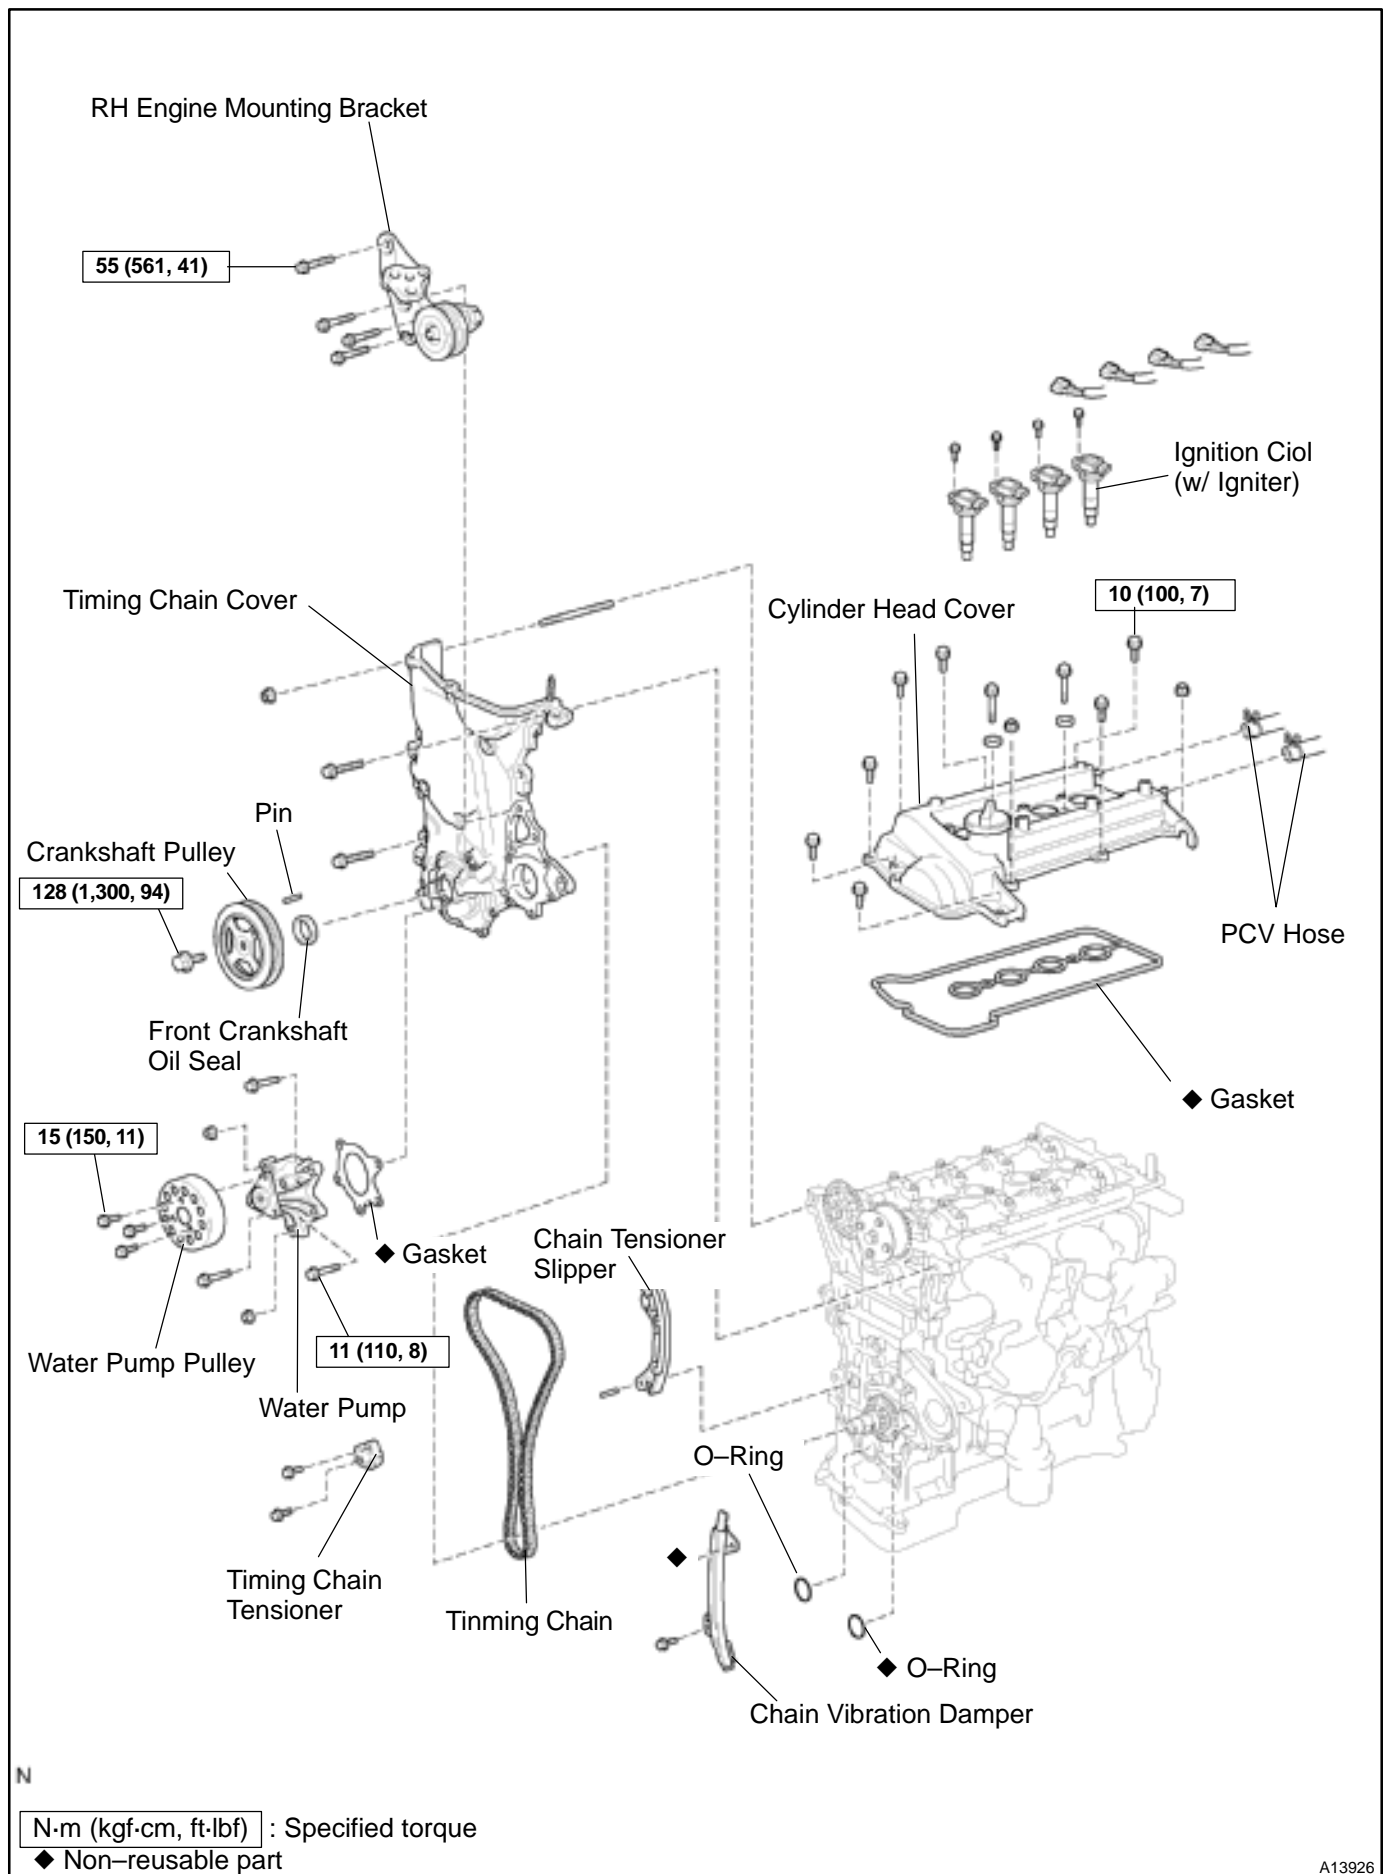


REMOVAL

1. **DISCONNECT BATTERY NEGATIVE (-) TERMINAL AND HV BATTERY SERVICE PLUG**
(See page [HV-1](#))
2. **REMOVE OUTER FR COWL TOP PANEL ASSEMBLY**
(See page [BO-32](#))
3. **REMOVE RH ENGINE UNDER COVER**
4. **DRAIN ENGINE COOLANT**

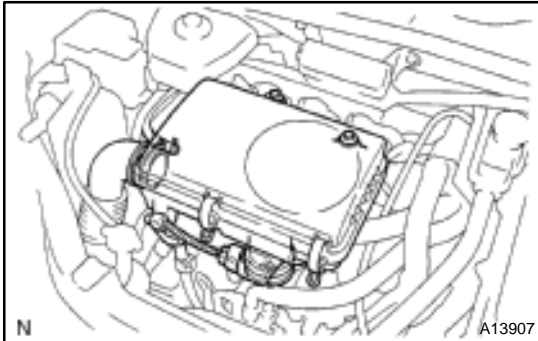

5. **REMOVE AIR CLEANER ASSEMBLY**
 - (a) Disconnect the MAF meter connector.
 - (b) Disconnect the EVAP hose from the air cleaner case.
 - (c) Loosen the 2 hose clamps.
 - (d) Remove the 3 bolts and air cleaner assembly.

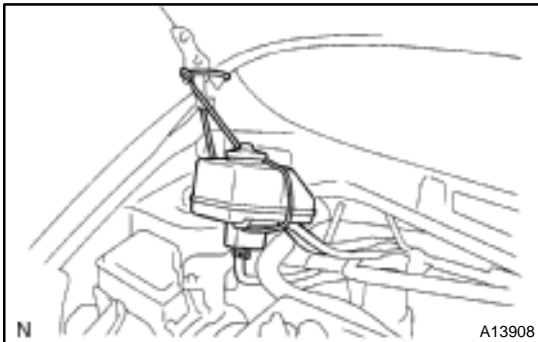



6. **REMOVE BRAKE RESERVOIR TANK**
 - (a) Disconnect the brake fluid level sensor connector.
 - (b) Remove the 2 bolts and remove the reservoir tank and suspend it.
 - (c) Remove the 3 bolts and reservoir tank bracket.



7. **DISCONNECT CONNECTORS**
 - (a) Disconnect the 4 ignition connectors.
 - (b) Disconnect the 4 injector connectors.
 - (c) Disconnect the 2 VSV connectors.
 - (d) Disconnect the camshaft position sensor connector.
 - (e) Disconnect the water temperature connector.
 - (f) Disconnect the Camshaft timing oil control valve connector.

8. **REMOVE AIR INLET**
9. **REMOVE ENGINE COOLANT RESERVOIR TANK**
10. **REMOVE VSV FROM ENGINE MOUNTING INSULATOR**
11. **REMOVE DRIVE BELT**

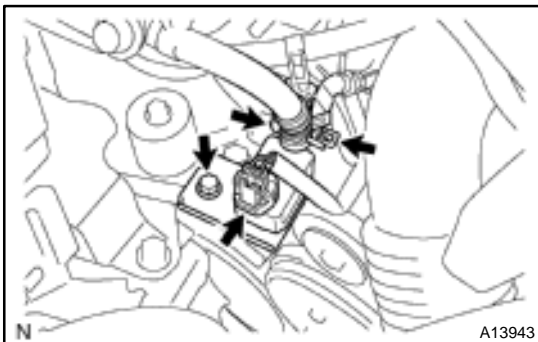

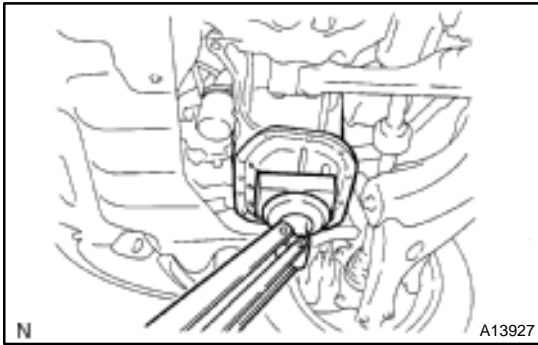**12. REMOVE RH ENGINE MOUNTING INSULATOR**

- (a) Set the jack to the engine.

HINT:


Place the wooden block between the jack and engine.




- (b) Remove the 5 bolts, 2 nuts and RH engine mounting insulator.

13. DISCONNECT ENGINE WIRE FROM CYLINDER HEAD COVER


Remove the 3 bolts and disconnect the engine wire from the cylinder head.

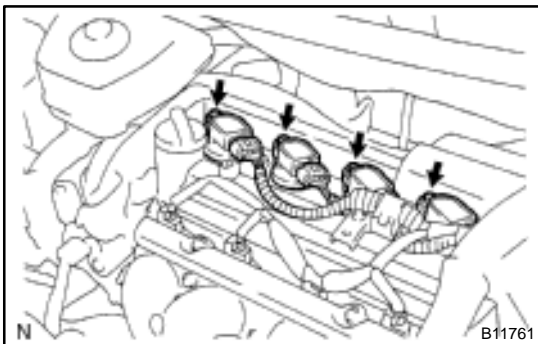**14. REMOVE CYLINDER HEAD COVER**


- (a) Remove the ignition coils (See page IG-6)
 (b) Remove the 2 PCV hoses from the cylinder head cover.

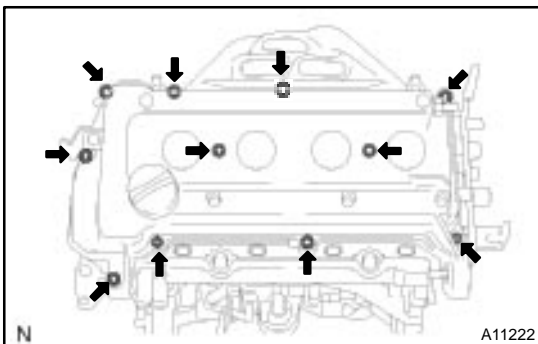

- (c) Remove the 7 bolts, 2 seal washers, 2 nuts, cylinder head cover and gasket.

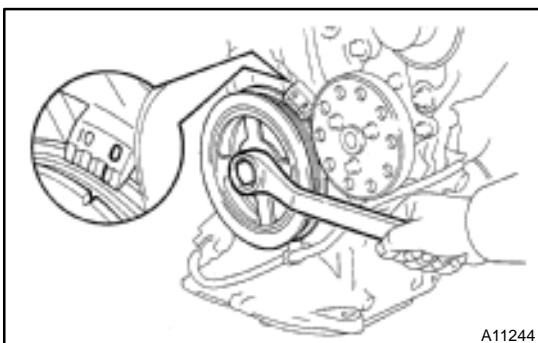
**15. SET NO.1 CYLINDER TO TDC/COMPRESSION**

- (a) Turn the crankshaft pulley, and align its groove with timing mark "0" of the timing chain cover.

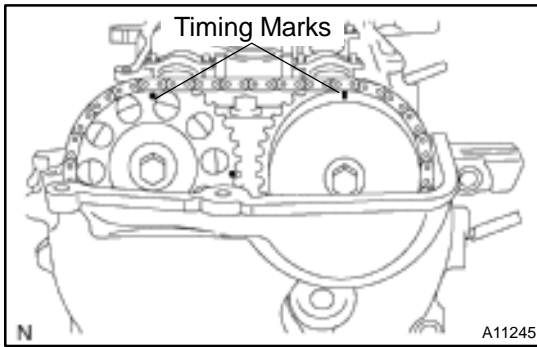


- (b) Check that both timing marks on the camshaft timing sprocket and valve timing controller assembly are facing right up as shown in the illustration.

If not, turn the crankshaft 1 revolution (360°) and align the marks as above.

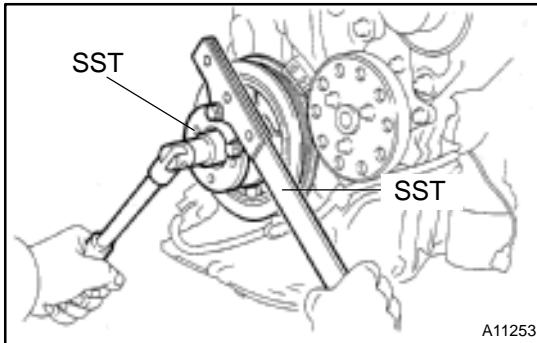

16. REMOVE CRANKSHAFT PULLEY


- (a) Using SST, remove the pulley bolt.
SST 09213-70010, 09330-00021
(b) Remove the crankshaft pulley and pin.

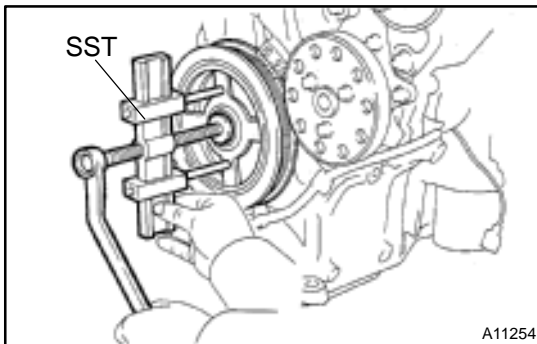

HINT:

If necessary, remove the pulley with SST.

SST 09950-50012 (09951-05010, 09952-05010, 09953-05020, 09954-05020)

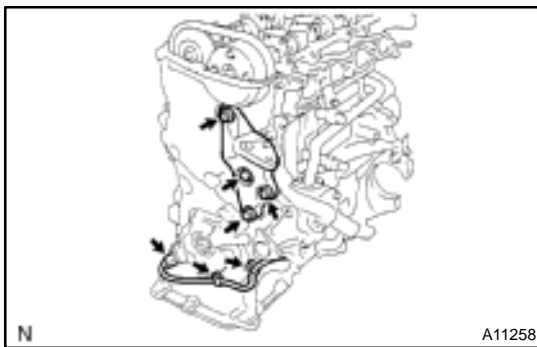


17. REMOVE CRANKSHAFT POSITION SENSOR (See page IG-12)

18. REMOVE RH ENGINE MOUNTING BRACKET

Remove the 4 bolts and mounting bracket.

19. REMOVE WATER PUMP (See page CO-6)

20. REMOVE OIL CONTROL VALVE (See page EM-29)

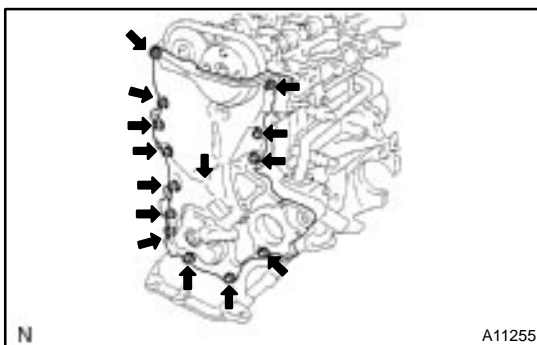

21. REMOVE TIMING CHAIN COVER

- (a) Remove the 13 bolts and nut.
(b) Using a torx wrench socket (E8), remove the stud bolt.
(c) Remove the timing chain cover by prying the portions between the cylinder head and cylinder block with a screwdriver.

NOTICE:

Be careful not to damage the contact surfaces of the timing chain cover, cylinder head and cylinder block.

- (d) Remove the 2 O-rings from the cylinder block and oil pan No.1.

22. REMOVE CHAIN TENSIONER


Remove the 2 bolts and chain tensioner.

23. REMOVE CHAIN TENSIONER SLIPPER

24. REMOVE CHAIN VIBRATION DAMPER

Remove the 2 bolts and damper.

25. REMOVE TIMING CHAIN

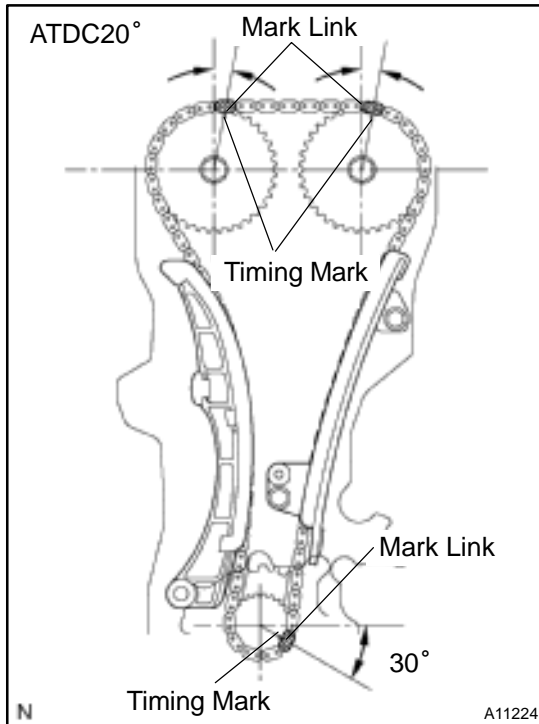

INSTALLATION


1. INSTALL TIMING CHAIN

- (a) After setting the crankshaft at ATDC40–140 °, set cams of intake and exhaust timing sprockets at ATDC 20 ° and then the reset the crankshaft at ATDC 20 °.
- (b) Install the chain vibration damper with the 2 bolts.
Torque: 9.0 N·m (92 kgf·cm, 80 in.-lbf)
- (c) Align the match marks of timing chain mark plate (Yellow), camshaft timing sprocket, camshaft timing gear and crankshaft timing sprocket to install the timing chain as shown in the illustration.

HINT:


To prevent the exhaust camshaft from spring back turn it using a wrench and set it at the mark on a chain.

- (d) Install the chain tensioner slipper.

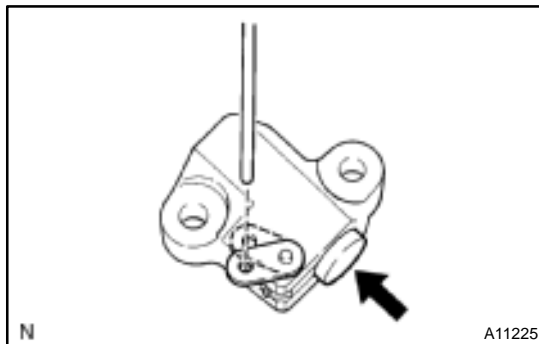

2. INSTALL CHAIN TENSIONER

- (a) While rotating the lock plate of the tensioner up-ward, push in the plunger of the tensioner as shown in the illustration.
- (b) While rotating the lock plate of the tensioner down-ward, insert a bar of 2.5 mm (0.098 in.) into the holes in the lock plate.
- (c) Install the chain tensioner with the 2 bolts.
Torque: 9.0 N·m (92 kgf·cm, 80 in.-lbf)
- (d) Remove the bar from the chain tensioner.
- (e) Check that the tension between the intake and exhaust camshaft timing sprocket.

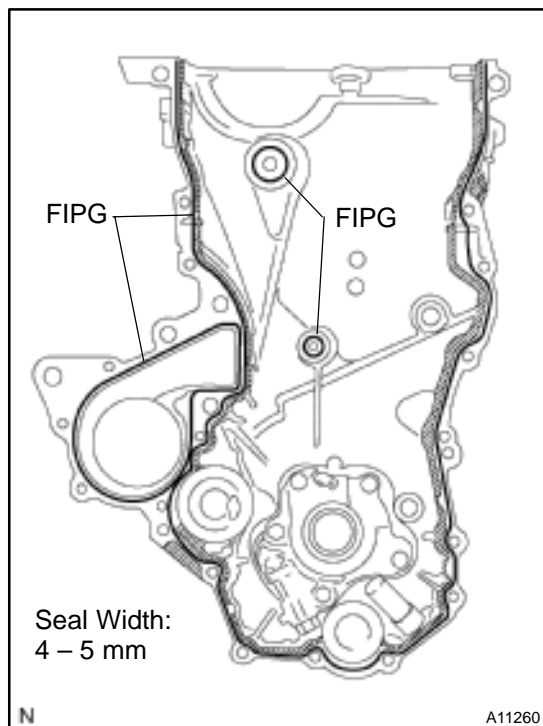

3. INSTALL TIMING CHAIN COVER AND WATER PUMP

- (a) Remove any old packing (FIPG) material and be careful not to drop any oil on the contact surfaces of the timing chain cover, cylinder head and cylinder block.
- Using a razor blade and a gasket scraper, remove all the old packing (FIPG) material from the gasket surfaces and sealing grooves.
 - Thoroughly clean all components to remove all the loose material.
 - Using a non-residue solvent, clean both sealing surfaces.
- (b) Apply seal packing to the timing chain cover as shown in the illustration.

Seal packing:


Part No. 08826 – 00100 or equivalent

- Install a nozzle that has been cut to a 4 – 5 mm (0.16 – 0.20 in.) opening.
- FIPG shall be accumulated in the groove for FIPG to a depth of 2.5 mm (0.10 in.) or more.

HINT:

Avoid applying an excessive amount to the surface.

- Parts must be assembled within 3 minutes of application. Otherwise the material must be removed and reapplied.
- Immediately remove nozzle from the tube and reinstall cap.

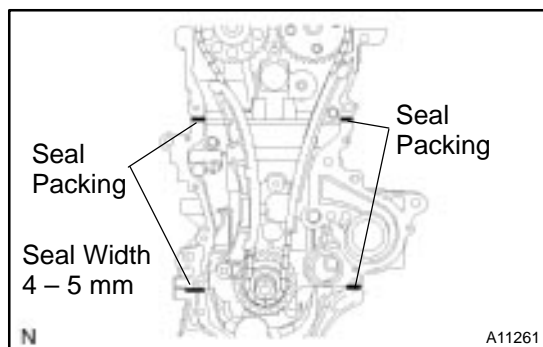

- (c) Apply seal packing to 4 locations as shown in the illustration.

Seal packing:

Part No. 08826 – 00080 or equivalent


- Install a nozzle that has been cut to a 4 – 5 mm (0.16 – 0.20 in.) opening.

HINT:

Avoid applying an excessive amount to the surface.

- Parts must be assembled within 3 minutes of application. Otherwise the material must be removed and reapplied.
- Immediately remove nozzle from the tube and reinstall cap.

- (d) Install 2 new O-rings to the cylinder block and oil pan No. 1.

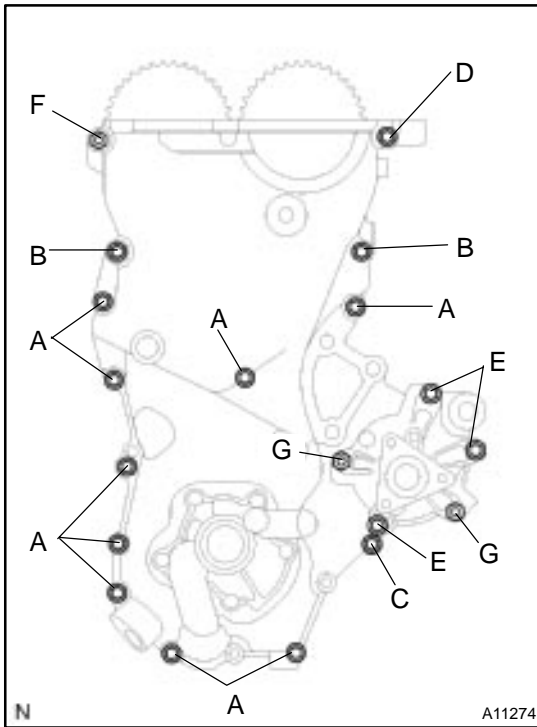

- (e) Install the timing chain cover, new O-ring and water pump with the 16 bolts and 3 nuts. Uniformly tighten the bolts and nut in several passes.

Torque:

- Bolt A** 11 N·m (113 kgf-cm, 8 ft-lbf)
Bolt B 24 N·m (245 kgf-cm, 18 ft-lbf)
Bolt C 11 N·m (113 kgf-cm, 8 ft-lbf)
Bolt D 24 N·m (245 kgf-cm, 18 ft-lbf)
Bolt E 11 N·m (113 kgf-cm, 8 ft-lbf)
Nut F 24 N·m (245 kgf-cm, 18 ft-lbf)
Nut G 11 N·m (113 kgf-cm, 8 ft-lbf)


NOTICE:

- Pay attention not to wrap the chain and slipper over the chain cover seal line.
- After installing the chain cover, must install the mounting bracket and water pump within 15 minutes.

HINT:

Each bolt length is indicated in the illustration.

- A 20 mm (0.787 in.)
 B 30 mm (1.181 in.)
 C 35 mm (1.378 in.)
 D 20 mm (0.787 in.)
 E 35 mm (1.378 in.)

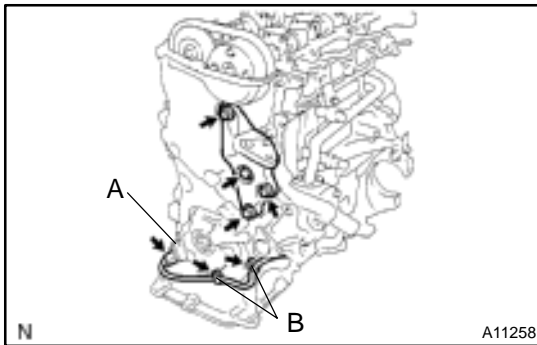

4. INSTALL RH ENGINE MOUNTING BRACKET

- (a) Apply seal packing to threads of the mounting bolt.

Seal packing:

Part No. 08826 – 00080 or equivalent

HINT:

Do not apply seal packing to 2 or 3 threads of the bolt end.

- (b) Install the mounting bracket with the 4 bolts.

Torque: 55 N·m (561 kgf-cm, 41 ft-lbf)


5. INSTALL CRANKSHAFT POSITION SENSOR

Torque:

- Bolt A** 7.5 N·m (76 kgf-cm, 66 in.-lbf)
Bolt B 11 N·m (113 kgf-cm, 8 ft-lbf)

6. INSTALL OIL CONTROL VALVE (See page EM-45)


Torque: 7.5 N·m (76 kgf-cm, 66 in.-lbf)

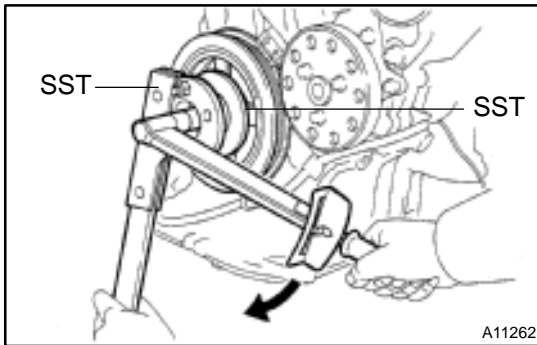**7. INSTALL CRANKSHAFT PULLEY**

- Clean the crankshaft pulley inside.
- Install the pin to the crankshaft.
- Align the hole in the crank pulley with the pin position and install the crank pulley.
- Using SST, install the pulley bolt.

SST 09213-70010, 09330-00021

Torque: 128 N·m (1,300 kgf·cm, 94 ft·lbf)

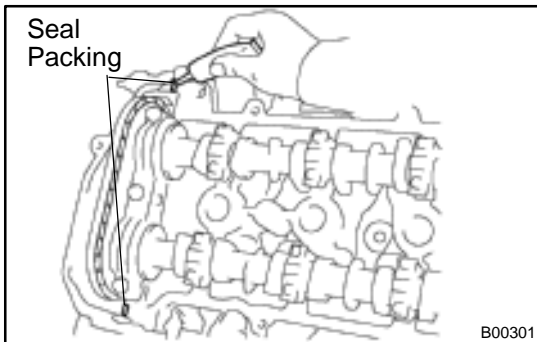**8. INSTALL CYLINDER HEAD COVER**

- Remove any old packing (FIPG) material.
- Apply seal packing to 2 locations as shown in the illustration.

Seal packing:

Part No. 08826 – 00080 or equivalent

- Install the gasket to the cylinder head cover.

HINT:

Part must be assembled within 3 minutes of application.



Otherwise the material must be removed and reapplied.

- Install the cylinder head cover and cable bracket with the 7 bolts, 2 seal washers and 2 nuts.

Uniformly tighten the bolts and nuts, in the several passes, in the sequence shown.

Torque: 10 N·m (100 kgf·cm, 7 ft·lbf)

- Connect the 2 PCV hoses to the cylinder head cover.

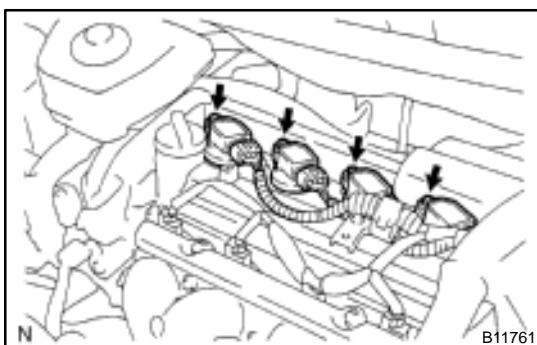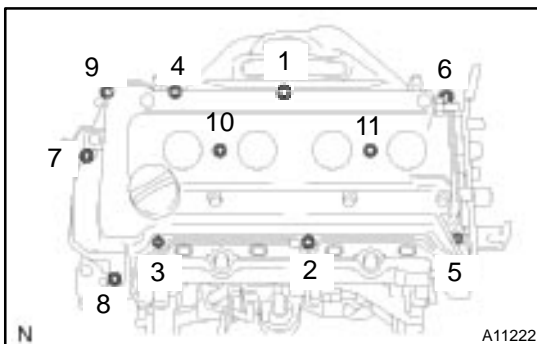
9. CONNECT ENGINE WIRE TO CYLINDER HEAD COVER**10. INSTALL IGNITION COILS (See page IG-7)****11. REMOVE RH ENGINE MOUNTING INSULATOR**

Install the RH engine mounting insulator with the 5 bolts and 2 nuts.

12. INSTALL VSV TO RH ENGINE MOUNTING INSULATOR**13. INSTALL DRIVE BELT****14. INSTALL ENGINE COOLANT RESERVOIR TANK****15. INSTALL AIR INLET**

**16. CONNECT CONNECTORS**

- (a) Connect the Camshaft timing oil control valve connector.
- (b) Connect the water temperature sensor connector.
- (c) Connect the camshaft position sensor connector.
- (d) Connect the 2 VSV connectors.
- (e) Connect the 4 injector connectors.
- (f) Connect the 4 ignition connectors.

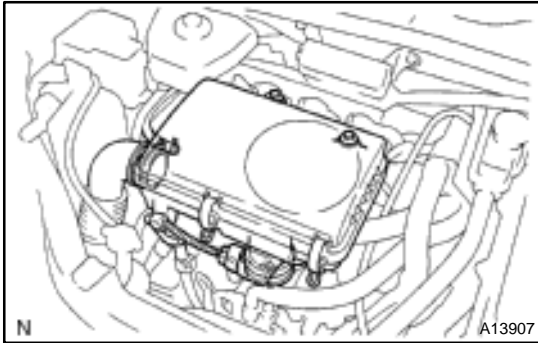**17. INSTALL AIR CLEANER ASSEMBLY**

- (a) Install the air cleaner assembly with the 2 bolts.
- (b) Tighten the 2 hose clamps.
- (c) Connect the EVAP hose to the air cleaner case.
- (d) Connect the MAF meter connector.


18. INSTALL BRAKE RESERVOIR TANK**19. INSTALL OUTER FR COWL TOP PANEL ASSEMBLY (See page [BO-35](#))****20. FILL WITH ENGINE COOLANT****21. INSTALL ENGINE UNDER COVERS****22. CONNECT BATTERY NEGATIVE (–) TERMINAL AND HV BATTERY SERVICE PLUG (See page [HV-1](#))****23. ROAD TEST VEHICLE**

Check for abnormal noises, shock slippage, correct shift points and smooth operation.


24. RECHECK ENGINE COOLANT AND HV TRANSAXLE COOLANT

CYLINDER HEAD COMPONENTS

EM1IW-02

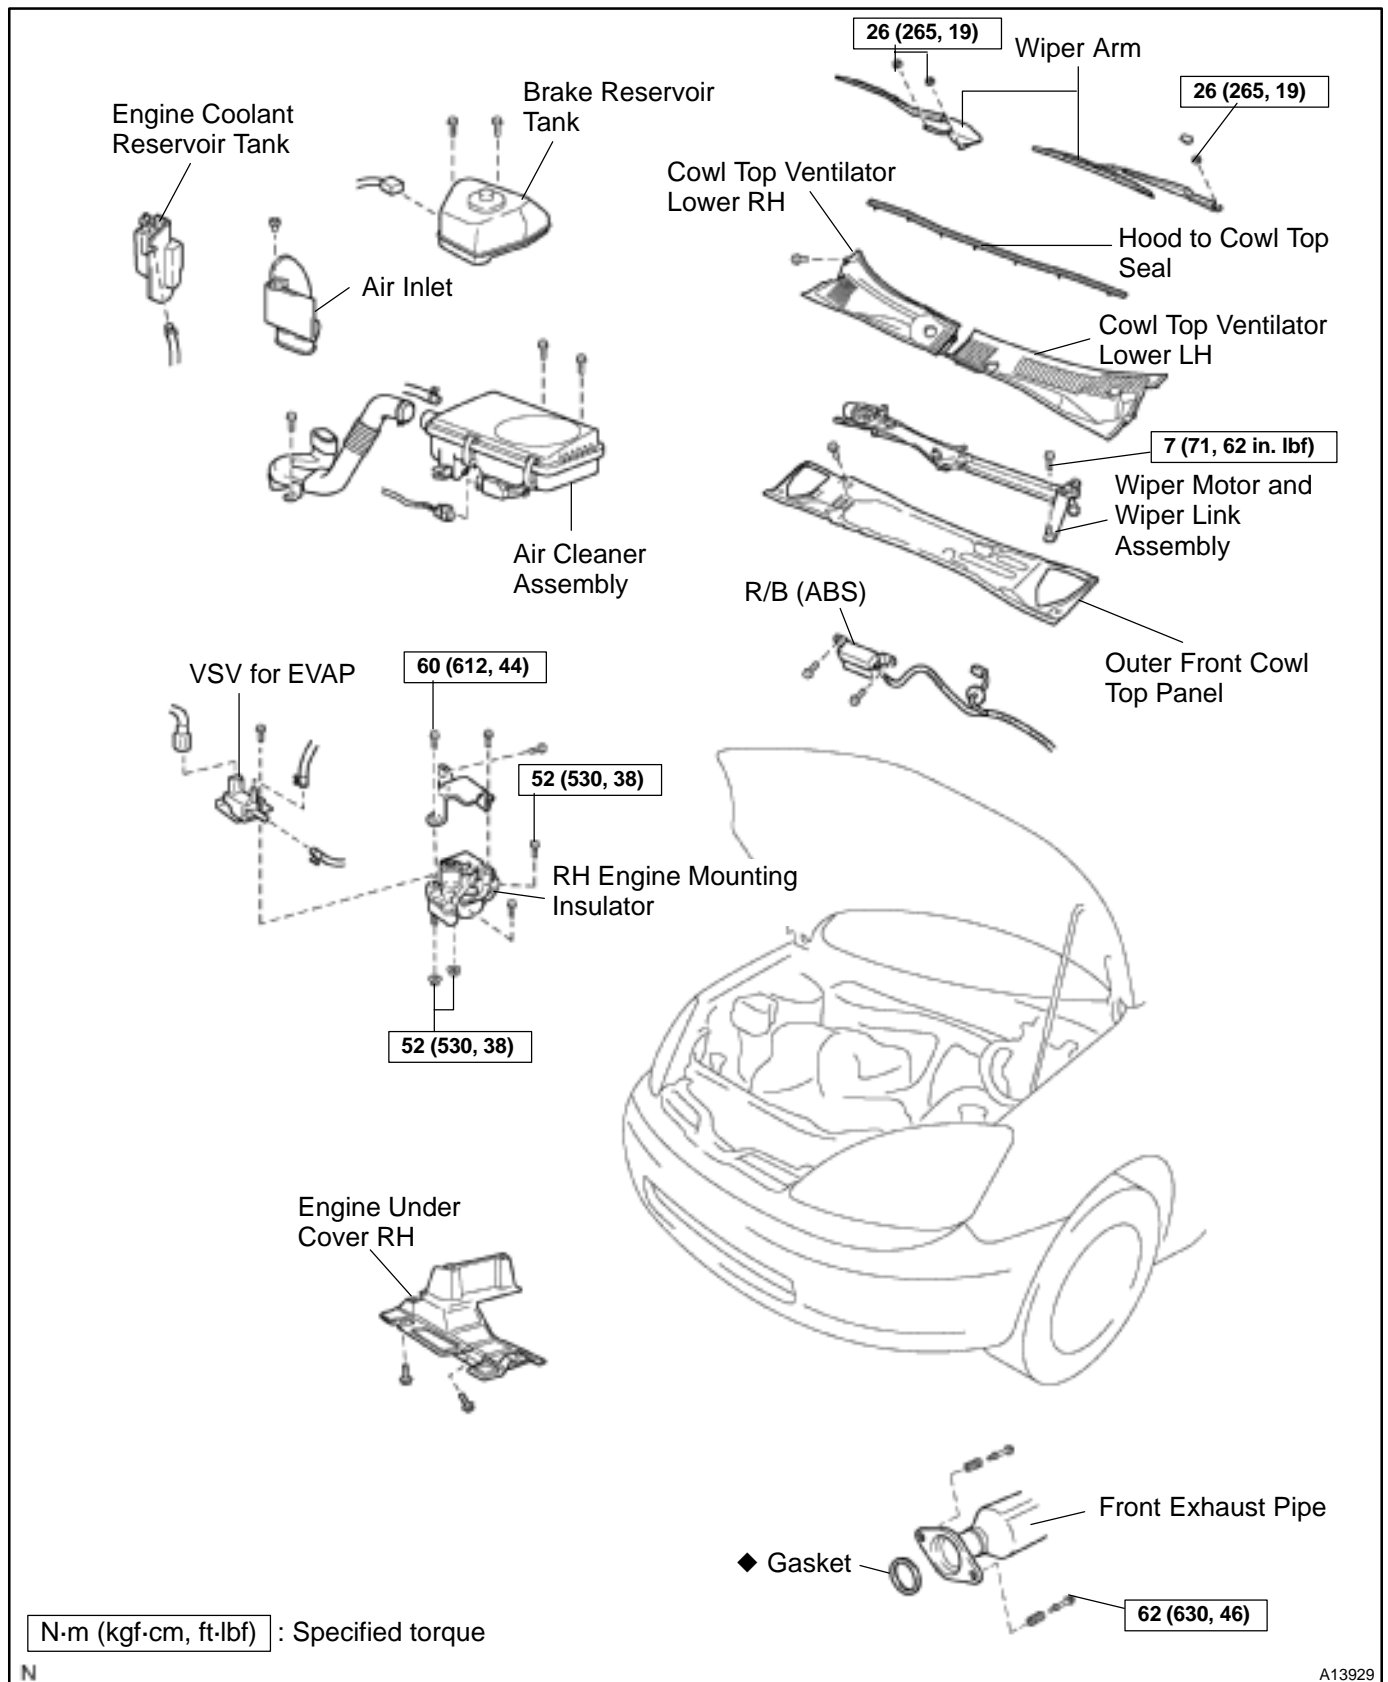


cardiagn.com

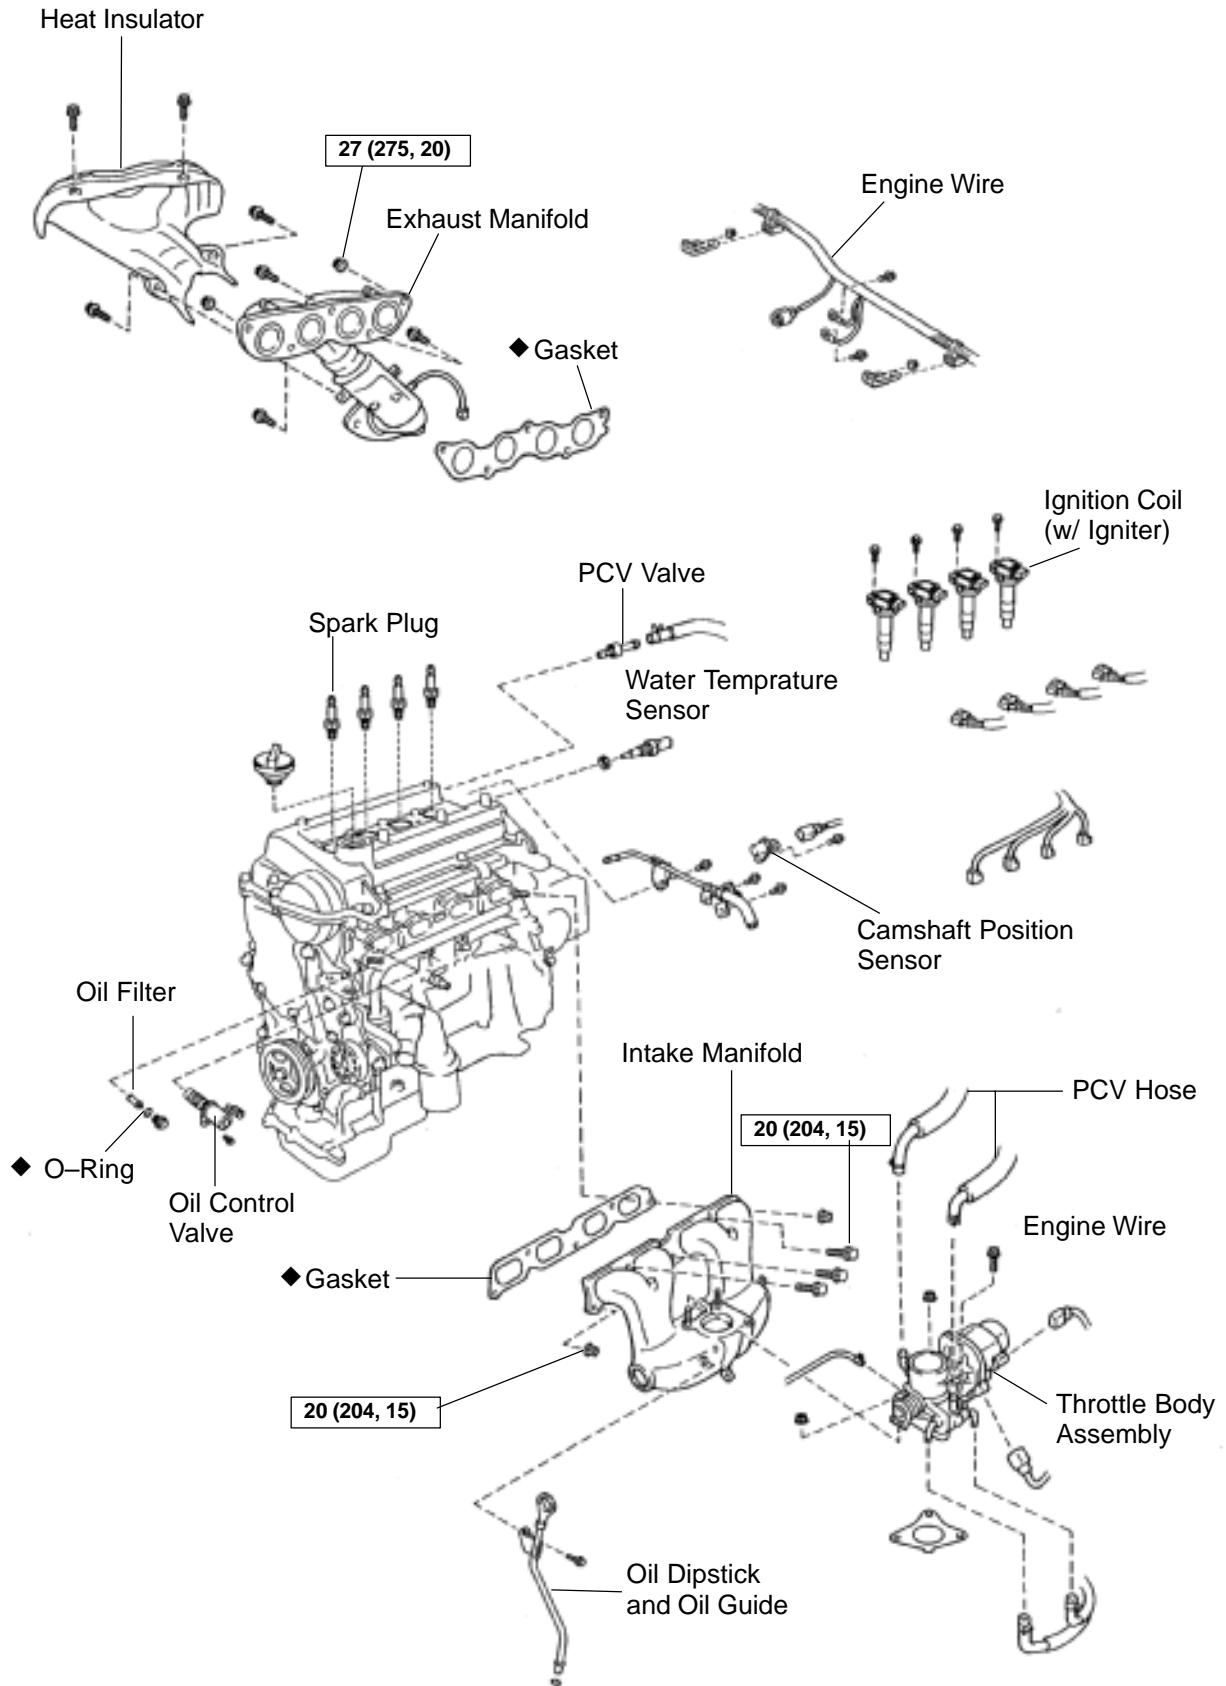

N·m (kgf·cm, ft·lbf) : Specified torque


◆ Non-reusable part

A13930

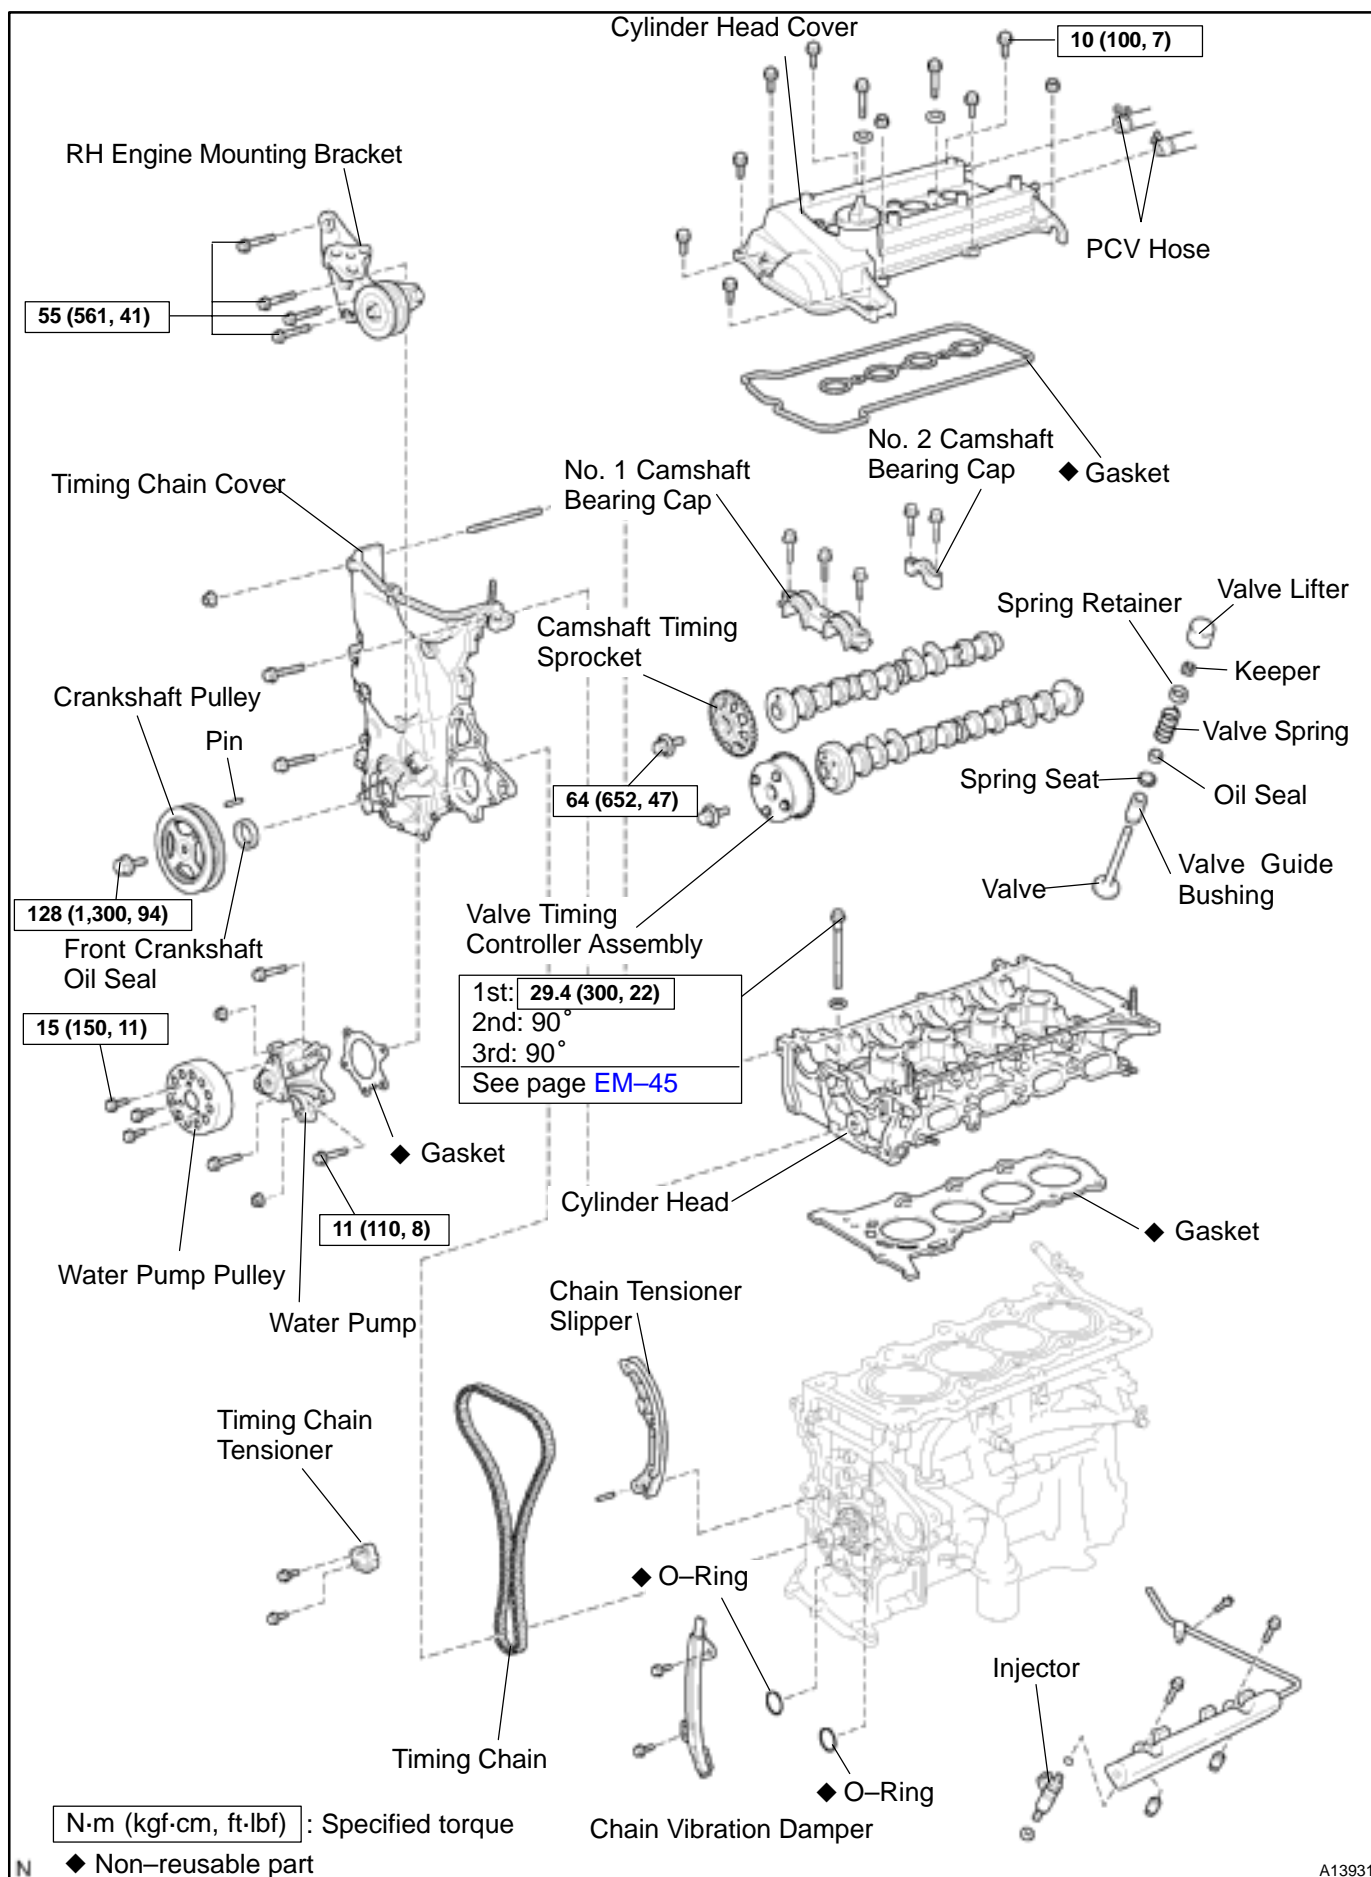


REMOVAL

1. **DISCONNECT BATTERY NEGATIVE (–) TERMINAL AND HV BATTERY SERVICE PLUG**
(See page [HV-1](#))
2. **REMOVE OUTER FRONT COWL TOP PANEL ASSEMBLY** (See page [BO-32](#))
3. **DRAIN HV TRANSAXLE COOLANT**
(See page [HT-6](#))
4. **DRAIN ENGINE COOLANT**
5. **REMOVE CONVERTER AND INVERTER ASSEMBLY**
(See page [HV-18](#))

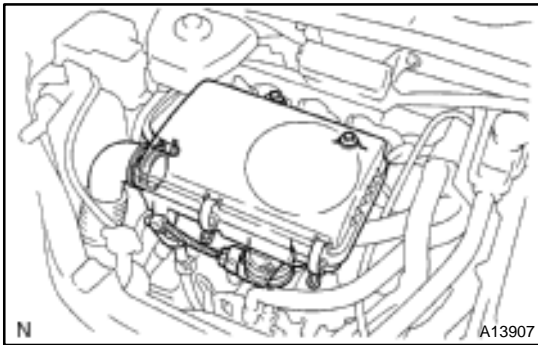


6. **REMOVE AIR CLEANER ASSEMBLY**
 - (a) Disconnect the MAF meter connector.
 - (b) Disconnect the EVAP hose from the air cleaner case.
 - (c) Loosen the 2 hose clamps.
 - (d) Remove the 3 bolts and air cleaner assembly.

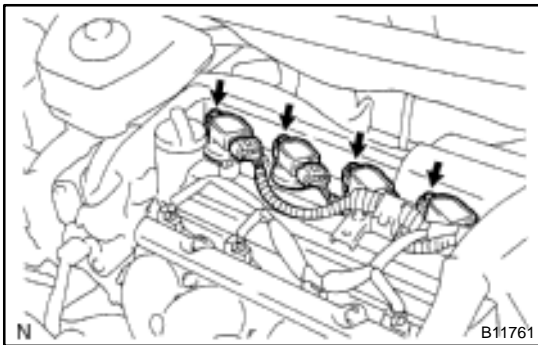


7. **REMOVE IGNITION COILS** (See page [IG-6](#))
8. **REMOVE SPARK PLUGS** (See page [IG-1](#))
9. **REMOVE PCV HOSES**
10. **REMOVE THROTTLE BODY** (See page [SF-28](#))




11. **DISCONNECT ENGINE WIRE FROM CYLINDER HEAD**
 - (a) Disconnect the ECT sensor connector.
 - (b) Disconnect the camshaft position sensor connector.
 - (c) Disconnect the oil control valve connector.
 - (d) Disconnect the 4 injector connectors.
 - (e) Remove the 3 bolts and disconnect the engine wire protector from the cylinder head cover.

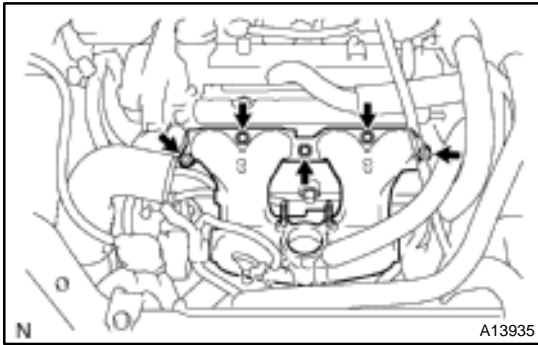**12. REMOVE INTAKE MANIFOLD**


Remove the 3 bolts, 2 nuts intake manifold and gasket.

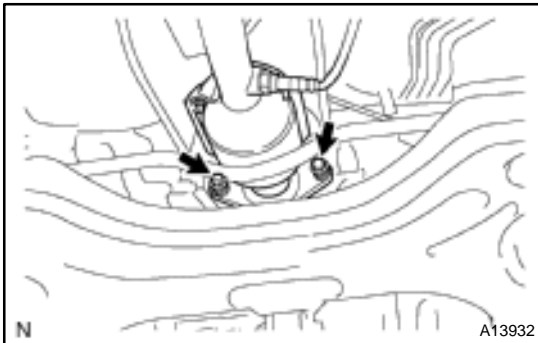**13. DISCONNECT FRONT EXHAUST PIPE FROM EXHAUST MANIFOLD**

- (a) Remove the 2 bolts and 2 springs holding the front exhaust pipe to the exhaust manifold.
- (b) Remove the gasket.

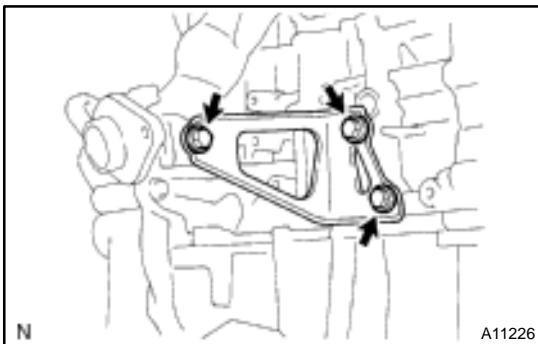**14. REMOVE EXHAUST MANIFOLD STAY**

Remove the 3 bolts and exhaust manifold stay.

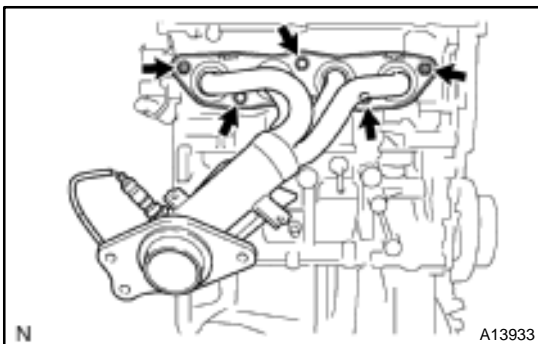**15. REMOVE EXHAUST MANIFOLD**

- (a) Remove the 4 bolts and upper heat insulator.
- (b) Remove the 3 bolts 2 nuts, exhaust manifold and gasket.


16. REMOVE CAMSHAFT POSITION SENSOR**17. REMOVE ECT SENSOR****18. REMOVE OIL CONTROL VALVE****19. REMOVE PCV VALVE****20. REMOVE OIL FILLER CAP****21. REMOVE HEAD COVER (See page EM-15)****22. REMOVE INJECTOR (See page SF-11)****23. REMOVE TIMING CHAIN COVER (See page EM-15)****24. REMOVE CAMSHAFT TIMING SPROCKET AND VALVE TIMING CONTROL ASSEMBLY**

Hold the hexagonal head portion of the camshaft with a wrench, and remove the 2 bolts and timing sprocket and valve timing controller assembly.

NOTICE:

- Be careful not to damage the cylinder head and valve lifter with the wrench.

- Do not disassembly the valve timing controller assembly.

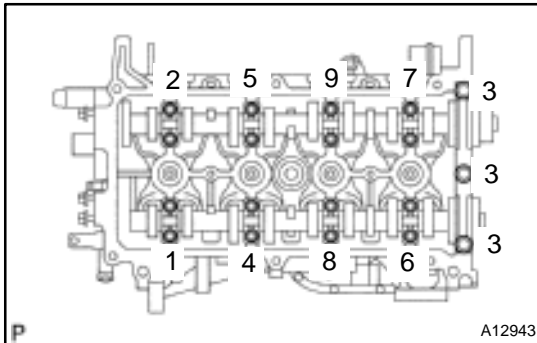

25. REMOVE CAMSHAFTS

Uniformly loosen and remove the 19 bearing cap bolts, in several passes, in the sequence shown, and remove the 9 bearing caps, intake and exhaust camshafts.



26. REMOVE CYLINDER HEAD

- Disconnect the upper radiator hose from the water hose union
- Disconnect the heater water hose from the water hose union
- Using a 8 mm bi-hexagon wrench, uniformly loosen and remove the 10 cylinder head bolts, in several passes, in the sequence shown. Remove the 10 cylinder head bolts and plate washers.

NOTICE:

Head warpage or cracking could result from removing bolts in an incorrect order.

- Remove the bolt holding the water bypass pipe to the cylinder head.
- Lift the cylinder head from the dowels on the cylinder block and replace the cylinder head on wooden blocks on a bench.

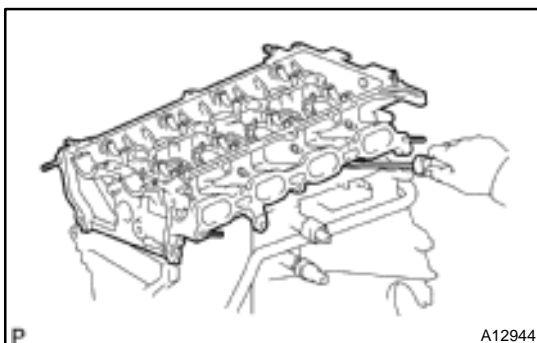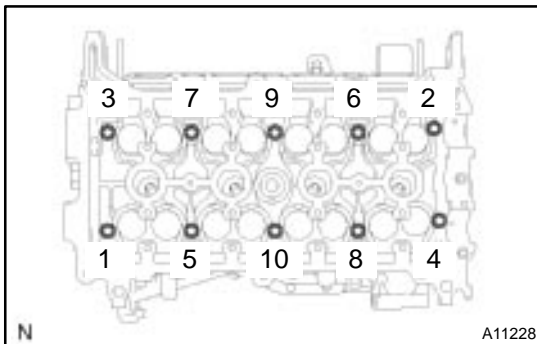


HINT:

If the cylinder head is difficult to lift off, pry between the cylinder head and cylinder block with a screwdriver.

NOTICE:


Be careful not to damage the contact surfaces of the cylinder head and cylinder block.

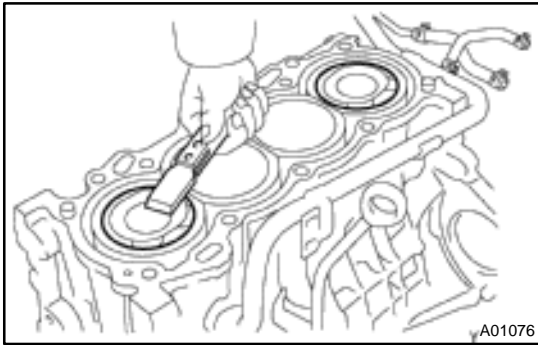

INSPECTION

1. CLEAN TOP SURFACES OF PISTONS AND CYLINDER BLOCK


- (a) Turn the crankshaft, and bring each piston to top dead center (TDC). Using a gasket scraper, remove all the carbon from the piston surface.

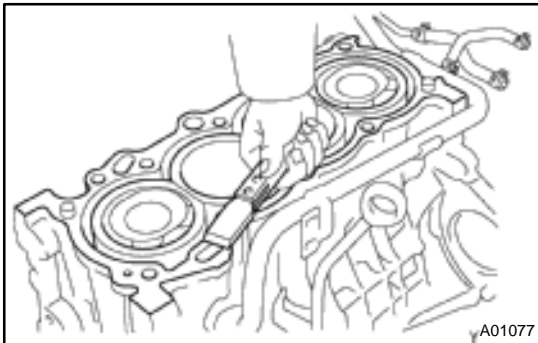

- (b) Using a gasket scraper, remove all the gasket material from the cylinder block surface.
- (c) Using compressed air, blow carbon and oil from the bolt holes.

CAUTION:

Protect your eyes when using high pressure compressed air.

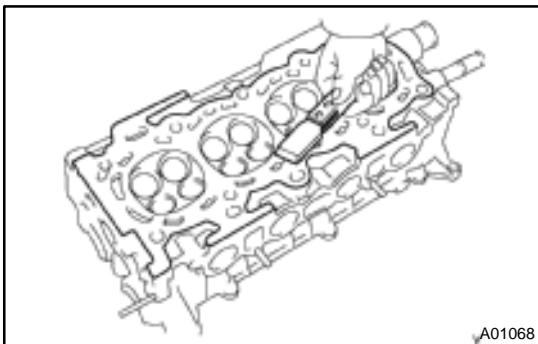


2. REMOVE GASKET MATERIAL

Using a gasket scraper, remove all the gasket material from the cylinder block contact surface.

NOTICE:

Be careful not to scratch the cylinder block contact surface.

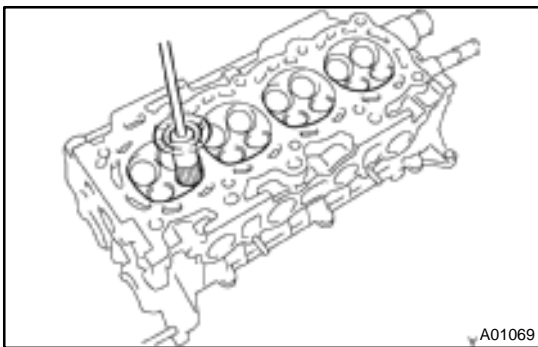


3. CLEAN COMBUSTION CHAMBERS

Using a wire brush, remove all the carbon from the combustion chambers.


NOTICE:

Be careful not to scratch the cylinder block contact surface.

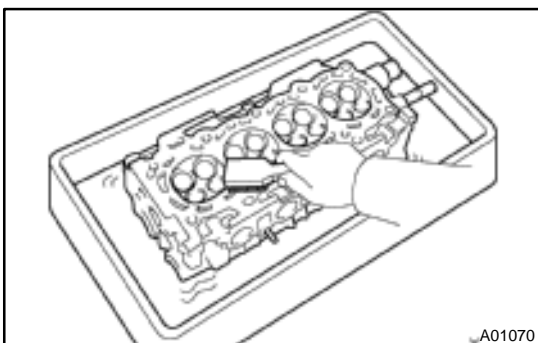


4. CLEAN CYLINDER HEAD

Using a soft brush and solvent, thoroughly clean the cylinder head.

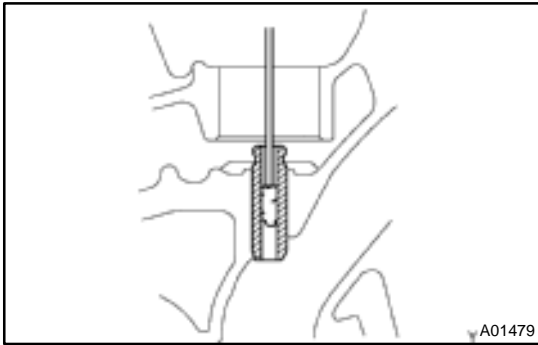

5. CLEAN VALVE GUIDE BUSHINGS

Using a valve guide bushing brush and solvent, clean all the guide bushings.

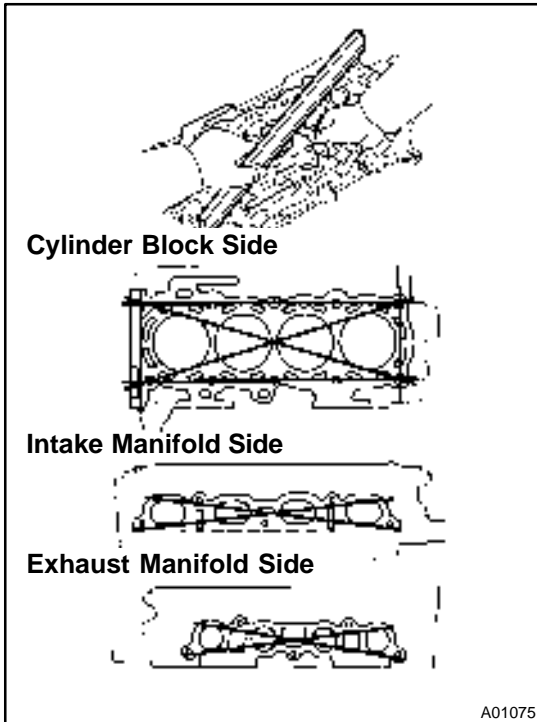


6. INSPECT FOR FLATNESS

Using a precision straight edge and feeler gauge, measure the surface contacting the cylinder block and the manifolds for warpage.

Maximum warpage:


Cylinder block side	0.05 mm (0.0020 in.)
Intake Manifold side	0.10 mm (0.0394 in.)
Exhaust manifold side	0.10 mm (0.0394 in.)

If warpage is greater than maximum, replace the cylinder head.

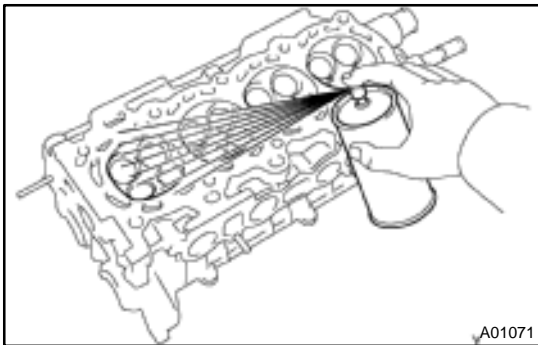


7. INSPECT FOR CRACKS

Using a dye penetrant, check the combustion chamber, intake ports, exhaust ports and cylinder block surface for cracks. If cracked, replace the cylinder head.

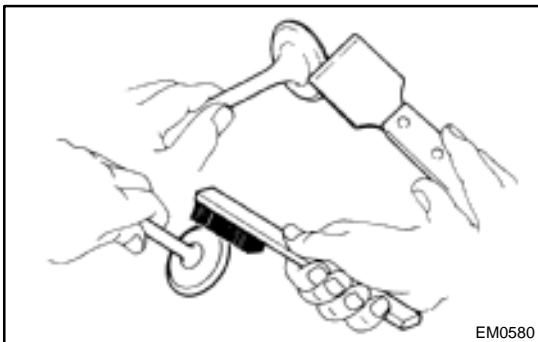

8. CLEAN VALVES

- Using a gasket scraper, chip off any carbon from the valve head.
- Using a wire brush, thoroughly clean the valve.

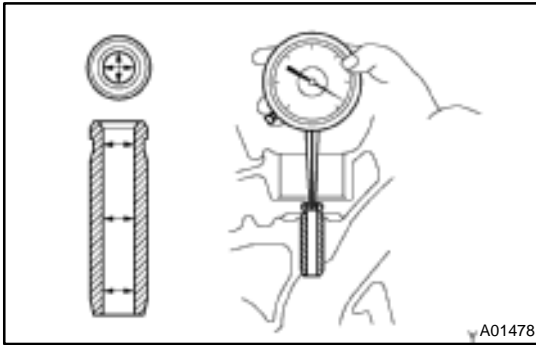


9. INSPECT VALVE STEMS AND GUIDE BUSHINGS

- (a) Using a caliper gauge, measure the inside diameter of the guide bushing.

Bushing inside diameter:

5.010 – 5.030 mm (0.19724 – 0.19803 in.)

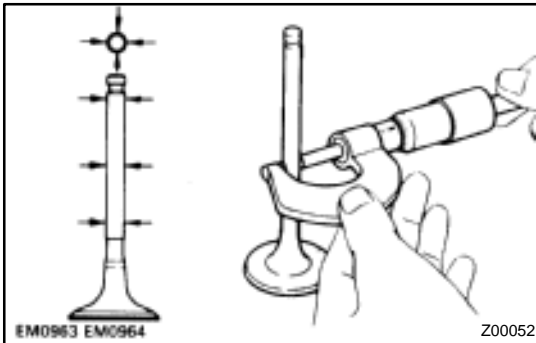

- (b) Using a micrometer, measure the diameter of the valve stem.

Valve stem diameter:

Intake 4.970 – 4.985 mm (0.19567 – 0.19626 in.)

Exhaust 4.965 – 4.980 mm (0.19547 – 0.19606 in.)

- (c) Subtract the valve stem diameter measurement from the guide bushing inside diameter measurement.

Standard oil clearance:

Intake 0.025 – 0.060 mm (0.00098 – 0.00236 in.)


Exhaust 0.030 – 0.065 mm (0.00118 – 0.00256 in.)

Maximum oil clearance:

Intake 0.08 mm (0.0031 in.)

Exhaust 0.10 mm (0.0039 in.)

If the clearance is greater than maximum, replace the valve and guide bushing.

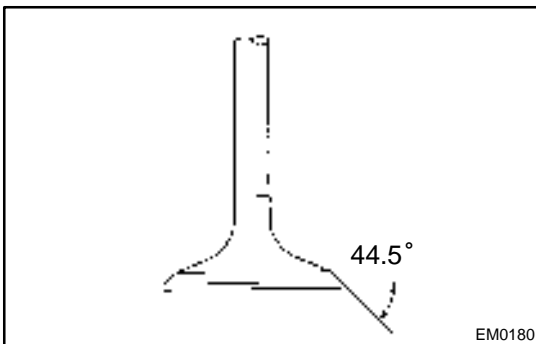


10. INSPECT VALVES

- (a) Check the valve is ground to the correct valve face angle.

Valve face angle: 44.5°

- (b) Check that the surface of the valve for wear.

If the valve face is worn, replace the valve.

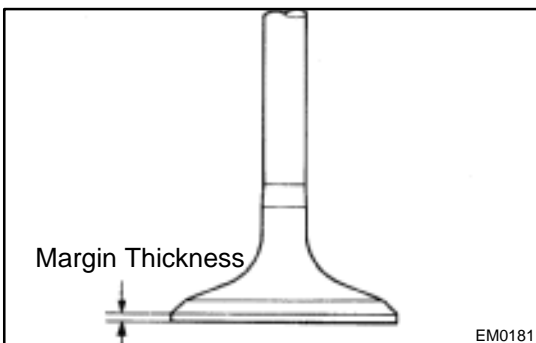


- (c) Check the valve head margin thickness.

Standard margin thickness:

1.00 – 1.15 mm (0.0393 – 0.0453 in.)

Minimum margin thickness: 0.7 mm (0.028 in.)

If the margin thickness is less than minimum, replace the valve.

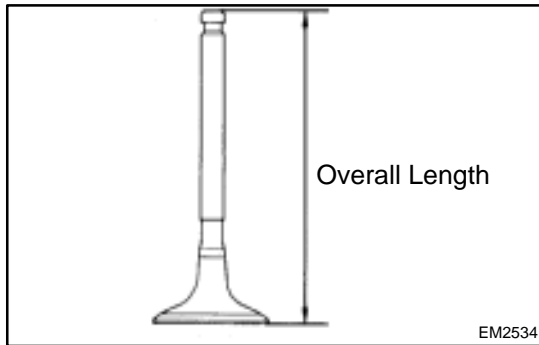

- (d) Check the valve overall length.
Standard overall length:
Intake 89.25 mm (3.5138 in.)
Exhaust 87.90 mm (3.4606 in.)
Minimum overall length:
Intake 88.95 mm (3.5020 in.)
Exhaust 87.60 mm (3.4488 in.)



If the overall length is less than minimum, replace the valve.

- (e) Check the surface of the valve stem tip for wear.

If the valve stem tip is worn, replace the valve.

11. INSPECT AND CLEAN VALVE SEATS

- (a) Using a 45° carbide cutter, resurface the valve seats. Remove only enough metal to clean the seats.

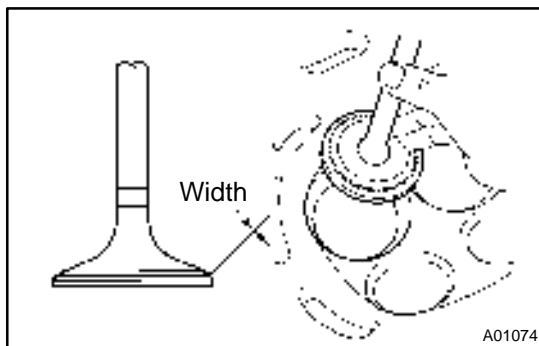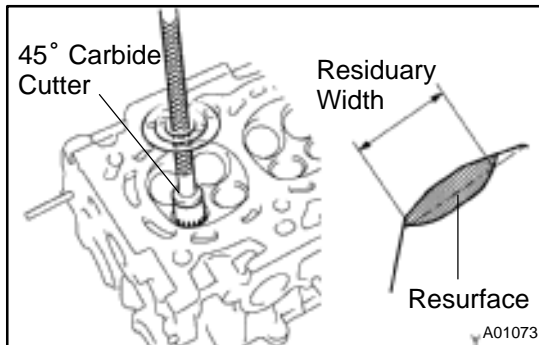


- (b) Check the valve seating position. Apply a light coat of prussian blue (or white lead) to the valve face. Lightly press the valve against the seat. Do not rotate valve.

- (c) Check the valve face and seat for the following:
- If blue appears 360° around the face, the valve is concentric. If not, replace the valve.
 - If blue appears 360° around the valve seat, the guide and face are concentric. If not, resurface the seat.
 - Check that the seat contact is in the middle of the valve face with the following width:


1.0 – 1.4 mm (0.039 – 0.055 in.)


If not, correct the valve seats as follows:

- (1) If the seating is too high on the valve face, use 20° and 45° cutters to correct the seat.

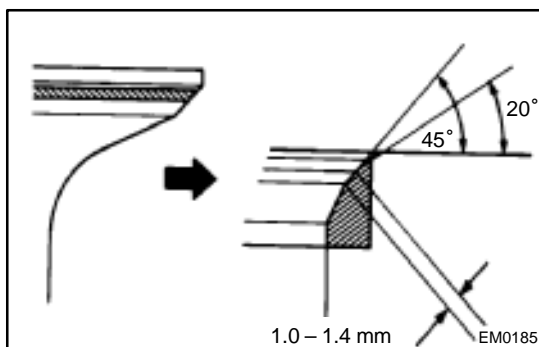


- (2) If the seating is too low on the valve face, use 75° and 45° cutters to correct the seat.

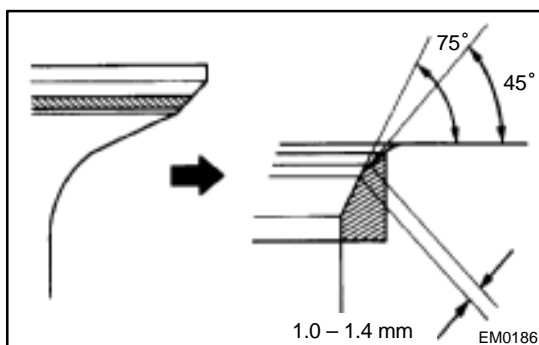

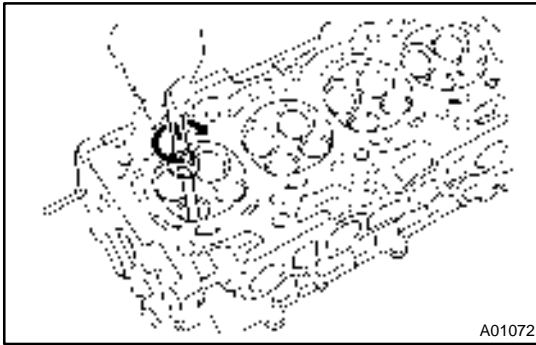

- (d) Hand-lap the valve and valve seat with an abrasive compound.
- (e) After hand-lapping, clean the valve and valve seat.

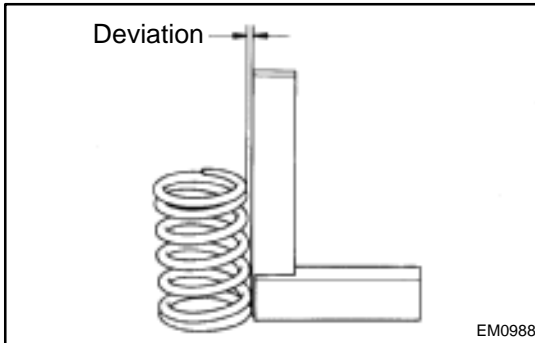


12. INSPECT VALVE SPRINGS

- (a) Using a steel square, measure the deviation of the valve spring.

Maximum deviation: 1.6 mm (0.063 in.)

Maximum angle (reference): 2°


If the deviation is greater than maximum, replace the valve spring.

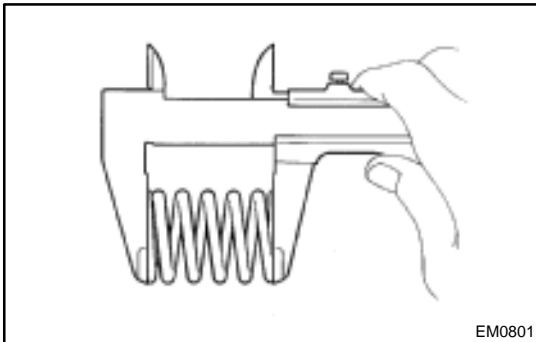

- (b) Using vernier calipers, measure the free length of the valve spring.

Free length: 59.77 mm (2.353 in.)

If the free length is not as specified, replace the valve spring.

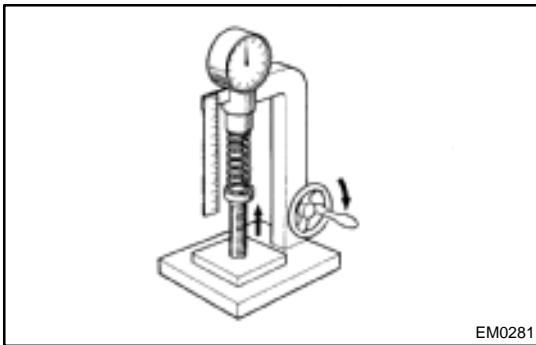

- (c) Using a spring tester, measure the tension of the valve spring at the specified installed length.

Installed tension:

140 – 154 N (14.3 – 15.7 kgf, 31.5 – 34.6 lbf)


at 32.5 mm (1.280 in.)

Maximum working tension:

180 – 198 N (18.4 – 20.2 kgf, 40.4 – 44.8 lbf)

at 25.1 mm (0.988 in.)

If the installed tension is not as specified, replace the valve spring

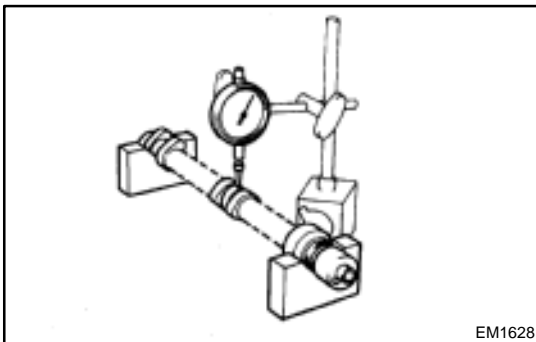


13. INSPECT CAMSHAFT FOR RUNOUT

- (a) Place the camshaft on V-blocks.
- (b) Using a dial indicator, measure the circle runout at the center journal.

Maximum circle runout: 0.03 mm (0.0012 in.)

If the circle runout is greater than maximum, replace the camshaft.

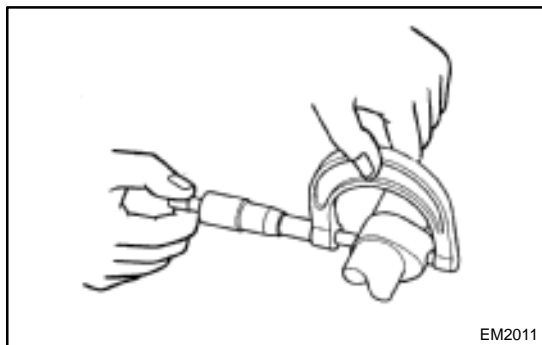

14. INSPECT CAM LOBES

Using a micrometer, measure the cam lobe height.

Standard cam lobe height:

Intake 42.310 – 42.410 mm (1.62637 – 1.66968 in.)


Exhaust 44.046 – 44.146 mm (1.73409 – 1.73803 in.)

Minimum cam lobe height:

Intake 42.16 mm (1.6598 in.)

Exhaust 43.90 mm (1.7283 in.)

If the cam lobe height is less than minimum, replace the camshaft.

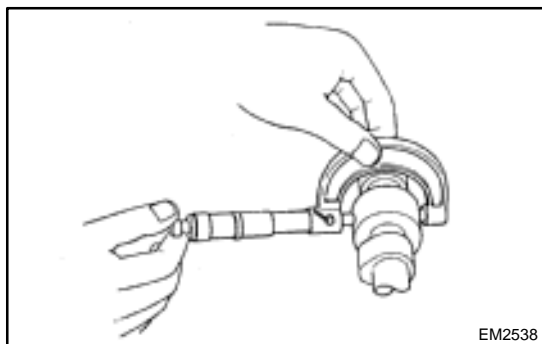

15. INSPECT CAMSHAFT JOURNALS

Using a micrometer, measure the journal diameter.


No.1 journal diameter:

34.449 – 34.465 mm (1.35626 – 1.35689 in.)

Others journal diameter:


22.949 – 22.965 mm (0.90350 – 0.90413 in.)

If the journal diameter is not as specified, check the oil clearance.

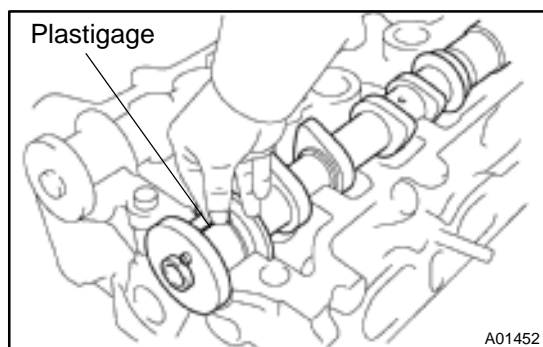

16. INSPECT CAMSHAFT JOURNAL CLEARANCE

- Clean the bearing caps and camshaft journals.
- Place the camshafts on the cylinder head.
- Lay a strip of Plastigage across each of the camshaft journal.

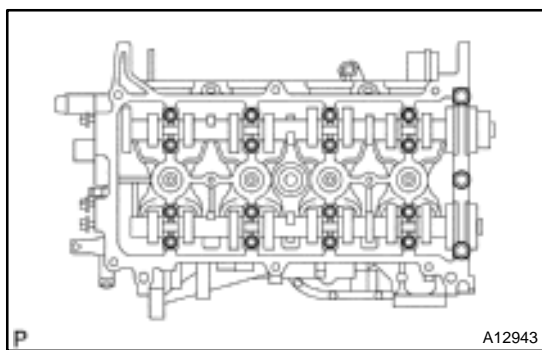

- Install the bearing caps (See page [EM-45](#)).

Torque:


No.1 23 N·m (235 kgf·cm, 17 ft·lbf)

No.2 12.7 N·m (130 kgf·cm, 10 ft·lbf)

NOTICE:

Do not turn the camshaft.

- Remove the bearing caps.

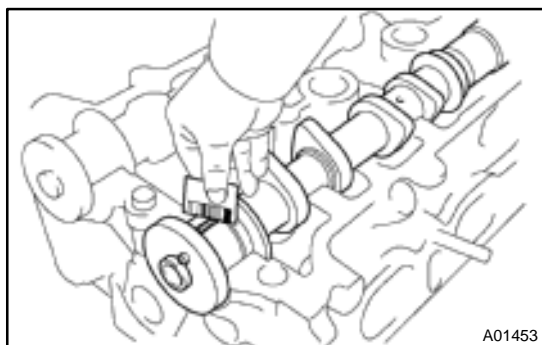

- Measure the plastigage at its widest point.

Standard oil clearance:


0.040 – 0.095 mm (0.00157 – 0.00374 in.)

Maximum oil clearance:

0.115 mm (0.00453 in.)

If the oil clearance is greater than maximum, replace the camshaft. If necessary, replace the bearing caps and cylinder head as a set.

- Completely remove the Plastigage.
- Remove the camshafts.

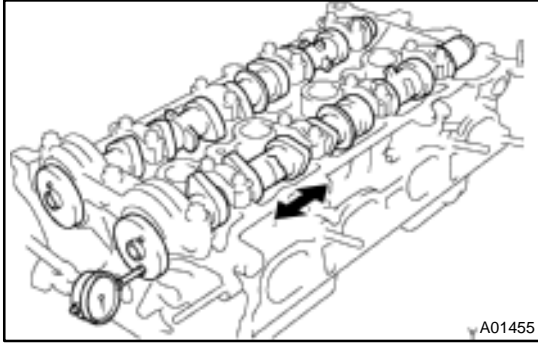**17. INSPECT CAMSHAFT THRUST CLEARANCE**

- (a) Install the camshafts (See page [EM-45](#)).
- (b) Using a dial indicator, measure the thrust clearance while moving the camshaft back and forth.

Standard thrust clearance:


0.040 – 0.095 mm (0.0016 – 0.0037 in.)

Maximum thrust clearance:

0.11 mm (0.0043 in.)

If the thrust clearance is greater than maximum, replace the camshaft. If necessary, replace the bearing caps and cylinder head as a set.


- (c) Remove the camshafts.

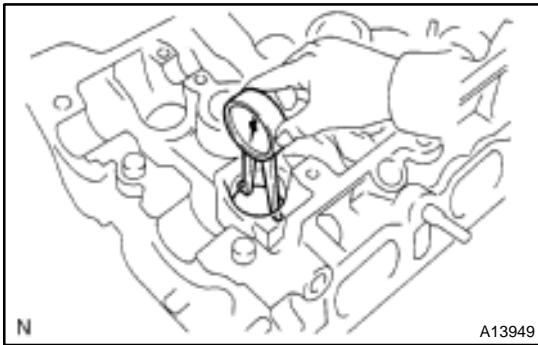**18. INSPECT VALVE LIFTERS AND LIFTER BORES**

- (a) Using a caliper gauge, measure the lifter bore diameter of the cylinder head.

Lifter bore diameter:

31.009 – 31.025 mm (1.22082 – 1.22145 in.)

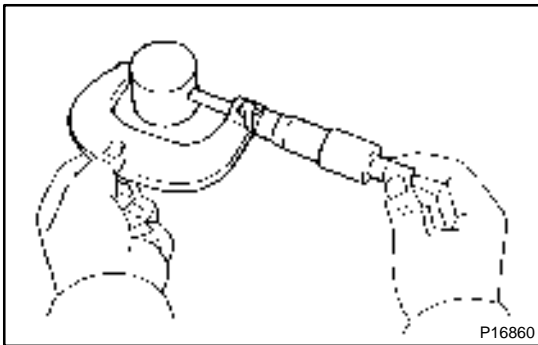

- (b) Using a micrometer, measure the lifter diameter.

Lifter diameter:

30.966 – 30.976 mm (1.21913 – 1.21953 in.)

- (c) Subtract the lifter diameter measurement from the lifter bore diameter measurement.


Standard oil clearance:

0.031 – 0.059 mm (0.00122 – 0.00232 in.)

Maximum oil clearance:

0.1 mm (0.004 in.)


If the oil clearance is greater than maximum, replace the lifter. If necessary, replace the cylinder head.

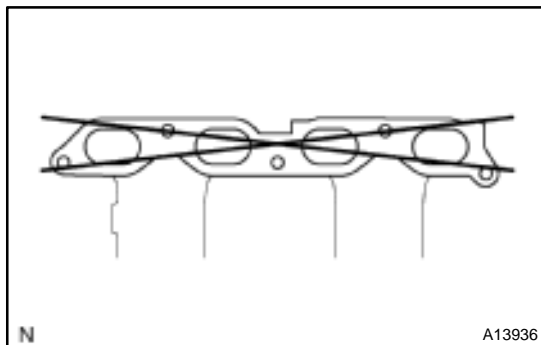**19. INSPECT INTAKE MANIFOLD**

Using a precision straight edge and feeler gauge, measure the surface contacting the cylinder head for warpage.

Maximum warpage: 0.10 mm (0.0039 in.)


If warpage is greater than maximum, replace the manifold.

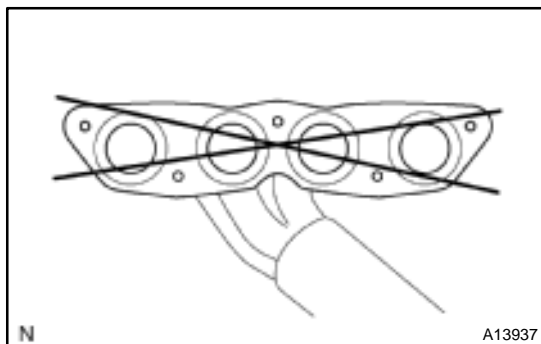**20. INSPECT EXHAUST MANIFOLD**

Using a precision straight edge and feeler gauge, measure the surface contacting the cylinder head for warpage.

Maximum warpage: 0.70 mm (0.0276 in.)


If warpage is greater than maximum, replace the manifold.

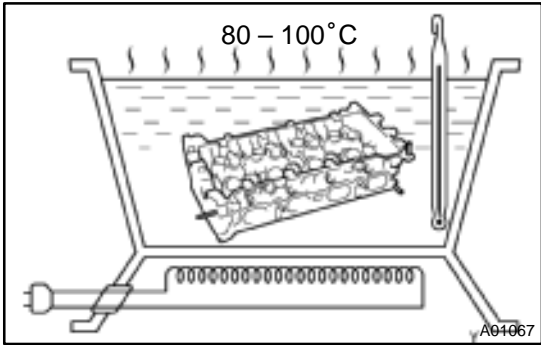


REPLACEMENT

REPLACE VALVE GUIDE BUSHINGS

- (a) Gradually heat the cylinder head to 80 – 100°C (176 – 212°F).

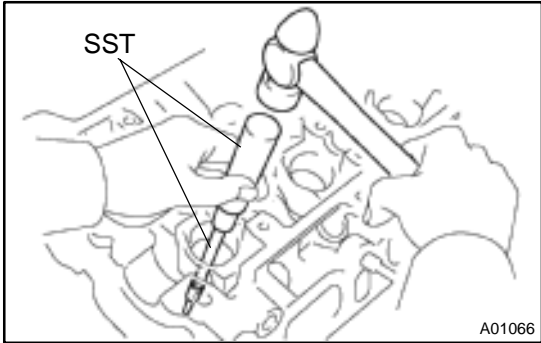

- (b) Using SST and a hammer, tap out the guide bushing.
SST 09201-01055, 09950-70010 (09951-07100)

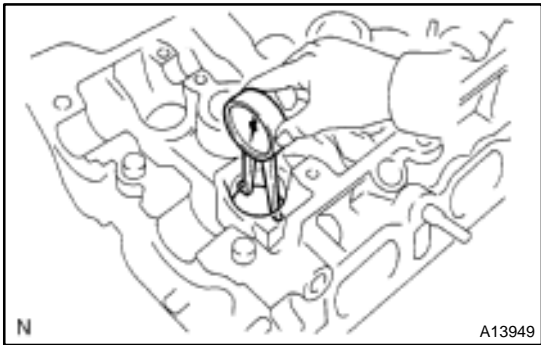

- (c) Using a caliper gauge, measure the bushing bore diameter of the cylinder head.

Both intake and exhaust


Bushing bore diameter mm (in.)	Bushing size
9.685 – 9.706 (0.38130 – 0.38213)	Use STD
9.735 – 9.756 (0.38327 – 0.38493)	Use O/S 0.05

- (d) Select the new guide bushing (STD or O/S 0.05).
If the bushing bore diameter of the cylinder head is greater than 9.706 mm (0.38213 in.), machine the bushing bore to the following dimension:

9.735 – 9.756 mm (0.38327 – 0.38493 in.)

- If the bushing bore diameter of the cylinder head is greater than 9.756 mm (0.38493 in.), replace the cylinder head.

- (e) Gradually heat the cylinder head to 80 – 100°C (176 – 212°F).

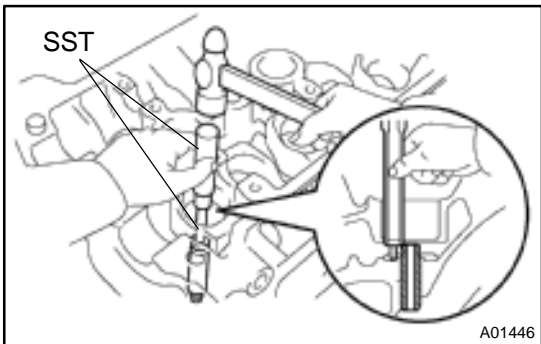


- (f) Using SST and a hammer, tap in a new guide bushing to the specified protrusion height.

SST 09201-01055, 09950-70010 (09951-07100)

Protrusion height:

9.0 – 9.4 mm (0.354 – 0.370 in.)

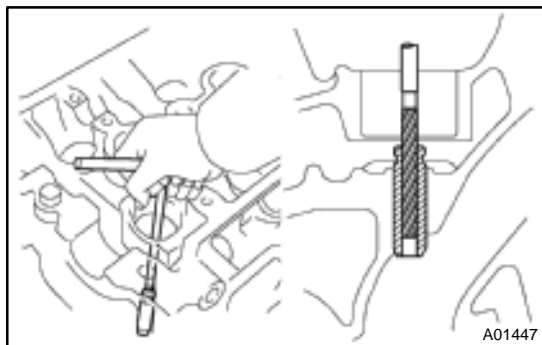


- (g) Using a sharp 5 mm reamer, ream the guide bushing to obtain the standard specified clearance (See page [EM-33](#)) between the guide bushing and valve stem.

REASSEMBLY

HINT:

- Thoroughly clean all parts to be assembled.
- Before installing the parts, apply fresh engine oil to all sliding and rotating surfaces.
- Replace oil seals with new ones.

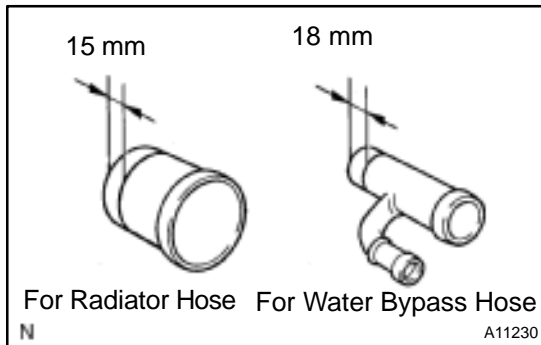


1. INSTALL WATER HOSE UNIONS

HINT:

When using a new cylinder head, water hose unions must be installed.


- (a) Mark the standard position away from the edge, onto the water hose union.

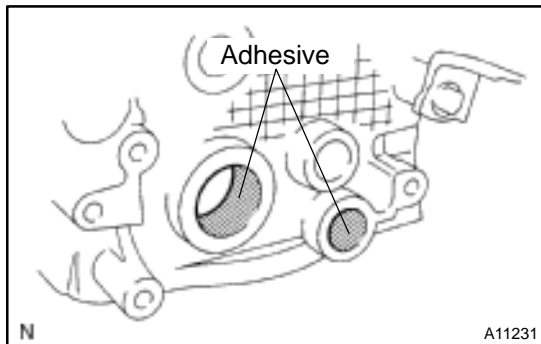

- (b) Apply adhesive to the water hose union hole of the cylinder head.

Adhesive:

Part No.08833-00070, THREE BOND 1324 or equivalent

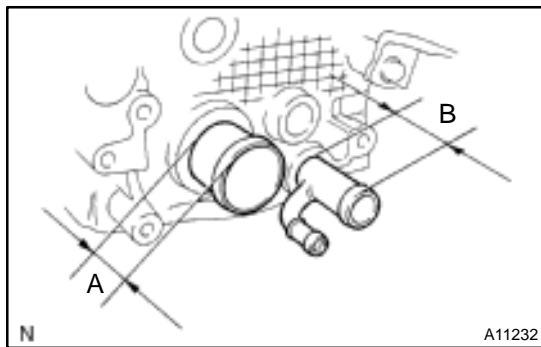

- (c) Using a press, press in a new water hose union until there is protruding from the cylinder head.


Standard protrusion:

A 29 mm (1.14 in.)

B 44 mm (1.73 in.)


NOTICE:

Avoid pressing a new water hose union in too far by measuring the amount of protrusion while pressing.

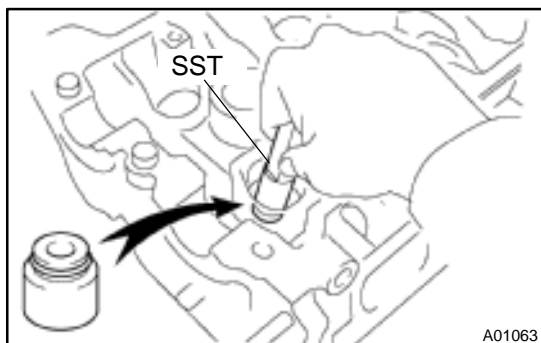

2. INSTALL VALVES


- (a) Using SST, push in a new oil seal.
SST 09201-41020

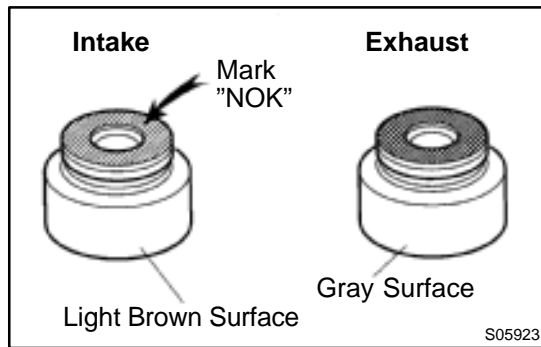**HINT:**


The intake valve oil seal is light brown and the exhaust valve oil seal is gray.

NOTICE:


Pay much attention assembling the oil seal for intake and exhaust. Assembling the wrong one may cause a failure.

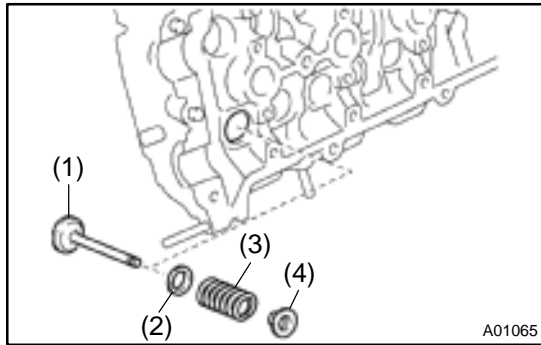

- (b) Install the valve (1), spring (2), valve spring (3), and spring retainer (4).

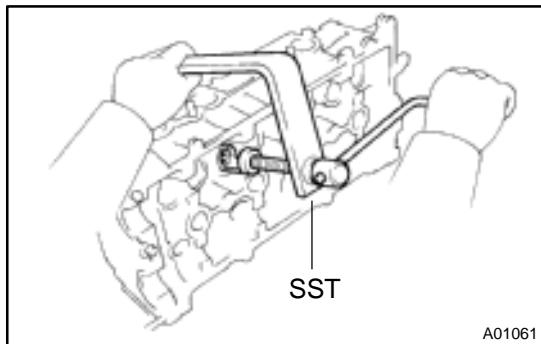

- (c) Using SST, compress the valve spring and place the 2 keepers around the valve stem.
SST 09202-70020 (09202-00010)

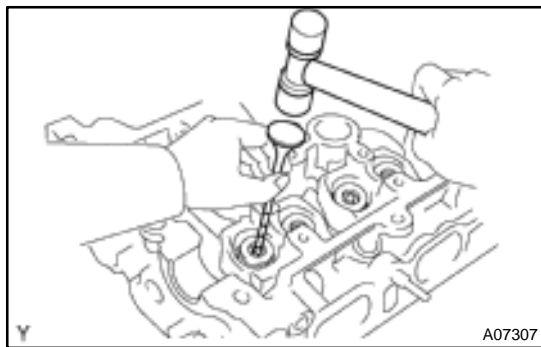

- (d) Using a plastic-faced hammer and the valve stem (not in use) tip wound with vinyl tape, lightly tap the valve stem tip to ensure a proper fit.

NOTICE:

Be careful not to damage the valve stem tip.


3. INSTALL VALVE LIFTERS

- (a) Install the valve lifter.
(b) Check that the valve lifter rotates smoothly by hand.

INSTALLATION

HINT:

- Thoroughly clean all parts to be assembled.
- Before installing the parts, apply fresh engine oil to all sliding and rotating surfaces.
- Replace all gaskets and oil seals with new ones.

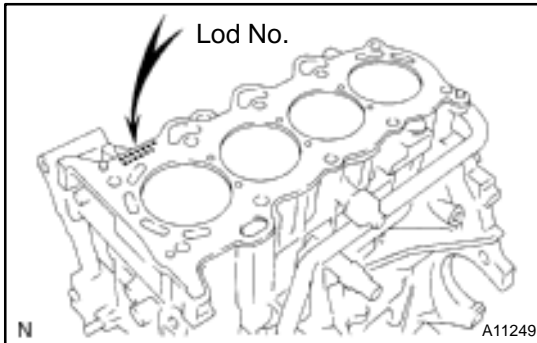


1. PLACE CYLINDER HEAD ON CYLINDER BLOCK

- Place a new cylinder head gasket on the cylinder block surface with the Lod No. stamp upward.

NOTICE:

Be careful of the installation direction.

- Place the cylinder head quietly in order not to damage the gasket with the bottom part of the head.

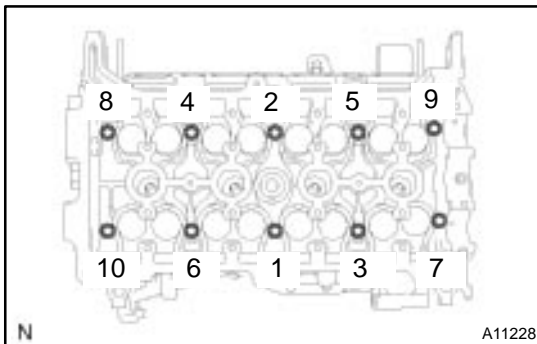

2. INSTALL CYLINDER HEAD BOLTS


HINT:

- The cylinder head bolts are tightened in 2 progressive steps (steps (b) and (d)).
- If any cylinder head bolt is broken or deformed, replace it.

- Apply a light coat of engine oil on the threads and under the heads of the cylinder head bolts.
- Using a 10 mm bi-hexagon wrench, install and uniformly tighten the 10 cylinder head bolts and plate washers, in several passes, in the sequence shown.

Torque: 29.4 N·m (300 kgf·cm, 22 ft·lbf)


If any one of the cylinder head bolts does not meet the torque specification, replace the cylinder head bolt.

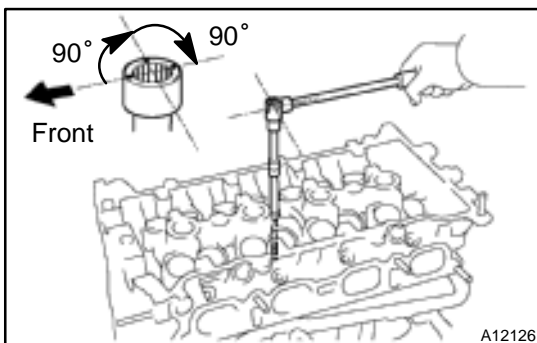

- Mark the front of the cylinder head bolt with paint.
- Retighten the cylinder head bolts by 90° and 90° in the numerical order shown.
- Check that the paint mark is now at a 180° angle to the front.
- Install the bolt holding the water bypass pipe to the cylinder head.


Torque: 9.0 N·m (92 kgf·cm, 80 in.-lbf)

- (g) Connect the upper radiator hose to the water hose unions.
- (h) Connect the heater hose to the water hose unions.

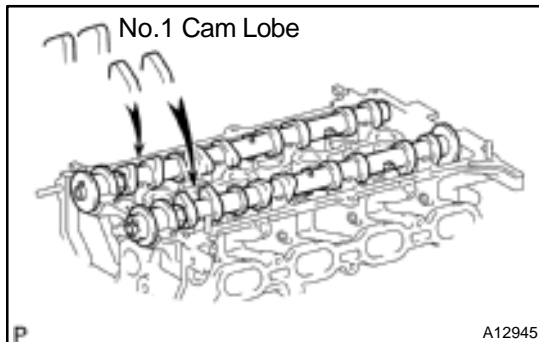

3. INSTALL CAMSHAFTS

- (a) Place the 2 camshafts on the cylinder head with the No.1 cam lobes facing as shown the illustration.

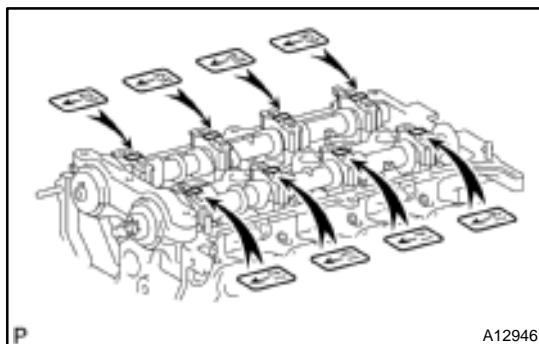


- (b) Install the bearing caps in their proper locations.

HINT:

No. 2 camshaft bearing cap has a number and front mark.

- (c) Apply a light coat of engine oil on the threads and under the heads of the bearing cap bolts.

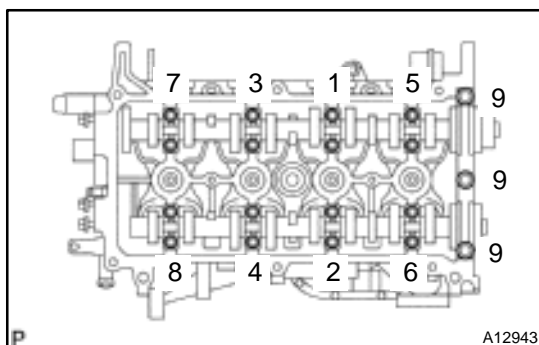

- (d) Install and uniformly tighten the 19 bearing cap bolts. After tightening the No.1 camshaft bearing cap, tighten then in several passes, in the sequence shown.

Torque:

No. 1 23 N·m (235 kgf·cm, 17 ft·lbf)

No. 2 12.7 N·m (130 kgf·cm, 10 ft·lbf)

4. INSTALL VALVE TIMING CONTROLLER ASSEMBLY AND CAMSHAFT TIMING SPROCKET


- (a) Apply engine oil in the rage from the tip of the intake camshaft to 16 mm from that tip.
- (b) Except leaded gasoline spec:
Align the timing mark on the valve timing controller assembly with the knock pin, and install the value timing controller assembly to the camshaft.

NOTICE:

Do not push valve timing controller assembly to the camshaft forcibly when installing it.


- (c) Align the knock pin hole in the camshaft timing sprocket with the knock pin of the camshaft, and install the sprocket to the camshaft.

- (d) Temporarily install the timing sprocket bolt.
- (e) Hold the hexagon head portion of the camshaft with a wrench, and install the bolt.
Torque: 64 N·m (650 kgf-cm, 47 ft-lbf)
- 5. **CHECK AND ADJUST VALVE CLEARANCE**
(See page [EM-5](#))
- 6. **INSTALL CYLINDER HEAD COVER**
(See page [EM-21](#))
- 7. **INSTALL OIL CONTROL VALVE**
- 8. **INSTALL OIL FILTER CAP**
- 9. **INSTALL PCV VALVE**
- 10. **INSTALL ECT SENSOR**
(See page [SF-49](#))
- 11. **INSTALL CAMSHAFT POSITION SENSOR**
(See page [IG-10](#))
- 12. **INSTALL TIMING CHAIN COVER**
(See page [EM-21](#))

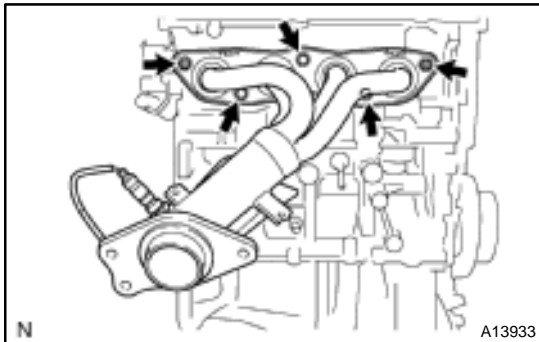


13. INSTALL EXHAUST MANIFOLD

- (a) Install a new gasket and the exhaust manifold with the 3 bolts 2 nuts. Uniformly tighten the bolts and nuts in several passes.
Torque: 27 N·m (275 kgf-cm, 20 ft-lbf)
- (b) Install the upper heat insulator with the 4 bolts.
Torque: 8.0 N·m (82 kgf-cm, 71 in.-lbf)

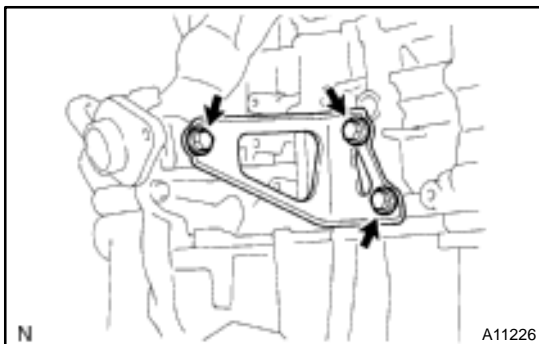


14. INSTALL EXHAUST MANIFOLD STAY

- Install the manifold stay with the 3 bolts. Alternately tighten the bolts.
Torque: 37 N·m (377 kgf-cm, 27 ft-lbf)

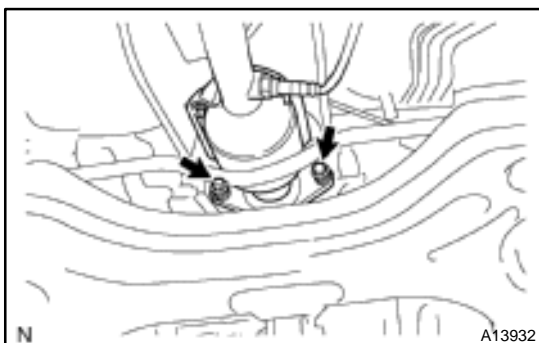

15. CONNECT FRONT EXHAUST PIPE TO EXHAUST MANIFOLD

- (a) Place a new gasket to the exhaust manifold.
- (b) Install the 2 bolts and 2 springs holding the front exhaust pipe to the exhaust manifold.
Torque: 62 N·m (630 kgf-cm, 46 ft-lbf)

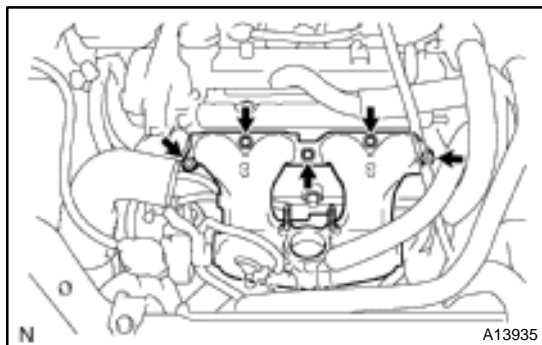**16. INSTALL INTAKE MANIFOLD**

Install a new gasket, the intake manifold and 2 brackets with the 2 bolts and 2 nuts. Uniformly tighten the bolts and nuts in several passes.

Torque: 20 N·m (204 kgf-cm, 15 ft-lbf)

**17. CONNECT ENGINE WIRE TO CYLINDER HEAD**


- (a) Install the engine wire protector to the cylinder head cover with the 2 bolts.
- (b) Connect the water ECT sensor connector.
- (c) Connect the camshaft position sensor connector.
- (d) Connect the oil control valve connector.
- (e) Connect the 4 injector connectors.

18. INSTALL THROTTLE BODY

(See page [SF-31](#))

19. INSTALL PCV HOSES**20. INSTALL SPARK PLUGS**

(See page [IG-1](#))

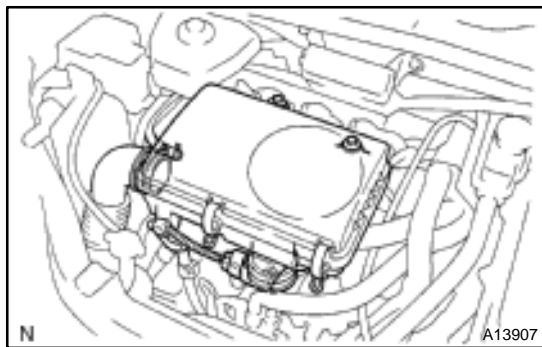21. INSTALL IGNITION COILS (See page [IG-7](#))**22. INSTALL AIR CLEANER ASSEMBLY**

- (a) Install the air cleaner assembly with the 2 bolts.
- (b) Tighten the 2 hose clamps.
- (c) Connect the EVAP hose to the air cleaner case.
- (d) Connect the MAF meter connector.

23. INSTALL CONVERTER AND INVERTER ASSEMBLY (See page [HV-18](#))**24. INSTALL OUTER FR COWL TOP PANEL ASSEMBLY (See page [BO-32](#))****25. FILL WITH ENGINE COOLANT****26. FILL WITH HV COOLANT****27. INSTALL ENGINE UNDER COVERS****28. CONNECT BATTERY NEGATIVE (-) TERMINAL AND HV BATTERY SERVICE PLUG (See page [HV-1](#))**


29. ROAD TEST VEHICLE

Check for abnormal noises, shock slippage, correct shift points and smooth operation.

30. RECHECK ENGINE COOLANT AND HV COOLANT


ENGINE UNIT COMPONENTS

EM11Z-02

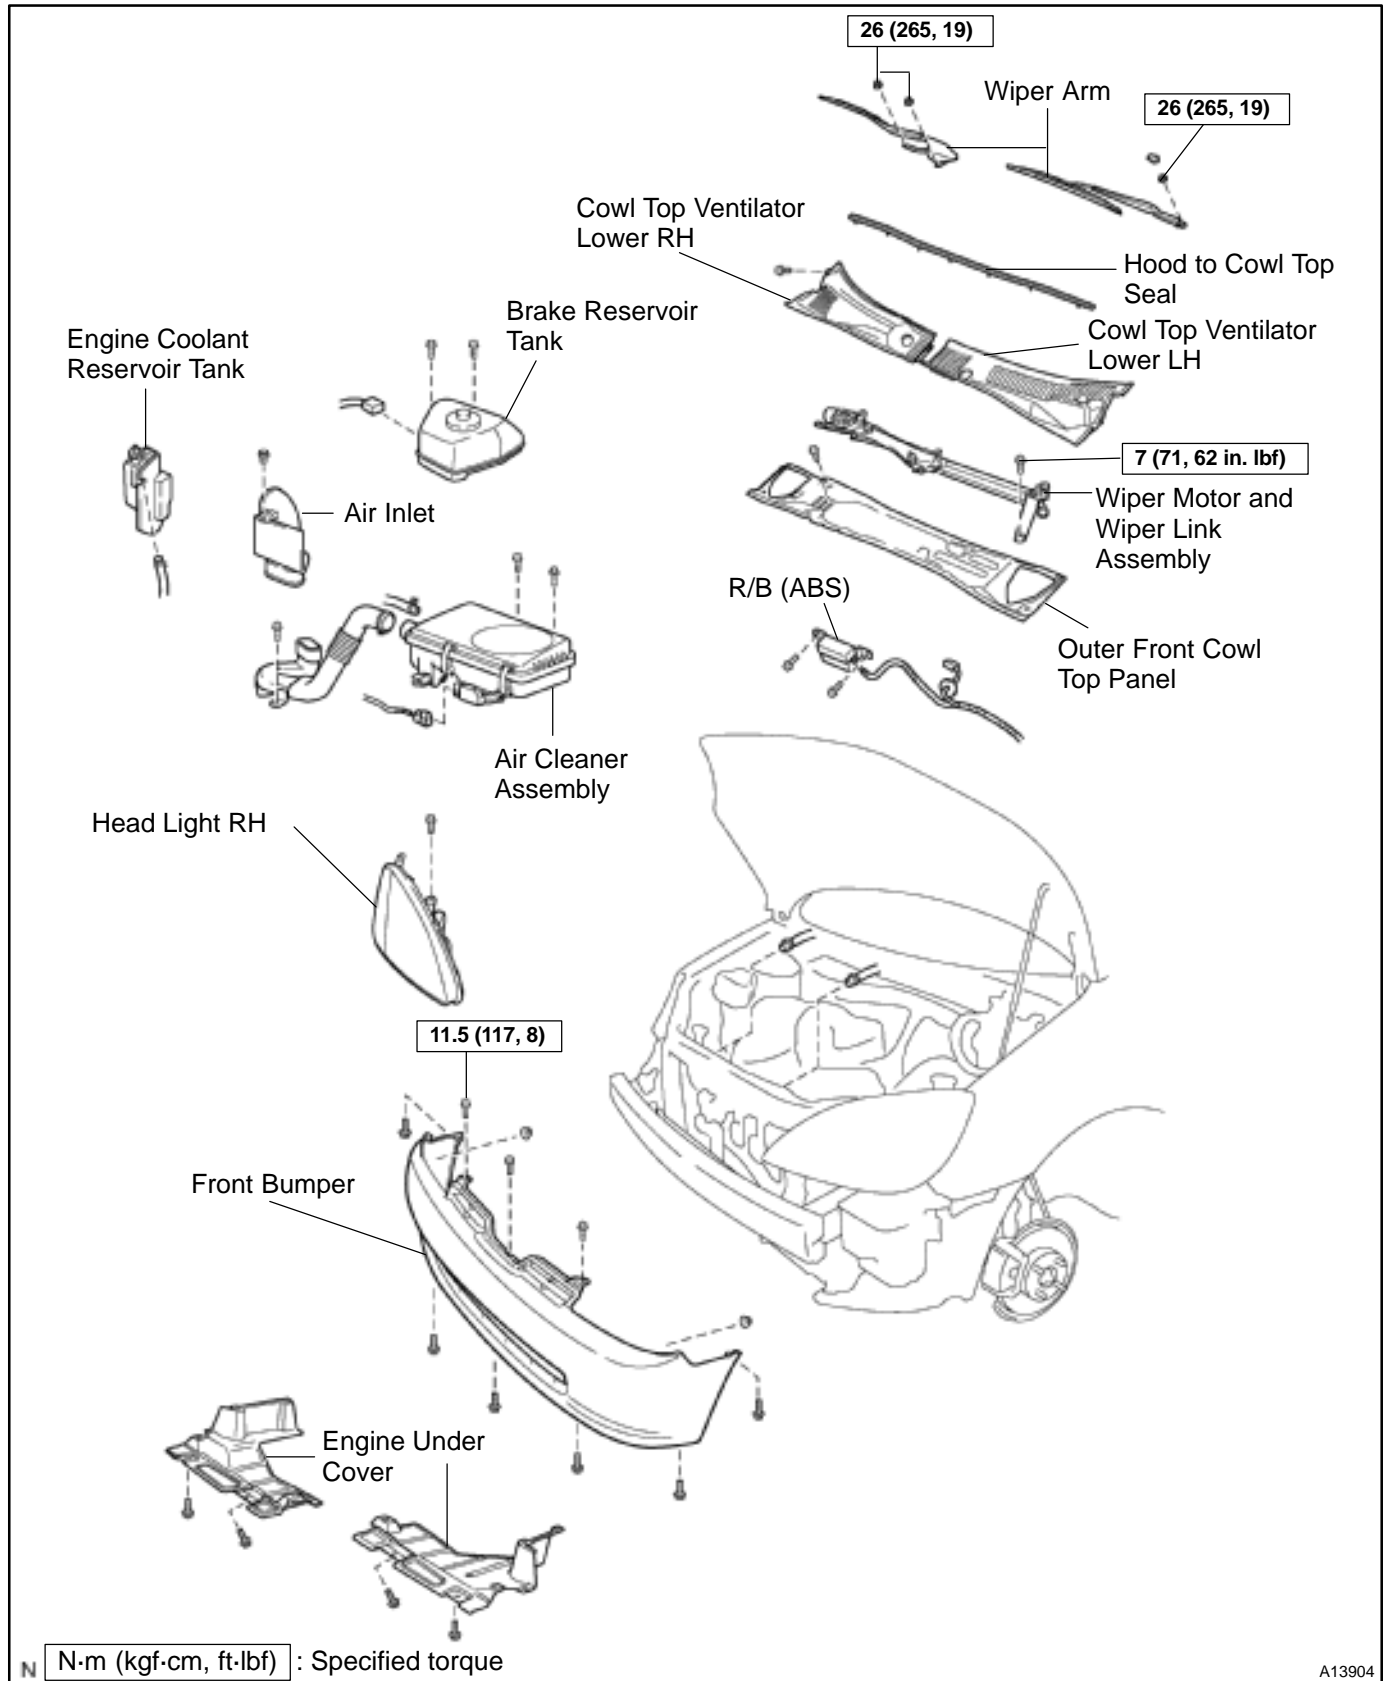

cardiagn.com


A13904

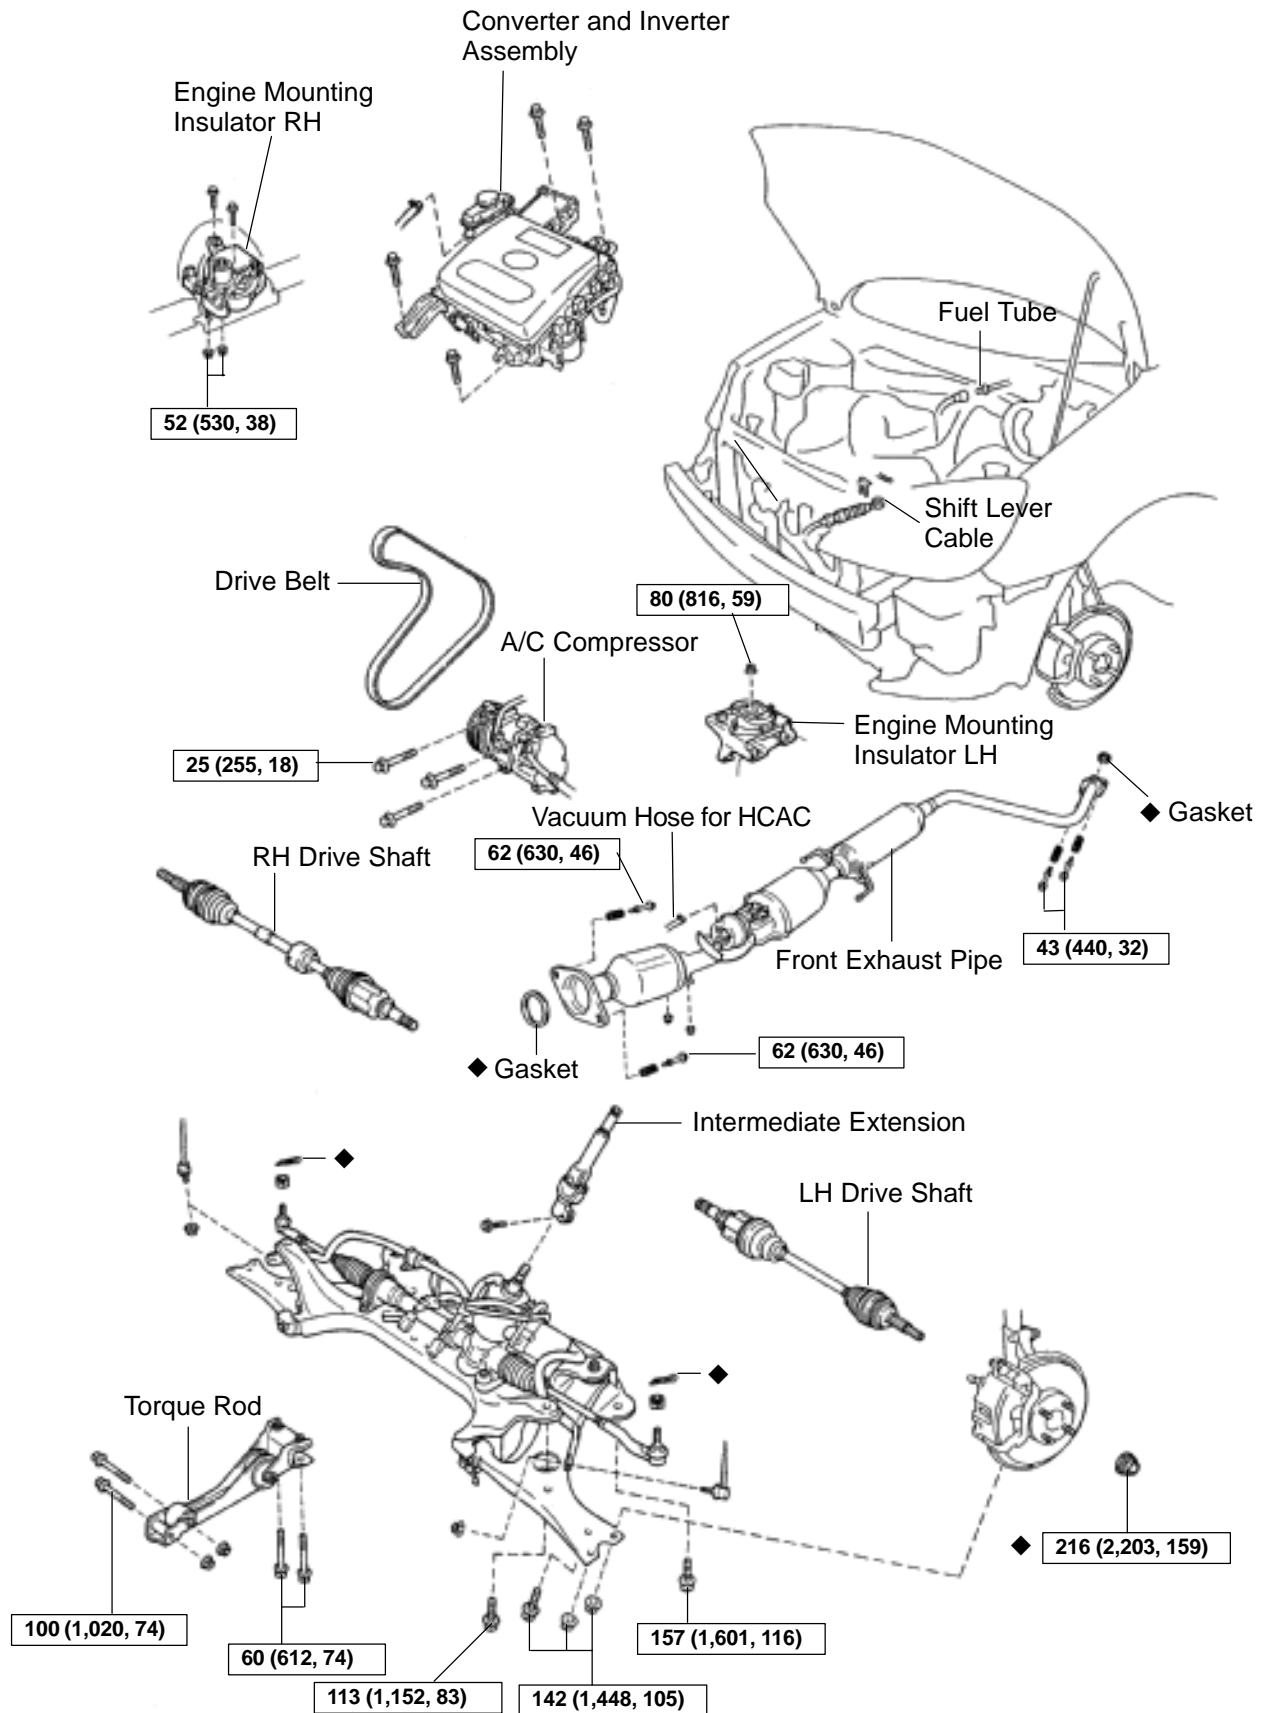

N·m (kgf·cm, ft·lbf) : Specified torque


◆ Non-reusable part

A13905

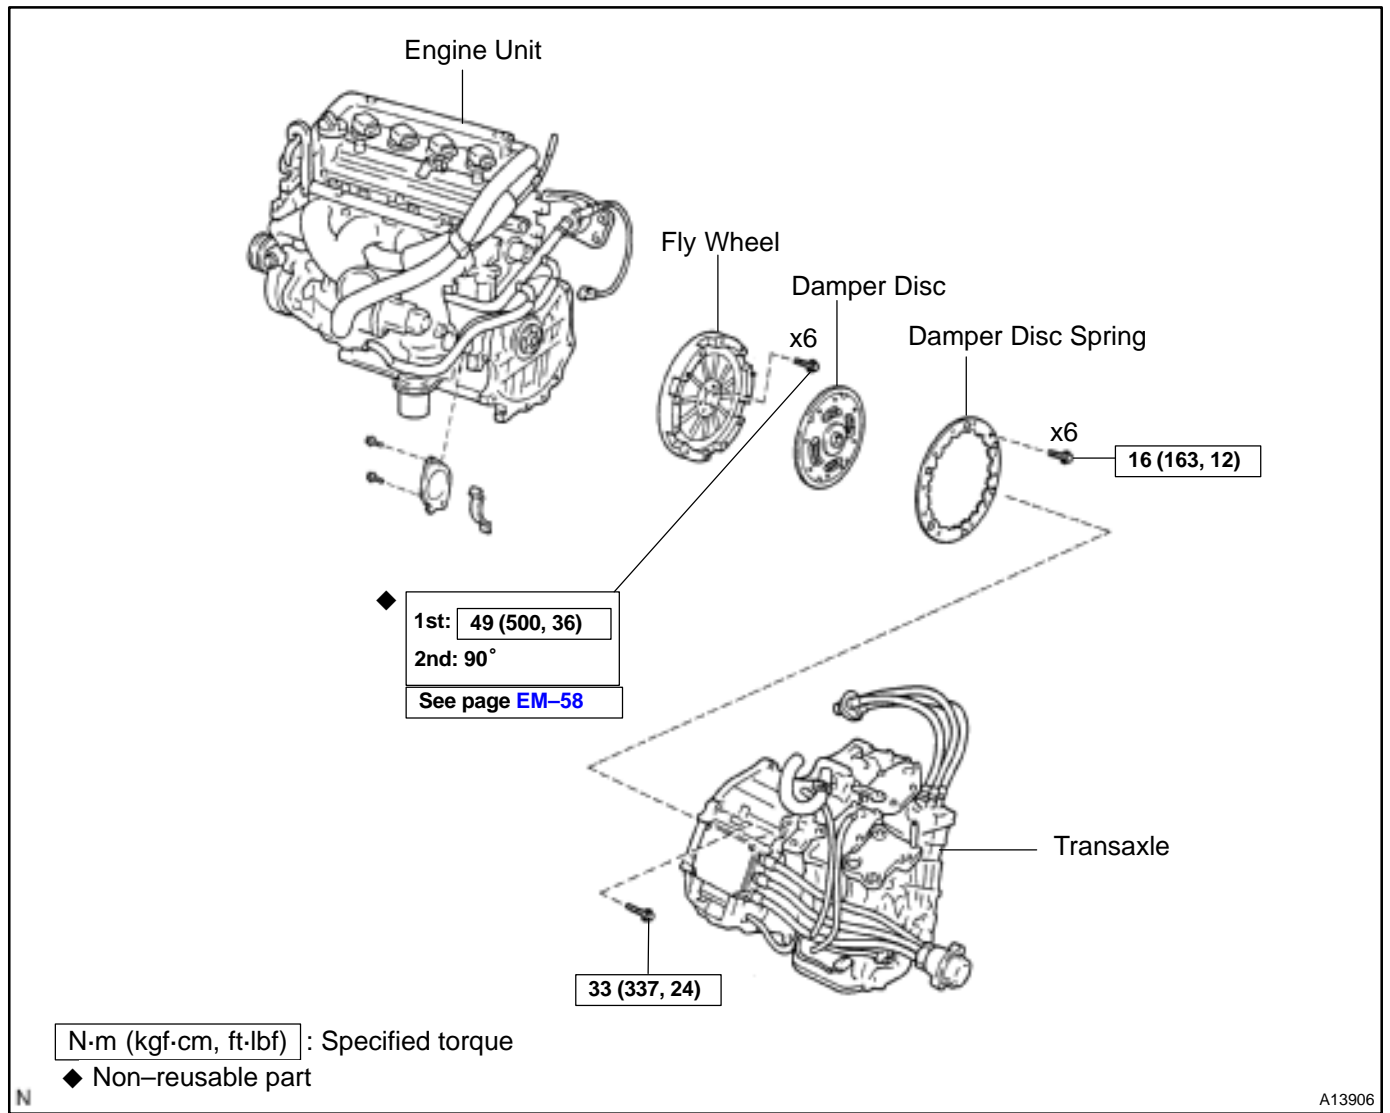


REMOVAL


1. DISCONNECT BATTERY NEGATIVE (-) TERMINAL AND HV BATTERY SERVICE PLUG
(See page [HV-1](#))
2. REMOVE OUTER FRONT COWL TOP PANEL ASSEMBLY (See page [BO-32](#))
3. DRAIN HV COOLANT (See page [HT-8](#))
4. DRAIN ENGINE COOLANT
5. REMOVE CONVERTER AND INVERTER ASSEMBLY
(See page [HV-18](#))
6. REMOVE HEATER UNIT WATER PUMP
(See page [AC-55](#))

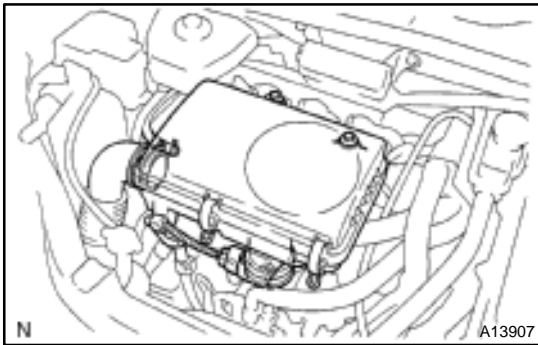


7. REMOVE AIR CLEANER ASSEMBLY
 - (a) Disconnect the MAF meter connector.
 - (b) Disconnect the EVAP hose from the air cleaner case.
 - (c) Loosen the 2 hose clamps.
 - (d) Remove the 2 bolts and air cleaner assembly.

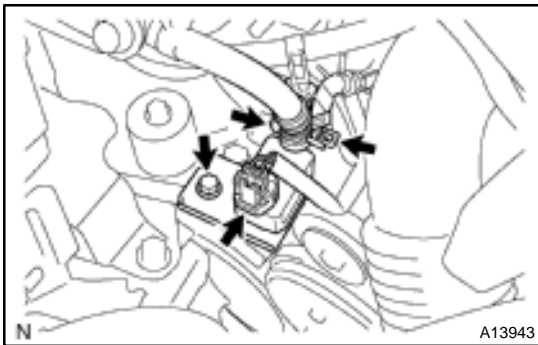


8. DISCONNECT CONNECTORS, CLAMPS AND HOSES
 - (a) Disconnect the engine wire clamps.
 - (b) Disconnect the heated oxygen sensor connector.
 - (c) Disconnect the 2 power steering connectors.
 - (d) Disconnect the VSV connector for purge line.
 - (e) Disconnect the VSV hose for purge line.
 - (f) Disconnect the ground strap from RH fender apron.
 - (g) Disconnect the ground strap from LH fender apron.
9. REMOVE AIR INLET
10. REMOVE ENGINE COOLANT RESERVOIR TANK
11. DISCONNECT 2 RADIATOR HOSES FROM RADIATOR
12. DISCONNECT HEATER HOSE FROM CYLINDER BLOCK

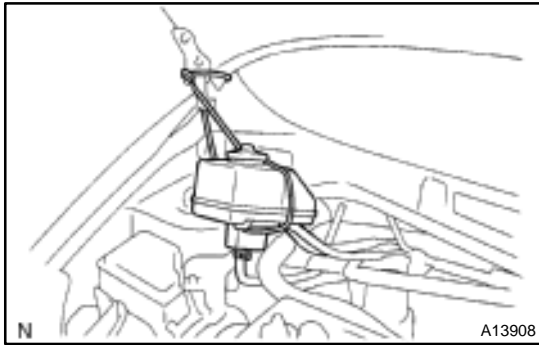**13. DISCONNECT SHIFT LEVER CABLE****14. REMOVE BRAKE RESERVOIR TANK**


- (a) Disconnect the brake fluid level sensor connector.
- (b) Remove the 2 bolts and remove the reservoir tank and suspend it.

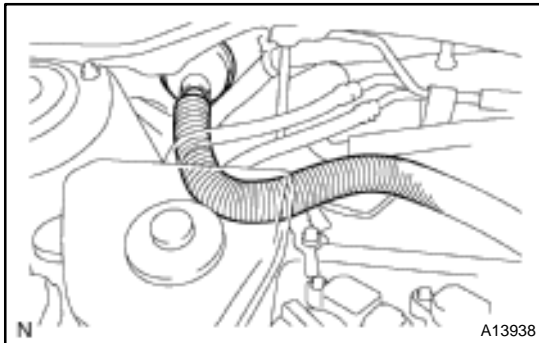**15. DISCONNECT ENGINE WIRE FROM CABIN**

- (a) Remove the ECM (See page [SF-63](#)).
- (b) Disconnect the grommet from the cowl panel, and pull out the engine wire.

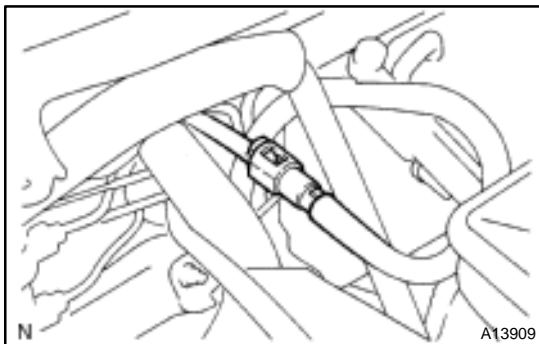16. REMOVE J/B NO. 1 FROM RH FENDER APRON**17. DISCONNECT FUEL TUBE**


Disconnect the fuel tube from the fuel pump.

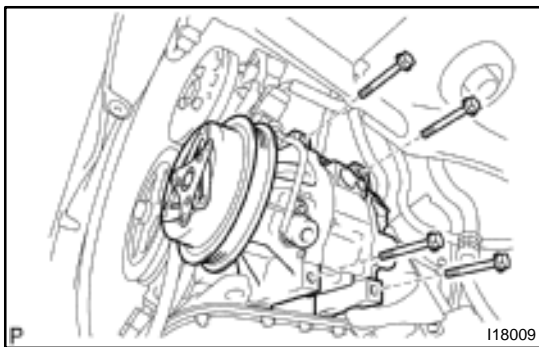18. REMOVE DRIVE BELT**19. REMOVE ENGINE UNDER COVERS****20. REMOVE A/C COMPRESSOR**


- (a) Disconnect the A/C compressor connector.
- (b) Remove the 4 bolts and disconnect the A/C compressor from the engine.

HINT:

Suspend the A/C compressor securely.

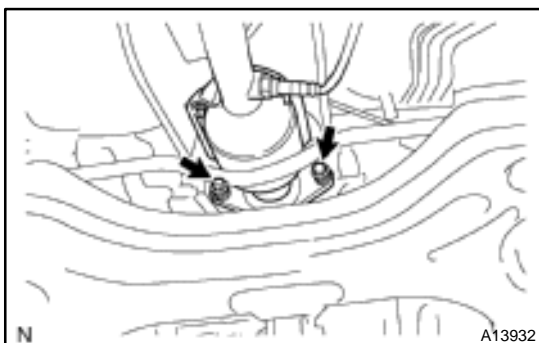21. DISCONNECT INTERMEDIATE EXTENSION FROM STEERING ASSEMBLY (See page [SR-6](#))**22. REMOVE EXHAUST PIPE**

- (a) Disconnect the heated oxygen sensor from the exhaust pipe.
- (b) Remove the 2 springs and 3 bolts.
- (c) Disconnect the 2 O-rings, and remove the exhaust pipe and 2 gaskets.

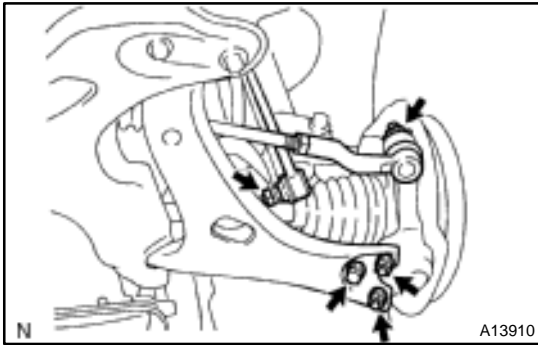

23. DISCONNECT TIE ROD END FROM STEERING KNUCKLE (See page [SA-9](#))


24. DISCONNECT STABILIZER BAR LINK

Remove the nut and disconnect the stabilizer bar link from the suspension member.

25. DISCONNECT BALL JOINT FROM LOWER ARM


Remove the 2 bolts and 4 nuts, disconnect the ball joint.

26. REMOVE DRIVE SHAFTS (See page [SA-17](#))

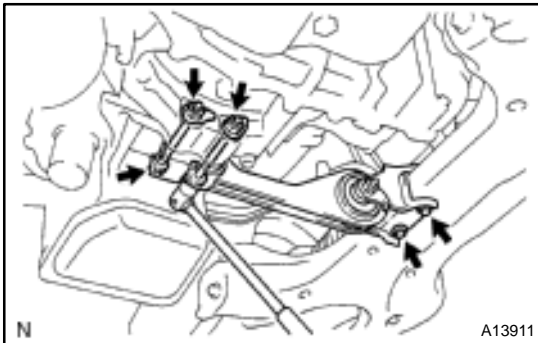


27. REMOVE TORQUE ROD

Remove the 4 bolts and 2 nuts and torque rod from the body.

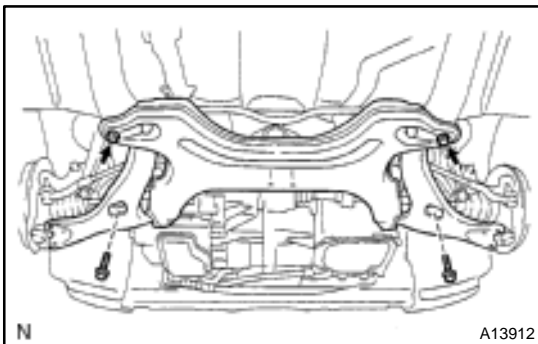

28. REMOVE SUSPENSION MEMBER

Remove the 4 bolts and disconnect the suspension member from the body.

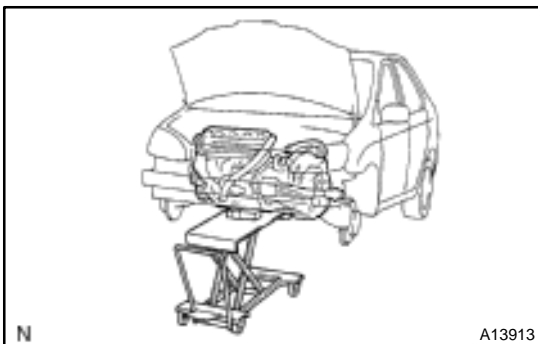

29. SET ENGINE JACK


NOTICE:

Using chain, hold the engine tightly.




30. DISCONNECT ENGINE MOUNTINGS

(a) Remove the 2 bolts, 2 nuts and disconnect the RH engine mounting insulator from the bracket.

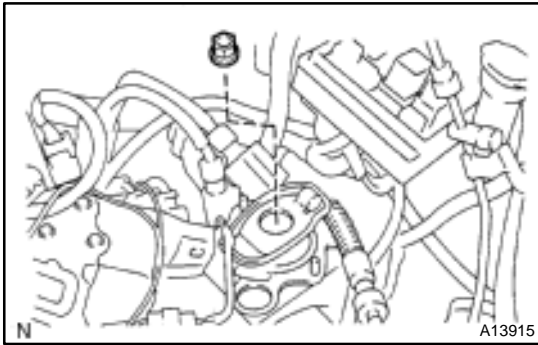

- (b) Remove the nut and disconnect the LH engine mounting from the insulator.

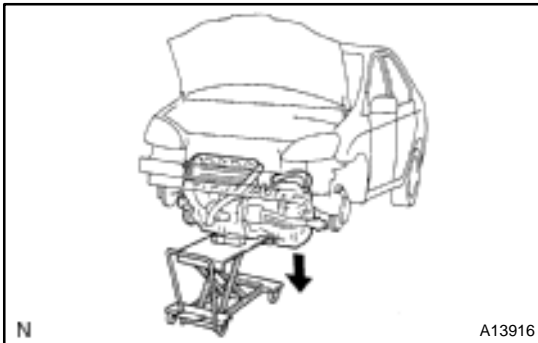

31. REMOVE ENGINE AND TRANSAXLE ASSEMBLY

- (a) Lower the engine out of vehicle slowly and carefully.

NOTICE:

Make sure the engine is clear of all wiring, hoses and cables.

- (b) Using a engine sliding device, and place the engine and transaxle assembly onto the stand.

32. SEPARATE ENGINE AND TRANSAXLE


- (a) Remove the 2 bolts and dust cover.

- (b) Remove the 6 bolts and transaxle from the engine.

33. REMOVE DAMPER DISC

Using SST, hold the crankshaft pulley, remove the 6 bolts and damper disc and spring.


SST 09213-58012 (91111-580845), 09330-00021

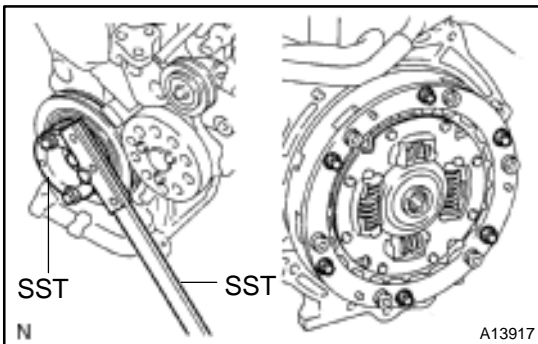


34. REMOVE FLYWHEEL

Using SST, hold the crankshaft pulley, remove the 6 bolts and flywheel.

SST 09213-58012 (91111-580845), 09330-00021

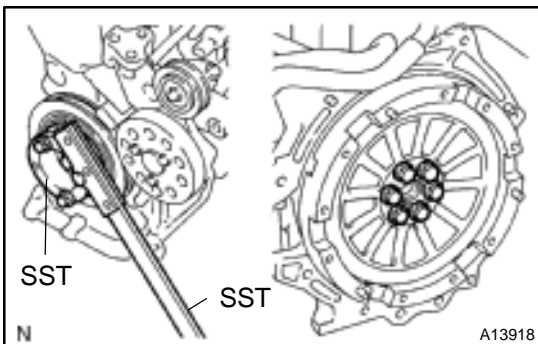

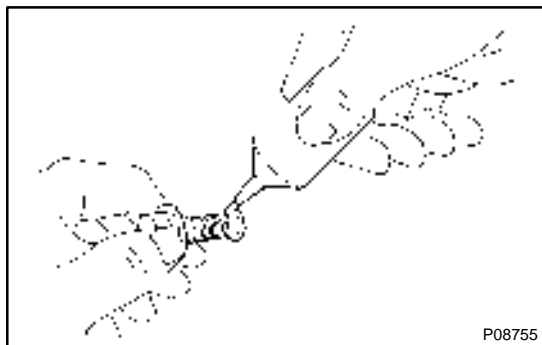


INSTALLATION

1. INSTALL FLYWHEEL

- (a) Apply adhesive to 2 or 3 threads of the bolt end.


Adhesive: Part No. 08833-00070, THREE BOND 1324 or equivalent

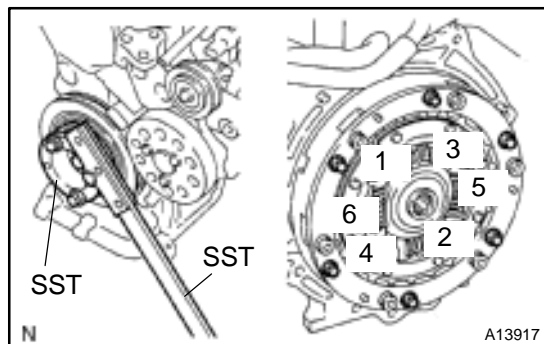

- (b) Install and uniformly tighten the new 6 bolts in several passes, in the sequence shown.

Torque: 84 N·m (857 kgf-cm, 62 ft-lbf)

- (c) Retighten the flywheel bolts by 90° in the numerical order shown.

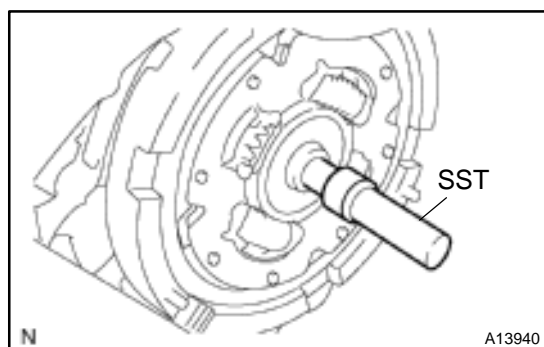

2. INSTALL DAMPER DISC

- (a) Insert SST in the damper disc, then insert them in the flywheel.

SST 09301-00110

HINT:


Take care not to insert damper disc in the wrong direction.

- (b) Set the damper spring on the damper disc.
 (c) Following the procedures shown in the illustration, tighten the 6 bolts in the order starting the bolt locating near the knock pin on the top.

Torque: 16 N·m (163 kgf-cm, 12 ft-lbf)

HINT:

- Following the order in the illustration, tighten the bolts at a time evenly.
- Move SST up and down, right and left lightly, after checking that the disc is in the center, tighten the bolts.

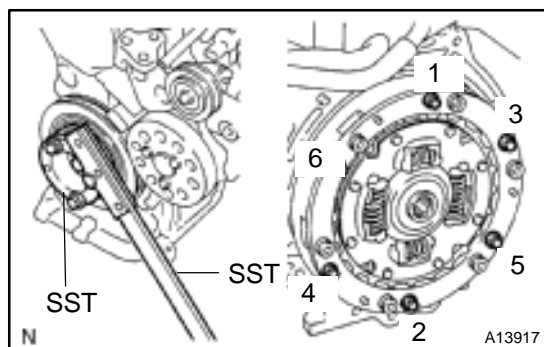

3. INSTALL TRANSAXLE TO ENGINE


- (a) Attach the transaxle to the engine, and install the 6 bolts.

Torque: 33 N·m (337 kgf-cm, 24 ft-lbf)

- (b) Install the dust cover.

- (c) Install the LH engine mounting bracket.

Torque: 52 N·m (530 kgf-cm, 38 ft-lbf)

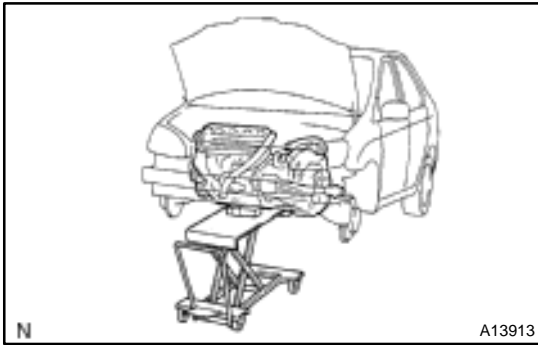

4. SET ENGINE JACK

NOTICE:

Using a chain, hold the engine tightly.

5. INSTALL ENGINE AND TRANSAXLE ASSEMBLY IN VEHICLE

- Raise the engine into the engine compartment.
- Keep the engine level, and align RH and LH mountings with the insulator.




- Connect the LH mounting bracket to the insulator with the nut.

Torque: 80 N·m (816 kgf-cm, 59 ft-lbf)

- Connect the RH mounting bracket to the insulator with the 2 bolts and 2 nuts.

Torque: 52 N·m (530 kgf-cm, 38 ft-lbf)

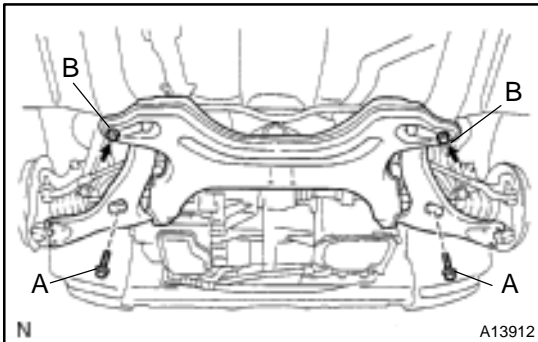


6. INSTALL SUSPENSION MEMBER

Connect the suspension member with the 4 bolts.

Torque:

Bolt A: 113 N·m (1,152 kgf-cm, 83 ft-lbf)

Bolt B: 157 N·m (1,601 kgf-cm, 116 ft-lbf)

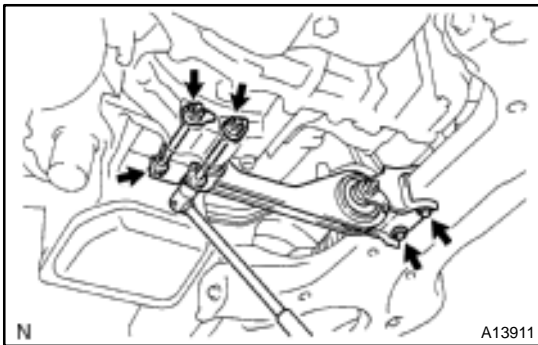

7. INSTALL TORQUE ROD


- Install the torque rod through bolt and nut.

Torque: 100 N·m (1,020 kgf-cm, 74 ft-lbf)

- Install the 2 bolts.

Torque: 60 N·m (612 kgf-cm, 44 ft-lbf)

8. INSTALL DRIVE SHAFTS (See page [SA-23](#))

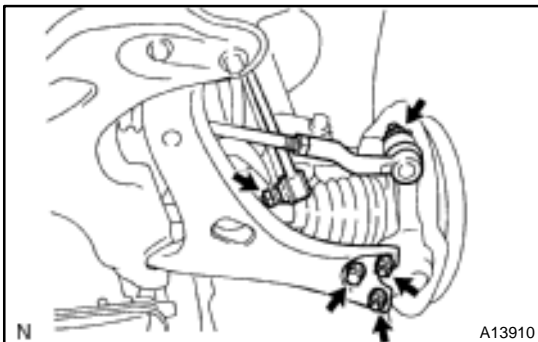


9. CONNECT BALL JOINT TO LOWER ARM

Torque: 142 N·m (1,448 kgf-cm, 105 ft-lbf)

10. CONNECT STABILIZER BAR LINK

Torque: 74 N·m (755 kgf-cm, 55 ft-lbf)


11. CONNECT TIE ROD END TO STEERING KNUCKLE (See page [SA-14](#))

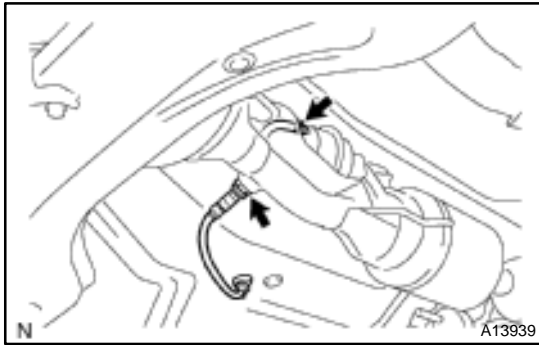**12. INSTALL EXHAUST PIPE**

- (a) Install the 2 gaskets to the exhaust pipe and connect the 2 O-rings.
- (b) Install the 2 springs and 3 bolts.

Torque:**Front exhaust pipe: 62 N·m (630 kgf·cm, 46 ft·lbf)****Tailpipe: 32 N·m (326 kgf·cm, 24 ft·lbf)**



- (c) Connect the hose to the actuator.
- (d) Connect the heated oxygen sensor.

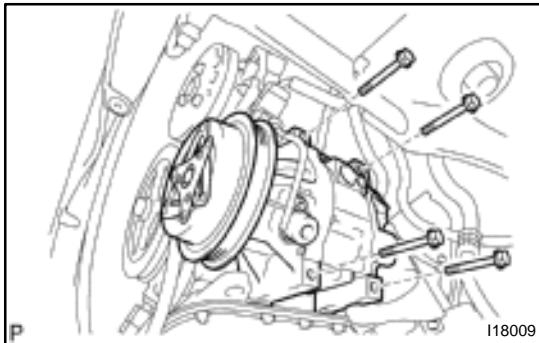**13. INSTALL A/C COMPRESSOR**

- (a) Connect the A/C compressor to the engine with the 4 bolts.

Torque: 25 N·m (255 kgf·cm, 18 ft·lbf)

- (b) Connect the A/C compressor connector.

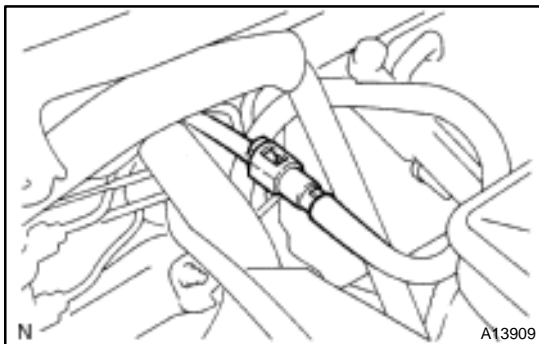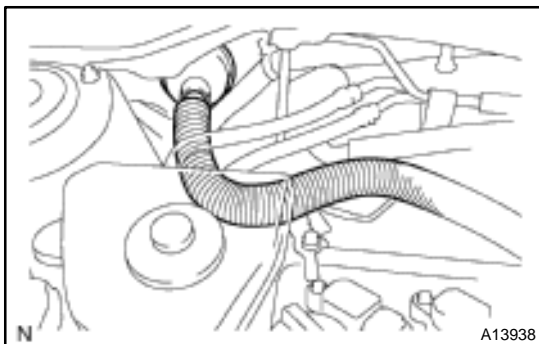
14. CONNECT INTERMEDIATE EXTENSION STEERING ASSEMBLY (See page [SR-14](#))**15. INSTALL DRIVE BELT (See page [SA-23](#))****16. CONNECT FUEL TUBE****17. INSTALL J/B NO. 1 TO RH FENDER APRON****18. CONNECT ENGINE WIRE TO CABIN**

- (a) Pull in the engine wire to the cowk panel and connect the grommet.
- (b) Connect the ECM connectors.
- (c) Install the ECM (See page [SF-63](#)).


19. INSTALL BRAKE RESERVOIR TANK

- (a) Install the reservoir tank with the 2 bolts.
- (b) Connect the brake fluid level sensor connector.

20. CONNECT SHIFT LEVER CABLE TO TRANSAXLE**21. CONNECT HEATER HOSE TO CYLINDER BLOCK****22. CONNECT 2 RADIATOR HOSES TO RADIATOR****23. INSTALL ENGINE COOLANT RESERVOIR TANK****24. INSTALL AIR INLET**

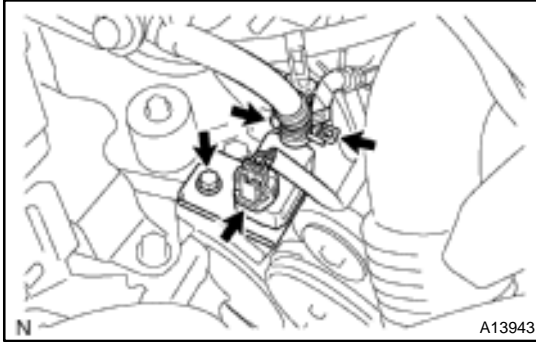**25. CONNECT CONNECTORS, CLAMPS AND HOSES**

- (a) Connect the Ground strap from LH fender apron.
- (b) Connect the Ground strap from RH fender apron.
- (c) Connect the VSV hose for purge line.
- (d) Connect the VSV connector for purge line.
- (e) Connect the 2 power steering connectors.
- (f) Connect the Heated oxygen sensor connector.
- (g) Connect the Engine wire clamps.

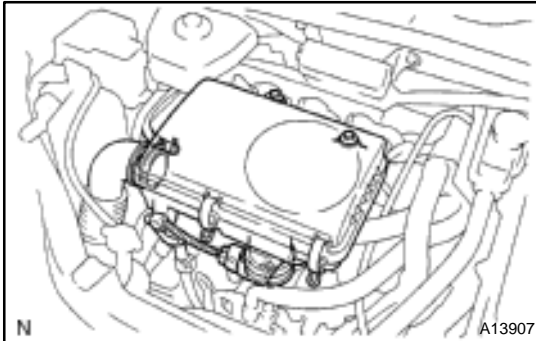**26. INSTALL AIR CLEANER ASSEMBLY**

- (a) Install the air cleaner assembly with the 2 bolts.
- (b) Tighten the 2 hose clamps.
- (c) Connect the EVAP hose to the air cleaner case.
- (d) Connect the MAF meter connector.

27. INSTALL HEATER UNIT WATER PUMP

(See page [AC-55](#))

28. INSTALL CONVERTER AND INVERTER ASSEMBLY

(See page [HV-22](#))

29. INSTALL OUTER FR COWL TOP PANEL ASSEMBLY

(See page [BO-35](#))


30. FILL WITH ENGINE COOLANT**31. FILL WITH HV COOLANT****32. INSTALL ENGINE UNDER COVERS****33. CONNECT BATTERY NEGATIVE (-) TERMINAL AND HV BATTERY SERVICE PLUG (See page [HV-1](#))****34. ROAD TEST VEHICLE**

Check for abnormal noise, shock slippage, correct shift points and smooth operation.

35. RECHECK ENGINE COOLANT AND HV TRANSAXLE COOLANT

CYLINDER BLOCK COMPONENTS

EM17B-02

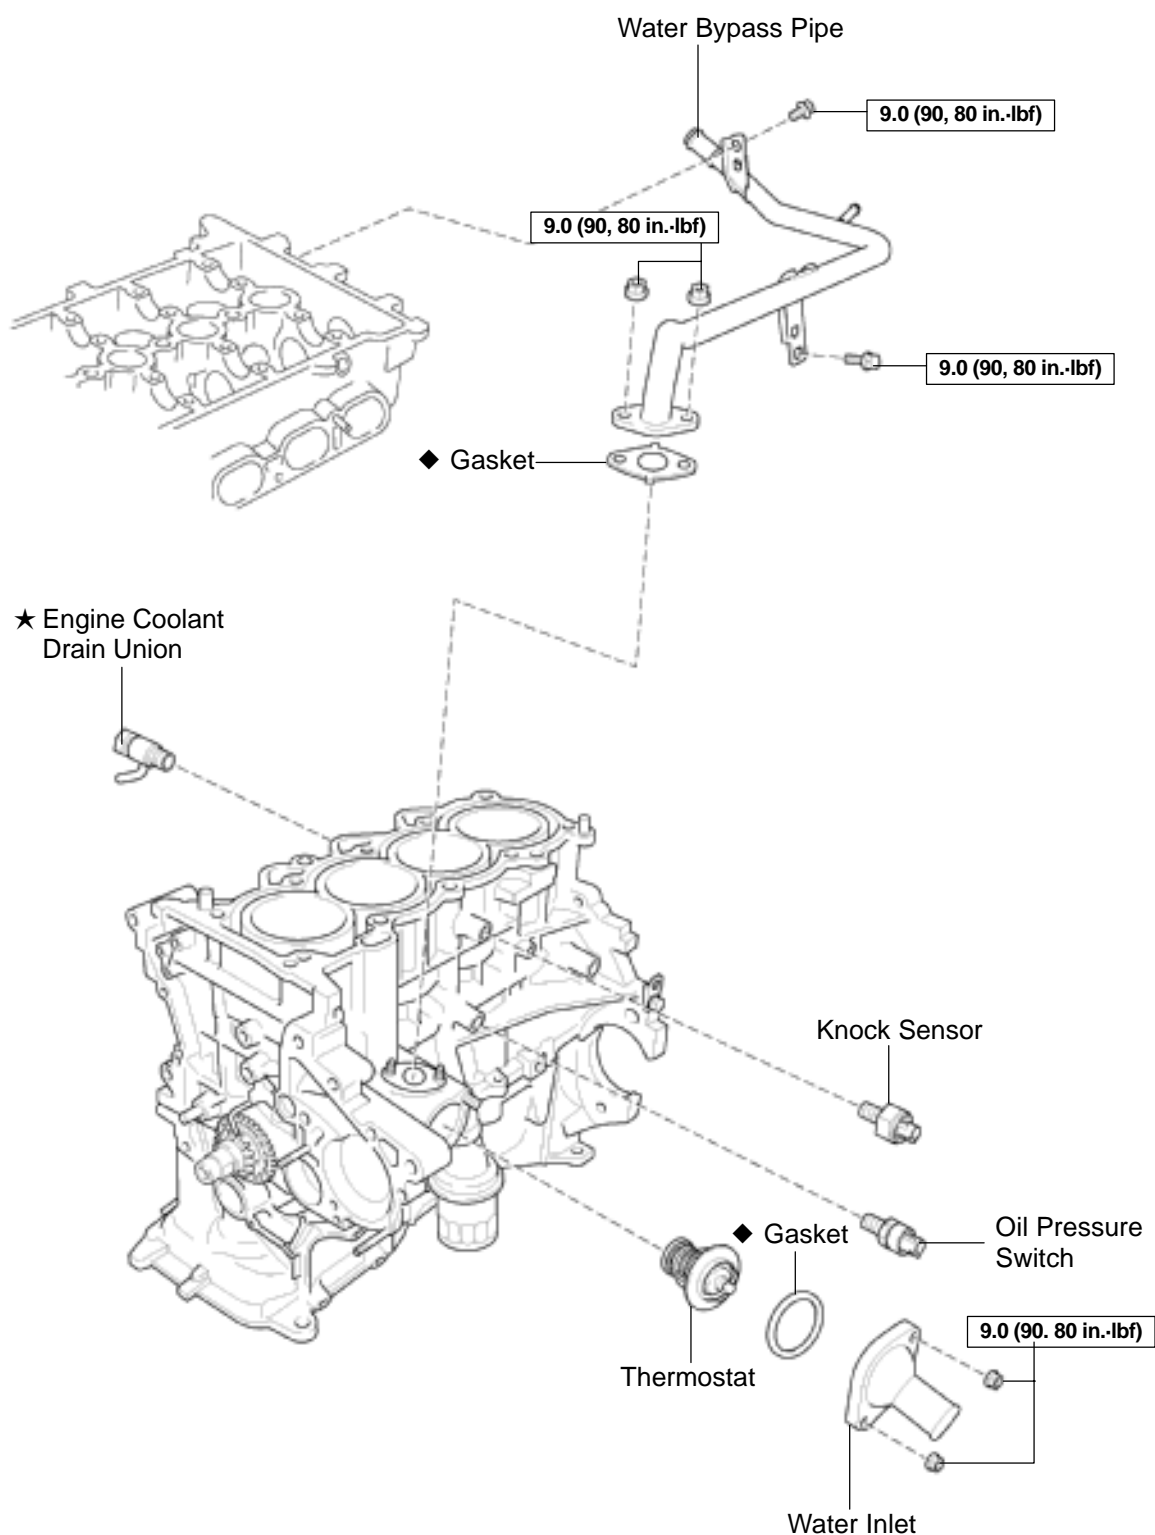


N·m(kgf·cm, ft·lbf) : Specified torque

◆ Non-reusable part

★ Precoated part

A11250

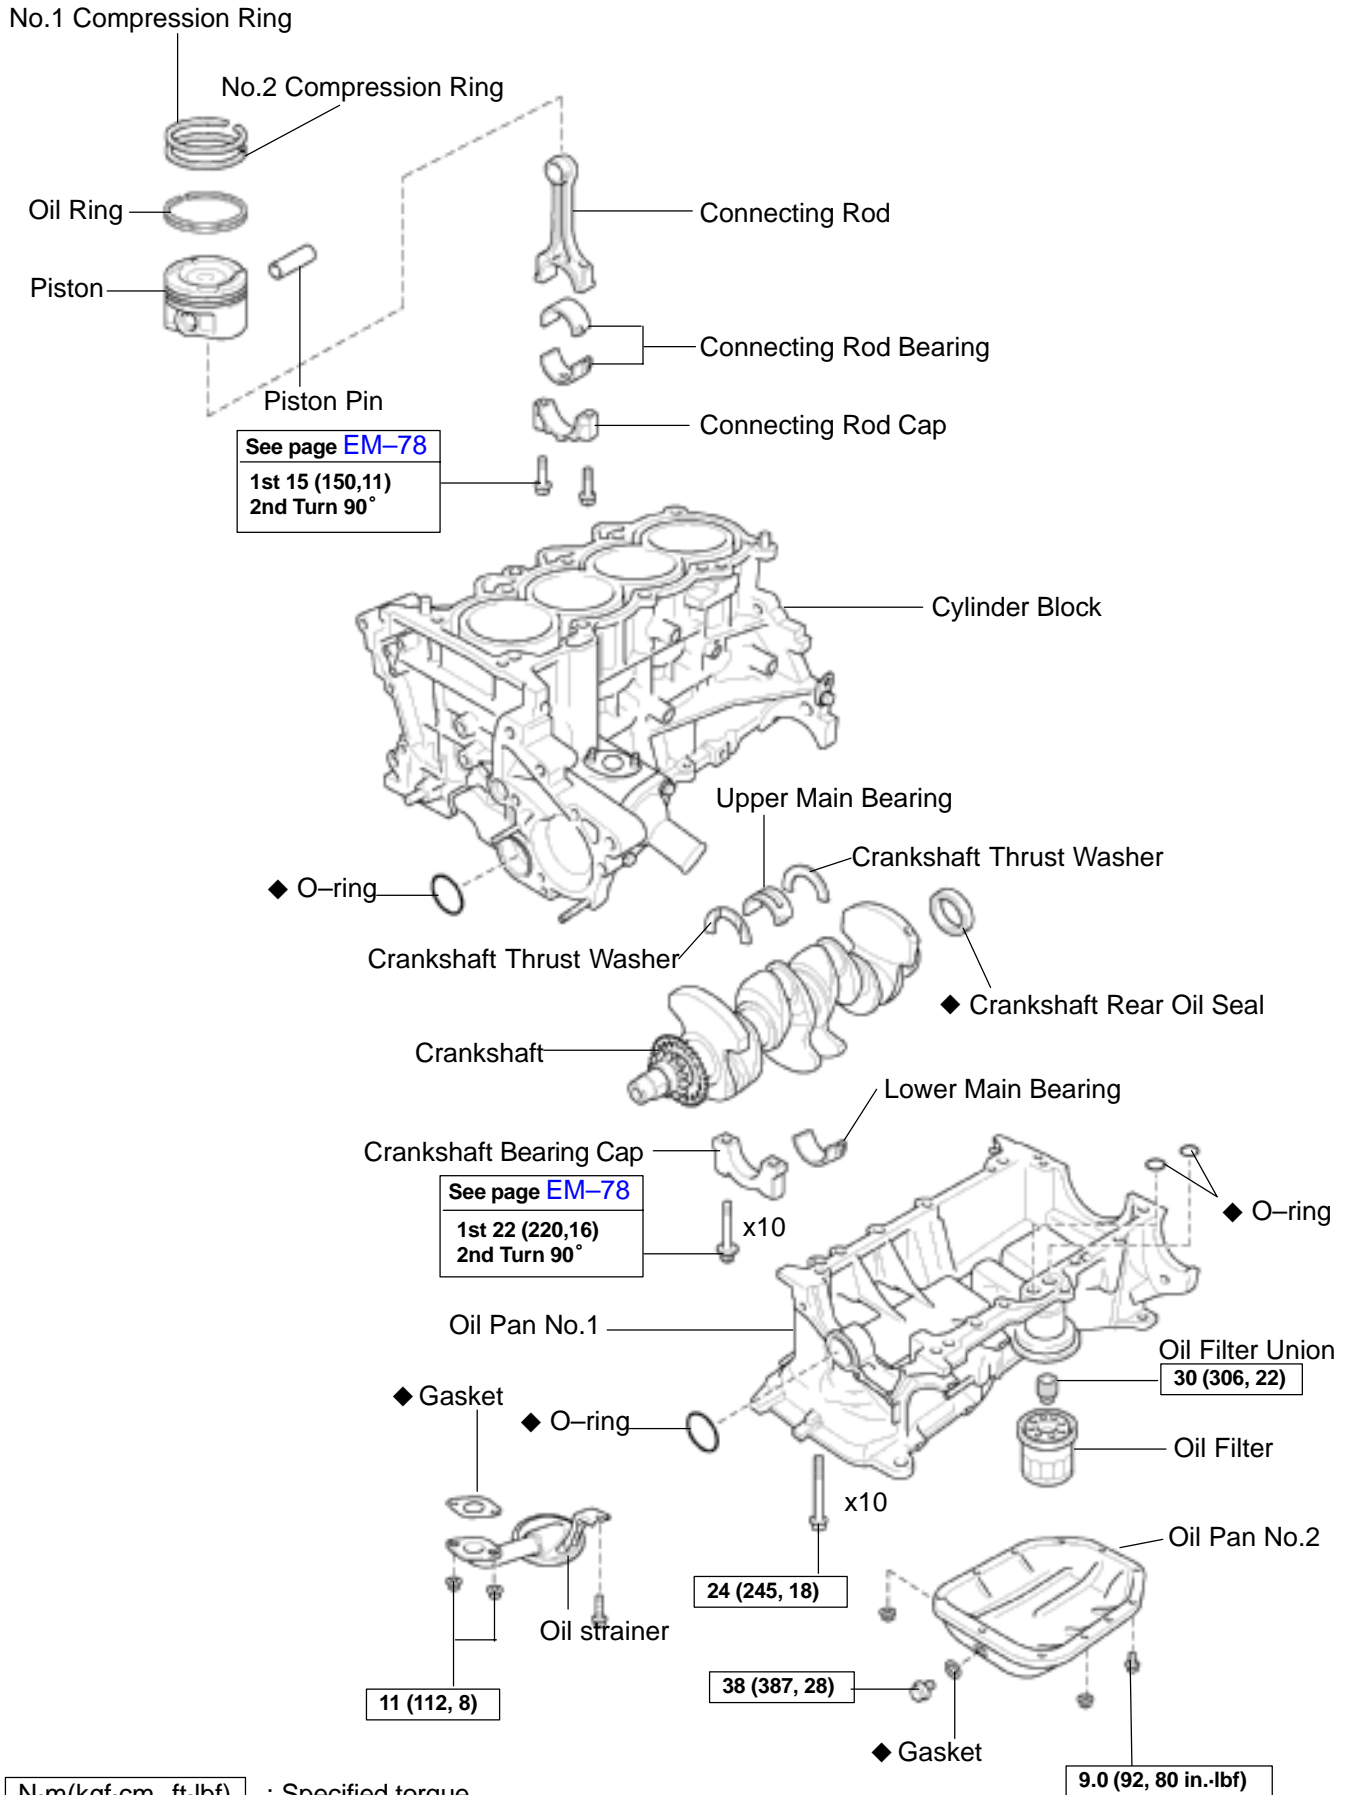


N·m(kgf·cm, ft·lbf) : Specified torque

◆ Non-reusable part

A14341

DISASSEMBLY

1. INSTALL ENGINE TO ENGINE STAND FOR DISASSEMBLY
2. REMOVE TIMING CHAIN (See page [EM-15](#))
3. REMOVE CYLINDER HEAD (See page [EM-29](#))
4. REMOVE ENGINE WIRE

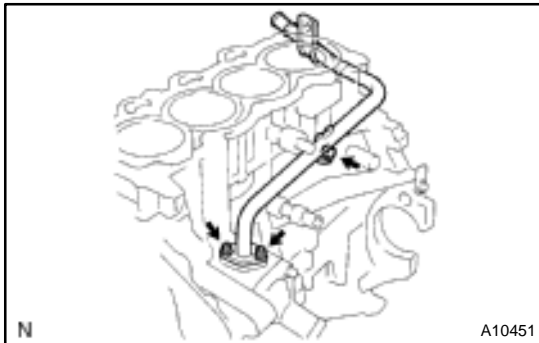

5. REMOVE WATER BYPASS PIPE

Remove the 2 nuts, bolt and water bypass pipe.

6. REMOVE THERMOSTAT

(See page [CO-10](#))

7. REMOVE KNOCK SENSOR (See page [SF-56](#))

8. REMOVE OIL PRESSURE SWITCH

(See page [LU-1](#))


9. REMOVE ENGINE COOLANT DRAIN UNION

10. REMOVE OIL FILTER

(See page [LU-3](#))

11. REMOVE OIL FILTER UNION

Using a 12 mm hexagon wrench, remove the oil filter union.

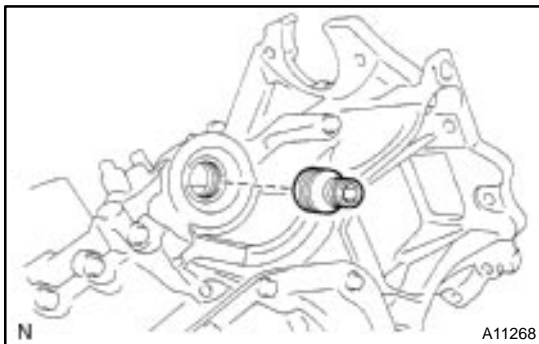

12. REMOVE OIL PAN NO. 2

- (a) Remove the 9 bolts and 2 nuts.
- (b) Insert the blade of SST between the oil pan No. 1 and oil pan No. 2, and cut off applied sealer and remove the oil pan.



SST 09032-00100


NOTICE:

- Be careful not to damage the oil pan contact surface of the oil pan No. 1.
- Be careful not to damage the oil pan No. 2 flange.


13. REMOVE OIL STRAINER

Remove the bolt and 2 nuts, oil strainer and gasket.

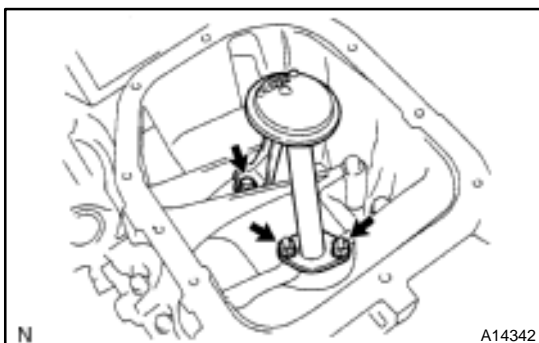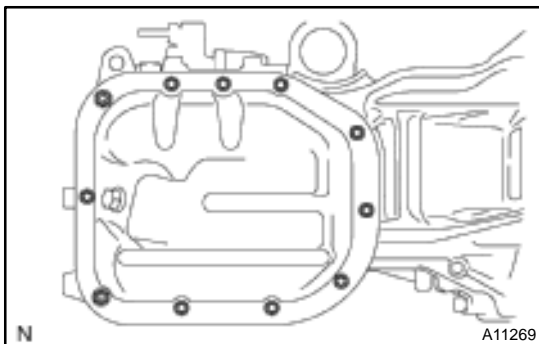


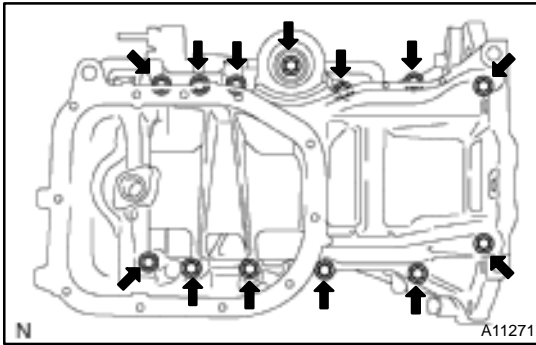**14. REMOVE OIL PAN NO. 1**

- (a) Uniformly loosen and remove the 13 bolts, in several passes, in the sequence shown.

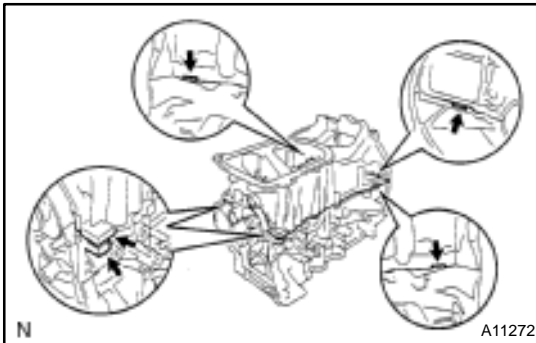

- (b) Using screwdriver remove the oil pan No. 1 by prying the portions between the cylinder block and oil pan No. 1.
 (c) Remove the 2 O-rings from the cylinder block.

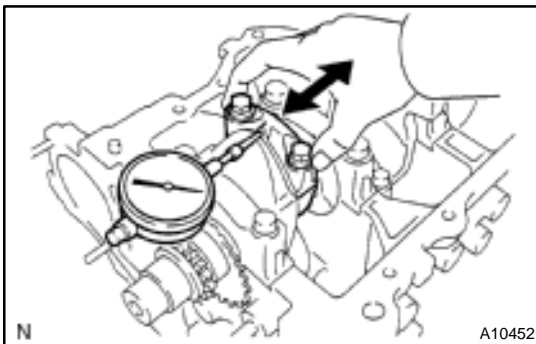**15. CHECK CONNECTING ROD THRUST CLEARANCE**

Using a dial indicator, measure the thrust clearance while moving the connecting rod back and forth.


Standard thrust clearance:

0.16 – 0.36 mm (0.0063 – 0.0142 in.)


Maximum thrust clearance:

0.36 mm (0.0142 in.)

If the thrust clearance is greater than maximum, replace the connecting rod assembly(s). If necessary, replace the crankshaft.

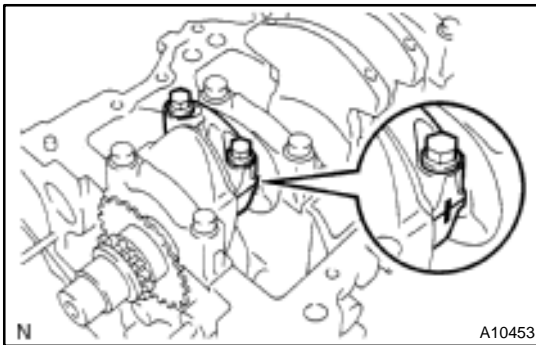**16. REMOVE CONNECTING ROD CAPS AND CHECK OIL CLEARANCE**

- (a) Check the matchmarks on the connecting rod and cap are aligned to ensure correct reassembly.
 (b) Remove the 2 connecting rod cap bolts.

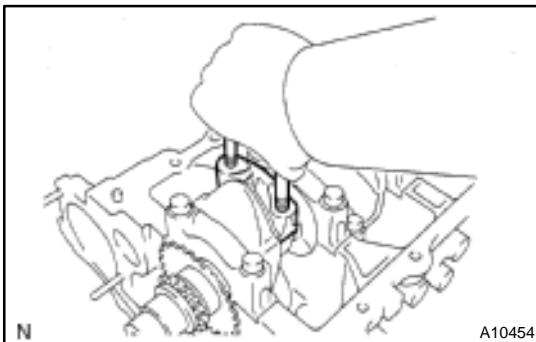


- (c) Using the 2 removed connecting rod cap bolts, remove the connecting rod cap and lower bearing by wiggling the connecting rod cap right and left.

HINT:


Keep the lower bearing inserted with the connecting rod cap.

- (d) Clean the crank pin and bearing.

- (e) Check the crank pin and bearing for pitting and scratches. If the crank pin or bearing is damaged, replace the bearings. If necessary, replace the crankshaft.

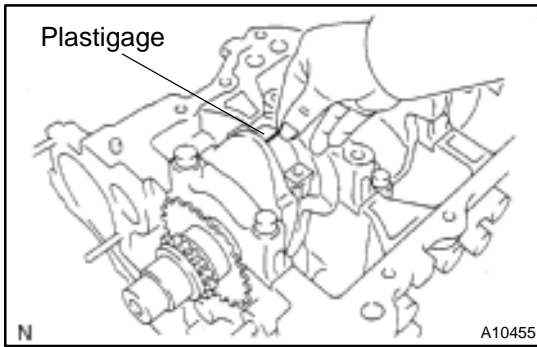

- (f) Lay a strip of Plastigage the crank pin.

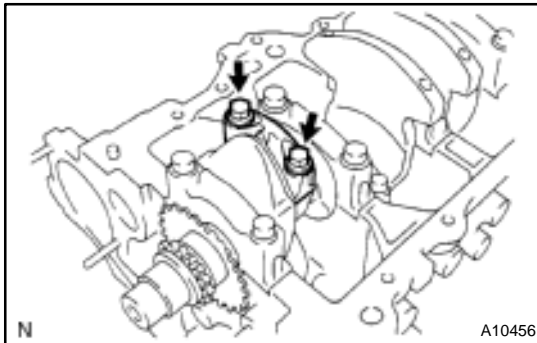

- (g) Install the connecting rod cap with the 2 bolts.
(See page [EM-78](#))


Torque:

1ST 15 N·m (150 kgf·cm, 11 ft·lbf)

2ND Turn 90°

NOTICE:

Do not turn the crankshaft.

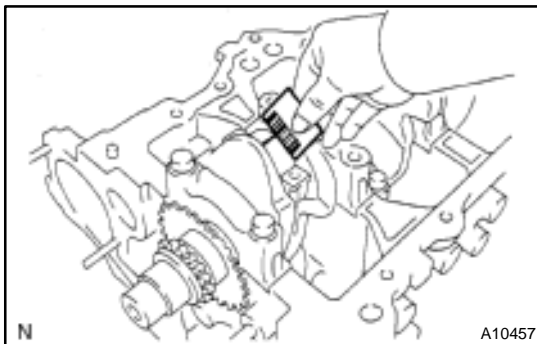

- (h) Remove the 2 bolts, connecting rod cap and lower bearing. (See procedure (b) and (c) above)

- (i) Measure the Plastigage at its widest point.


Standard oil clearance:

0.016 – 0.040 mm (0.0006 – 0.0016 in.)

Maximum oil clearance:

0.06 mm (0.0024 in.)

If the oil clearance is greater than maximum, replace the bearings. If necessary, grind or replace the crankshaft.

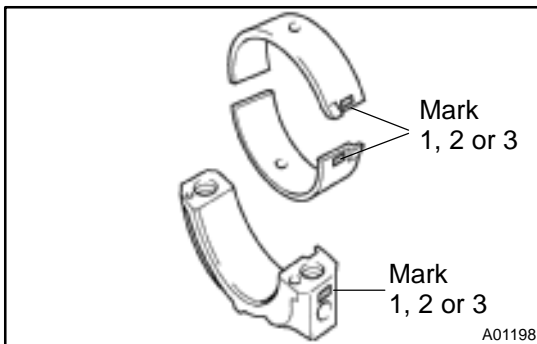

HINT:


If replacing a bearing, replace it with one having the same number as marked on the connecting rod. There are 3 sizes of standard bearings, marked "1", "2" and "3" accordingly.

Reference

Standard bearing center wall thickness

Mark	mm (in.)
"1"	1.488 – 1.492 (0.0586 – 0.0587)
"2"	1.492 – 1.496 (0.0587 – 0.0589)
"3"	1.496 – 1.500 (0.0589 – 0.0591)

- (j) Completely remove the plastigage.

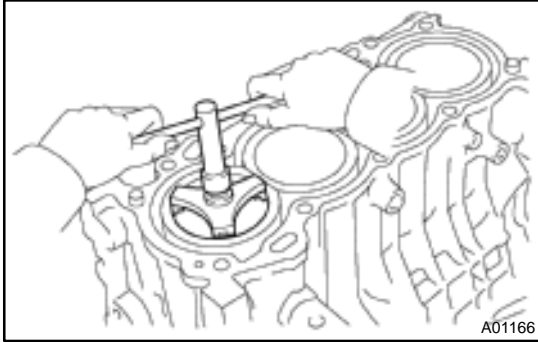


17. REMOVE PISTON AND CONNECTING ROD ASSEMBLIES

- (a) Using a ridge reamer, remove all the carbon from the top of the cylinder.
- (b) Push the piston, connecting rod assembly and upper bearing through the top of the cylinder block.

HINT:

- Keep the bearings, connecting rod and cap together.
- Arrange the piston and connecting rod assemblies in the correct order.

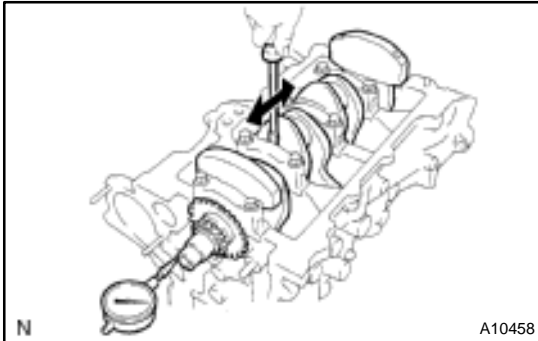

18. CHECK CRANKSHAFT THRUST CLEARANCE

Using a dial indicator, measure the thrust clearance while moving the crankshaft back and forth.

Standard thrust clearance:

0.09 – 0.19 mm (0.0035 – 0.0075 in.)


Maximum thrust clearance:

0.3 mm (0.012 in.)

If the thrust clearance is greater than maximum, replace the thrust washer as a set.


Thrust washer thickness:

2.430 – 2.480 mm (0.09567 – 0.09764 in.)

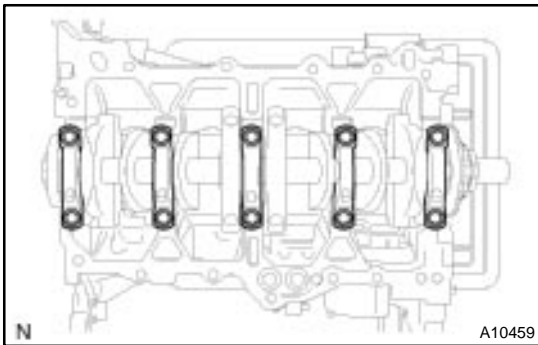

19. REMOVE BEARING CAPS AND CHECK OIL CLEARANCE

- (a) Uniformly loosen and remove the 10 bearing cap bolts in several passes in the sequence shown.

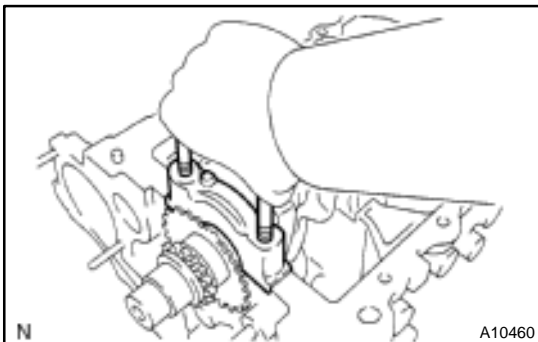

- (b) Using the 2 removed bearing cap bolts, remove the bearing cap and lower bearing by wiggling the bearing cap right and left.

HINT:

Keep the lower bearing inserted with the bearing cap.


- (c) Lift out the crankshaft.

HINT:

Keep the upper bearings and thrust washers together with the cylinder block.

- (d) Clean each main journal and bearing.

- (e) Check each main journal and bearing for pitting and scratches.
If the journal or bearing is damaged, replace the bearing.
If necessary, grind or replace the crankshaft.
- (f) Place the crankshaft on the cylinder block.

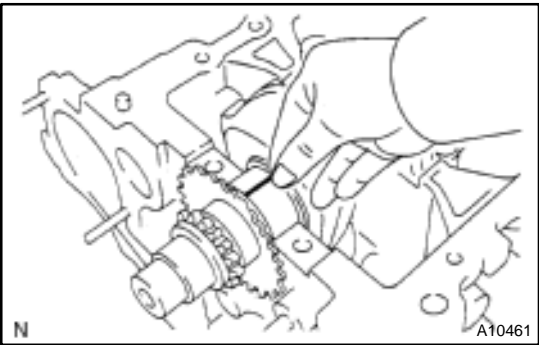


- (g) Lay a strip of plastigage across each journal.
- (h) Install the bearing caps (See page EM-45).

Torque:
1ST 22 N·m (220 kgf·cm, 16 ft·lbf)
2ND Turn 90 °


NOTICE:
Do not turn the crankshaft.

- (i) Remove the bearing caps (See procedure (a) and (b) above).

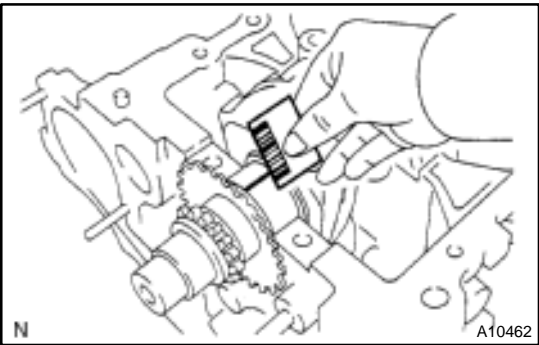

- (j) Measure the plastigage at its widest point.
Standard oil clearance:
0.010 – 0.023 mm (0.0004 – 0.0009 in.)
Maximum oil clearance:
0.07 mm (0.0028 in.)

If the oil clearance is greater than maximum, replace the bearings. If necessary, replace the crankshaft.

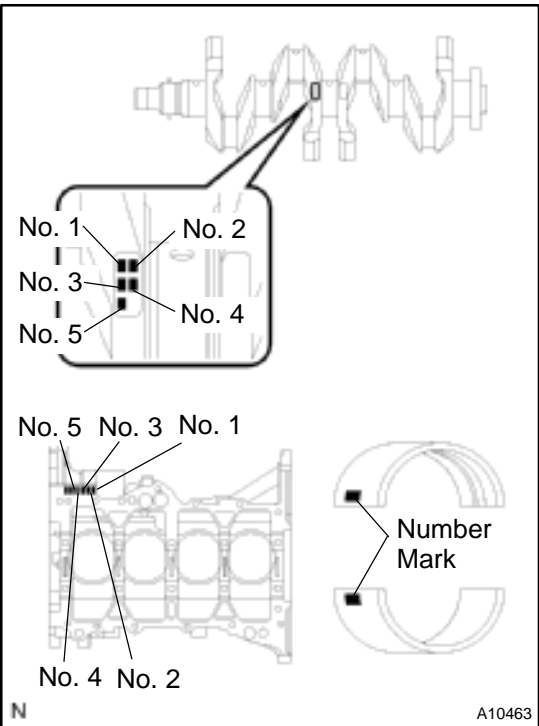

HINT:
If using a standard bearing, replace it with one having the same number. If the number of the bearing cannot be determined, select the correct bearing by adding together the numbers imprinted on the cylinder block and crankshaft, then selecting the bearing with the same number as the total. There are 4 sizes of standard bearings, marked "1", "2", "3" and "4" accordingly.

	Total number " ": Number mark			
Cylinder block (A) + Crankshaft (B)	0 – 2	3 – 5	6 – 8	9 – 11
Use bearing	"1"	"2"	"3"	"4"

EXAMPLE: Cylinder block "4" (A)
+ Crankshaft "3" (B)
= Total number 7 (Use bearing "3")

Reference

Item	Mark	mm (in.)
Cylinder block main journal bore diameter (A)	"0"	50.000 – 50.003 (1.96850 – 1.96862)
	"1"	50.003 – 50.005 (1.96862 – 1.96870)
	"2"	50.005 – 50.007 (1.96870 – 1.96878)
	"3"	50.007 – 50.010 (1.96878 – 1.96889)
	"4"	50.010 – 50.012 (1.96889 – 1.96897)
	"5"	50.012 – 50.014 (1.96897 – 1.96905)
	"6"	50.014 – 50.016 (1.96905 – 1.96913)
Crankshaft main journal diameter (B)	"0"	46.000 – 46.002 (1.81102 – 1.81110)
	"1"	46.002 – 46.004 (1.81110 – 1.81118)
	"2"	46.004 – 46.006 (1.81118 – 1.81126)
	"3"	46.006 – 46.008 (1.81126 – 1.81133)
	"4"	46.008 – 46.010 (1.81133 – 1.81141)
	"5"	46.010 – 46.012 (1.81141 – 1.81149)
Standard bearing center wall thickness	"1"	1.992 – 1.995 (0.07843 – 0.07854)
	"2"	1.995 – 1.998 (0.07854 – 0.07866)
	"3"	1.998 – 2.001 (0.07866 – 0.07878)
	"4"	2.001 – 2.004 (0.07878 – 0.07890)

(k) Completely remove the Plastigage.

20. REMOVE CRANKSHAFT

- Lift out the crankshaft.
- Remove the 5 upper main bearings and 2 thrust washers from the cylinder block.


HINT:

Arrange the main bearings and thrust washers in the correct order.



21. CHECK FIT BETWEEN PISTON AND PISTON PIN

Try to move the piston back and forth on the piston pin. If any movement is felt, replace the piston and pin as a set.

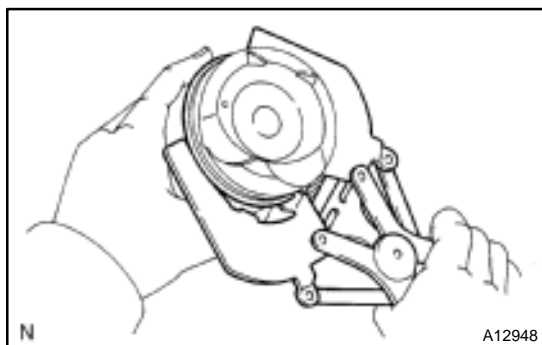


22. REMOVE PISTON RINGS

- Using a piston ring expander, remove the 2 compression rings.
- Remove the oil ring by hand.

HINT:

Arrange the piston rings in the correct order only.

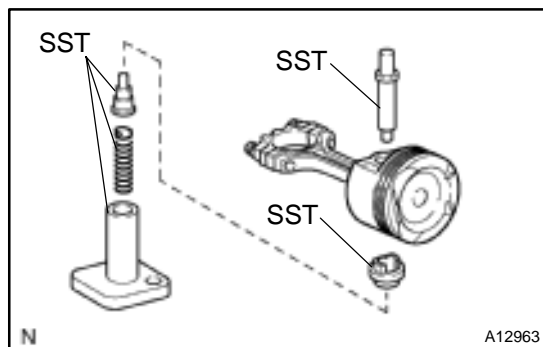
**23. DISCONNECT CONNECTING ROD FROM PISTON**

Using SST, press out the piston pin from the piston. Remove the piston.

SST 09221-25026 (09221-00021, 09221-00030, 09221-00190, 09221-00141, 09221-00150)

HINT:

- The piston and pin are a matched set.
- Arrange the pistons, pins, rings, connecting rods and bearings in correct order.

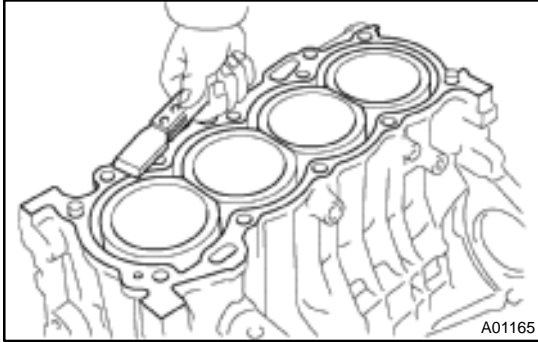

INSPECTION

1. REMOVE GASKET MATERIAL


Using a gasket scraper, remove all the gasket material from the top surface of the cylinder block.

2. CLEAN CYLINDER BLOCK

Using a soft brush and solvent, thoroughly clean the cylinder block.

NOTICE:

If the cylinder is washed at high temperatures, the cylinder liner sticks out beyond the cylinder block, so always wash the cylinder block at a temperature of 45°C (133°F) or less.

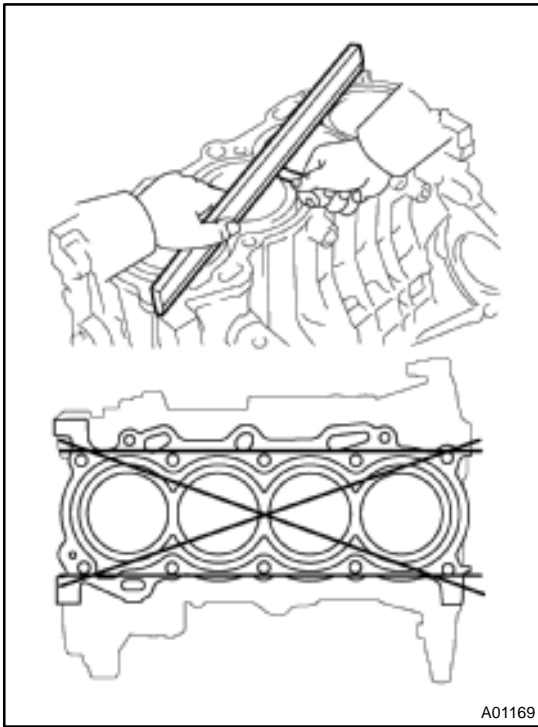


3. INSPECT TOP SURFACE OF CYLINDER BLOCK FOR FLATNESS

Using a precision straight edge and feeler gauge, measure the surface contacting the cylinder head gasket for warpage.

Maximum warpage: 0.05 mm (0.0020 in.)


If warpage is greater than maximum, replace the cylinder block.

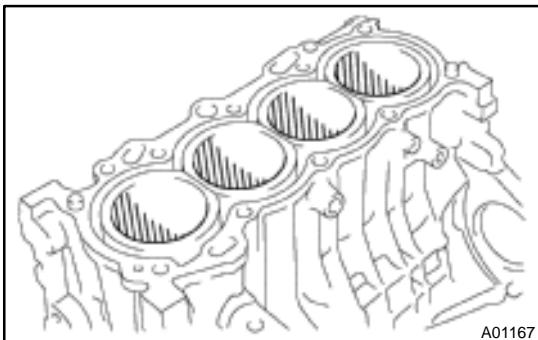

4. INSPECT CYLINDER BORE DIAMETER

Visually check the cylinder for vertical scratches.

If deep scratches are present, replace the cylinder block.

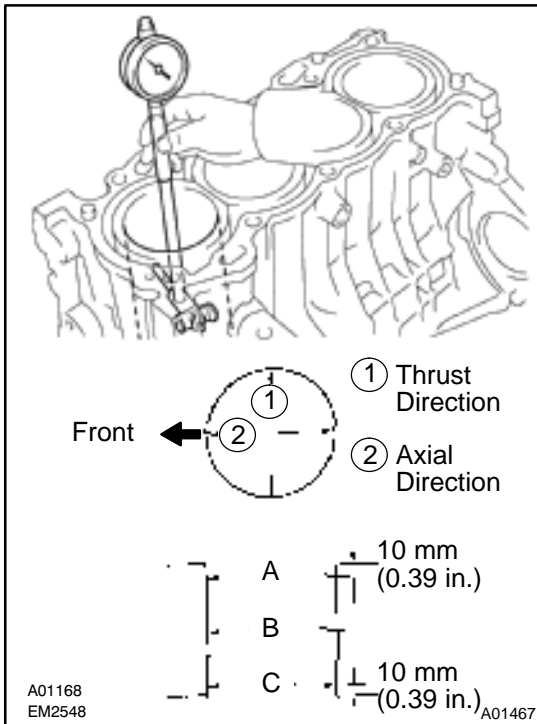

5. INSPECT CYLINDER BORE DIAMETER

Using a cylinder gauge, measure the cylinder bore diameter at positions A, B and C in the thrust and axial directions.


Standard diameter:

75.000 – 75.013 mm (2.95275 – 2.95326 in.)

Maximum diameter:


75.013 mm (2.95326 in.)

If the diameter is greater than maximum, replace the cylinder block.

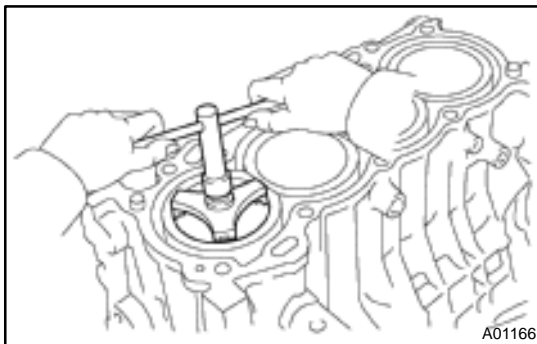

6. REMOVE CYLINDER RIDGE

If the wear is less than 0.2 mm (0.008 in.), using a ridge reamer, grind the top of the cylinder.

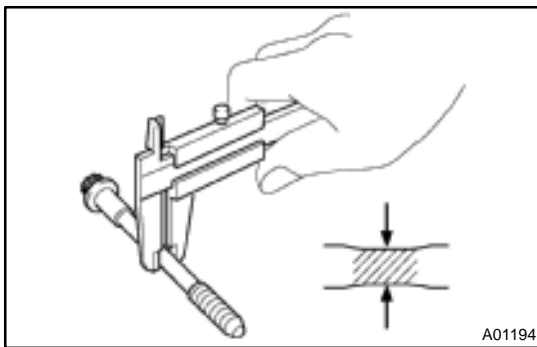


7. INSPECT 12 POINTED HEAD BEARING CAP SUB-ASSEMBLY BOLTS

Using vernier calipers, measure the tension portion diameter of the bolt.

Standard diameter: 7.3 – 7.5 mm (0.287 – 0.295 in.)


Minimum diameter: 7.3 mm (0.287 in.)

If the diameter is less than minimum, replace the bolt.

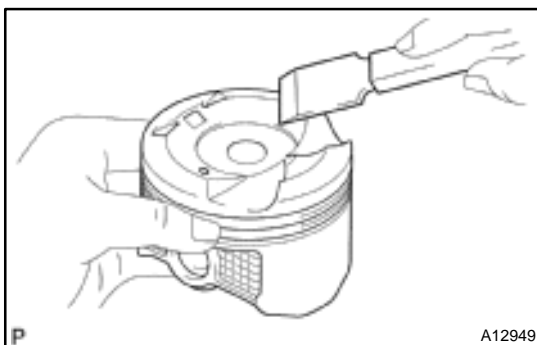


8. CLEAN PISTON

- (a) Using a gasket scraper, remove the carbon from the piston top.

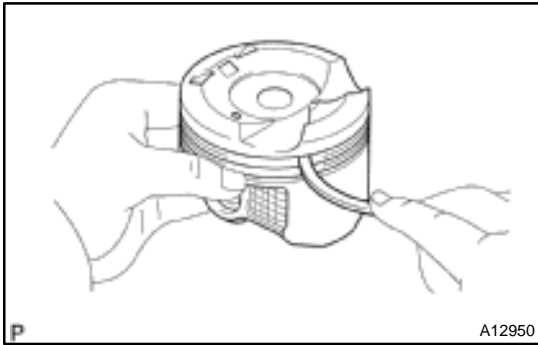


- (b) Using a groove cleaning tool or broken ring, clean the piston ring grooves.

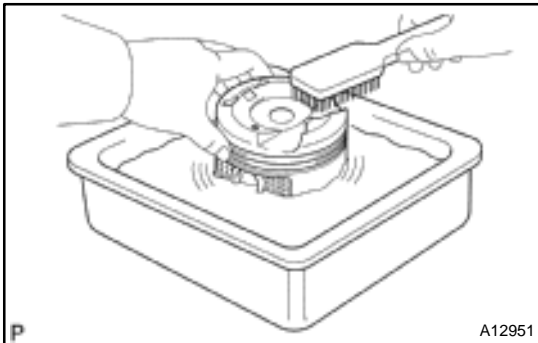

- (c) Using solvent and a brush, thoroughly clean the piston.

NOTICE:

Do not use a wire brush.

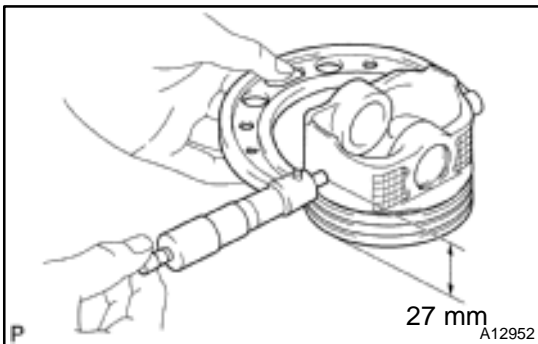

9. INSPECT PISTON OIL CLEARANCE

- (a) Using a micrometer, while placing the piston up side down, take measurement at the position of 27 mm (1.06 in.).

Piston diameter:

74.930 – 74.940 mm (2.94999 – 2.95039 in.)

- (b) Measure the cylinder bore diameter in the thrust directions. (See procedure in step 5)
- (c) Subtract the piston diameter measurement from the cylinder bore diameter measurement.


Standard oil clearance:

0.045 – 0.068 mm (0.00177 – 0.00268 in.)

Maximum oil clearance:

0.095 mm (0.0037 in.)

If the oil clearance is greater than maximum, replace all the 4 pistons. If necessary, replace the cylinder block.

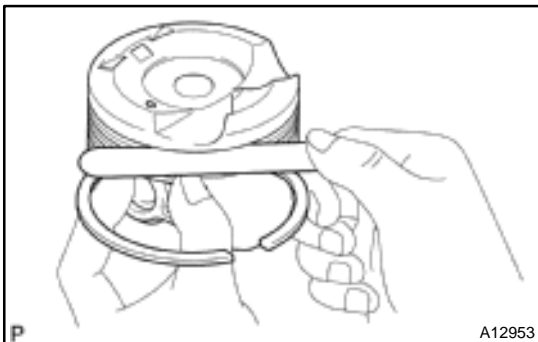


10. INSPECT PISTON RING END GAP

Using a feeler gauge, measure the clearance between new piston ring and the wall of the ring groove.

Ring groove clearance:

0.030 – 0.070 mm (0.0012 – 0.0028 in.)

If the clearance is not as specified, replace the piston.

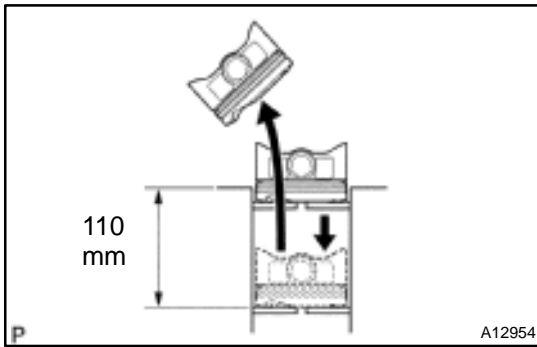

11. INSPECT PISTON RING END GAP

- Insert the piston ring into the cylinder bore.
- Using a piston, push the piston ring a little beyond the bottom of the ring travel, 110 mm (4.33 in.) from the top of the cylinder block.
- Using a feeler gauge, measure the end gap.

Standard end gap:

No. 1 0.22 – 0.32 mm (0.0087 – 0.0126 in.)

No. 2 0.32 – 0.47 mm (0.0126 – 0.0185 in.)


Oil (Side rail) 0.15 – 0.45 mm (0.0059 – 0.0177 in.)

Maximum end gap:


No. 1 0.88 mm (0.0346 in.)

No. 2 1.03 mm (0.0406 in.)

Oil 0.92 mm (0.0362 in.)

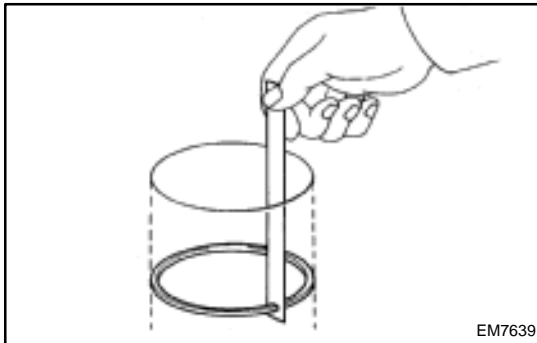

If the end gap is greater than maximum, replace the piston ring.
If the end gap is greater than maximum, even with a new piston ring, replace the cylinder block.

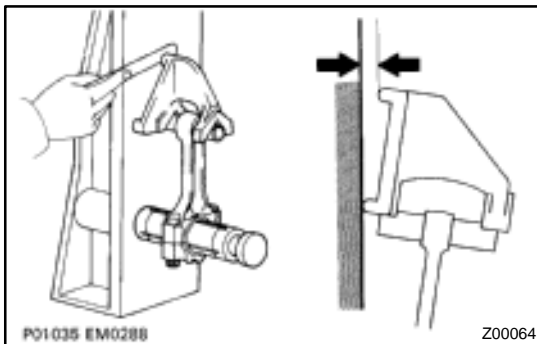

12. INSPECT CONNECTING ROD ALIGNMENT


Using a rod aligner and feeler gauge, check the connecting rod alignment.

- Check for out-of-alignment

Maximum out-of-alignment:

0.05 mm (0.0020 in.) per 100 mm (3.94 in.)

If out-of-alignment is greater than maximum, replace the connecting rod assembly.

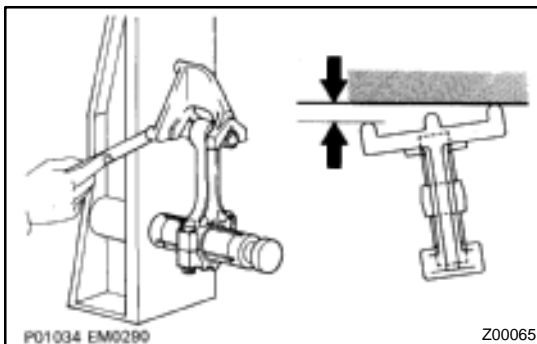


- Check for twist

Maximum twist:

0.05 mm (0.0020 in.) per 100 mm (3.94 in.)

If twist is greater than maximum, replace the connecting rod assembly.

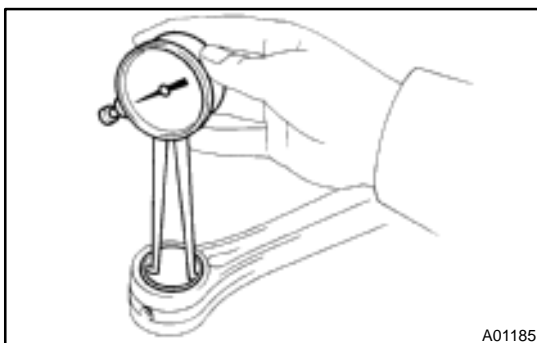


13. INSPECT PISTON PIN OIL CLEARANCE

- Using a caliper gauge, measure the inside diameter of the connecting rod bushing.


Bushing inside diameter:

18.010 – 18.019 mm (0.7091 – 0.7094 in.)

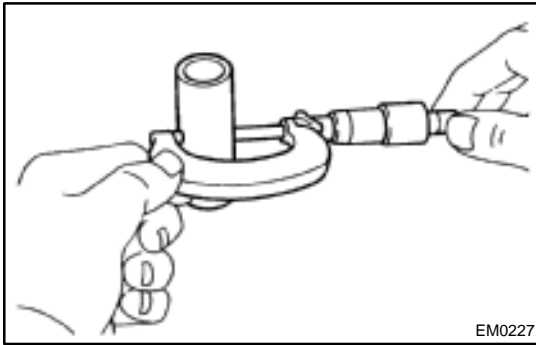

- (b) Using a micrometer, measure the piston pin diameter.
Piston pin diameter:
17.988 – 18.007 mm (0.7086 – 0.7089 in.)
- (c) Subtract the piston pin diameter measurement from the bushing inside diameter measurement.
Standard oil clearance:
0.009 – 0.015 mm (0.0003 – 0.0006 in.)
Maximum oil clearance:
0.05 mm (0.0020 in.)

If the oil clearance is greater than maximum, replace the connecting rod. If necessary, replace the piston and piston pin as a set.

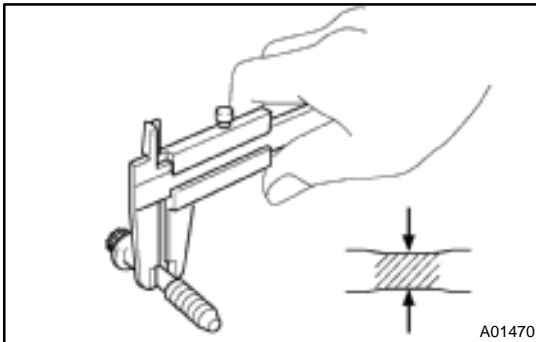


14. INSPECT CONNECTING ROD BOLTS

Using a vernier calipers, measure the tension portion diameter of the bolt.

Standard diameter: 6.6 – 6.7 mm (0.260 – 0.264 in.)

Minimum diameter: 6.4 mm (0.252 in.)

If the diameter is less than minimum, replace the bolt.

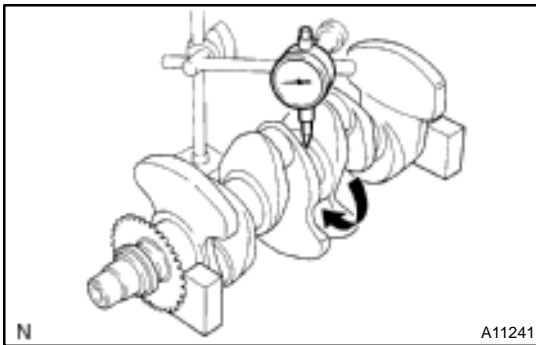


15. INSPECT CRANKSHAFT FOR CIRCLE RUNOUT

- (a) Place the crankshaft on V-blocks.
 (b) Using a dial indicator, measure the circle runout, as shown in the illustration.

Maximum circle runout: 0.03 mm (0.0012 in.)

If the circle runout is greater than maximum, replace the crankshaft.

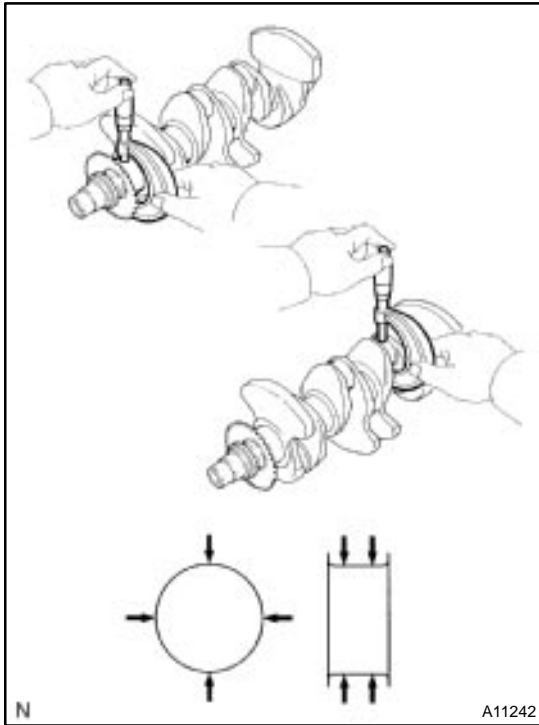**16. INSPECT MAIN JOURNALS AND CRANK PINS**

- (a) Using a micrometer, measure the diameter of each main journal and crank pin.

Main journal diameter:

45.988 – 46.000 mm (1.81054 – 1.81102 in.)

Crank pin diameter:

39.992 – 40.000 mm (1.5745 – 1.5748 in.)

If the diameter is not as specified, check the oil clearance.

(See page [EM-64](#))

If necessary, replace the crankshaft.

- (b) Check each main journal and crank pin for taper and out-of-round as shown.

Maximum taper and out-of-round:

0.02 mm (0.0008 in.)

If the taper and out-of-round is greater than maximum, replace the crankshaft.



REASSEMBLY

HINT:

- Thoroughly clean all parts to be assembled.
- Before installing the parts, apply fresh engine oil to all sliding and rotating surfaces.
- Replace all gaskets, O-rings and oil seals with new parts.


1. ASSEMBLE PISTON AND CONNECTING ROD

- Gradually heat the piston side of connecting rod to 80 – 90°C (176 – 194°F).
- Coat the piston pin and pin holes of the piston with engine oil.
- Align the cavity on the piston with the protrusion on the connecting rod.
- Using SST, press in the piston pin.
SST 09221-25026 (09221-00021, 09221-00030, 09221-00190, 09221-00141, 09221-00150)

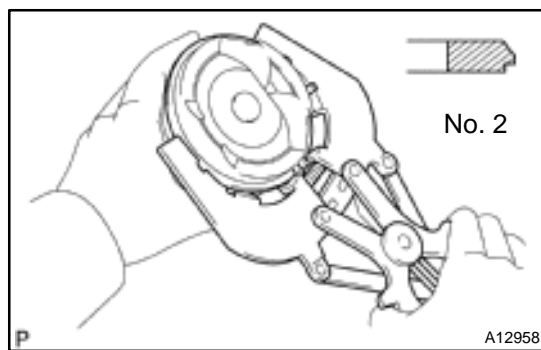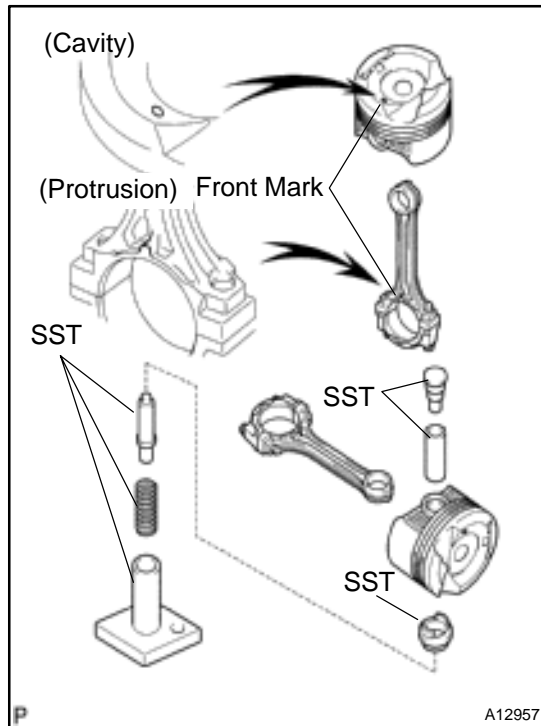

2. INSTALL PISTON RINGS

- Install the oil ring expander and 2 side rails by hand.
- Using a piston ring expander, install the 2 compression rings.

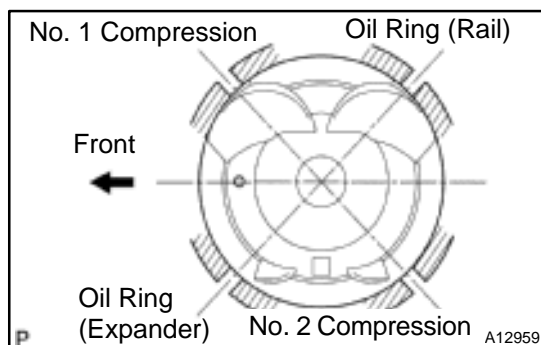

- Position the piston rings so that the ring ends are as shown.

NOTICE:

Do not align the ring ends.



3. Supply parts: INSTALL MAIN BEARINGS

HINT:


Upper bearings have an oil groove and oil holes; Lower bearings do not.

- (a) Align the bearing claw with the claw groove of the cylinder block, and push in the 5 upper bearings.

NOTICE:

Install the bearing with the oil hole in the cylinder block.

- (b) Align the bearing claw with the claw groove of the main bearing cap, and push in the 5 lower bearings.

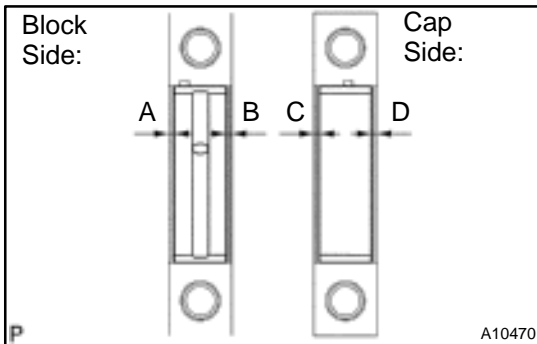

4. Manufacture parts: INSTALL MAIN BEARINGS

HINT:

Upper bearings have an oil groove and oil holes; Lower bearings do not.


Measure the clearance on both sides of the bearing and install it so that the difference between measured values will be within the specified bellow.

Specified clearance:

$$A - B = 0.8 \text{ mm (0.032 in.)}$$

$$C - D = 0.4 \text{ mm (0.016 in.)}$$

5. PLACE CRANKSHAFT ON CYLINDER BLOCK

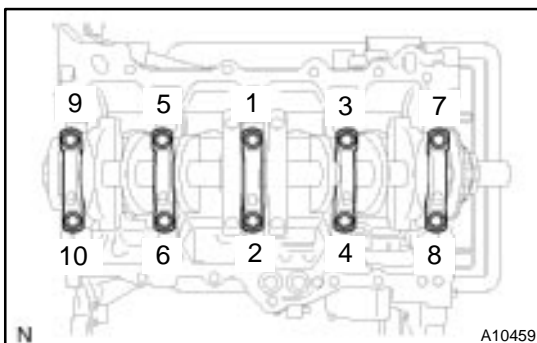

6. INSTALL BEARING CAPS

- (a) Install the 5 bearing caps.

HINT:

Each bearing cap has a number and front mark.

- (b) Apply a light coat of engine oil on the threads and under the head of the bearing cap bolts.

- (c) Install and uniformly tighten the 10 bolts of the bearing cap in several passes, in the sequence shown.

Torque:


1ST 22 N·m (220 kgf·cm, 16 ft·lbf)

2ND Turn 90°

- (d) Check that the crankshaft turns smoothly.

7. CHECK CRANKSHAFT THRUST CLEARANCE

(See page [EM-64](#))

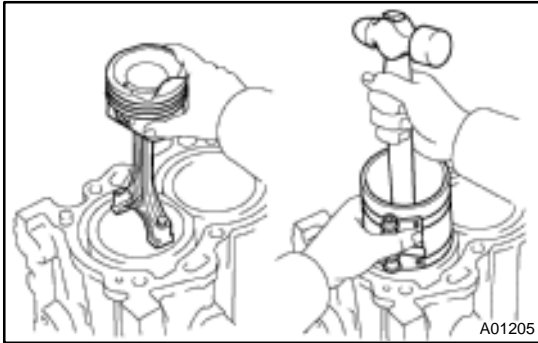

8. INSTALL PISTON AND CONNECTING ROD ASSEMBLIES

Using a piston ring compressor, push the correctly numbered piston and connecting rod assemblies into each cylinder with the front mark of the piston facing forward.


9. PLACE CONNECTING ROD CAP ON CONNECTING ROD

- (a) Match the numbered connecting rod cap with the connecting rod.
- (b) Align the pin dowels of the connecting rod cap with the pins of the connecting rod, and install the connecting rod.
- (c) Check that the protrusion of the connecting rod cap is facing in the correct direction.

10. INSTALL CONNECTING ROD CAP BOLTS

HINT:

- The connecting rod cap bolts are tightened in 2 progressive steps (steps (b) and (d)).
 - If any of the connecting rod cap bolts is broken or deformed, replace it.
- (a) Apply a light coat of engine oil on the threads and under the heads of the connecting rod cap bolts.

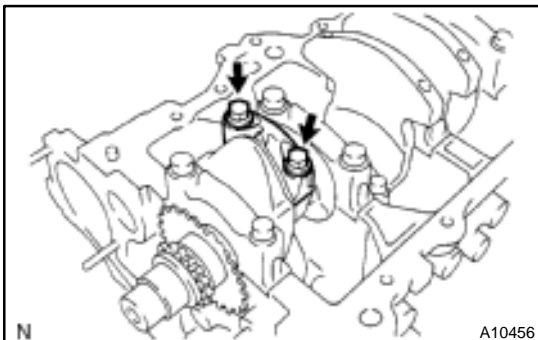

- (b) Install and alternately tighten the 2 connecting rod cap bolts in several passes.


Torque:

1ST 15 N·m (150 kgf·cm, 11 ft·lbf)

2ND Turn 90°

If any of the connecting rod cap bolts does not meet the torque specification, replace the connecting rod cap bolts.

11. CHECK CONNECTING ROD THRUST CLEARANCE
(See page [EM-64](#))

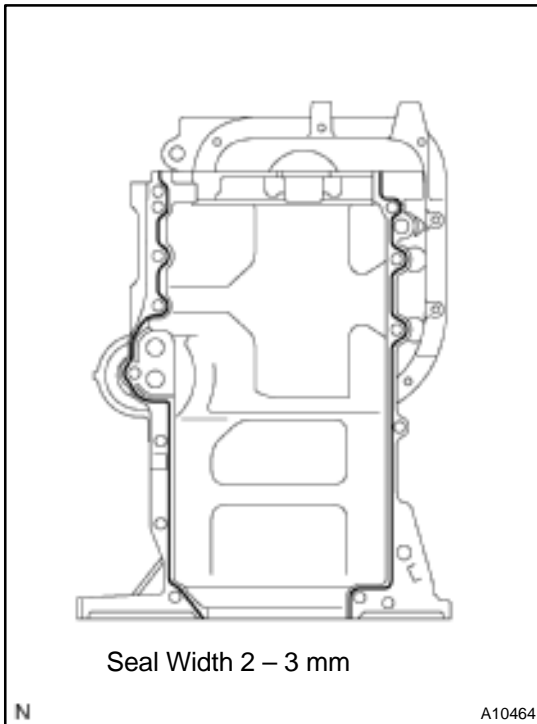**12. INSTALL OIL PAN NO. 1**

- (a) Remove any old packing (FIPG) material and be careful not to drop any oil on the contact surface of the oil pan No. 1 and cylinder block.
- Using a razor blade and gasket scraper, remove all the old packing (FIPG) material from the gasket surfaces and sealing grooves.
 - Thoroughly clean all components to remove all the loose material.
 - Using a non-residue solvent, clean both sealing surfaces.
- (b) Apply seal packing to the oil pan No. 1 as shown in the illustration.


Seal packing:**Part No. 08826-00080 or equivalent**

- Install a nozzle that has been cut to a 2 – 3 mm (0.08 – 0.12 in.) opening.

HINT:

Avoid applying an excessive amount to the surface.

- Parts must be assembled within 3 minutes of application. Otherwise the material must be removed and reapplied.
 - Immediately remove nozzle from the tube and reinstall cap.
- (c) Install new O-rings to the cylinder block.
- (d) Using a plastic-faced hammer, lightly tap the oil pan No. 1 to ensure a proper fit.

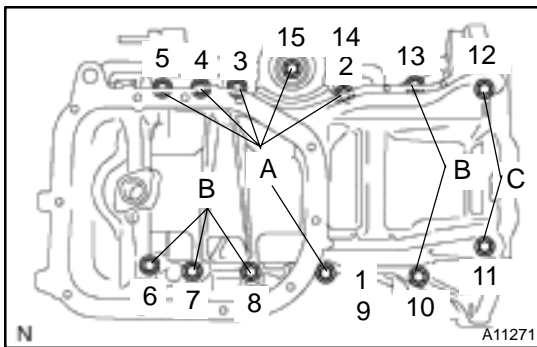

- (e) Install and uniformly tighten the 13 bolts, in several passes, in the sequence shown.

Torque: 24 N·m (245 kgf-cm, 18 ft-lbf)

HINT:

Each bolt length is indicated in the illustration.


A: 49 mm (1.929 in.)

B: 88 mm (3.465 in.)

C: 144 mm (5.669 in.)

13. INSTALL REAR CRANKSHAFT OIL SEAL
(See page [EM-77](#))**HINT:**

Wipe seal packing away from the contact surface of the cylinder block assembly and oil seal.

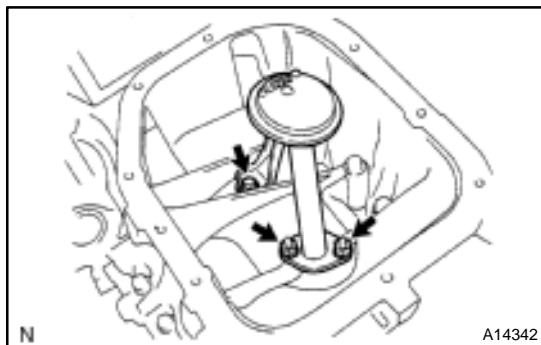**14. INSTALL OIL STRAINER**

Install a new gasket, and oil strainer with the bolt and 2 nuts.

Torque: 11 N·m (112 kgf·cm, 8 ft·lbf)

15. INSTALL OIL PAN

- (a) Remove any old packing (FIPG) material and be careful not to drop any oil on the contact surface of the main bearing cap and oil pan.
- Using a razor blade and gasket scraper, remove all the old packing (FIPG) material from the gasket surfaces and sealing grooves.
 - Thoroughly clean all components to remove all the loose material.
 - Using a non-residue solvent, clean both sealing surfaces.

NOTICE:

Do not use a solvent which will affect the painted surfaces.



- (b) Apply seal packing to the oil pan as shown in the illustration.

Seal packing:


Part No. 08826-00080 or equivalent

- Install a nozzle that has been cut to a 2.5 – 3.5 mm (0.098 – 0.138 in.) opening.

HINT:

Avoid applying an excessive amount to the surface.

- Parts must be assembled within 3 minutes of application. Otherwise the material must be removed and reapplied.
- Immediately remove nozzle from the tube and reinstall cap.

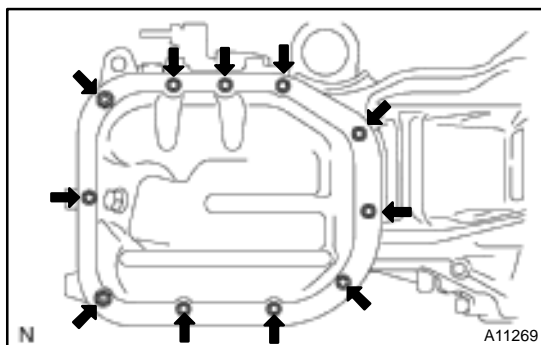

- (c) Install the oil pan with the 9 bolts and 2 nuts. Uniformly tighten the bolts and nuts in several passes.


Torque: 9.0 N·m (92 kgf·cm, 80 in·lbf)

16. INSTALL OIL FILTER UNION

Torque: 30 N·m (306 kgf·cm, 21 ft·lbf)

17. INSTALL OIL FILTER

(See page [LU-3](#))

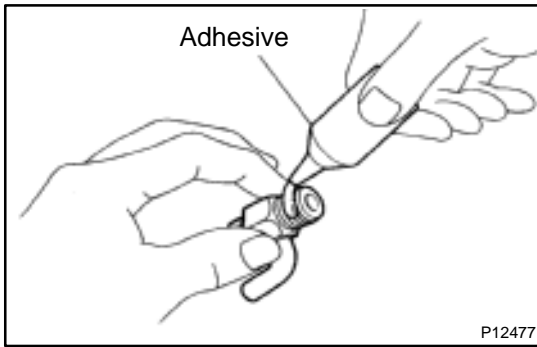**18. INSTALL ENGINE COOLANT DRAIN UNION**

- (a) Apply adhesive to 2 or 3 threads.

Adhesive:

Part No. 08833-00080, THREE BOND 1344, LOCTITE 242 or equivalent

- (b) Install the drain union.

Torque: 35 N·m (350 kgf-cm, 25 ft-lbf)

HINT:

After applying the specified torque, rotate the drain union clockwise until its drain port is facing downward.

19. INSTALL KNOCK SENSOR


Torque: 39 N·m (400 kgf-cm, 29 ft-lbf)

20. INSTALL OIL PRESSURE SWITCH

(See page [LU-1](#))

21. INSTALL THERMOSTAT

(See page [CO-12](#))

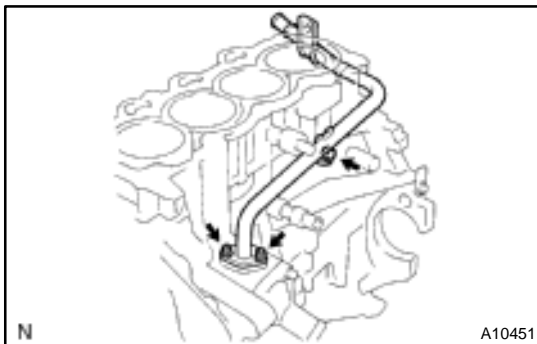**22. INSTALL WATER BYPASS PIPE**

Torque: 9.0 N·m (92 kgf-cm, 80 in.-lbf)

23. INSTALL ENGINE WIRE**24. INSTALL CYLINDER HEAD**


(See page [EM-45](#))


25. INSTALL TIMING SPROCKETS AND TIMING CHAIN

(See page [EM-21](#))

26. REMOVE ENGINE STAND

DRAWING

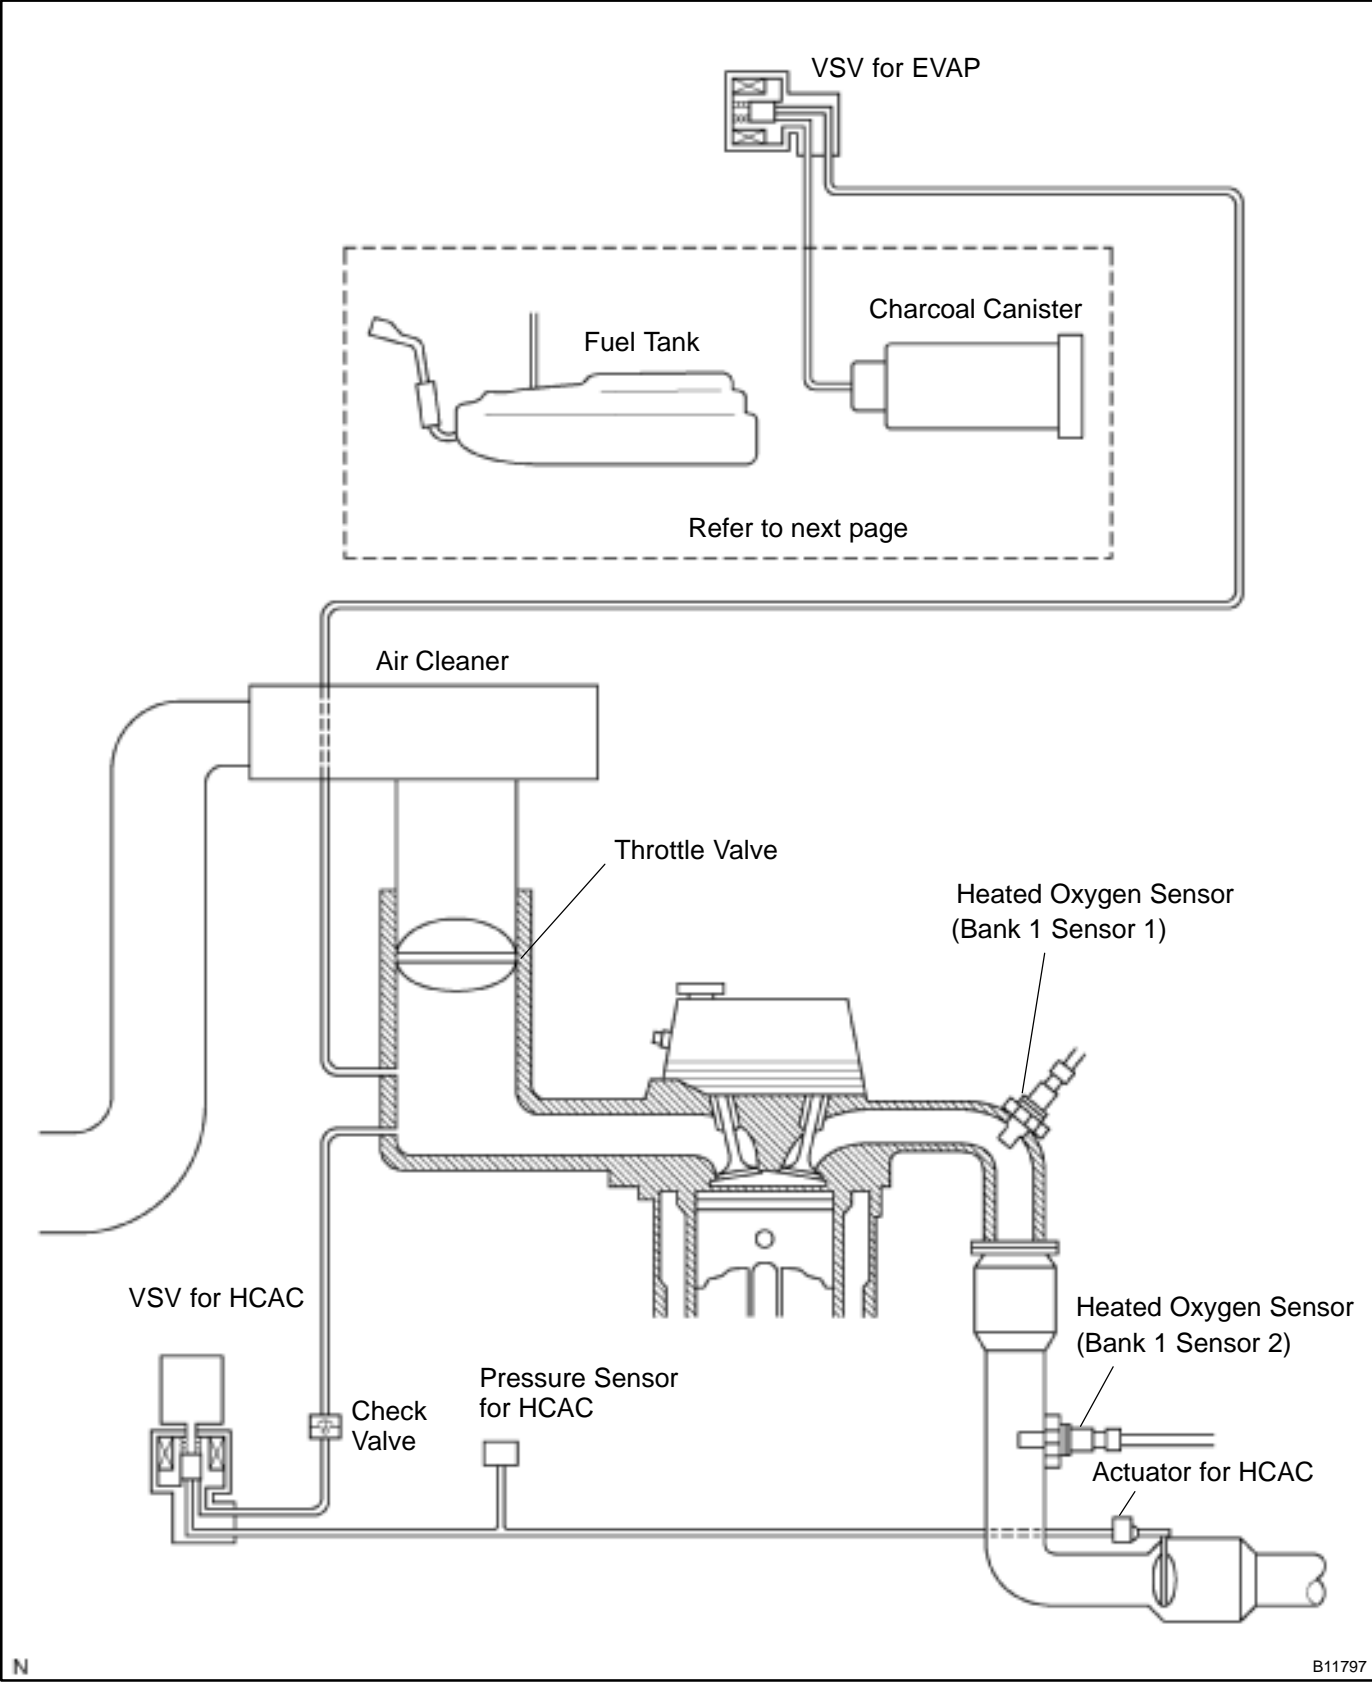

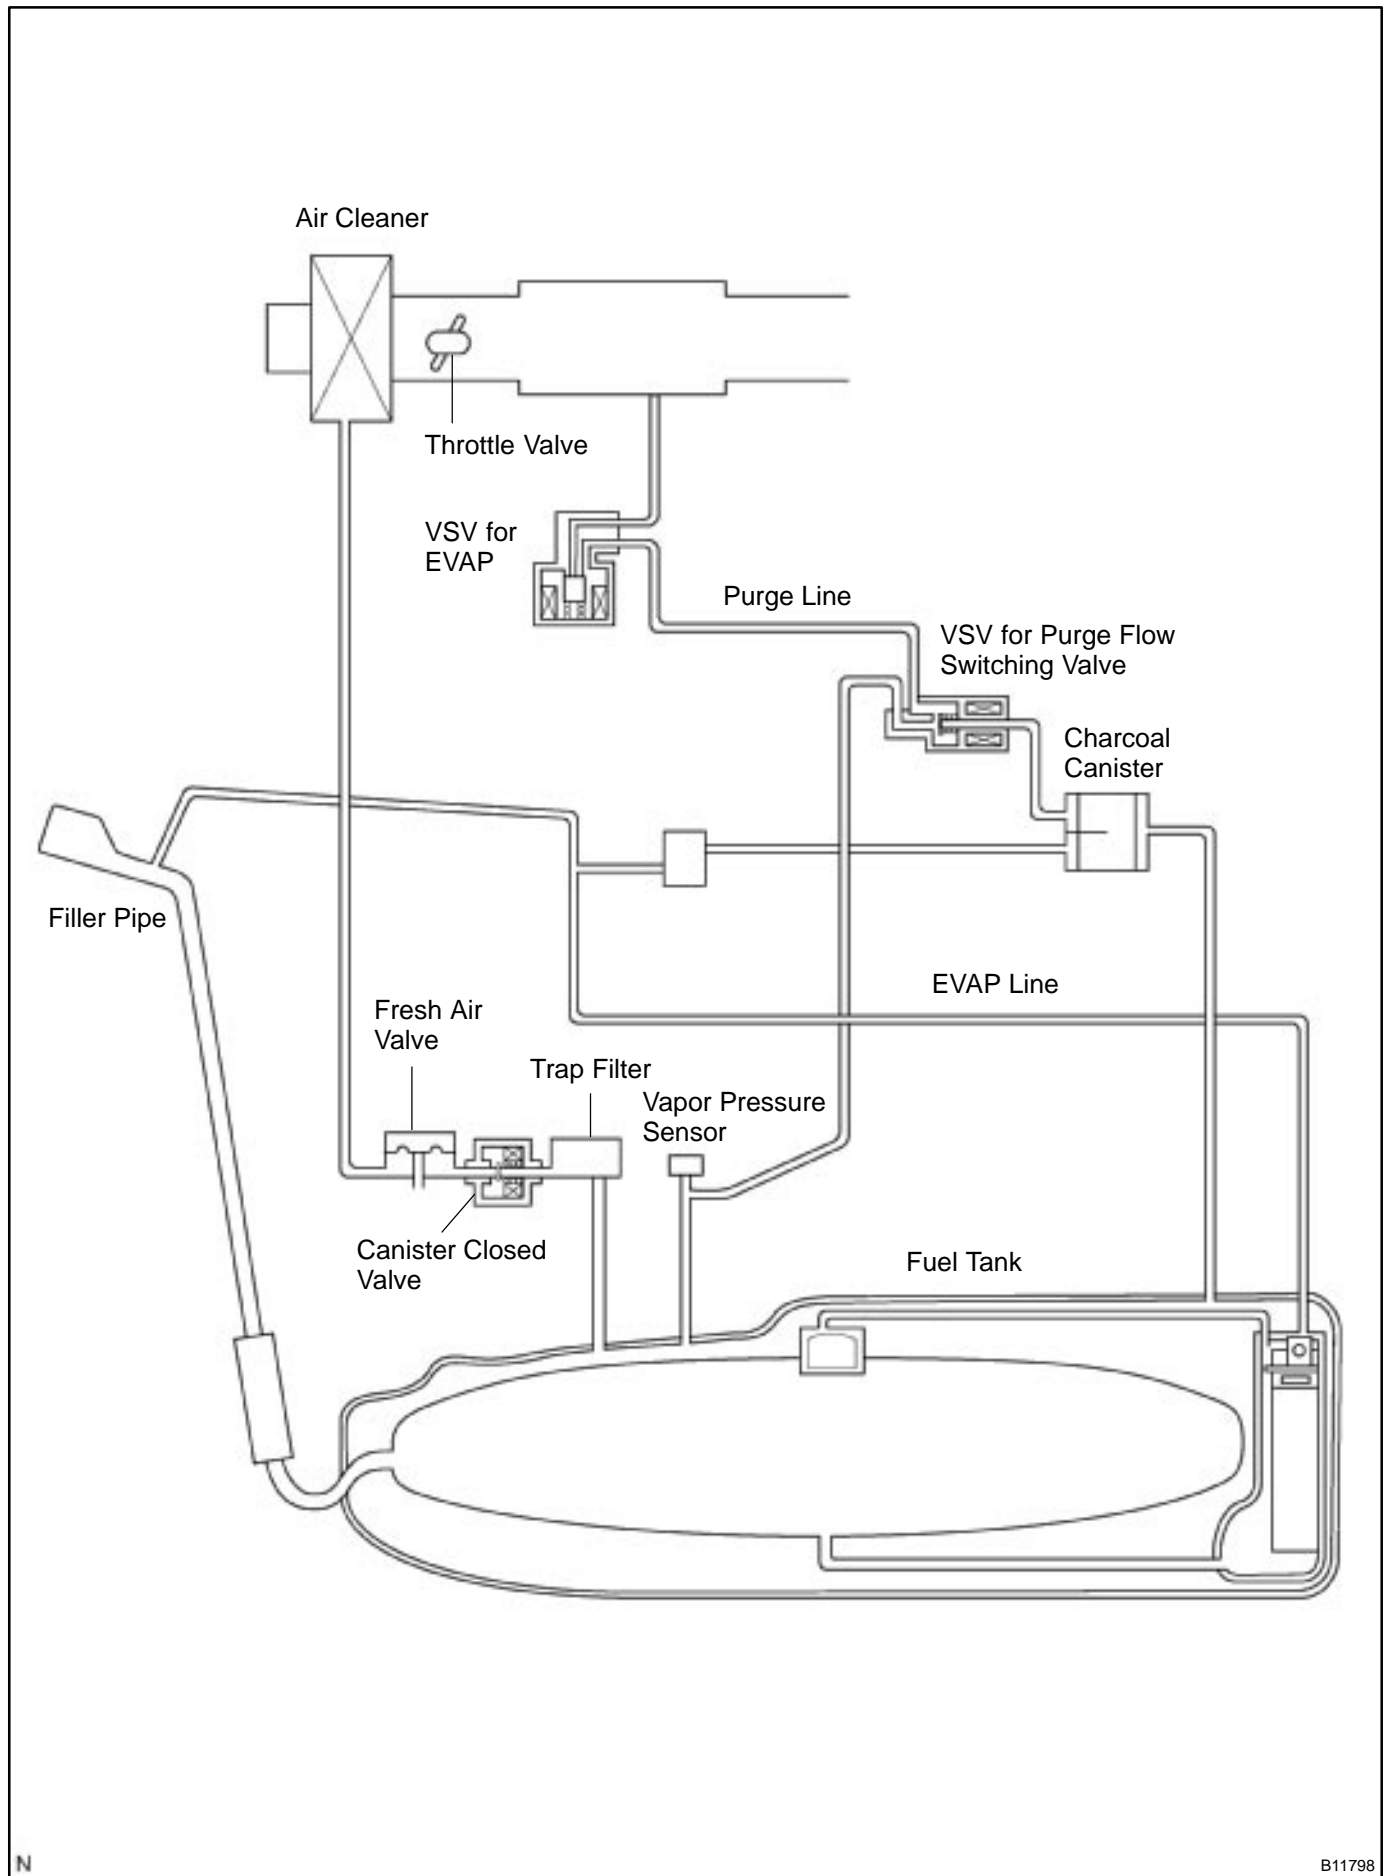

cardiagn.com

INSPECTION


1. REMOVE EXHAUST TAIL PIPE AND HEATED INSULATOR (See page EM-84)

2. INSPECT LINES AND CONNECTORS

Visually check for loose connections, sharp bends or damage.

3. INSPECT FUEL TANK FILLER PIPE


Visually check for deformation, cracks or fuel leakage.

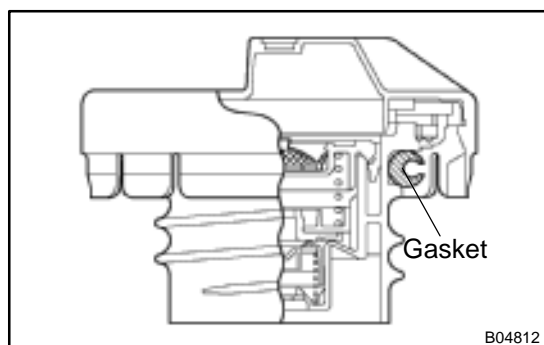

4. INSPECT FUEL TANK CAP

Visually check if the cap and/or gasket are deformed or damaged.


If necessary, repair or replace the cap.

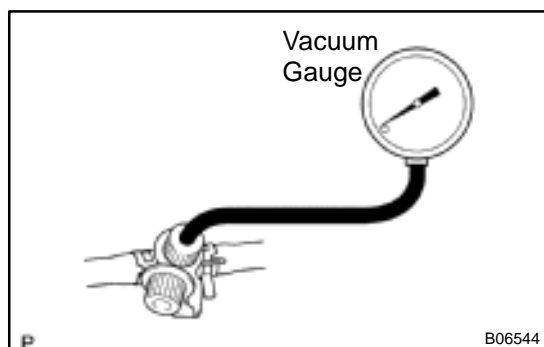

5. INSPECT EVAP SYSTEM LINE

(a) Warm up the engine and stop the engine.
Allow the engine to warm up to normal operating temperature.


(b) Install a vacuum gauge (EVAP control system test equipment vacuum gauge) to the EVAP service port on the purge line.

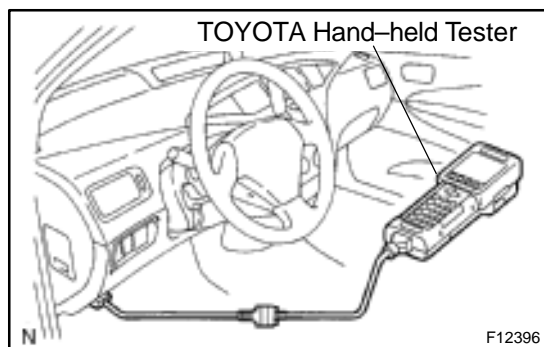

(c) TOYOTA hand-held tester:

Forced driving of the VSV for the EVAP.


- (1) Connect a TOYOTA hand-held tester to the DLC3.
- (2) Start the engine.
- (3) Push the TOYOTA hand-held tester main switch ON.
- (4) Use the ACTIVE TEST mode on the TOYOTA hand-held tester to operate the VSV for the EVAP.

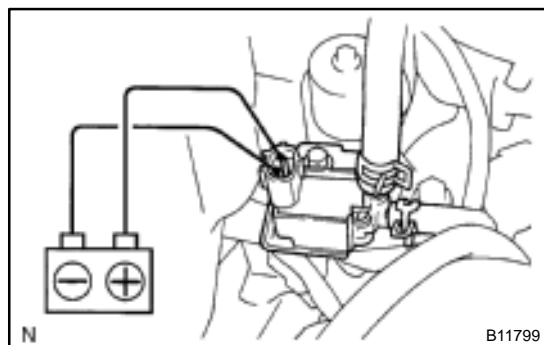

(d) If you have no TOYOTA hand-held tester:

Forced driving of the VSV for the EVAP.

- (1) Disconnect the VSV connector for the EVAP.
- (2) Connect the positive (+) and negative (-) leads from the battery to the VSV terminals for the EVAP.
- (3) Start the engine.

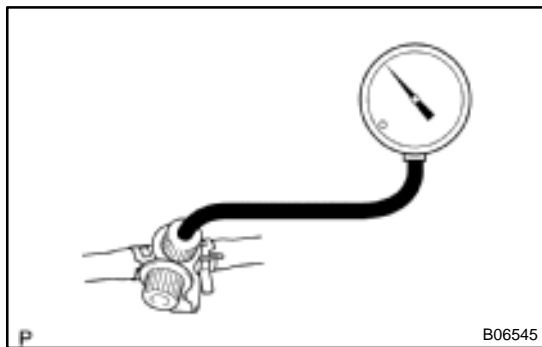

- (e) Check the vacuum at idle.


Vacuum:

Maintain at 0.368 – 19.713 in. Hg (5 – 268 in.Aq) for over 5 seconds


HINT:

If the vacuum does not change, you can conclude that the hose connecting the VSV to the service port has come loose or is blocked, or the VSV is malfunctioning.

- (f) If you have TOYOTA hand-held tester:
Conclude forced driving of the VSV for the EVAP.
- (1) Stop the engine.
 - (2) Disconnect the TOYOTA hand-held tester from the DLC3.
- (g) If you have no TOYOTA hand-held tester:
Conclude forced driving of the VSV for the EVAP.
- (1) Stop the engine.
 - (2) Disconnect the positive (+) and negative (–) leads from the battery, and from the VSV terminals for the EVAP.
 - (3) Connect the VSV connector for the EVAP.
- (h) Disconnect the vacuum gauge from the EVAP service port on the purge line.
- (i) Connect a pressure gauge to the EVAP service port on the purge line.

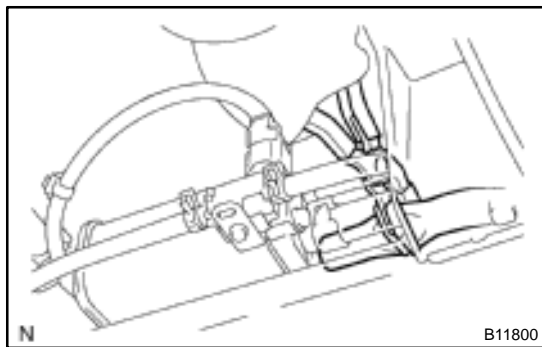

- (j) Check the pressure.
- (1) Close off the air drain hose at the marked position of the canister with a hose clipper or similar instrument.

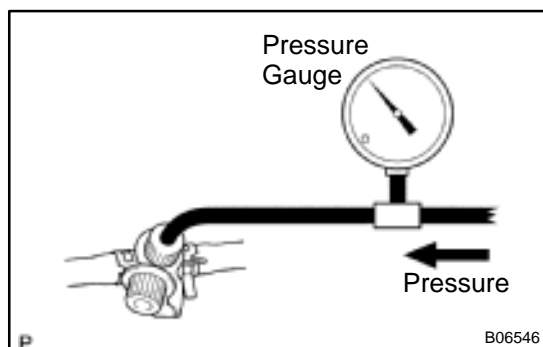


- (2) Add the pressure (13.5 – 15.5 in.Aq) from the EVAP service port.

Pressure:

2 minutes after the pressure is added, the gauge should be over 7.7 – 8.8 in.Aq.

HINT:

If you can't add pressure, you can conclude that the hose connecting the VSV–canister–fuel tank has slipped off or the VSV is open.

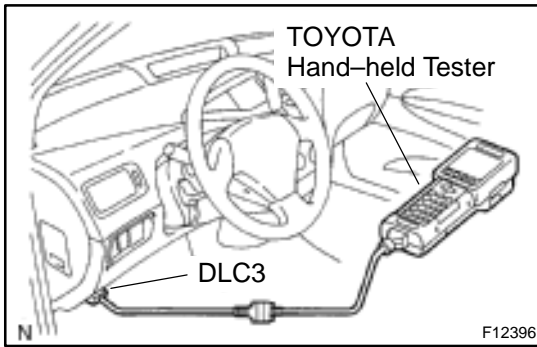



6. CHECK AIRTIGHTNESS IN FUEL TANK AND FILLER PIPE

- (a) TOYOTA hand-held tester:
Forced driving of the VSV for the canister closed valve (CCV).


- (1) Connect a TOYOTA hand-held tester to the DLC3.
- (2) Turn the ignition switch ON.
- (3) Push the TOYOTA hand-held tester mode on the TOYOTA hand-held tester to operate the VSV for the canister closed valve (CCV).

- (b) If you have no TOYOTA hand-held tester:
Forced driving of the canister closed valve (CCV).

- (1) Remove the connector cover from the ECM.
- (2) Turn the ignition switch ON.
- (3) Connect the between terminal CCV of the ECM connector and body ground.

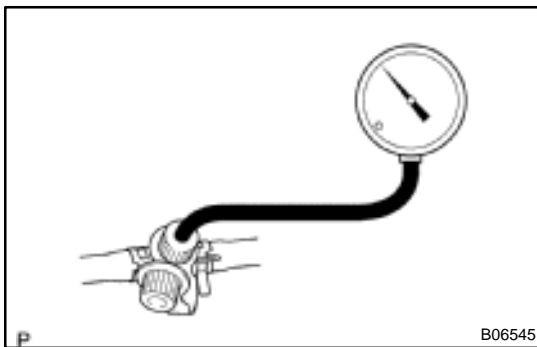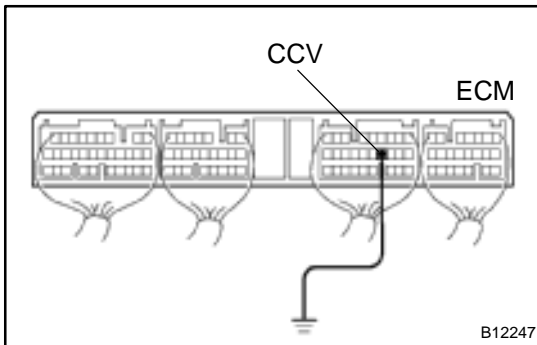


- (c) Add the pressure from the EVAP service port to 1.6 kPa (16.3 kgf/cm², 0.232 psi).
 - (d) Check that the pressure can be held for 30 seconds.
 - (e) Visually check the fuel tank and filler pipes.
 - (f) Check each connection of hoses and pipes.
- If there is abnormality, replace the fuel tank and filler pipe.

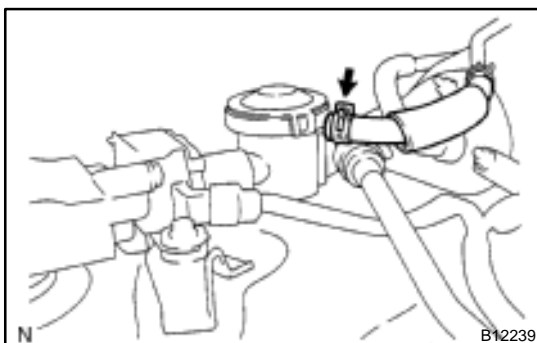


7. CHECK AIR INLET LINE


- (a) Disconnect the air inlet line hose from the fresh air valve.

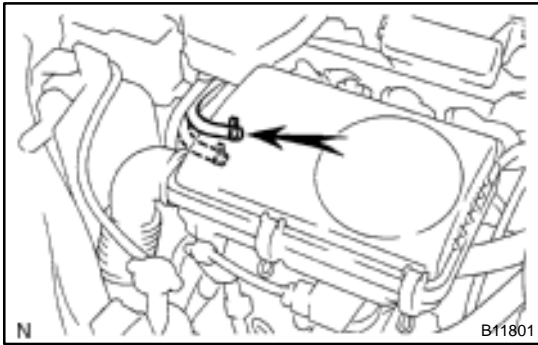

- (b) Disconnect the air inlet hose from the air cleaner case.
- (c) Blow air into the air inlet line hose.

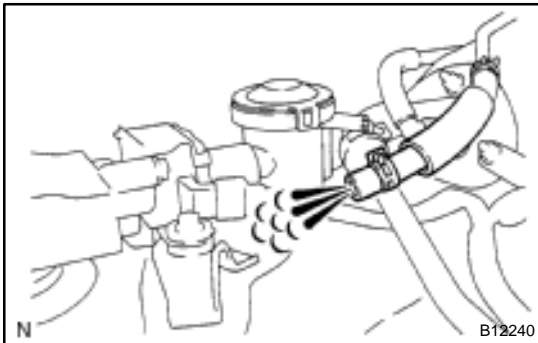


- (d) Check that the air flows from the air inlet line hose.
 - (e) Visually check the air inlet line hoses and pipes.
 - (f) Check each connection of hoses and pipes.
- If there is abnormality, replace the air inlet line hose and pipe.

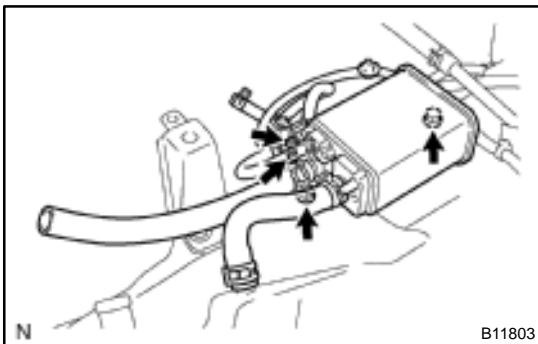


8. REMOVE CHARCOAL CANISTER ASSEMBLY

- (a) Remove the fuel tank (See page [SF-17](#))
- (b) Disconnect the 3 hoses from the charcoal canister.
- (c) Remove the 2 bolts and charcoal canister from the fuel tank.
- (d) Remove the 2 bolts and VSV for purge flow switching from the charcoal canister.

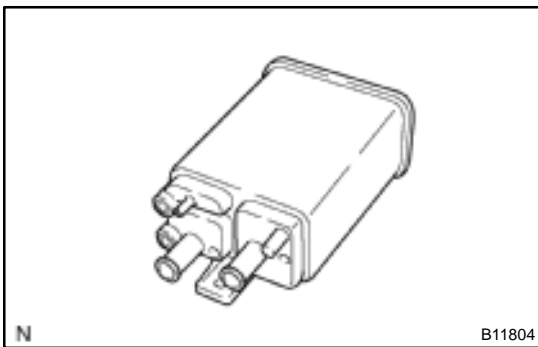


9. INSPECT CHARCOAL CANISTER

- (a) Visually check the charcoal canister for cracks or damage.

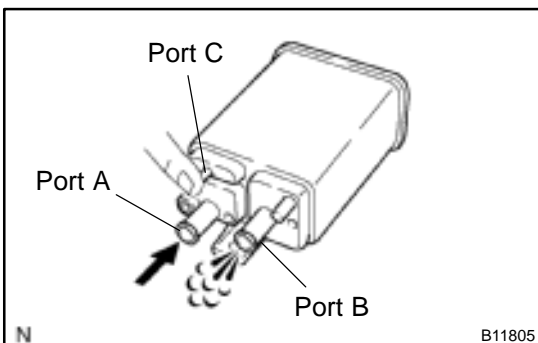


- (b) While holding port C closed, using low pressure compressed air (4.9 kPa (50 gf/cm², 0.71 psi), blow into port A and check that air flows without resistance from the port B.

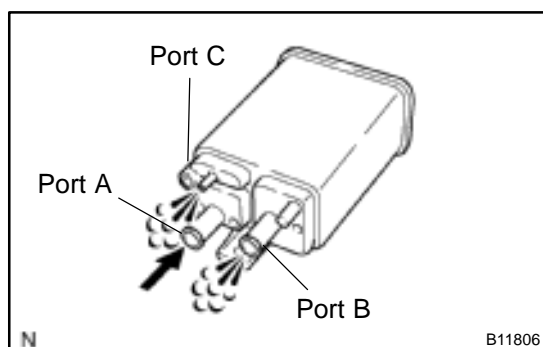

- (c) Using low pressure compressed air (4.9 kPa (50 gf/cm², 0.71 psi), blow into port A and check that air flows without resistance from the other ports.



If a problem is found, replace the charcoal canister.

10. REINSTALL CHARCOAL CANISTER ASSEMBLY

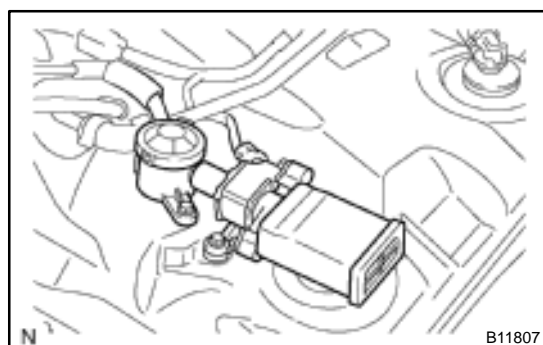


11. REMOVE TRAP FILTER AND FRESH AIR VALVE

- (a) Remove the fuel tank (See page [SF-17](#)).
- (b) Disconnect the air inlet hoses from the VSV for canister closed valve.
- (c) Disconnect the connector from the fresh air valve.
- (d) Remove the bolt and disconnect the air opening valve from the VSV for canister closed valve.
- (e) Remove the 2 bolts and VSV for canister closed valve with the trap filter.
- (f) Remove the 2 bolts and trap filter from the VSV for canister closed valve.

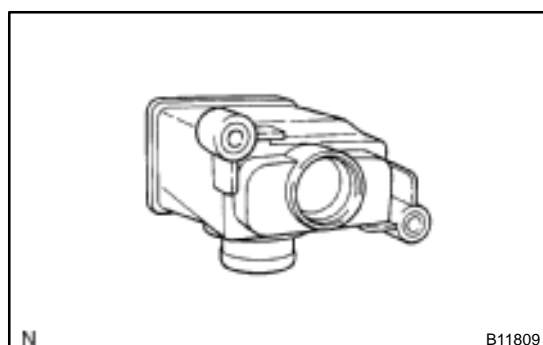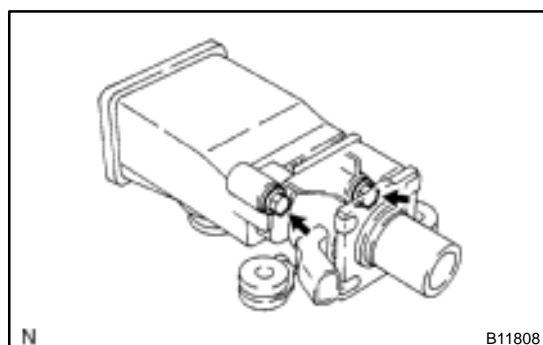


12. INSPECT TRAP FILTER

- (a) Visually check the trap filter for cracks or damage.

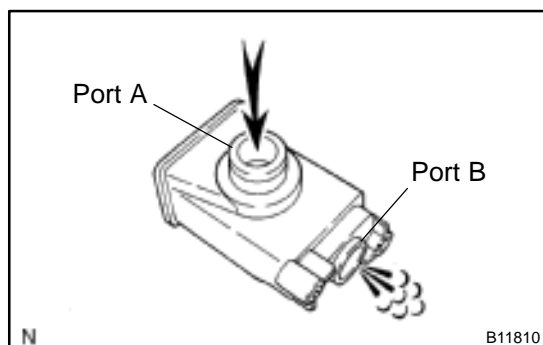

- (b) Inspect the trap filter operation.
Blow air into port A, check that the air flows from port B.
If a problem is found, replace the trap filter.

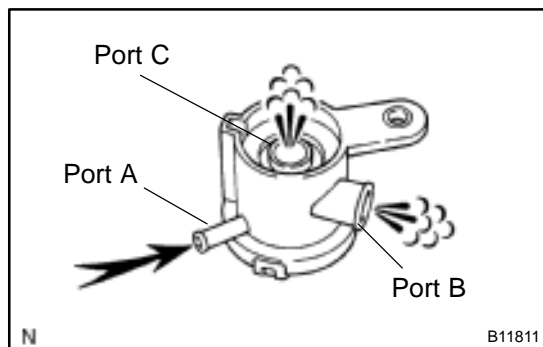**13. INSPECT FRESH AIR VALVE**

- (a) Visually check the fresh air valve for cracks or damage.
- (b) Inspect the fresh air valve operation.
Blow air into port A, check that the air flows from port B and C.

If a problem is found, replace the fresh air valve.

14. REINSTALL TRAP FILTER AND FRESH AIR VALVE

THREE-WAY CATALYTIC CONVERTER (TWC) SYSTEM INSPECTION

EC0HW-01

1. CHECK TWC FOR DENTS OR DAMAGE


If any port of the heat insulator is damaged to the extent that it contacts the three-way catalytic converter, repair or replace it.

2. CHECK EXHAUST PIPE CONNECTIONS FOR LOOSENESS OR DAMAGE

3. CHECK EXHAUST PIPE CLAMPS FOR WEAKNESS, CRACKS OR DAMAGE

4. CHECK HEAT INSULATOR FOR DAMAGE

5. CHECK FOR ADEQUATE CLEARANCE BETWEEN EXHAUST SYSTEM AND HEAT INSULATOR ON THE BODY

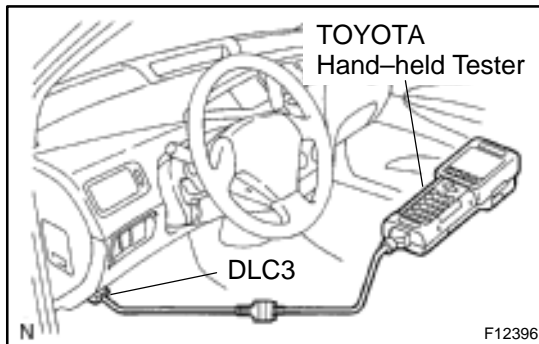

6. INSPECT HC ABSORBER AND CATALYST SYSTEM

(a) Warm up the engine.

(b) TOYOTA hand-held tester:


Forced driving of the VSV for the HC absorber and catalyst system.

- (1) Connect a TOYOTA hand-held tester to the DLC3.
- (2) Start the engine.
- (3) Push the TOYOTA hand-held tester mode on the TOYOTA hand-held tester to operate the VSV for the HC absorber and catalyst system.

(c) If you have no TOYOTA hand-held tester:


Forced driving of the VSV for the TOYOTA HC absorption catalyst system.


- (1) Disconnect the VSV connector for the TOYOTA HC absorption catalyst system.
- (2) Connect the positive (+) and negative (–) leads from the battery to the VSV.
- (3) Start the engine.

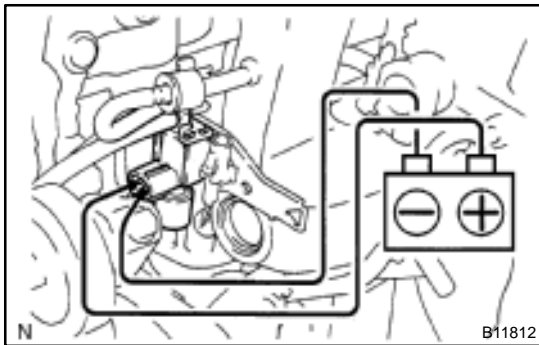

(d) Check that the rod of the actuator is pulled and the valve is operating.

If not in operation, check the vacuum hose line or VSV, actuator.

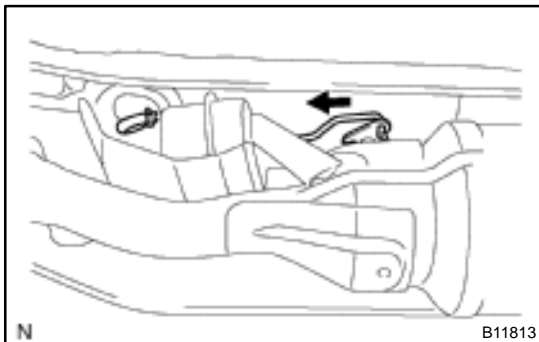

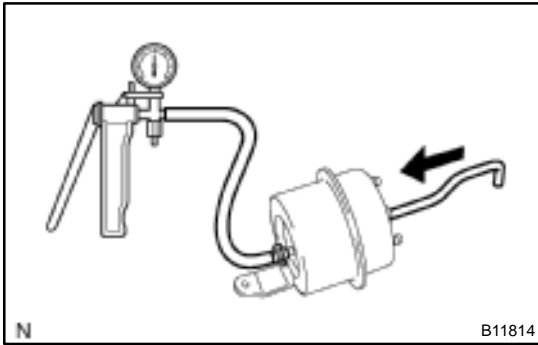**7. INSPECT ACTUATOR**

- (a) Remove the front exhaust pipe.
- (b) Remove the actuator from the front exhaust pipe.
- (c) Connect the MITYVAC (hand-held vacuum pump) to the actuator port.
- (d) Apply vacuum (more than 33.3 kPa, 250 mmHg, 9.83 in.Hg), make sure that the rod is retracted.

If the not, replace the actuator.

- (e) Disconnect the MITYVAC (hand-held vacuum pump) from the actuator port.

**8. INSPECT VALVE OPERATION**

- (a) Turn the valve stay by hand and ensure that it can turn.
- If the not, replace the front exhaust pipe.

- (b) Install the actuator to the front exhaust pipe.
- (c) Install the front exhaust pipe.

SFI SYSTEM PRECAUTION

SF1KN-01

1. **BEFORE WORKING ON THE FUEL SYSTEM , DISCONNECT THE NEGATIVE (–) TERMINAL CABLE FROM THE BATTERY AND HV BATTERY SERVICE PLUG**

HINT:

Any diagnostic trouble code retained by the computer will be erased when the negative (–) terminal cable is removed from the battery. Therefore, if necessary, read the diagnosis before removing the negative (–) terminal cable from the battery.

2. **DO NOT SMOKE OR WORK NEAR AN OPEN FLAME WHEN WORKING ON THE FUEL SYSTEM**
3. **KEEP GASOLINE AWAY FROM RUBBER OR LEATHER PARTS**
4. **MAINTENANCE PRECAUTIONS**
 - (a) In event of engine misfire, these precautions should be taken.
 - (1) Check proper connection to battery terminals, etc.
 - (2) After repair work, check that the ignition coil terminals and all other ignition system lines are reconnected securely.
 - (3) When cleaning the engine compartment, be especially careful to protect the electrical system from water.
 - (b) Precautions when handling oxygen sensor.
 - (1) Do not allow oxygen sensor to drop or hit against an object.
 - (2) Do not allow the sensor to come into contact with water.

If vehicle is Equipped with Mobile Radio System (HAM, CB, etc.)

If the vehicle is equipped with a mobile communication system, refer to the precaution in the IN section.

5. AIR INDUCTION SYSTEM

- (a) Separation of the engine oil dipstick, oil filler cap, PCV hose, etc. may cause the engine to run out of turn.
- (b) Disconnection, looseness or cracks in the parts of the air induction system between the throttle body and cylinder head will allow air suction and cause the engine to run out of turn.




6. ELECTRONIC CONTROL SYSTEM

- (a) Before removing SFI wiring connectors, terminals, etc., first disconnect the power by either turning the ignition switch to LOCK or disconnecting the negative (–) terminal cable from the battery.

HINT:


Always check the diagnostic trouble code before disconnecting the negative (–) terminal cable from the battery.

- (b) When installing the battery, be especially careful not to incorrectly connect the positive (+) and negative (–) cables.
- (c) Do not permit parts to receive a severe impact during removal or installation. Handle all SFI parts carefully, especially the ECM.
- (d) Be careful during troubleshooting as there are numerous transistor circuit, and even slight terminal contact can cause further troubles.
- (e) Do not open the ECM cover.
- (f) When inspecting during rainy weather, take care to prevent entry of water. Also, when washing the engine compartment, prevent water from getting on the SFI parts and wiring connectors.
- (g) Parts should be replaced as an assembly.
- (h) Care should be taken when pulling out and inserting wiring connectors.
 - (1) Release the lock and pull out the connector, pulling on the connectors.
 - (2) Fully insert the connector and check that it is locked.
- (i) Use SST for inspection or test of the injector or its wiring connector.
SST 09842–30080

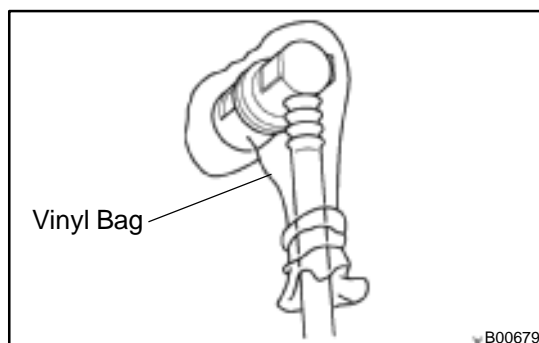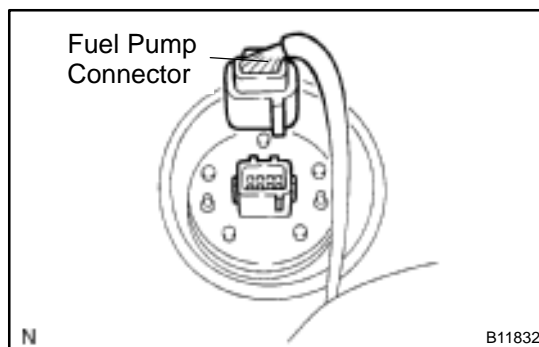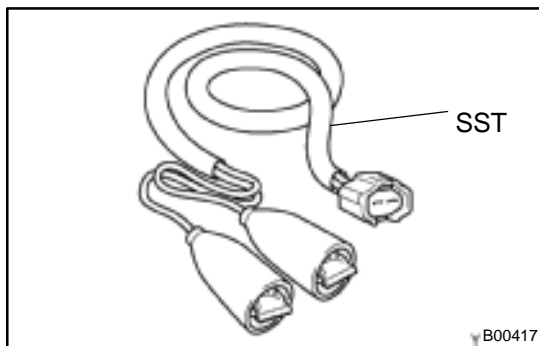


7. FUEL SYSTEM


- (a) When disconnecting the high fuel pressure line, a large amount of gasoline will spill out, so observe these procedures.
 - (1) Disconnect the fuel pump connector.
 - (2) Start the engine. After the engine has stopped on its own, turn the ignition switch to LOCK.
 - (3) Disconnect the fuel tube from the fuel tank.
 - (4) Drain the fuel remained inside the fuel tube.
 - (5) Prevent the disconnected fuel tube from damaging and mixing foreign objects by covering them with a vinyl bag.

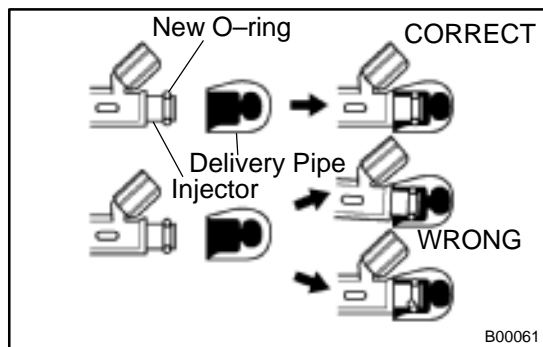


- (b) Observe these precautions when removing and installing the injector.
- (1) Never reuse the O-ring.
 - (2) When placing a new O-ring on the injector, take care not to damage it in any way.
 - (3) Coat a new O-ring with spindle oil or gasoline before installing never use engine, gear or brake oil.

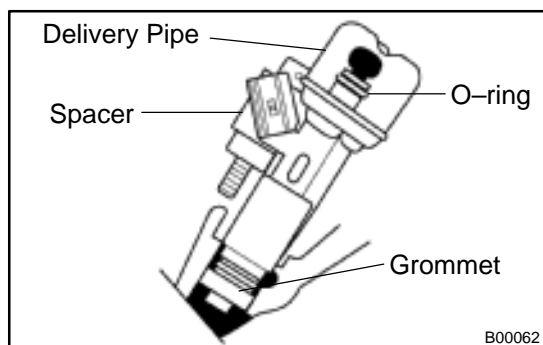


- (c) Install the injector to the delivery pipe and cylinder head, as shown in the illustration. Before installing the injector, must apply spindle oil or gasoline on the place where a delivery pipe or a cylinder head touches on O-ring of the injector.

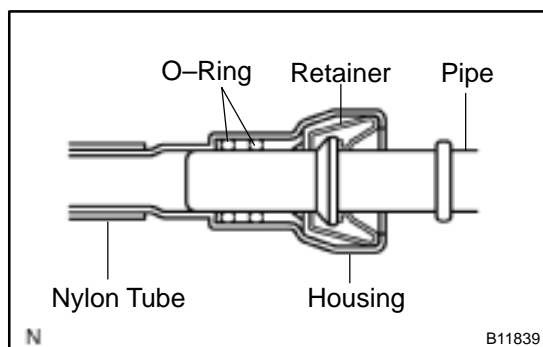


- (d) Observe these precautions when disconnecting the fuel delivery pipe. The structure of the metallic connector is shown as left.
- (1) Remove the fuel pipe clamp.

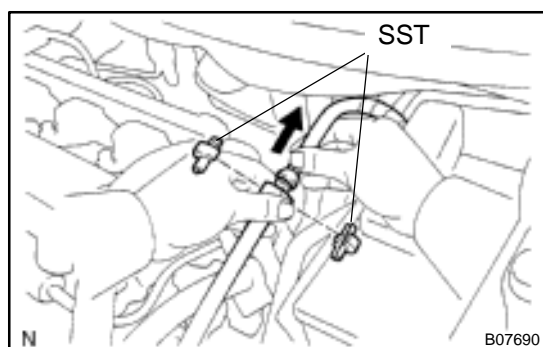


- (2) Get the metallic connector of the fuel tube assembly, pull it out towards the rear and hold it as it is.
- (3) Assemble SST to the connection as shown.
SST 09268-21010

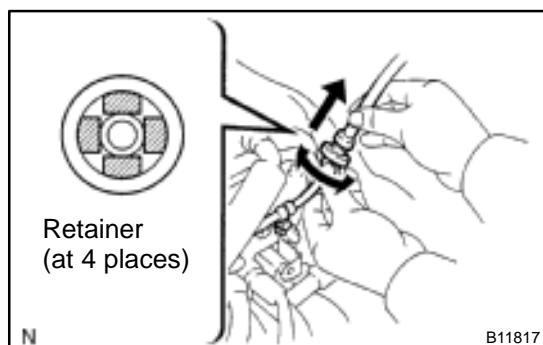


- (4) Turn SST, align the retainers inside the connector with SST chamfered parts and insert SST into the connector.

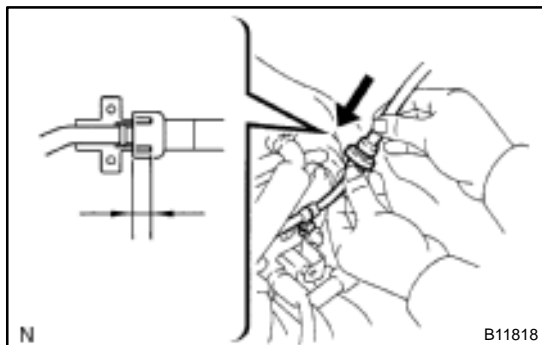


- (5) Hold SST as it at step 4, push the connector towards SST to put the retainers on SST chamfered parts.
- (6) Slide SST and the connector together towards the fuel tube assembly.

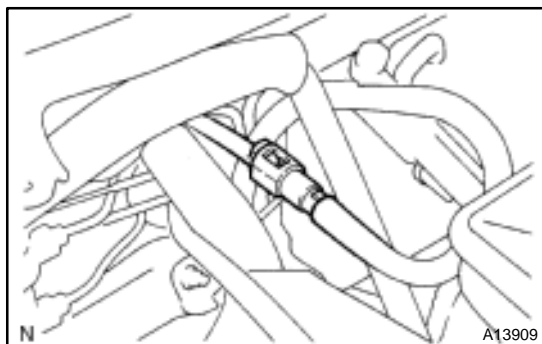


- (e) Observe these precautions when disconnecting the fuel tube connector (quick type).
 - (1) Check if there is any dirt like mud on the pipe and around the connector before disconnecting them and clean the dirt away.

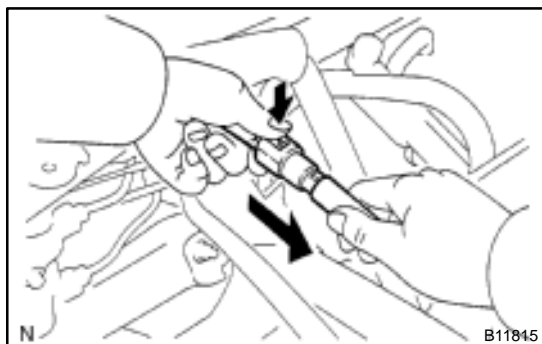


- (2) Be sure to disconnect with hands.
- (3) When the connector and the pipe are stuck, pinch the retainer between the hands, push and pull the connector to free to disconnect and pull it out. Do not use any tool at this time.
- (4) Inspect if there is any dirt or the likes on the seal surface of the disconnected pipe and clean it away.

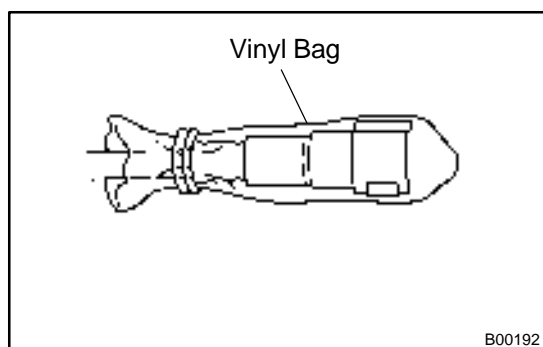

- (5) Prevent the disconnected pipe and connector from damaging and mixing foreign objects by covering them with a vinyl bag.

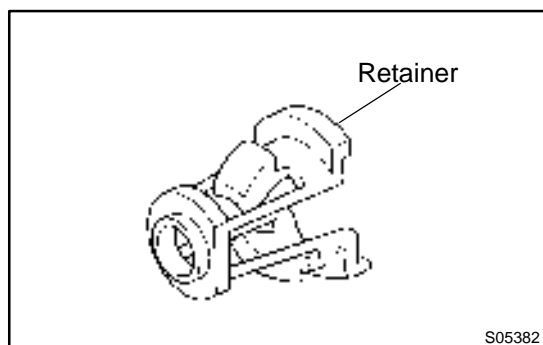


- (f) Observe these precautions when connecting the fuel tube connector (quick type).
 - (1) Do not reuse the retainer removed from the pipe.
 - (2) Must use hands without using tools when to remove the retainer from the pipe.
 - (3) Check if there is any damage or foreign objects on the connected part of the pipe.

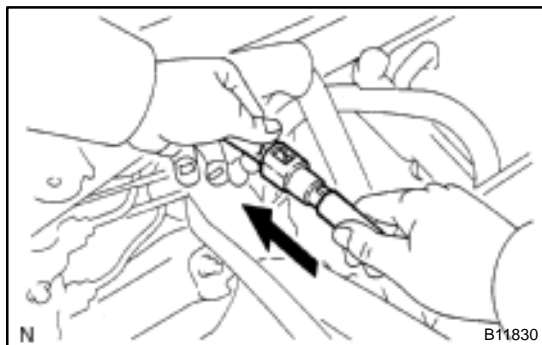


- (4) Match the axis of the connector with axis of the pipe, and push in the connector until retainer makes a "click" sound. In case that the connections is tight, apply little amount of new engine oil on the tip of the pipe.


- (5) After having finished the connection, check if the pipe and the connector are securely connected by pulling them.

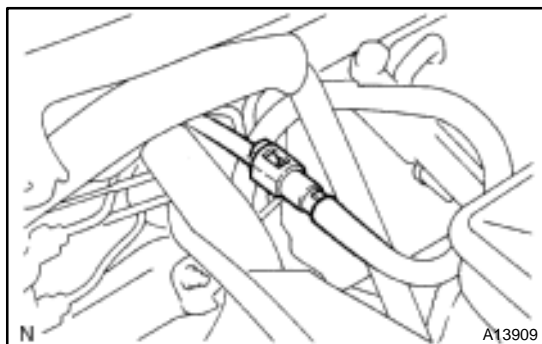

- (g) Check if there is any fuel leakage.
Observer these precautions when handling nylon tube.
- (1) Pay attention not to turn the connected part of the nylon tube and the quick connector with force when connecting them.
 - (2) Pay attention not to kink the nylon tube.
 - (3) Do not remove the nylon tube.
 - (4) Must not close the piping with the nylon tube by bending it.

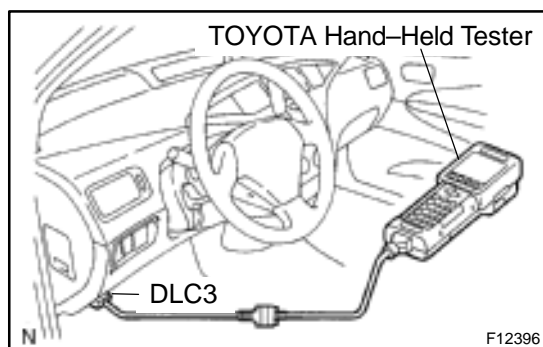

- (h) Check that there are no fuel leaks after doing maintenance anywhere on the fuel system.
- (1) Connect the TOYOTA hand-held tester to the DLC3.
 - (2) Turn the ignition switch ON and push TOYOTA hand-held tester main switch ON.
 - (3) Select the active test mode on the TOYOTA hand-held tester.
 - (4) Please refer to the TOYOTA hand-held tester operator's manual for further details.
 - (5) If you have no TOYOTA hand-held tester, connect the positive (+) and negative (–) leads from the battery to the fuel pump connector.
(See page [SF-6](#))
 - (6) Check that there are no leaks from any part of the fuel system.
 - (7) Turn the ignition switch to LOCK.
 - (8) Disconnect the TOYOTA hand-held tester from the DLC3.

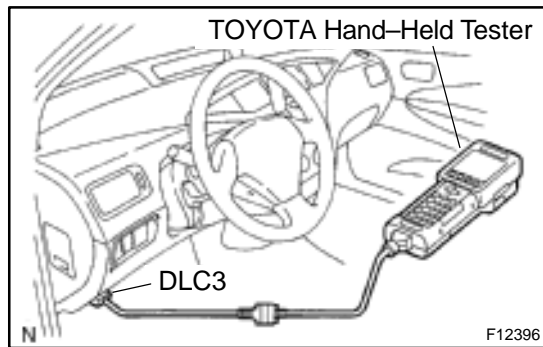

FUEL PUMP

ON-VEHICLE INSPECTION

SF1KO-01


1. CHECK FUEL PUMP OPERATION

- Connect the TOYOTA hand-held tester to the DLC3.
- Turn the ignition switch ON and TOYOTA hand-held tester main switch ON.


NOTICE:

Do not start the engine.

- Select the active test mode on the TOYOTA hand-held tester.
- Please refer to the TOYOTA hand-held tester operator's manual for further details.

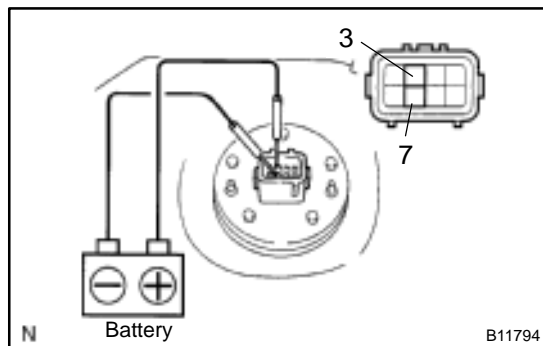

- If you have no TOYOTA hand-held tester, connect the positive (+) lead from the battery to terminal 3 of the connector, and the negative (-) lead to terminal 7.

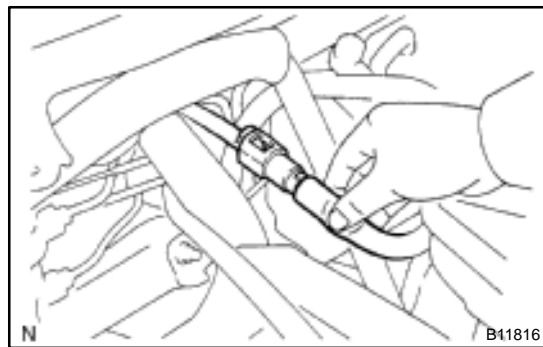


- Check that there is pressure in the fuel inlet pipe from the fuel line.

HINT:


If there is fuel pressure, you will hear the sound of fuel flowing. If there is no pressure, check these parts, Fusible link, Fuses, EFI Main relay, Fuel pump, ECM, and Wiring connector.

- Turn the ignition switch to LOCK.
- Disconnect the TOYOTA hand-held tester from the DLC3.

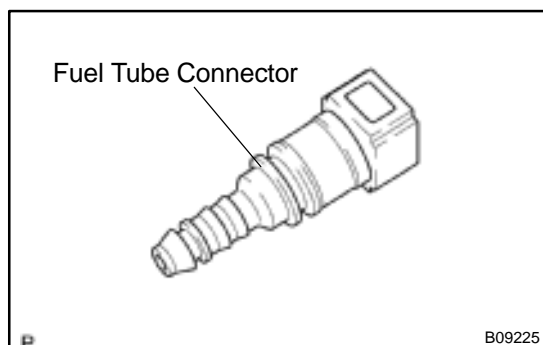

2. CHECK FUEL PRESSURE


- Check the battery positive voltage is above 12 V.
- Disconnect the negative (-) terminal cable from the battery.
- Purchase the new fuel tube and take out the fuel tube connector from its pipe.
Part No.: 23901-21020

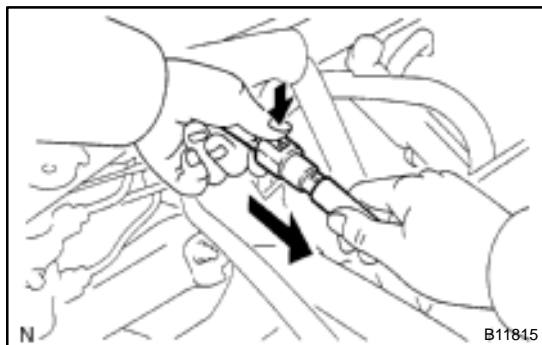


- (d) Disconnect the fuel tube (fuel tube connector) from the fuel pipe.

CAUTION:

- Perform disconnecting operations of the fuel tube connector (quick type) after observing the precautions.
- As there is retained pressure in the fuel pipe line, prevent it from splashing inside the engine compartment.

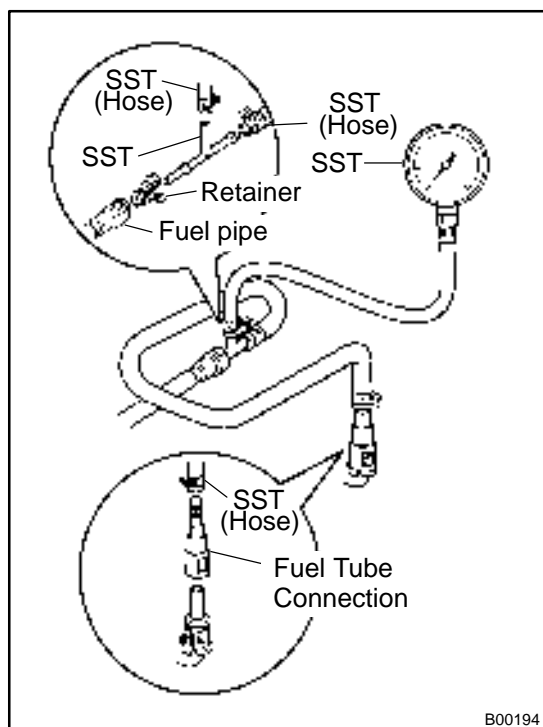

- (e) Install SST (pressure gauge) as shown in the illustration by using SST and fuel tube connector.
SST 09268-41047 (95336-08070), 09268-45014 (09268-41200, 09268-41220, 09268-41250)
- (f) Wipe off any splattered gasoline.
- (g) Reconnect the negative (-) terminal cable to the battery.

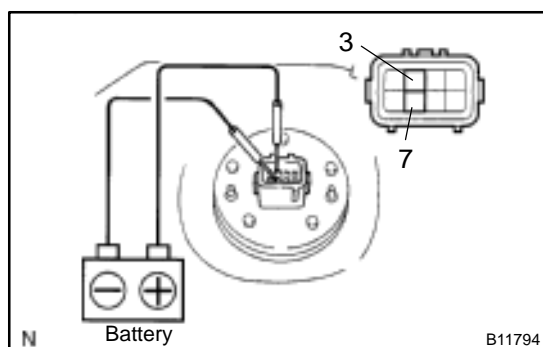

- (h) Connect the TOYOTA hand-held tester to the DLC3. If you have no TOYOTA hand-held tester, connect the positive (+) lead from the battery to terminal 3 of the connector, and the negative (-) lead to terminal 7.

- (i) Measure the fuel pressure.

Fuel pressure:

304 – 343 kPa (3.1 – 3.5 kgf/cm², 44 – 50 psi)

If pressure is high, replace the fuel tank.

If pressure is low, check the Fuel hoses and connections, Fuel pump.

- (j) Disconnect the TOYOTA hand-held tester from the DLC3.
- (k) Start the engine.
- (l) Measure the fuel pressure at idle.

Fuel pressure:

304 – 343 kPa (3.1 – 3.5 kgf/cm², 44 – 50 psi)

- (m) Stop the engine.
- (n) Check that the fuel pressure remains as specified for 5 minutes after the engine has stopped.

Fuel pressure:**147 kPa (1.5 kgf/cm², 21 psi) or more**

If pressure is not as specified, check the fuel pump and/or injectors.

- (o) After checking fuel pressure, disconnect the negative (–) terminal cable from the battery and carefully, remove the SST and fuel tube connector to prevent gasoline from splashing.

SST 09268–41047 (95336–08070), 09268–45014 (09268–41200, 09268–41220, 09268–41250)

- (p) Reconnect the fuel tube (fuel tube connector).

CAUTION:

Perform connecting operations of the fuel tube connector (quick type) after observing the precautions.




- (q) Reconnect the negative (–) terminal cable to the battery.
(r) Check for fuel leakage.

3. REMOVE REAR SEAT CUSHION**4. REMOVE FLOOR SERVICE HOLE COVER****5. DISCONNECT FUEL PUMP & SENDER GAUGE CONNECTOR****6. INSPECT FUEL PUMP RESISTANCE**

Using an ohmmeter, measure the resistance between terminals 3 and 7.

Resistance: 0.2 – 3.0 Ω at 20°C (68 °F)

If the resistance is not as specified, replace the fuel tank.

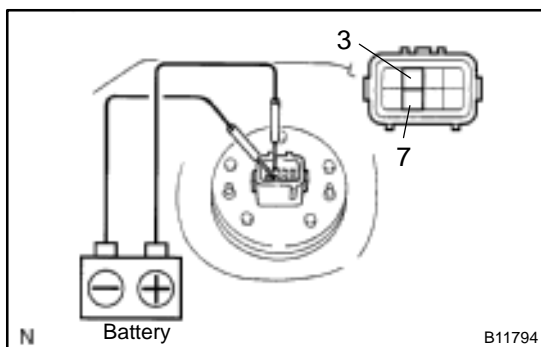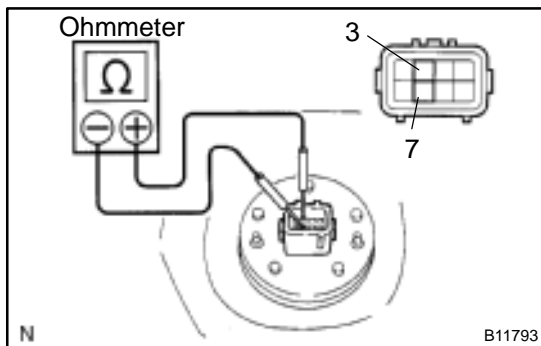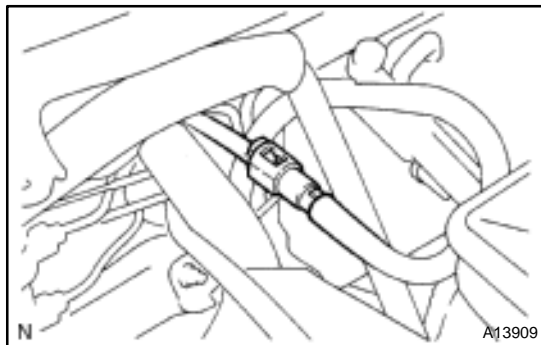**7. INSPECT FUEL PUMP OPERATION**


Connect the positive (+) lead from the battery to terminal 3 of the connector and the negative (–) terminal 7. Check that the pump operates.

NOTICE:

- **These tests must be done quickly (within 10 seconds) to prevent the coil burning out.**
- **Keep fuel pump as far away from the battery as possible.**
- **Always do the switching at the battery side.**

If operation is not as specified, replace the lead wire or fuel tank.

8. RECONNECT FUEL PUMP & SENDER GAUGE CONNECTOR**9. REINSTALL FLOOR SERVICE HOLE COVER****10. REINSTALL REAR SEAT CUSHION**

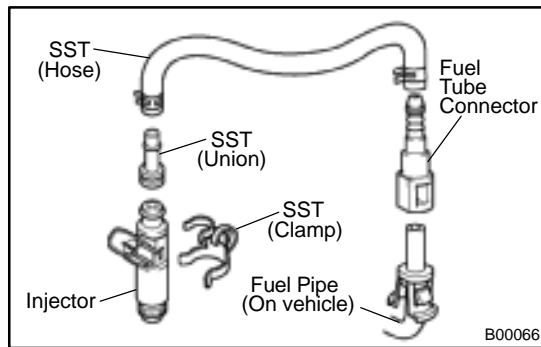


INSPECTION


1. INSPECT INJECTOR INSPECTION

CAUTION:

Keep injector clear of sparks during the test.

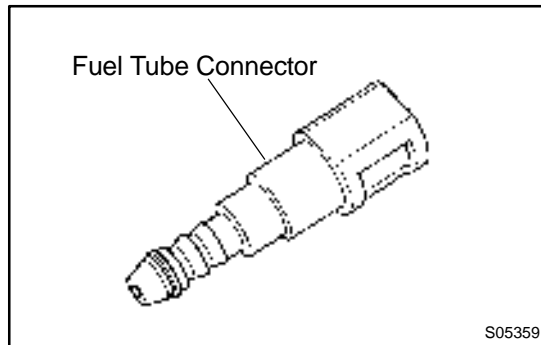


- (a) Purchase the new fuel tube and take out the fuel tube connector from its pipe.
Part No. 23901-22010

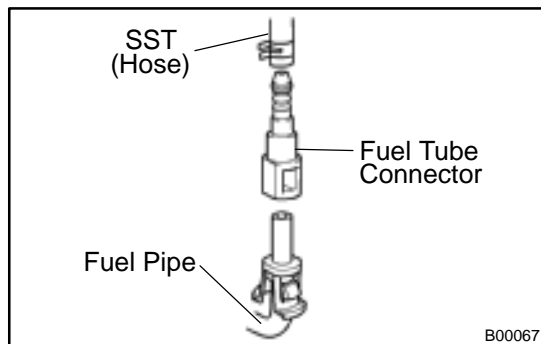

- (b) Connect SST (hose) and fuel tube connector to the fuel pipe.
SST 09268-41047

CAUTION:

Perform connecting operations of the fuel tube connector (quick type) after observing the precautions.

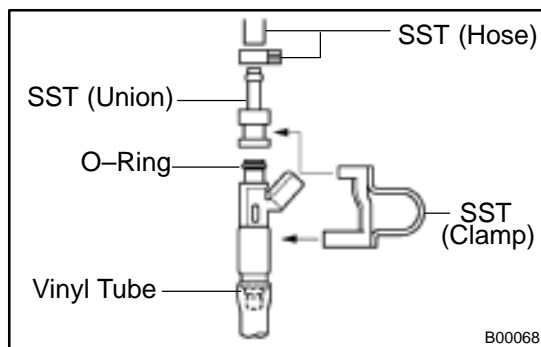


- (c) Install the grommet and O-ring to the injector.
(d) Connect SST (union and hose) to the injector, and hold the injector to prevent gasoline from splashing out.
SST 09268-41047

- (e) Put the injector into a graduated cylinder.

HINT:

Install a suitable vinyl tube onto the injector to prevent gasoline from splashing out.

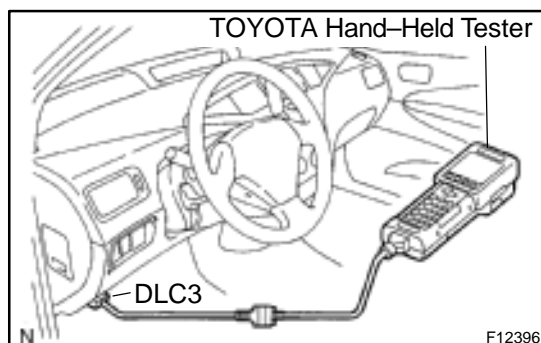


- (f) Connect the TOYOTA hand-held tester to the DLC3.
(g) Turn the ignition switch ON and TOYOTA hand-held tester main switch ON.

NOTICE:

Do not start the engine.

- (h) Select the active test mode on the TOYOTA hand-held tester.
(i) Please refer to the TOYOTA hand-held tester operator's manual for further details.

- (j) If you have no TOYOTA hand-held tester, connect the positive (+) and negative (–) leads from the battery to the fuel pump connector (See page SF-9).

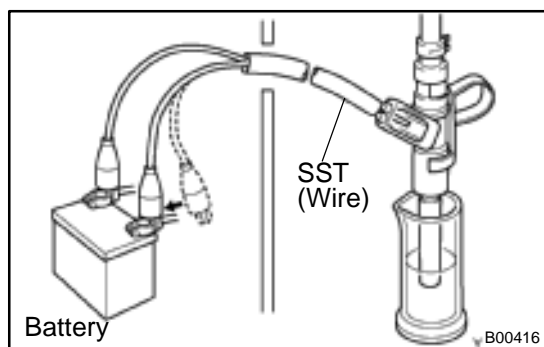

- (k) Connect SST (wire) to the injector and battery for 15 seconds, and measure the injection volume with a graduated cylinder. Test each injector 2 or 3 times.

SST 09842-30080


Volume:

36 – 46 cm³ (2.1 – 2.8 cu in.) per 15 sec.

Difference between each injector:

10 cm³ (0.6 cu in.) or less

If the injection volume is not as specified, replace the injector.

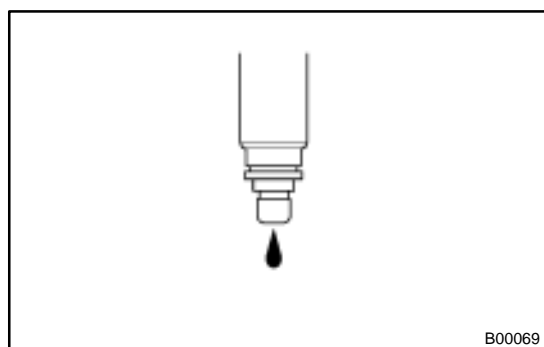

2. INSPECT LEAKAGE

- (a) In the condition above, disconnect the test probes of SST (wire) from the battery and check the fuel leakage from the injector.

SST 09842-30080


Fuel drop:

1 drop or less per 12 minutes

- (b) Turn the ignition switch to LOCK.
 (c) Disconnect the negative (–) terminal cable from the battery.
 (d) Remove the SST and fuel tube connector.
 SST 09268-41047

CAUTION:


- Perform disconnecting operations of the fuel tube connector (quick type) after observing the precautions.
 - As there is retained pressure in the fuel pipe line, prevent it from splashing inside the engine compartment.
- (e) Disconnect the TOYOTA hand-held tester from the DLC3.

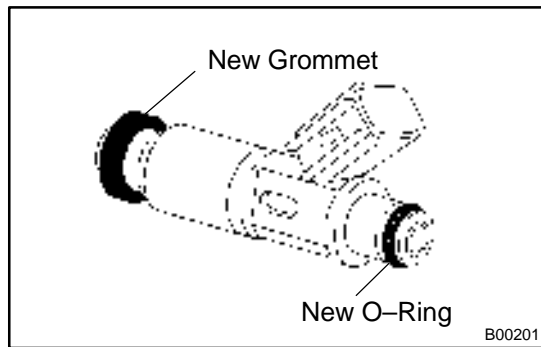


INSTALLATION

1. INSTALL INJECTORS AND DELIVERY PIPES


- Install the grommet to each injector.
- Apply a light coat of spindle oil or gasoline to new O-ring and install them to each injector.

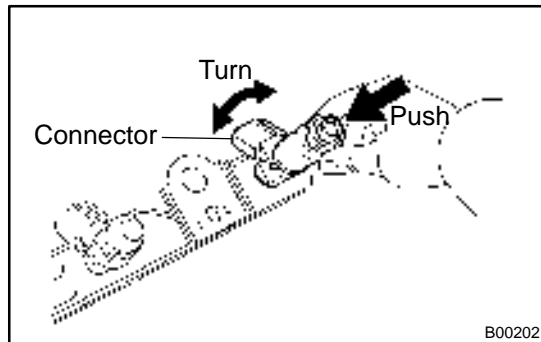


- Apply a light coat of spindle oil or gasoline on the place where a delivery pipe touches on O-ring.
- While turning the injector clockwise and counterclockwise, push it to the delivery pipes. Install the 4 injectors.
- Position the injector connector outward.
- Place the 2 spacers in position on the cylinder head.
- Place the delivery pipe and fuel pipe together with the 4 injectors in position on the cylinder head.

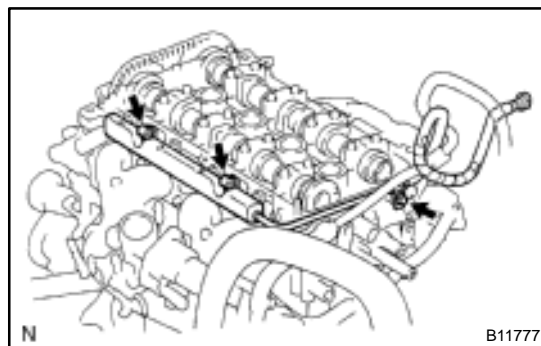


- Temporarily install the 2 bolts holding the delivery pipe to the cylinder head.
- Temporarily install the bolt holding the fuel pipe to the cylinder head.

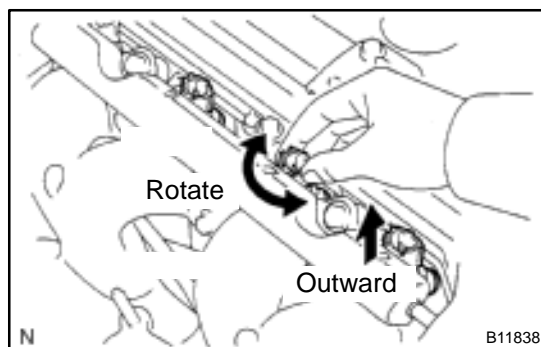

- Check that the injectors rotate smoothly.
- HINT:**
If injectors do not rotate smoothly, the probable cause is incorrect installation of O-ring. Replace the O-ring.
- Position the injector connector outward.

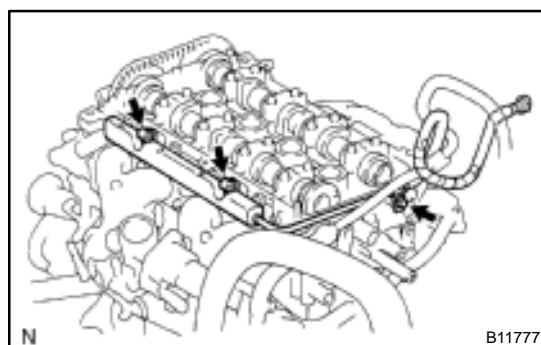

- Tighten the 2 bolts holding the delivery pipe to the cylinder head.
Torque: 19 N·m (194 kgf-cm, 14 ft-lbf)
- Tighten the bolt holding the fuel pipe to the cylinder head.
Torque: 9.0 N·m (92 kgf-cm, 80 in.-lbf)

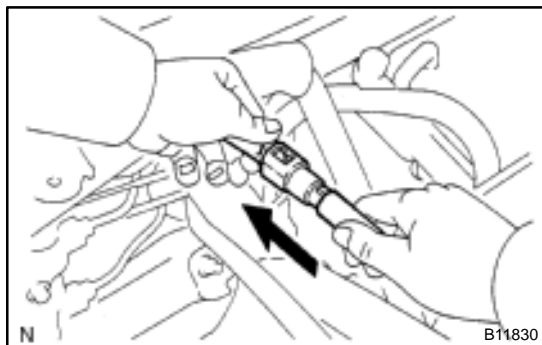**2. CONNECT FUEL TUBE**

Connect the fuel tube (fuel tube connector) to the fuel pipe.


CAUTION:

Perform connecting operations of the connector (quick type) after observing the precautions.

3. INSTALL CYLINDER HEAD COVER

(See page [EM-21](#))

COMPONENTS

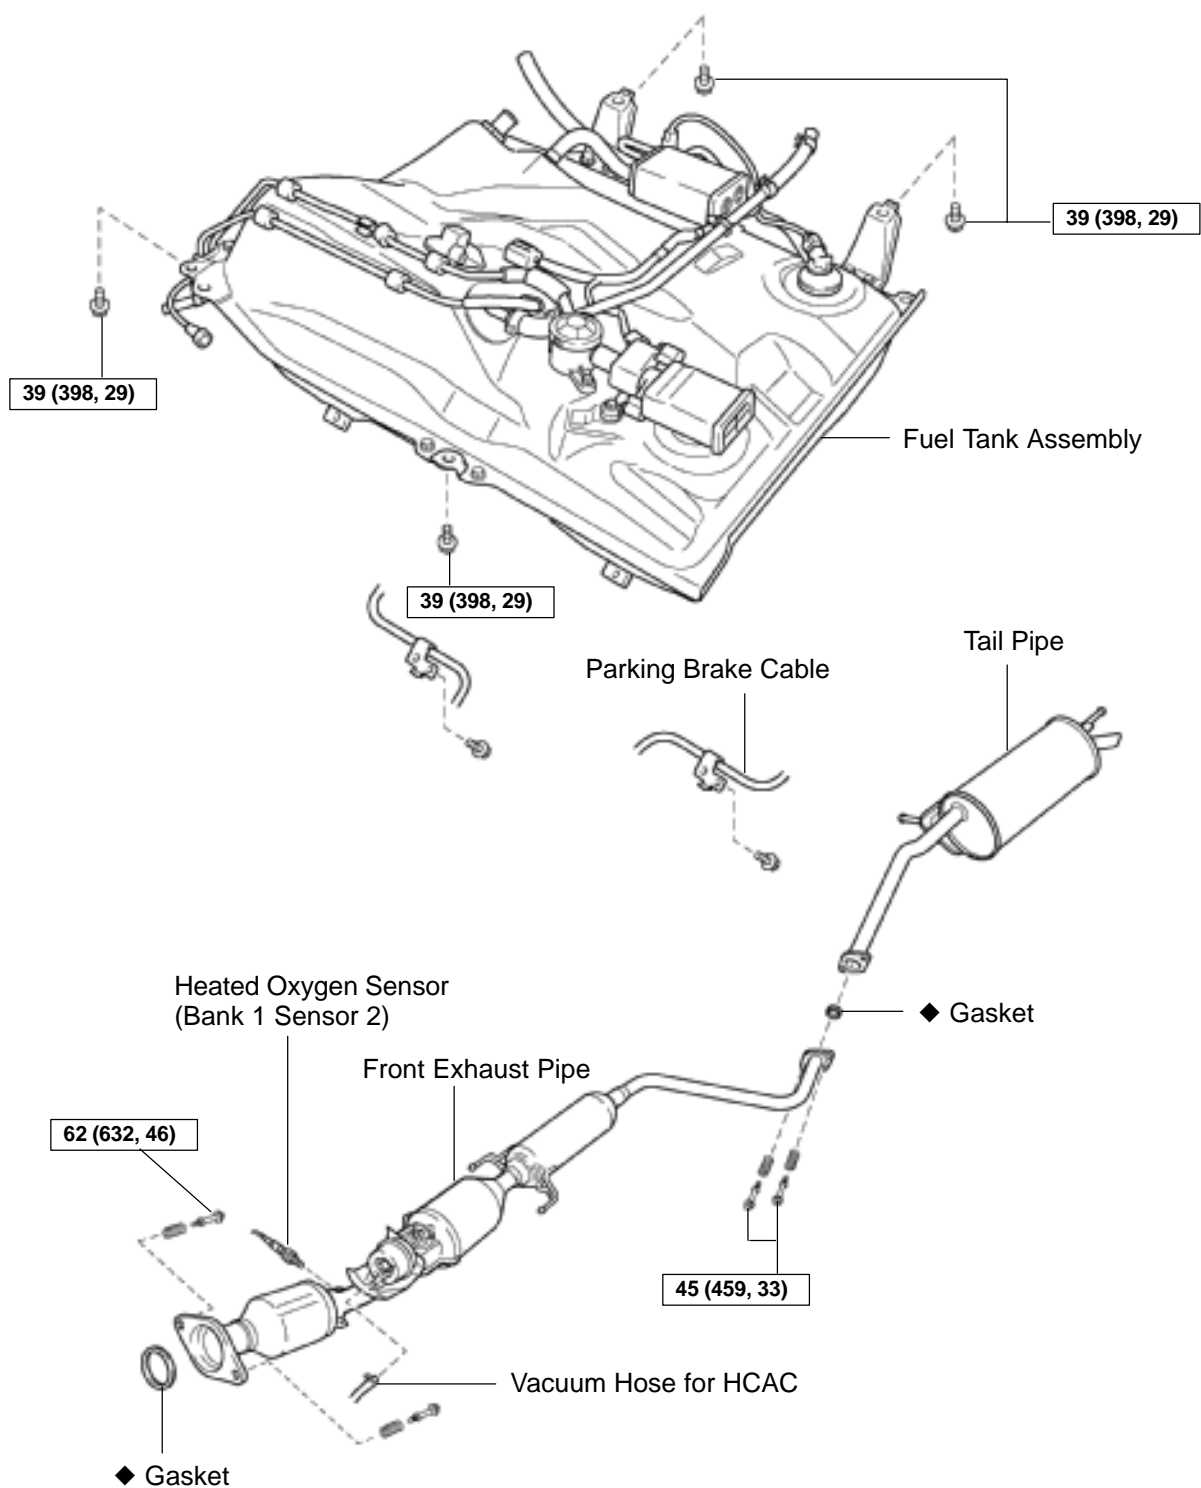


N

N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non-reusable part
2001 PRIUS (RM778U)

B11453

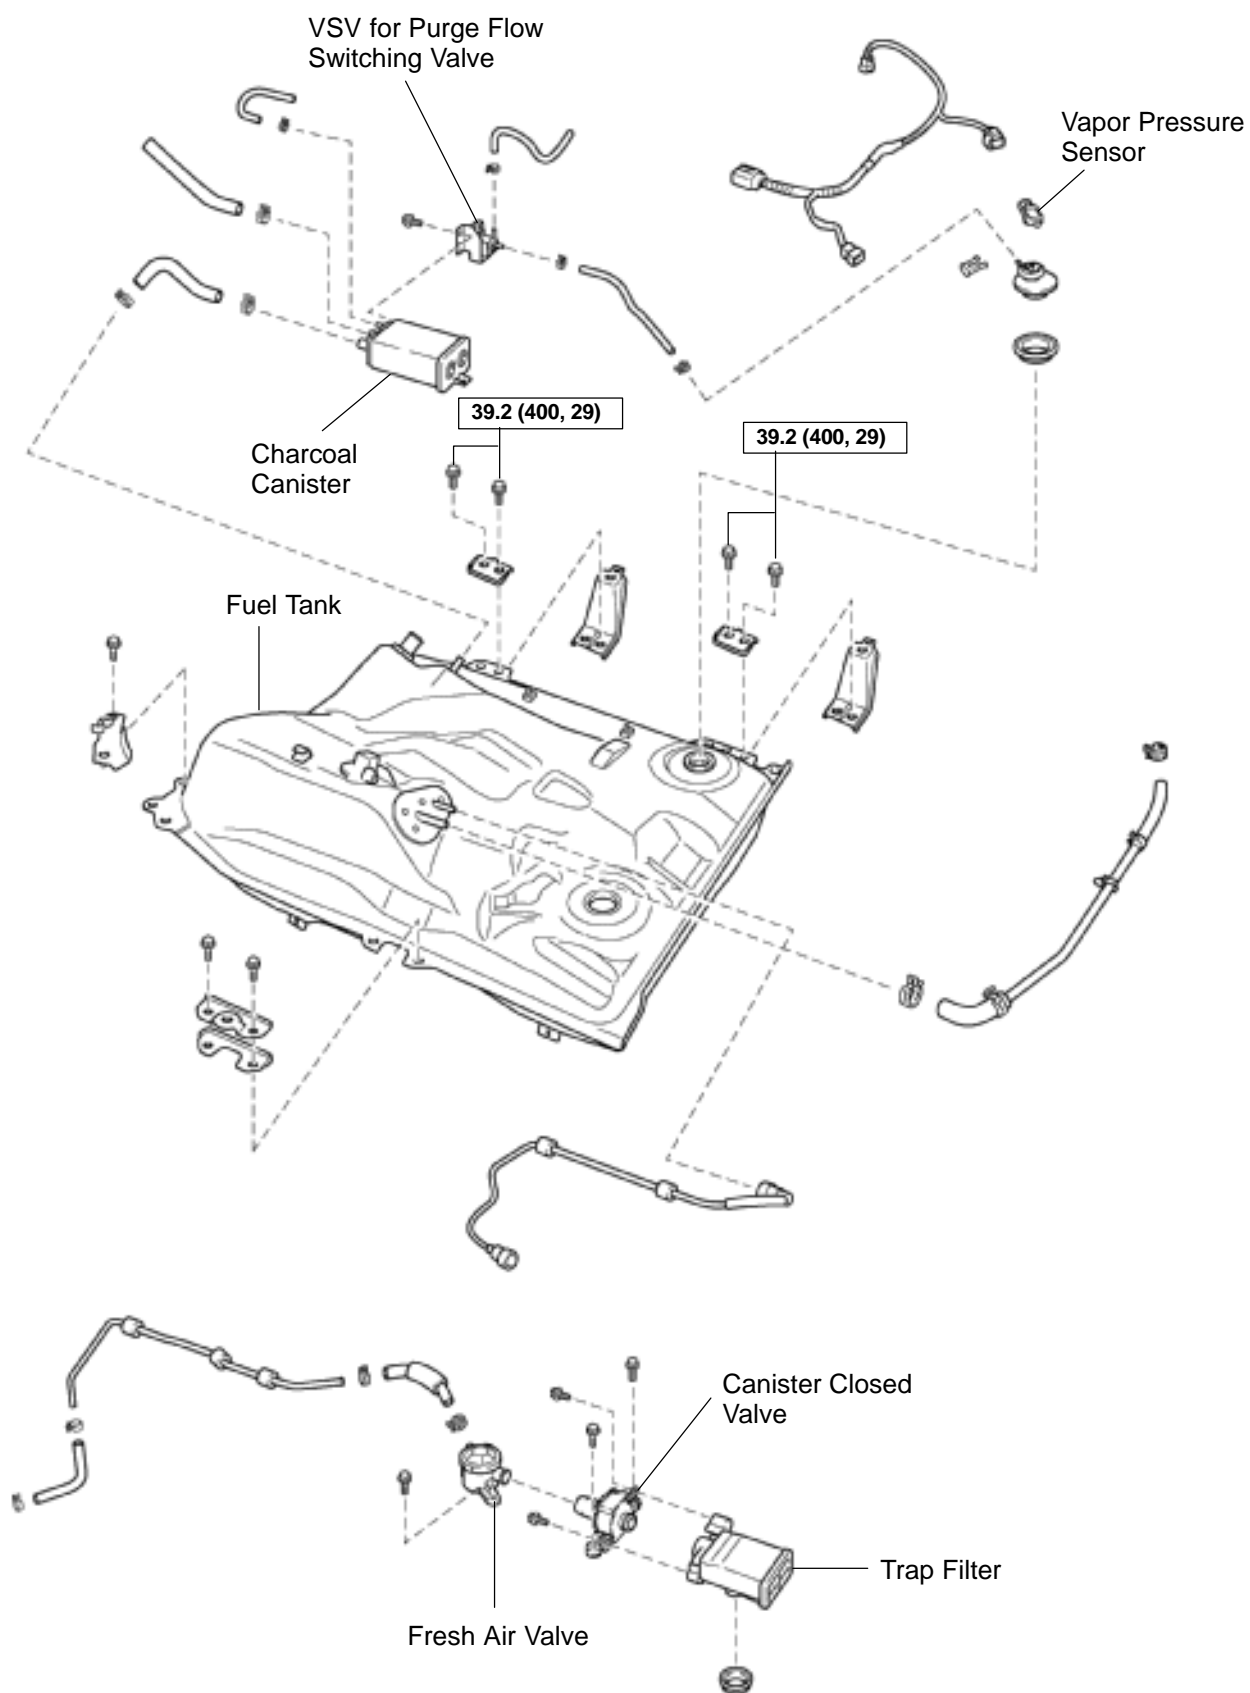

N N·m (kgf·cm, ft·lbf) : Specified torque


B11454

THROTTLE BODY ON-VEHICLE INSPECTION

SF1KS-01

1. INSPECT SYSTEM OPERATION

- (a) Disconnect the throttle control motor connector.
- (b) Turn the ignition switch ON.

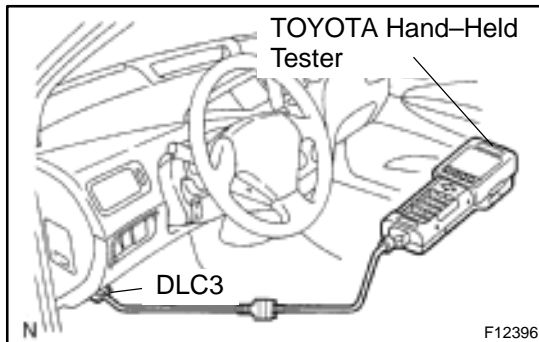

- (c) Inspect the throttle position sensor function.
 - (1) Connect the TOYOTA hand-held tester to the DLC3.
 - (2) When turning the throttle linkage to the full open position, check that the throttle valve opening percentage (THROTTLE POS) of the CURRENT DATA shows the standard value.

Throttle valve opening percentage: 60 % or more

If operation is not as specified, check that the throttle position sensor, wiring and ECM.

- (d) Connect the throttle control motor connector.
- (e) Transit to the inspection mode and start the engine.
- (f) Allow the engine to warm up to normal operating temperature.
- (g) To check the charging rate of the HV battery, move the shift lever to D range and check that the engine stops. If it does not stop, the charging rate may be low. With the shift lever in P range, keep running the engine for a while. Then, shift lever to D range again and check that the engine stops.
- (h) Start the engine.
- (i) Turn the A/C switch ON and OFF, and check the idle speed.

Idle speed (Transmission in neutral):


1,000 ± 50 rpm (A/C OFF)

1,200 ± 50 rpm (A/C ON)

NOTICE:

Perform inspection under condition without electrical load.

- (j) Stop the engine and disconnect TOYOTA hand-held tester from the DLC3.

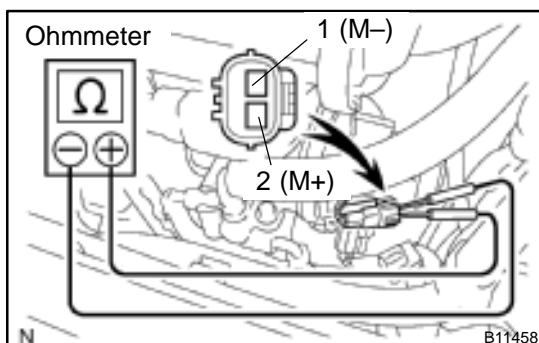


2. INSPECT THROTTLE CONTROL MOTOR

- (a) Disconnect the throttle control motor connector.
- (b) Using an ohmmeter, measure the resistance between terminal M+ and M-.

Resistance: 0.3 – 100 Ω at 20°C (68°F)

If the resistance is not as specified, replace the throttle body.

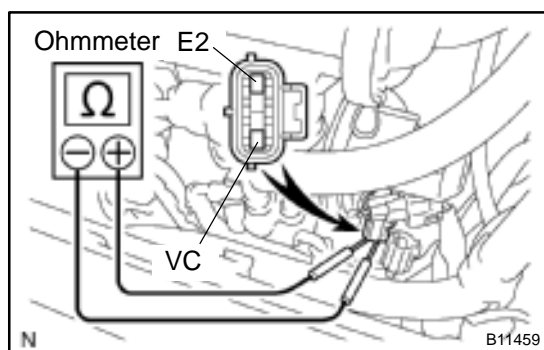

- (c) Reconnect the throttle control motor connector.

3. INSPECT THROTTLE POSITION SENSOR

- (a) Disconnect the throttle position sensor connector.
 (b) Using an ohmmeter, measure the resistance between terminals VC and E2.


Resistance: 1.2 – 3.2 k Ω at 20°C (68°F)


If the resistance is not as specified, replace the throttle position sensor. (See page [SF-29](#))

- (c) Reconnect the throttle position sensor connector.

4. INSPECT ACCELERATOR PEDAL POSITION SENSOR (See page [SF-59](#))

COMPONENTS

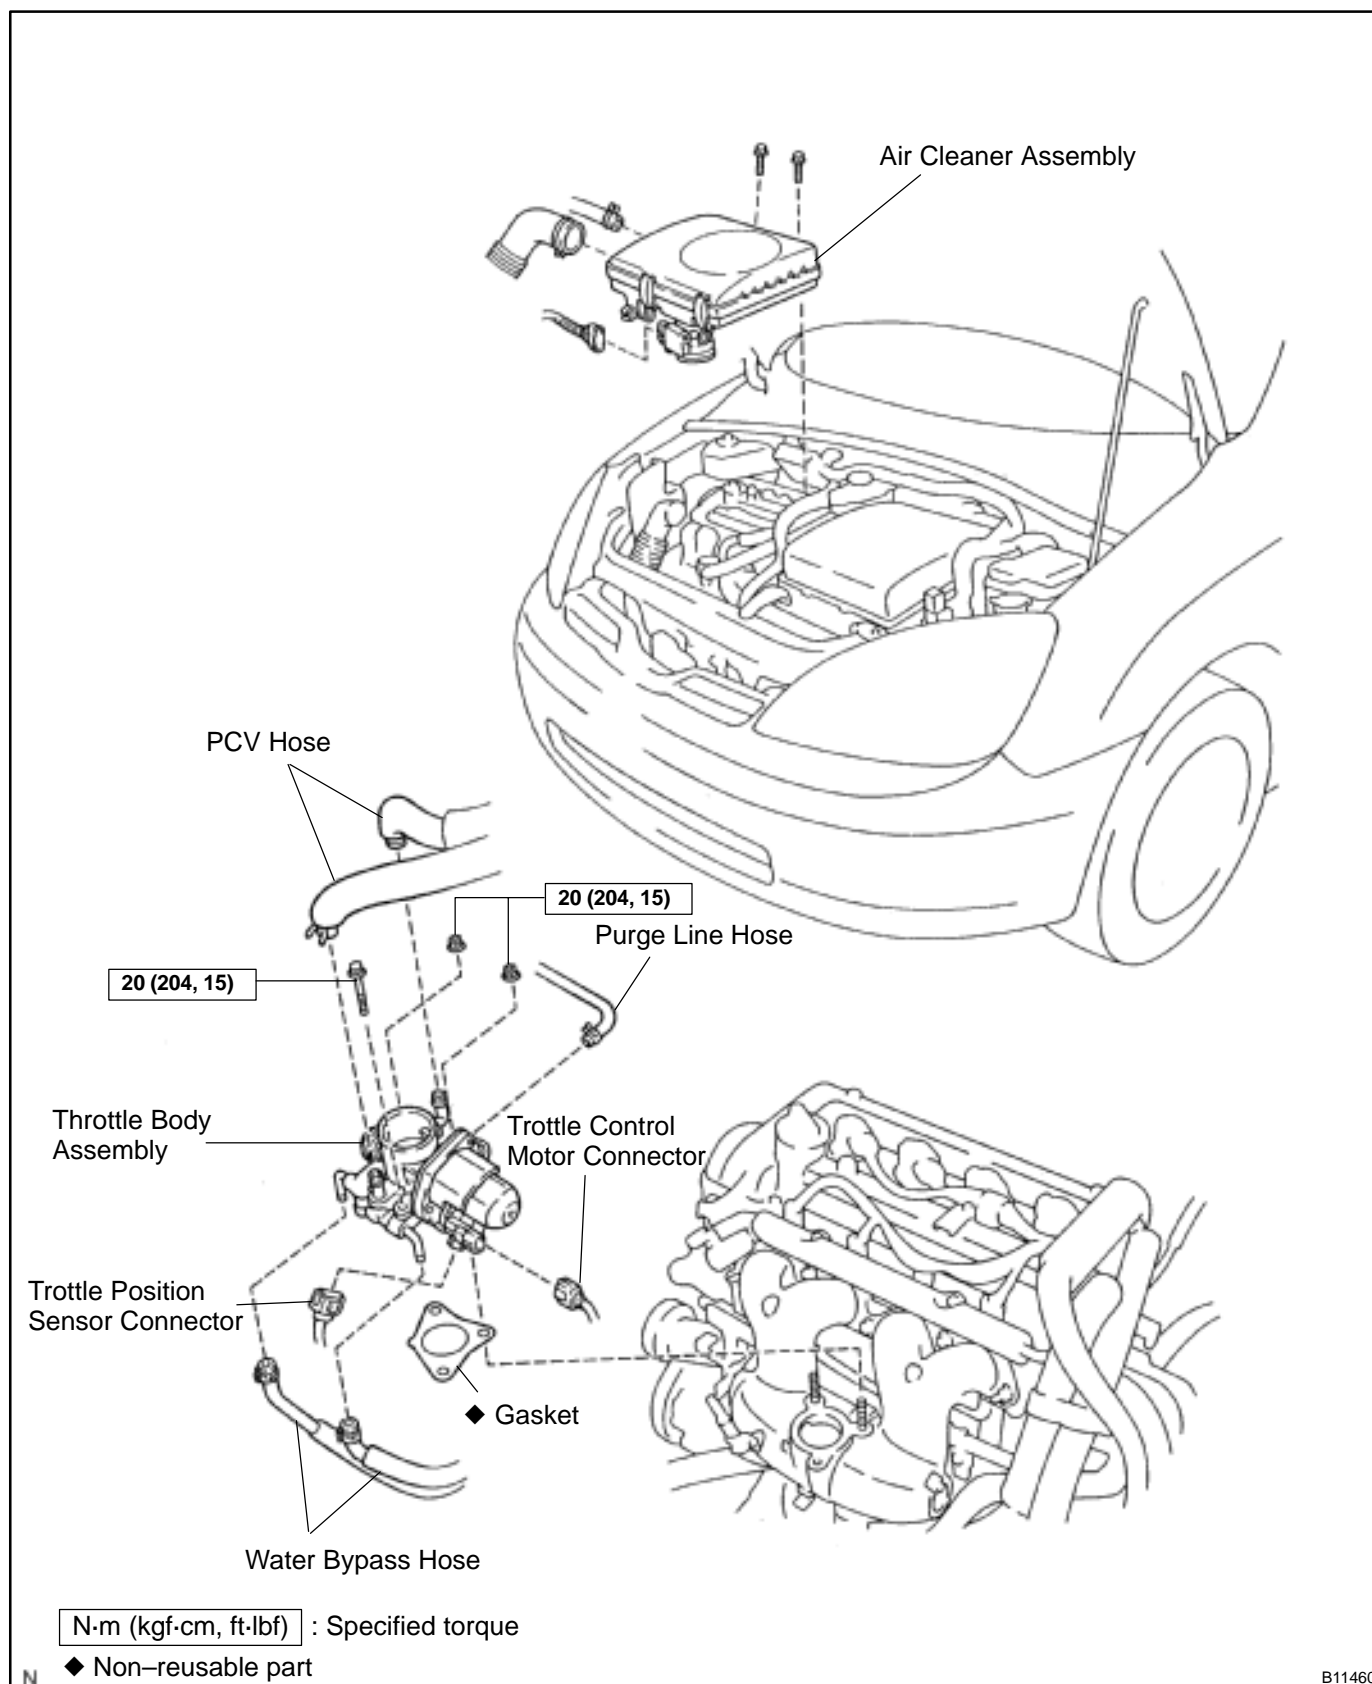

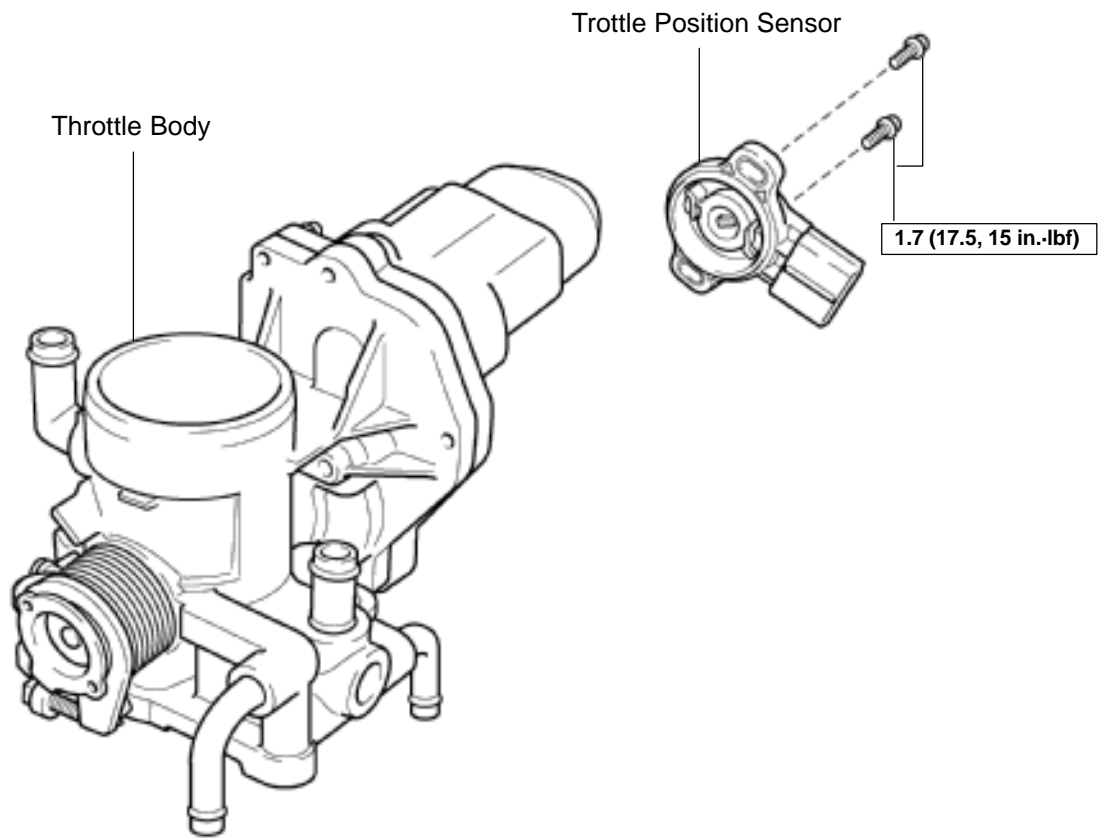

N


N·m (kgf·cm, ft·lbf) : Specified torque

B11461

REPLACEMENT


NOTICE:

- To prevent deterioration, do not shock the throttle position sensor.
- Mixing of the foreign objects may cause the gear locking, so thoroughly check that there is no stuck of any foreign objects and clean up if any.

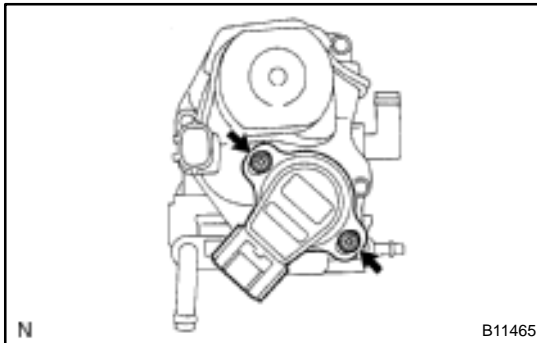


REPLACE THROTTLE POSITION SENSOR

- Remove the 2 set screws and throttle position sensor.
- Reinstall the throttle position sensor.
 - Check that the throttle valve is under the condition of the opener opening angle (about 3.5°).

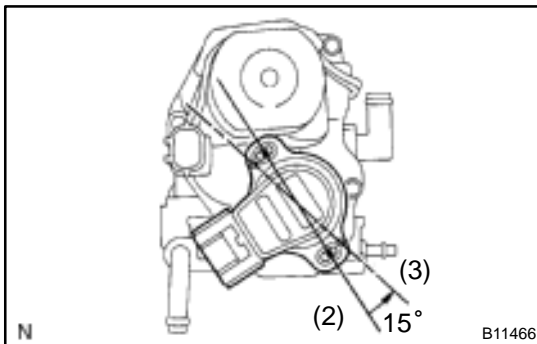

- Install the sensor to the place where is at 15° rotated to the right from the specified installation position.
- Gradually turn sensor counterclockwise until it touches the throttle valve shaft and temporarily torque the 2 set screws.

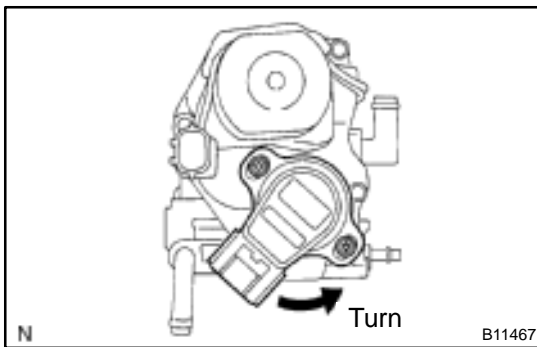

- Adjust the throttle position sensor.
 - Connect the throttle position sensor connector.

NOTICE:

At this time, do not connect the throttle control motor connector.

- Connect the TOYOTA hand-held tester to the DLC3.
- Turn the ignition switch ON.

NOTICE:

After turning the ignition switch ON, do not depress the accelerator pedal.

- While reading the value of the throttle valve opening percentage (THROTTLE POS) of the CURRENT DATA, turn the throttle position sensor slowly to left and set the sensor at the center value of the standard value, and then torque the screws.

Torque: 1.7 N·m (17.5 kgf·cm, 15 in.-lbf)

**Standard throttle valve opening percentage:
14.8 ± 0.8 %**

NOTICE:

At the time of tightening the screw, as the sensor itself tends to turn causing to slanting, check that it is within the standard value after having finished the torque.






- (5) Fully close the throttle valve with a screwdriver and check that the value of the throttle valve opening percentage (THROTTLE POS) of the CURRENT DATA stays with the standard value.

Standard throttle valve opening percentage:

10 – 14 %

If the throttle valve opening percentage is not as specified, repeat steps (4) through (5).

- (6) Paint the sensor set screws.
- (7) Turn the ignition switch OFF.
- (8) Disconnect the TOYOTA hand-held tester or from the DLC3.
- (9) Disconnect the throttle position sensor connector.

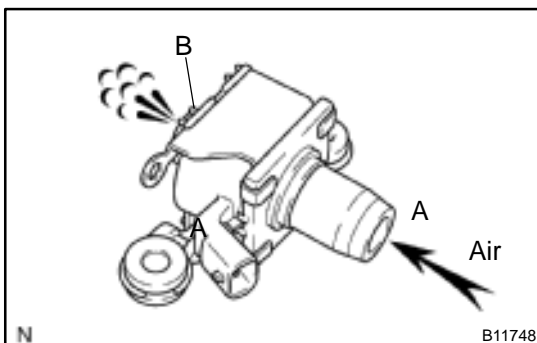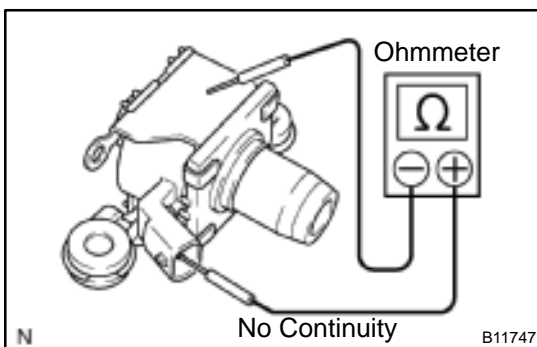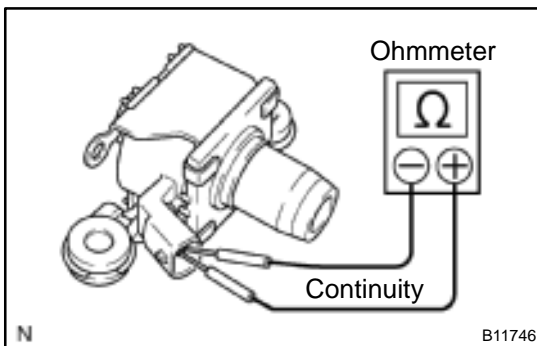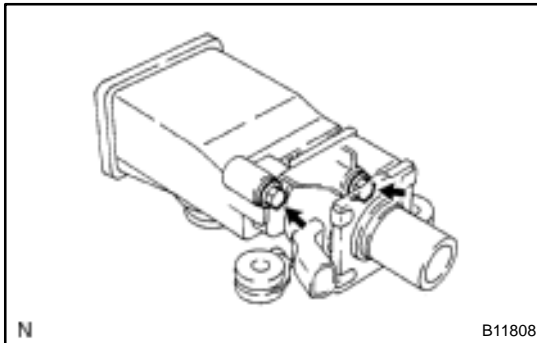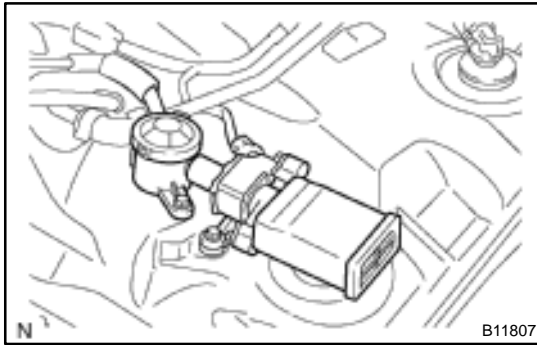

INSPECTION

1. REMOVE FUEL TANK (See page SF-17)

2. REMOVE VSV

- Disconnect the air inlet hoses from the VSV for canister closed valve.
- Disconnect the connector from the VSV for canister closed valve.
- Remove the bolt and disconnect the air opening valve from the VSV for canister closed valve.
- Remove the 2 bolts and VSV for canister closed valve with the trap filter.
- Remove the 2 bolts and VSV for canister closed valve from the trap filter.

3. INSPECT VSV FOR OPEN CIRCUIT

Using an ohmmeter, check that there is continuity between the terminals.

Resistance: 25 – 30 Ω at 20 °C (68 °F)

If there is no continuity, replace the VSV.


4. INSPECT VSV FOR GROUND

Using an ohmmeter, check that there is no continuity between each terminal and the body.

If there is no continuity, replace the VSV.


5. INSPECT VSV OPERATION

- Check that air flows from ports A to B.

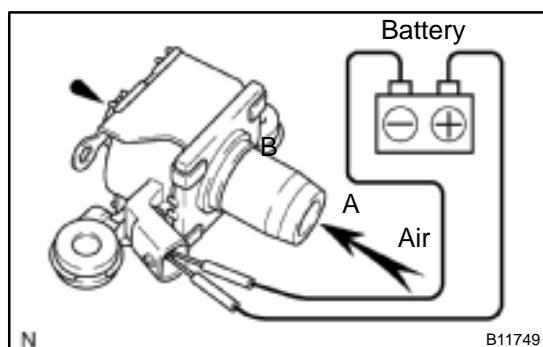

- (b) Apply battery positive voltage across the terminals.
 - (c) Check that air does not flow from ports A to B.
- If operation is not as specified, replace the VSV.

6. REINSTALL VSV

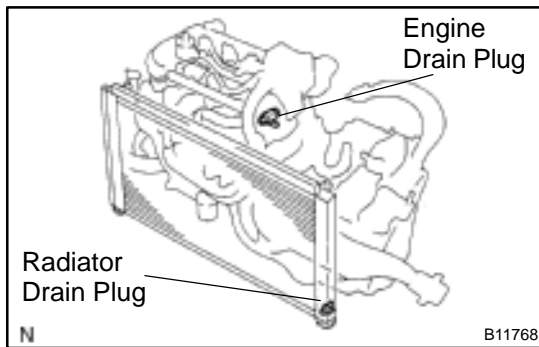

REPLACEMENT

1. DRAIN ENGINE COOLANT

- (a) Remove the radiator cap.

CAUTION:

To avoid the danger of being burned, do not remove the radiator cap while the engine and radiator are still hot, as fluid and steam can be blown out under pressure.

- (b) Loosen the radiator drain plug (on the right side of the radiator lower tank) and engine drain plug on the engine coolant drain union (on the right front of the cylinder block), and drain the coolant.
- (c) Close the drain plugs.

Torque: 12.7 N·m (130 kgf·cm, 9 ft·lbf) for engine

2. FILL ENGINE COOLANT

- (a) Slowly fill the system with coolant.
 - Use of improper coolants may damage the engine cooling system.
 - Use "Toyota Long Life Coolant" or equivalent and mix it with plain water according to the manufacture directions.
 - Use of the coolant which includes more than 50% [freezing protection down to -35°C (-31°F)] or 60% [freezing protection down to -50°C (-58°F)] of ethylene-glycol is recommended, but not more than 70%.

NOTICE:

- **Do not use an alcohol type coolant or plain water alone.**
- **The coolant should be mixed with plain water (preferably demineralized water or distilled water).**

Capacity: 4.9 liters (5.2 US qts, 4.3 Imp qts)

- (b) Install the radiator cap and start the engine. After repeatedly idling and racing the engine several times for approx. 2 minutes, stop the engine.
- (c) Remove the radiator cap and fill the radiator with engine coolant until it reaches the rim of the radiator filler.

If the engine coolant level of the radiator drops when grasping the radiator inlet hose and outlet hose several times by hand, add more coolant.

- (d) Install the radiator cap. Activate inspection mode (See page [IN-10](#)). Warm it up until the radiator fan starts to turn with the engine speed at less than 2,500 rpm.

NOTICE:

Stop the engine immediately after the radiator fan starts to turn.

- (e) Stop the engine and cool it down.

NOTICE:

Cool down the engine until its temperature becomes below 50°C (122°F).

- (f) Remove the radiator cap and check the engine coolant level of the radiator. If it has dropped, repeat steps (d) to (g).
- (g) Bleed air from water pump.
Set the vehicle in the following conditions:
 - Ignition switch ON
 - Blower speed control dial to LO
 - Temperature control dial to MAX. HOT
- (h) Operate the water pump in the following conditions:
 - The engine stopped
 - The blower switch ON
 - Temperature control dial at MAX. HOT

HINT:

Operate the water pump until a sound of the air-containing engine coolant can not be heard from the heater core.

- (i) When the engine coolant remains full, fill the radiator reservoir tank with engine coolant to the maximum level.

3. CHECK FOR COOLANT LEAKS**4. CHECK ENGINE COOLANT SPECIFIC GRAVITY IS CORRECT**

ON-VEHICLE INSPECTION

1. REMOVE RADIATOR CAP


CAUTION:

To avoid the danger of being burned, do not remove the radiator cap while the engine and radiator are still hot, as fluid and steam can be blown out under pressure.

2. INSPECT RADIATOR CAP

NOTICE:

- If the radiator cap has contaminations, always rinse it with water.
- Before using a radiator cap tester, wet the relief valve and pressure valve with engine coolant or water.
- When performing steps (a) and (b) below, keep the radiator cap tester at an angle of over 30° above the horizontal.

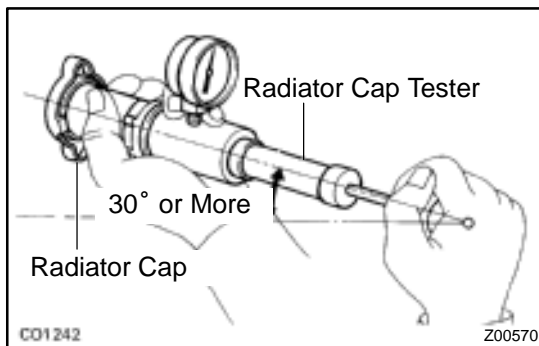

- (a) Using a radiator cap tester, slowly pump the tester and check that air is coming from the vacuum valve.

Pump speed: 1 push/(3 seconds or more)

NOTICE:

Push the pump at a constant speed.

If air is not coming from the vacuum valve, replace the radiator cap.

- (b) Pump the tester and measure the relief valve opening pressure.

Pump speed: 1 push within 1 seconds

NOTICE:

This pump speed is for the first pump only (in order to close the vacuum valve). After this, the pump speed can be reduced.

Standard opening pressure:


74 – 103 kPa (0.75 – 1.05 kgf-cm², 10.7 – 14.9 psi)

Minimum opening pressure:

79 kPa (0.8 kgf-cm², 11.5 psi)

HINT:

Use the tester's maximum reading as the opening pressure. If the opening pressure is less than minimum, replace the radiator cap.

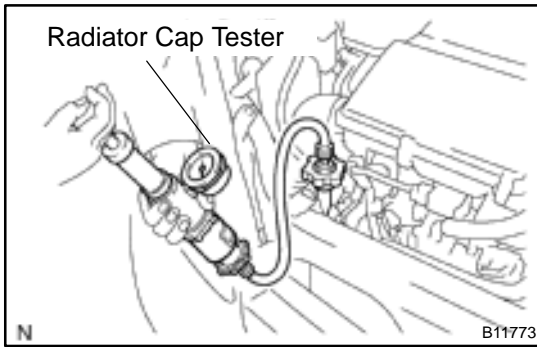**3. INSPECT COOLING SYSTEM FOR LEAKS**

- (a) Fill the radiator with coolant and attach a radiator cap tester.
- (b) Warm up the engine.
- (c) Pump it to 118 kPa (1.2 kgf·cm², 17.1 psi), and check that the pressure drops.

If the pressure drops, check the hoses, radiator or water pump for leaks. If no external leaks are found, check the heater core, cylinder block and head.

4. REINSTALL RADIATOR CAP

REMOVAL

1. DISCHARGE REFRIGERANT FROM REFRIGERATION SYSTEM

HINT:

At the time of installation, please refer to the following item.

Evacuate air from refrigeration system.

Charge system with refrigerant and inspect for leakage of refrigerant.

Specified amount: 500 ± 50 g (17.64 ± 1.76 oz.)

2. DRAIN ENGINE COOLANT FROM RADIATOR


HINT:

It is not necessary to drain out all the coolant.

3. REMOVE ELECTRIC COOLING FAN ASSEMBLY (See Page CO-22)

4. REMOVE FRONT BUMPER (See Page BO-4)

5. REMOVE RADIATOR RESERVOIR HOSE

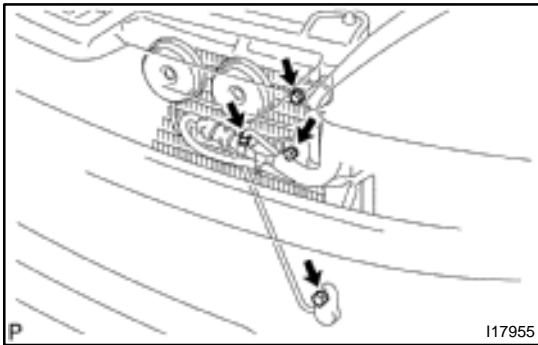

6. DISCONNECT DISCHARGE AND LIQUID TUBE

- (a) Remove the 2 bolts and disconnect discharge and liquid tube.

Torque: 5.4 N·m (55 kgf·cm, 48 in.-lbf)

NOTICE:

Cap open the fittings immediately to keep moisture or dirt out of the system.


HINT:

At the time of installation, please refer to the following item.

Lubricate 2 new O-rings with compressor oil and install them to the tubes.


- (b) Remove the bolt.

- (c) Disconnect the liquid tube and remove the bracket.

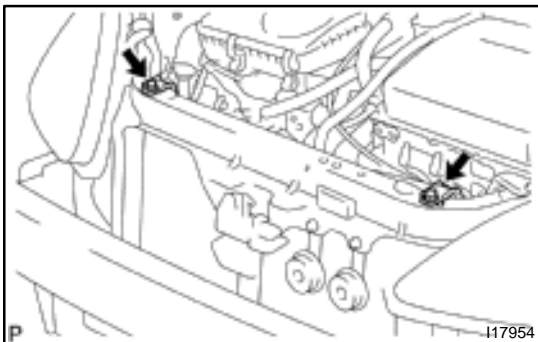

7. REMOVE RADIATOR UPPER SUPPORT

Remove the 2 bolts and 2 radiator upper supports.

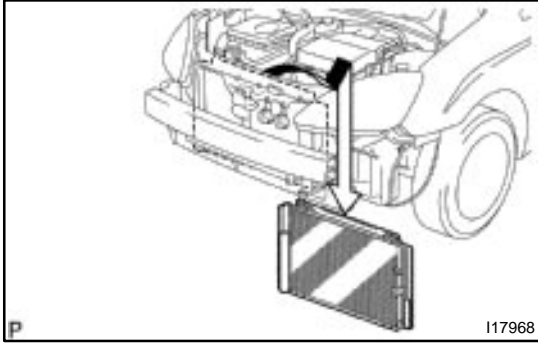**8. REMOVE RADIATOR & CONDENSER MODULE**

- (a) Push the radiator & condenser module toward engine.
- (b) Pull up the radiator until the lower radiator support is removed.
- (c) Pull it downward to remove it.

REMOVAL

1. DISCHARGE REFRIGERANT FROM REFRIGERATION SYSTEM

HINT:

At the time of installation, please refer to the following item.

Evacuate air from refrigeration system.


Charge system with refrigerant and inspect for leakage of refrigerant.

Specified amount: 500 ± 50 g (17.64 ± 1.76 oz.)

2. DRAIN ENGINE COOLANT FROM RADIATOR


HINT:

It is not necessary to drain out all coolant.

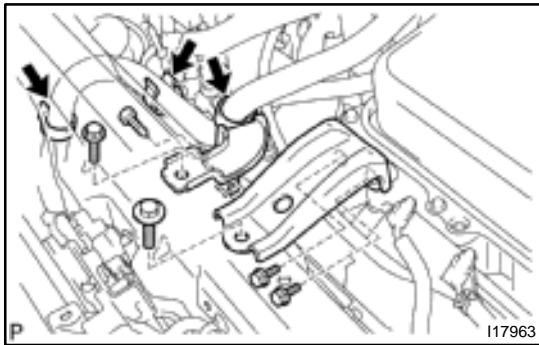

3. REMOVE BRACKETS

- Remove the water hose from fan shroud.
- Remove the 5 bolts and 2 brackets.

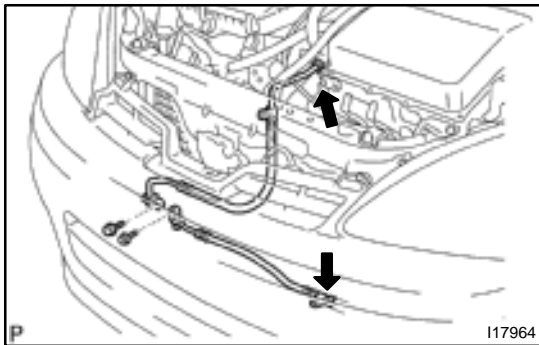

4. REMOVE SUCTION AND DISCHARGE HOSES

- Remove the 2 bolts and disconnect the both hoses.

Torque: 10 N·m (100 kgf-cm, 7 ft-lbf)

HINT:

At the time of installation, please refer to the following item.

Lubricate 2 new O-rings with compressor oil and install them to the tubes.

- Loosen the 2 nuts and remove the both hoses.

Torque:


Suction hose 32 N·m (330 kgf-cm, 24 ft-lbf)

Discharge hose 22 N·m (225 kgf-cm, 16 ft-lbf)


HINT:

At the time of installation, please refer to the following item.


Lubricate 2 new O-rings with compressor oil and install them to the tubes.

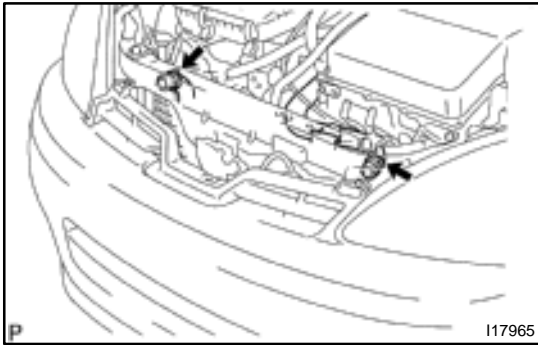**5. DISCONNECT RADIATOR HOSES FROM RADIATOR AND CONDENSER MODULE**


- (a) Using pliers, grip the claw of the hose clip and slide the clip along the hose.
- (b) Disconnect the radiator hoses.

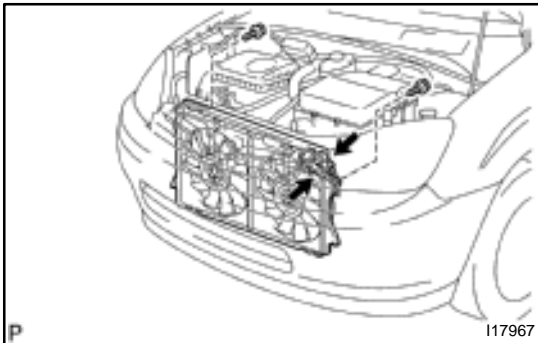**6. REMOVE ELECTRIC COOLING FAN ASSEMBLY**

- (a) Disconnect the 2 connectors.
- (b) Remove the 2 bolts.

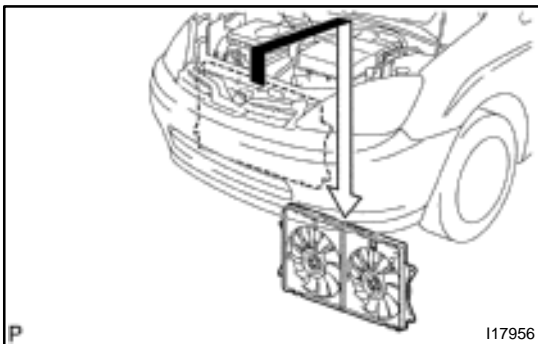

- (c) Pull up the electric cooling fan assembly until it is removed from the radiator and condenser module.
- (d) Pull it downward to remove it.

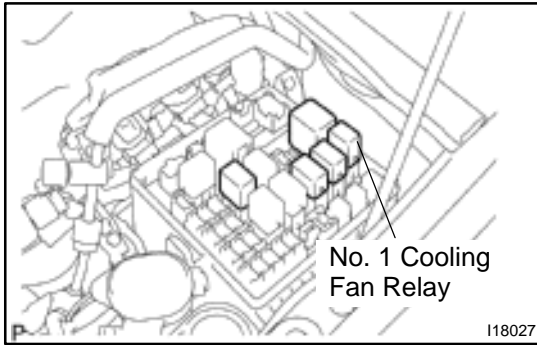


COOLING FAN RELAY INSPECTION

CO14D-01


1. INSPECT NO. 1 COOLING FAN RELAY

- Remove the relay box cover.
- Remove the No. 1 cooling fan relay. (Marking: FAN NO. 1)

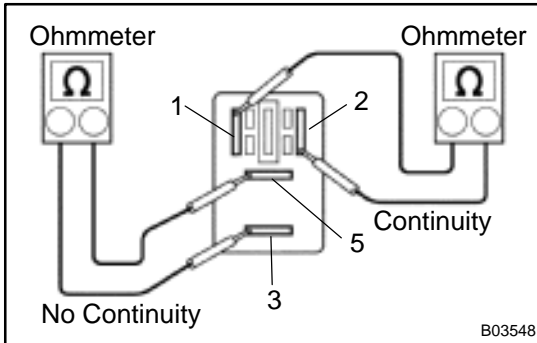


- Inspect the No. 1 cooling fan relay continuity.
 - Using an ohmmeter, check that continuity exists between terminals 1 and 2.
 If no continuity exists, replace the relay.
 - Check that no continuity exists between terminals 3 and 5.

If continuity exists, replace the relay.

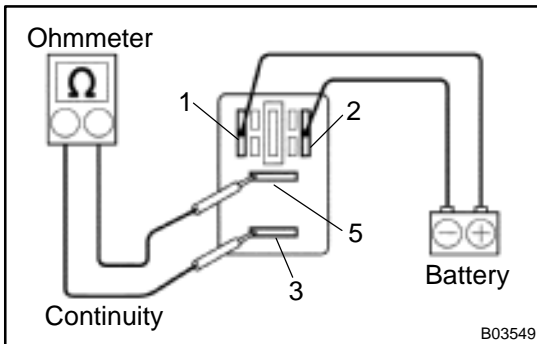


- Inspect the No. 1 cooling fan relay operation.
 - Apply battery voltage across terminals 1 and 2.
 - Using an ohmmeter, check that continuity exists between terminals 3 and 5.
 If no continuity exists, replace the relay.
- Reinstall the No. 1 cooling fan relay.
- Reinstall the relay box cover.

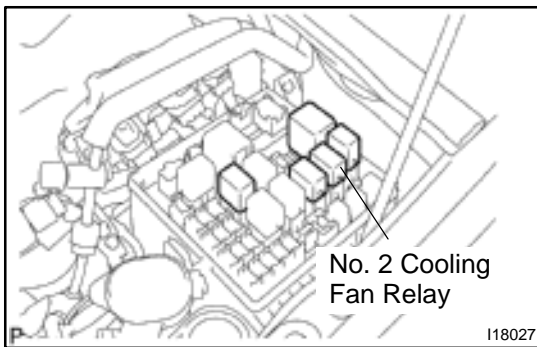


2. INSPECT NO. 2 COOLING FAN RELAY

- Remove the relay box cover.
- Remove the No. 2 cooling fan relay. (Marking: FAN NO. 2)

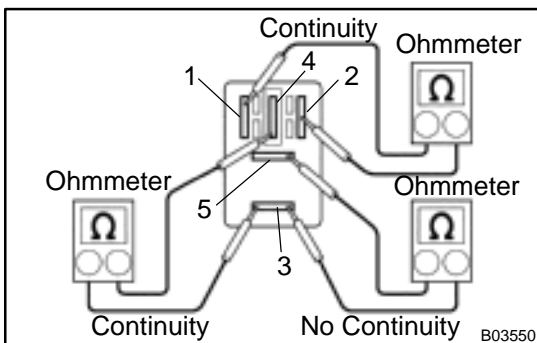

- Inspect the No. 2 cooling fan relay continuity.
 - Using an ohmmeter, check that continuity exists between terminals 1 and 2.
 If no continuity exists, replace the relay.
 - Check that continuity exists between terminals 3 and 4.
 If no continuity exists, replace the relay.
 - Check that no continuity exists between terminals 3 and 5.

If continuity exists, replace the relay.

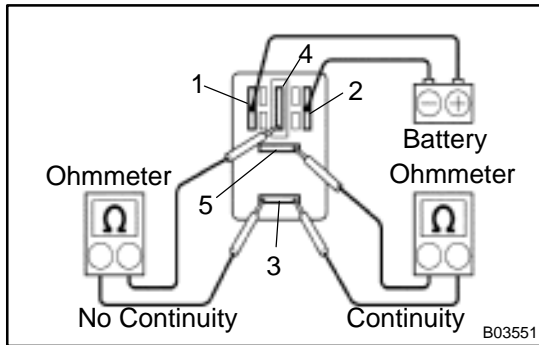

- (d) Inspect the No. 2 cooling fan relay operation.
- (1) Apply battery voltage across terminals 1 and 2.
 - (2) Using an ohmmeter, check that no continuity exists between terminals 3 and 4.

If continuity exists, replace the relay.

- (3) Using an ohmmeter, check that continuity exists between terminals 3 and 5.



If no continuity exists, replace the relay.

- (e) Reinstall the No. 2 cooling fan relay.

- (f) Reinstall the relay box cover.

3. INSPECT NO. 3 COOLING FAN RELAY

- (a) Remove the relay box cover.
- (b) Remove the No. 3 cooling fan relay. (Marking: Fan NO. 3)

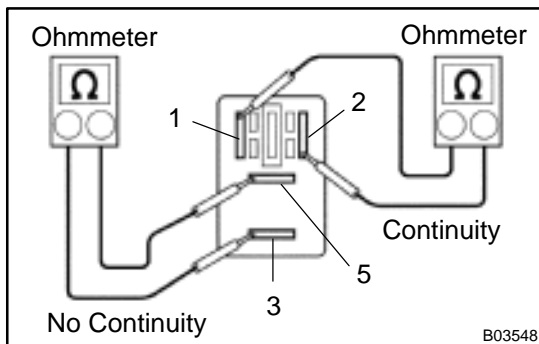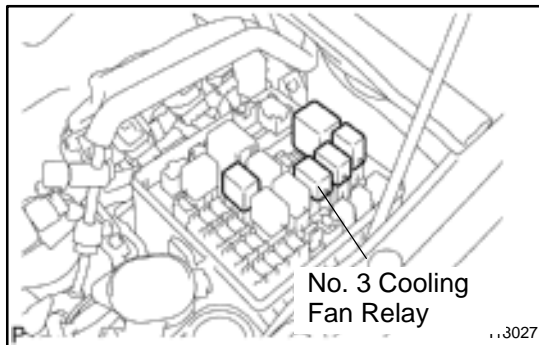


- (c) Inspect the No. 3 cooling fan relay continuity.

- (1) Using an ohmmeter, check that continuity exists between terminals 1 and 2.

If no continuity exists, replace the relay.

- (2) Check that no continuity exists between terminals 3 and 5.

If continuity exists, replace the relay.

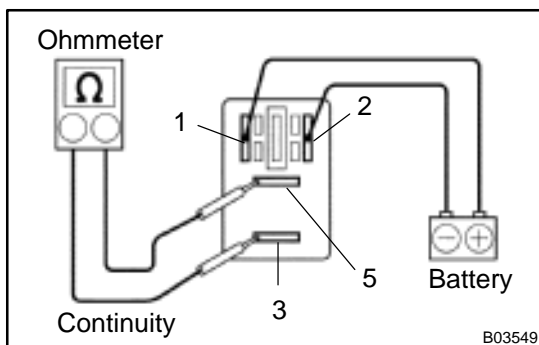

- (d) Inspect the No. 3 cooling fan relay operation.


- (1) Apply battery voltage across terminals 1 and 2.

- (2) Using an ohmmeter, check that continuity exists between terminals 3 and 5.

If no continuity exists, replace the relay.

- (e) Reinstall the No. 3 cooling fan relay.

- (f) Reinstall the relay box cover.

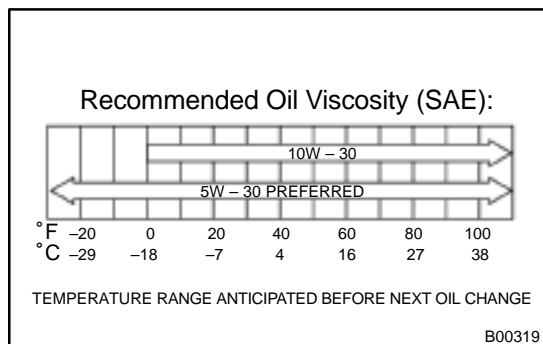

OIL AND FILTER INSPECTION

LU02K-08

1. CHECK ENGINE OIL QUALITY

Check the oil for deterioration, entry of water, discoloring or thinning.

If the quality is visibly poor, replace the oil.

Oil grade:

API grade or SJ, Energy-Conserving or ILSAC multi-grade engine oil is recommended. SAE 5W-30 is the best choice for your vehicle, for good fuel economy, and good starting in cold weather.


2. CHECK ENGINE OIL LEVEL

After warming up the engine and then 5 minutes after the engine stop, oil level should be between the "L" and "F" marks on the dipstick.

If low, check for leakage and add oil up to the "F" mark.


NOTICE:

Do not fill with engine oil above the "F" mark.

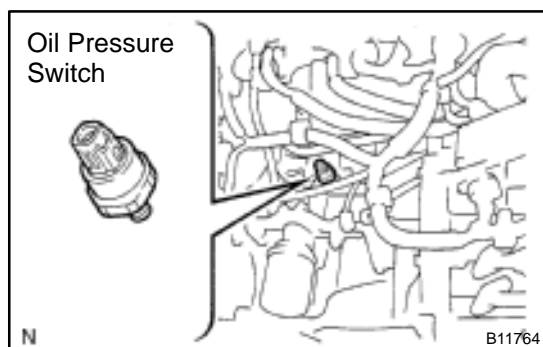

3. REMOVE OIL PRESSURE SWITCH, AND INSTALL OIL PRESSURE GAUGE

- (a) Remove the oil pressure switch.

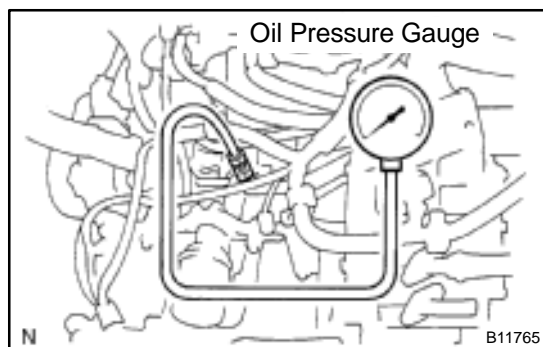

- (b) Install the oil pressure gauge.

4. ACTIVATE INSPECTION MODE AND WARM UP ENGINE (See page IN-10)

Allow the engine to warm up to normal operating temperature.

5. CHECK OIL PRESSURE

Oil pressure:

At idle speed


29 kPa (0.3 kgf/cm², 4.3 psi) or more

At 2,250 rpm

150 – 550 kPa (1.5 – 5.6 kgf/cm², 22 – 80 psi)

6. REMOVE OIL PRESSURE GAUGE AND REINSTALL OIL PRESSURE SWITCH

- (a) Remove the oil pressure gauge.

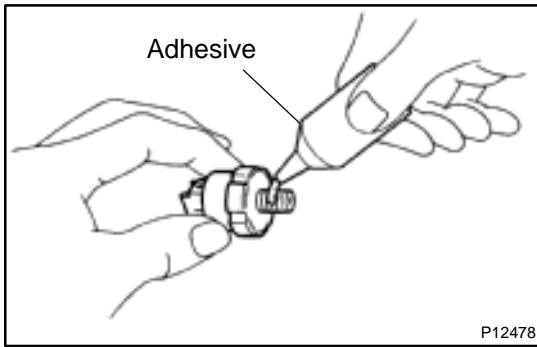

- (b) Apply adhesive to 2 or 3 threads of the oil pressure switch.

Adhesive:

**Part No. 08833-00080, THREE BOND 1344,
LOCTITE 242 or equivalent**


- (c) Install the oil pressure switch.

Torque: 13 N·m (130 kgf·cm, 9 ft·lbf)

- 7. START ENGINE AND CHECK FOR LEAKS**

OIL PUMP COMPONENTS

LU02M-08

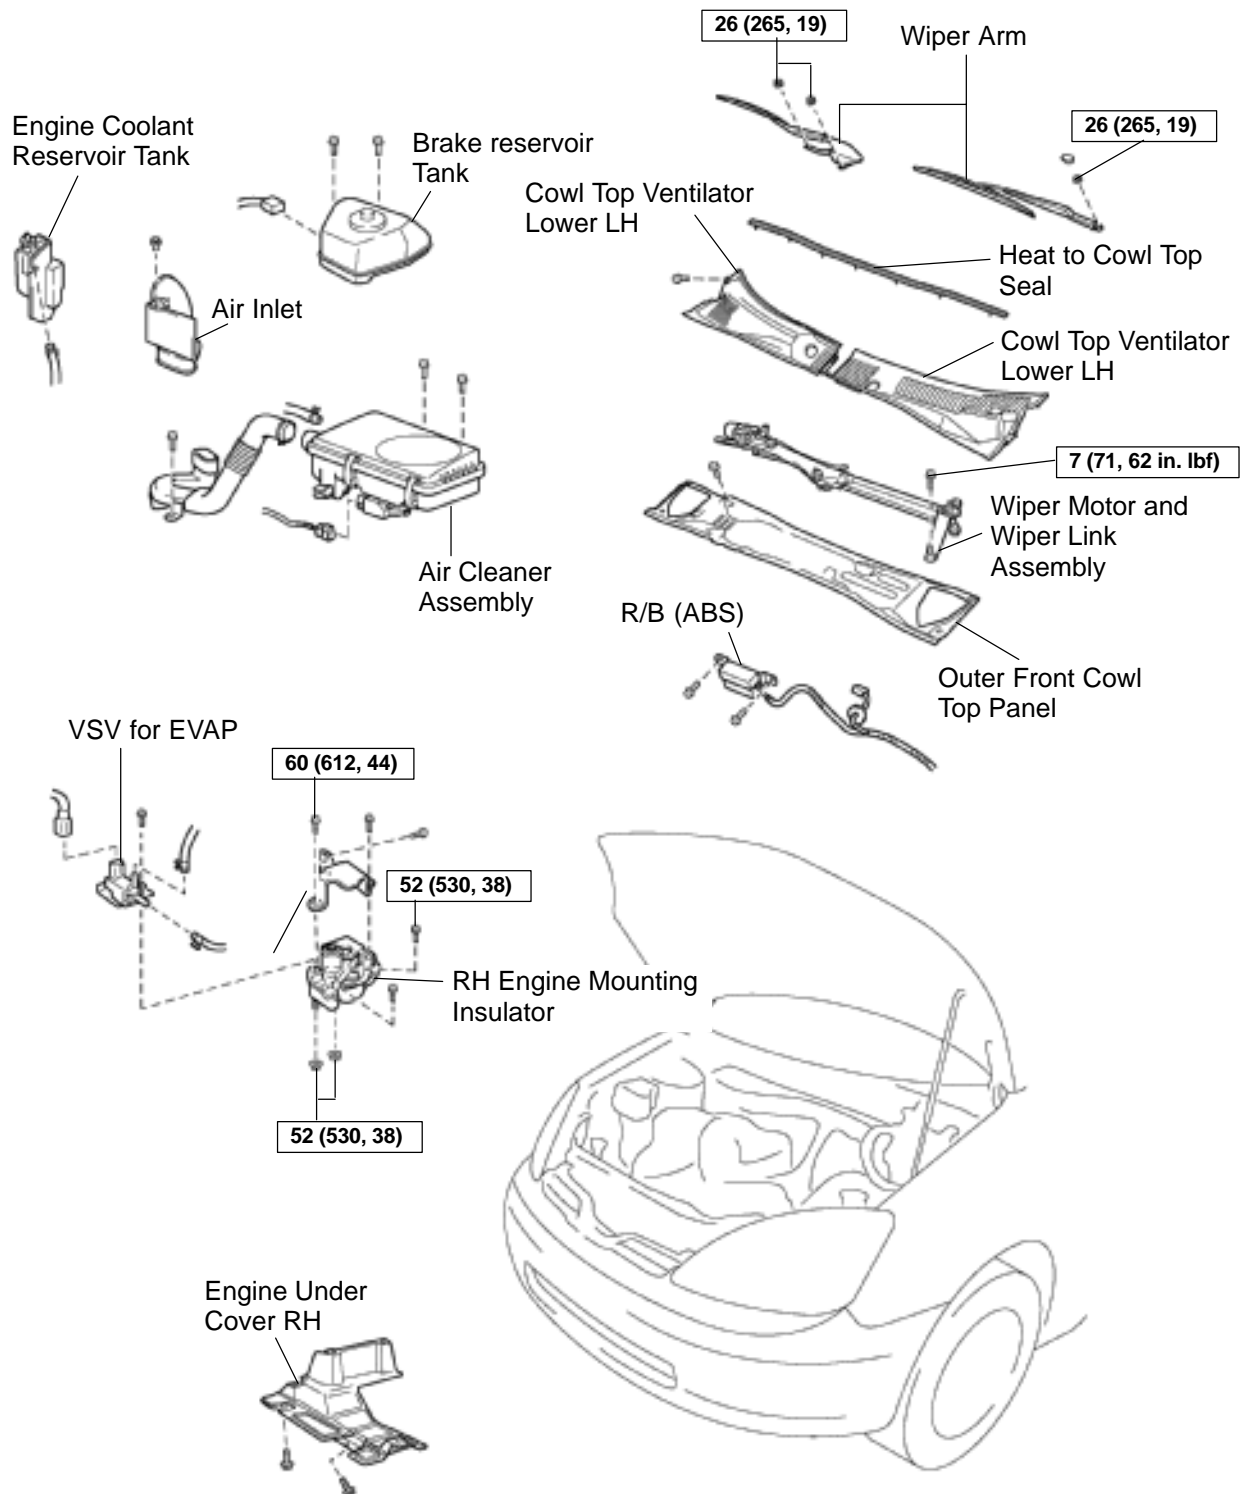



N·m (kgf·cm, ft·lbf) : Specified torque

N

A13942

cardiagn.com

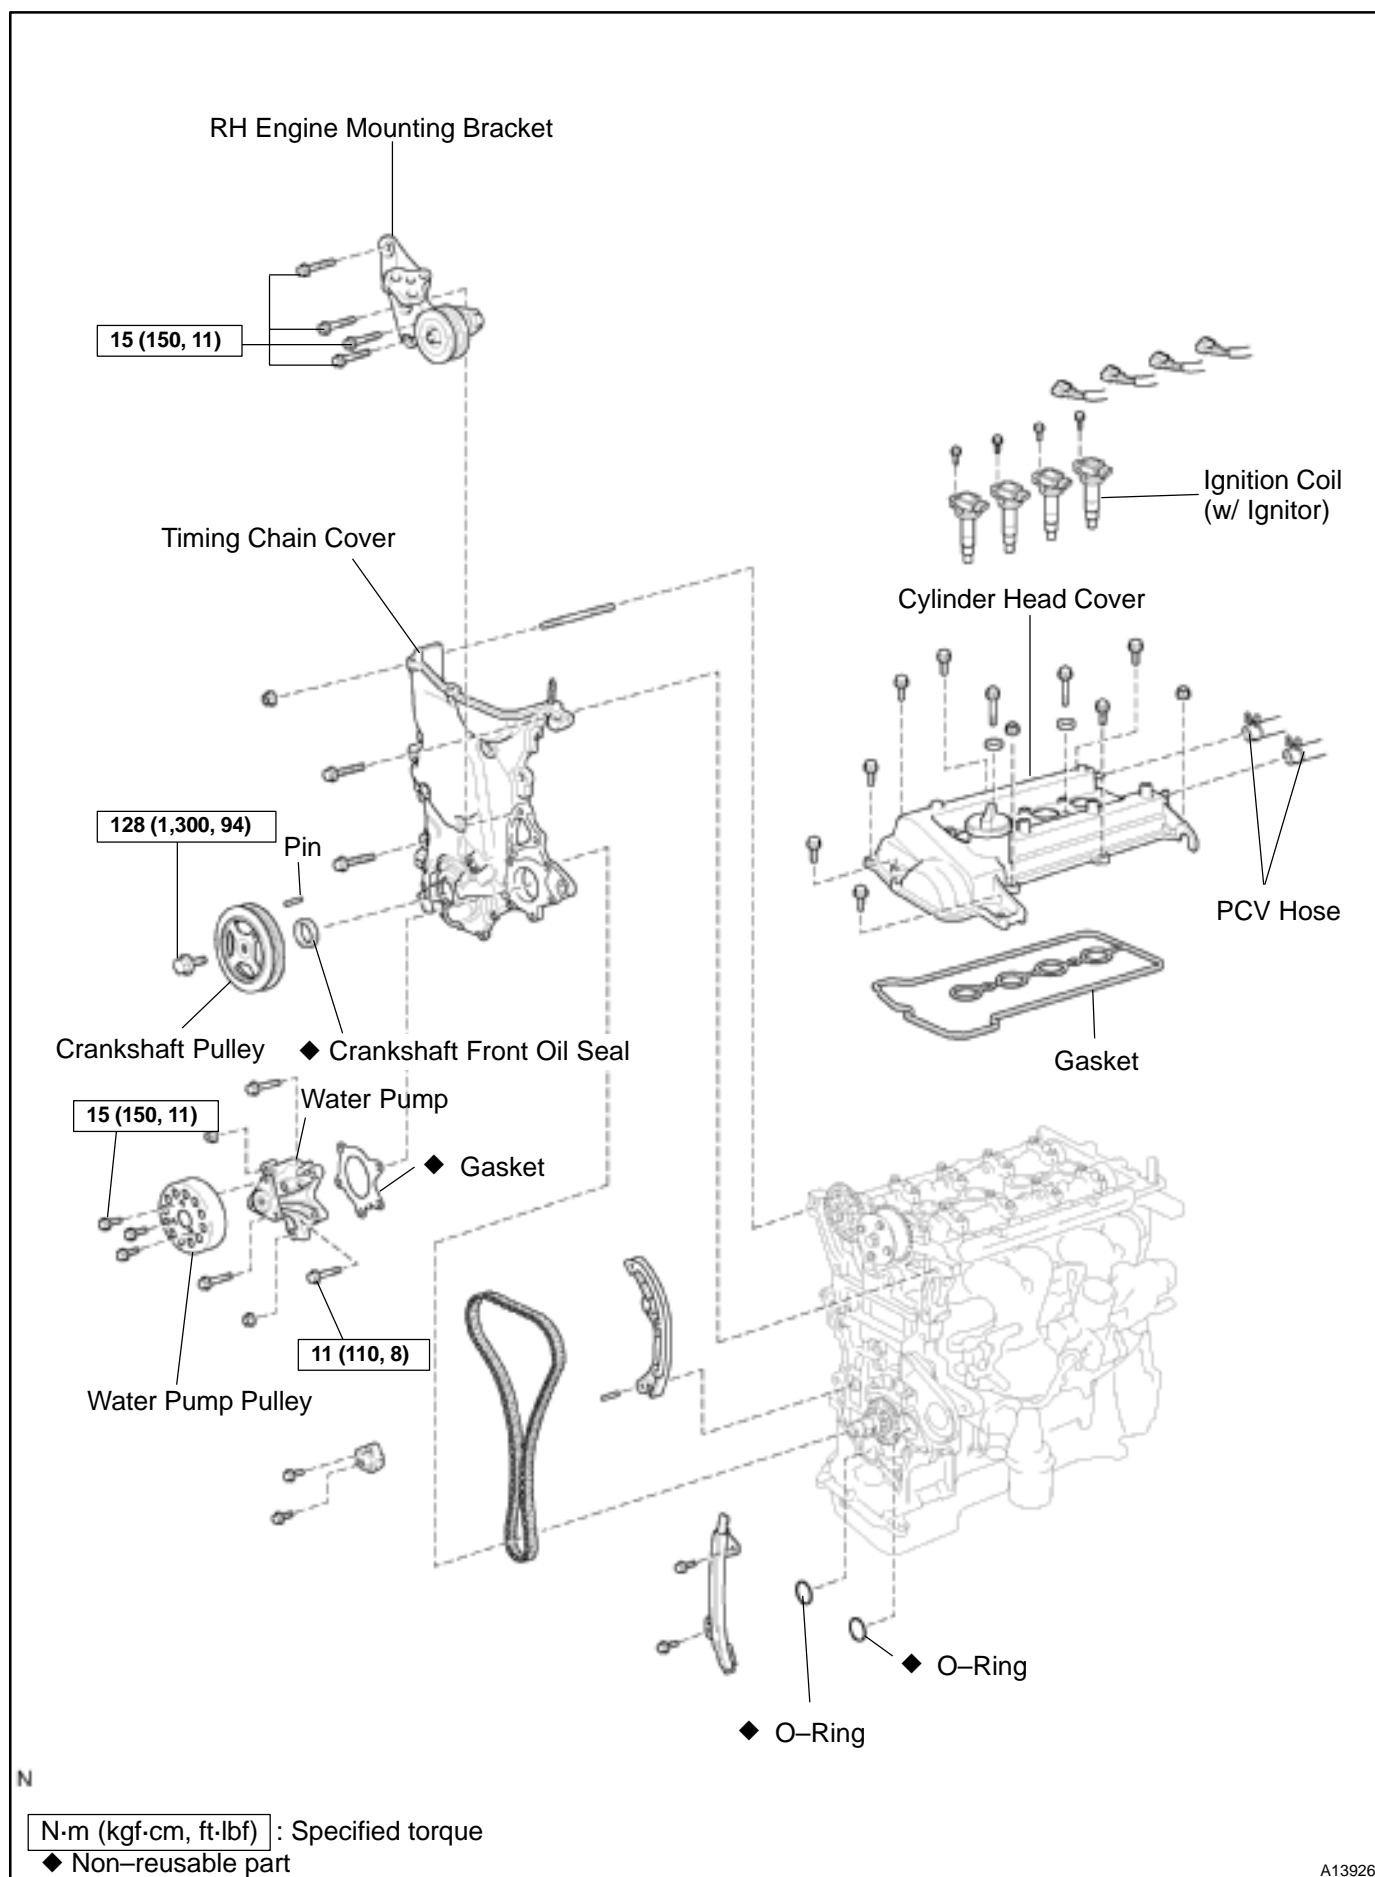

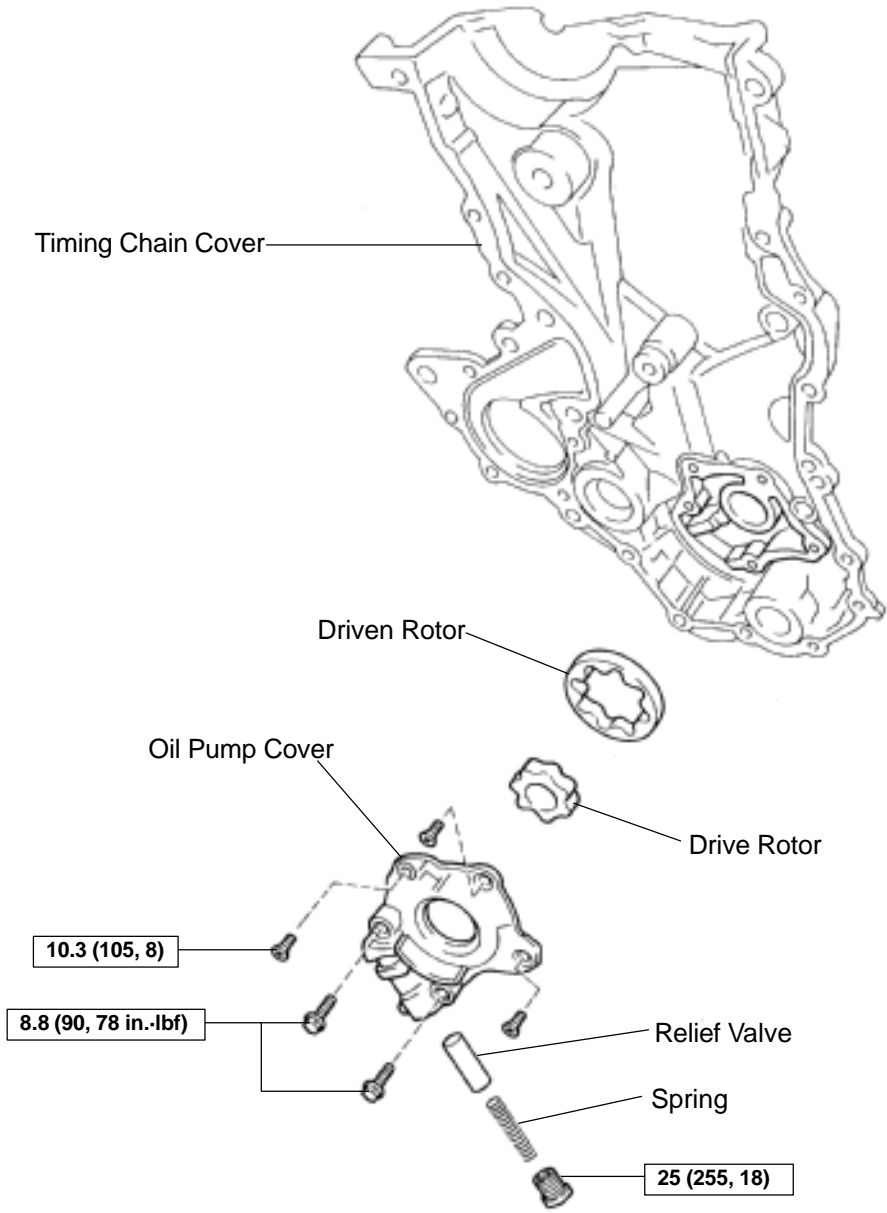

N N·m (kgf·cm, ft·lbf) : Specified torque

B09334

cardiagn.com

IGNITION SYSTEM ON-VEHICLE INSPECTION

IG0EP-07

NOTICE:

"Cold" and "Hot" in these sentences express the temperature of the coils themselves. "Cold" is from -10°C (14°F) to 50°C (122°F) and "Hot" is from 50°C (122°F) to 100°C (212°F).

1. INSPECT IGNITION COIL (WITH IGNITER) AND SPARK TEST


Check that the spark occurs.

- (1) Remove the ignition coils (with igniter) (See page [IG-6](#)).
- (2) Using a 16 mm (0.63 in.) plug wrench, remove the spark plugs.
- (3) Install the spark plugs to each ignition coils (with igniter), and connect the ignition coil connectors.
- (4) Disconnect the 4 injector connectors.
- (5) Ground the spark plugs.
- (6) Check if spark occurs while engine is being cranked.

NOTICE:

To prevent gasoline from being injected from injectors during this test, crank the engine for no more than 5 – 10 seconds at time.

If the spark does not occur, do the test as follows:

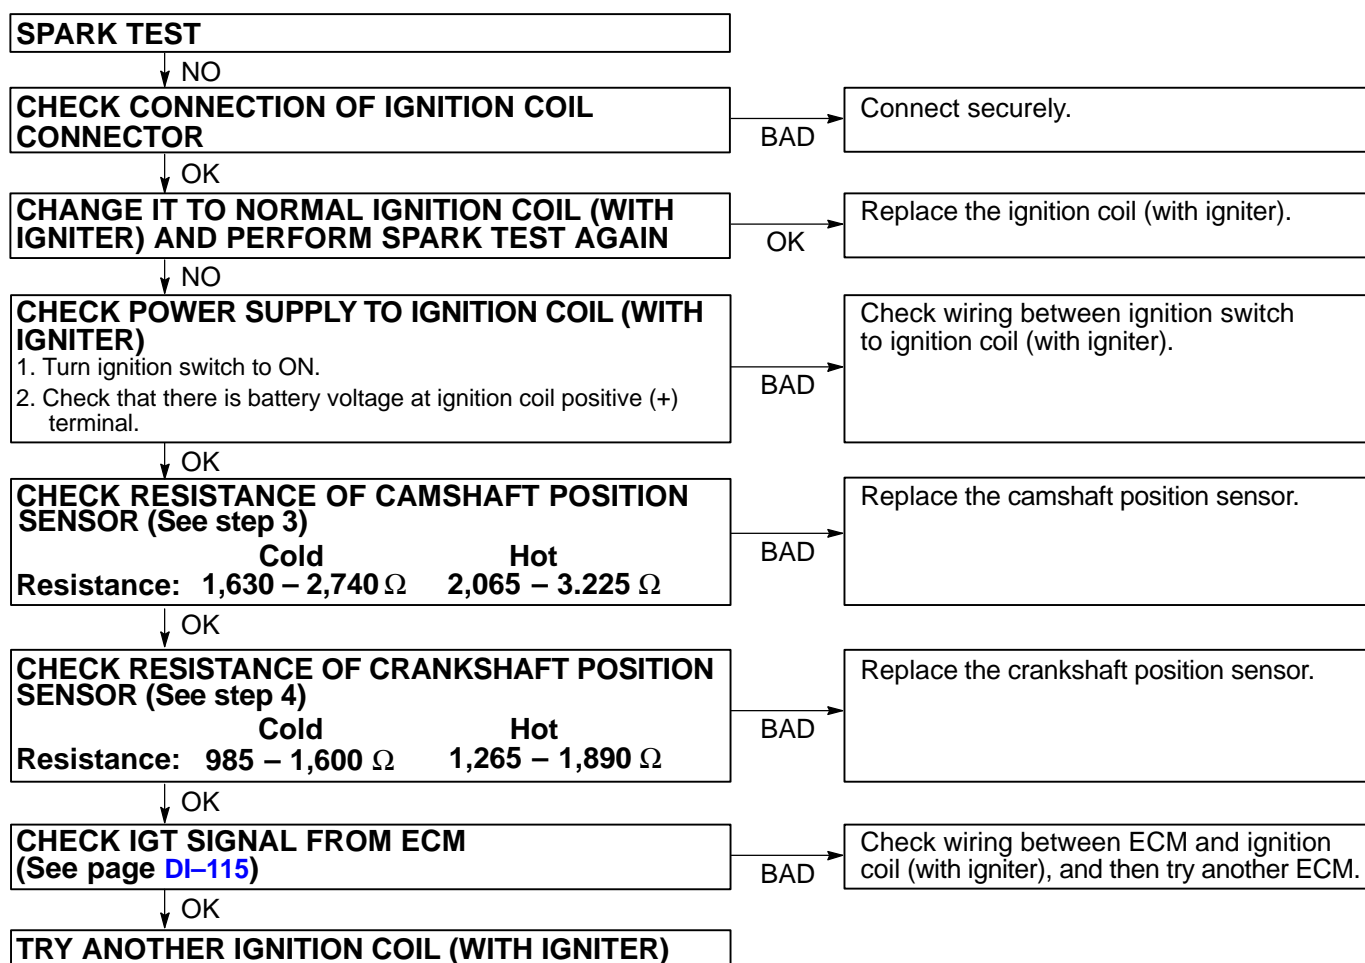


- (7) Using a 16 mm (0.63 in.) plug wrench, install the spark plugs.

Torque: 18 N·m (184 kgf·cm, 13 ft·lbf)


- (8) Install the ignition coils (with igniter) (See page [IG-7](#)).

2. INSPECT SPARK PLUGS

- (a) Remove the ignition coils (with igniter) (See page [IG-6](#)).

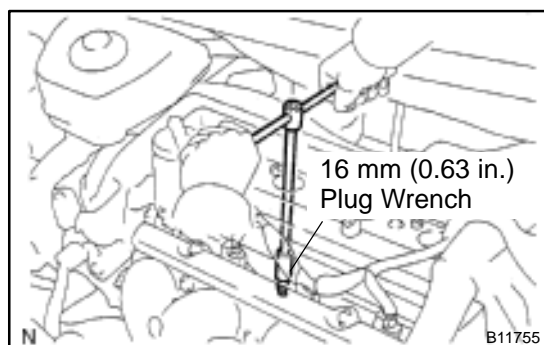

- (b) Using a 16 mm (0.63 in.) plug wrench, remove the spark plugs.

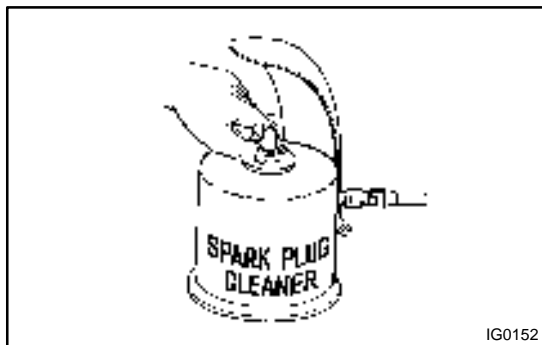

IG0152

- (c) Clean the spark plugs.


If the electrode has traces of wet carbon, allow it to dry and then clean with a spark plug cleaner.

Air pressure: Below 588 kPa (6 kgf/cm², 85 psi)

Duration: 20 seconds or less

HINT:

If there are traces of oil, remove it with gasoline before using the spark plug cleaner.

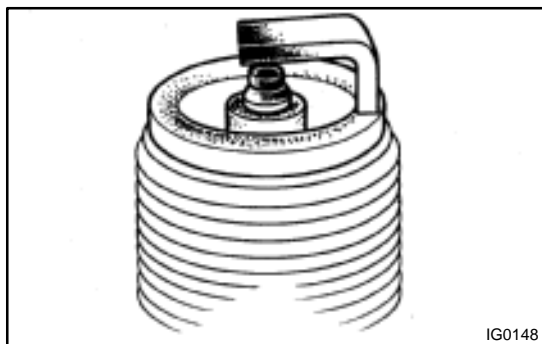


IG0148

- (d) Check the spark plug for thread damage and insulator damage.

If abnormal, replace the spark plug.

Recommended spark plug:

DENSO made	SK16R11
NGK made	IFR5A11

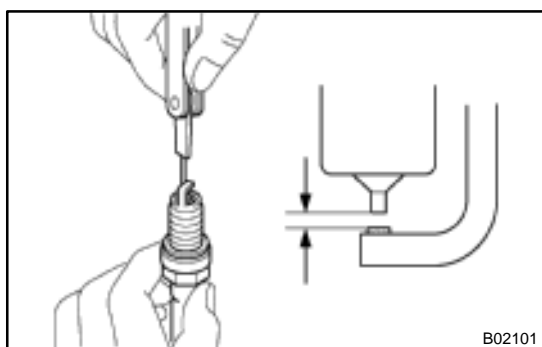

B02101

- (e) Check the electrode gap.

Electrode gap: 1.0 – 1.1 mm (0.039 – 0.043 in.)


Maximum electrode gap: 1.2 mm (0.047 in.)

If the electrode gap is greater than maximum, replace the spark plug.

- (f) Using a 16 mm (0.63 in.) plug wrench, install the spark plugs.

Torque: 18 N·m (184 kgf-cm, 13 ft-lbf)


- (g) Install the ignition coils (with igniter) (See page IG-7).

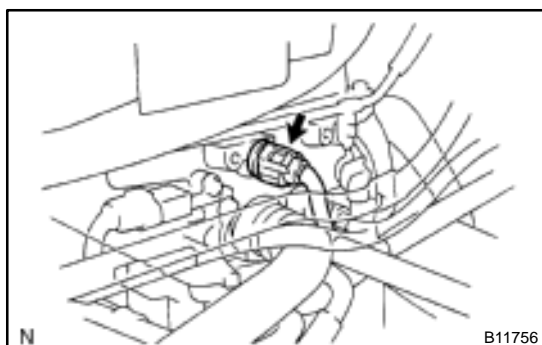

B11756

3. INSPECT CAMSHAFT POSITION SENSOR

- (a) Disconnect the camshaft position sensor connector.

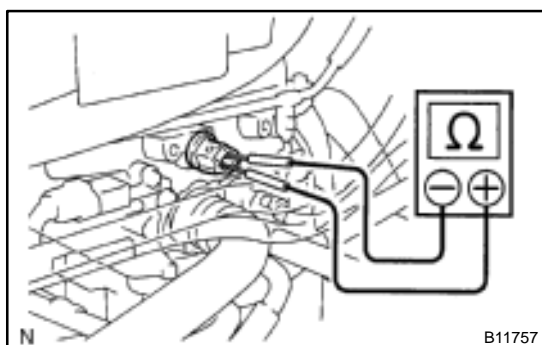

B11757


- (b) Using an ohmmeter, measure the resistance between terminals.

Resistance:


Cold	1,630 – 2,740 Ω
Hot	2,065 – 3,225 Ω

If the resistance is not as specified, replace the camshaft position sensor.

- (c) Connect the camshaft position sensor connector.

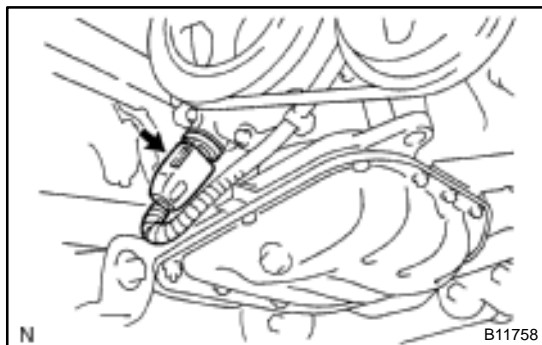**4. INSPECT CRANKSHAFT POSITION SENSOR**

- (a) Remove the engine under cover RH.
- (b) While sliding the connector lock, remove the connector.

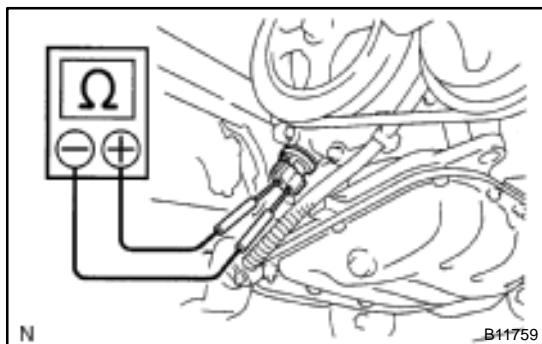

- (c) Using an ohmmeter, measure the resistance between the terminals.

Resistance:


Cold	985 – 1,600 Ω
Hot	1,265 – 1,890 Ω

If the resistance is not as specified, replace the crankshaft position sensor.


- (d) Install the connector.
- (e) Install the engine under cover RH.

HV BATTERY COMPONENTS

HV002-01

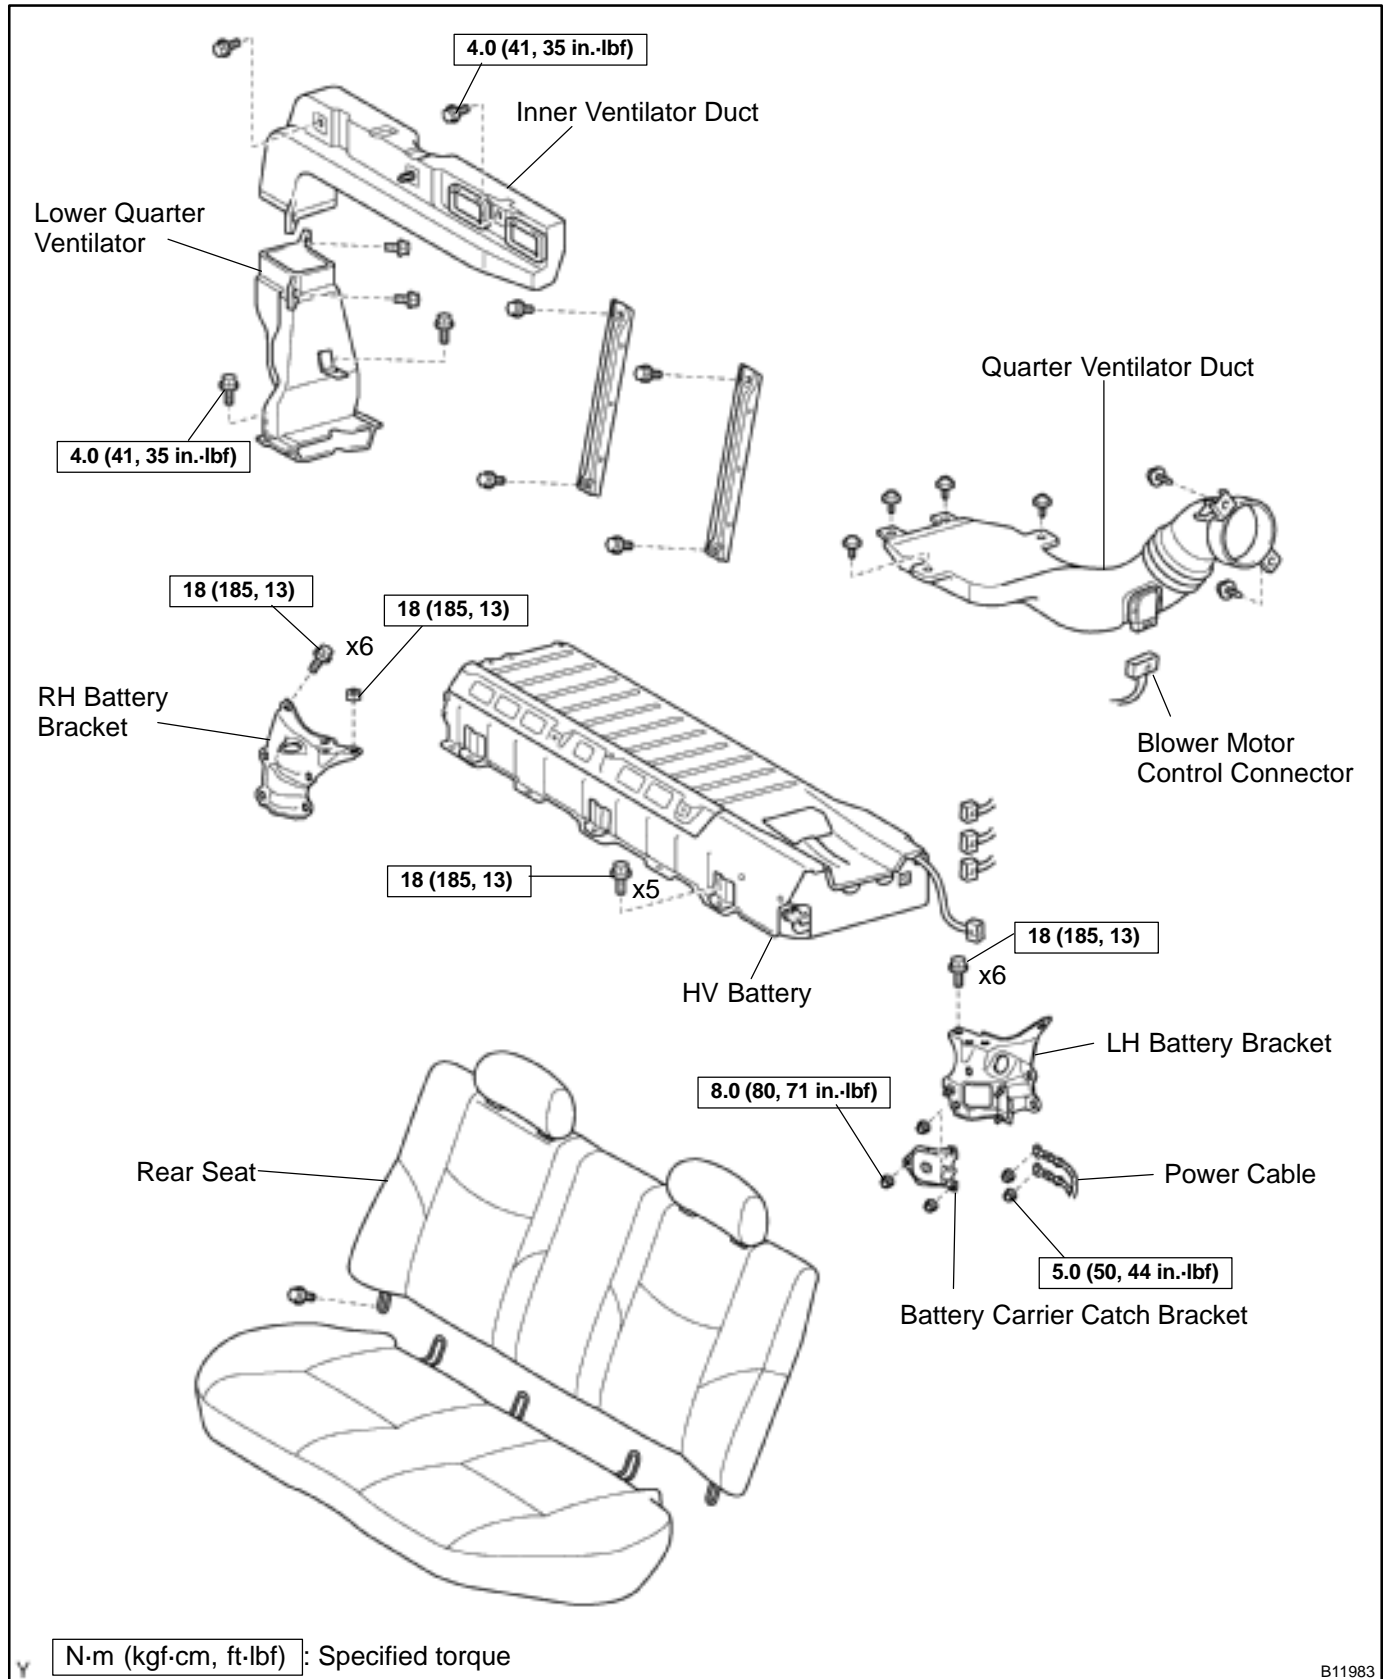

cardiagn.com

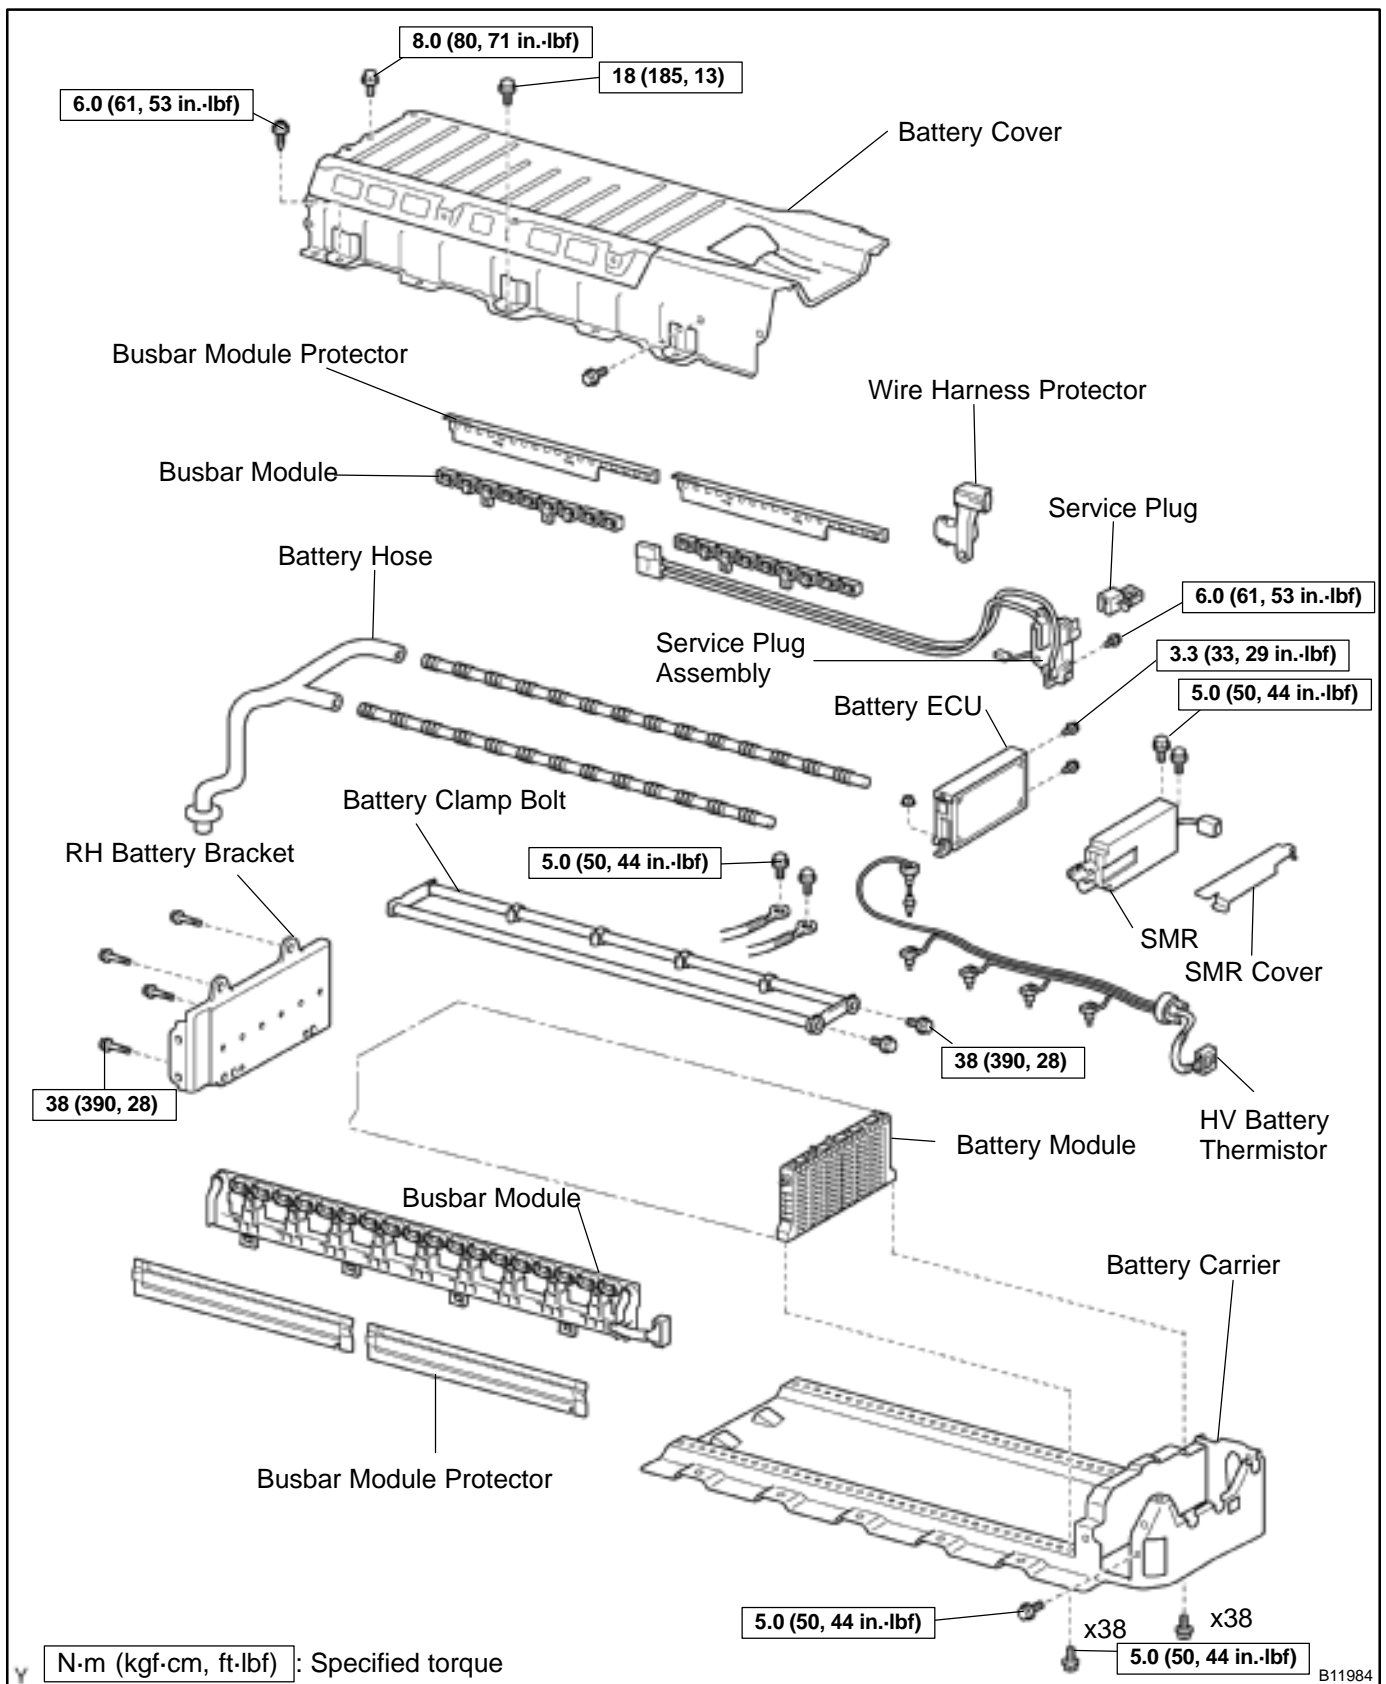

DISASSEMBLY

1. REMOVE BATTERY MODULE SET BOLT


Turn the battery assembly upside down, remove the 76 battery module bolts.

NOTICE:

When turning it over, prevent the flange from being deformed.


HINT:

When not removing a battery module, skip the operation of step 1.

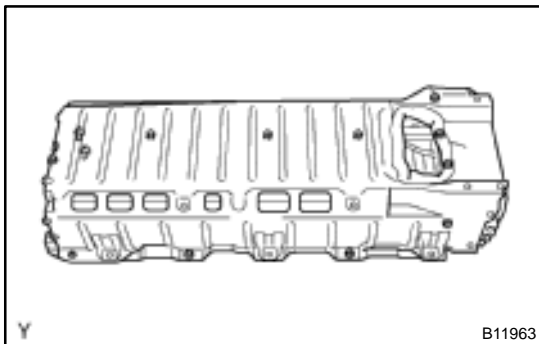


2. REMOVE BATTERY COVER

Remove the 12 bolts, screw and battery cover.

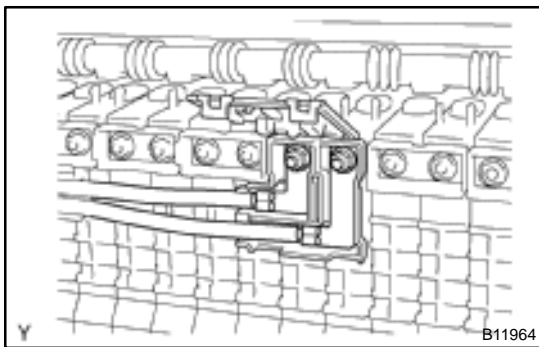


3. REMOVE SERVICE PLUG

- (a) Remove the rear RH and LH busbar module protectors.
- (b) Remove the 2 nuts for busbar module.

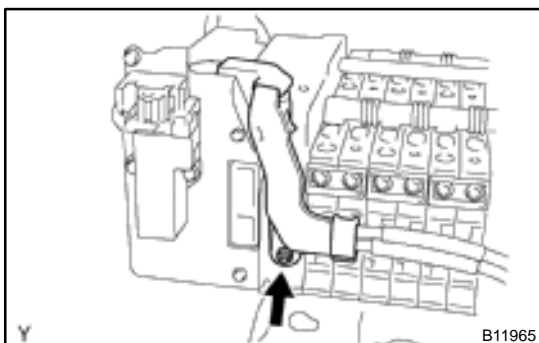


- (c) Remove the nut and wire harness protector.

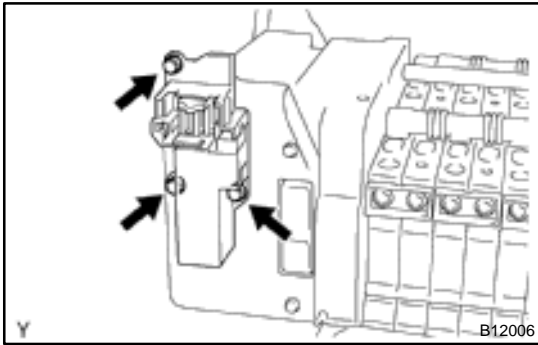

- (d) Remove the 3 bolts and service plug assembly.

4. REMOVE POWER CABLE FOR SMR


- (a) Remove the front RH and LH busbar module protectors.

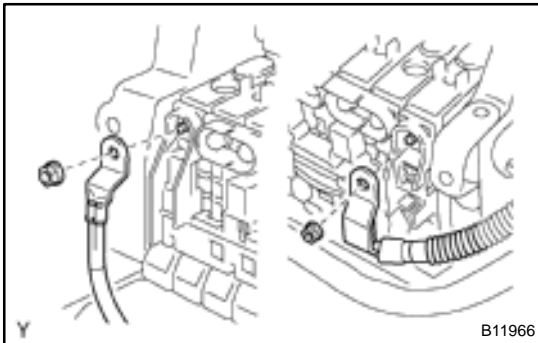

- (b) Remove the 2 nuts, and disconnect the power cable from the front busbar module.

- (c) Remove the SMR cover from the SMR.

- (d) Remove 2 bolts, and disconnect the power cable for SMR.

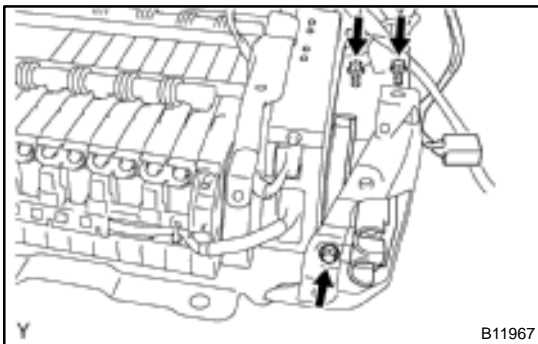


5. REMOVE SMR

- (a) Using the service plug, turn the interlock counterclockwise to unlock.

NOTICE:

When the interlock is damaged, be sure to replace it with new one.


- (b) Remove the 3 bolts and SMR.

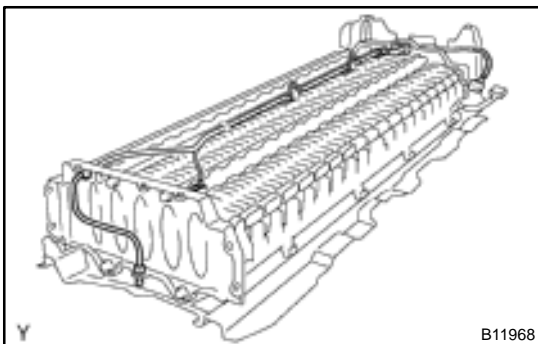


6. REMOVE HV BATTERY THERMISTOR

7. REMOVE BATTERY ECU


- (a) Disconnect the connector.

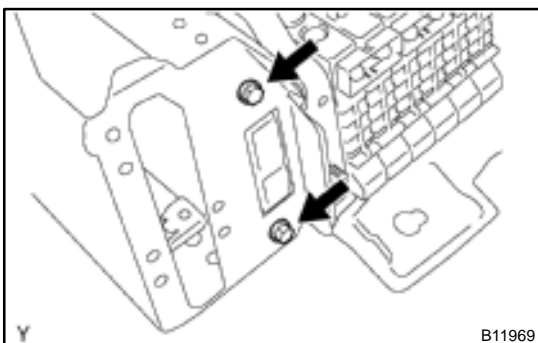

- (b) Remove the 2 bolts and battery ECU.

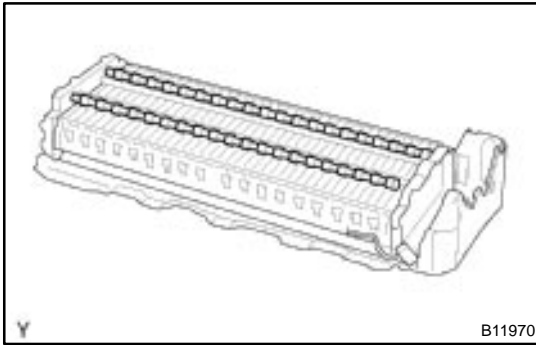**8. REMOVE BATTERY HOSE****9. REMOVE BUSBAR MODULE**


- (a) Remove the 36 nuts, RH and LH rear busbar modules.
- (b) Remove the 36 nuts, RH and LH front busbar modules.

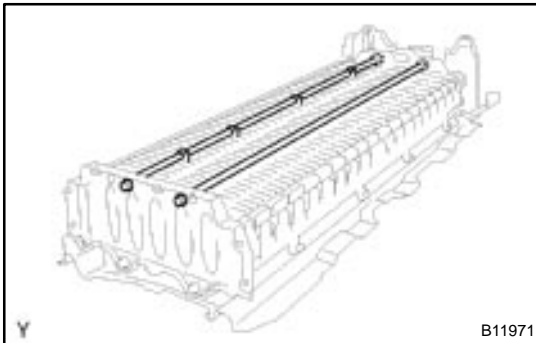**10. REMOVE BATTERY CLAMP BOLT**

Remove the 4 bolts and battery clamp bolt.

CAUTION:

Never remove the battery clamp bolt until 4 hours has passed after the ignition switch is turned OFF. An explosion due to expansion could occur.

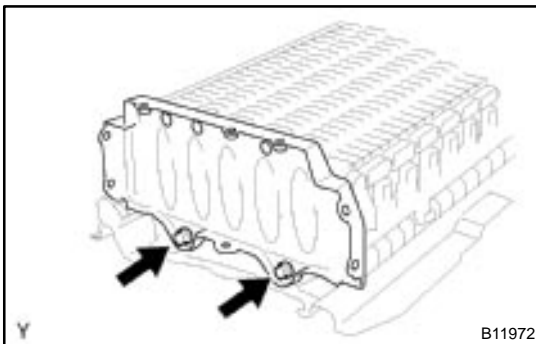**11. REMOVE RH BATTERY BRACKET**

Remove the 2 bolts and RH battery bracket.

CAUTION:

Never remove the RH battery bracket until 4 hours has passed after the ignition switch is turned OFF. An explosion due to expansion could occur.

12. REMOVE 38 HV BATTERY MODULES


REASSEMBLY

1. INSTALL BATTERY MODULE

Install the 38 battery modules to the battery carrier.

HINT:


- Packs containing 2 battery module each are arranged in the order of 1 to 19 from the ECU side.
- Starting from the positive terminal of the battery module on the battery ECU side, install 38 battery modules by alternately connecting the positive and negative terminals to the vehicle front side.

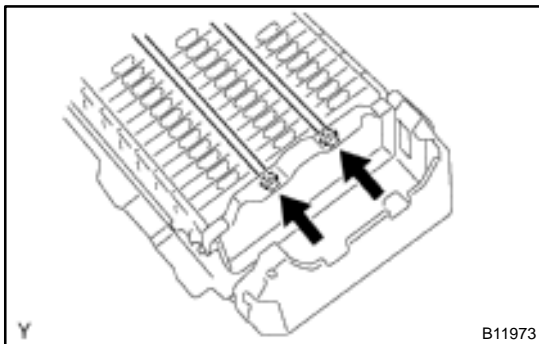

2. INSTALL BATTERY CLAMP BOLT

Install the battery clamp bolt with the 2 bolts.


Torque: 23 N·m (230 kgf-cm, 16 ft-lbf)

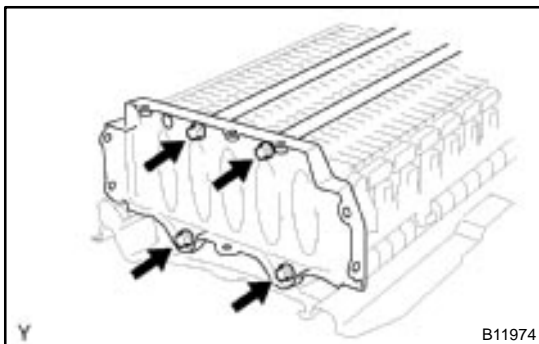


3. INSTALL RH BATTERY BRACKET

Install the RH battery bracket with the 4 bolts.


Torque: 23 N·m (230 kgf-cm, 16 ft-lbf)

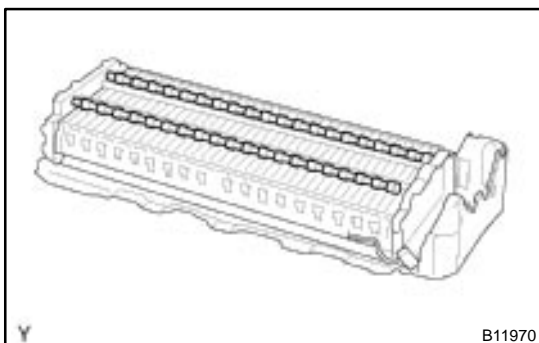

4. INSTALL BATTERY HOSE

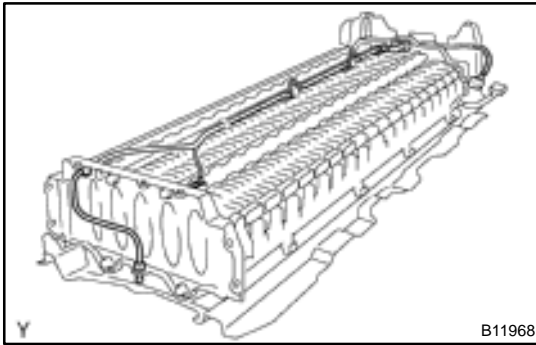

5. INSTALL HV BATTERY THERMISTOR

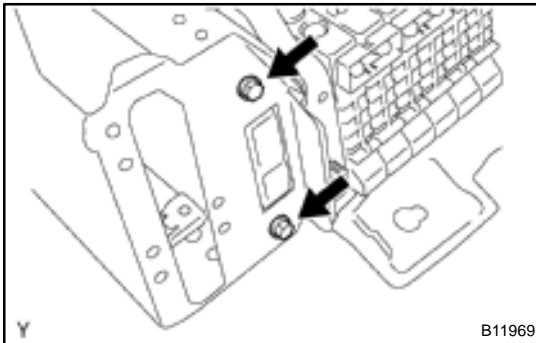


6. INSTALL BATTERY ECU

- (a) Install the battery ECU with the 2 bolts.
Torque: 3.3 N·m (33 kgf·cm, 29 in.-lbf)
- (b) Connect the connector for HV battery thermistor.

7. INSTALL BUSBAR MODULE


- (a) Install the front busbar module with the 74 nuts.
Torque: 6.0 N·m (61 kgf·cm, 53 in.-lbf)
- (b) Install the rear RH and LH busbar modules with the 74 nuts.

Torque: 6.0 N·m (61 kgf·cm, 53 in.-lbf)

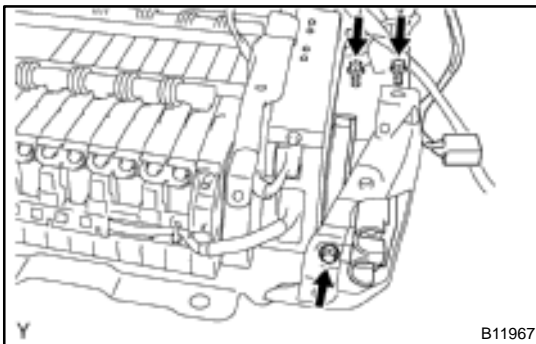


8. INSTALL SMR

- (a) Install the SMR with the 3 bolts.
Torque: 5.0 N·m (50 kgf·cm, 44 in.-lbf)
- (b) Connect the power cable for SMR with the 2 bolts.
Torque: 5.0 N·m (50 kgf·cm, 44 in.-lbf)
- (c) Install the SMR cover to the SMR.
- (d) Connect the connector to the cover for external uniform charger and lock the cover.

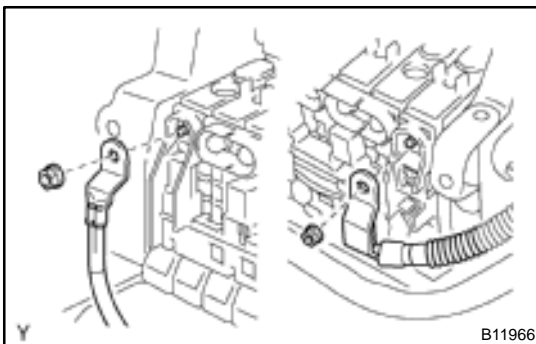


- (e) Connect the power cable for SMR with the 2 nuts.
Torque: 6.0 N·m (61 kgf·cm, 53 in.-lbf)
- (f) Install the front RH and LH busbar module protectors.

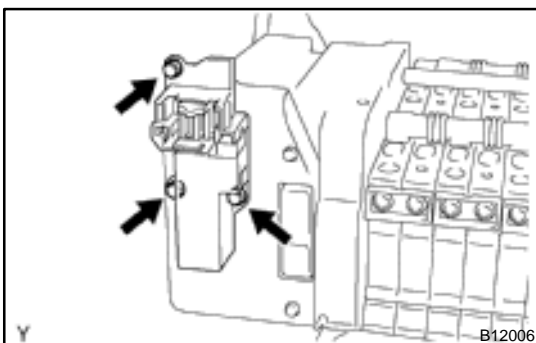


9. INSTALL SERVICE PLUG

- (a) Install the service plug with the 3 bolts.
Torque: 6.0 N·m (61 kgf·cm, 53 in.-lbf)

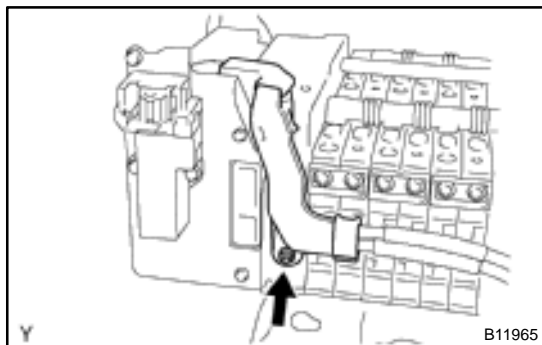


- (b) Install the wire harness protector with the nut.

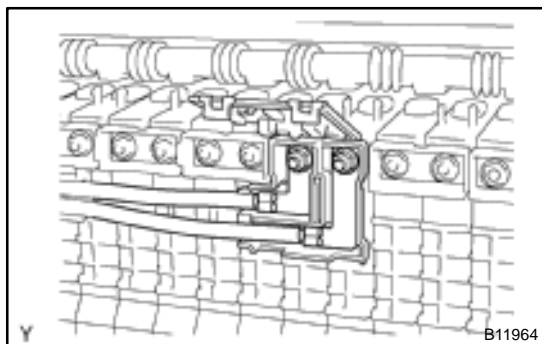

- (c) Install the busbar module with 2 new nuts.
Torque: 5.4 N·m (55 kgf·cm, 48 in.-lbf)

10. INSTALL REAR RH AND LH BUSBAR MODULE PROTECTOR

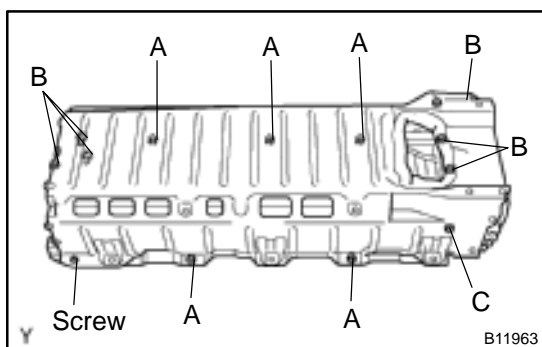

11. INSTALL BATTERY COVER

Install the battery cover with the 12 bolts and screw.

Torque:

Bolt A: 18 N·m (185 kgf·cm, 13 ft.-lbf)

Bolt B: 8.0 N·m (80 kgf·cm, 71 in.-lbf)

Bolt C: 7.0 N·m (70 kgf·cm, 62 in.-lbf)

Screw: 6.0 N·m (61 kgf·cm, 53 in.-lbf)

12. INSTALL BATTERY MODULE SET BOLT

Turn the battery assembly upside down, install the 76 battery module set bolts.

Torque: 4.0 N·m (40 kgf·cm, 35 in.-lbf)


INSTALLATION

1. INSTALL HV BATTERY

- Set the HV battery to the body.
- Connect the battery hose to the body.

CAUTION:


Since alkaline electrolyte may be got on the hose end, carry out the operation with considera care.

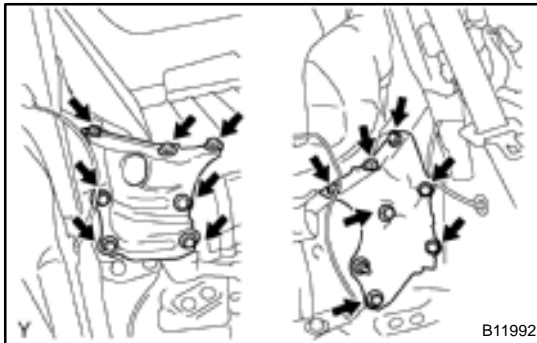

2. INSTALL BATTERY BRACKET


- Install the RH and LH battery bracket with the 13 bolts and nut.

Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)

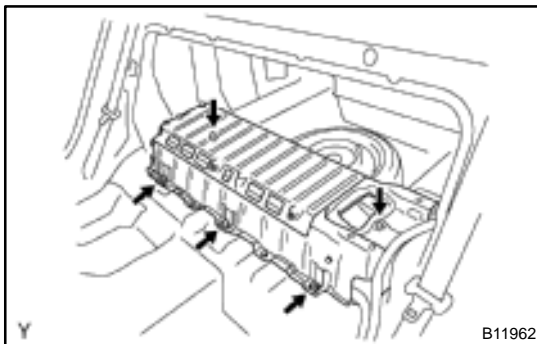

- Install and tighten the 5 bolts for HV battery.


Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)

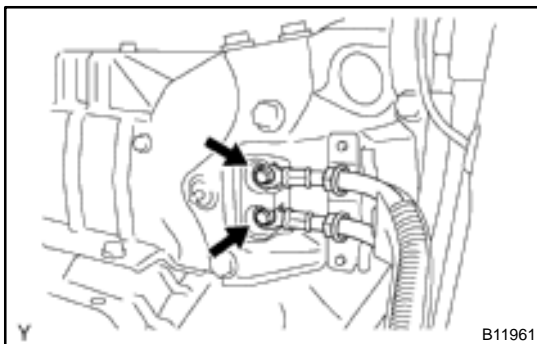

3. INSTALL HIGH TENSION CABLE

- Install the earth terminal.
- Install the high tension cable with the 2 bolts.

Torque: 5.0 N·m (50 kgf·cm, 44 in·lbf)

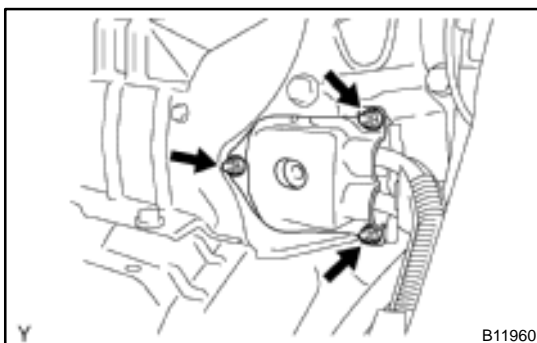

- Install the battery carrier catch bracket with the 3 nuts.

Torque: 8.0 N·m (80 kgf·cm, 71 in·lbf)

NOTICE:

When installing a cover, never fail to pass the interlock button.

4. INSTALL DUCT (See page HV-32)

5. CONNECT CONNECTOR

- Connect the 2 connectors to the battery ECU.
- Connect the connector to the SMR.
- Connect the connector to the service plug assembly.

6. **INSTALL REAR SET** (See page [BO-82](#))
7. **INSTALL LUGGAGE TRIM** (See page [BO-25](#))
8. **INSTALL SERVICE PLUG** (See page [HV-1](#))


CONVERTER AND INVERTER ASSEMBLY

HV008-02


ON-VEHICLE INSPECTION

1. INSPECT INVERTER

- Turn the IG switch OFF and disconnect the 4 connectors.
- Apply battery positive voltage to connector B terminal 5 (IGCT) on the inverter side through a fuse, and battery negative voltage to connector B terminal 6 (GND).
- Measure the voltage and resistance between each terminal shown below and ground.

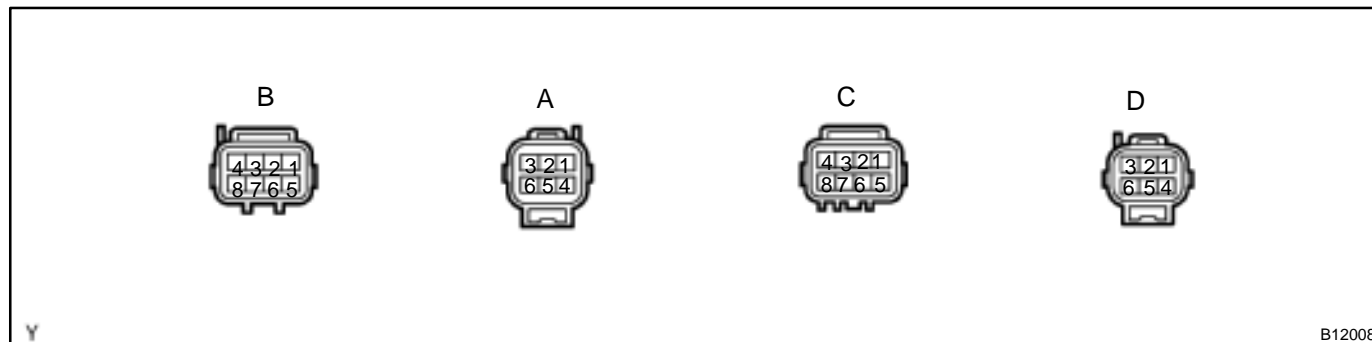

Terminal	Measuring Condition	Specification
A, 5 (G – INVT) D, 5 (M – INVT)	–	Approx. 2 – 4.5 V
C, 5 (VB)	–	Approx. 0.5 – 4 V
A, 4 (G – SDOWN) D, 4 (M – SDOWN)	Apply battery positive voltage to terminal through the resistance of 1 k Ω .	Approx. 5 – 6 V
B, 8 (G – FINV) C, 8 (M – FINV) B, 7 (G – SINV) C, 7 (M – SINV)	Connect the terminal to connector B terminal 6 through the resistance of 10 k Ω .	7 – 12 V approx. 0.2 sec.
A, 1 (G – UU) A, 2 (G – VU) A, 3 (G – WU) D, 1 (M – UU) D, 2 (M – VU) D, 3 (M – WU)	Connect the terminal to connector B terminal 6 through the resistance of 1 k Ω .	Approx. 6 – 8 V
B, 1 (G – IVA) B, 2 (G – IWA) B, 3 (G – IVB) B, 4 (G – IWB) C, 1 (M – IVA) C, 2 (M – IWA) C, 3 (M – IVB) C, 4 (M – IWB)	–	Approx. 0 V
B, 6 (GND) A, 6 (G – GINV) D, 6 (M – GINV)	–	Continuity
C, 6 (CVRSW)	Install a cover for the connecting part of the power cable for the MG1 and MG2.	Continuity

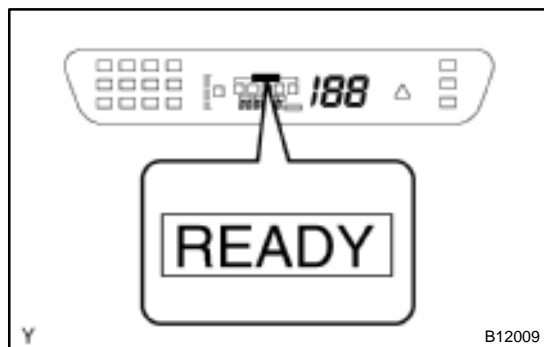

2. INSPECT CONVERTER

(a) Function check

Measure the voltage of an auxiliary battery terminal when the "READY" lamp is OFF and ON.

READY lamp is OFF: Approx. 12 V

READY lamp is ON: Approx. 14 V

(b) Output current check

- (1) Disconnect the MG2 power cable from the inverter (See page [HV-18](#)).
- (2) Install AC/DC 400 A probe to the wire harness of the IP connector of the converter.
- (3) Connect the MG2 power cable to the inverter (See page [HV-22](#)).
- (4) With the READY lamp ON, operate electric devices one by one and measure the output current.


Standard: 100 A or less

HINT:



If more than 100 A is shown momentarily, check for the followings.

- Ground short of electric device.
- Overload caused by installation of excessive device.
- PTC heater operation.

COMPONENTS

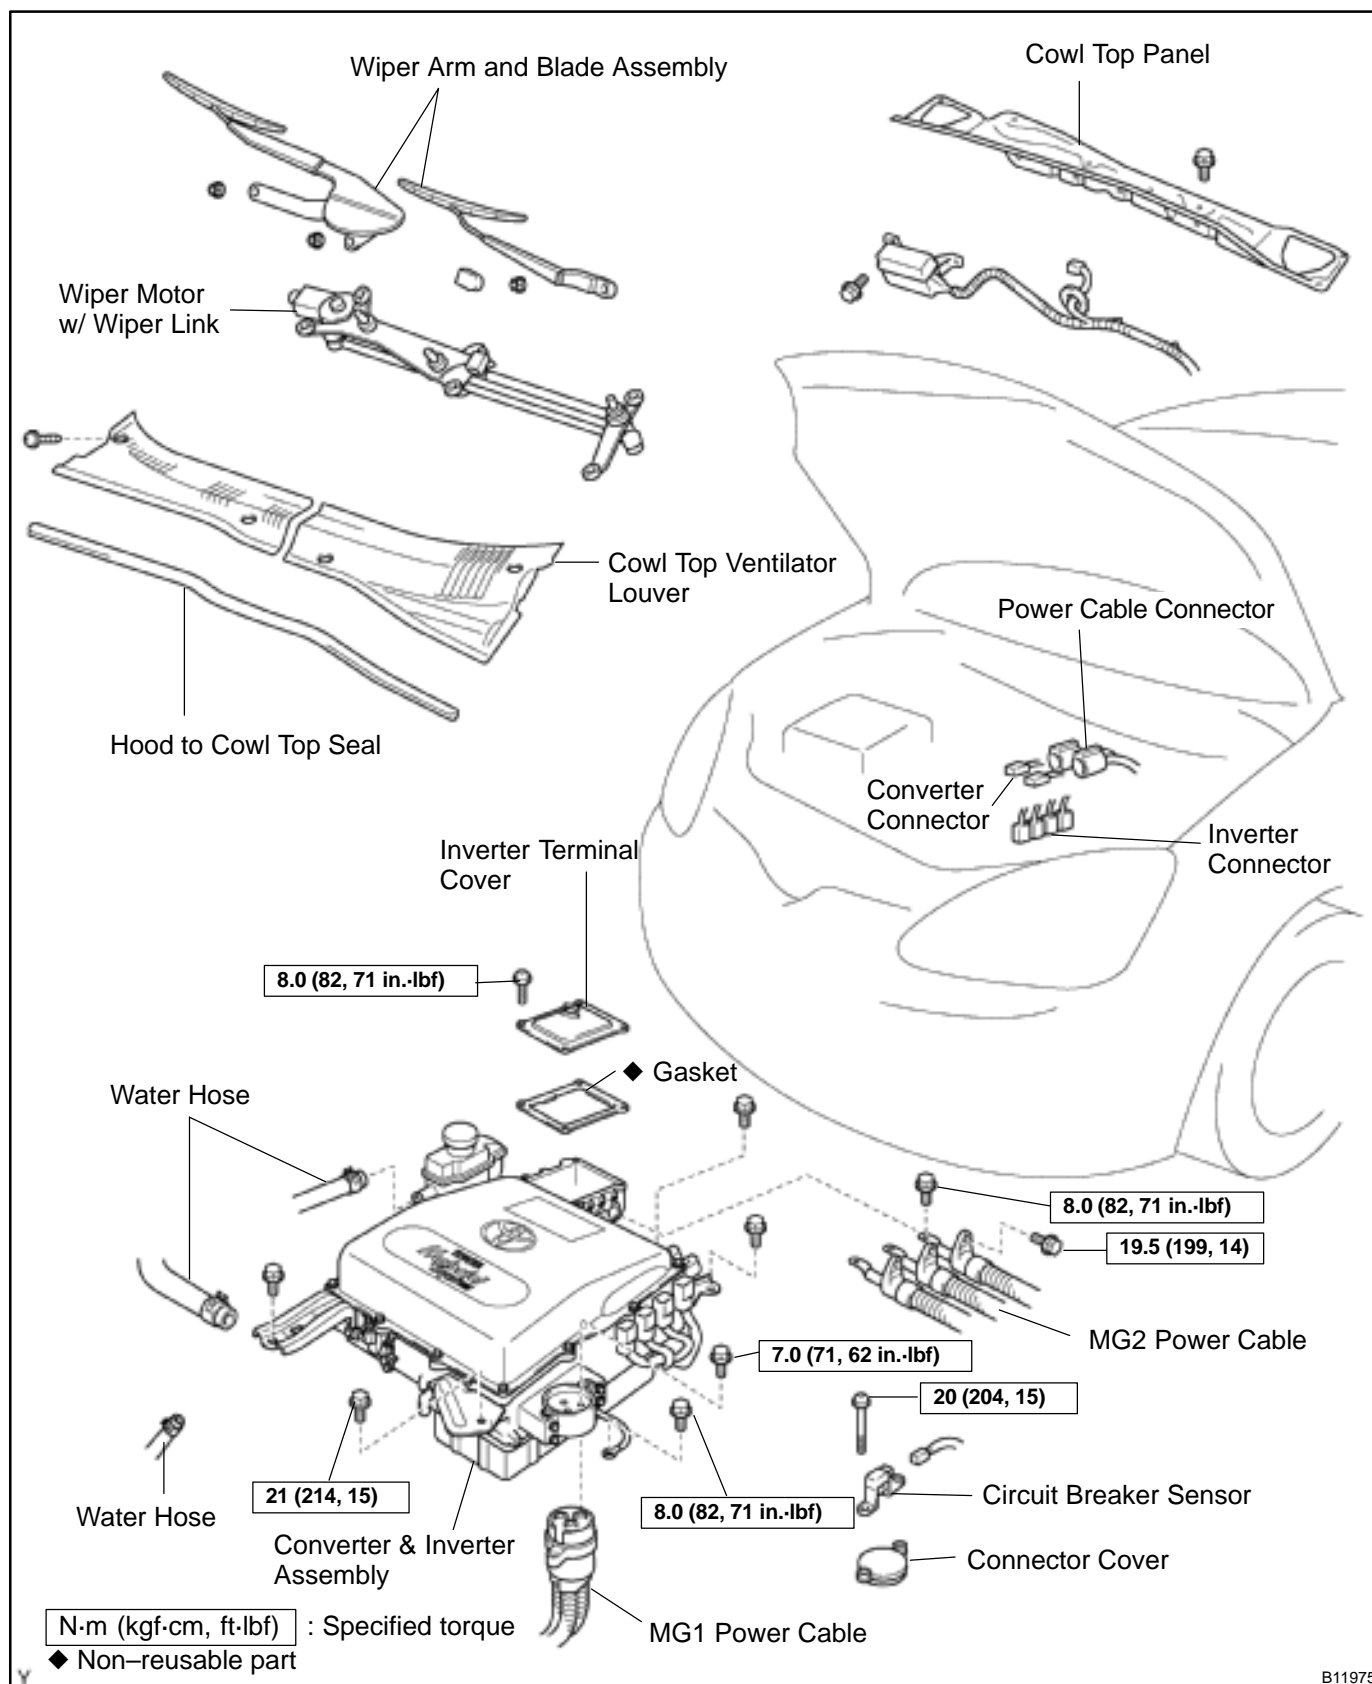

B11975

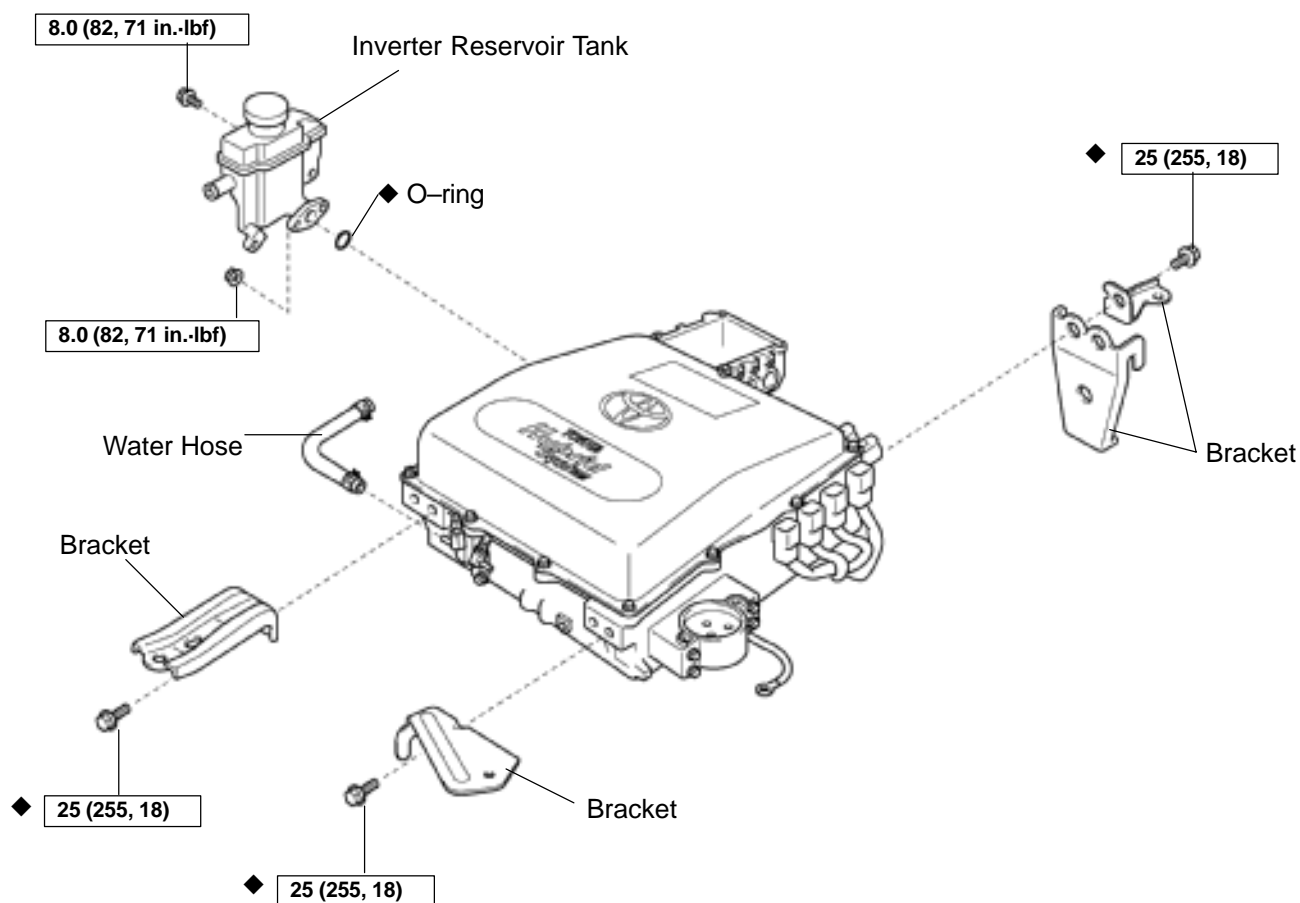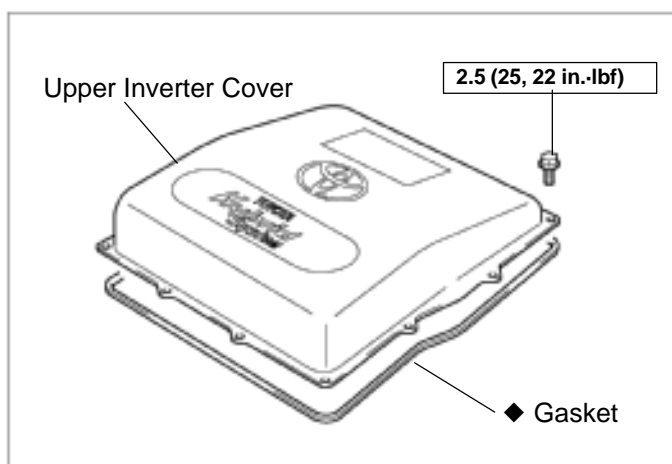


N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non-reusable part

B11976

REMOVAL

1. REMOVE SERVICE PLUG (See page [HV-1](#))
2. DRAIN HV COOLANT (See page [HT-6](#))
3. REMOVE COWL TOP PANEL (See page [BO-31](#))

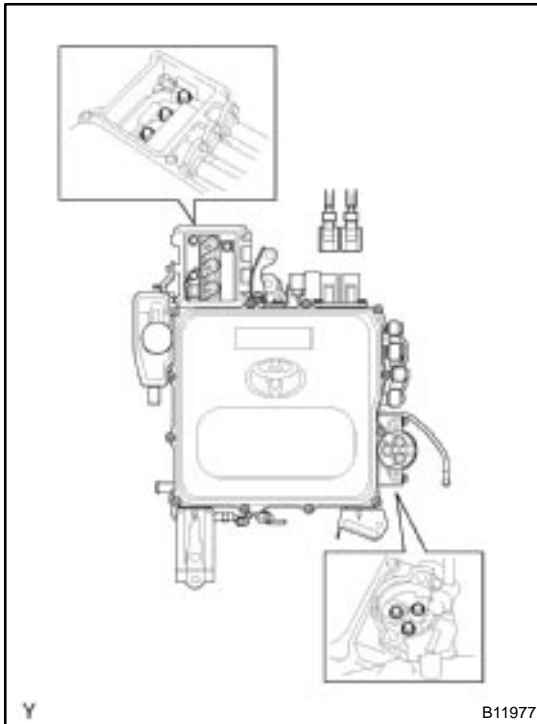

4. VERIFY 0 V

NOTICE:


- Before starting step (a), 5 minutes or more should be passed after removing the service plug.
- Be careful to prevent foreign matter from entering the inside of connector cover.

- (a) Disconnect the connector of the battery power cable and insulate it with packaging tape.
- (b) Using a torx socket wrench (T30), remove the 4 screws and inverter terminal cover.
- (c) Using a torx socket wrench (T40), remove the 2 screws, circuit breaker sensor and connector cover.

HINT:

Slide the connector cover to disconnect the circuit breaker sensor connector.

- (d) Using a voltmeter, measure the voltage between terminals of 3 phases (U–V, V–W, U–W) and each terminal and body ground to verify them to be approx. 0 V.

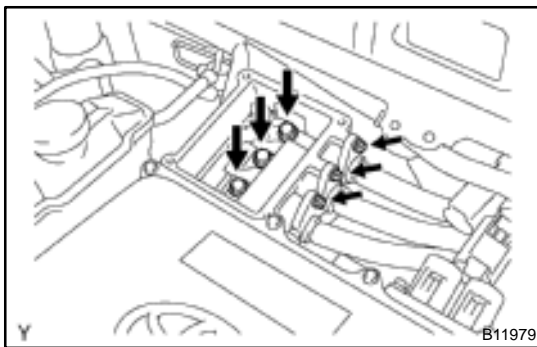


5. REMOVE CONVERTER & INVERTER ASSEMBLY

- (a) Remove the 6 bolts and 3 power cables for MG2.

NOTICE:

Be careful to prevent foreign matter from entering the inside of connector cover.

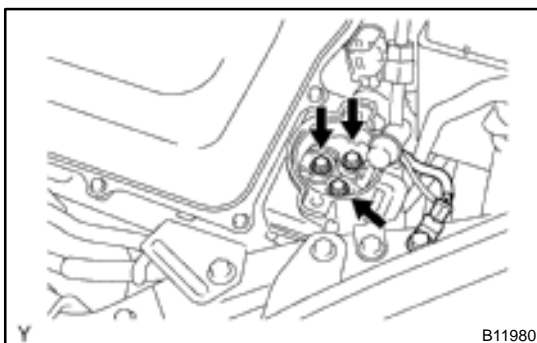


- (b) Remove the 3 bolts and power cable for MG1.


NOTICE:

- Remove the power cable for MG1 together with converter & inverter assembly.
- Be careful to prevent foreign matter from entering the inside of connector cover.

- (c) Remove the bolt and ground cable.

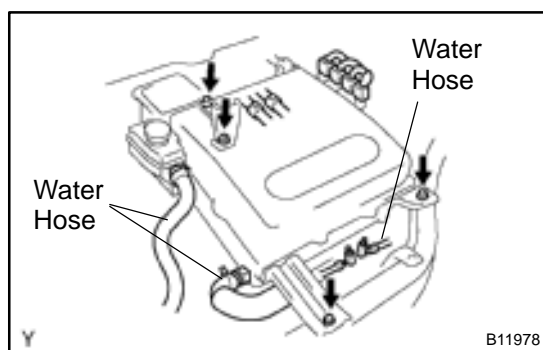


- (d) Disconnect the 3 water hoses from the converter & inverter assembly.
- (e) Remove the 4 bolts and converter & inverter assembly.

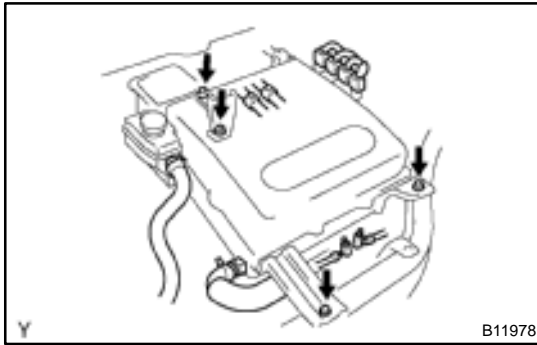

INSTALLATION

1. INSTALL CONVERTER & INVERTER ASSEMBLY


- (a) Install the converter & inverter assembly with the 4 bolts.
Torque: 21 N·m (214 kgf·cm, 15 ft·lbf)
- (b) Connect the 3 water hoses to the converter & inverter assembly.
- (c) Connect the 4 connectors.
- (d) Connect the 2 power cable connectors.

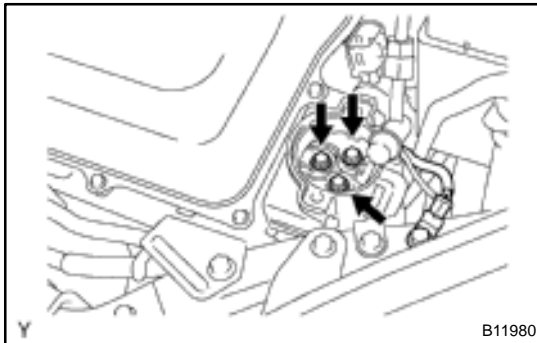


- (e) Install the ground cable to the radiator upper support.
Torque: 8.0 N·m (82 kgf·cm, 71 in·lbf)
- (f) Install the power cable for MG1 with the 3 bolts.
Torque: 7.0 N·m (71 kgf·cm, 62 in·lbf)

NOTICE:

Be careful to prevent foreign matter from entering the inside of connector cover.

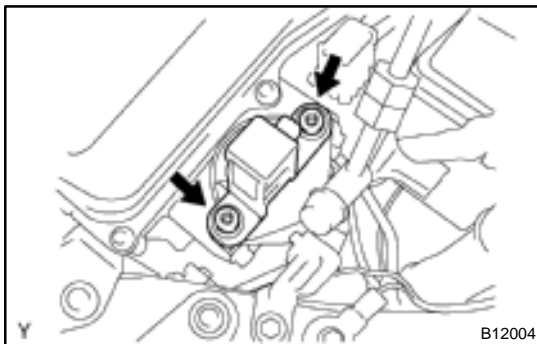


- (g) Install the connector cover and circuit breaker sensor with the 2 screws.
Torque: 20 N·m (204 kgf·cm, 15 ft·lbf)
- (h) Connect the connector for circuit breaker sensor.

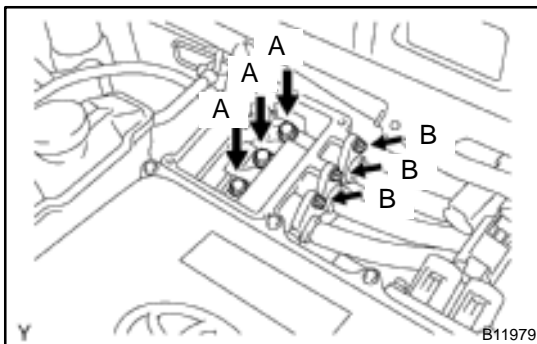

- (i) Install the 3 power cables for MG2 with the 6 bolts.
Torque:
Bolt A: 19.5 N·m (199 kgf·cm, 14 ft·lbf)
Bolt B: 8.0 N·m (82 kgf·cm, 71 in·lbf)

NOTICE:

Be careful to prevent foreign matter from entering the inside of connector cover.

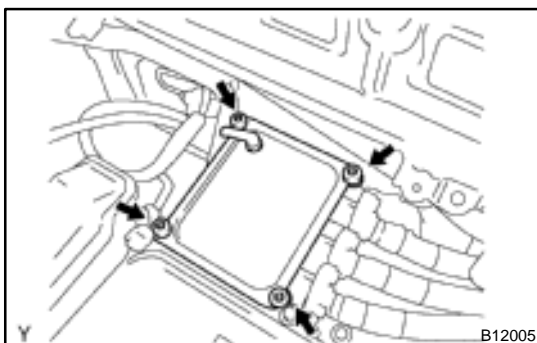

- (j) Install the gasket and inverter terminal cover with the 4 screws.
Torque: 8.0 N·m (82 kgf·cm, 71 in·lbf)
2. **INSTALL COWL TOP PANEL** (See page [BO-31](#))
 3. **INSTALL SERVICE PLUG** (See page [HV-1](#))
 4. **FILL WITH HV COOLANT** (See page [HT-6](#))

5. OPERATION AFTER REPLACING CONVERTER & INVERTER ASSEMBLY

Even if the master warning light is not lit, clear DTC using a TOYOTA hand-held tester. When replacing a converter & inverter assembly of the vehicle in which no error occurs, also clear DTC using a TOYOTA hand held tester.

HINT:

When a TOYOTA hand-held tester cannot be used, disconnect the auxiliary battery for 1 min. or more and connect it again.


6. CHECKING AFTER REPLACING CONVERTER & INVERTER ASSEMBLY

Depressing the accelerator pedal to a degree of 50 %, increase the speed up to approx. 15 km/h 3 or 4 times to check that there is no problem in the inverter operation.

OIL PUMP ASSEMBLY ON-VEHICLE REPAIR


HT003-01

1. REMOVE ENGINE UNDER COVER LH

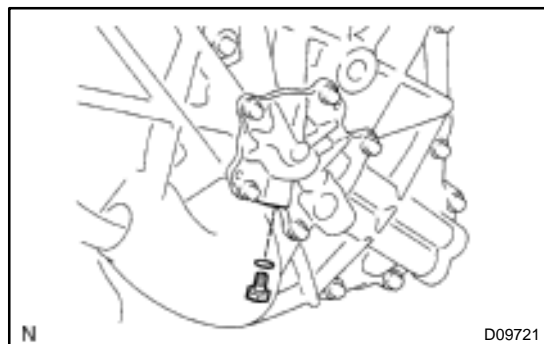


2. REMOVE OIL PUMP


- (a) Remove the plug.
- (b) Remove the O-ring from the plug.

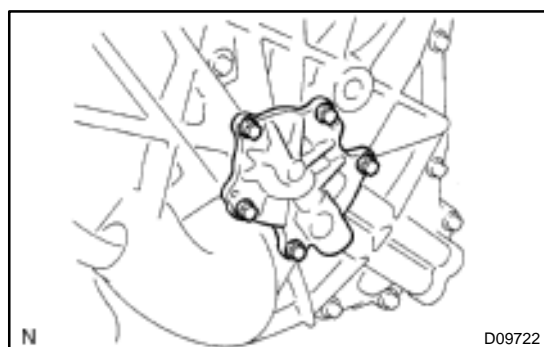


- (c) Remove the 5 bolts and oil pump cover.

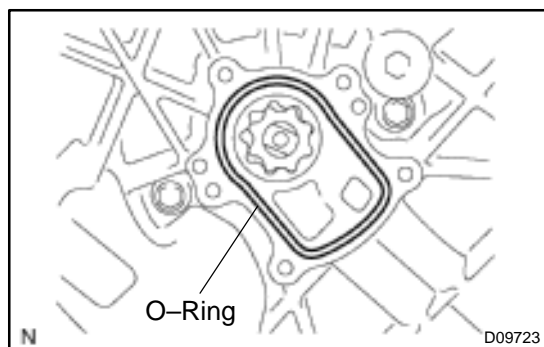

- (d) Remove the O-ring.

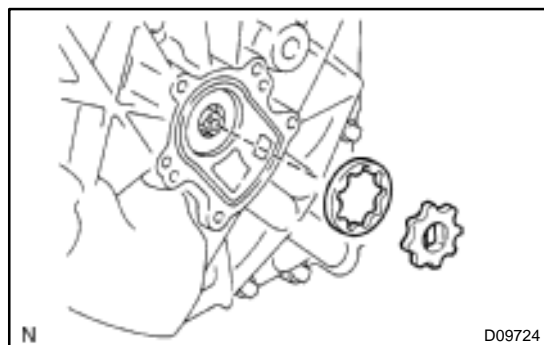


- (e) Remove the oil pump driven rotor and drive rotor.

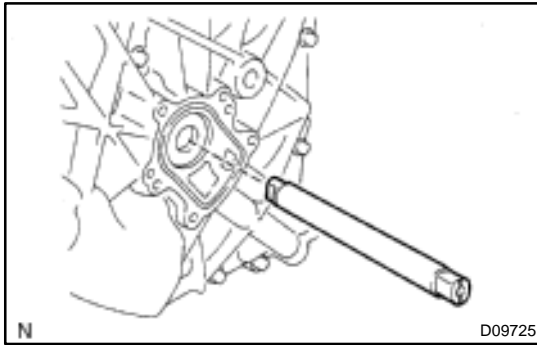


(f) Remove the oil pump drive shaft.

3. INSTALL OIL PUMP


- (a) Apply ATF to each sliding part.
- (b) Install the oil pump drive shaft.

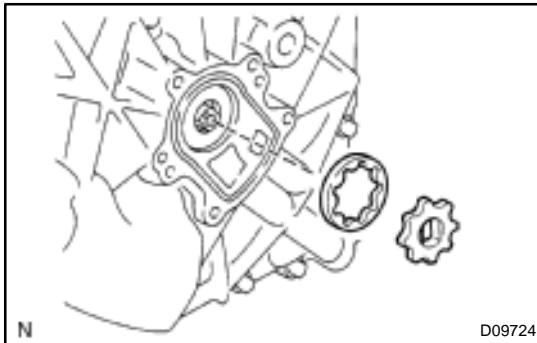

(c) Install the oil pump driven rotor and drive rotor.

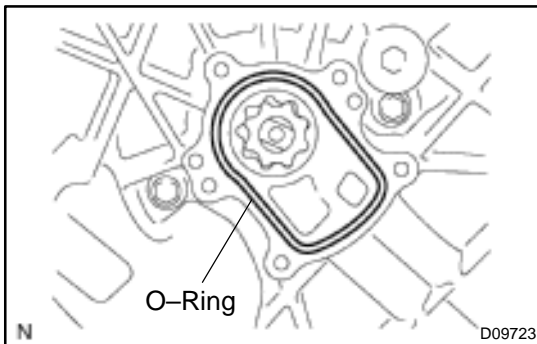

(d) Install a new O-ring.

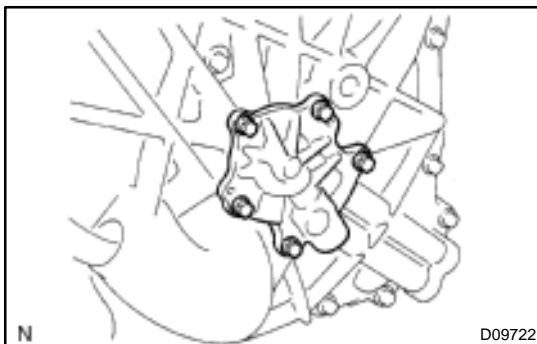


- (e) Apply liquid sealer to 2 or 3 threads of the bolt end.
Sealant:
Part No. 08833-00080, THREE BOND 1344, LOCTITE 242 or equivalent

(f) Install the oil pump cover with the 5 bolts.
Torque: 5.5 N·m (56 kgf·cm, 49 in.-lbf)



- (g) Install a new O-ring and the plug.
Torque: 7.35 N·m (75 kgf·cm, 65 in.-lbf)
- ### 4. INSTALL ENGINE UNDER COVER LH

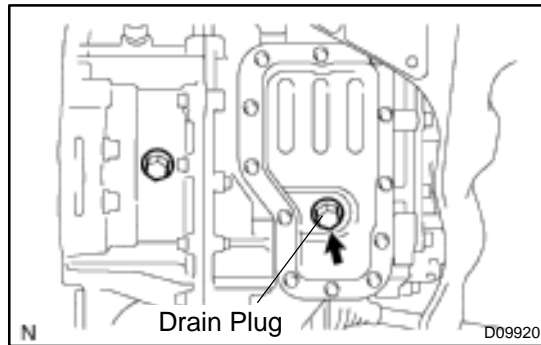

HYBRID TRANSAXLE UNIT ON-VEHICLE REPAIR



HT005-01

1. REPLACE TRANSAXLE OIL

Fluid type: ATF Type T-IV


Capacity: 4.6 liters (4.9 US qts, 4.0 Imp. qts)

Torque: 49 N·m (498 kgf·cm, 36 ft·lbf)

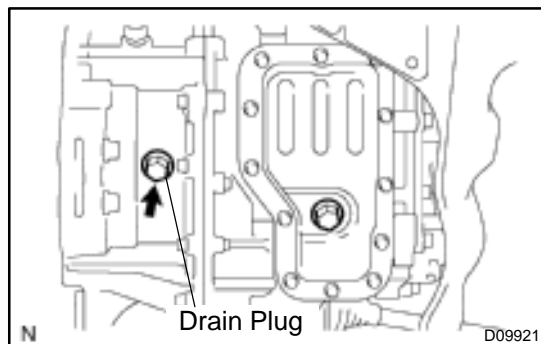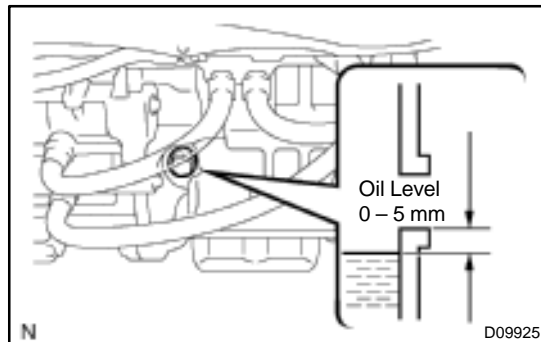

2. REPLACE COOLANT

- Remove the reservoir tank cap of the inverter.
- Remove the drain plug and drain the coolant.
- Install the drain plug with a new gasket.

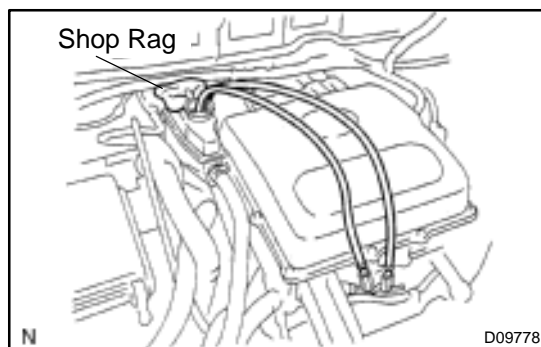


- Loosen the 2 bleeder plugs and connect the hoses.

HINT:


To prevent coolant from splashing, place a shop rag on the overflow pipe as shown in the illustration.

- Supply coolant from the reservoir tank.

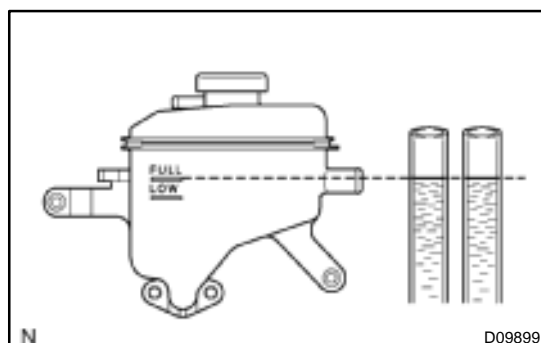

- Supply coolant until coolant level in the hose connected to the bleeder plugs reaches the same level with FULL of the reservoir tank as shown in the illustration.
- Tighten the 2 bleeder plugs.
- Turn the ignition switch ON and active the water pump.
- Leave it as it is for approx. 20 seconds.
- Turn the ignition switch OFF.
- Loosen the 2 bleeder plugs to bleed air.
- Close the 2 bleeder plugs again.


- (m) Report the step (h) to (l) until the operation sound of the pump becomes lower and Coolant in the reservoir tank moves faster.
- (n) With the ignition switch ON, wait for approx. 5 minutes.

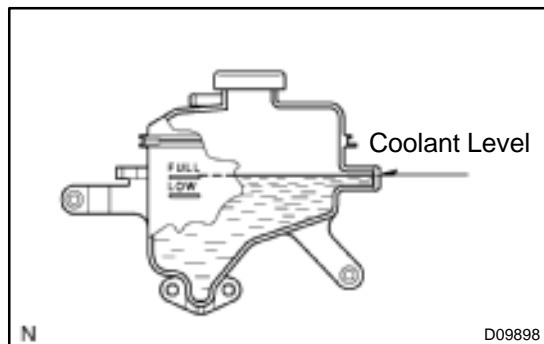


- (o) Adjust the coolant level inside the reservoir tank as shown in the illustration.


HYBRID TRANSAXLE ASSEMBLY COMPONENTS

HT00A-01

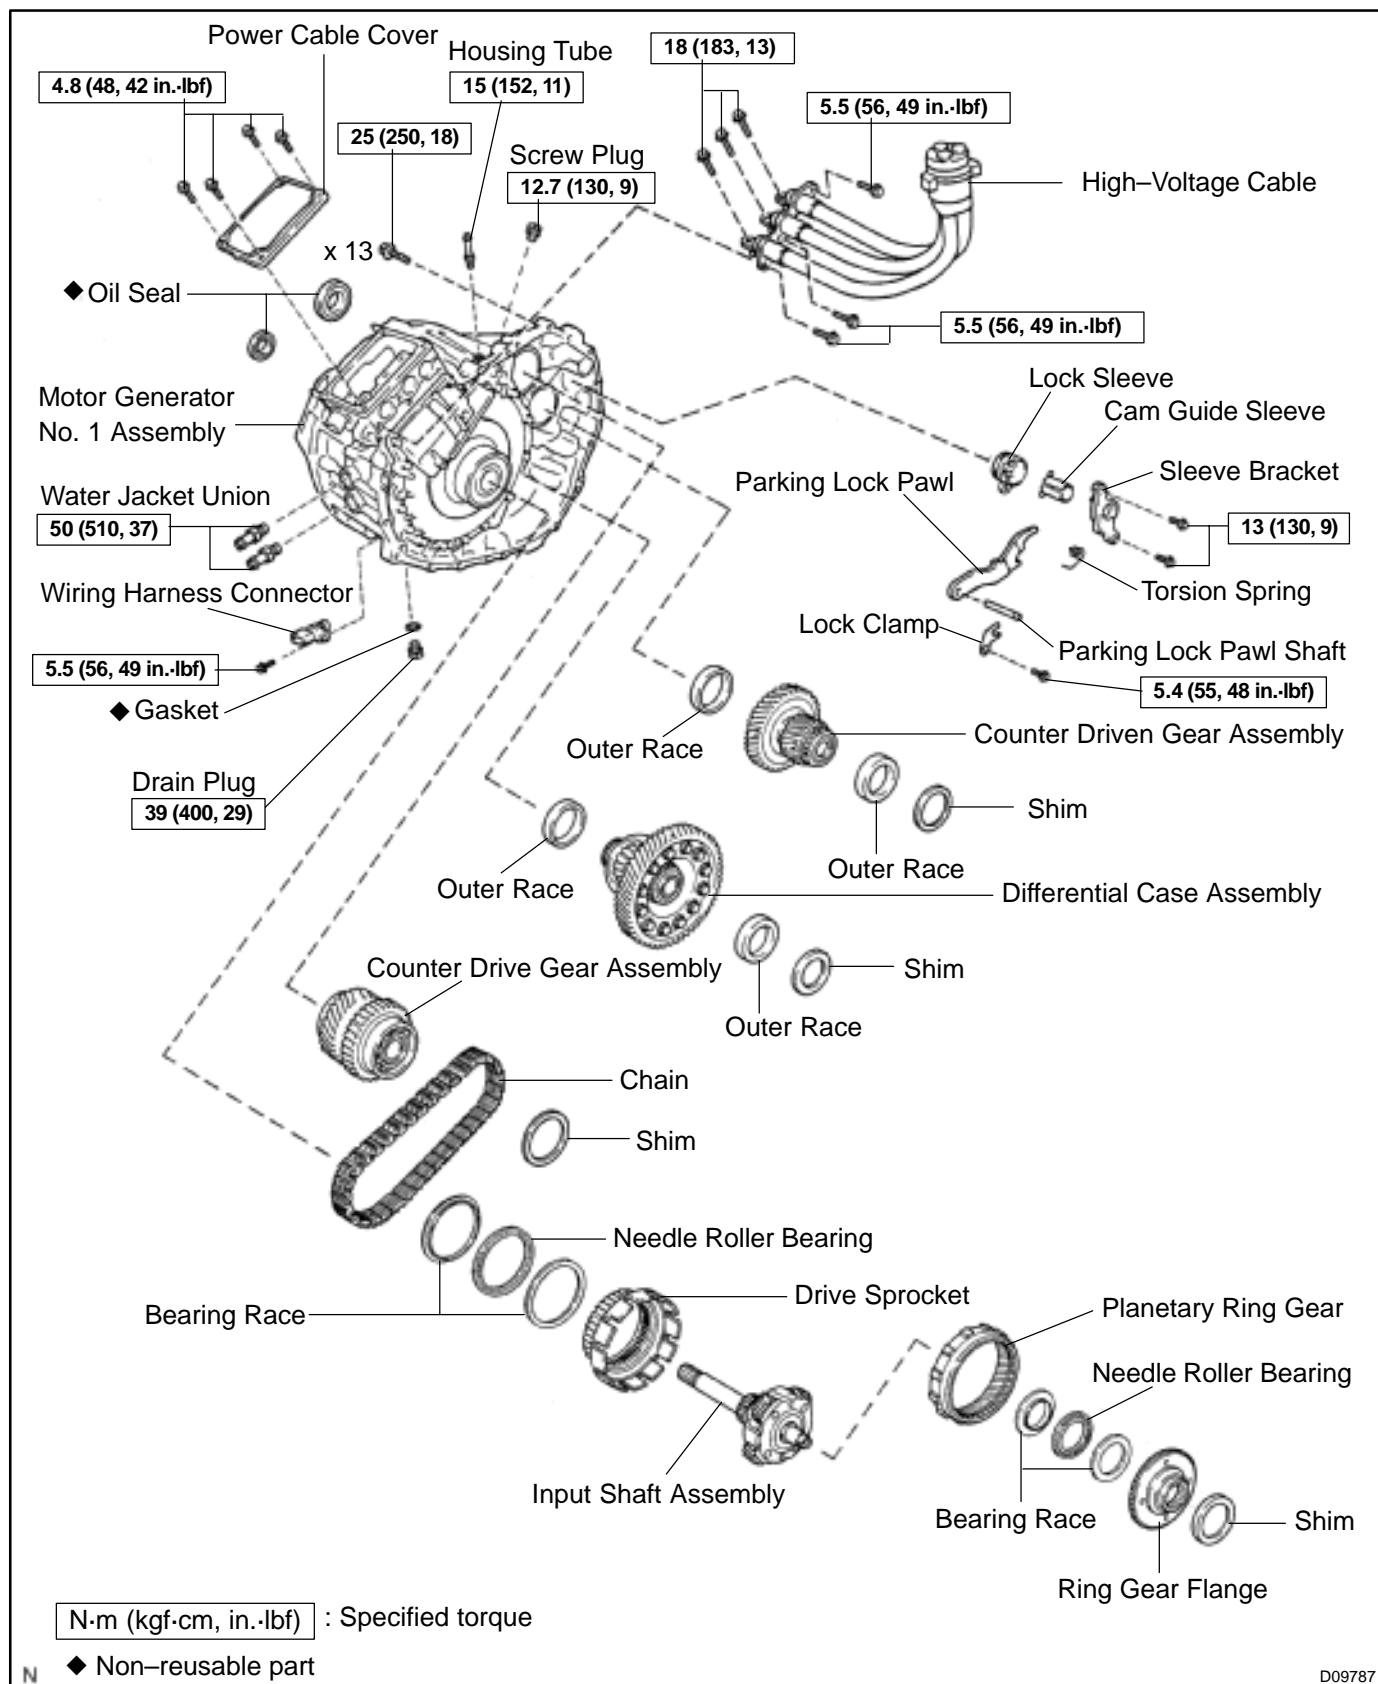

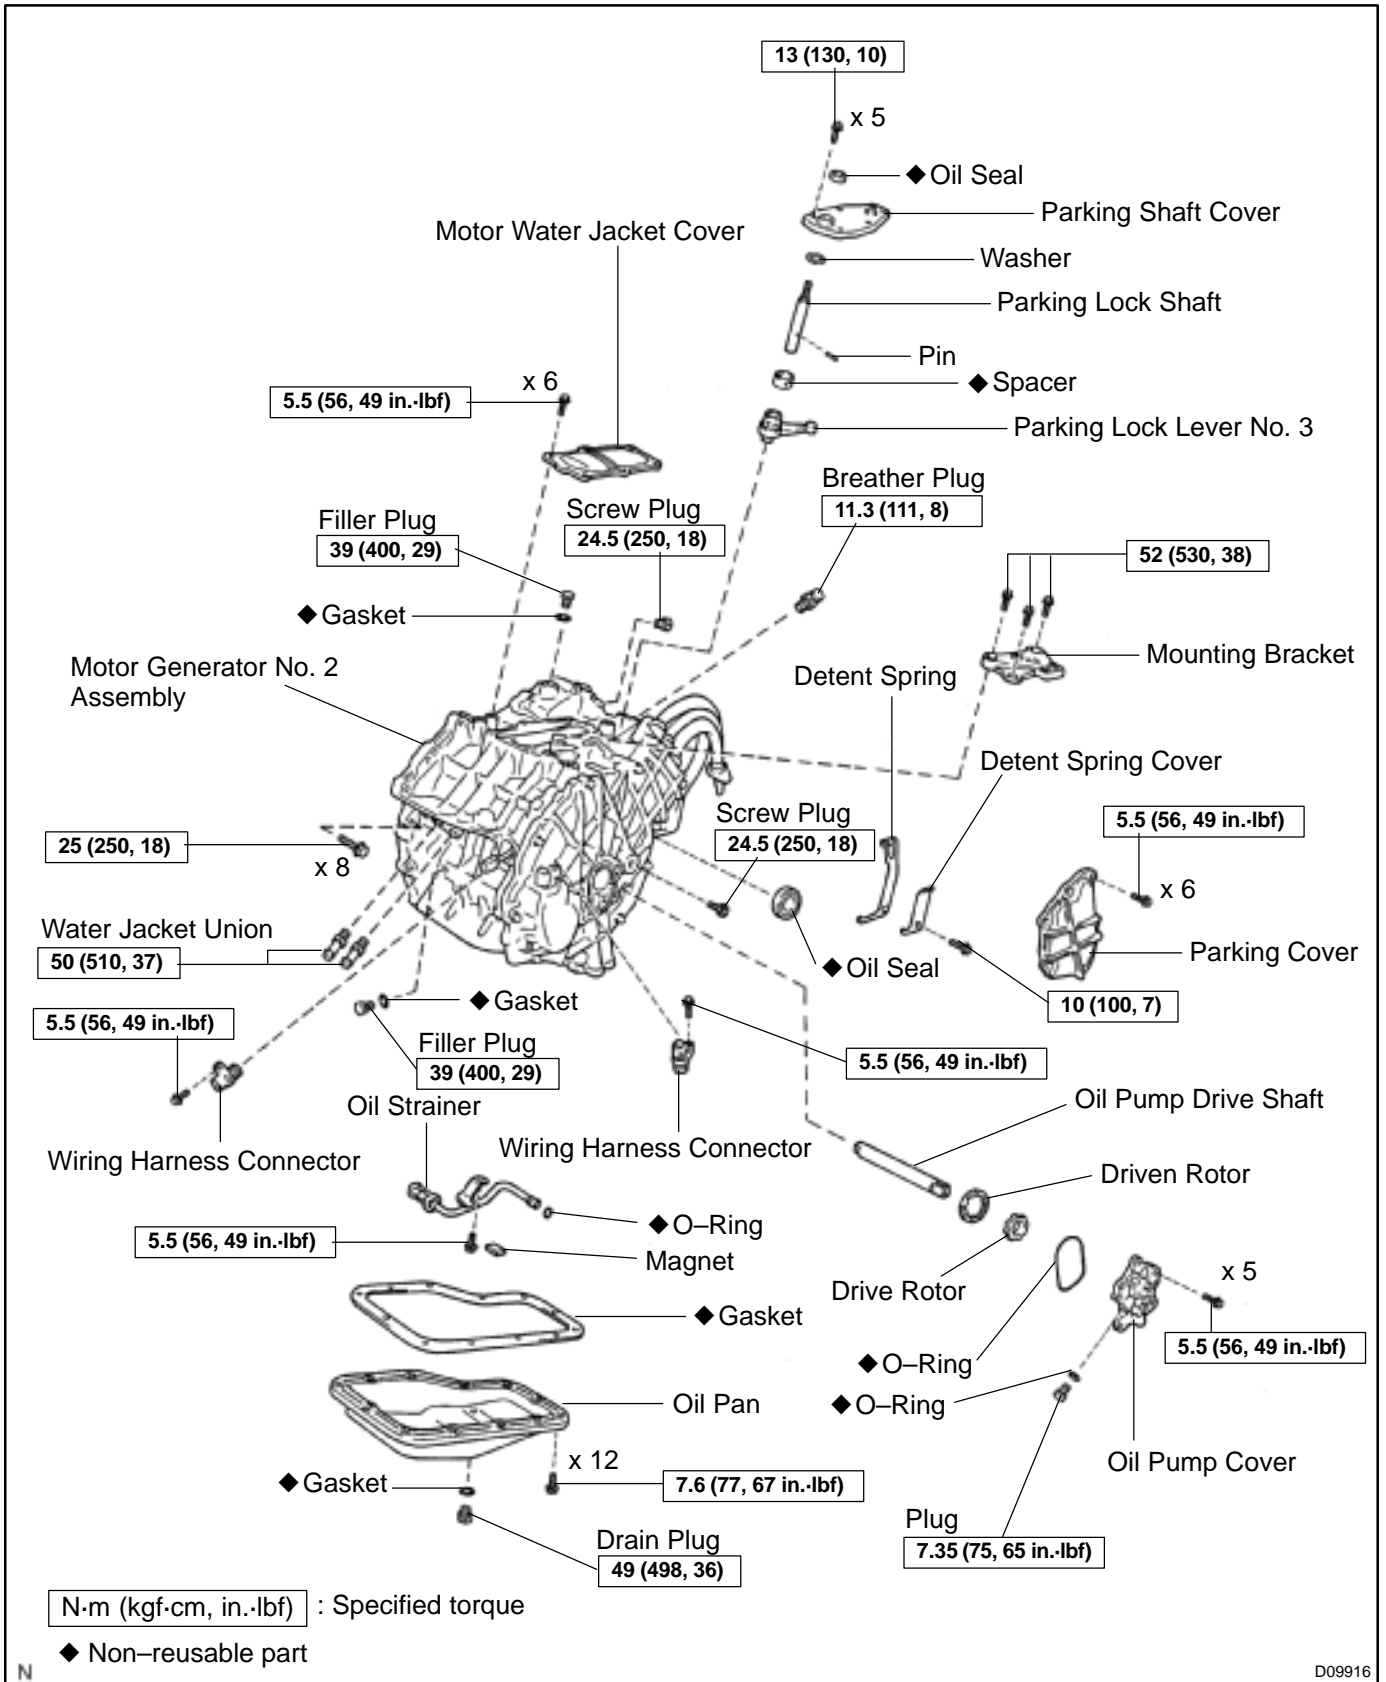

cardiagn.com

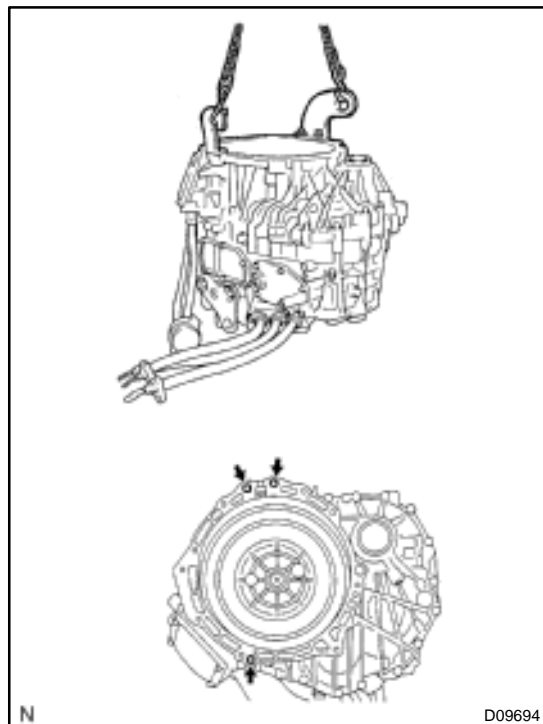

DISASSEMBLY

1. INSTALL ENGINE HUNGER

Install the engine hanger onto the MG1 side as shown in the illustration, and lift it up by a chain device.

Engine hanger part No.:

12281-67070, S1228-11781

Bolt part No.:

91642-81045

91642-81265 2 pieces


Nut part No.:

90178-10001

90179-12147 2 pieces


NOTICE:

- As the transaxle itself is heavy, place a wood block underneath to stabilize it and carry out the operation carefully.
- Do not pull or bend the high-voltage cable of the MG1 assembly.
- Drain the fluid before disassembly.

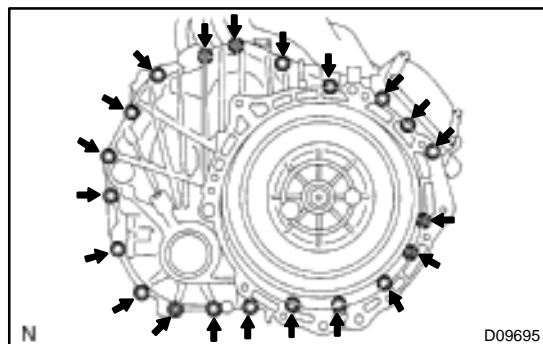


2. REMOVE MG1 ASSEMBLY


(a) Remove the 21 bolts.

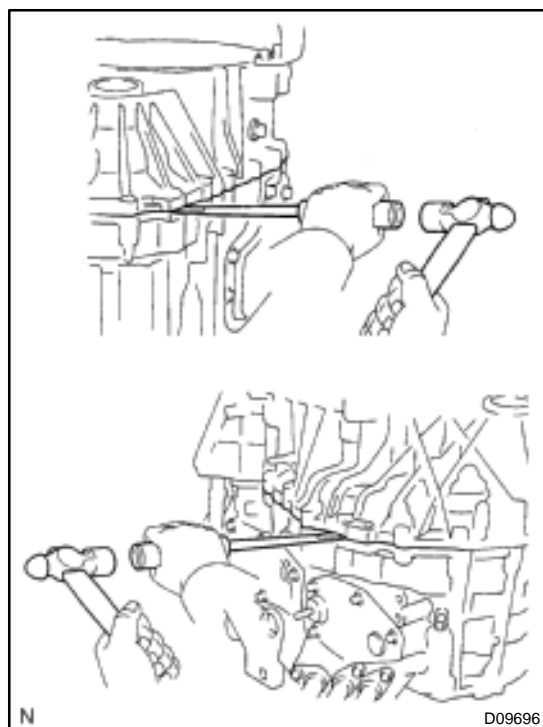


(b) Using a screwdriver and a hammer, disconnect the MG1 assembly from the MG2 assembly.

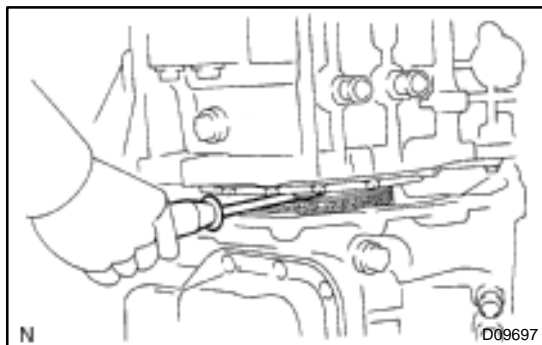**HINT:**



When separating the MG1 assembly from the MG2 assembly, to prevent the drive sprocket from being removed with the MG1 assembly, push down the chain part with a taped screwdriver tip.

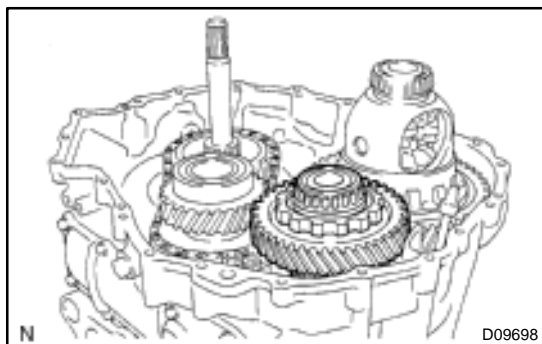
**3. REMOVE COUNTER DRIVEN GEAR ASSEMBLY**

Remove the counter driven gear assembly from the MG2 assembly.

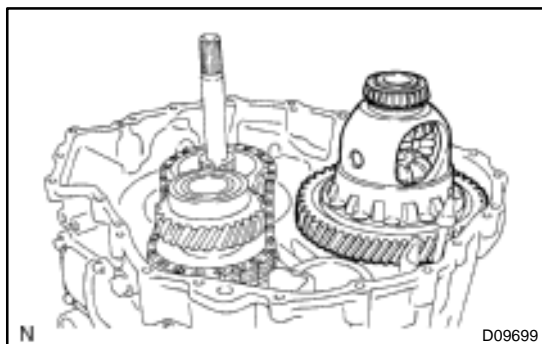
**4. REMOVE DIFFERENTIAL CASE ASSEMBLY**

Remove the differential case assembly from the MG2 assembly.


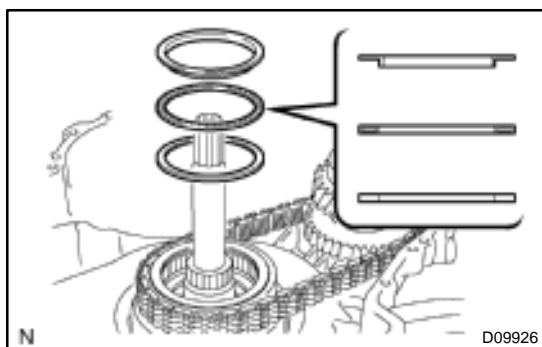
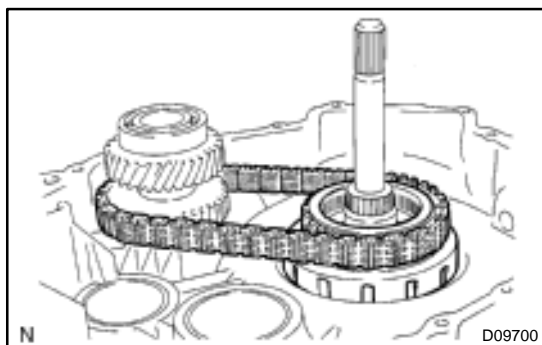
**5. REMOVE 2 RACE AND NEEDLE ROLLER BEARING****6. REMOVE DRIVE SPROCKET SUB-ASSEMBLY AND CHAIN**

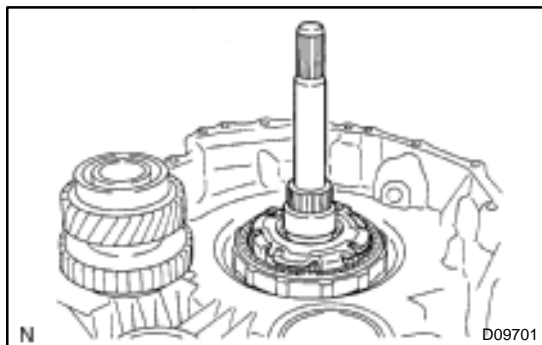**7. REMOVE INPUT SHAFT ASSEMBLY**


- (a) Remove the input shaft assembly.

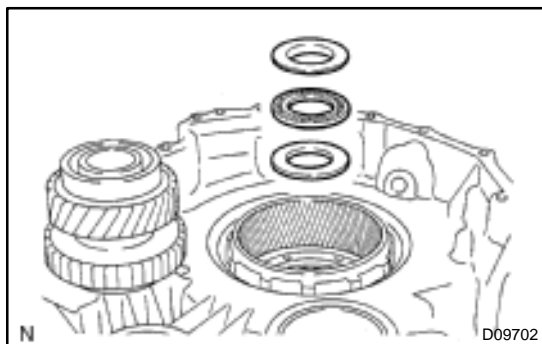



- (b) Remove the needle roller bearing and 2 bearing races.

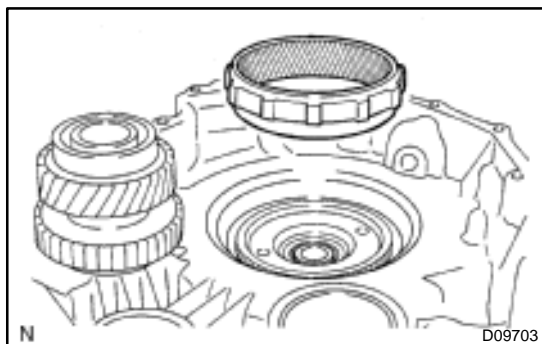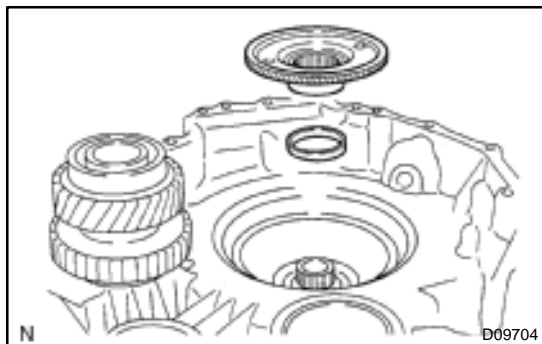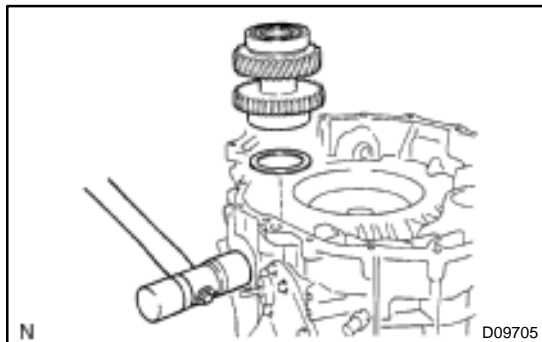**8. REMOVE PLANETARY RING GEAR****9. REMOVE RING GEAR FLANGE AND SHIM****10. REMOVE COUNTER DRIVE GEAR AND SHIM****HINT:**

Remove the counter drive gear by tapping the case with a plastic hammer.

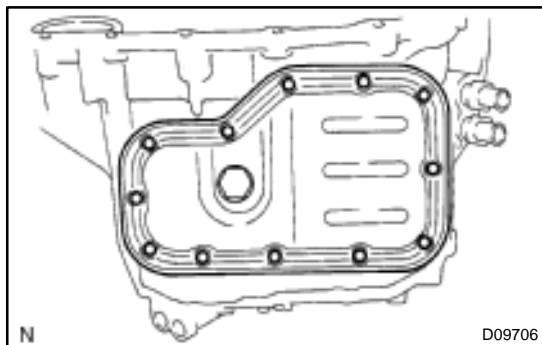
**11. REMOVE OIL PAN AND GASKET**

- (a) Remove the drain plug and its gasket.
- (b) Remove the 12 bolts.
- (c) Remove the oil pan and its gasket.

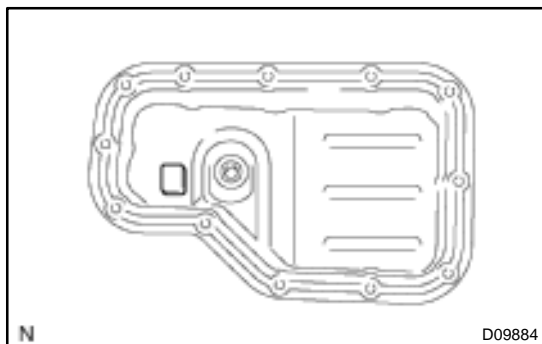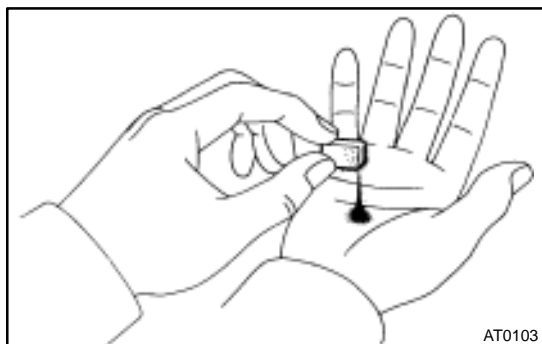
**12. REMOVE MAGNET FROM OIL PAN****13. EXHAUST PARTICLES IN PAN**

Remove the magnet and use it to collect any steel chips. Carefully examine the chips and particles in the oil pan and on the magnet to identify what type of wear has occurred in the transaxle.


- Steel (magnetic): bearing, gear and plate wear
- Brass (non-magnetic): bushing wear

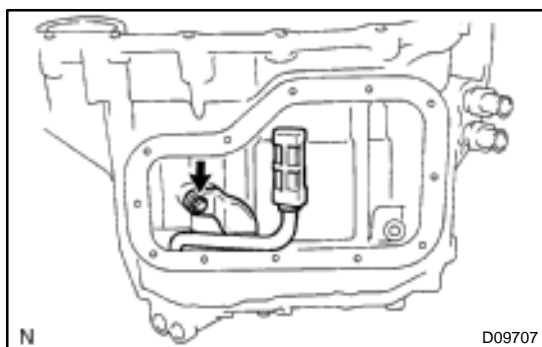**14. REMOVE OIL STRAINER**


- (a) Remove the bolt and oil strainer.

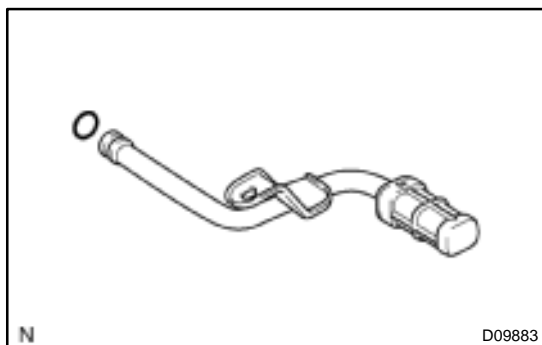


- (b) Remove the O-ring from the oil strainer.

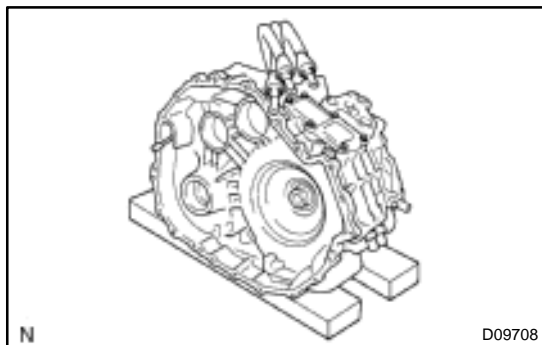**15. SET MG2 ASSEMBLY**



As illustrated, set the MG2 assembly and wood blocks.

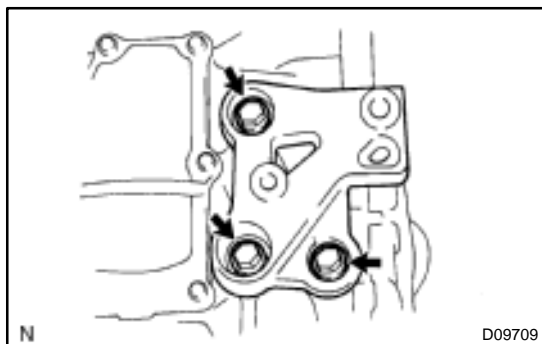**16. REMOVE MOUNTING BRACKET**


Remove the 3 bolts and mounting bracket.

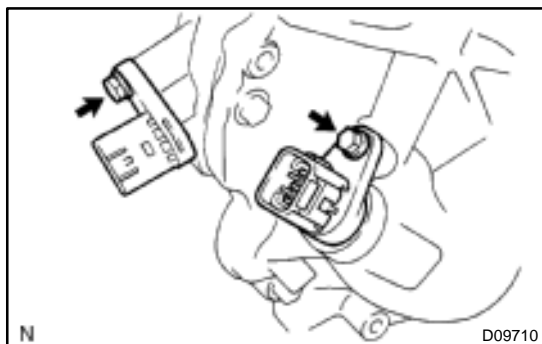**17. REMOVE WIRING HARNESS CONNECTOR (MG2 side)**

Remove the 2 bolts and the 2 wiring harness connectors.

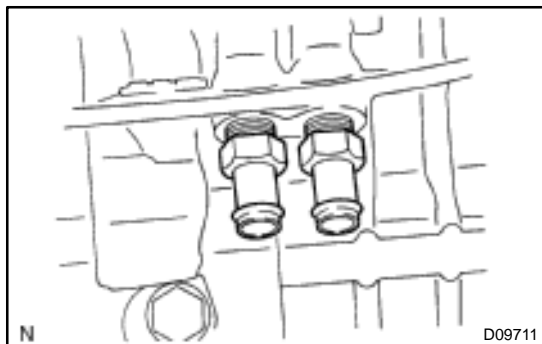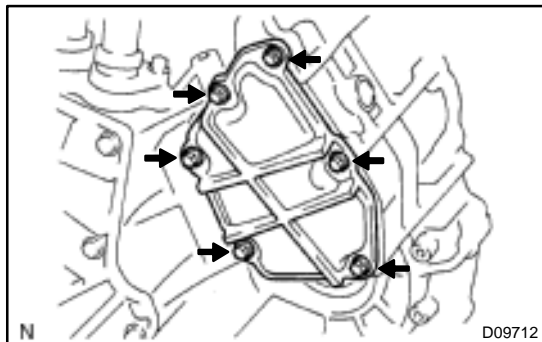
**18. REMOVE 2 WATER JACKET UNIONS (MG2 side)****19. REMOVE PARKING COVER**

Remove the 6 bolts and parking cover.

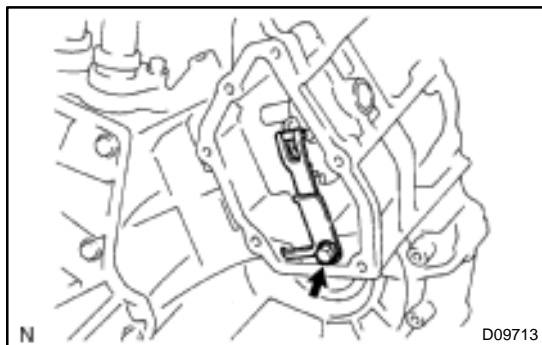


20. REMOVE DETENT SPRING COVER AND DETENT SPRING

Remove the bolt, detent spring cover and detent spring.

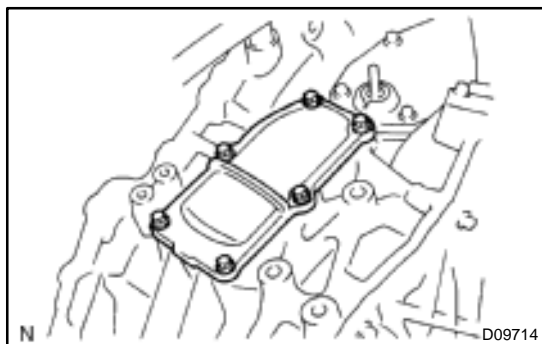


21. REMOVE MOTOR WATER JACKET COVER

Remove the 6 bolts and motor water jacket cover.

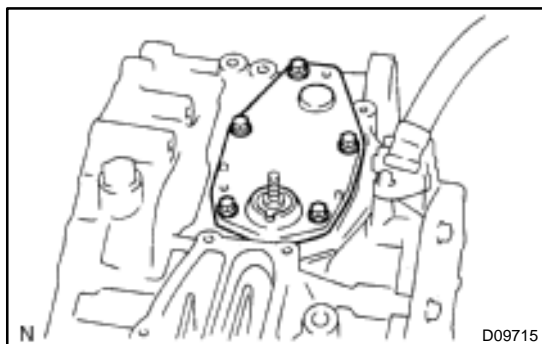


22. REMOVE PARKING SHAFT COVER


(a) Remove the 5 bolts and parking shaft cover.

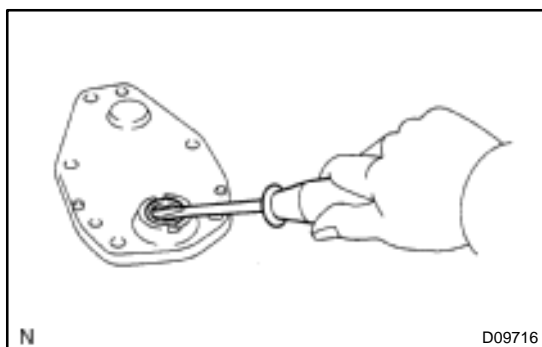


(b) Using a screwdriver, remove the oil seal from the cover.

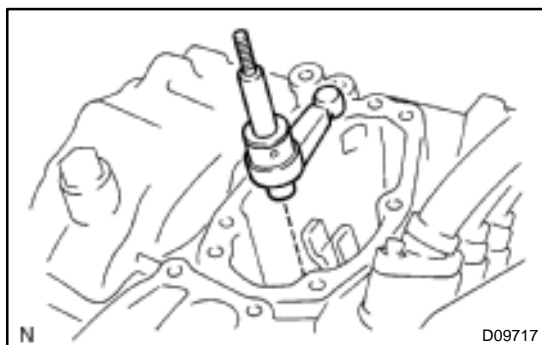

23. REMOVE PARKING LOCK SHAFT ASSEMBLY

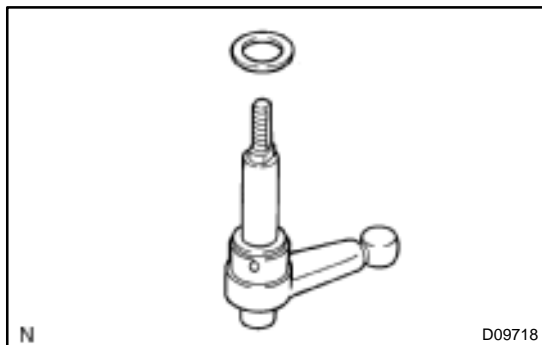
**24. DISASSEMBLE PARKING LOCK SHAFT ASSEMBLY**

- (a) Remove the washer.

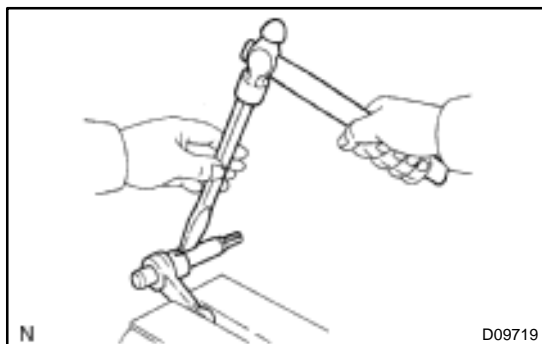

- (b) Using a chisel and a hammer, cut the spacer.

- (c) Remove the spacer.

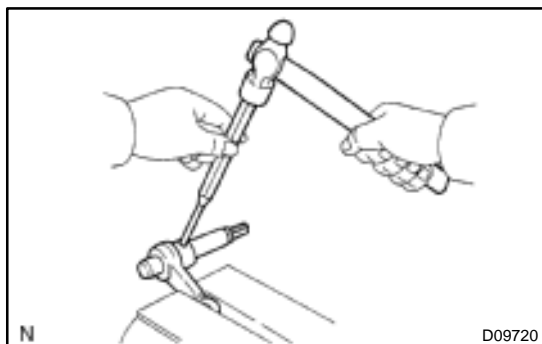


- (d) Using a pin punch and a hammer, drive out the pin.

- (e) Remove the parking lock lever No. 3 from the parking lock shaft.


**25. REMOVE OIL PUMP**

- (a) Remove the plug.


- (b) Remove the O-ring from the plug.

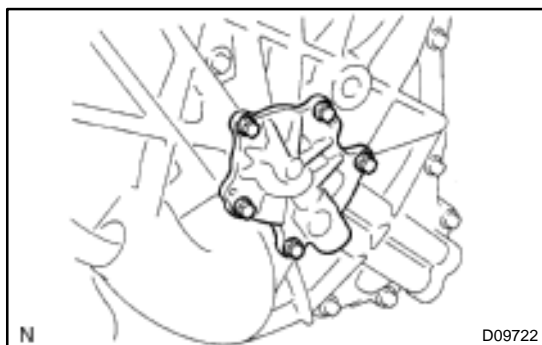


- (c) Remove the 5 bolts and oil pump cover.

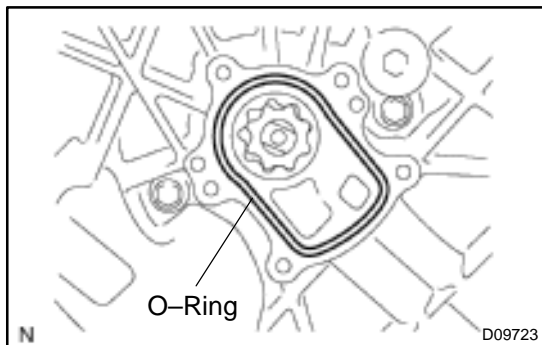


(d) Remove the O-ring.

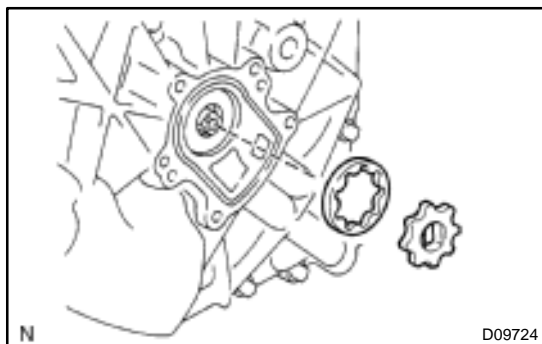

(e) Remove the oil pump driven rotor and drive rotor.

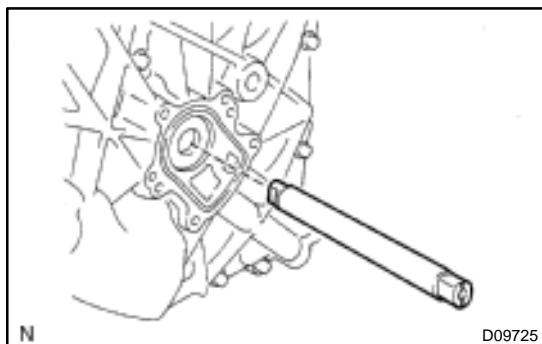


(f) Remove the oil pump drive shaft.

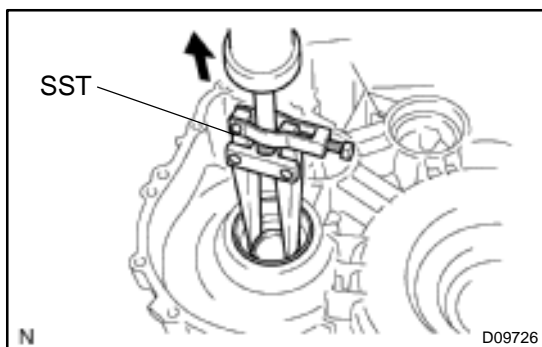

26. REMOVE DIFFERENTIAL SIDE BEARING OUTER RACE LH AND SHIM (MG2 side)

Using SST, drive out the differential side bearing outer race and shim.


SST 09308-00010

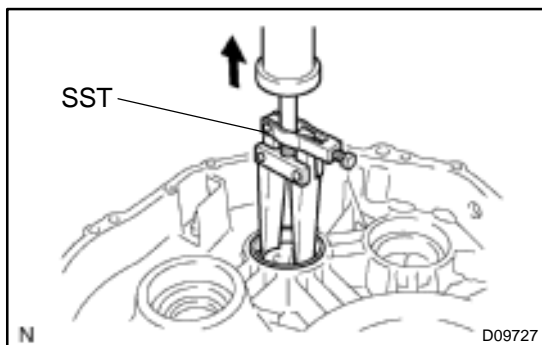

27. REMOVE COUNTER DRIVEN GEAR SIDE BEARING OUTER RACE LH AND SHIM

(a) Using SST, drive out the counter driven gear side bearing outer race and shim.


SST 09308-00010

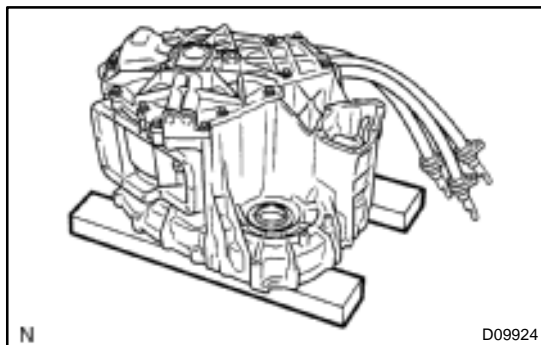

- (b) Overturn the MG2 assembly and place a wood block under it stabilize.


NOTICE:

Be careful not to bend the parking lock rod.

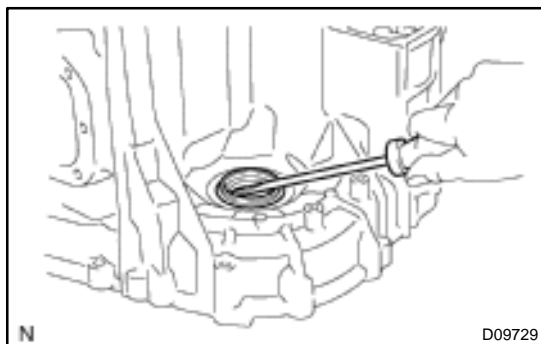


28. REMOVE DIFFERENTIAL OIL SEAL LH (MG2 side)

Using a screwdriver, drive out the oil seal.

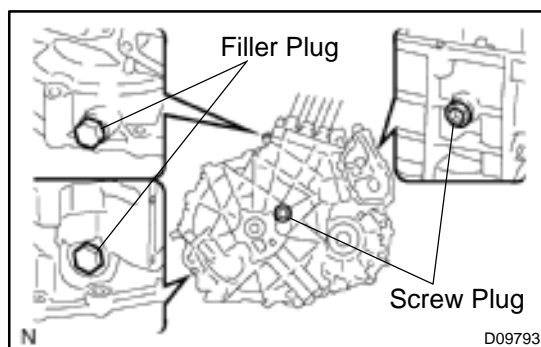


29. REMOVE FILLER PLUG AND SCREW PLUG (MG2 side)


- (a) Remove the 2 screw plugs with a hexagon wrench.
(b) Remove the 2 filler plugs and the 2 gaskets.

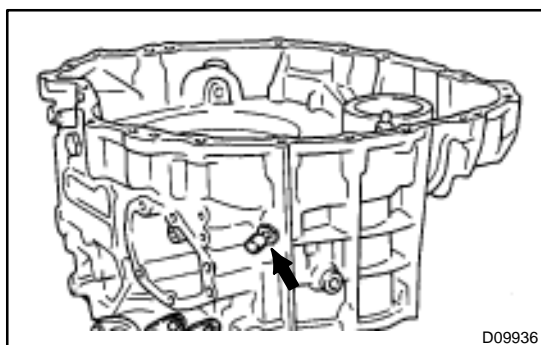


30. REMOVE BREATHER PLUG

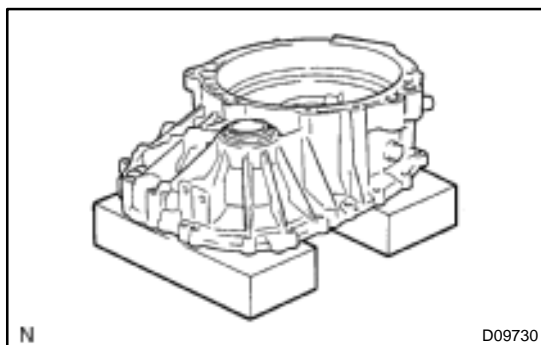


31. PLACE WOOD BLOCK UNDER MG1 ASSEMBLY TO STABILIZE

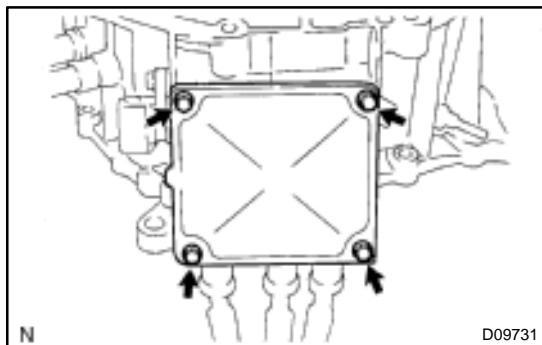**32. REMOVE HIGH-VOLTAGE CABLE**



- (a) Remove the 4 bolts and power cable cover.

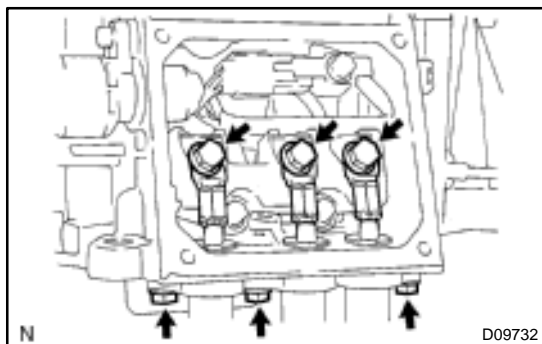


- (b) Remove the 6 bolts and the high-voltage cable.

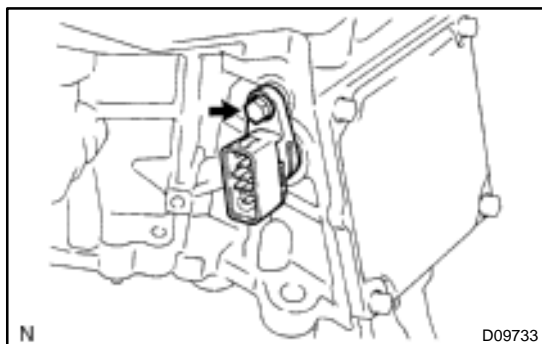**33. REMOVE WIRING HARNESS CONNECTOR (MG1 side)**


Remove the bolt and wiring harness connector.

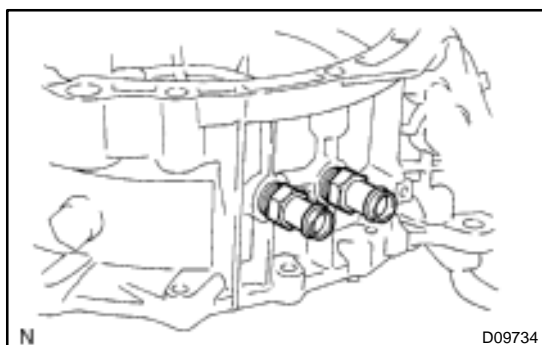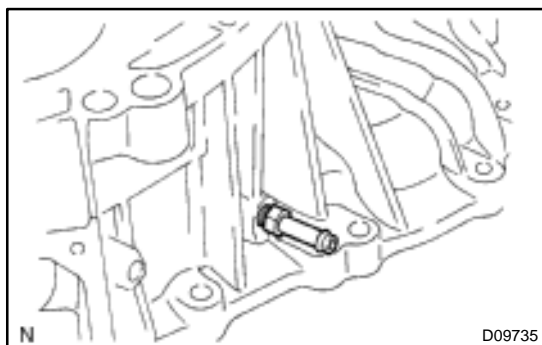**34. REMOVE 2 WATER JACKET UNIONS (MG1 side)****35. REMOVE HOUSING TUBE**

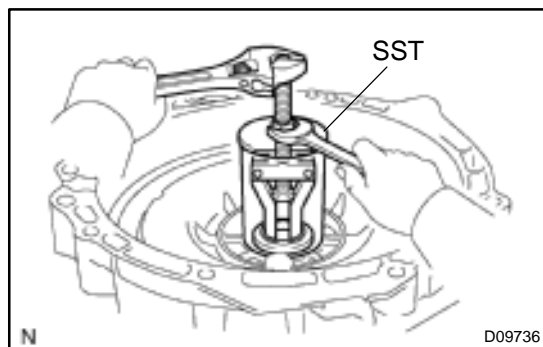
**36. REMOVE INPUT SHAFT OIL SEAL**

Using SST, drive out the input shaft oil seal.


SST 09612-30012

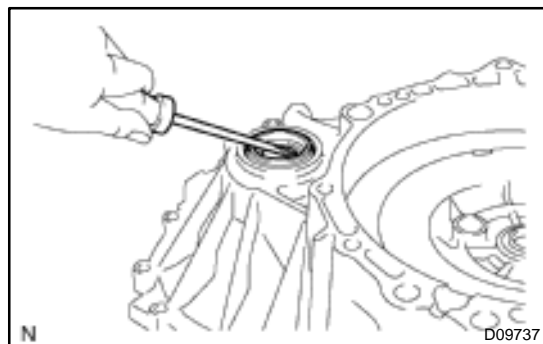**37. REMOVE DIFFERENTIAL OIL SEAL RH (MG1 side)**

Using a screwdriver, drive out the differential oil seal RH.

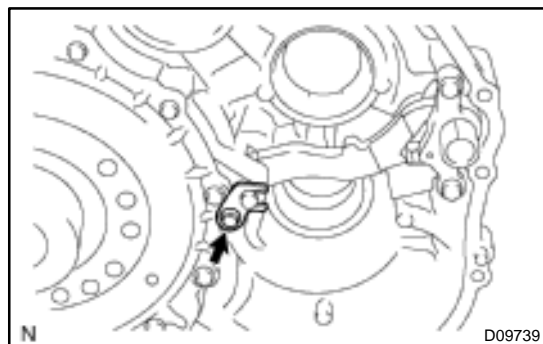
38. TURN MG1 ASSEMBLY UPSIDE DOWN**39. REMOVE PARKING LOCK PAWL**

(a) Remove the bolt and the lock clamp.

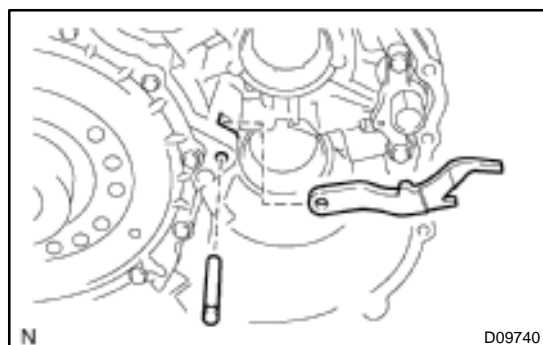


(b) Remove the parking lock pawl shaft.


(c) Remove the parking lock pawl.

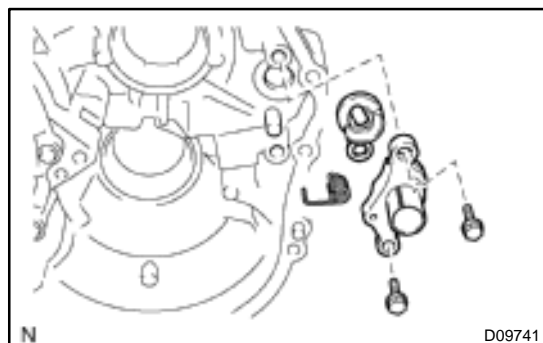**40. REMOVE PARKING LOCK SLEEVE**

(a) Remove the 2 bolts, sleeve bracket, torsion spring and parking lock sleeve.

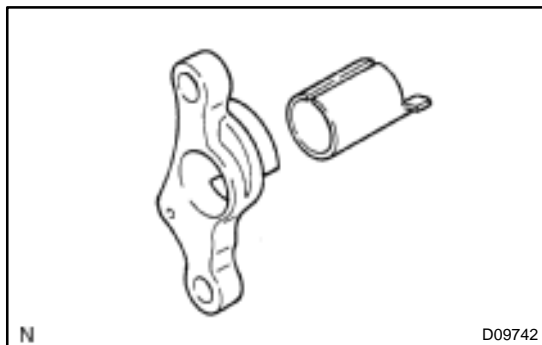


- (b) Remove the cam guide sleeve from the sleeve bracket.

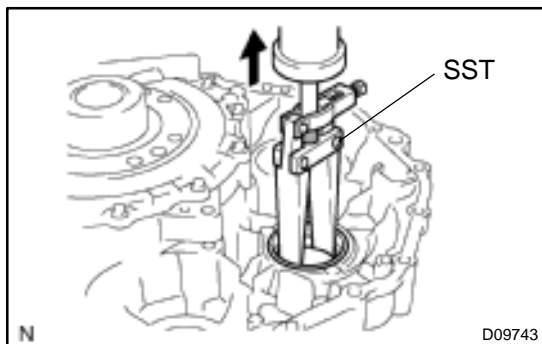

41. REMOVE COUNTER DRIVEN GEAR SIDE BEARING OUTER RACE RH (MG1 side)

Using SST, drive out the counter driven gear side bearing outer race RH.


SST 09308-00010

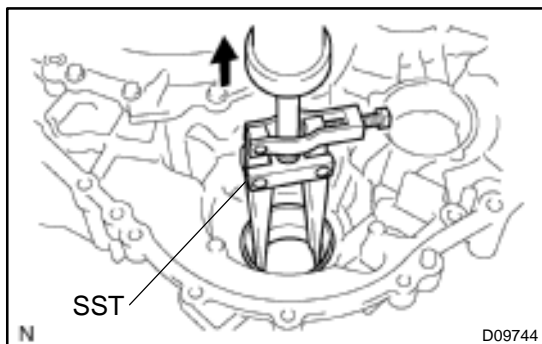

42. REMOVE DIFFERENTIAL SIDE BEARING OUTER RACE RH (MG1 side)


Using SST, drive out the differential side bearing outer race RH.

SST 09308-00010

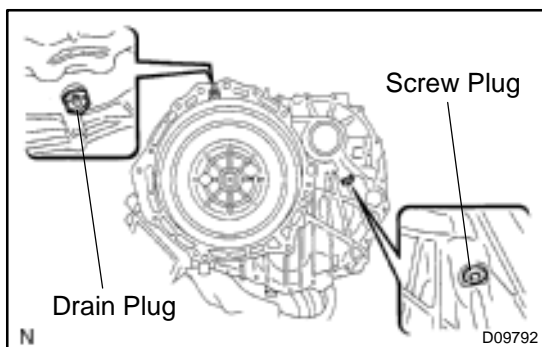

43. REMOVE DRAIN PLUG AND SCREW PLUG (MG1 side)

- (a) Remove the screw plug from the MG1 assembly with a hexagon wrench.
- (b) Remove the drain plug and the gasket.

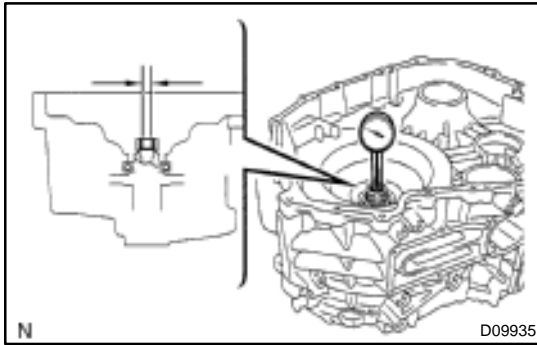

REASSEMBLY

1. INSPECT ROTOR BUSH OF MG2 ASSEMBLY

Using a dial indicator, measure the inside diameter of the rotor bush.


Standard diameter:

20.025 – 20.046 mm (0.78838 – 0.78921 in.)


Maximum diameter:

20.096 mm (0.79118 in.)

If the inside diameter exceeds the limit, replace the MG2 assembly.

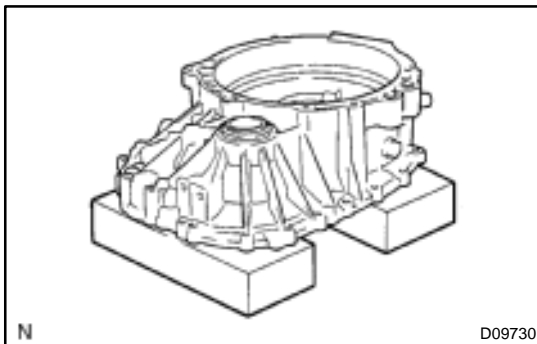

2. PLACE WOOD BLOCK UNDER MG1 ASSEMBLY TO STABILIZE

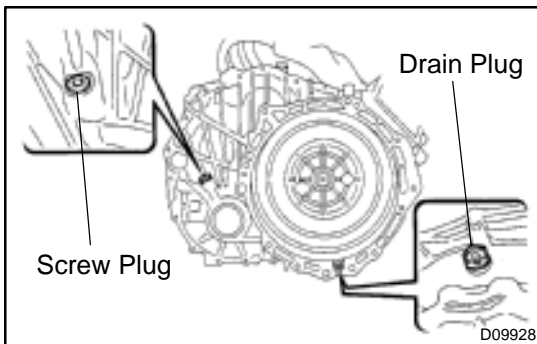

3. INSTALL DRAIN PLUG AND SCREW PLUG (MG1 side)

- (a) Apply liquid sealer to the screw plug and install it to the MG1 assembly with a hexagon wrench.


Sealant:

Part No. 08833-00080, TREE BOND 1344, LOCTITE 242 or equivalent

Torque: 12.7 N·m (130 kgf·cm, 9 ft·lbf)

- (b) Install a new gasket and the drain plug.


Torque: 39 N·m (400 kgf·cm, 29 ft·lbf)

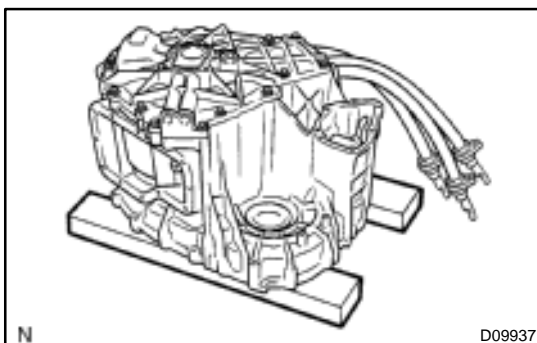

4. PLACE WOOD BLOCK UNDER MG2 ASSEMBLY

NOTICE:

Be careful not to bend the parking lock rod.

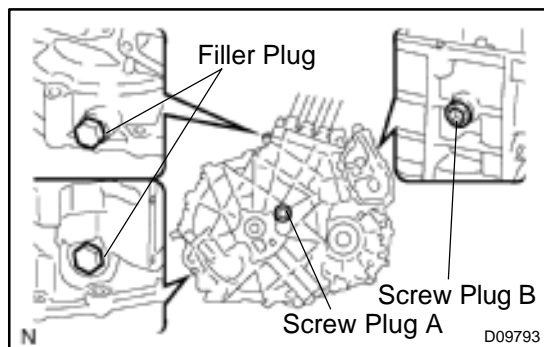

5. INSTALL FILLER PLUG AND SCREW PLUG (MG2 side)

- (a) Apply liquid sealer to the 2 screw plugs and install them to the MG2 assembly with a hexagon wrench.

Sealant:

A: Part No. 08833-00070, THREE BOND 1324 or equivalent


B: Part No. 08833-00080, THREE BOND 1344, LOCTITE 242 or equivalent

Torque: 24.5 N·m (250 kgf·cm, 18 ft·lbf)

NOTICE:

Be careful not to bend the parking lock rod.

- (b) Install 2 new gaskets and the 2 filler plugs.
Torque: 39 N·m (400 kgf·cm, 29 ft·lbf)

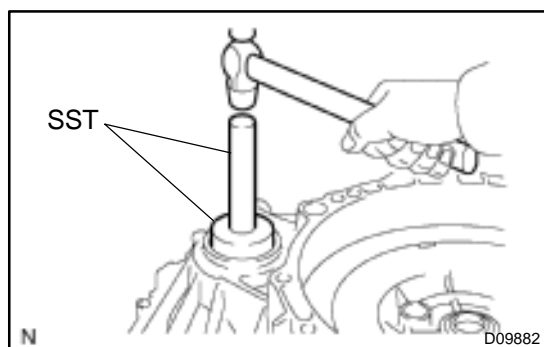


6. INSTALL DIFFERENTIAL OIL SEAL RH (MG1 side)

- (a) Using SST and a hammer, install a new oil seal.
SST 09710-20011 (09710-06071), 09950-70010 (09951-07100)

Oil seal depth: 2.7 ± 0.5 mm (0.106 ± 0.020 in.)

- (b) Coat the lip of the oil seal with MP grease.

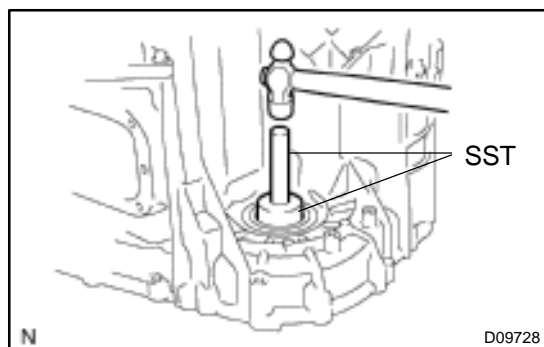


7. INSTALL DIFFERENTIAL OIL SEAL LH (MG2 side)

- (a) Using SST and a hammer, install a new oil seal LH.
SST 09710-20011 (09710-06071), 09950-70010 (09951-07100)


Oil seal depth: 2.7 ± 0.5 mm (0.106 ± 0.020 in.)

- (b) Coat the lip of the oil seal with MP grease.

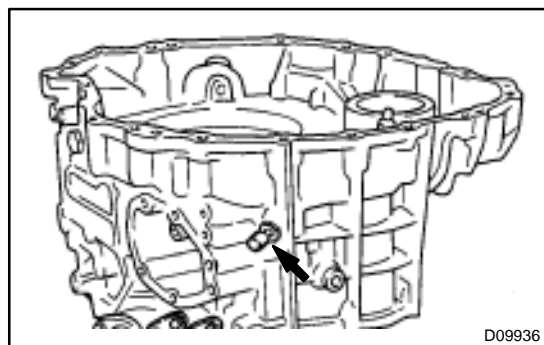

8. INSTALL BREATHER PLUG

Torque: 11.3 N·m (111 kgf·cm, 8 ft·lbf)

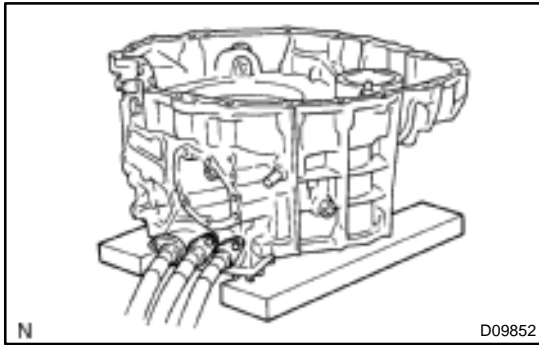

9. INSTALL OUTER RACE AND SHIM


HINT:

If there is some deformation or scratch to the outer race and shim, replace each of them by a new one.

- (a) Place a wood block under the MG2 assembly to stabilize.

NOTICE:

- **Set the MG2 assembly horizontally.**
- **Unreasonable force should not be applied to the high-voltage cable.**

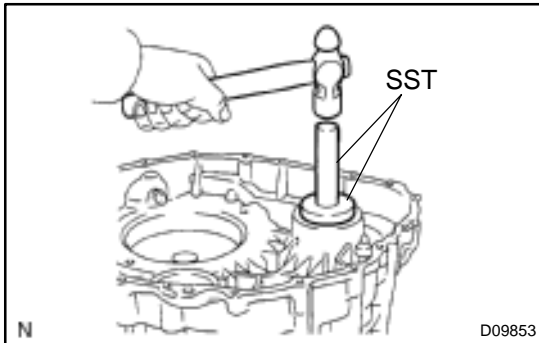


- (b) MG2 side:

Using SST and a hammer, install the outer race of differential side bearing LH and shim.

SST 09950-60020 (09951-00680), 09950-70010 (09951-07100)

HINT:

If replacing the shim, install a new shim which has the same thickness with the removed.

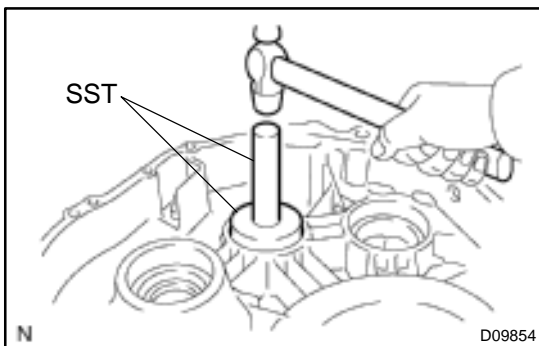


- (c) MG2 side:

Using SST and a hammer, install the tapered roller bearing outer race LH of the counter driven gear and shim.

SST 09950-60020 (09951-00680), 09950-70010 (09951-07100)

HINT:


If replacing the shim, install a new shim which has the same thickness with the removed.

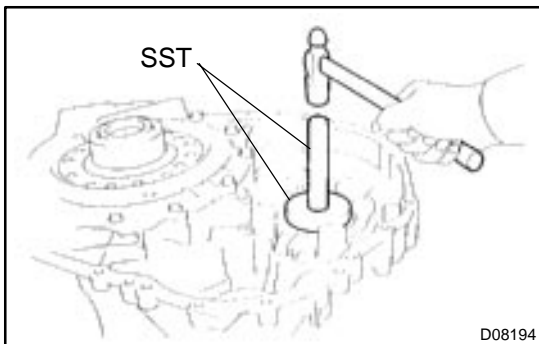

- (d) MG1 side:

Using SST and a hammer, install the side bearing outer race RH of the differential.


SST 09950-60020 (09951-00680), 09950-70010 (09951-07100)

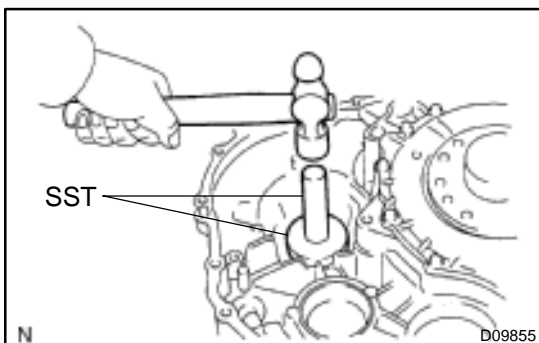

- (e) MG1 side:

Using SST and a hammer, install the tapered roller bearing outer race RH of the counter driven gear.

SST 09950-60020 (09951-00680), 09950-70010 (09951-07100)

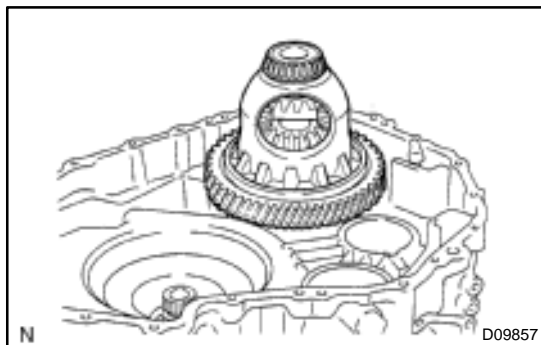


10. INSTALL DIFFERENTIAL TO MG2 ASSEMBLY

(a) Install the differential assembly to the MG2 assembly.

HINT:

Apply ATF to the side bearing.

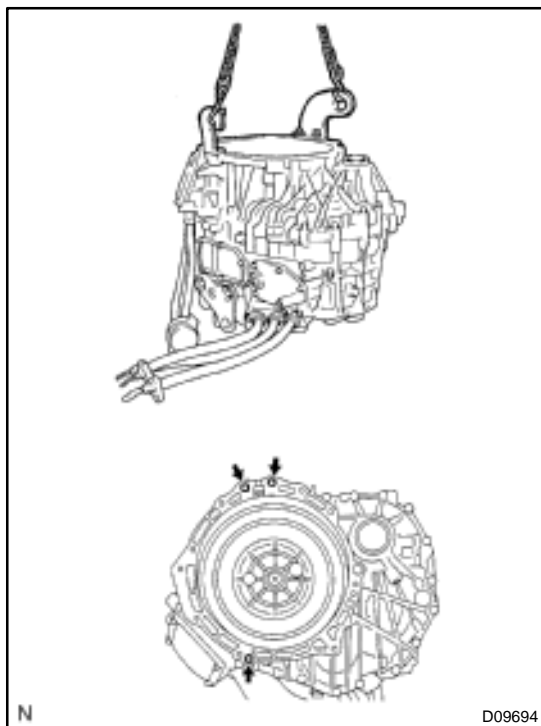

(b) Install the engine hanger onto the MG1 side as shown in the illustration, and lift it up by a chain device.

Engine hanger part No.:

12281 – 67070, S1228 – 11781

Bolt part No.:


91642 – 81045

91642 – 81265 2 pieces

Nut part No.:


90178 – 10001

90179 – 12147 2 pieces

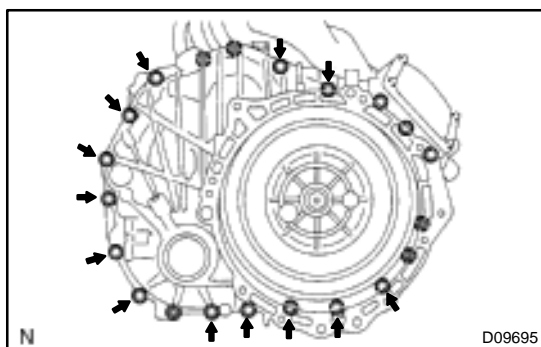


(c) Install the 13 bolts and MG1 assembly to the MG2 assembly.

Torque: 25 N·m (250 kgf·cm, 18 ft·lbf)

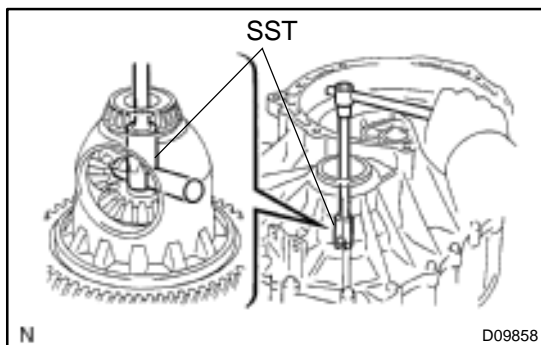

(d) Using SST, rotate the differential case assembly in both directions to make it fit.

SST 09564-32011

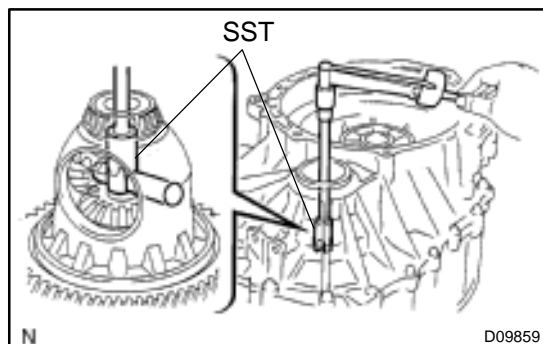

- (e) Using SST and a small torque wrench, measure the differential preload.

SST 09564-32011

Preload (Starting torque):

New bearing

0.98 – 1.57 N·m

(9.99 – 16.01 kgf·cm, 8.67 – 13.90 in.-lbf)

Reused bearing

0.49 – 0.78 N·m

(5.00 – 7.95 kgf·cm, 4.34 – 6.90 in.-lbf)

Preload (Turning torque):

0.78 – 1.37 N·m (60 rpm)

(7.95 – 13.97 kgf·cm, 6.90 – 12.13 in.-lbf)

If the preload is not within the specified range, replace the shim of the differential outer race LH.

Shim thickness:


Mark	Thickness mm (in.)	Mark	Thickness mm (in.)
1	1.80 (0.0709)	61	2.14 (0.0843)
2	1.83 (0.0720)	62	2.16 (0.0850)
3	1.86 (0.0732)	63	2.18 (0.0858)
4	1.89 (0.0744)	64	2.20 (0.0866)
50	1.92 (0.0756)	65	2.22 (0.0874)
51	1.94 (0.0764)	66	2.24 (0.0882)
52	1.96 (0.0772)	67	2.26 (0.0890)
53	1.98 (0.0780)	68	2.28 (0.0898)
54	2.00 (0.0787)	69	2.30 (0.0906)
55	2.02 (0.0795)	70	2.32 (0.0913)
56	2.04 (0.0803)	19	2.34 (0.0921)
57	2.06 (0.0811)	20	2.37 (0.0933)
58	2.08 (0.0819)	–	2.40 (0.0945)
59	2.10 (0.0827)	22	2.43 (0.0957)
60	2.12 (0.0835)	23	2.46 (0.0969)

HINT:


As a rank of shim thickness is increased (0.020 mm), the preload of approx. 0.23 N·m (2.4 kgf·cm, 2.1 in.-lbf) is increased accordingly.

11. INSTALL COUNTER DRIVEN GEAR TO MG2 ASSEMBLY

- (a) Remove the 13 bolts, separate the MG1 assembly and the MG2 assembly.

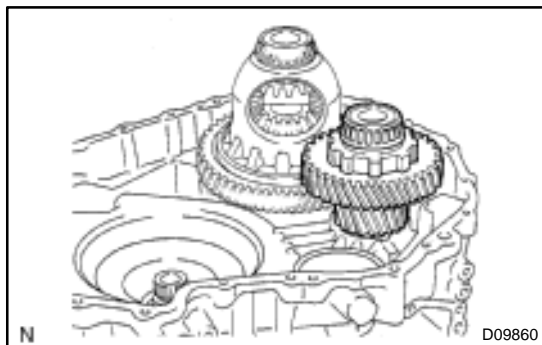

- (b) Install the counter driven gear to the MG2 assembly.
HINT:
Apply ATF to the side bearing.

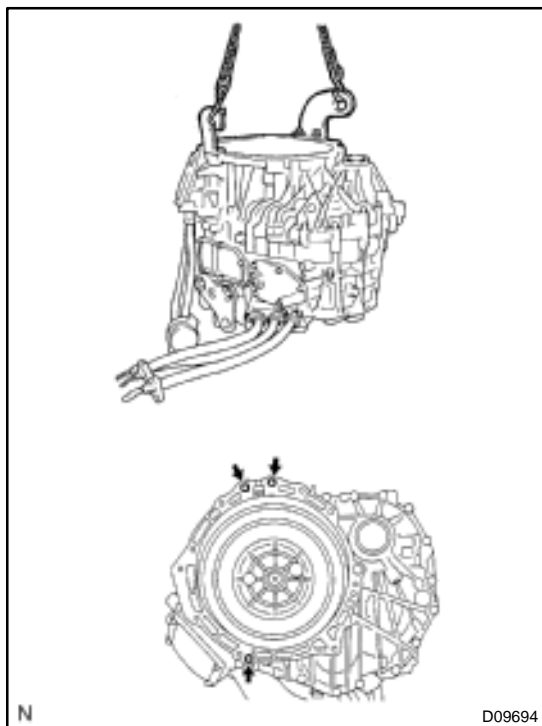

- (c) Install the engine hanger onto the MG1 side as shown in the illustration, and lift it up by a chain device.

Engine hanger part No.:

12281 – 67070, S1228 – 11781

Bolt part No.:


91642 – 81045

91642 – 81265 2 pieces

Nut part No.:


90178 – 10001

90179 – 12147 2 pieces

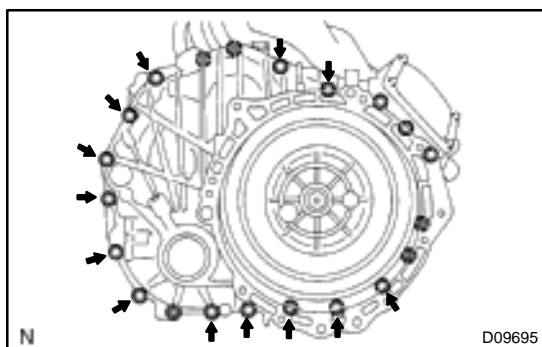


- (d) Install the MG1 assembly to the MG2 assembly with the 13 bolts.

Torque: 25 N·m (250 kgf-cm, 18 ft-lbf)

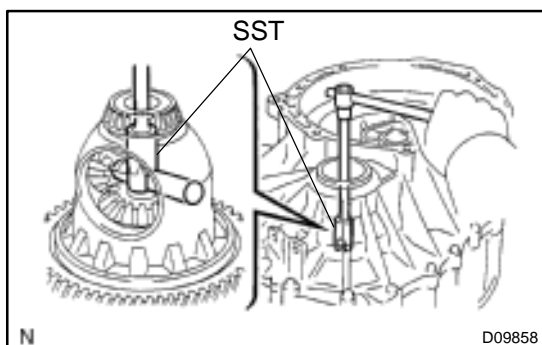

- (e) Using SST, rotate the differential case assembly in both directions to make it fit.

SST 09564-32011

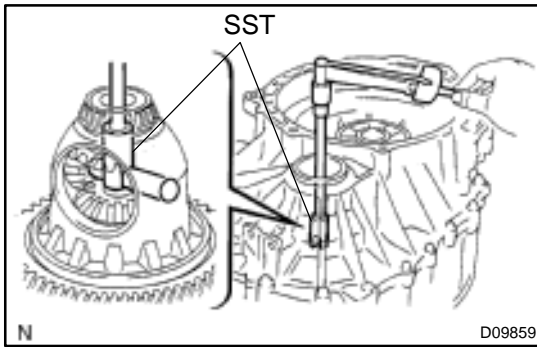

- (f) Using SST and a small torque wrench, measure the counter driven gear preload.

SST 09564-32011

Preload (Starting torque):

New bearing

3.81 – 6.10 N·m

(38.85 – 62.20 kgf·cm, 33.72 – 53.99 in.-lbf)

Reused bearing

1.91 – 3.03 N·m

(19.48 – 30.90 kgf·cm, 16.91 – 26.82 in.-lbf)

Preload (Turning torque):

3.29 – 6.66 N·m (60 rpm)

(33.55 – 67.91 kgf·cm, 29.12 – 58.95 in.-lbf)

If the preload is not within the specified range, replace the shim of the counter driven gear LH.

Shim thickness:

Mark	Thickness mm (in.)	Mark	Thickness mm (in.)
1	1.25 (0.0492)	62	1.58 (0.0622)
2	1.28 (0.0504)	63	1.60 (0.0630)
3	1.31 (0.0516)	64	1.62 (0.0638)
50	1.34 (0.0528)	65	1.64 (0.0646)
51	1.36 (0.0535)	66	1.66 (0.0654)
52	1.38 (0.0543)	67	1.68 (0.0661)
53	1.40 (0.0551)	68	1.70 (0.0669)
54	1.42 (0.0559)	69	1.72 (0.0677)
55	1.44 (0.0567)	70	1.74 (0.0685)
56	1.46 (0.0575)	18	1.76 (0.0693)
57	1.48 (0.0583)	19	1.79 (0.0705)
58	1.50 (0.0591)	20	1.82 (0.0717)
59	1.52 (0.0598)	21	1.85 (0.0728)
60	1.54 (0.0606)	22	1.88 (0.0740)
61	1.56 (0.0614)	–	–


HINT:


As a rank of shim thickness is increased (0.020 mm) the preload of approx. 1.1 N·m (11.2 kgf·cm, 9.7 in.-lbf) is increased accordingly.

12. REMOVE 13 BOLTS, SEPARATE MG1 ASSEMBLY AND MG2 ASSEMBLY


13. ADJUST SHIM

- (a) Install the 2 bearing races and needle roller bearing to the MG1 assembly.

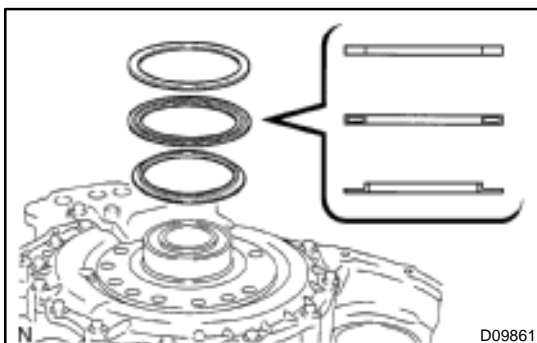


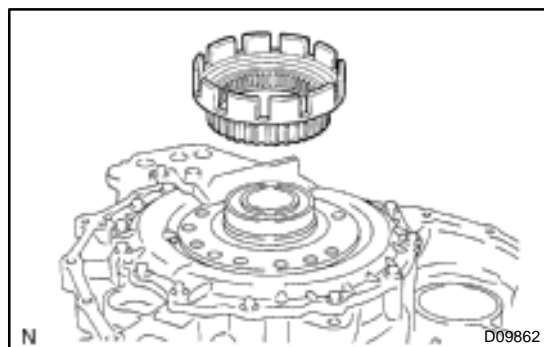


(b) Install the drive sprocket assembly to the MG1 assembly.

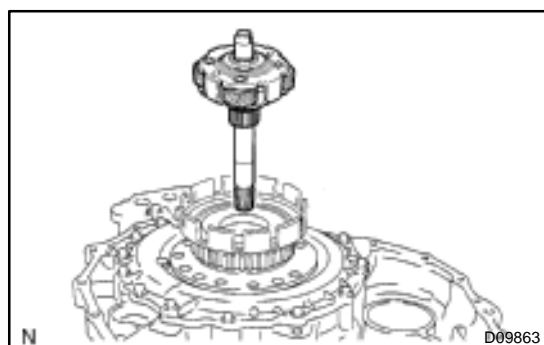


(c) Install the input shaft assembly.

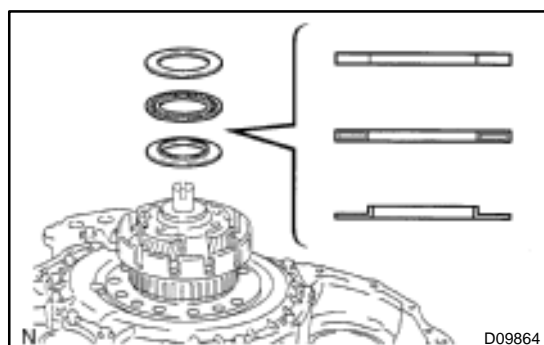



(d) Install the 2 bearing races and needle roller bearing.

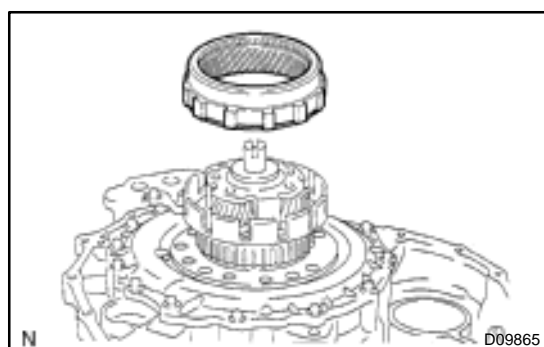

(e) Install the planetary ring gear.

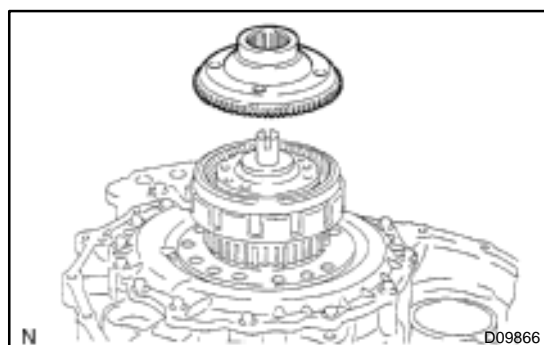

(f) Install the ring gear flange.

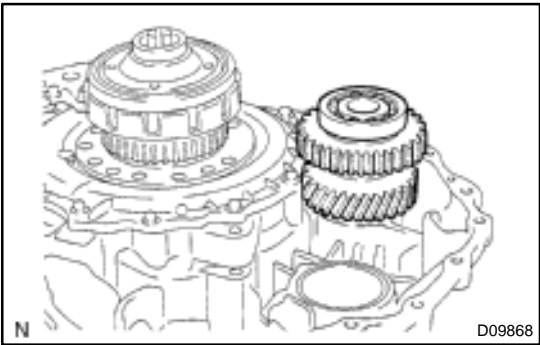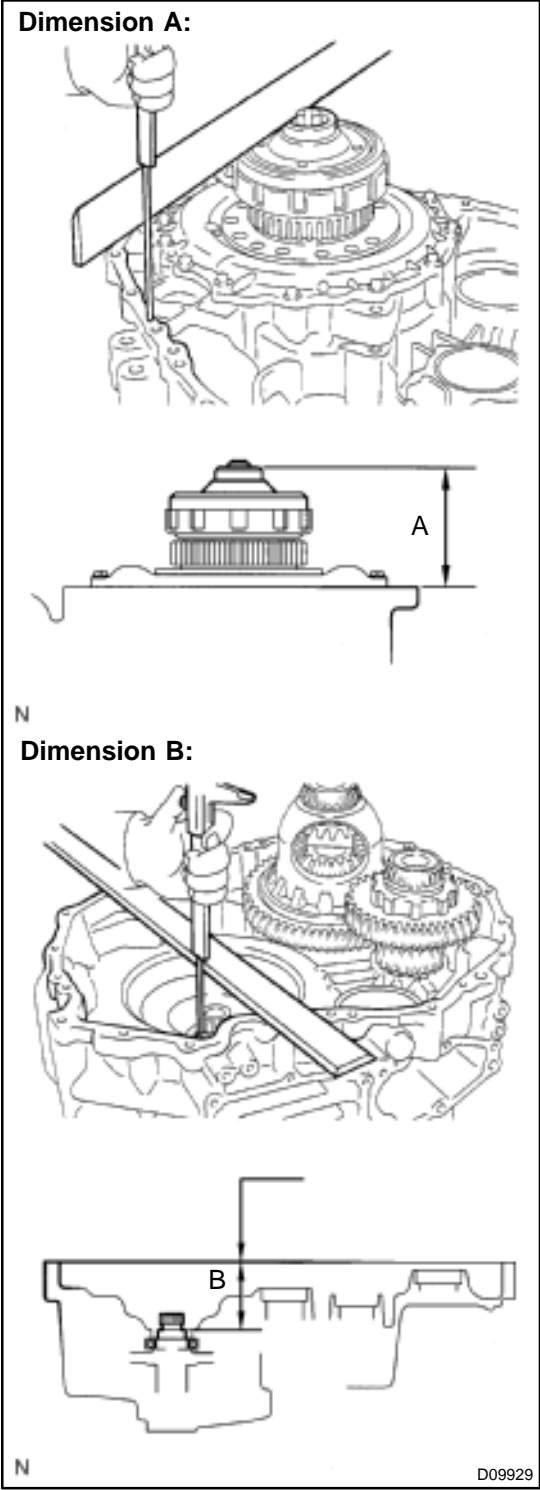



- (g) Using a straight edge and vernier calipers, measure the dimension "A" and "B" correctly.
- (h) Select a shim that will ensure that the value is within the specification.

Shim thickness:

Dimension "B" – Dimension "A"

Mark	Thickness mm (in.)	Mark	Thickness mm (in.)
1	1.00 (0.0394)	7	2.20 (0.0866)
2	1.20 (0.0472)	8	2.40 (0.0945)
3	1.40 (0.0551)	9	2.60 (0.1024)
4	1.60 (0.0630)	10	2.80 (0.1102)
5	1.80 (0.0709)	11	3.00 (0.1181)
6	2.00 (0.0787)	12	3.20 (0.1260)

- (i) Install the counter drive gear assembly to the MG1 assembly.

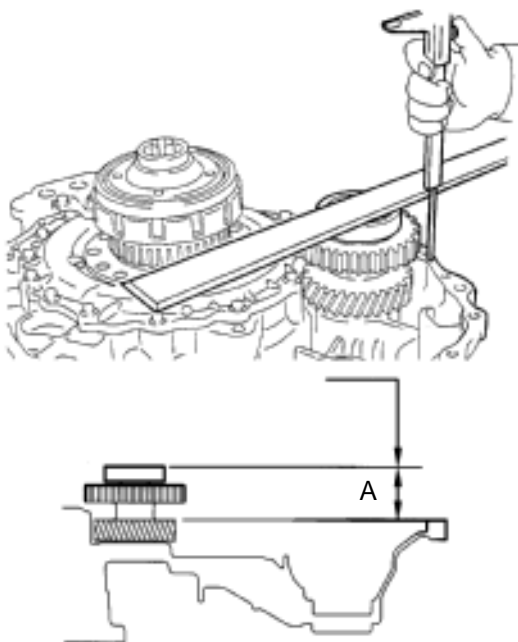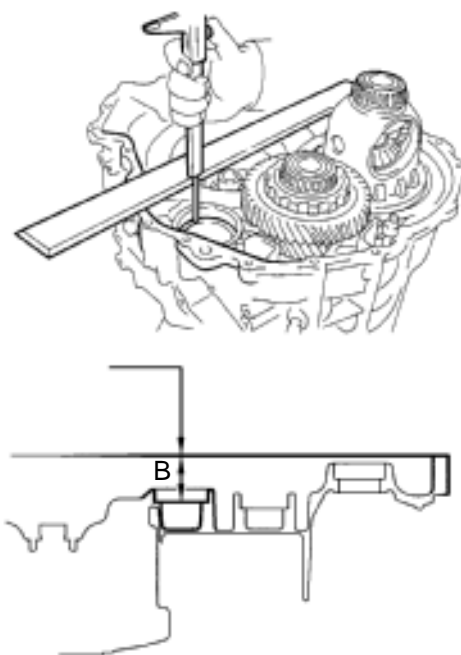Dimension A:**Dimension B:**


N

D09930

- (j) Using a straight edge and vernier calipers, measure the dimension "A" and "B" correctly.
- (k) Select a shim thickness is surely within the specified range.

Shim thickness:**Dimension "B" – Dimension "A"**

Mark	Thickness mm (in.)	Mark	Thickness mm (in.)
A	1.35 (0.0531)	G	1.65 (0.0650)
B	1.40 (0.0551)	H	1.70 (0.0669)
C	1.45 (0.0571)	J	1.75 (0.0689)
D	1.50 (0.0591)	K	1.80 (0.0709)
E	1.55 (0.0610)	L	1.85 (0.0728)
F	1.60 (0.0630)	–	–

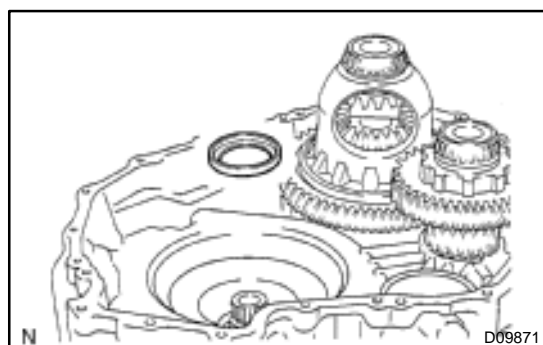


N


D09871

14. INSTALL INPUT SHAFT ASSEMBLY TO MG2 ASSEMBLY


- (a) Install the shim selected in step 13 (h).

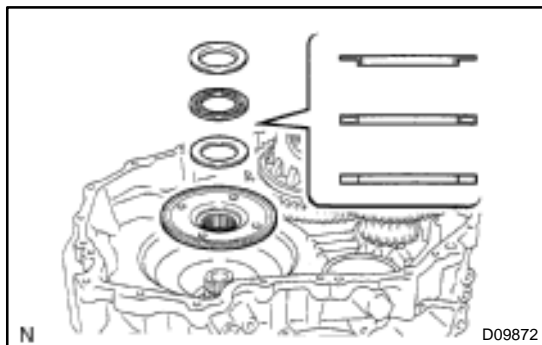


- (b) Install the ring gear flange.
 - (c) Install the 2 races and thrust bearing.
- HINT:**
Apply ATF to the thrust bearing.

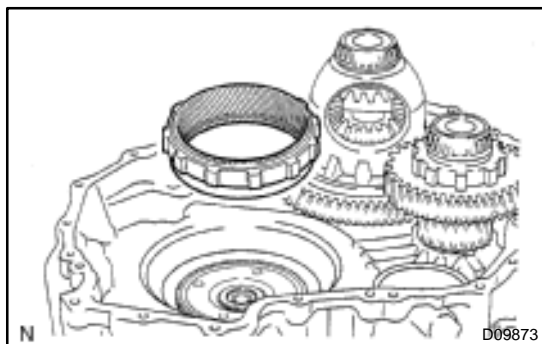

- (d) Install the planetary ring gear.

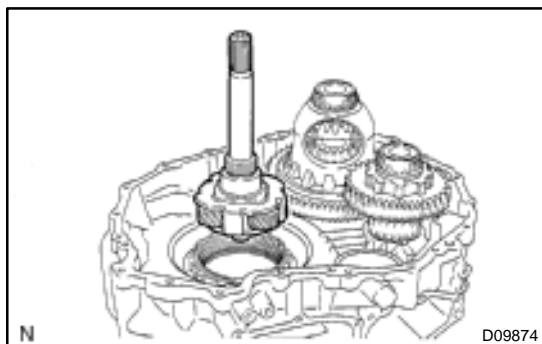


- (e) Install the input shaft assembly.

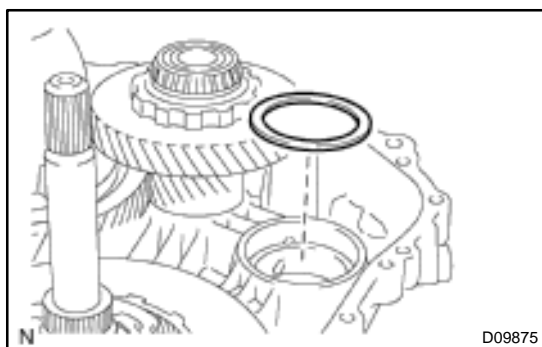

15. INSTALL COUNTER DRIVE GEAR ASSEMBLY, CHAIN AND DRIVE SPROCKET ASSEMBLY


- (a) Install the shim selected in step 13 (k).

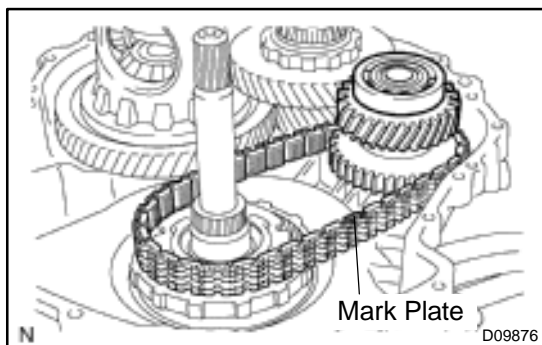


- (b) Install the counter drive gear assembly and chain at the same time.

NOTICE:


Install the chain with the mark plate facing up.

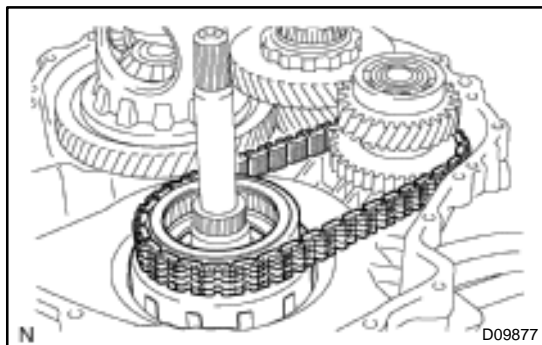

- (c) Put the chain on the drive sprocket and install them.
HINT:
Apply ATF to the drive sprocket needle roller bearing.

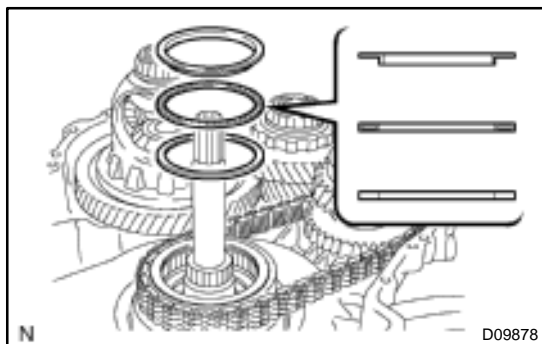


- (d) Install the 2 bearing races and needle roller bearing.
HINT:
Apply ATF to the thrust bearing.

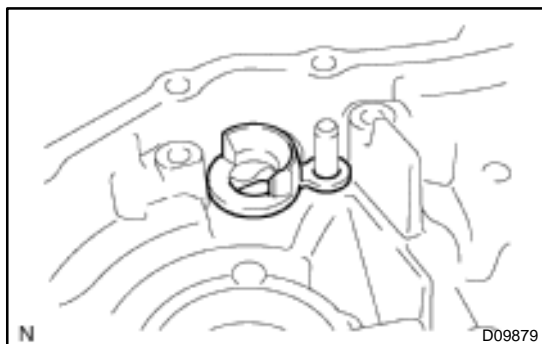


16. INSTALL PARKING LOCK PAWL TO MG1 ASSEMBLY


- (a) Install the lock sleeve.

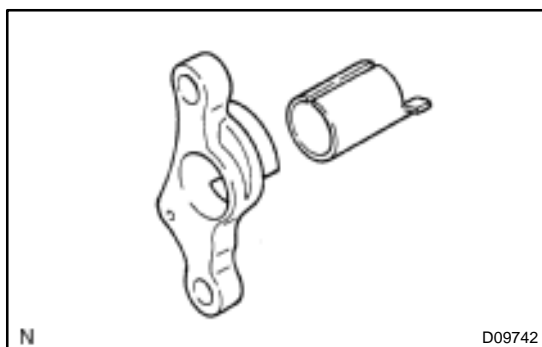


- (b) Install the cam guide sleeve to the sleeve bracket.

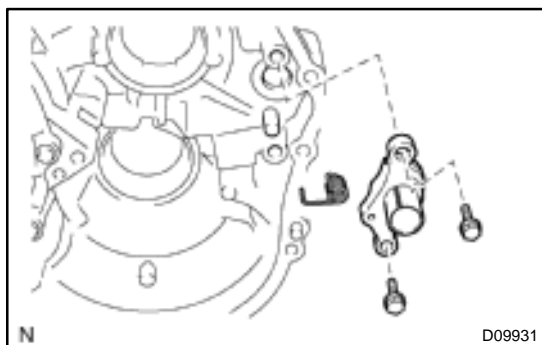


- (c) Install the cam guide sleeve, sleeve bracket, torsion spring and 2 bolts.
Torque: 13 N·m (130 kgf-cm, 9 ft-lbf)

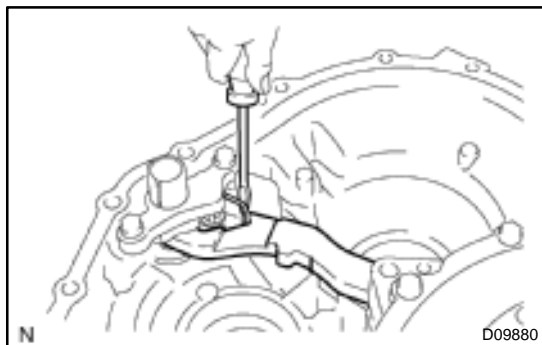

- (d) Install the parking lock pawl
- (e) Using a screw driver, fit the torsion spring into a cut-out of the parking lock pawl.

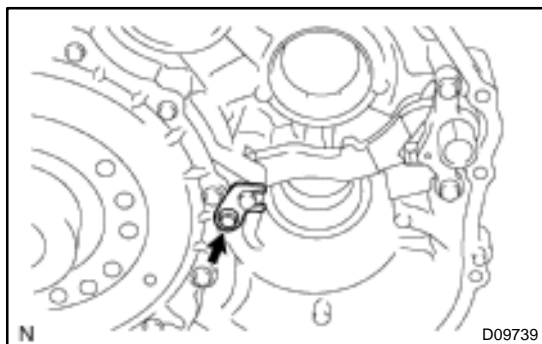


- (f) Install the parking lock pawl shaft, lock clamp and bolt.
Torque: 5.4 N·m (55 kgf·cm, 48 in.-lbf)

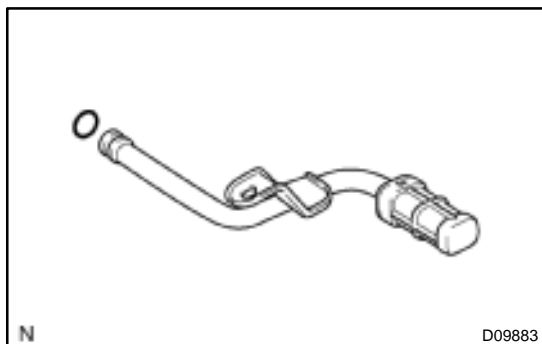


17. INSTALL OIL PAN (MG2 side)


- (a) Install a new O-ring to the oil strainer.

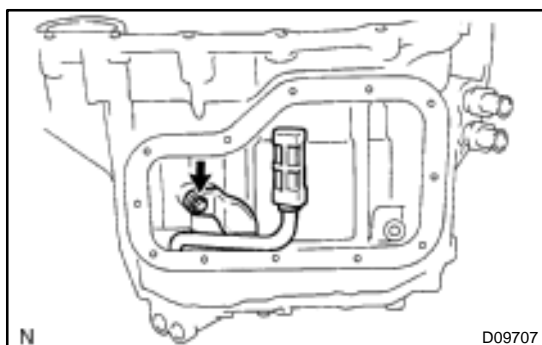


- (b) Install the bolt and oil strainer.
Torque: 5.5 N·m (56 kgf·cm, 49 in.-lbf)

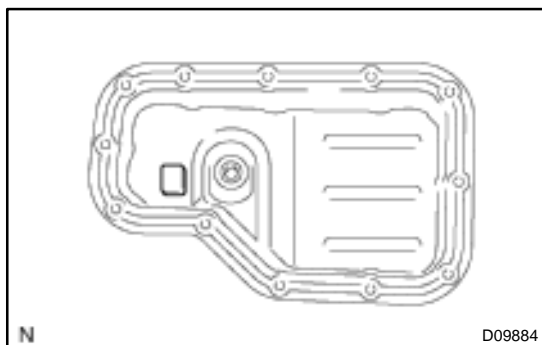

- (c) Install the magnet to the oil pan.

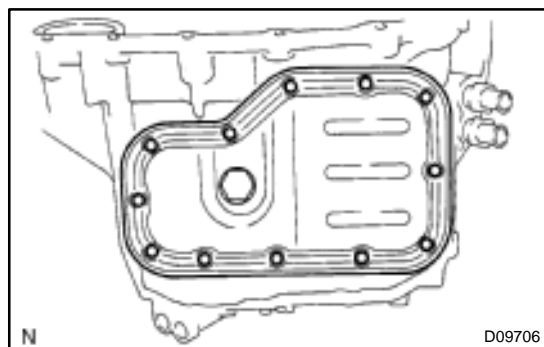


- (d) Apply liquid sealer to 2 or 3 threads of the bolt end.
Sealant:
Part No. 08833-00080, THREE BOND 2430, LOCTITE 204 or equivalent
- (e) Install a new gasket and the oil pan with the 12 bolts.
Torque: 7.6 N·m (77 kgf-cm, 67 in.-lbf)
- (f) Install a new gasket and drain plug.
Torque: 49 N·m (498 kgf-cm, 36 ft-lbf)

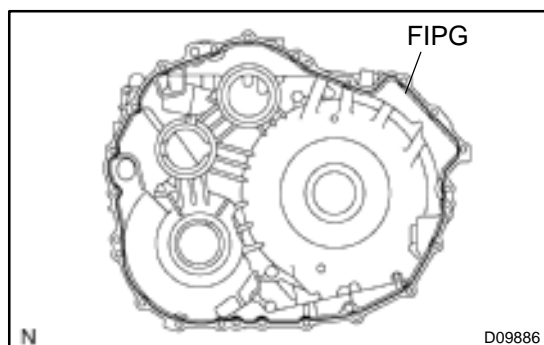


18. INSTALL MG1 ASSEMBLY TO MG2 ASSEMBLY

- (a) Apply FIPG to the MG2 assembly as shown in the illustration.
FIPG:
Part No. 08826 – 00090, THREE BOND 1281 or equivalent
- (b) Install the MG1 to the MG2 (See page [HT-26](#)).

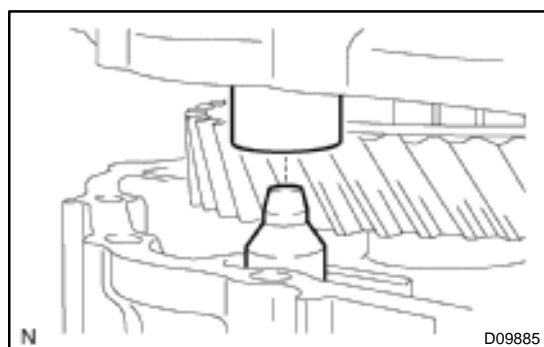


NOTICE:

When putting MG2 and MG1 together, assemble them so that the parking rod is inserted into the cam guide sleeve.

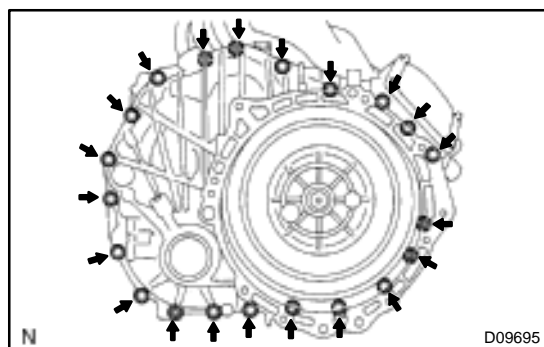

- (c) Apply liquid sealer to 2 or 3 threads of the bolt end.
Sealant:
Part No. 08833 – 00080, THREE BOND 1344, LOCTITE 242 or equivalent
- (d) Install the 21 bolts.
Torque: 25 N·m (250 kgf-cm, 18 ft-lbf)

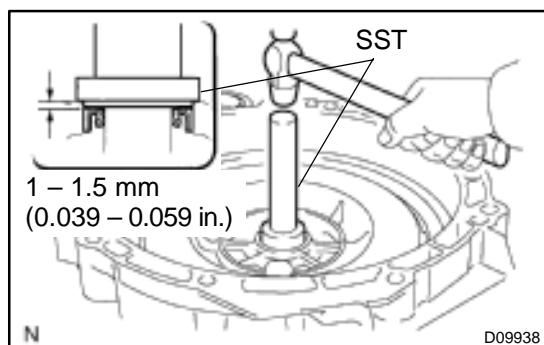


19. INSTALL OIL SEAL OF INPUT SHAFT (MG1 side)

- (a) Using SST and a hammer, install a new oil seal.
SST 09388-40010
Oil seal depth: 1 – 1.5 mm (0.039 – 0.059 in.)


HINT:

- Drive in the oil seal unit SST comes into contact with the case.
- (b) Coat the lip of the oil seal with MP grease.

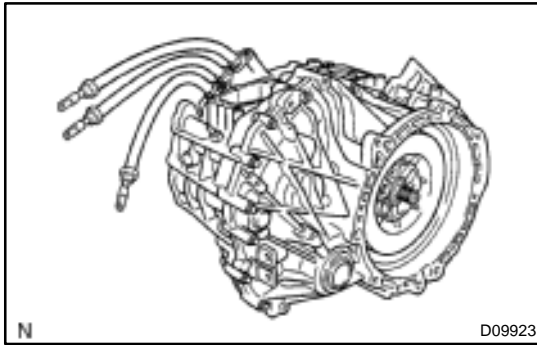


20. SET HYBRID TRANSAXLE ASSEMBLY

Set the hybrid transaxle assembly as shown in the illustration.

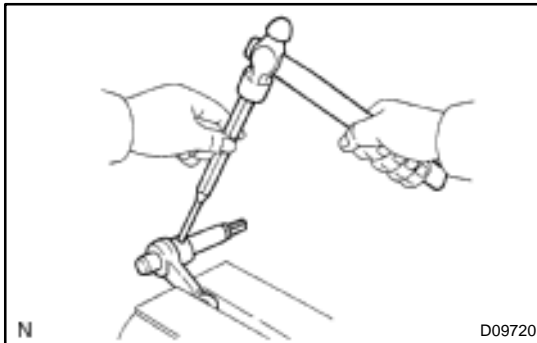


21. REASSEMBLE PARKING LOCK SHAFT ASSEMBLY

- (a) Install the parking lock lever No. 3 to the parking lock shaft.
- (b) Using a pin punch and a hammer, drive in the pin.

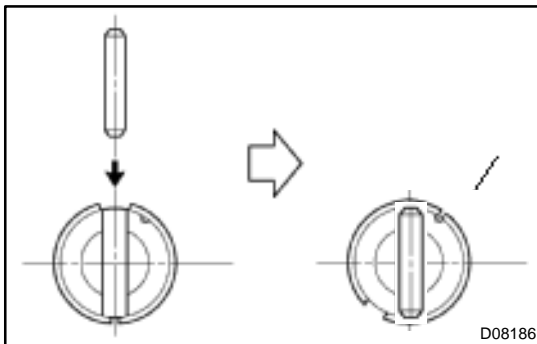


- (c) Turn the spacer and the lever shaft to align the small hole in the spacer with the staking position mark on the lever shaft.
- (d) Using a pin punch, stake the spacer through the small hole.
- (e) Check that the spacer does not turn.

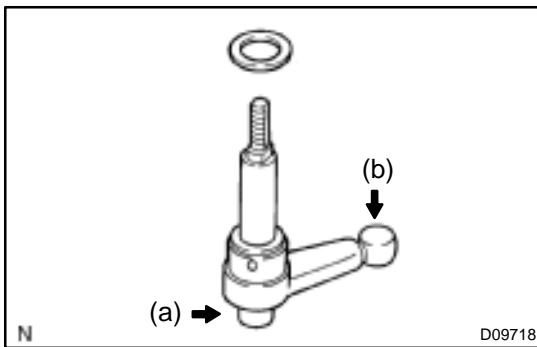


22. INSTALL PARKING LOCK SHAFT ASSEMBLY AND WASHER


- (a) Apply ATF to the parking lock shaft.
- (b) Apply MP grease to the parking lock lever No. 3.
- (c) Install the washer to the parking lock shaft assembly.

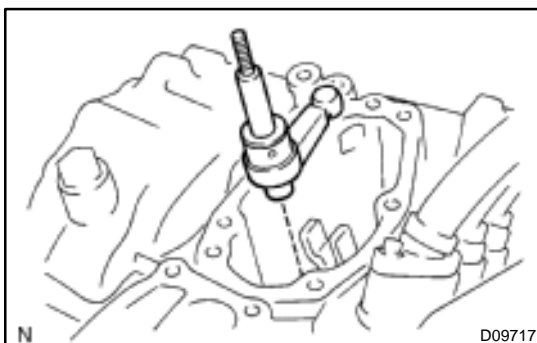

23. INSTALL PARKING LOCK SHAFT ASSEMBLY

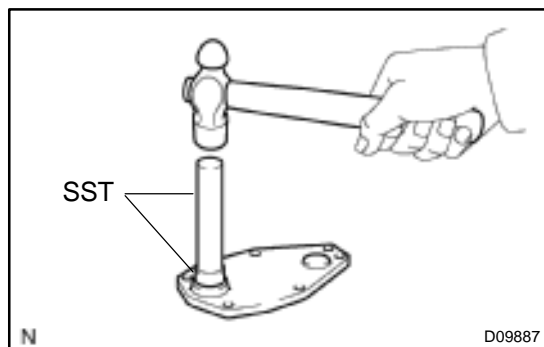

- (a) Using SST and a hammer, install a new oil seal to the parking shaft cover.
SST 09950-60010 (09951-00230), 09950-70010 (09951-07100)
- (b) Coat the lip of the oil seal with MP grease.
- (c) Remove any old packing (FIPG) material and be careful not to drop any oil on the contact surfaces of the parking shaft cover and MG2 case.
 - Using a razor blade and gasket scraper, remove all the old packing (FIPG) material from the gasket surfaces and sealing grooves.
 - Thoroughly clean all components to remove all the loose material.
 - Using a non-reusable solvent, clean both sealing surfaces.

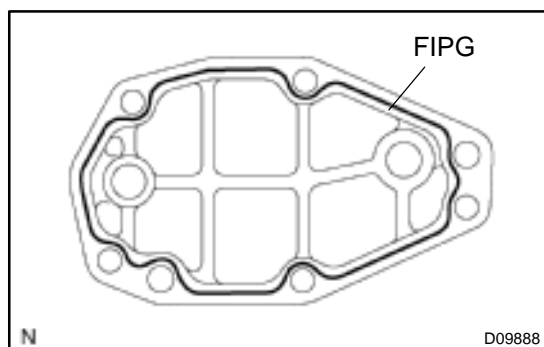


- (d) Apply FIPG to the parking shaft cover as shown in the illustration.

FIPG:

Part No. 08826 – 00090, THREE BOND 1281 or equivalent

- Install a nozzle that has been cut to a 1.5 mm (0.06 in.) opening.
- Parts must be assembled within 10 minutes after application. Otherwise the material must be removed and reapplied.
- Remove the nozzle from the tube and reinstall the cap.

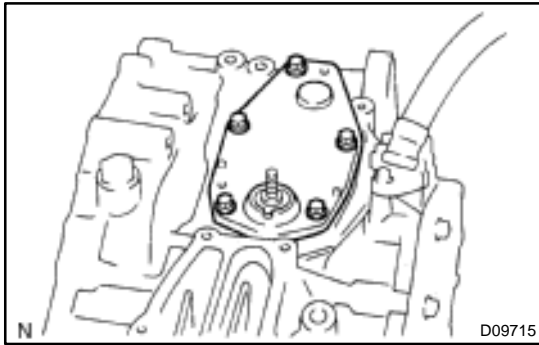

- (e) Install the 5 bolts and parking shaft cover.


Torque: 13 N·m (130 kgf-cm, 10 ft-lbf)

NOTICE:

When installing the cover, be careful not to damage the lip of the oil seal.

24. INSTALL MOTOR WATER JACKET COVER

- (a) Remove any old packing (FIPG) material and be careful not to drop any oil on the contact surfaces of the motor water jacket cover and MG2 case.
- Using a razor blade and gasket scraper, remove all the old packing (FIPG) material from the gasket surfaces and sealing grooves.
 - Thoroughly clean all components to remove all the loose material.
 - Using a non-reusable solvent, clean both sealing surfaces.

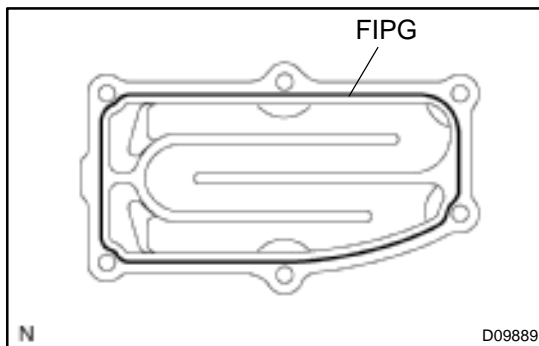


- (b) Apply FIPG to the motor water jacket cover as shown in the illustration.

FIPG:

Part No. 08826-00080 or equivalent

- Install a nozzle that has been cut to a 1.5 mm (0.06 in.) opening.
- Parts must be assembled within 10 minutes after application. Otherwise the material must be removed and reapplied.
- Remove the nozzle from the tube and reinstall the cap.

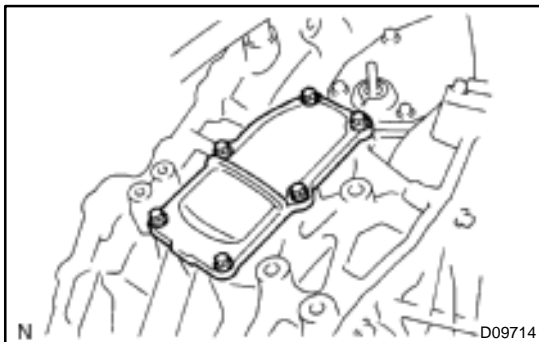


- (c) Apply liquid sealer to 2 or 3 threads of the bolt end.

Sealant:

Part No. 08833 – 00080, THREE BOND 1344, LOCTITE 242 or equivalent

- (d) Install the motor water jacket cover with the 6 bolts.
- Torque: 5.5 N·m (56 kgf-cm, 49 in.-lbf)**

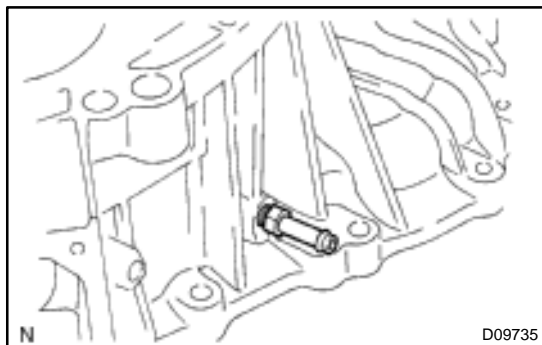**25. INSTALL HOUSING TUBE**


- (a) Apply liquid sealer to 2 or 3 threads of the housing tube end.

Sealant:

Part No. 08833 – 00080, THREE BOND 1344, LOCTITE 242 or equivalent

- (b) Install the housing tube.

Torque: 15 N·m (152 kgf-cm, 11 ft-lbf)

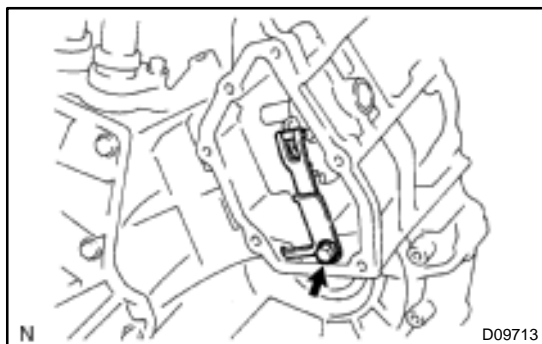
**26. INSTALL PARKING COVER**

- (a) Install the detent spring and detent spring cover with the bolt.

Torque: 10 N·m (100 kgf-cm, 7 ft-lbf)

- (b) Remove any old packing (FIPG) material and be careful not to drop any oil on the contact surfaces of the parking cover and MG2 case.

- Using a razor blade and gasket scraper, remove all the old packing (FIPG) material from the gasket surfaces and sealing grooves.
- Thoroughly clean all components to remove all the loose material.
- Using a non-reusable solvent, clean both sealing surfaces.

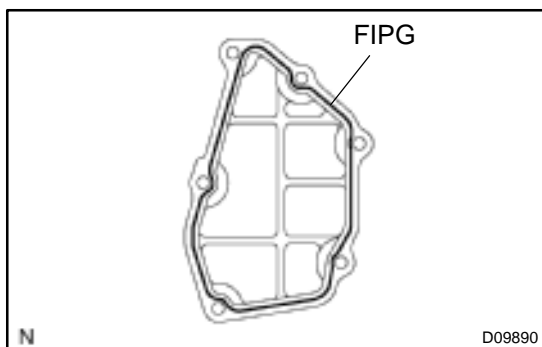


- (c) Apply seal packing to the parking cover as shown in the illustration.


FIPG:

Part No. 08826 – 00090, THREE BOND 1281 or equivalent

- Install a nozzle that has been cut to a 1.5 mm (0.06 in.) opening.
- Parts must be assembled within 10 minutes after application. Otherwise the material must be removed and reapplied.
- Remove the nozzle from the tube and reinstall the cap.

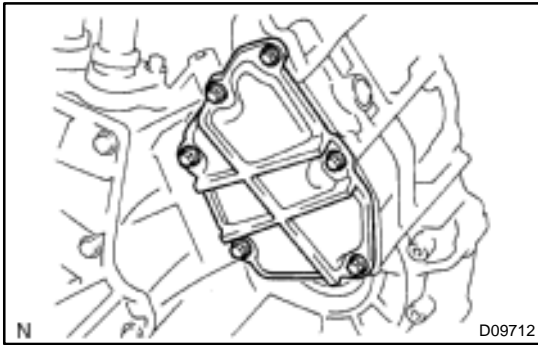


- (d) Install the parking cover with the 6 bolts.
Torque: 5.5 N·m (56 kgf·cm, 49 in.-lbf)

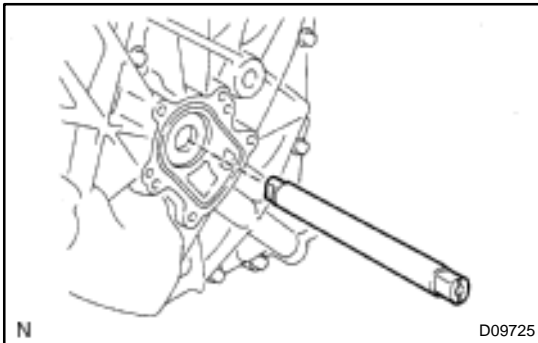


27. INSTALL OIL PUMP


- (a) Apply ATF to individual sliding parts.
 (b) Install the oil pump drive shaft.

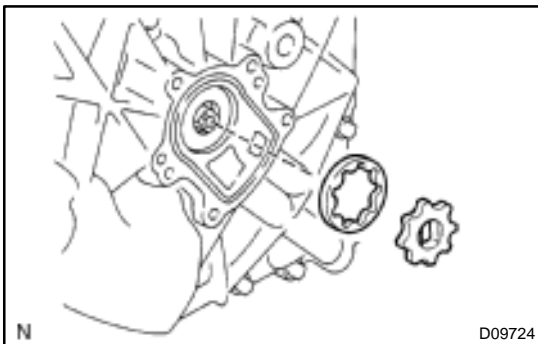

- (c) Install the oil pump driven rotor and drive rotor.

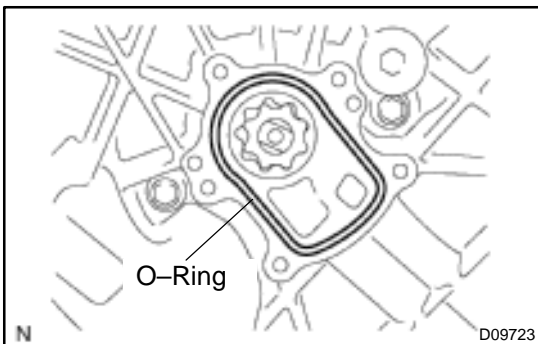


- (d) Install a new O-ring without twisting it..

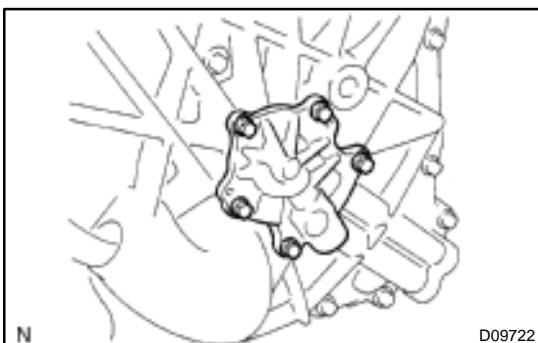

- (e) Apply liquid sealer to 2 or 3 threads of the bolt end.
Sealant:
Part No. 08833 – 00080, THREE BOND 1344, LOCTITE 242 or equivalent
 (f) Install the oil pump cover with the 5 bolts.
Torque: 5.5 N·m (56 kgf·cm, 49 in.-lbf)




- (g) Install a new O-ring to the plug.
 - (h) Install the plug.
- Torque: 7.35 N·m (75 kgf·cm, 65 in.-lbf)**

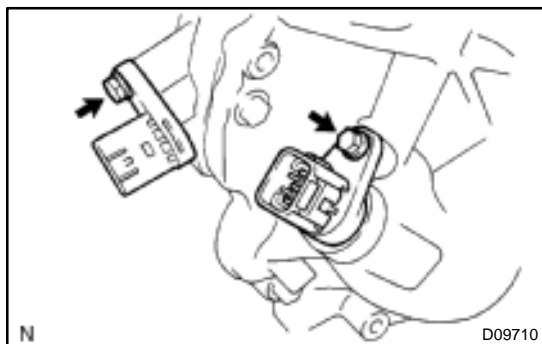

28. INSTALL WIRING HARNESS CONNECTOR (MG2 side)

Install the 2 wiring harness connectors with the 2 bolts.


Torque: 5.5 N·m (56 kgf·cm, 49 in.-lbf)

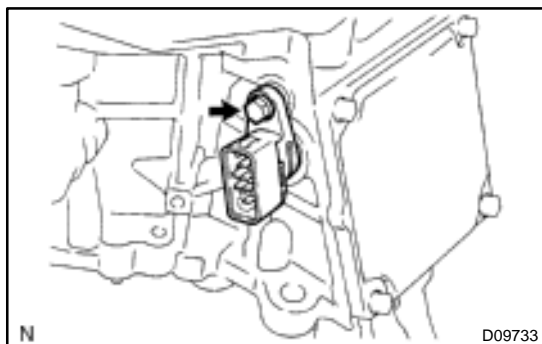

29. INSTALL WIRING HARNESS CONNECTOR (MG1 side)

Install the wiring harness connector with the bolt.

Torque: 5.5 N·m (56 kgf·cm, 49 in.-lbf)

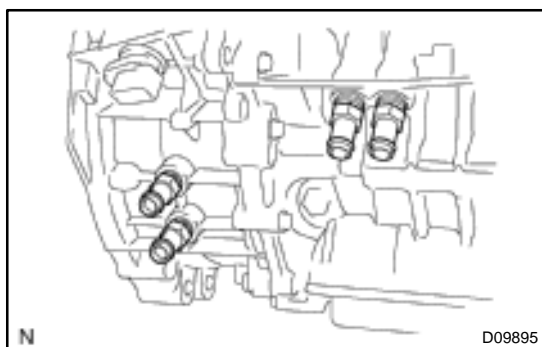

30. INSTALL 4 WATER JACKET UNIONS


- (a) Apply liquid sealer to 2 or 3 threads of the union end.

Sealant:

Part No. 08833 – 00080, THREE BOND 1344, LOCTITE 242 or equivalent

- (b) Install the 4 water jacket unions.


Torque: 50 N·m (510 kgf·cm, 37 ft.-lbf)

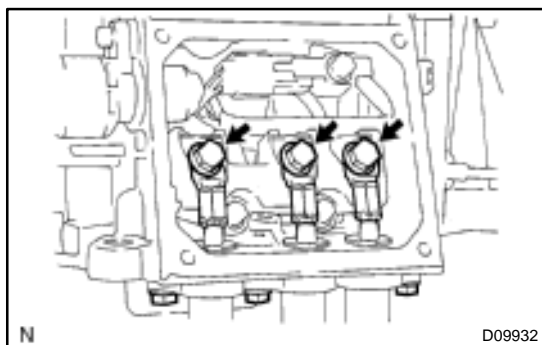


31. INSTALL HIGH-VOLTAGE CABLE

- (a) Install the high-voltage cable with the 3 bolts.

Torque: 18 N·m (183 kgf·cm, 13 ft.-lbf)

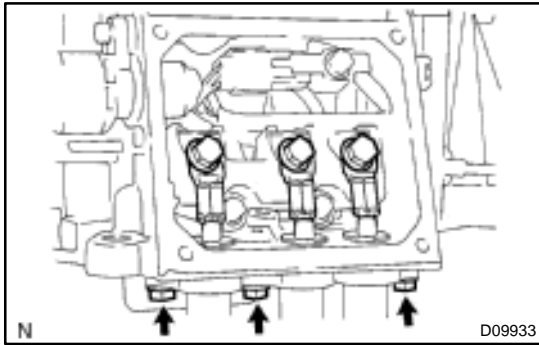

- (b) Apply liquid sealer to 2 or 3 threads of the bolt end.
Sealant:
Part No. 08833 – 00080, THREE BOND 1344, LOCTITE 242 or equivalent
- (c) Install the 3 bolts.
Torque: 5.5 N·m (56 kgf·cm, 49 in.-lbf)
- (d) Remove any old packing (FIPG) material and be careful not to drop any oil on the contact surfaces of the power cable cover and MG1 case.
- Using a razor blade and gasket scraper, remove all the old packing (FIPG) material from the gasket surfaces and sealing grooves.
 - Thoroughly clean all components to remove all the loose material.
 - Using a non-reusable solvent, clean both sealing surfaces.

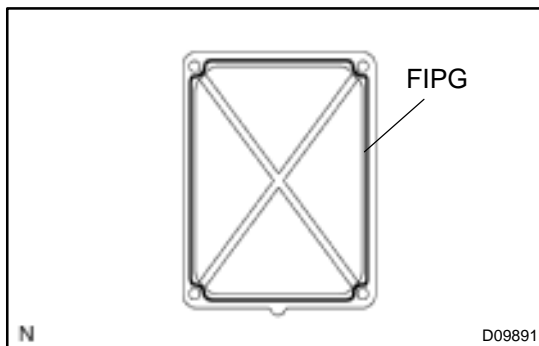


- (e) Apply FIPG to the power cable cover as shown in the illustration.


FIPG:

Part No. 08826 –00090, THREE BOND 1281 or equivalent

- Install the nozzle that has been cut to a 1.5 mm (0.06 in) opening.
- Parts must be assembled within 10 minutes after application. Otherwise the material must be removed and reapplied.
- Remove the nozzle from the tube and reinstall the cap.

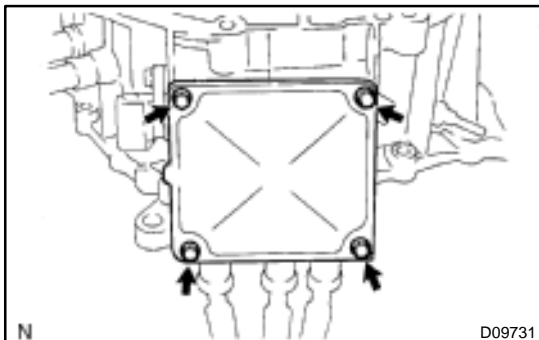

- (f) Install the power cable cover with the 4 bolts.
Torque: 4.8 N·m (48 kgf·cm, 42 in.-lbf)

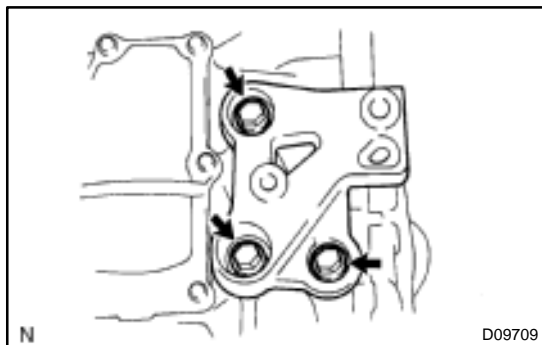**32. INSTALL MOUNTING BRACKET**

- (a) Apply liquid sealer to 2 or 3 threads of the bolt end.

Sealant:

Part No. 08833 – 00070, THREE BOND 1324 or equivalent


- (b) Install the mounting bracket with the 3 bolts.

Torque: 52 N·m (530 kgf-cm, 38 ft-lbf)

INSPECTION

1. INSPECT SHIFT POSITION SENSOR


- (a) Remove the steering column upper cover and lower cover.
- (b) Disconnect the shift position sensor connector.

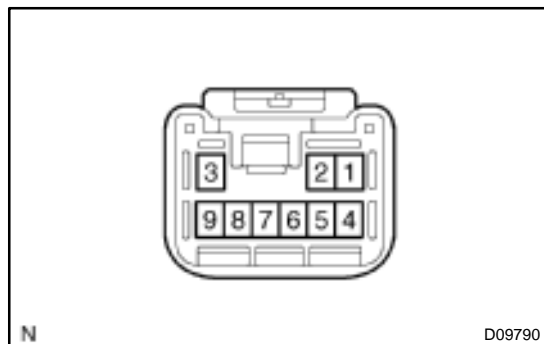

- (c) Check continuity between terminals shown below when the shift lever is moved to each position

Shift Position	Terminal No. to continuity	Terminal No. to continuity
P	1 – 2	3 – 8 – 9
R	1 – 4	3 – 8 – 9
N	1 – 5	3 – 8 – 9
D	1 – 6	3 – 8 – 9
B	1 – 7	3 – 8 – 9

- (d) Connect the shift position sensor connector.
- (e) Install the steering column upper cover and lower cover.

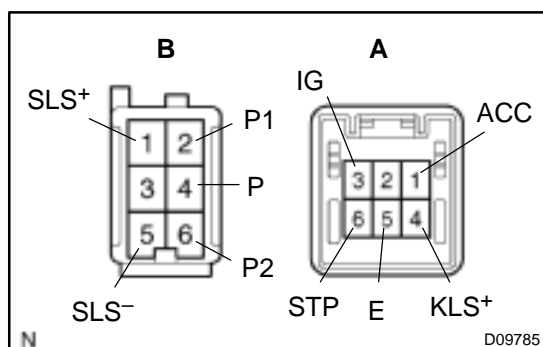


2. INSPECT SHIFT LOCK CONTROL ECU

Using a voltmeter, measure the voltage at each terminal.

HINT:

Do not disconnect the ECU connector.

Terminal	Measuring Condition	Voltage (V)
A, 1 – A, 5 (ACC – E)	Ignition switch ACC	10 – 14
A, 3 – A, 5 (IG – E)	Ignition switch ON	10 – 14
A, 6 – A, 5 (STP – E)	Depressing brake pedal	10 – 14
A, 4 – A, 5 (KLS+ – E)	5. Ignition switch ACC and P position	0
	6. Ignition switch ACC and except P position	7.5 – 11
	7. Ignition switch ACC and except P position (After approx. 1 second)	6 – 9.5
B, 1 – B, 5 (SLS+ – SLS-)	1. Ignition switch ON and P position	0
	2. Depress brake pedal	8 – 13.5
	3. Except P position	0
B, 2 – B, 4 (P1 – P)	1. Ignition switch ON, P position and depress brake pedal	0
	2. Shift except P position under conditions above	9 – 13.5
B, 6 – B, 4 (P2 – P)	1. Ignition switch ACC, P position	9 – 13.5
	2. Shift except P position under conditions above	0

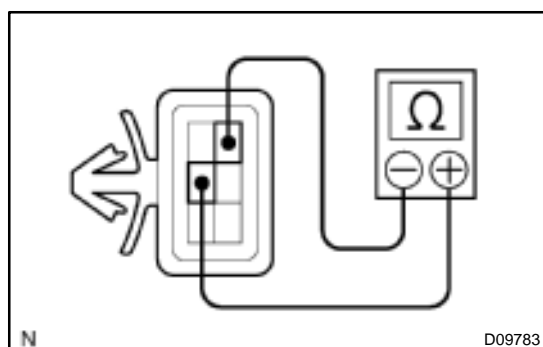


3. INSPECT SHIFT LOCK SOLENOID

- Disconnect the solenoid connector.
- Using an ohmmeter, measure the resistance between terminals.


Standard resistance: 29 – 35 Ω

If the resistance value is not as specified, replace the solenoid.

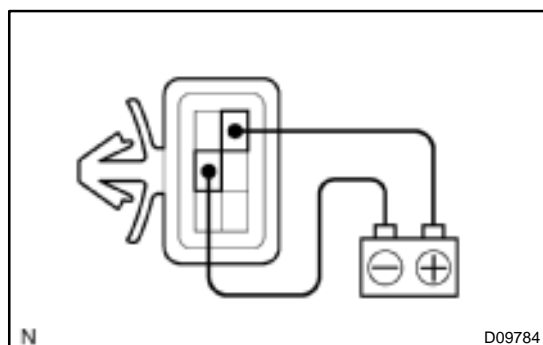

- Apply battery positive voltage between terminals. Check the operation.

If the solenoid does not operate, replace the solenoid noise can be heard from the solenoid.

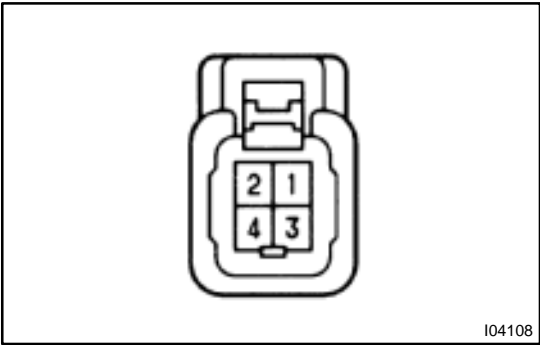


4. INSPECT KEY INTERLOCK SOLENOID

- (a) Disconnect the solenoid connector.
- (b) Using an ohmmeter, measure the resistance between terminals 3 and 4.


Standard resistance: 12.5 – 16.5 Ω

If the resistance value is not as specified, replace the solenoid.

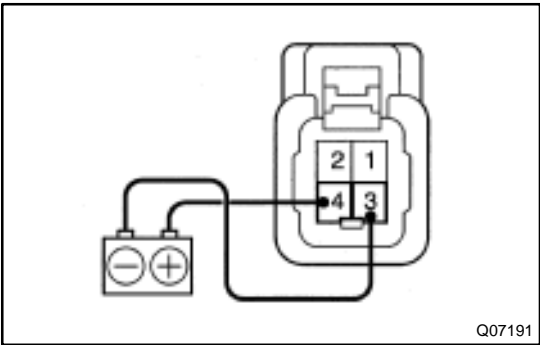

- (c) Apply battery positive voltage between the terminals 3 and 4. Check that an operation sound can be heard from the solenoid.

If the solenoid does not operate, replace the solenoid.

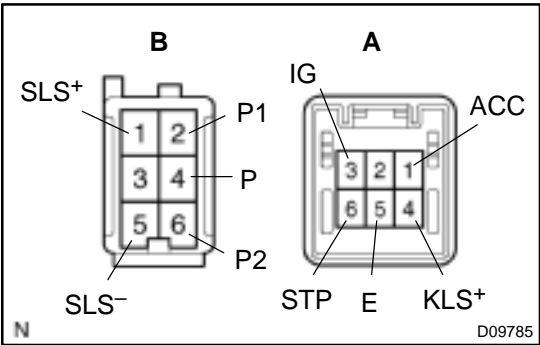


5. INSPECT SHIFT LOCK CONTROL SWITCH

Check that there is continuity between terminals.

Shift position	Tester connection	Standard
P position	A, 5 – B, 2 (E – P1)	Continuity
P position (Pull the shift lever toward you)	A, 5 – B, 2 (E – P1) A, 5 – B, 6 (E – P2)	Continuity
R, N, D, 2, L position	A, 5 – B, 6 (E – P2)	Continuity


If continuity is not identified, replace the switch.

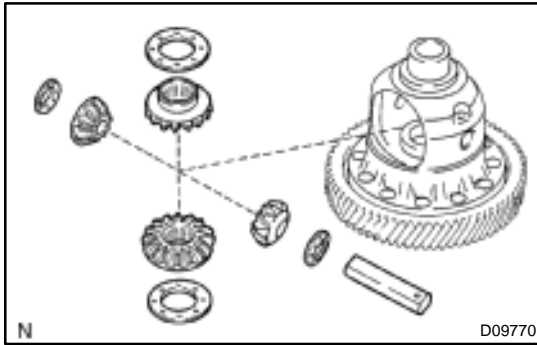

REASSEMBLY

1. ASSEMBLE DIFFERENTIAL CASE

- Coat the 2 side gear thrust washers and 2 pinion thrust washers with ATF.
- Install the 2 side gears, 2 pinions and 4 thrust washers to the case.

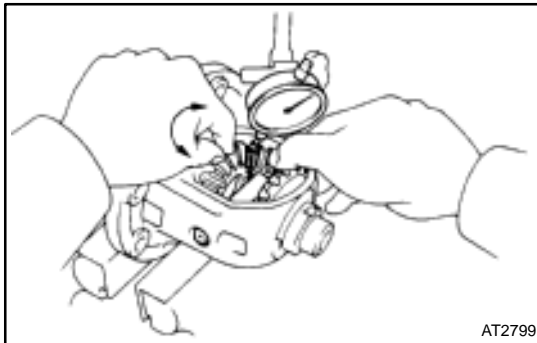

- Check the side gear backlash.
Measure the side gear backlash while pushing one pinion gear toward the case.

Standard backlash:

0.05 – 0.20 mm (0.0020 – 0.0079 in.)


Referring to the table below, select thrust washers which backlash is surely within the specified range.

Select washers of the same size for both sides.


Thrust washer thickness

Thickness	Thickness
0.95 mm (0.0374 in.)	1.10 mm (0.0433 in.)
1.00 mm (0.0394 in.)	1.15 mm (0.0453 in.)
1.05 mm (0.0414 in.)	1.20 mm (0.0472 in.)

If the backlash is not within the specified range, install a thrust washer of a different thickness.

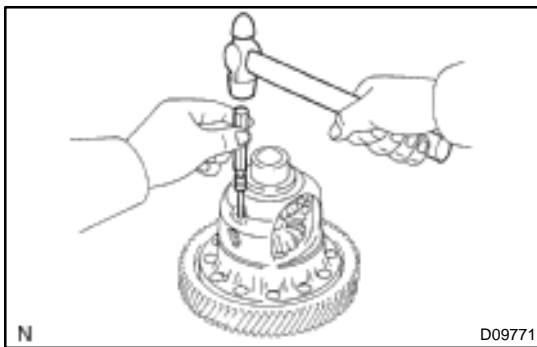

- Using a pin punch and a hammer, install the straight pin.
- Stake the differential case.

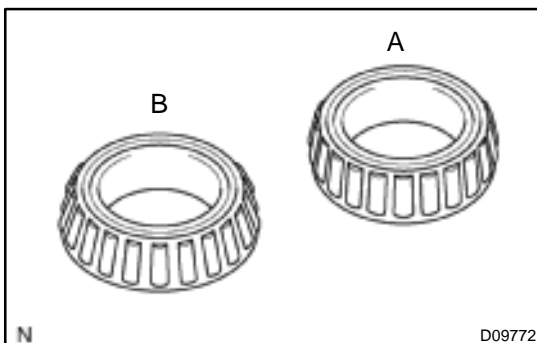


2. INSTALL 2 TAPERED ROLLER BEARINGS

CAUTION:


**A: The one which has bigger rollers
(The number of rollers is 22.)**

**B: The one which has smaller rollers
(The number of rollers is 24.)**

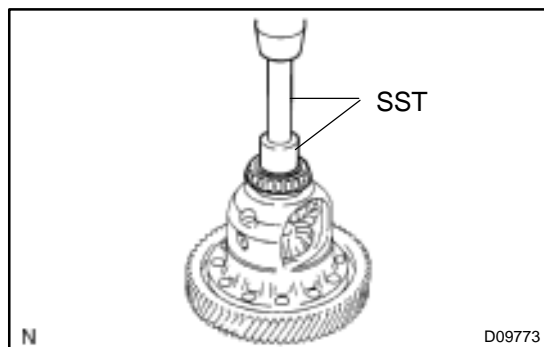

- (a) Using SST and a press, press in the tapered roller bearing RH. (Bearing B)

SST 09710-22021 (09710-01031), 09950-70010
(09951-07100)

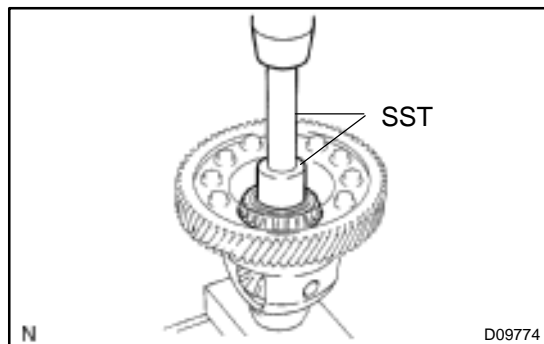

- (b) Using SST and a press, press in the tapered roller bearing LH. (Bearing A)

SST 09710-22021 (09710-01031), 09950-70010
(09951-07100)

TIRE AND WHEEL INSPECTION

SA0CC-10


1. INSPECT TIRE

- (a) Check the tires for wear and proper inflation pressure.

Cold tire inflation pressure:


(Tire size: P175/65R14 84S)

Front	Rear
240 kPa (2.4 kgf/cm ² , 35 psi)	230 kPa (2.3 kgf/cm ² , 33 psi)

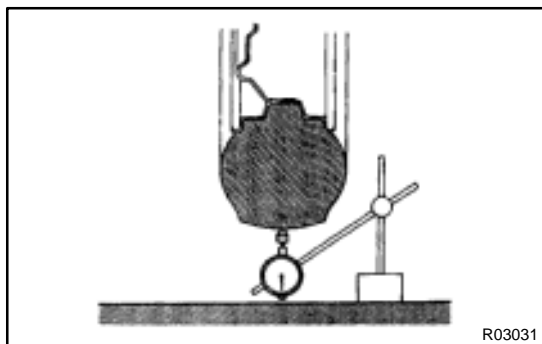

- (b) Using a dial indicator, check the tire runout.


Tire runout: 1.0 mm (0.039 in.) or less

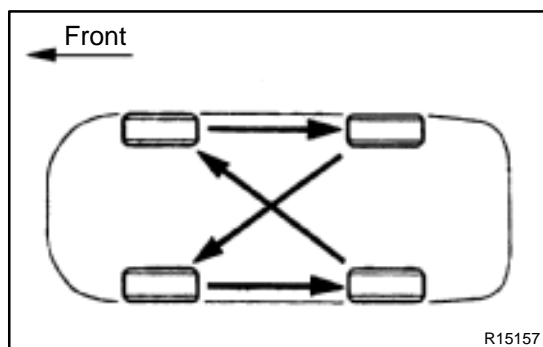

2. ROTATING TIRES

HINT:


See the illustration for where to rotate each tire.

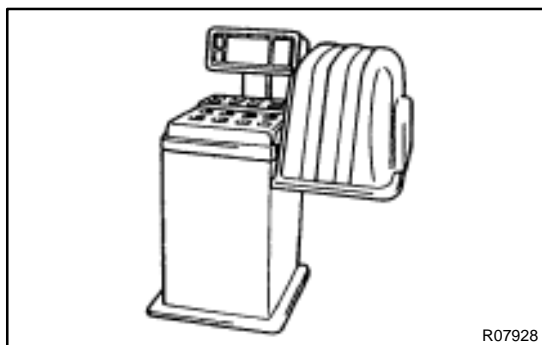

3. INSPECT WHEEL BALANCE

- (a) Check and adjust the Off-the-car balance.
 (b) If necessary, check and adjust the On-the-car balance.

Imbalance after adjustment: 8.0 g (0.018 lb) or less

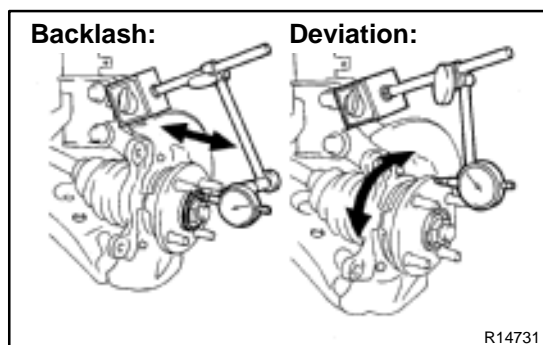

4. CHECK WHEEL BEARING LOOSENESS

- (a) Using a dial indicator, check the backlash near the center of the axle hub.

Maximum: 0.05 mm (0.0020 in.)


If the backlash exceeds the maximum, replace the bearing.

- (b) Using a dial indicator, check the deviation at the surface of the axle hub outside the hub bolt.

Maximum: 0.07 mm (0.0028 in.)

If the deviation exceeds the maximum, replace the axle hub.

5. **CHECK FRONT SUSPENSION FOR LOOSENESS**
6. **CHECK STEERING LINKAGE FOR LOOSENESS**
7. **CHECK BALL JOINT FOR LOOSENESS**
8. **CHECK SHOCK ABSORBER WORKS PROPERLY**
 - Check if oil leaks
 - Check mounting bushings for wear
 - Bounce front and rear of the vehicle

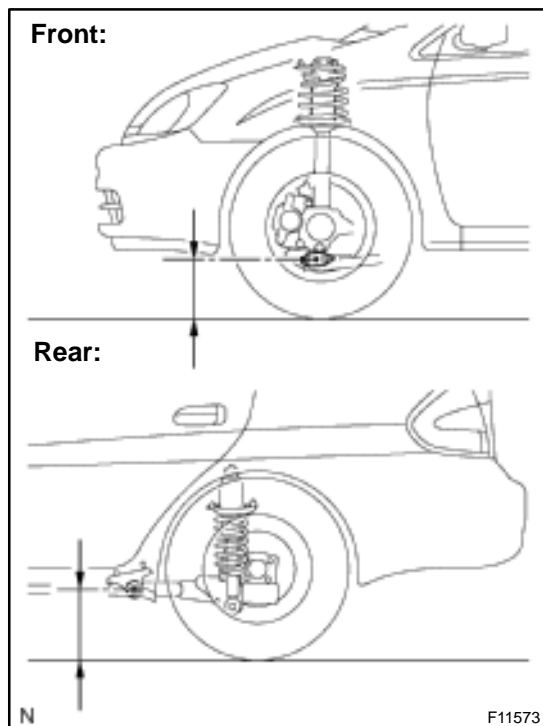

FRONT WHEEL ALIGNMENT INSPECTION

SA1CK-11

1. MEASURE VEHICLE HEIGHT

Vehicle height:

Tire size	Front* ¹ mm (in.)	Rear* ² mm (in.)
175/65R14	191 (7.52)	239 (9.41)

*¹: Front measuring point

Measure the distance from the ground to the head center of the front side lower suspension arm mounting bolt.


*²: Rear measuring point

Measure the distance from the ground to the center of the rear axle beam mounting bolt.

NOTICE:

Before inspecting the wheel alignment, adjust the vehicle height to the specified value.

If the vehicle height is not the specified value, try to adjust it by pushing down on or lifting the body.

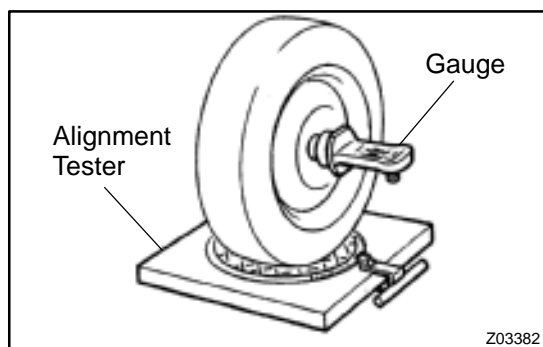

2. INSTALL CAMBER-CASTER-KINGPIN GAUGE OR POSITION VEHICLE ON WHEEL ALIGNMENT TESTER

Follow the specific instructions of the equipment manufacturer.

3. INSPECT CAMBER, CASTER AND STEERING AXIS INCLINATION

Camber, caster and steering axis inclination:

Camber	Right-left error	$-0^{\circ}26' \pm 45'$ ($-0.43^{\circ} \pm 0.75^{\circ}$) 45' (0.75°) or less
Caster	Right-left error	$1^{\circ}02' \pm 45'$ ($1.03^{\circ} \pm 0.75^{\circ}$) 45' (0.75°) or less
Steering axis inclination	Right-left error	$9^{\circ}52' \pm 45'$ ($9.87^{\circ} \pm 0.75^{\circ}$) 45' (0.75°) or less

If the caster and steering axis inclination are not within the specified values, after the camber has been correctly adjusted, re-check the suspension parts for damaged and/or worn out parts.

4. ADJUST CAMBER


NOTICE:


After the camber has been adjusted, inspect the toe-in.

- Remove the front wheel.
- Remove the 2 nuts on the lower side of the shock absorber.

If reusing the bolts and/or nuts, coat the threads of nuts with engine oil.

- Clean the installation surfaces of the shock absorber and the steering knuckle.
- Temporarily install the 2 nuts.

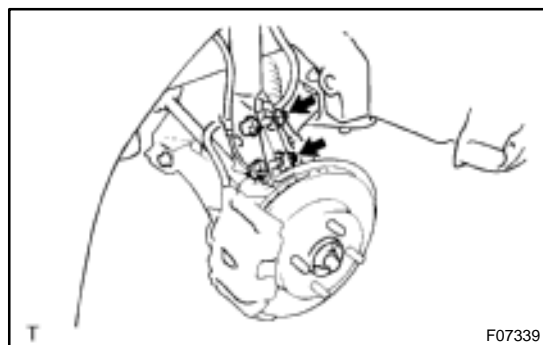

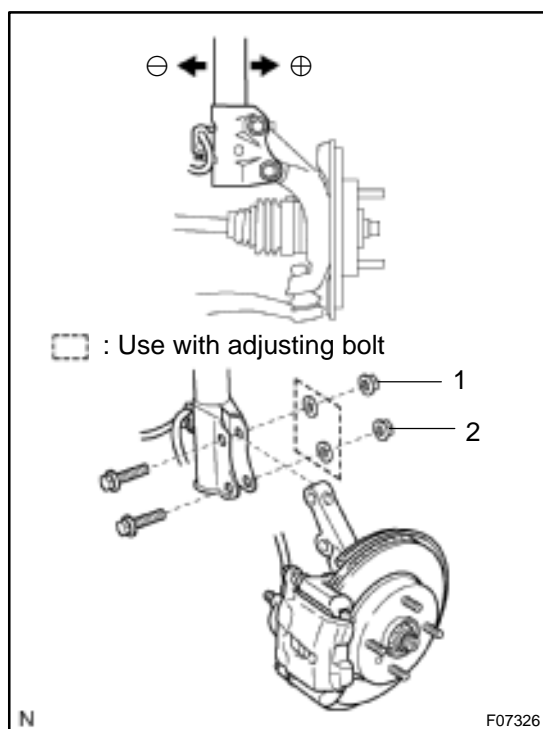

(e) Adjust the camber by pushing or pulling the lower side of the shock absorber in the direction in which the camber adjustment is required.

(f) Tighten the nuts.

Torque: 153 N·m (1,560 kgf·cm, 113 ft·lbf)

(g) Install the front wheel.

Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)

(h) Check the camber.

HINT:

- Try to adjust the camber to the center of the specified value.

- Adjusting value for the set bolts is 6' – 30' (0.1° – 0.5°).

If the camber is not within the specified value, using the following table, estimate how much additional camber adjustment will be required, and select the camber adjusting bolt.

NOTICE:

Tighten the adjusting bolt with a washer and a new nut.

Bolt	Set Bolt		Adjusting Bolt					
	90105-15001		90105-15004		90105-15005		90105-15006	
	11		1 Dot		2 Dots		3 Dots	
Adjusting Value	11		•11		•11•		•11••	
	1	2	1	2	1	2	1	2
-1°30' – -1°15'							•	•
-1°15' – -1°00'					•			•
-1°00' – -45'			•					•
-45' – -30'	•							•
-30' – -15'	•					•		
-15' – 0'	•			•				
0' – 15'	•			•				
15' – 30'	•					•		
30' – 45'	•							•
45' – 1°00'			•					•
1°00' – 1°15'					•			•
1°15' – 1°30'							•	•


N

F12938

(i) Do the steps mentioned above again. At step (b), replace 1 or 2 selected bolts.

HINT:

When replacing the 2 bolts, replace 1 bolt for each time.

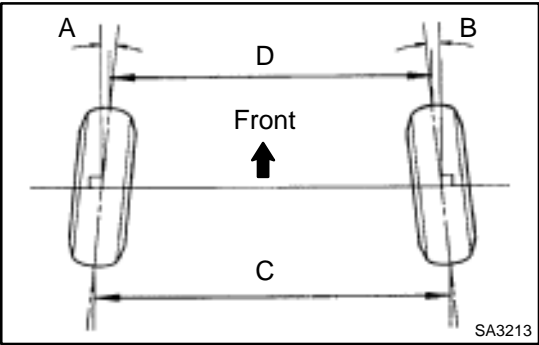

5. INSPECT TOE-IN

Toe-in:

Toe-in (total)	A + B: $0^{\circ}06' \pm 12'$ ($0.1^{\circ} \pm 0.2^{\circ}$) C - D: 1 ± 2 mm (0.04 ± 0.08 in.)
-------------------	---



If the toe-in is not within the specified value, adjust it at the rack ends.

6. ADJUST TOE-IN

- (a) Remove the rack boot set clips.
- (b) Loosen the tie rod end lock nuts.
- (c) Turn the right and left rack ends by an equal amount to adjust the toe-in.

HINT:

Try to adjust the toe-in to the center of the specified value.

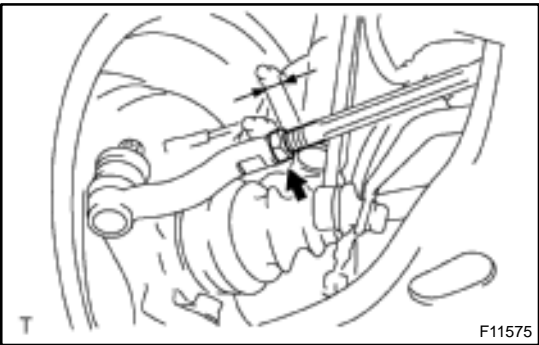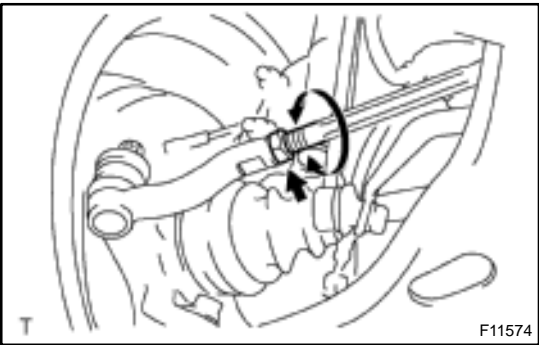


- (d) Make sure that the lengths of the right and left rack ends are the same.

Rack end length difference: 1.5 mm (0.059 in.) or less

- (e) Torque the tie rod end lock nuts.
Torque: 74 N·m (750 kgf·cm, 55 ft·lbf)
- (f) Place the boots on the seats and install the clips.

HINT:

Make sure that the boots are not twisted.

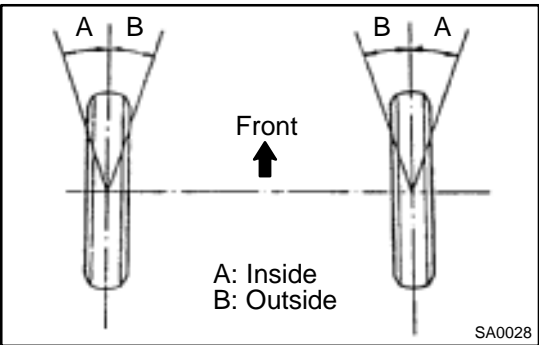

7. INSPECT WHEEL ANGLE

Turn the steering wheel fully and measure the turning angle.

Wheel turning angle:


Inside wheel	$42^{\circ}42' \pm 2^{\circ}$ ($42.70^{\circ} \pm 2^{\circ}$)
Outside wheel: Reference	$35^{\circ}54'$ (35.90°)

If the right and left inside wheel angles differ from the specified value, check the right and left rack end lengths.

REMOVAL


1. REMOVE FRONT WHEEL

Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)

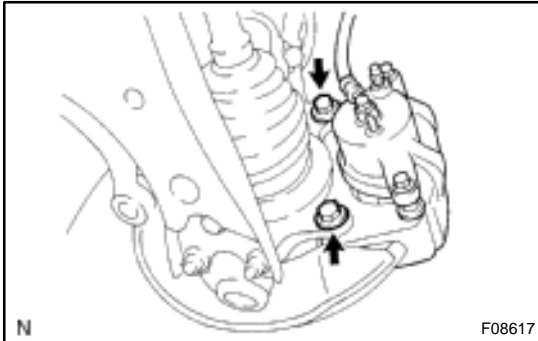

2. CHECK BEARING BACKLASH AND AXLE HUB DEVIATION

- Remove the 2 bolts, brake caliper and disc.
- Support the brake caliper securely.

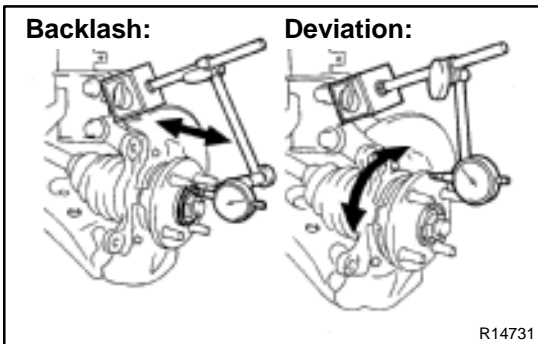

- Using a dial indicator, check the backlash near the center of the axle hub.

Maximum: 0.05 mm (0.0020 in.)

If the backlash exceeds the maximum, replace the bearing.

- Using a dial indicator, check the deviation at the surface of the axle hub outside the hub bolt.

Maximum: 0.07 mm (0.0028 in.)

If the deviation exceeds the maximum, replace the axle hub.

- Install the disc, 2 bolts and brake caliper.

Torque: 107 N·m (1,090 kgf·cm, 79 ft·lbf)

3. REMOVE DRIVE SHAFT LOCK NUT

- Using SST and a hammer, unstake the staked part of the lock nut.

SST 09930-00010

- While applying the brakes, remove the nut.


Torque: 216 N·m (2,200 kgf·cm, 159 ft·lbf)


- Remove the brake caliper and disc.

- Support the brake caliper securely.

4. REMOVE ABS SPEED SENSOR

Torque: 8.0 N·m (82 kgf·cm, 71 in.-lbf)

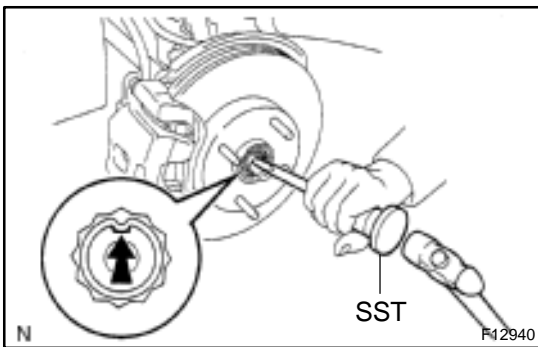

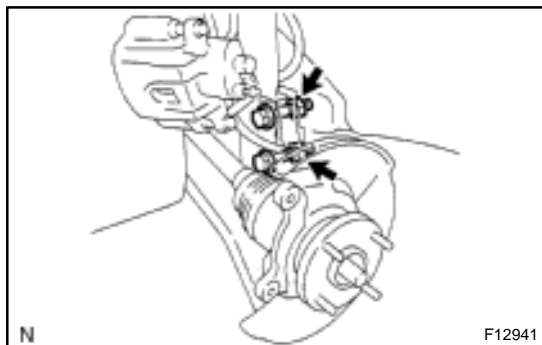

5. LOOSEN 2 NUTS ON LOWER SIDE OF SHOCK ABSORBER

Torque: 153 N·m (1,560 kgf·cm, 113 ft·lbf)

HINT:

Do not remove the 2 bolts and nuts.


6. DISCONNECT TIE ROD END FROM STEERING KNUCKLE

(a) Remove the cotter pin and nut.

Torque: 49 N·m (500 kgf·cm, 36 ft·lbf)


HINT:

At the time of installation, if the holes for a new cotter pin are not aligned, tighten the nut further up to 60°.

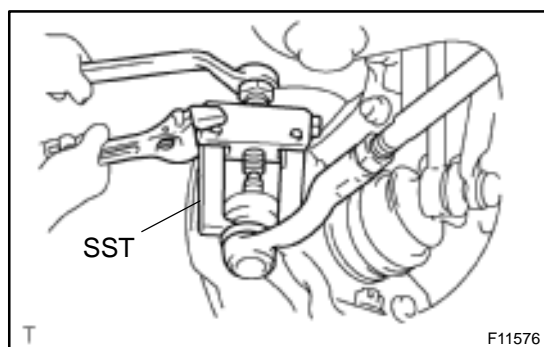

(b) Using SST, disconnect the tie rod end from the steering knuckle.


SST 09628-62011

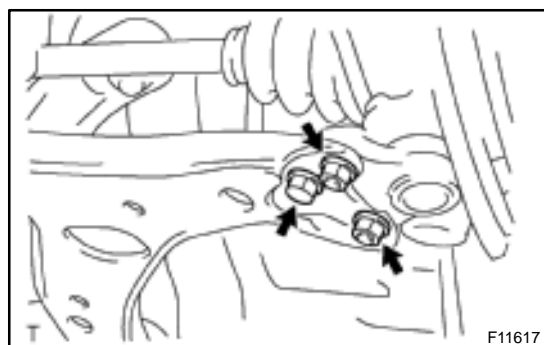

7. DISCONNECT LOWER SUSPENSION ARM FROM LOWER BALL JOINT

Remove the 2 nuts and bolt.

Torque: 142 N·m (1,450 kgf·cm, 105 ft·lbf)

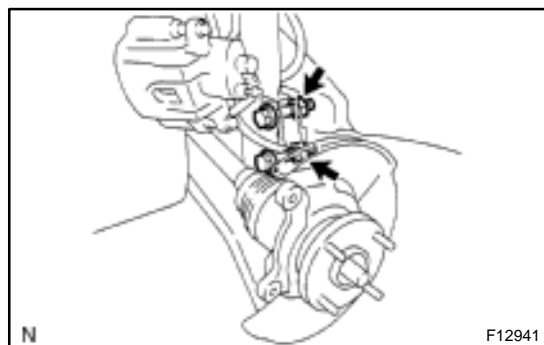

8. REMOVE STEERING KNUCKLE WITH AXLE HUB

(a) Remove the 2 bolts and nuts on the lower side of the shock absorber.

HINT:

At the time of installation, coat the nut's thread with engine oil.

(b) Remove the steering knuckle with the axle hub.


NOTICE:

Be careful not to damage the boot and ABS speed sensor rotor.


DISASSEMBLY

1. REMOVE LOWER BALL JOINT

- (a) Remove the cotter pin and nut.

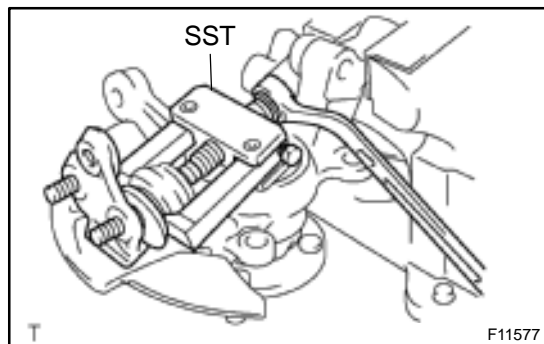


- (b) Using SST, remove the lower ball joint.
SST 09628-62011

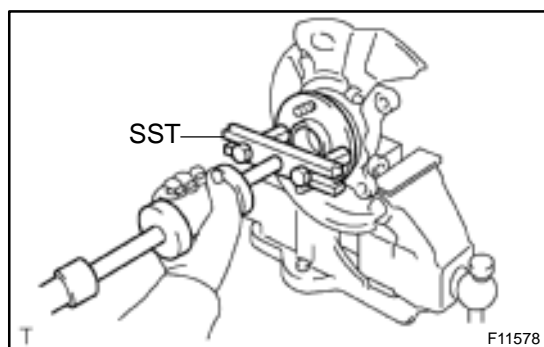

2. REMOVE AXLE HUB

- (a) Using SST, remove the axle hub.

SST 09520-00031 (09520-00040, 09521-00010, 09521-00020)

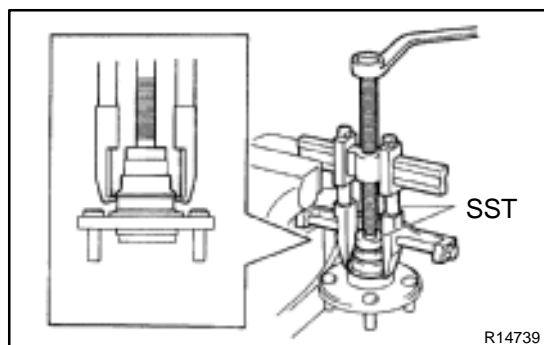

- (b) Using SST, remove the inner race (outside) from the axle hub.

SST 09950-40011 (09951-04020, 09952-04010, 09953-04020, 09954-04010, 09955-04011, 09957-04010, 09958-04011), 09950-60010 (09951-00370)


3. REMOVE DUST COVER

Using a torx socket (T30), remove the 3 bolts and dust cover.


4. REMOVE BEARING FROM STEERING KNUCKLE

- (a) Using snap ring pliers, remove the snap ring.

- (b) Place the inner race on the outside of the bearing.

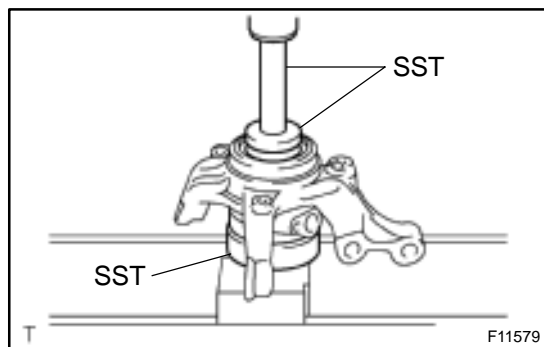

- (c) Using SST and a press, remove the bearing.
SST 09527-17011, 09950-60010 (09951-00650),
09950-70010 (09951-07150)

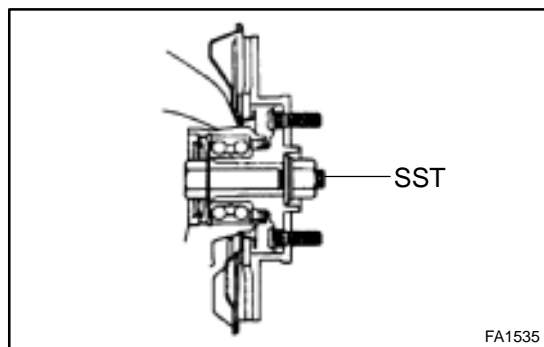

REMOVAL


NOTICE:

- The hub bearing could be damaged if it is subjected to the vehicle weight, such as when moving the vehicle with the drive shaft removed.

Therefore, if it is absolutely necessary to place the vehicle weight on the hub bearing, first support it with the SST.

SST 09608-16042 (09608-02021, 09608-02041)

- After disconnecting the drive shaft from the axle hub, work carefully so as not to damage the ABS speed sensor rotor serrations on the drive shaft.
- REMOVE FRONT WHEEL**
Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)
 - REMOVE ENGINE UNDER COVER**
 - DRAIN ATF**

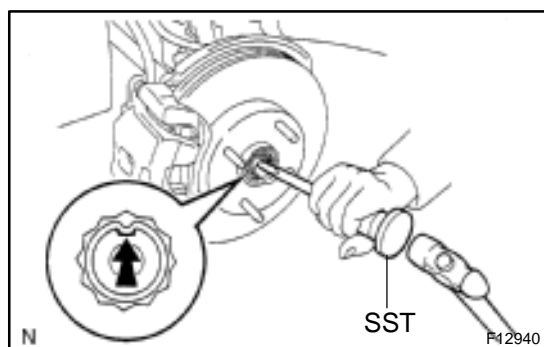

4. REMOVE DRIVE SHAFT LOCK NUT

- Using SST and a hammer, unseat the staked part of the lock nut.

SST 09930-00010

- While applying the brakes, remove the nut.

Torque: 216 N·m (2,200 kgf·cm, 159 ft·lbf)


5. DISCONNECT TIE ROD END FROM STEERING KNUCKLE

- Remove the cotter pin and nut.

Torque: 49 N·m (500 kgf·cm, 36 ft·lbf)


HINT:

At the time of installation, if the holes for a new cotter pin are not aligned, tighten the nut further up to 60°.

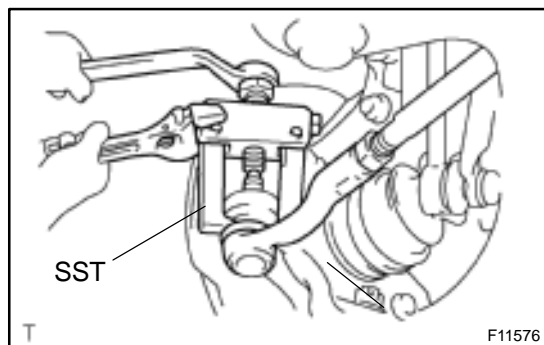

- Using SST, disconnect the tie rod end from the steering knuckle.

SST 09628-62011

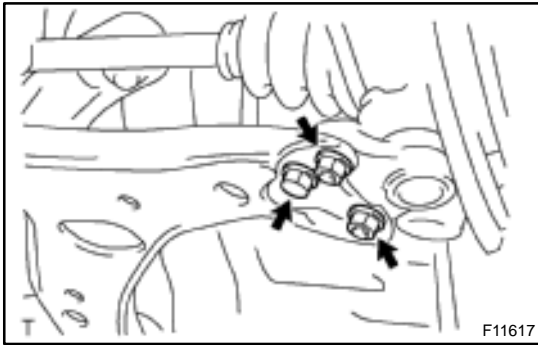

6. DISCONNECT LOWER BALL JOINT FROM LOWER SUSPENSION ARM

Remove the 2 nuts and bolt.

Torque: 142 N·m (1,450 kgf-cm, 105 ft-lbf)




7. DISCONNECT DRIVE SHAFT FROM AXLE HUB

Using a plastic hammer, disconnect the drive shaft from the axle hub.

NOTICE:

Be careful not to damage the boot and ABS speed sensor rotor.

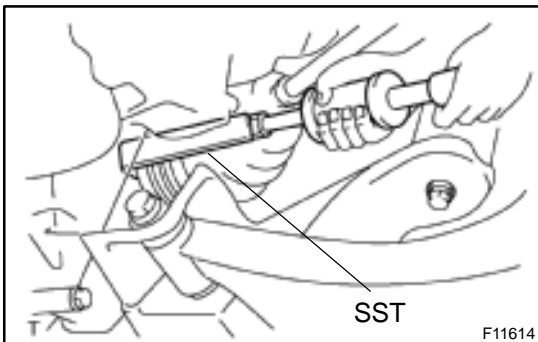

8. REMOVE DRIVE SHAFT

(a) Using SST, remove the drive shaft.

SST 09520-01010, 09520-24010 (09520-32040)


NOTICE:

Be careful not to damage the oil seal and dust cover.

HINT:

At the time of installation, please refer to the following items.


- Apply gear oil to the inboard joint shaft and differential case sliding surfaces.
 - Before installing the drive shaft, set the snap ring with its opening side facing downward.
 - Whether inboard joint shaft is in contact with pinion shaft or not can be known from the sound or feeling.
 - After installation, check that there is 2 – 3 mm (0.08 – 0.12 in.) of play in the axial direction.
 - After installation, check that the drive shaft cannot be removed by hand.
- (b) Using a screwdriver, remove the snap ring from the inboard joint shaft.

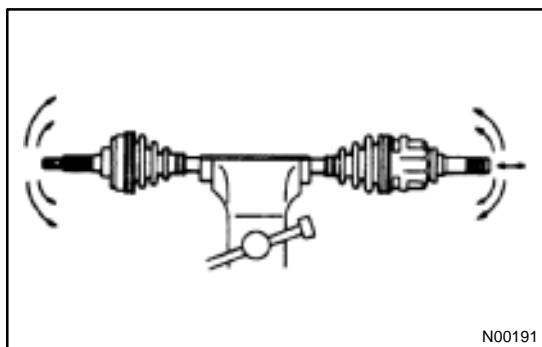

DISASSEMBLY

1. CHECK DRIVE SHAFT


- Check to see that there is no remarkable play in the outboard joint.
- Check to see that the inboard joint slides smoothly in the thrust direction.
- Check to see that there is no remarkable play in the radial direction of the inboard joint.
- Check the boots for damage.

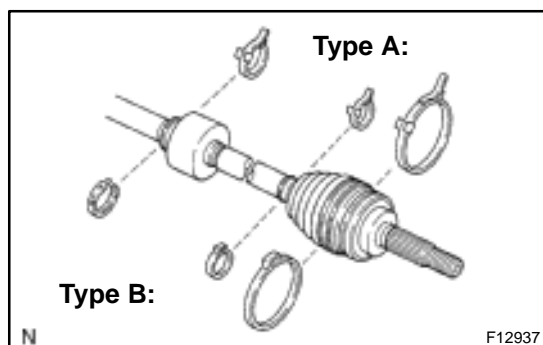

- Check the shape of the boot clamp.

2. REMOVE INBOARD JOINT SHAFT

- Using a screwdriver, disclamp the 2 inboard joint boot clamps.
- Slide the inboard joint boot toward the outboard joint.

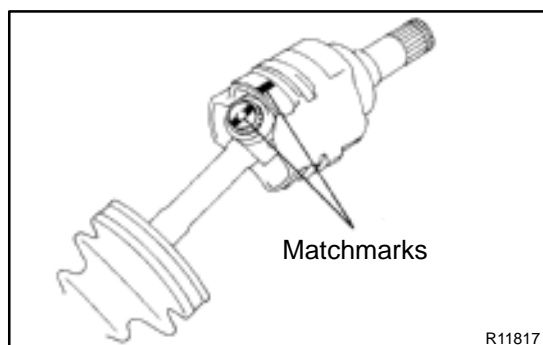

- Place matchmarks on the inboard joint shaft and tripod.


NOTICE:

Do not punch the marks.

- Remove the inboard joint shaft from the outboard joint shaft.

3. REMOVE TRIPOD

- Using a snap ring expander, remove the snap ring.

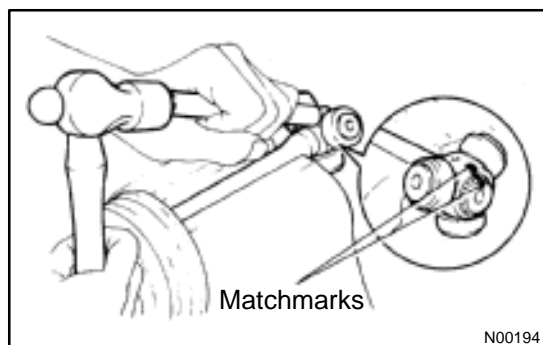

- Place matchmarks on the outboard joint shaft and tripod.

NOTICE:

Do not punch the marks.

- Using a brass bar and hammer, tap out the tripod from the outboard joint shaft.

NOTICE:


Do not tap the roller.

4. REMOVE INBOARD JOINT BOOT AND 2 CLAMPS

5. RH drive shaft:

REMOVE DYNAMIC DAMPER


- Type A clamp:
Using a screwdriver, disclamp the dynamic damper clamp and remove it.

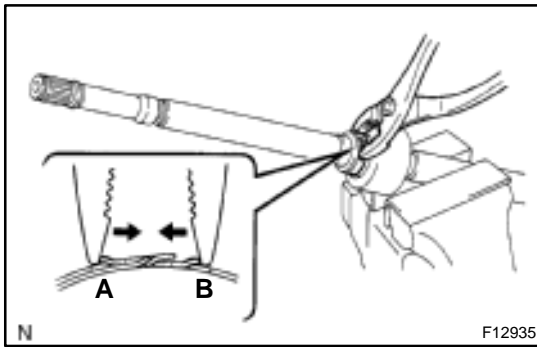

- (b) Type B clamp:
Using pliers, pinch the claw A and B to compress the dynamic damper clamp and remove it.
- (c) Remove the dynamic damper.

6. REMOVE OUTBOARD JOINT BOOT

- (a) Type A clamp:
Using a screwdriver disclamp the 2 outboard joint boot clamps.

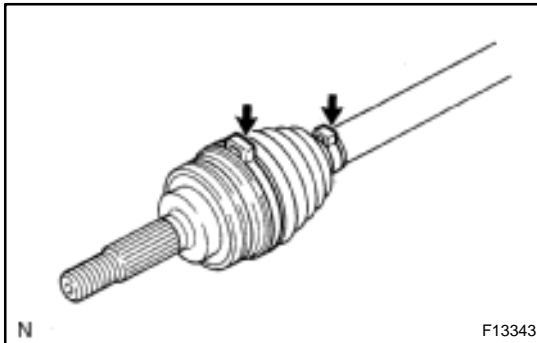

- (b) Type B clamp:
Using a side cutter, cut the 2 outboard joint boot clamps and remove it.

NOTICE:

Cut the part shown by the arrow so that the boot will not be damaged.

- (c) Remove the outboard joint boot from the outboard joint shaft.


NOTICE:


Do not disassemble the outboard joint.

7. REMOVE DUST COVER

Using SST and a press, remove the dust cover from the inboard joint shaft.

SST 09950-00020

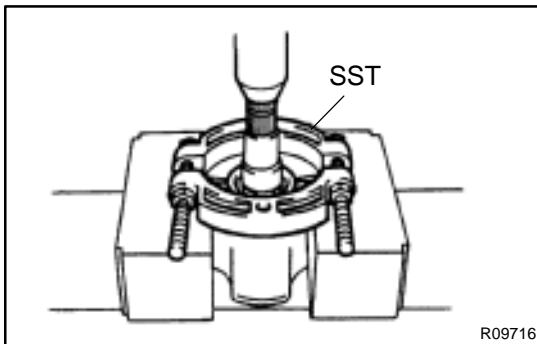

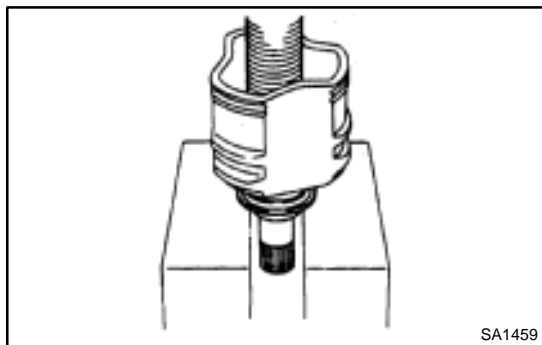


SA1459

REASSEMBLY

1. INSTALL DUST COVER

Using a press, install a new dust cover to the inboard joint shaft.

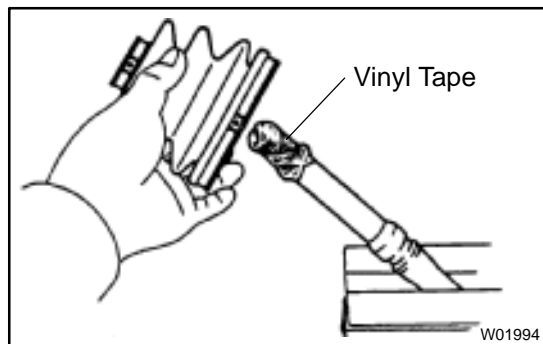

W01994

2. TEMPORARILY INSTALL BOOTS, CLAMPS AND DYNAMIC DAMPER (RH DRIVE SHAFT)

HINT:

Before installing the boots (and dynamic damper), wrap the spline of the outboard joint shaft with vinyl tape to prevent them from being damaged.

- (a) Place either 2 new A or B type boot clamps on a new outboard joint boot and install them to the outboard joint shaft.
- (b) RH drive shaft:
Place either a new A or B type clamp on the dynamic damper and install them to the outboard joint shaft.

HINT:

For B type only, the used clamp can be employed.

- (c) Place 2 new clamps on a new inboard joint boot and install them to the outboard joint shaft.

3. INSTALL TRIPOD

- (a) Place the beveled side of the tripod axial spline toward the outboard joint.
- (b) Align the matchmarks placed before removal.
- (c) Using a brass bar and hammer, tap in the tripod to the outboard joint shaft.

NOTICE:

Do not tap the roller.

- (d) Using a snap ring expander, install a new snap ring.

4. INSTALL BOOT TO OUTBOARD JOINT

Before assembling the boot, pack the outboard joint and boot with grease in the boot kit.

Grease capacity: (Color = Yellow ocher)

110 – 120 g (3.9 – 4.2 oz.)

5. INSTALL INBOARD JOINT SHAFT TO OUTBOARD JOINT SHAFT

- (a) Pack the inboard joint and boot with grease in the boot kit.


Grease capacity: (Color = Yellow ocher)

180 – 190 g (6.3 – 6.7 oz.)

- (b) Align the matchmarks placed before removal.
- (c) Install the inboard joint shaft to the outboard joint shaft.
- (d) Temporarily install the boot to the inboard joint shaft.

6. ASSEMBLE BOOT CLAMPS TO BOTH BOOTS

- (a) Make sure that the 2 boots are on the shaft grooves.

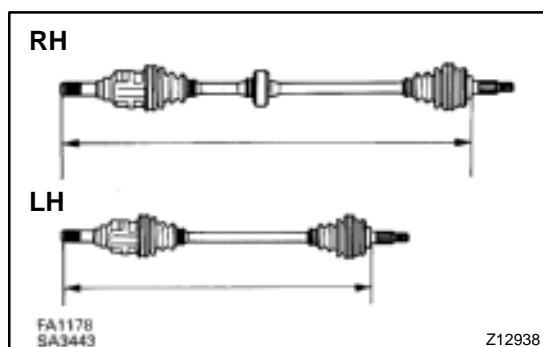


- (b) Make sure that the 2 boots are not stretched or contracted when the drive shaft is at standard length.


Drive shaft standard length:

RH	$836.9 \pm 5.0 \text{ mm}$ ($32.949 \pm 0.197 \text{ in.}$)
LH	$579.9 \pm 5.0 \text{ mm}$ ($22.831 \pm 0.197 \text{ in.}$)

- (c) Bend the band and lock the 2 inboard joint boot clamps with a screwdriver.

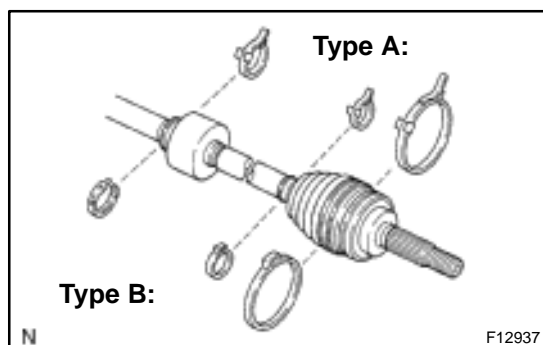


- (d) Install either A or B type boot clamp.
 (e) Type A clamp:
 Bend the band and lock the 2 outboard joint boot clamps with a screwdriver.

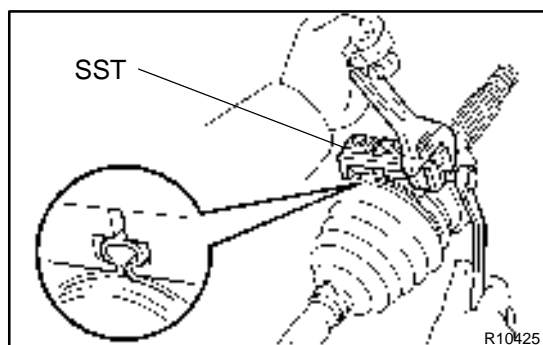

- (f) Type B clamp:
 Pinch the 2 outboard joint boot clamps.
 (1) Secure the 2 outboard joint boot clamps onto the boot.
 (2) Place SST onto the outboard joint large boot clamp.
 SST 09521-24010
 (3) Tighten the SST so that the large clamp is pinched.

NOTICE:


Do not overtighten the SST.

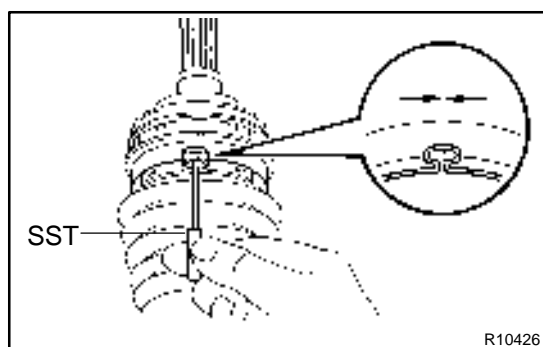

- (4) Using SST, adjust the clearance of the large clamp.
 SST 09240-00020

Clearance: 0.8 mm (0.031 in.) or less

- (5) Employ the same manner to the outboard joint small boot clamp.

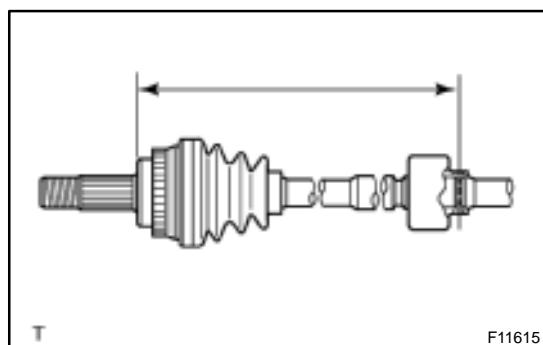

7. RH drive shaft:


ASSEMBLE DYNAMIC DAMPER CLAMP

- (a) Set the distance, as described below.
Distance: 500.1 ± 2.0 mm (19.689 ± 0.079 in.)
 (b) Type A clamp:
 Bend the band and lock the dynamic damper clamp with a screwdriver.
 (c) Type B clamp:
 Using pliers, compress the clamp and attach the claws.

8. CHECK DRIVE SHAFT (See page SA-19)

REASSEMBLY

1. INSTALL LOWER INSULATOR ONTO SHOCK ABSORBER
2. INSTALL SPRING BUMPER TO PISTON ROD

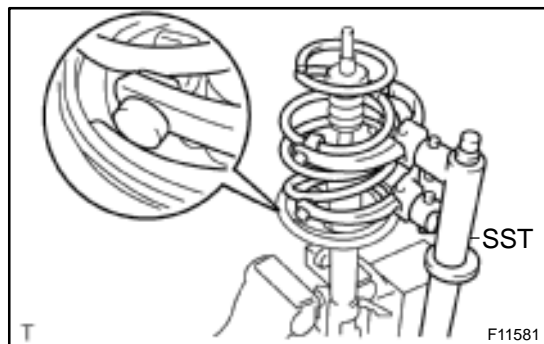

3. INSTALL COIL SPRING

- (a) Using SST, compress the coil spring.
SST 09727-30021 (09727-00010, 09727-00021, 09727-00031)

NOTICE:



Do not use an impact wrench. It will damage the SST.

- (b) Install the coil spring to the shock absorber.


HINT:

Fit the lower end of the coil spring into the gap of the spring lower seat.


- (c) Install the upper insulator as shown in the illustration.

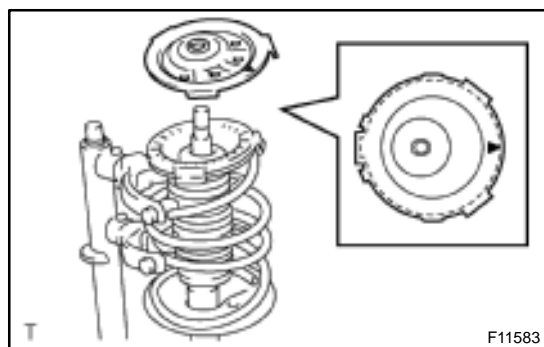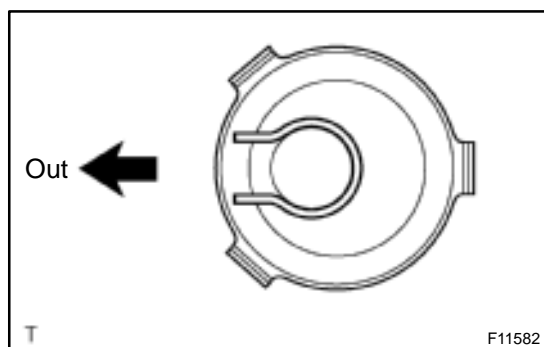

- (d) Install the spring seat to the shock absorber with the "U" mark facing to the outside of the vehicle.
- (e) Install the dust seal and suspension support.

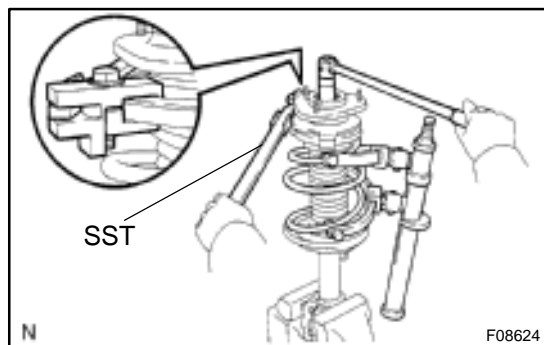

- (f) Using SST to hold the suspension support, install a new nut.
SST 09729-22031
Torque: 47 N·m (475 kgf-cm, 34 ft-lbf)
- (g) Remove the SST.
SST 09727-30021 (09727-00010, 09727-00021, 09727-00031)

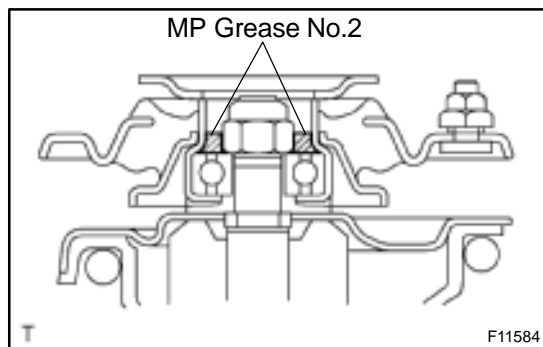

(h) Apply MP grease No.2 into the suspension support.

CAUTION:

Do not touch grease on rubber surface of upper support.

(i) Install the cap.

REMOVAL

1. REMOVE FRONT WHEEL

Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)


2. REMOVE ENGINE UNDER COVER

3. REMOVE LOWER SUSPENSION ARM

(a) Disconnect the RH and LH tie rod ends.

(1) Remove the cotter pin and nut.


Torque: 49 N·m (500 kgf·cm, 36 ft·lbf)

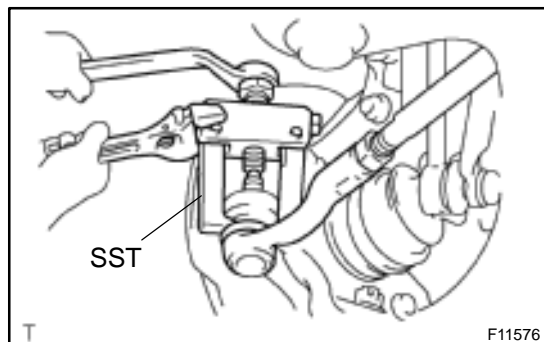

(2) Using SST, disconnect the tie rod end from the steering knuckle.

SST 09628-62011

(3) Employ the same manner described above to the other side.

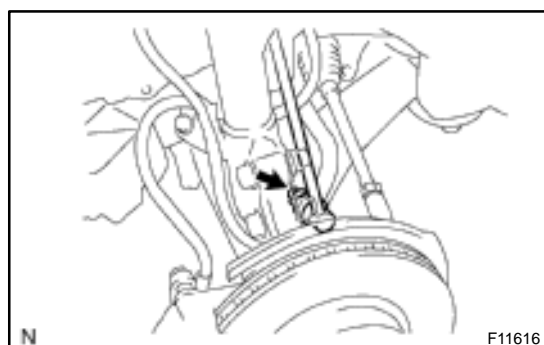

(b) Disconnect the RH and LH stabilizer bar links.


(1) Remove the nut and disconnect the stabilizer bar link from the shock absorber.

Torque: 74 N·m (755 kgf·cm, 55 ft·lbf)

HINT:

If the ball joint turns together with the nut, use a hexagon (5 mm) wrench to hold the stud.

(2) Employ the same manner described above to the other side.

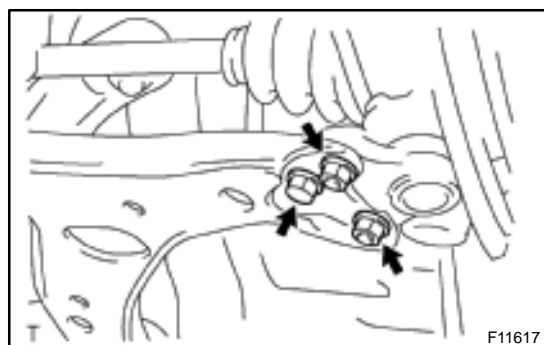


(c) Disconnect the RH and LH lower suspension arms from the lower ball joints.

(1) Remove the bolt and 2 nuts, and disconnect the lower suspension arm from the lower ball joint.

Torque: 142 N·m (1,450 kgf·cm, 105 ft·lbf)

(2) Employ the same manner described above to the other side.

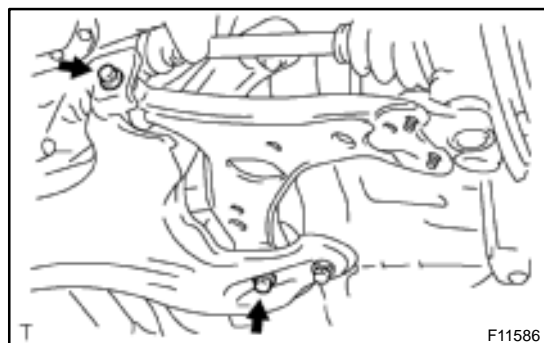

(d) Loosen the 2 lower suspension arm set bolts.


Torque: 137 N·m (1,397 kgf·cm, 101 ft·lbf)

HINT:

At the time of installation, after stabilizing the suspension, torque the bolts.


(e) Disconnect the sliding yoke (See page [SR-6](#)).

(f) Support the suspension member with a transmission jack.

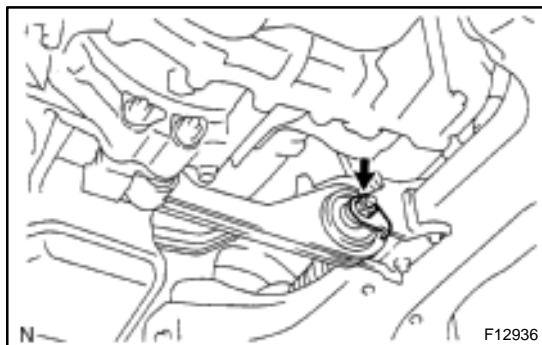

- (g) Remove the bolt and nut, disconnect the torque rod from the suspension member.

Torque: 100 N·m (1,150 kgf·cm, 83 ft·lbf)

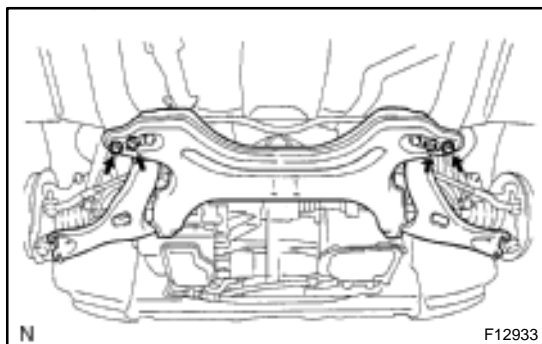

- (h) Remove the 4 bolts and disconnect the suspension member from the body.

Torque:


Front side: 113 N·m (1,152 kgf·cm, 83 ft·lbf)

Rear side: 157 N·m (1,600 kgf·cm, 116 ft·lbf)

- (i) Remove the 2 lower suspension arm set bolts and disconnect the lower suspension arm from suspension member.


REMOVAL

1. **REMOVE REAR WHEELS**
Torque: 103 N·m (250 kgf·cm, 18 ft·lbf)
2. **REMOVE REAR SEAT** (See page [BO-83](#))

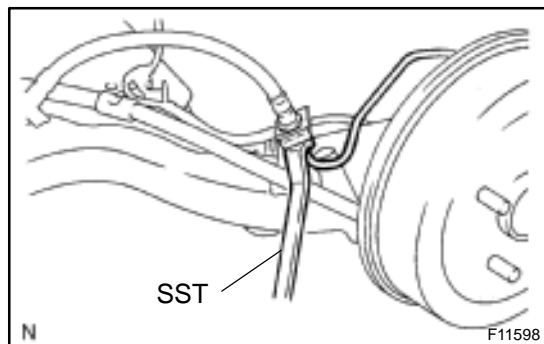

3. DISCONNECT BRAKE LINES


- (a) Using SST, disconnect the brake lines from the flexible hose. Use a container to catch brake fluid as it drains out.
SST 09751-36011
- (b) Remove the clip.
- (c) Employ the same manner described above to the other side.

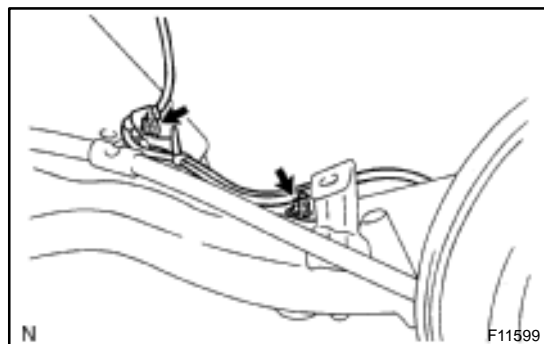


4. DISCONNECT ABS SPEED SENSOR WIRE HARNESS

Remove the 4 nuts, and disconnect the ABS speed sensor wire harness from the axle beam.

Torque: 5.4 N·m (55 kgf·cm, 48 in.-lbf)

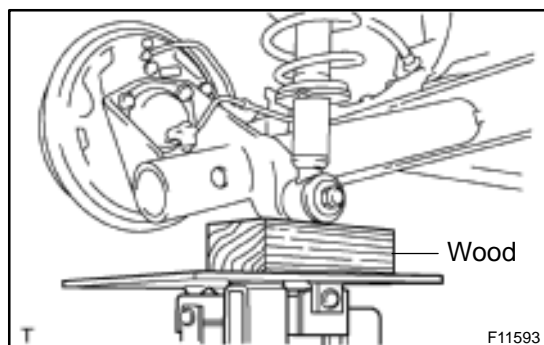

5. SUPPORT REAR AXLE BEAM AT RIGHT AND LEFT SIDES WITH JACKS

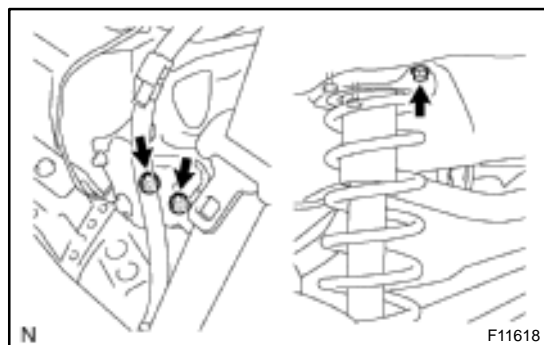


6. REMOVE SHOCK ABSORBER

- (a) Remove the 2 nuts and bolt.
Torque: 80 N·m (816 kgf·cm, 59 ft·lbf)




- (b) Remove the nut, washer and shock absorber.
Torque: 80 N·m (816 kgf-cm, 59 ft-lbf)

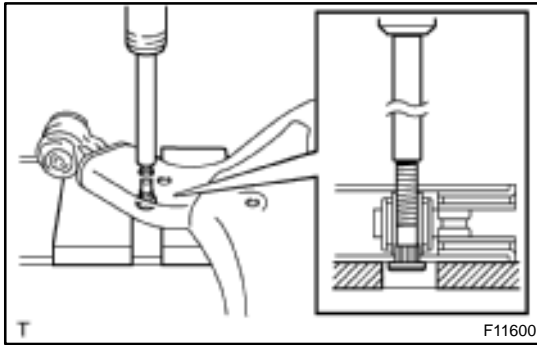

REPLACEMENT

1. REMOVE TOE CONTROL LINK


- Remove the nut.
- Using a brass bar, remove the bolt.

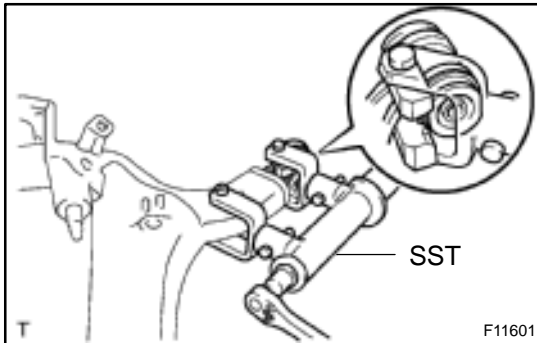

- Using a SST, remove the toe control link from axle beam.
SST 09710-40010 (09711-40010, 09712-40010),
09727-30021 (09727-00010, 09727-00031)

NOTICE:


- Make sure that the arm inside of SST is contact with the toe control link at the position shown in the illustration.
- Never use SST (09727 - 00030)

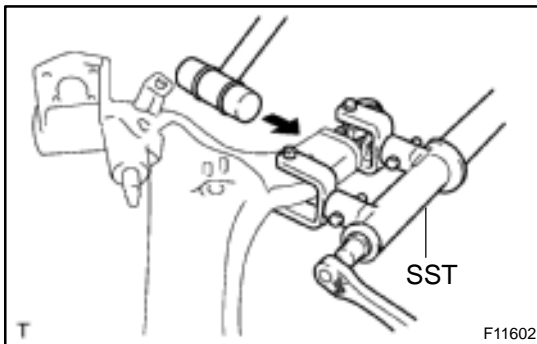

HINT:

The outer race of the toe control link is made of rubber and because of its elasticity, it is difficult to remove the link from the axle beam.

So, tap the part indicated by the arrow with a plastic hammer when removing.

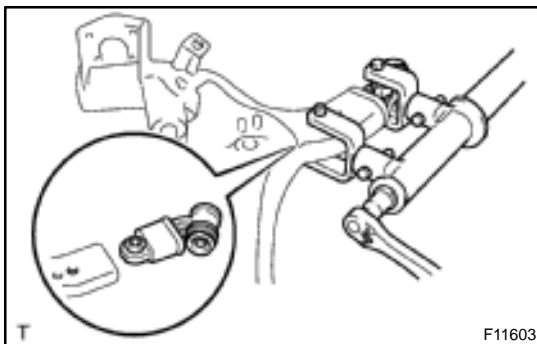

2. INSTALL TOE CONTROL LINK


- Using a SST, install a new toe control link.
SST 09710-40010 (09711-40010, 09712-40010),
09727-30021 (09727-00010, 09727-00031)

NOTICE:

- Make sure that the arm inside of SST is contact with the frange of the toe control link.
- Align the bolt holes of the toe control link and axle beam in the direction of press-fitting.
When the bolt holes slip off the aligned position, press-fit a new toe control link again.

HINT:

- Until the outer race is fit into the axle beam, adjust the arm position of SST to set the toe control link upright to the axle beam.
- When the toe control link is fully press-fit into the axle beam, the bolt holes are not aligned.

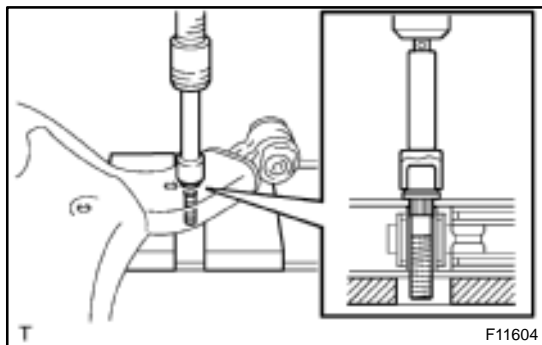

(b) Using a extension bar and press, install a new bolt.

NOTICE:

Press in the bolt until the base of the bolt head is pressed tightly against the axle beam.

(c) Install the a nut.

TROUBLESHOOTING

PROBLEM SYMPTOMS TABLE

BR0PX-07

Use the table below to help you find the cause of the problem. The numbers indicate the priority of the likely cause of the problem. Check each part in order. If necessary, replace these parts.

Symptom	Suspect Area	See page
Low pedal or spongy pedal	5. Fluid leaks for brake system 6. Air in brake system 7. Piston seals (Worn or damaged) 8. Master cylinder (Faulty) 9. Hydraulic brake booster (Faulty)	DI-451 BR-4 BR-26 BR-32 BR-16 BR-42
Brake drag	1. Brake pedal freeplay (Minimum) 2. Parking brake pedal travel (Out of adjustment) 3. Parking brake wire (Sticking) 4. Pad or lining (Cracked or distorted) 5. Piston (Stuck) 6. Piston (Frozen) 7. Tension or return spring (Faulty) 8. Hydraulic brake booster (Faulty)	BR-7 BR-9 – BR-23 BR-32 BR-26 BR-32 BR-26 BR-32 BR-42
Brake pull	1. Piston (Stuck) 2. Pad or lining (Cracked or distorted) 3. Piston (Frozen) 4. Disc or drum (Scored) 5. Pad or lining (Cracked or distorted) 6. Hydraulic brake booster (Faulty)	BR-26 BR-32 BR-23 BR-32 BR-26 BR-32 BR-26 BR-32 BR-23 BR-32 BR-42
Hard pedal but brake inefficient	1. Fluid leaks for brake system 2. Air in brake system 3. Pad or lining (Worn) 4. Pad or lining (Cracked or distorted) 5. Pad or lining (Oily) 6. Pad or lining (Glazed) 7. Disc or drum (Scored) 8. Hydraulic brake booster (Faulty)	DI-451 BR-4 BR-23 BR-32 BR-23 BR-32 BR-23 BR-32 BR-23 BR-32 BR-26 BR-32 BR-42

BRAKE – TROUBLESHOOTING

Noise from brakes	1. Pad or lining (Cracked or distorted) 2. Installation bolt (Loose) 3. Disc or drum (Scored) 4. Pad support plate (Loose) 5. Sliding pin (Worn) 6. Pad or lining (Dirty) 7. Pad or lining (Glazed) 8. Tension or return spring (Faulty) 9. Anti-squeal shim (Damaged) 10. Shoe hold-down spring (Damaged)	BR-23 BR-32 BR-26 BR-26 BR-32 BR-23 BR-26 BR-23 BR-32 BR-23 BR-32 BR-23 BR-32 BR-23 BR-32
Brake warning light lights up* ¹ (Parking brake pedal released)	1. Brake fluid level 2. Hydraulic brake booster power supply system (Faulty)	BR-41
Brake warning light lights up and brake warning buzzer sounds* ²	Hydraulic brake booster power supply system (Faulty)	BR-41
ABS warning light lights up* ³	1. Anti-lock brake system (Faulty) 2. Hydraulic brake booster power supply system (Faulty)	BR-41

*¹, *³: The light may stay on for about 60 seconds after the engine has been started. It is normal if it goes out after a while.

*², *³: Depressing the brake pedal repeatedly may turn on the warning light and buzzer. It is normal if the light goes out and the buzzer stops sounding after a few seconds.

BRAKE FLUID BLEEDING

HINT:

- If any work is done on the brake system or if air in the brake lines is suspected, bleed the air from the system.
- When bleeding, keep the amount of the fluid within the line of reservoir between Min. and Max.

NOTICE:

- **Do not let brake fluid remain on painted surfaces. Wash it off immediately.**
- **With the reservoir cap removed, when depressing the brake pedal, the fluid will spray.**

1. FILL RESERVOIR WITH BRAKE FLUID

Fluid: SAE J1703 or FMVSS NO. 116 DOT3

2. RELEASE PRESSURE FROM POWER SUPPLY SYSTEM

HINT:

If the hydraulic brake booster has been disassembled, disconnect the brake line from the hydraulic brake booster or if the reservoir becomes empty, bleed the hydraulic brake booster.

- Turn the ignition switch OFF, depress the brake pedal more than 40 times.
- Turn the ignition switch ON, check that the pump stops after 30 to 40 seconds.

NOTICE:

When the pump does not stop, repeat step (a) and (b) again.

3. BLEED AIR

- Turning the ignition switch OFF, bleed the right and left front brake caliper.

HINT:

Perform air bleeding for each wheel, depress the brake pedal more than 20 times or more for each.

- Turning the ignition switch ON, check that the pump motor stops.
- Fully open the bleeder plug of the right or left rear brake cylinder and drain the fluid while depressing the brake pedal for 3 seconds.

HINT:


- Perform air bleeding for both wheels on the right or left side and then do the same on the other side.
- It is not necessary to depress the pedal continuously, as brake fluid flows out by first depressing.
- (d) Release the brake pedal and wait until the pump motor stops.
- (e) Repeat step (c) and (d) 7 times or more.
- (f) Tighten the bleeder plug of the rear brake cylinder.
Torque: 8.5 N·m (87 kgf·cm, 75 in.-lbf)
- (g) While depressing the brake pedal, let air out from the rear brake cylinder mentioned in (f).

HINT:

- Hold the brake pedal depressed, and it is not necessary to repeat depressing of the pedal.
 - Do not continuously drain the fluid from the bleeder plug for more than 3 seconds.
 - When closing the bleeder plug, wait until the pump motor stops if it is operated.
 - Repeat the procedure until air is completely removed.
- (h) Perform step (c) to (g) on the other rear brake cylinder.
- (i) With the ignition switch ON, check that the pump motor is stopped.
- (j) Fully the bleeder plug of the front left brake cylinder and drain the fluid while depressing the brake pedal for 3 seconds.
- (k) Release the brake pedal and wait until the pump motor stops.
- (l) Repeat step (j) and (k) 4 times.
- (m) Tighten the bleeder plug of the front left brake cylinder.
Torque: 8.5 N·m (87 kgf·cm, 75 in.-lbf)
- (n) While depressing the brake pedal, let air out from the front left brake cylinder.

HINT:

- Hold the brake pedal depressed, and it is not necessary to repeat depressing of the pedal.
 - Do not continuously drain the fluid from the bleeder plug for more than 3 seconds.
 - When closing the bleeder plug, wait until the pump motor stops if it is operated.
 - Repeat the procedure until air is completely removed.
- (o) Check that the pump motor is stopped.

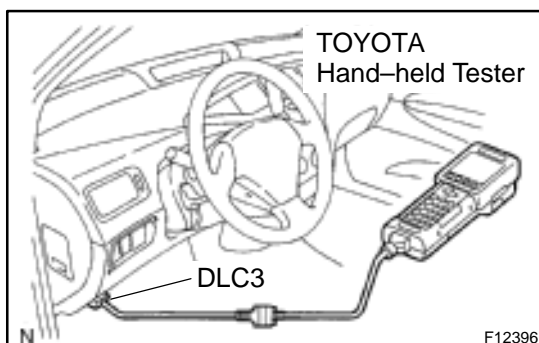

- (p) Connect TOYOTA hand-held tester.
- (1) Turn the ignition switch OFF, connect the TOYOTA hand-held tester to DLC3.
 - (2) Turn the ignition switch ON, and select "AIR BLEEDING" on the TOYOTA hand-held tester.

HINT:

Please refer to the TOYOTA hand-held tester operator's manual for further details.

- (q) Holding the brake pedal depressed, turn SRRR solenoid ON with the TOYOTA hand-held tester.

HINT:

Do not keep the solenoid activated for 2 seconds, or more. Allow an interval of 20 seconds, or more if activating it continuously.

- (r) Turn the SRRR solenoid OFF with the TOYOTA hand-held tester, and release the brake pedal.
- (s) Check that the pump motor stops after 20 seconds.
- (t) Repeat step (q) to (s) 3 times.
- (u) Turn the ignition switch OFF, and disconnect the TOYOTA hand-held tester from DLC3.
- (v) Clear the DTC (See page [DI-353](#)).

HINT:


- Diagnosis codes are erased with the shift lever in P range.
- After erasing, turn the ignition switch OFF to protect ECU.

4. CHECK FLUID LEVEL IN RESERVOIR


- (a) With the ignition switch OFF, depress the brake pedal more than 40 times.
- (b) Remove the reservoir cap. Add brake fluid up to the "MAX" line.

Fluid: SAE J1703 or FMVSS NO. 116 DOT3

COMPONENTS

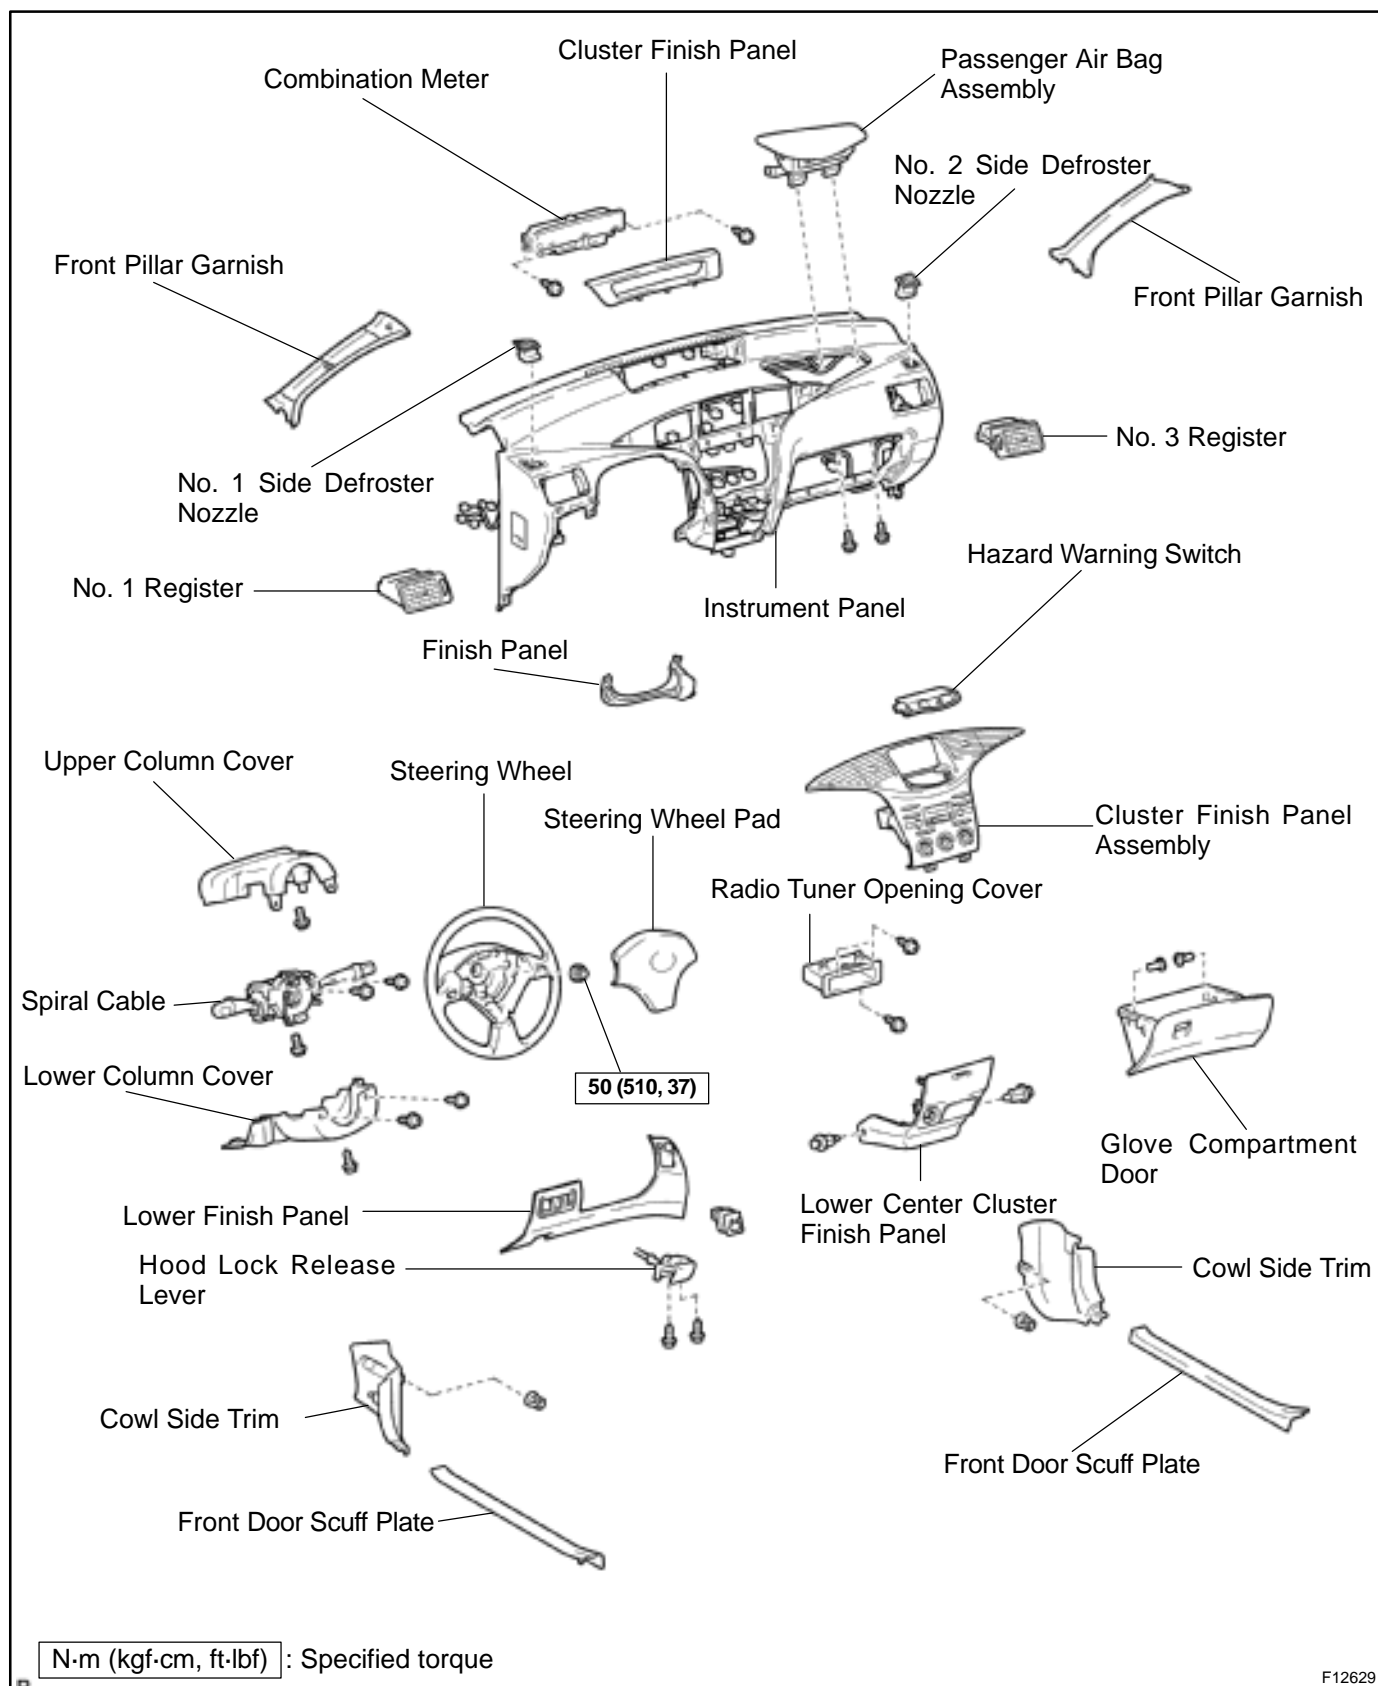

F12629

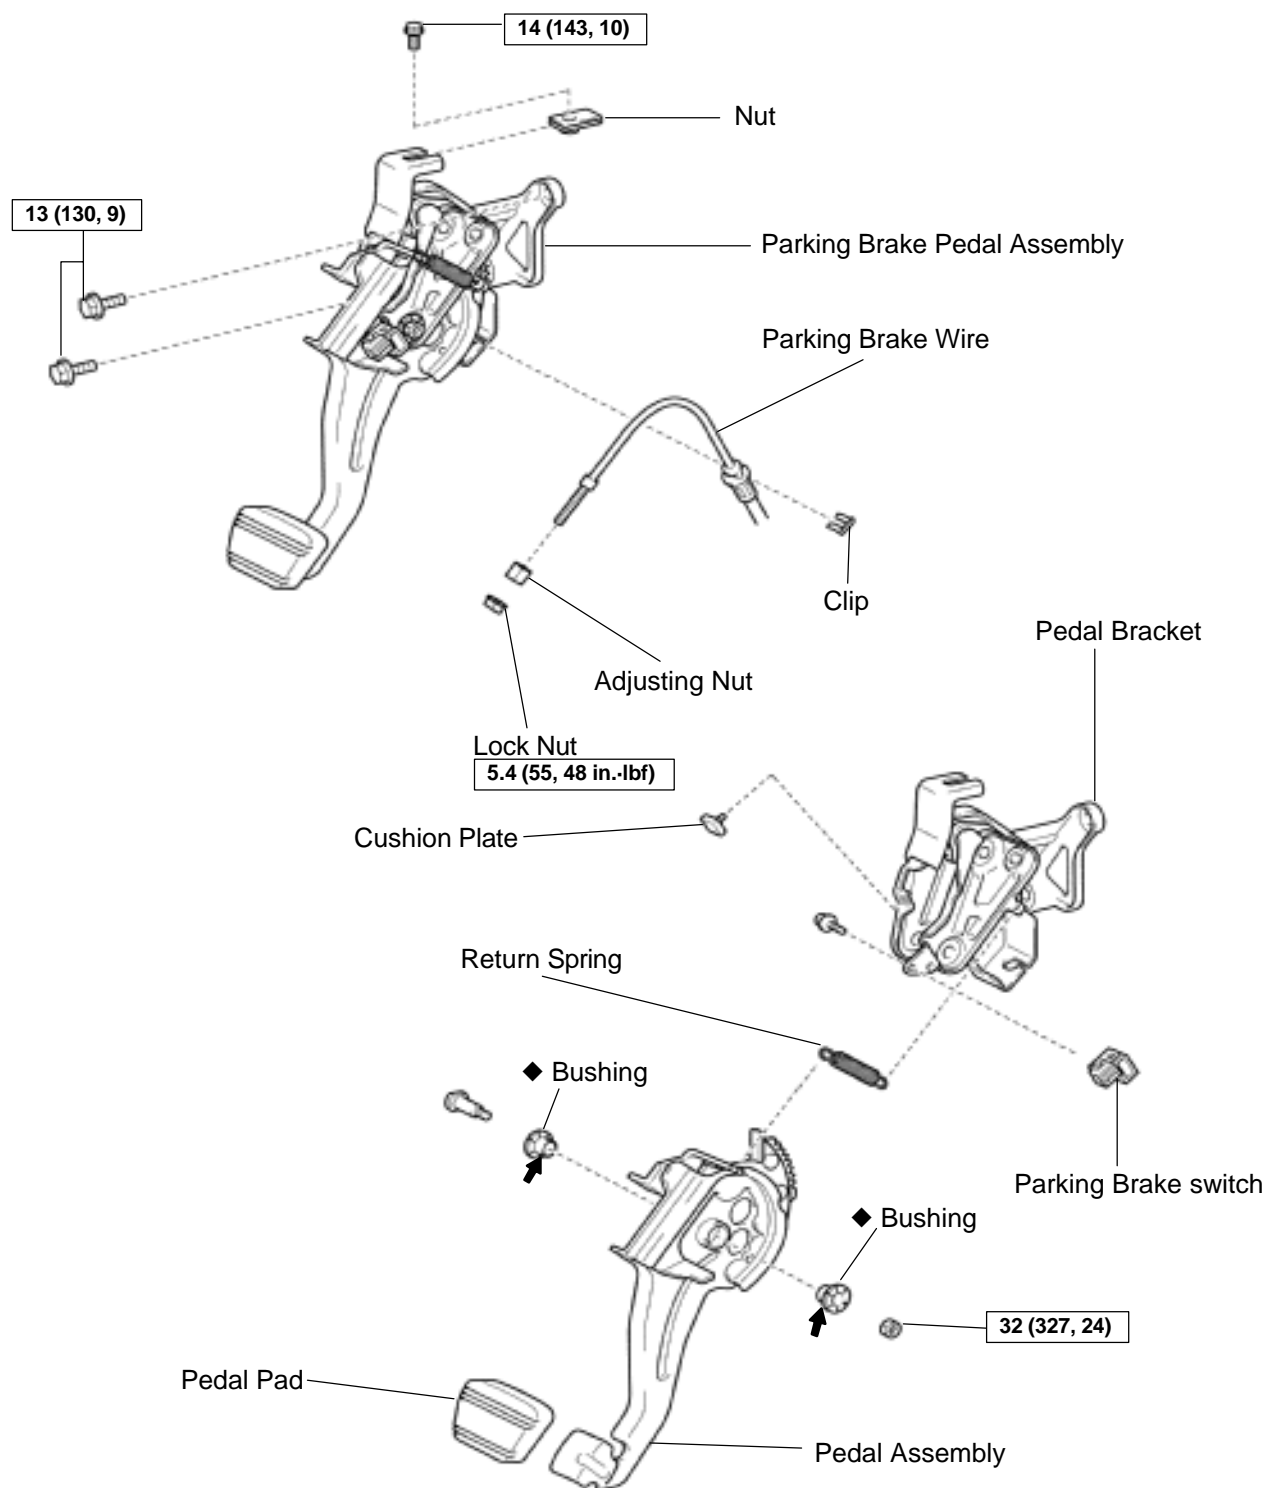

Ⓕ N·m (kgf·cm, ft·lbf) : Specified torque


◆ Non-reusable part

➡ Lithium soap base glycol grease


F12632

BRAKE MASTER CYLINDER COMPONENTS

BR1JF-01

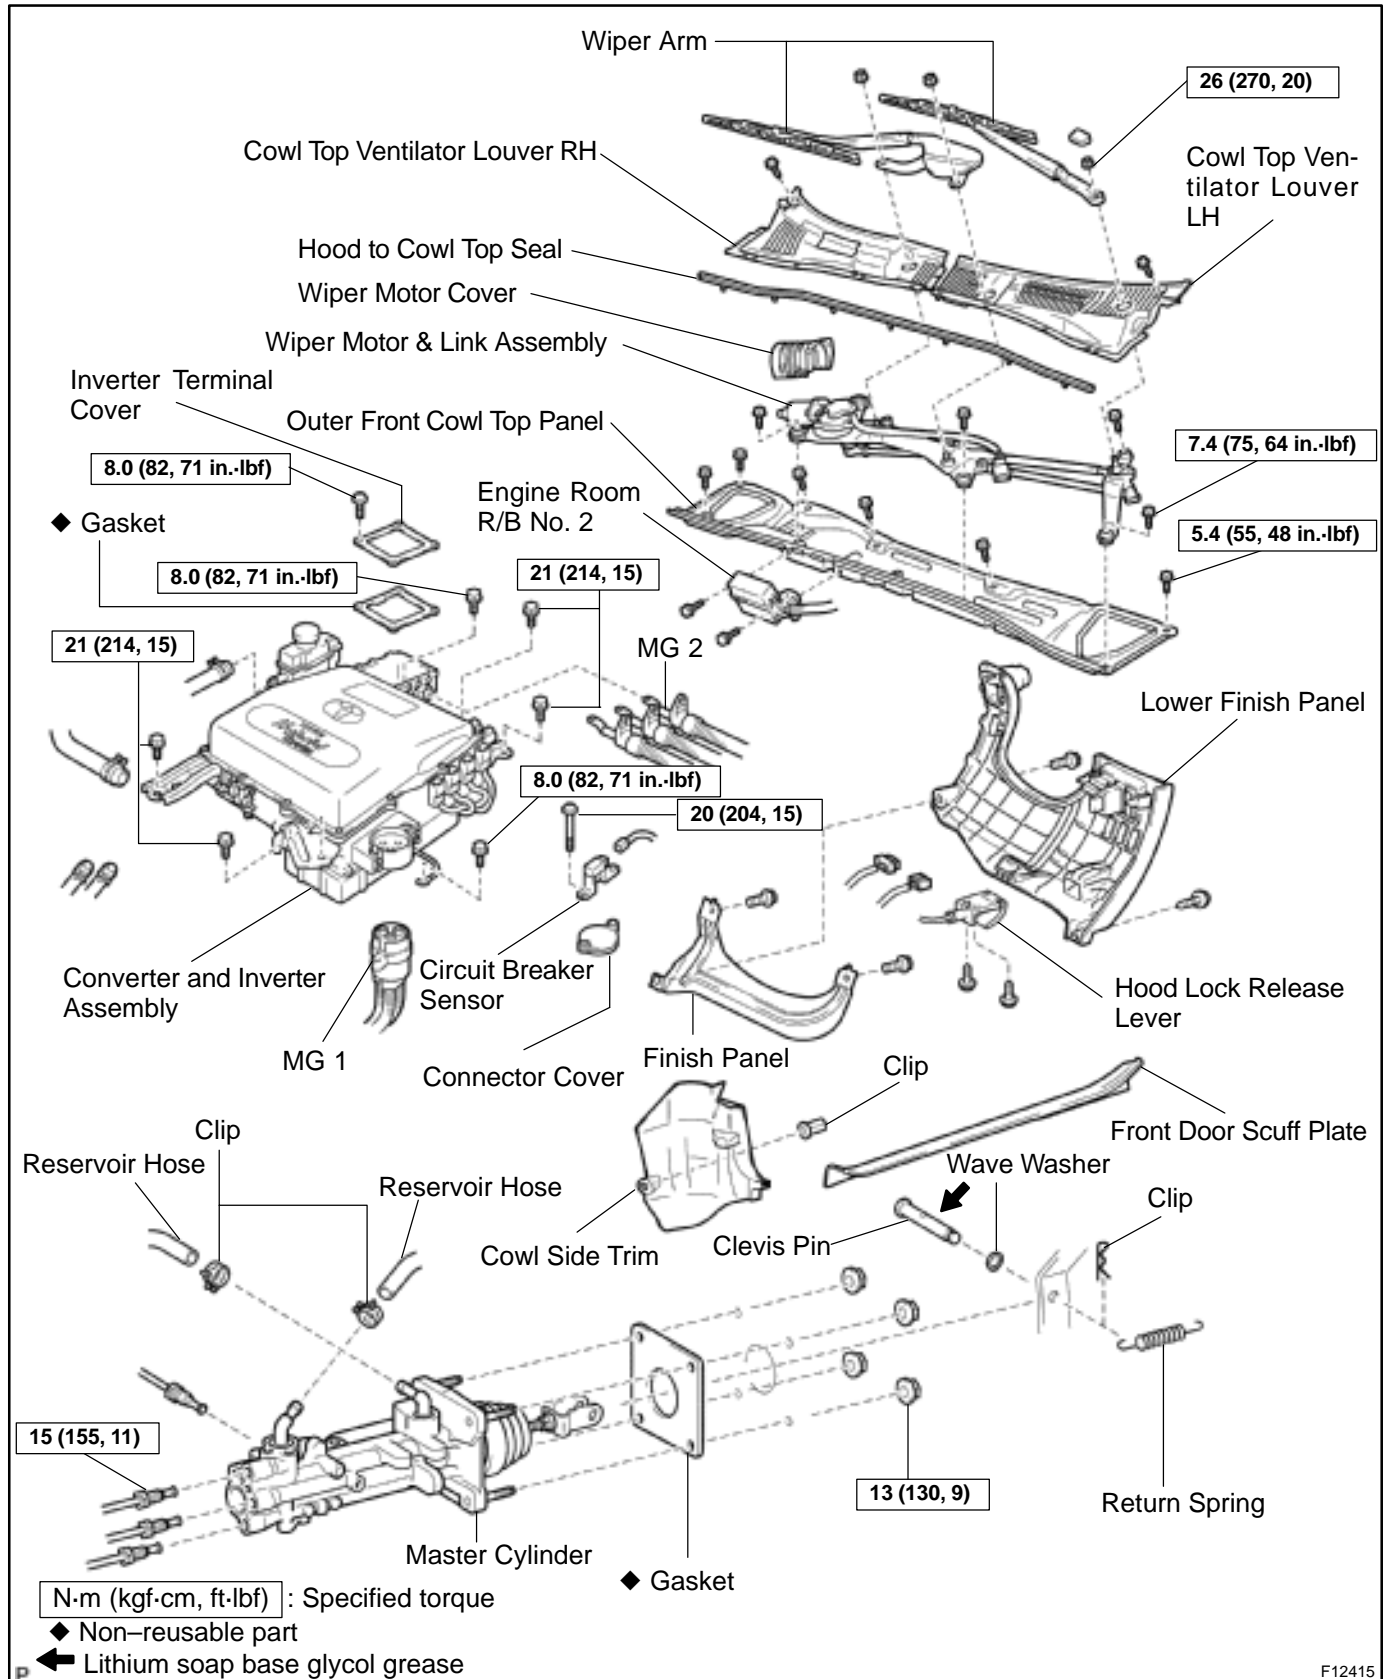

F12415

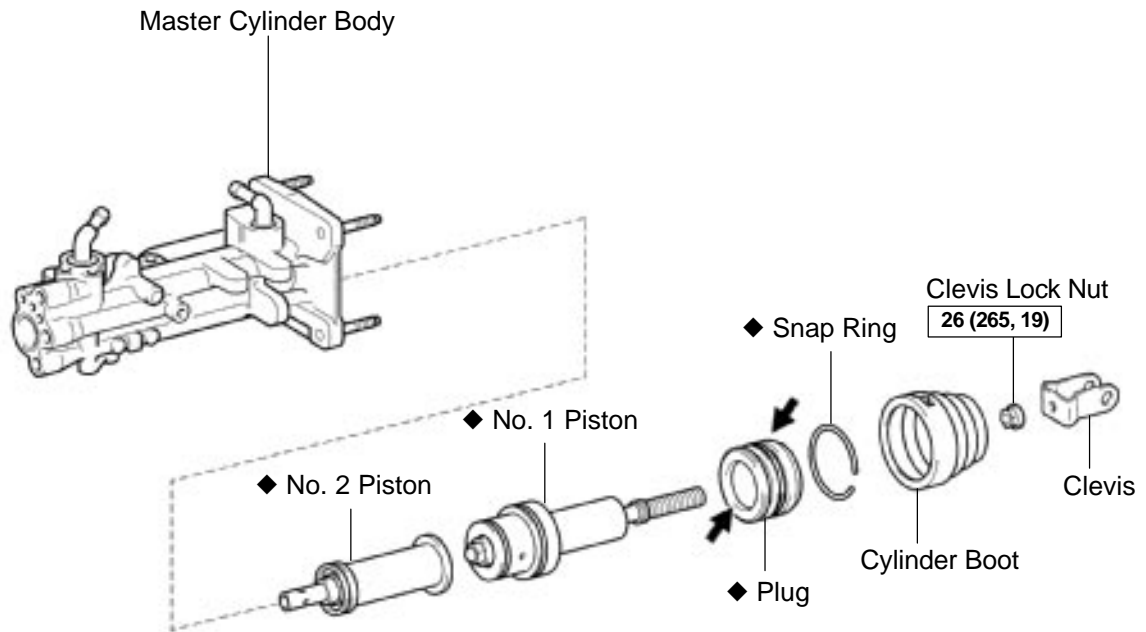


N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non-reusable part

← Lithium soap base glycol grease

F12630

cardiagn.com

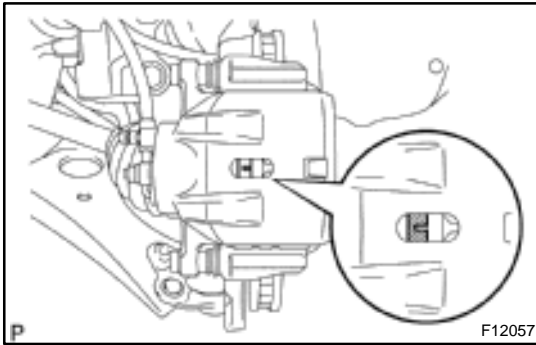

REPLACEMENT

1. **REMOVE FRONT WHEEL**
2. **INSPECT PAD LINING THICKNESS**

Check the pad thickness through the caliper inspection hole and replace the pads if they are not within the specification.

Minimum thickness: 1.0mm (0.039 in.)



3. **LIFT UP CALIPER**

- (a) Hold the sliding pin and remove the bottom side installation bolt.

HINT:

Do not disconnect the flexible hose from the brake caliper.

- (b) Lift up the caliper and suspend it securely.

4. **REMOVE 2 PADS WITH 4 ANTI-SQUEAL SHIMS**

5. **REMOVE 2 PAD SUPPORT PLATES**

NOTICE:

The support plates can be used again provided that they have sufficient rebound, no deformation, cracks or wear, and have had all rust, dirt and foreign particles cleaned off.

6. **CHECK DISC THICKNESS AND RUNOUT**

(See page [BR-29](#))

7. **INSTALL PAD SUPPORT PLATES**

Install the 2 pad support plates.

NOTICE:

Do not assemble the upper and lower pad support plates in reverse.

8. **INSTALL NEW PADS**


NOTICE:

When replacing worn pads, the anti-squeal shims must be replaced together with the pads.

- (a) Apply disc brake grease to both side of the inner anti-squeal shim (See page [BR-23](#)).
- (b) Install the 2 anti-squeal shims on each pad.
- (c) Install the inner pad with the pad wear indicator plate facing upward.
- (d) Install the outer pad.

NOTICE:

There should be no oil or grease adhering to the friction surfaces of the pads or the disc.

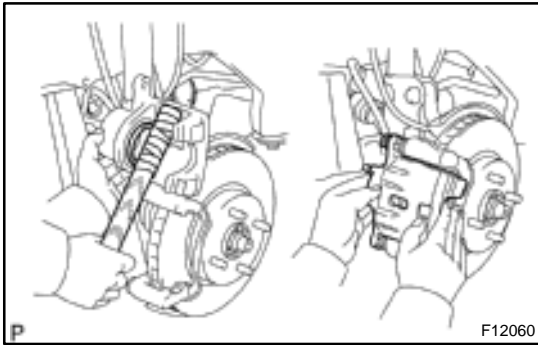**9. INSTALL CALIPER**

- (a) Draw out a small amount of brake fluid from the reservoir.
- (b) Press in the piston with a hammer handle or similar implement.

HINT:

- Tape the hammer handle before use.
- If the piston is difficult to push in, loosen the bleeder plug and push in the piston while letting some brake fluid escape.

- (c) Install the caliper.


- (d) Hold the sliding pin and torque the installation bolts.

Torque: 34 N·m (350 kgf-cm, 25 ft-lbf)

10. INSTALL FRONT WHEEL

Torque: 103 N·m (1,050 kgf-cm, 76 ft-lbf)

11. DEPRESS BRAKE PEDAL SEVERAL TIMES**12. CHECK THAT FLUID LEVEL IS AT MAX LINE**

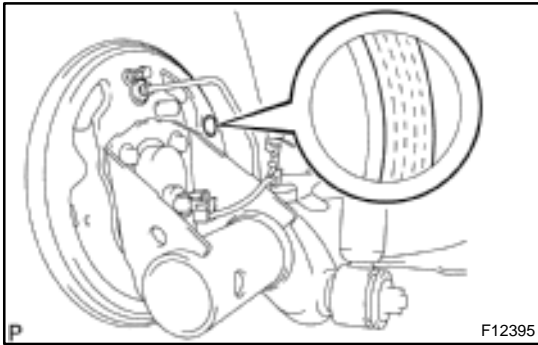

REMOVAL


1. INSPECT SHOE LINING THICKNESS

Remove the inspection hole plug, and check the shoe lining thickness through the hole.

If less than minimum, replace the shoes.

Minimum thickness: 1.0 mm (0.039 in.)

2. REMOVE REAR WHEEL

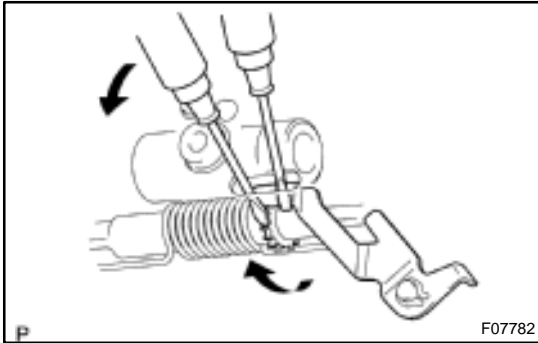

3. REMOVE BRAKE DRUM

- (a) Release the parking brake pedal, and remove the brake drum.

HINT:

If the brake drum cannot be removed easily, do the following steps.



- (b) Remove the plug and insert a screwdriver through the hole in the backing plate.
 (c) Using another screwdriver, reduce the brake shoe adjuster by turning the adjusting wheel.

4. REMOVE FRONT SHOE

- (a) Using SST, disconnect the return spring from the rear shoe.

SST 09703-30010

- (b) Using needle-nose pliers, remove the anchor spring.

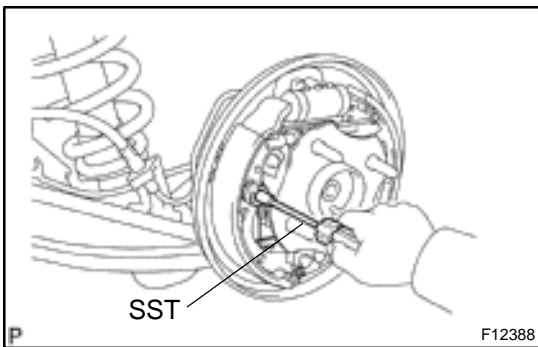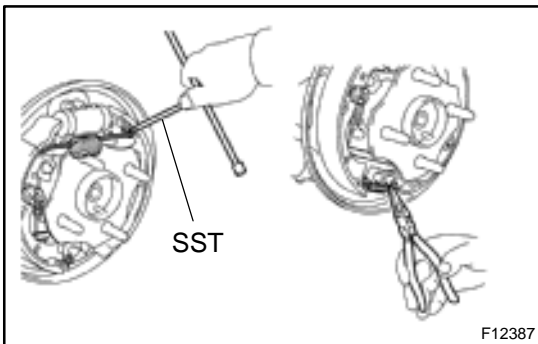

- (c) Using SST, remove the cap, shoe hold-down spring and pin from the front shoe.

SST 09718-00010

- (d) Remove the adjuster and return spring together with the front shoe.

- (e) Using needle-nose pliers, remove the adjusting lever spring.

- (f) Remove the automatic adjusting lever from the front shoe.

5. REMOVE REAR SHOE

- (a) Using SST, remove the cap, shoe hold-down spring and pin.


SST 09718-00010



- (b) Using needle-nose pliers, disconnect the parking brake cable from the parking brake lever, and remove the rear shoe.

6. REMOVE PARKING BRAKE LEVER

- (a) Remove the C-washer.
(b) Remove the parking brake lever from the rear shoe.

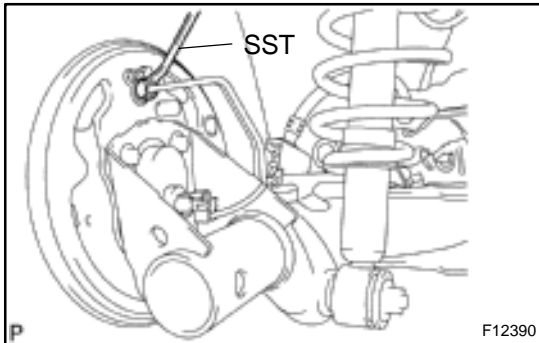

7. REMOVE WHEEL CYLINDER

- (a) Using SST, disconnect the brake line. Use container to catch the brake fluid.

SST 09751-36011

Torque: 15 N·m (155 kgf-cm, 11 ft-lbf)


- (b) Remove the bolt and the wheel cylinder.

Torque: 10 N·m (100 kgf-cm, 7 ft-lbf)

8. DISASSEMBLE WHEEL CYLINDER

- (a) Remove the 2 boots from the wheel cylinder.
(b) Remove the 2 pistons from the wheel cylinder.
(c) Remove the spring from the wheel cylinder.
(d) Remove the 2 piston cups from each piston.

COMPONENTS

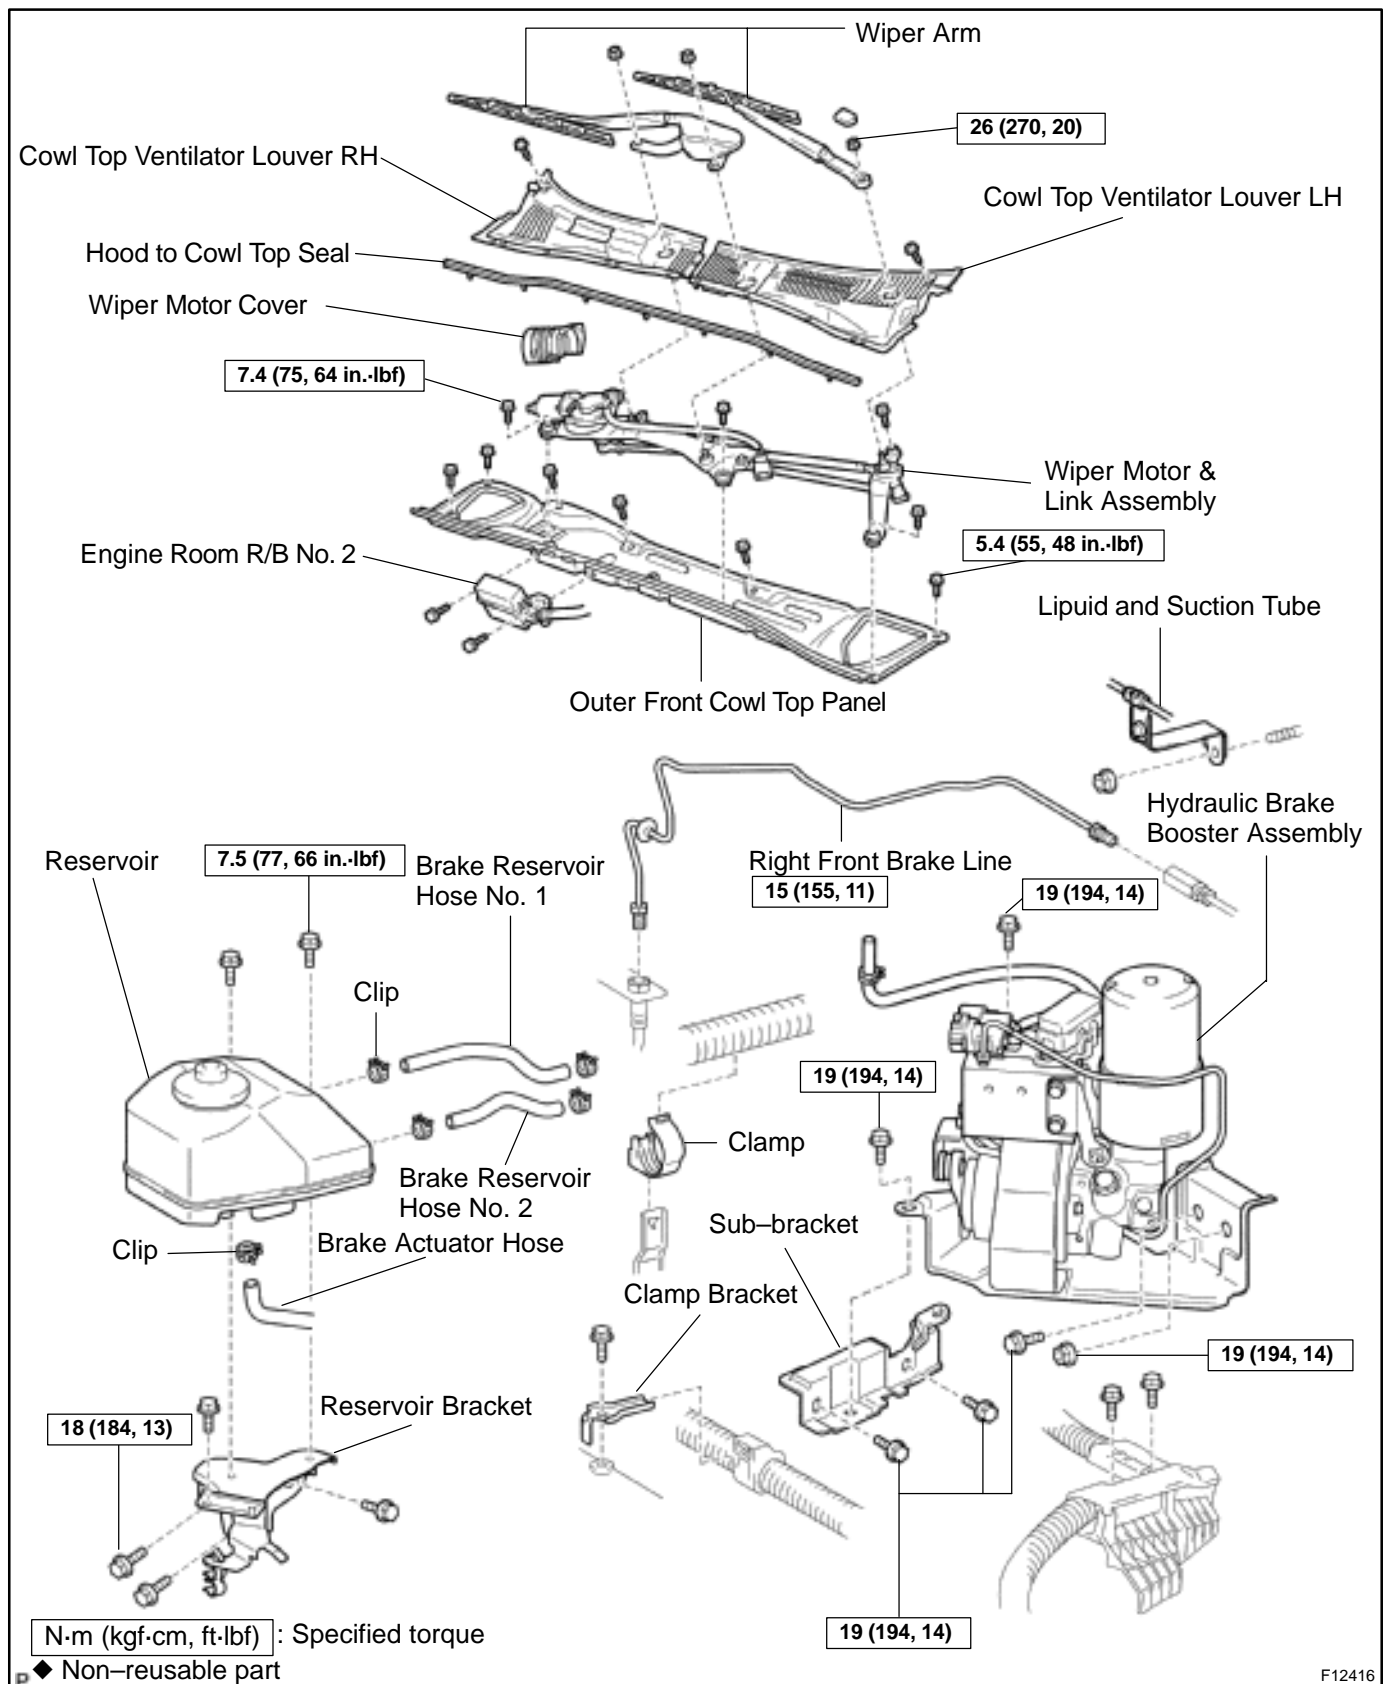

F12416



REMOVAL

NOTICE:

Before starting the work, make sure that the ignition switch is OFF and depress the brake pedal more than 40 times.

HINT:

When a pressure in power supply system is released, reaction force becomes heavy.

NOTICE:

- As high pressure is applied to the brake actuator tube, never deform it.
- Until the work is over, do not turn the ignition switch ON.

1. DRAW OUT FLUID WITH SYRINGE

NOTICE:


Do not let brake fluid remain on a painted surface. Wash it off immediately.

2. REMOVE OUTER FRONT COWL TOP PANEL (See page [BO-32](#))

3. REMOVE RESERVOIR, BRAKE ACTUATOR HOSE, BRAKE RESERVOIR HOSE NO. 1, NO. 2 AND RESERVOIR BRACKET


- (a) Disconnect the fluid level warning switch connector from the reservoir.
- (b) Remove the 2 bolts from the reservoir.
Torque: 7.5 N·m (77 kgf·cm, 66 in.-lbf)
- (c) Disconnect the 3 hoses from the reservoir and remove the reservoir and 3 hoses.
- (d) Disconnect the 3 hoses from the reservoir bracket clamp.
- (e) Remove the 4 bolts and reservoir bracket.

Torque: 18 N·m (184 kgf·cm, 13 ft-lbf)

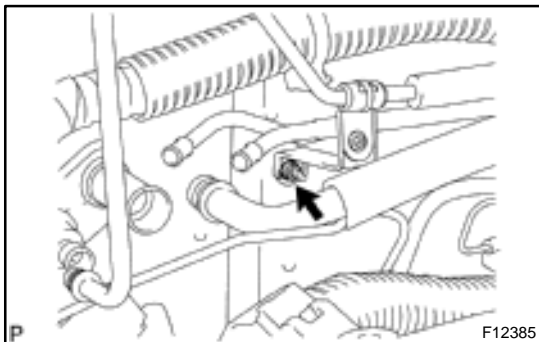

4. DISCONNECT LIQUID AND SUCTION TUBES

- (a) Disconnect the liquid and suction tubes
(See page [AC-25](#)).
- (b) Remove the nut and release the liquid and suction tubes.

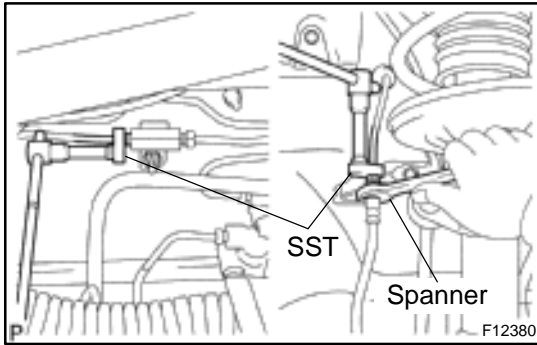


5. REMOVE RIGHT FRONT BRAKE LINE

- (a) Using SST and spanner, disconnect the right front brake line from the flexible hose and 2 way.

SST 09023-00100

Torque: 15 N·m (155 kgf-cm, 11 ft-lbf)

- (b) Pull out the brake line with the grommet from the body.

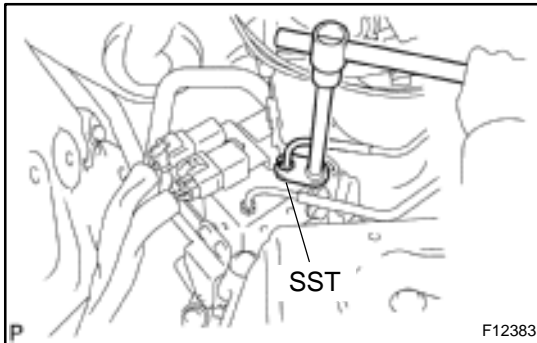


6. DISCONNECT BRAKE LINE


Using SST, disconnect the brake line from the hydraulic brake booster assembly.

SST 09023-00100

Torque: 15 N·m (155 kgf-cm, 11 ft-lbf)

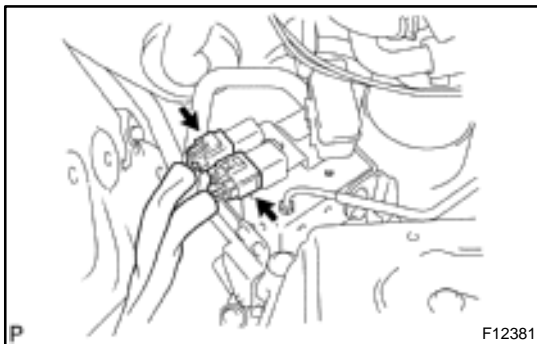


7. DISCONNECT 2 CONNECTORS

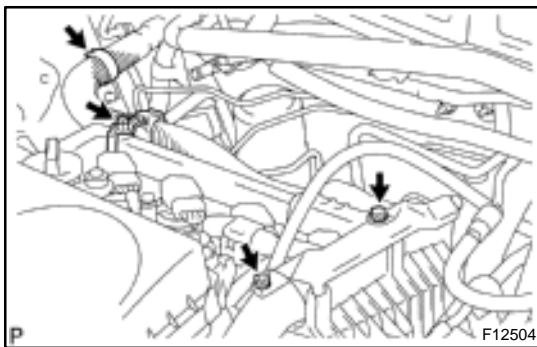


8. REMOVE HYDRAULIC BRAKE BOOSTER ASSEMBLY


- (a) Remove the clamp, clamp bracket and 3 bolts.

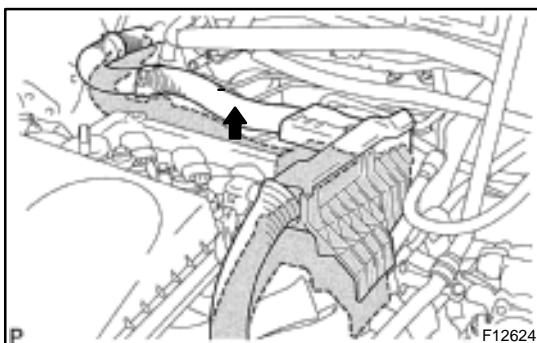

- (b) Release the wire harness to remove the hydraulic brake booster assembly.

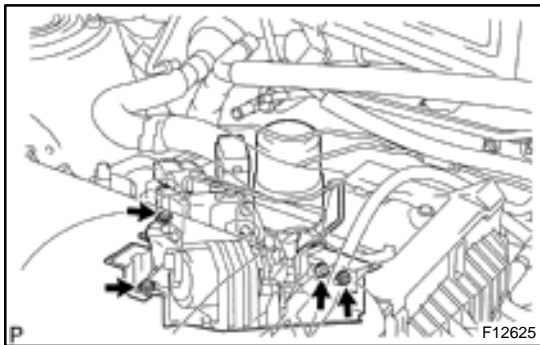


- (c) Remove the 3 installation bolts and a nut.
Torque: 19 N·m (194 kgf-cm, 14 ft-lbf)
- (d) Remove the hydraulic brake booster assembly.
- (e) Remove the 2 bolts and sub-bracket.
Torque: 19 N·m (194 kgf-cm, 14 ft-lbf)

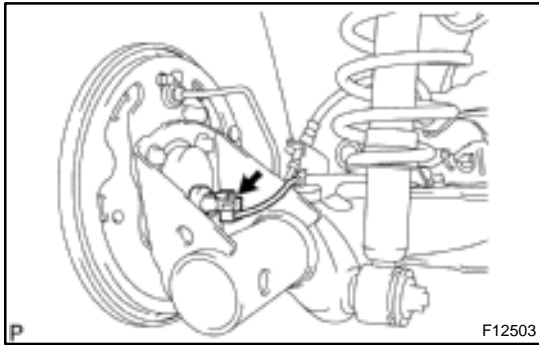

REMOVAL

1. **REMOVE REAR WHEEL**
2. **DISCONNECT SPEED SENSOR CONNECTOR**
Disconnect the connector from the speed sensor.
3. **REMOVE SPEED SENSOR WITH REAR AXLE HUB**
(See page [SA-46](#))
4. **REMOVE SPEED SENSOR**
 - (a) Using a pin punch and hammer, drive out the 2 pins and remove the 2 attachments from SST.

SST 09520-00031

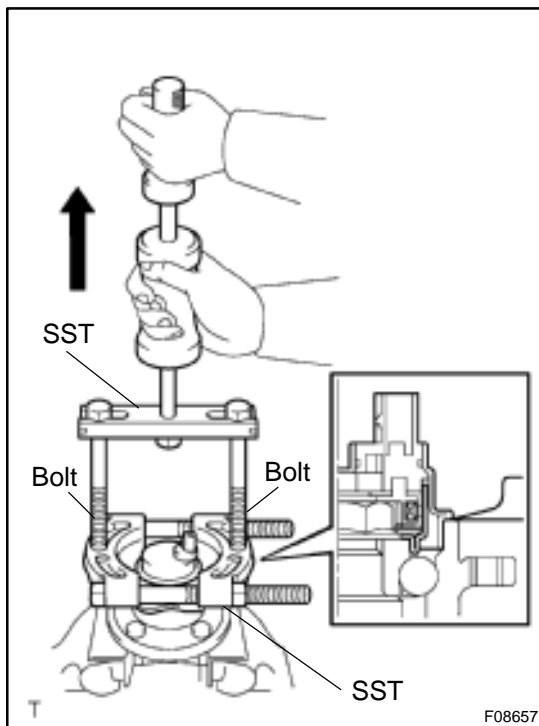

- (b) Mount the rear axle hub in a soft jaw vise.

NOTICE:


Replace the axle hub assembly if it is dropped or a strong shock is given to it.

- (c) Using SST and 2 bolts (Diameter: 12 mm, Pitch: 1.5 mm), remove the speed sensor.

SST 09520-00031 (09520-00040, 09521-00020),
09950-00020

NOTICE:

- If a damage is inflicted to the sensor rotor, replace the axle hub assembly.
- Do not scratch the contacting surface of axle hub and speed sensor.

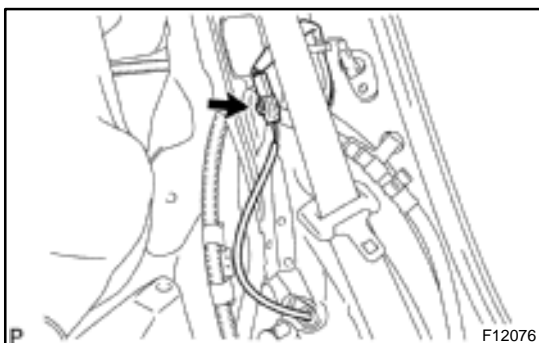

5. **IF NECESSARY, REPLACE SPEED SENSOR WIRE HARNESS**

- (a) Remove the seat cushion, seatback and quarter trim
(See page [BO-83](#)).
- (b) Disconnect the speed sensor wire harness connector.

- (c) Remove the 2 bolts, 2 nuts holding the sensor harness from the lower arm and body.
Torque: 5.5 N·m (56 kgf·cm, 49 in·lbf)
- (d) Replace the sensor wire harness with the grommet.

STEERING SYSTEM

SR08F-07

PRECAUTION


- Care must be taken to replace parts properly because they could affect the performance of the steering system and result in a driving hazard.
- The PRIUS is equipped with SRS (Supplemental Restraint System) such as the driver airbag and passenger airbag. Failure to carry out service operation in the correct sequence could cause the SRS to unexpectedly deploy during servicing, possibly leading to a serious accident. Before servicing (including removal or installation of parts, inspection or replacement), be sure to read the precautionary notices in the RS section.

cardiagn.com

TILT STEERING COLUMN COMPONENTS


SR1BE-01

cardiagn.com

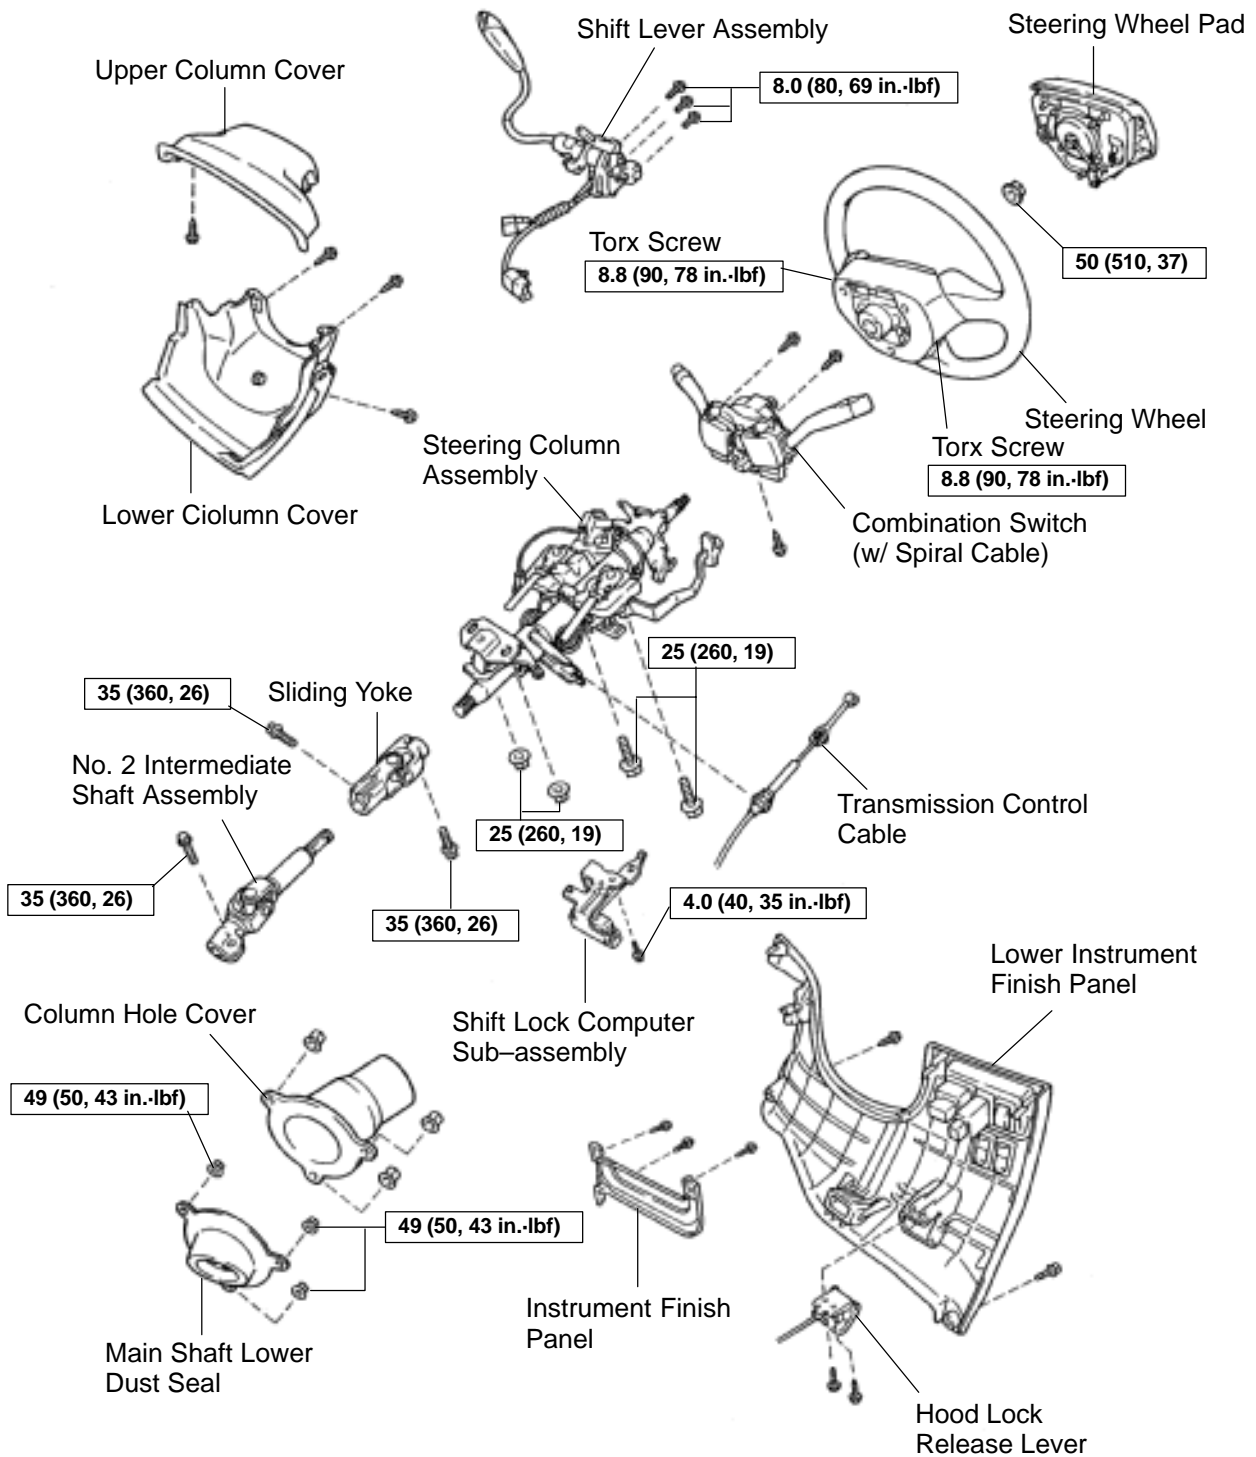

N·m (kgf·cm, ft·lbf) : Specified torque

F12219

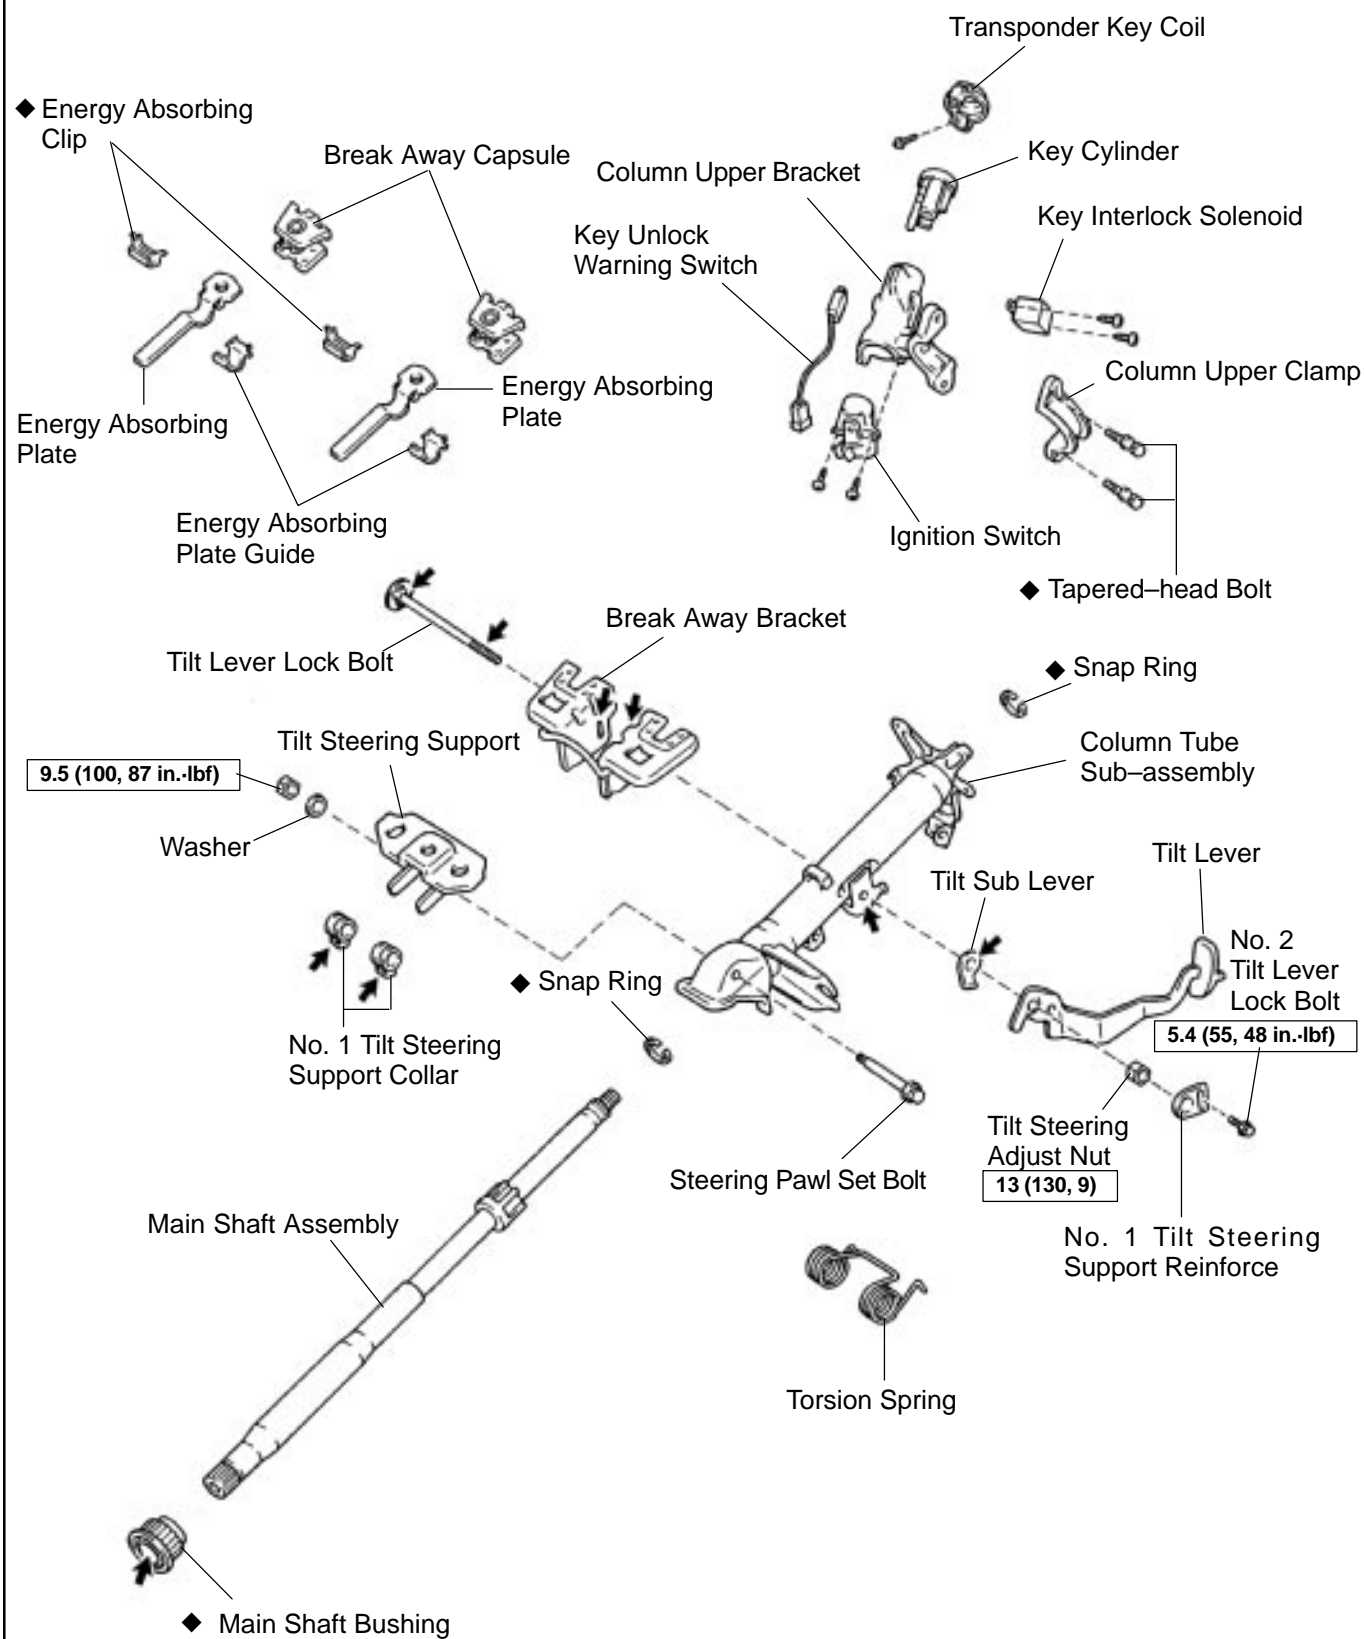

N-m (kgf·cm, ft·lbf) : Specified torque

◆ Non-reusable part

◀ Molybdenum disulfide lithium base grease

F12238


REMOVAL

1. REMOVE STEERING WHEEL PAD


NOTICE:

If the airbag connector is disconnected with the ignition switch at ON, DTCs will be recorded.

- (a) Place the front wheels facing straight ahead.

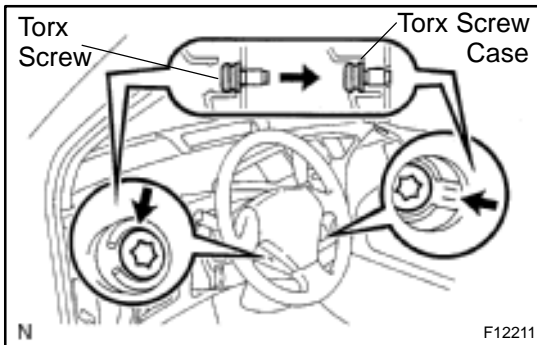

- (b) Using a torx socket wrench, loosen the 2 torx screws until the groove along the screw circumference catches on the screw case.

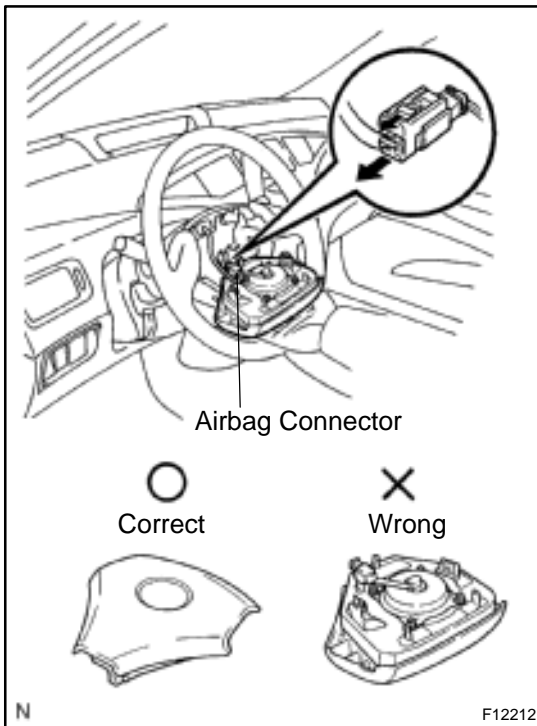


- (c) Pull out the wheel pad from the steering wheel and disconnect the airbag connector.
(d) Disconnect the connector.

CAUTION:

- When storing the wheel pad, keep the upper surface of the pad facing upward.
- Never disassemble the wheel pad.

NOTICE:

When removing the wheel pad, take care not to pull the airbag wire harness.

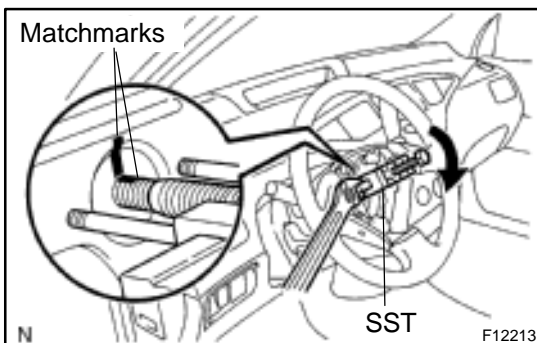

2. REMOVE STEERING WHEEL

- (a) Remove the steering wheel set nut.
(b) Place matchmarks on the steering wheel and main shaft assembly.
(c) Using SST, remove the steering wheel.
SST 09950-50012 (09951-05010, 09952-05010, 09953-05020, 09954-05020)

3. REMOVE LOWER INSTRUMENT FINISH PANEL

- (a) Remove the 2 screws and disconnect hood lock release lever.
- (b) Remove the screw and bolt.
- (c) Disconnect the connectors and DLC3, and remove the lower instrument finish panel.

4. REMOVE UPPER AND LOWER COLUMN COVERS

- (a) Remove the 3 screws and lower column cover.
- (b) Remove the screw and upper column cover.

5. REMOVE COMBINATION SWITCH WITH SPIRAL CABLE

- (a) Disconnect the connectors.
- (b) Disconnect the airbag connector.
- (c) Remove the 3 screws and combination switch with spiral cable.

6. REMOVE SPIRAL CABLE (See page BE-19)**NOTICE:**

Do not disassemble the spiral cable or apply oil to it.

**7. DISCONNECT TRANSMISSION CONTROL CABLE****8. REMOVE SHIFT LEVER ASSEMBLY**


(See page HT-50)

9. DISCONNECT COLUMN HOLE COVER

Remove the 3 clips and disconnect the column hole cover.

10. REMOVE SHIFT LOCK COMPUTER SUB-ASSEMBLY

Remove the screw and shift lock computer sub-assembly.

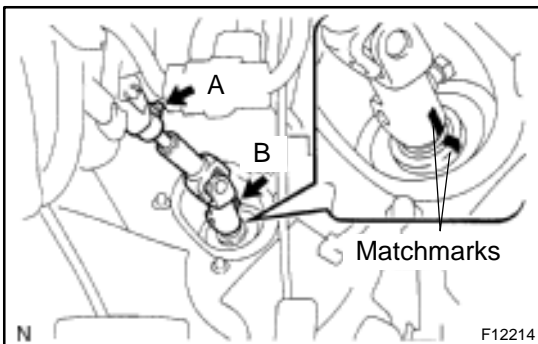**11. DISCONNECT NO. 2 INTERMEDIATE SHAFT ASSEMBLY**

- (a) Place matchmarks on the No. 2 intermediate shaft assembly and control valve shaft.
- (b) Loosen the bolt "A" and remove the bolt "B", then disconnect the No. 2 intermediate shaft assembly from the control valve shaft.

12. REMOVE INSTRUMENT FINISH PANEL

Remove the 3 screws and instrument finish panel.

13. REMOVE STEERING COLUMN ASSEMBLY

- (a) Disconnect the connectors.
- (b) Remove the 2 bolts, 2 nuts and steering column assembly.


14. REMOVE NO. 2 INTERMEDIATE SHAFT ASSEMBLY

Remove the bolt and No. 2 intermediate shaft assembly from the sliding yoke.

15. REMOVE SLIDING YOKE

Remove the bolt and sliding yoke from the main shaft assembly.

16. REMOVE COLUMN HOLE COVER

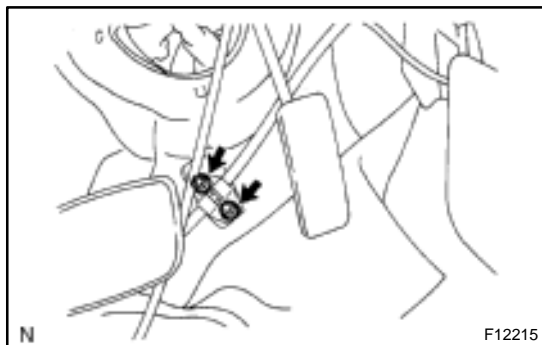**17. REMOVE MAIN SHAFT LOWER DUST SEAL**

- (a) Remove the 2 nuts and parking brake cable bracket.
- (b) Remove the 2 bolts and disconnect the accelerator pedal.
- (c) Remove the 3 nuts and main shaft lower dust seal.

DISASSEMBLY

NOTICE:


When using a vise, do not overtighten it.

1. REMOVE TRANSPONDER KEY COIL

Remove the screw and transponder key coil.

2. REMOVE COLUMN UPPER BRACKET AND COLUMN UPPER CLAMP


- Using a centering punch, mark the center of the 2 tapered-head bolts.
- Using a 3 – 4 mm (0.12 – 0.16 in.) drill, drill into the 2 bolts.

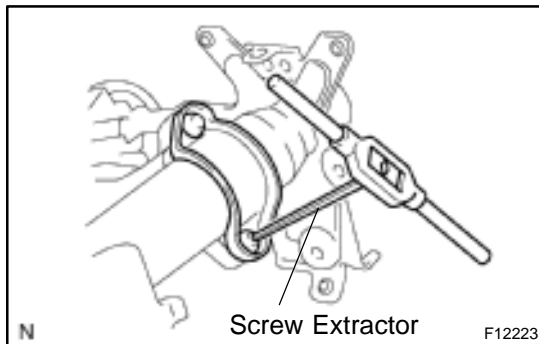

- Using a screw extractor, remove the 2 bolts, column upper bracket and column upper clamp.


3. REMOVE TILT STEERING SUPPORT

- Remove the lock nut.
- Remove the washer, steering pawl set bolt and tilt steering support.
- Remove the 2 No. 1 tilt steering support collars.

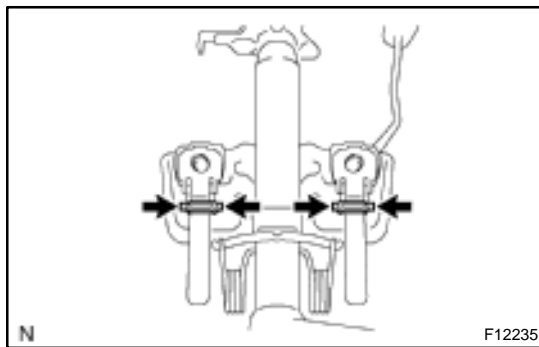


4. REMOVE 2 ENERGY ABSORBING PLATES

- Using pliers, remove the 2 energy absorbing clips.
- Remove the 2 energy absorbing plates, 2 energy absorbing guides, and 2 break away capsules.

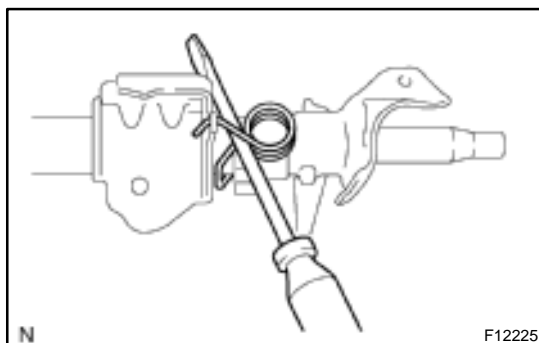

5. REMOVE TORSION SPRING


Using a screw driver, remove the torsion spring.

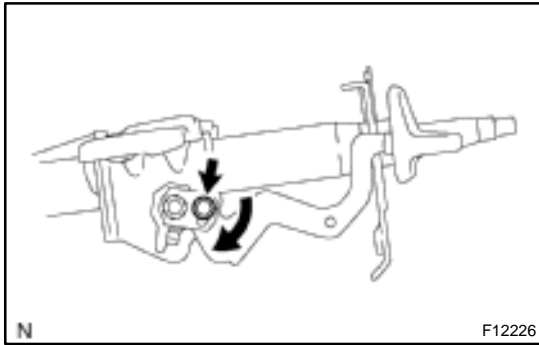**6. REMOVE TILT LEVER AND BREAK AWAY BRACKET**

- (a) Remove No. 2 tilt lever lock bolt and No. 1 tilt steering support reinforce.

HINT:

This bolt is left-handed one.

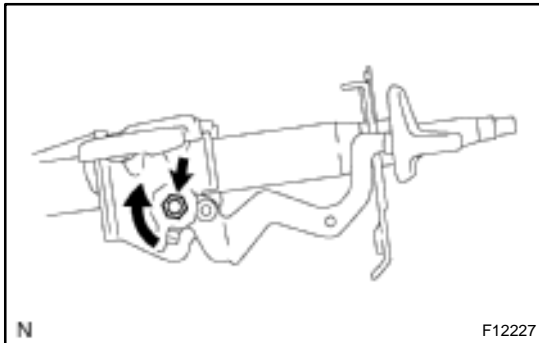


- (b) Remove the tilt steering adjusting nut, tilt lever, tilt sub lever, tilt lever lock bolt and break away bracket.

HINT:

This bolt is left-handed one.

7. REMOVE MAIN SHAFT ASSEMBLY AND MAIN SHAFT BUSHING

- (a) Using a snap ring expander, remove the snap ring on the upper side.

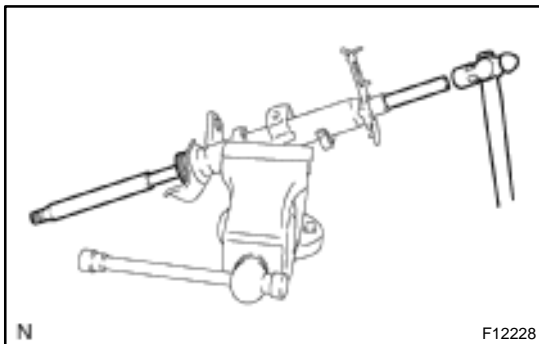


- (b) Using a brass bar and a hammer, tap out the main shaft assembly with the main shaft bushing.
- (c) Remove the main shaft bushing.
- (d) Using a snap ring expander, remove the snap ring on the lower side.

REASSEMBLY

NOTICE:

When using a vise, do not overtighten it.

1. **COAT PARTS INDICATED BY ARROWS WITH MOLYBDENUM DISULFIDE LITHIUM BASE GREASE (See page [SR-4](#))**
2. **INSTALL MAIN SHAFT ASSEMBLY**
 - (a) Using a snap ring expander, install a new snap ring on the lower side.
 - (b) Install the main shaft assembly.
 - (c) Using a snap ring expander, install a new snap ring on the upper side.

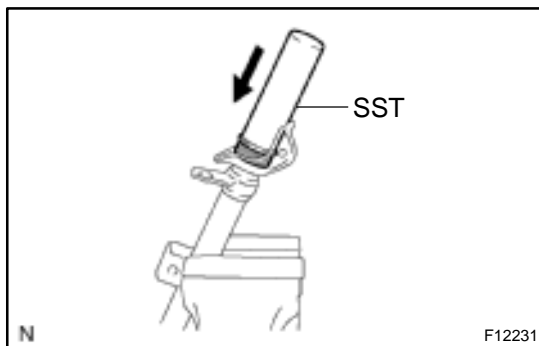

3. INSTALL MAIN SHAFT BUSHING


- (a) Coat a new bushing with molybdenum disulfide lithium base grease.
- (b) Using SST and a hammer, tap in the main shaft bushing. SST 09608-06041

4. INSTALL BREAK AWAY BRACKET AND TILT LEVER

- (a) Install break away bracket, tilt lever lock bolt, tilt sub lever and tilt lever.


HINT:

Align the holes in the break away bracket with the projections of the tilt lever lock bolt and tilt sub lever.

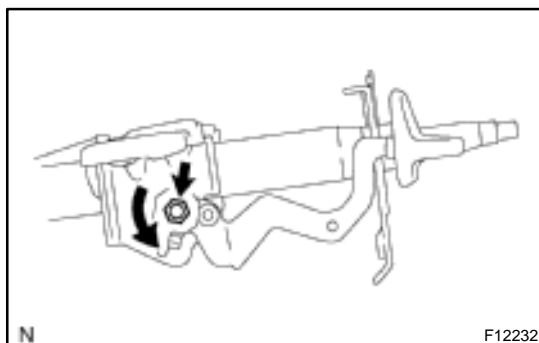

- (b) Install the tilt steering adjusting nut by rotating it counter-clockwise.

Torque: 13 N·m (130 kgf·cm, 9 ft·lbf)

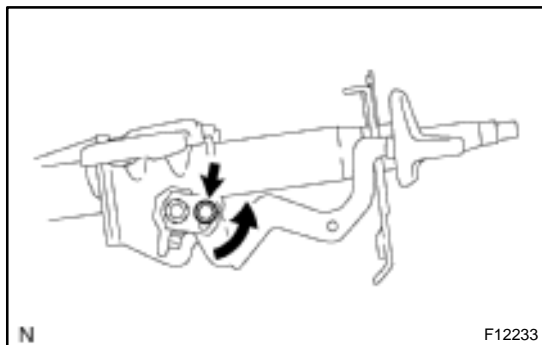


- (c) Install the No. 1 tilt steering support reinforce with the No. 2 tilt lever lock bolt by turning it counterclockwise.

Torque: 5.4 N·m (55 kgf·cm, 48 in.-lbf)

HINT:


Align the No. 1 support reinforce with the nut to eliminate looseness by turning the No. 1 support reinforce counterclockwise a little, then torque the No. 2 tilt lever lock bolt.

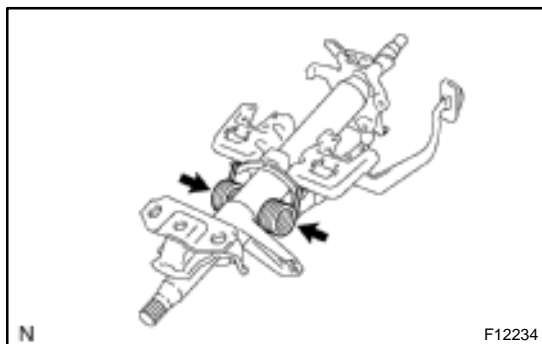

5. INSTALL TORSION SPRING

6. INSTALL 2 ENERGY ABSORBING PLATES

- (a) Install the 2 break away capsules, 2 energy absorbing guides and 2 energy absorbing plates.

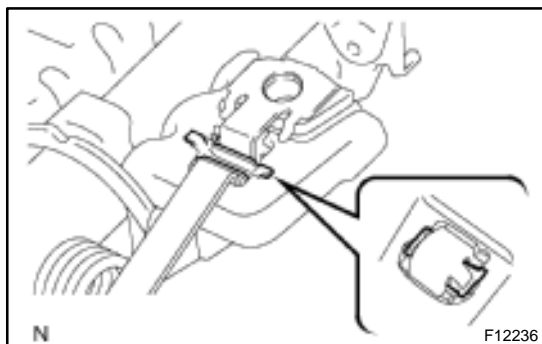


- (b) Install the 2 new energy absorbing clips.

7. INSTALL TILT STEERING SUPPORT

- (a) Install the 2 No. 1 tilt steering support collars.
 (b) Install the tilt steering support, steering pawl set bolt, washer.
 (c) Install the lock nut.

Torque: 9.5 N·m (100 kgf·cm, 87 in.-lbf)

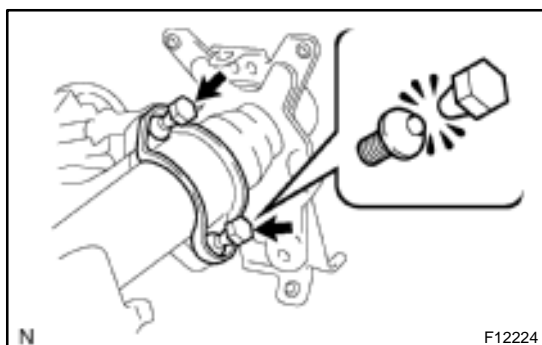


8. INSTALL COLUMN UPPER BRACKET AND COLUMN UPPER CLAMP

- (a) Install the column upper bracket and column upper clamp with 2 new tapered-head bolts.
 (b) Tighten the 2 tapered-head bolts until the bolt heads break off.

INSTALLATION

1. INSTALL MAIN SHAFT LOWER DUST SEAL

- Install the main shaft lower dust seal with the 3 nuts.
Torque: 4.9 N·m (50 kgf-cm, 43 in.-lbf)
- Connect the accelerator pedal with the 2 bolts.

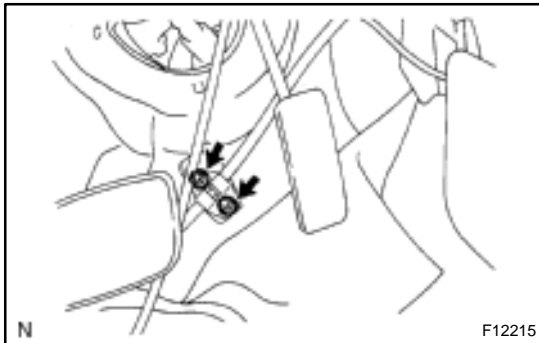

- Install the parking brake cable bracket with the 2 nuts.

2. INSTALL COLUMN HOLE COVER

3. INSTALL SLIDING YOKE

Install the sliding yoke to the main shaft assembly with the bolt.

Torque: 35 N·m (360 kgf-cm, 26 ft-lbf)

4. INSTALL NO. 2 INTERMEDIATE SHAFT ASSEMBLY

Temporarily install the No. 2 intermediate shaft assembly to the sliding yoke with the bolt.

5. INSTALL STEERING COLUMN ASSEMBLY


- Install the steering column assembly with the 2 bolts and 2 nuts.

Torque: 25 N·m (260 kgf-cm, 19 ft-lbf)

- Connect the connectors.

6. INSTALL INSTRUMENT FINISH PANEL

Install the instrument finish panel with the 3 screws.

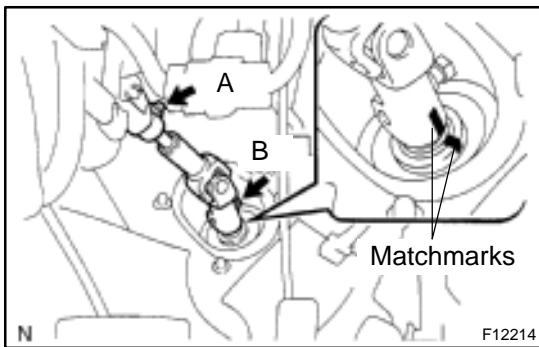

7. CONNECT NO. 2 INTERMEDIATE SHAFT ASSEMBLY

- Align the matchmarks on the No. 2 intermediate shaft assembly and control valve shaft.
- Install the bolt "B" and torque the bolt "A".

Torque: 35 N·m (360 kgf-cm, 26 ft-lbf)

8. INSTALL SHIFT LOCK COMPUTER SUB-ASSEMBLY

Install the shift lock computer sub-assembly with the screw.

9. CONNECT COLUMN HOLE COVER


Connect the column hole cover with the 3 clips.

10. INSTALL SHIFT LEVER ASSEMBLY

(See page [HT-52](#))



- 11. CONNECT TRANSMISSION CONTROL CABLE**
- 12. INSTALL SPIRAL CABLE (See page BE-19)**
- 13. INSTALL COMBINATION SWITCH WITH SPIRAL CABLE**
 - (a) Install the combination switch with spiral cable with the 3 screws.
 - (b) Connect the airbag connector.
 - (c) Connect the connectors.
- 14. INSTALL UPPER AND LOWER COLUMN COVERS**
 - (a) Install the upper column cover with the screw.
 - (b) Install the lower column cover with the 3 screws.
- 15. INSTALL LOWER INSTRUMENT FINISH PANEL**
 - (a) Connect the connectors and DLC3 and install the lower instrument finish panel.
 - (b) Install the screw and bolt.
 - (c) Connect the hood lock release lever with the 2 screws.

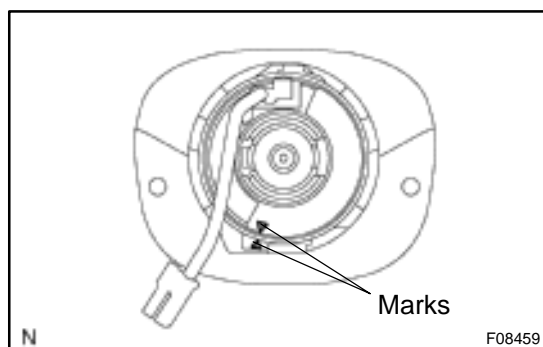

- 16. CENTER SPIRAL CABLE**
 - (a) Check that the front wheels are facing straight ahead.
 - (b) Turn the cable counterclockwise by hand until it becomes harder to turn.
 - (c) Then rotate the cable clockwise about 2.5 turns to align the marks.

HINT:


The cable will rotate about 2.5 turns to either left or right of the center.

- 17. INSTALL STEERING WHEEL**
 - (a) Align the matchmarks on the steering wheel and main shaft assembly.
 - (b) Install the steering wheel set nut.
Torque: 50 N·m (510 kgf-cm, 37 ft-lbf)

18. INSTALL STEERING WHEEL PAD**NOTICE:**

- Never use airbag parts from another vehicle. When replacing parts, replace with new ones.
- Make sure the wheel pad is installed with the specified torque.
- If the wheel pad has been dropped, or there are cracks, dents or other defects in the case or connector, replace the wheel pad with a new one.
- When installing the wheel pad, take care that the wirings do not interfere with other parts and that they are not pinched between other parts.


- (a) Connect the connector.
- (b) Connect the airbag connector.

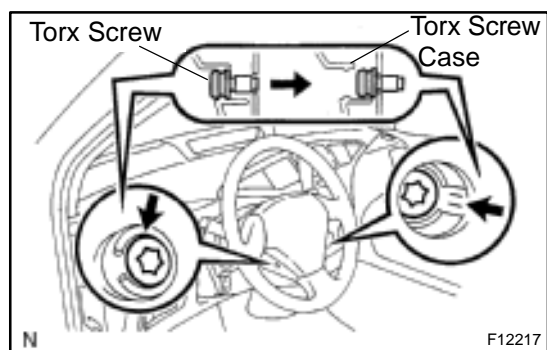

- (c) Install the steering wheel pad after confirming that the circumference groove of the torx screws is caught on the screw case.
- (d) Using a torx socket wrench, torque the 2 screws.
Torque: 8.8 N·m (90 kgf·cm, 78 in.·lbf)
- 19. **CHECK STEERING WHEEL CENTER POINT**
- 20. **PERFORM CALIBRATION OF TORQUE SENSOR ZERO POINT (See page [DI-454](#))**

ELECTRIC POWER STEERING GEAR COMPONENTS


SR1BK-01

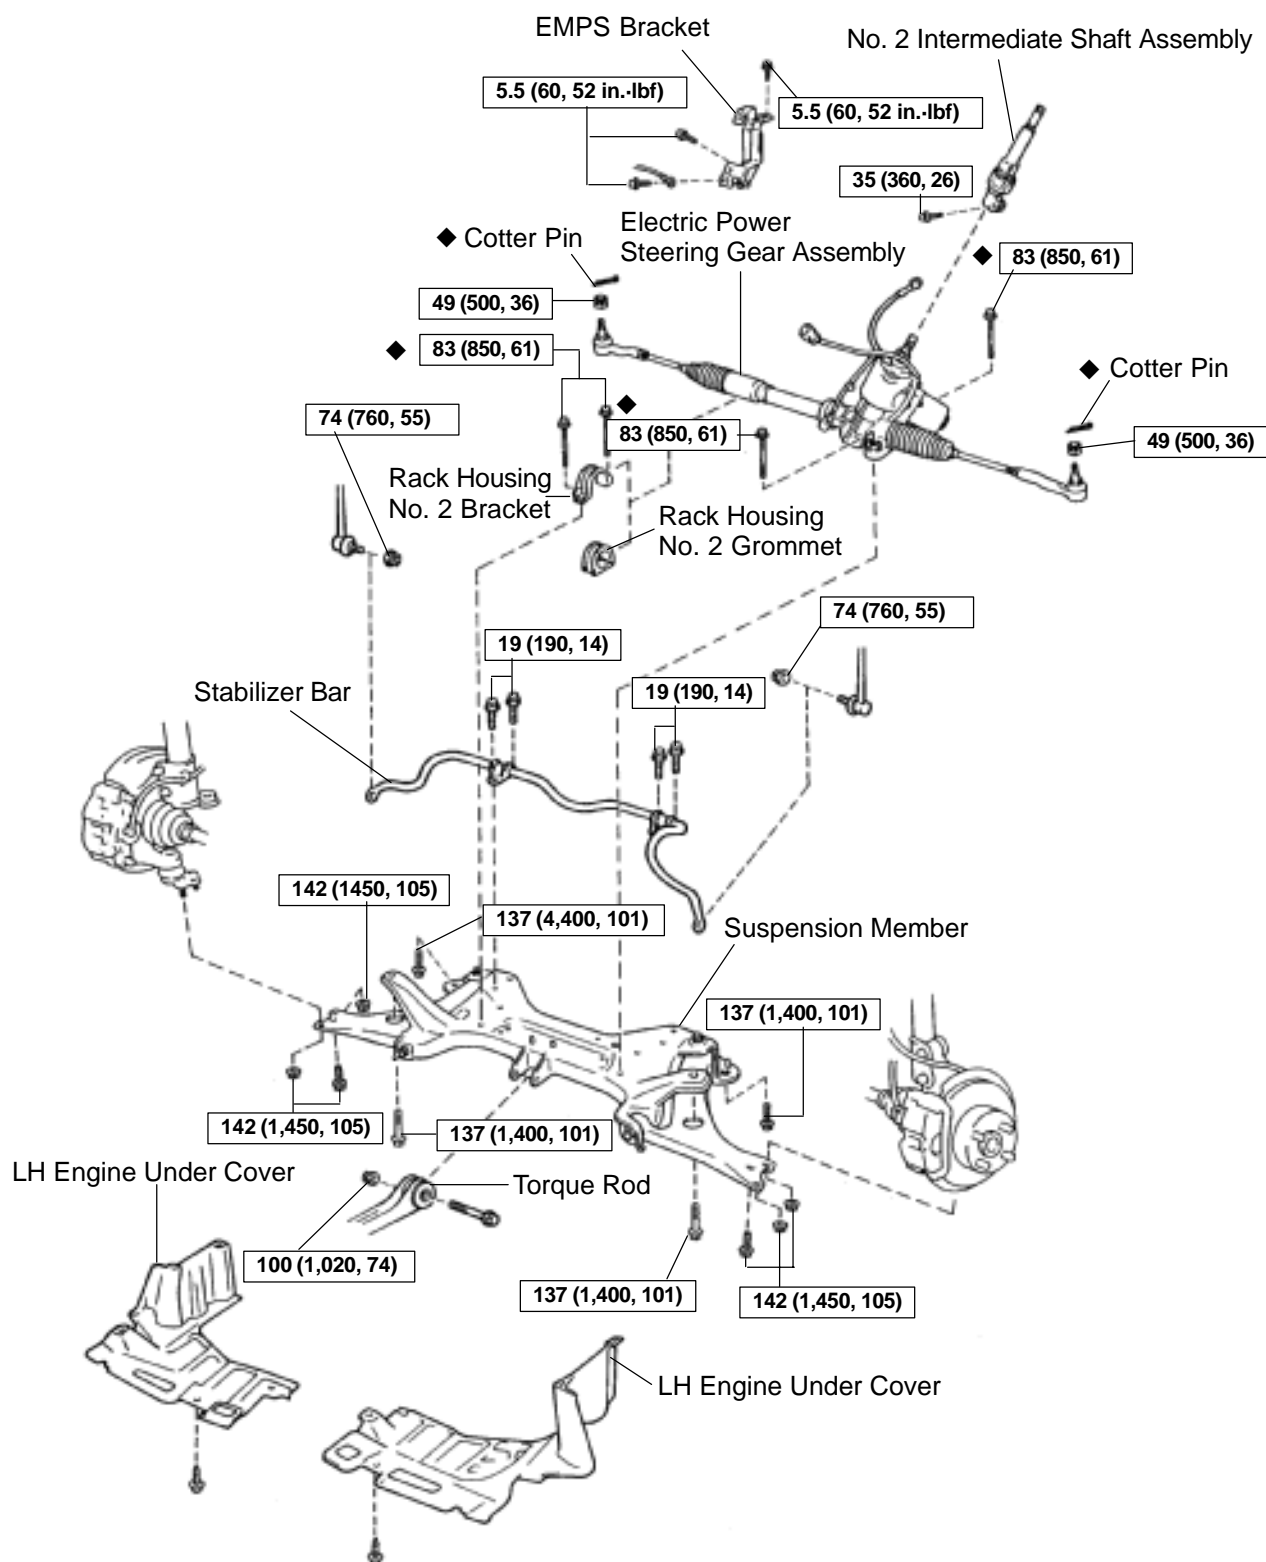

N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non-reusable part

F12851

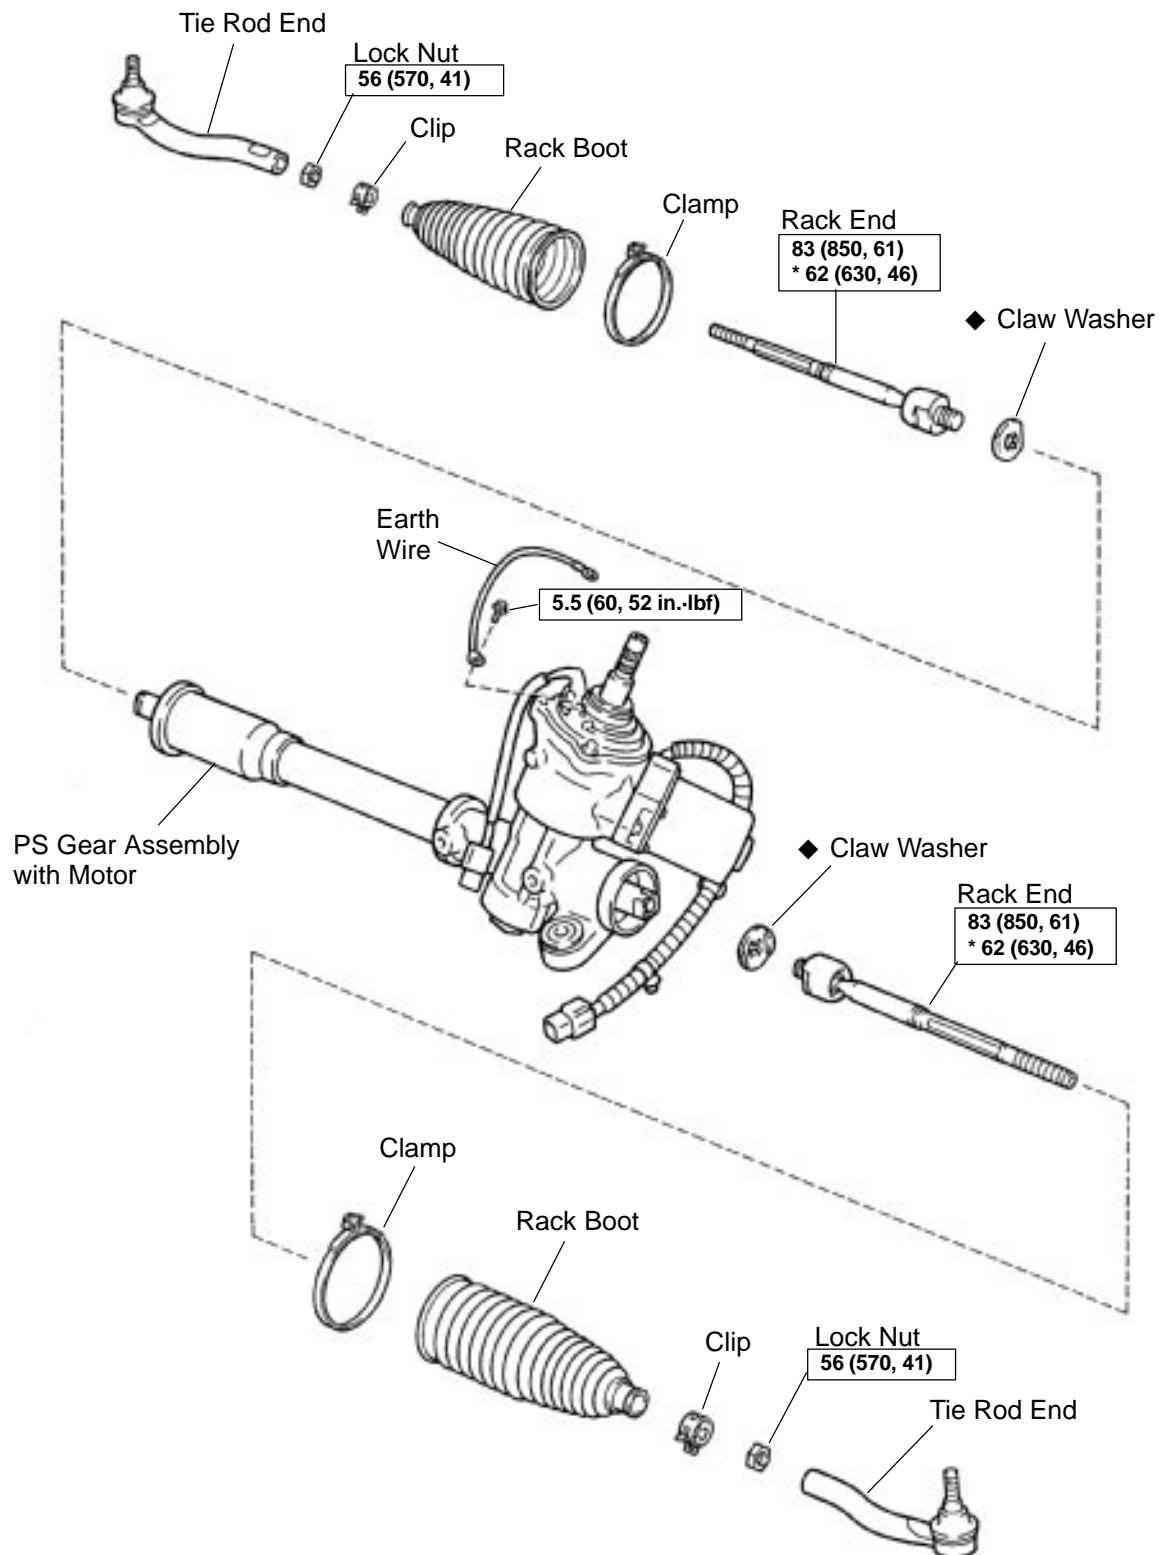

N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non-reusable part

* For use with SST

N

F12262

cardiagn.com

REMOVAL


NOTICE:

Remove the steering wheel assembly before the steering gear removal, because there is possibility of breaking of the spiral cable.


1. PLACE FRONT WHEELS FACING STRAIGHT AHEAD
2. REMOVE STEERING WHEEL PAD (See page [SR-6](#))
3. REMOVE STEERING WHEEL (See page [SR-6](#))
4. REMOVE RH AND LH ENGINE UNDER COVERS
5. DISCONNECT RH AND LH TIE ROD ENDS (See page [SA-9](#))
6. DISCONNECT STABILIZER BAR (See page [SA-41](#))
7. DISCONNECT LOWER SUSPENSION ARM FROM LOWER BALL JOINT (See page [SA-41](#))
8. DISCONNECT 2 CONNECTORS AND EMPS BRACKET
 - (a) Disconnect the 2 connectors.
 - (b) Disconnect the 2 clamps.




- (c) Remove the bolt and disconnect the earth wire.
- (d) Remove the 2 bolts and EMPS bracket.

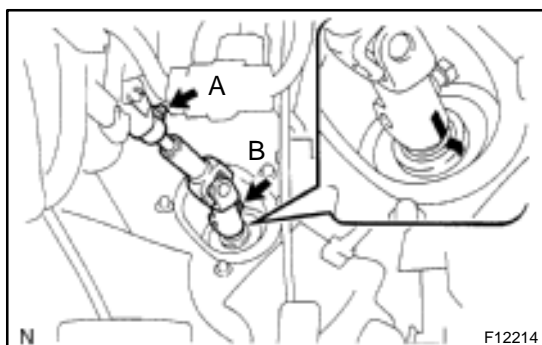

9. DISCONNECT NO. 2 INTERMEDIATE SHAFT ASSEMBLY
 - (a) Place the matchmarks on the No. 2 intermediate shaft assembly and control valve shaft.
 - (b) Loosen the bolt "A" and remove the bolt "B" then disconnect the No. 2 intermediate shaft assembly from the control valve shaft.
10. DISCONNECT TORQUE ROD (See page [SA-41](#))
11. REMOVE SUSPENSION MEMBER AND ELECTRIC POWER STEERING GEAR ASSEMBLY (See page [SA-41](#))
12. REMOVE ELECTRIC POWER STEERING GEAR ASSEMBLY
 - (a) Remove the stabilizer bar (See page [SA-41](#)).

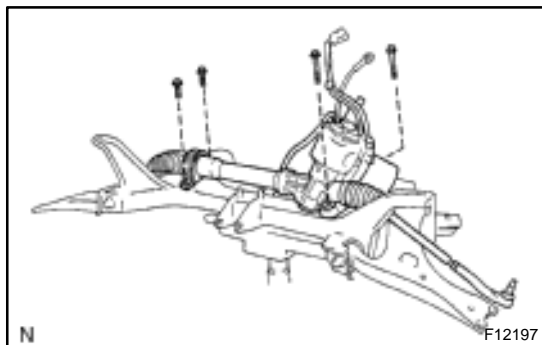

- (b) Remove the 4 bolts and electric power steering gear assembly from the front suspension member.
- (c) Remove the bracket and grommet from the electric power steering gear assembly.

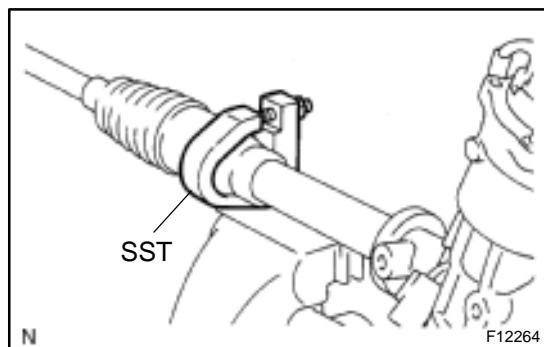

DISASSEMBLY


NOTICE:

When using a vise, do not overtighten it.

1. SECURE ELECTRIC POWER STEERING GEAR ASSEMBLY IN VISE

Using SST, secure the electric power steering gear assembly in a vise.

SST 09612 – 00012

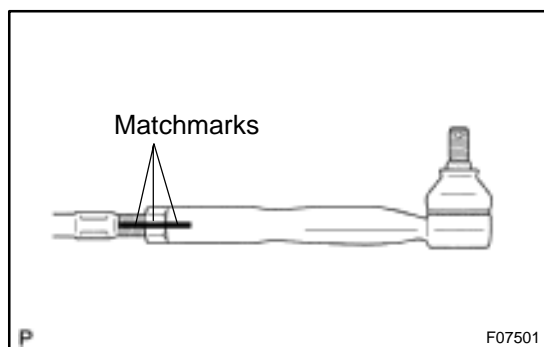

2. REMOVE RH AND LH TIE ROD ENDS AND LOCK NUTS

- Place matchmarks on the tie rod end, lock nut and rock end.
- Loosen the lock nut and remove the tie rod end and lock nut.
- Employ the same manner described above to the other side.

3. REMOVE RH AND LH CLAMPS, CLIPS AND RACK BOOTS

- Remove the clamp, clip and rack boot.


NOTICE:

Be careful not to damage the boot.

HINT:

Mark the RH and LH rack boots.

- Employ the same manner described above to the other side.

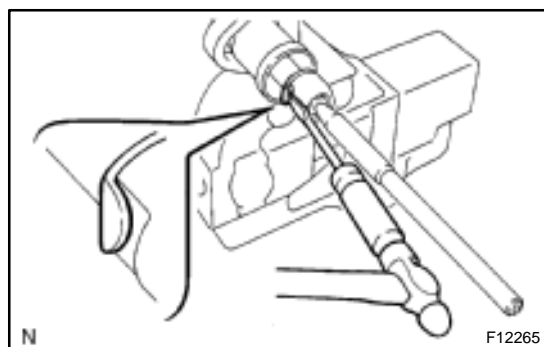


4. REMOVE RH AND LH RACK ENDS CLAW WASHERS

- Using a screwdriver and a hammer, unstake the washer.

NOTICE:

Avoid any impact on the steering rack.

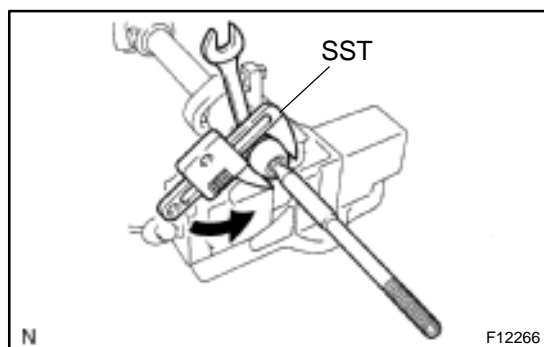

- Using a spanner, hold the steering rack steadily and using SST, remove the rack end.

SST 09922 – 10010

NOTICE:

Use SST 09922 – 10010 in the direction shown in the illustration.

HINT:

Mark the RH and LH rack ends.

- Remove the claw washer.

- (d) Employ the same manner described above to the other side.

5. REMOVE EARTH WIRE

Remove the bolt and earth wire.

REASSEMBLY


NOTICE:

When using a vise, do not overtighten it.

1. INSTALL EARTH WIRE

Install the earth wire with the bolt.

Torque: 5.5 N·m (60 kgf·cm, 52 in.-lbf)

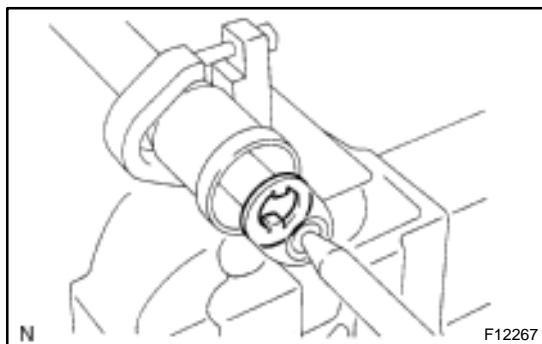


2. INSTALL RH AND LH CLAW WASHERS AND RACK ENDS

- (a) Install a new claw washer and temporarily install the rack end.

HINT:

Align the claws of the claw washer with the steering rack grooves.

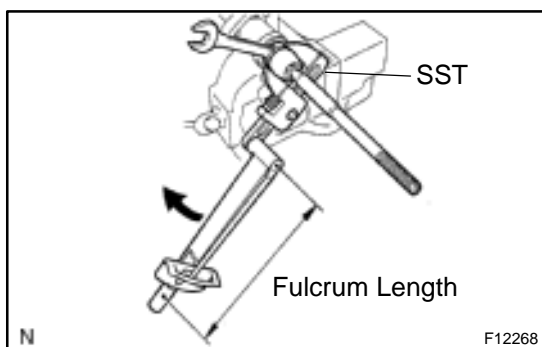

- (b) Using a spanner, hold the steering rack steadily and using SST, torque the rack end.

SST 09922 – 10010

Torque: 62 N·m (630 kgf·cm, 46 ft-lbf)

NOTICE:

Use SST 09922 – 10010 in the direction shown in the illustration.

HINT:


Use a torque wrench with a fulcrum length of 380 mm (14.96 in.).

- (c) Using a brass bar and a hammer, stake the claw washer.

NOTICE:

Avoid any impact on the steering rack.

- (d) Employ the same manner described above to the other side.

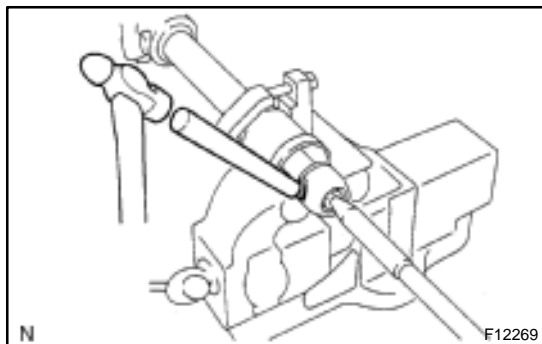

3. INSTALL RH AND LH RACK BOOTS, CLIPS AND CLAMPS

- (a) Ensure that the steering rack hole is not clogged with grease.

HINT:


If the hole is clogged, the pressure inside the boot will change after it is assembled and the steering wheel is turned.

- (b) Install the boot, clip and clamp.

NOTICE:

Be careful not to damage or twist the boot.

- (c) Employ the same manner described above to the other side.

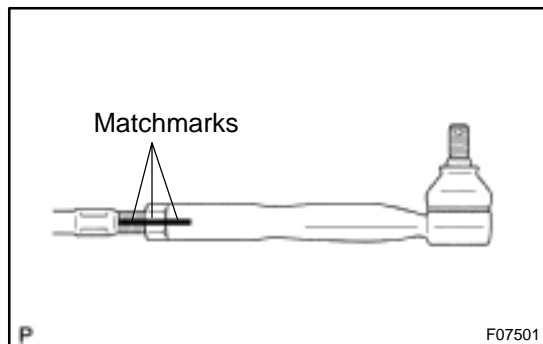


4. INSTALL RH AND LH TIE ROD ENDS AND LOCK NUT

- (a) Screw the lock nut and tie rod end onto the rack end and the matchmarks aligned.
- (b) After adjusting toe-in, torque the nut (See page [SA-4](#)).
- (c) Employ the same manner described above to the other side.

INSTALLATION


1. INSTALL ELECTRIC POWER STEERING GEAR ASSEMBLY

- (a) Install the grommet and bracket to the electric power steering gear assembly.

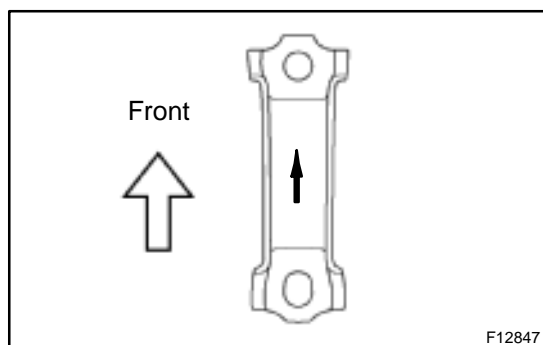

HINT:


Install the bracket with the inscribed mark facing to the front of the vehicle.

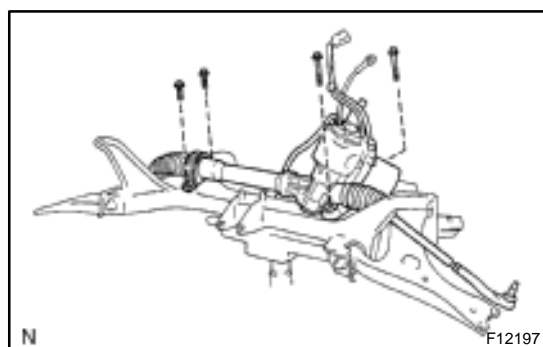


- (b) Install the electric power steering gear assembly with the 4 new bolts to the front suspension member.

Torque: 83 N·m (850 kgf·cm, 61 ft·lbf)

- (c) Install the stabilizer bar (See page [SA-43](#)).

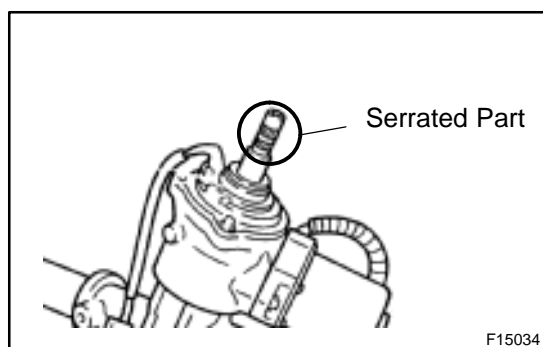


- (d) To prevent the main shaft lower dust seal from damaging, wind vinyl tape on the serrated part of the control valve shaft.

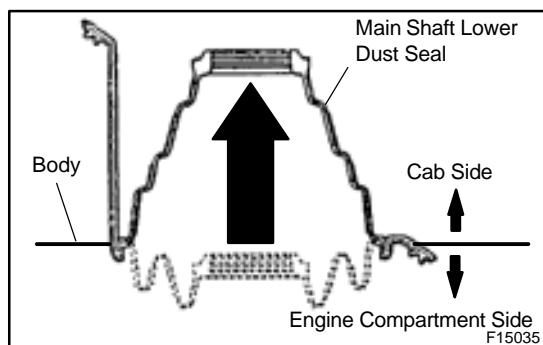

- (e) Turn over the main shaft lower dust seal from the engine compartment side to the cab.

2. INSTALL SUSPENSION MEMBER AND ELECTRIC POWER STEERING GEAR ASSEMBLY (See page [SA-43](#))

3. CONNECT TORQUE ROD (See page [SA-43](#))

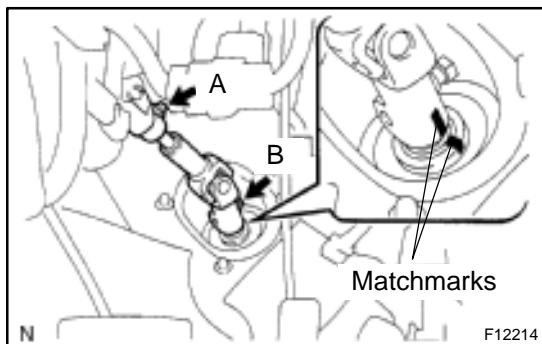

- 4. CONNECT EMPS BRACKET AND 2 CONNECTORS**
 - (a) Connect the EMPS bracket with the 2 bolts.
Torque: 5.5 N·m (60 kgf·cm, 52 in.-lbf)
 - (b) Connect the earth wire with the bolt.
Torque: 5.5 N·m (60 kgf·cm, 52 in.-lbf)
 - (c) Connect the 2 clamps.
 - (d) Connect the 2 connectors.
- 5. CONNECT LOWER SUSPENSION ARM TO LOWER BALL JOINT (See page SA-43)**
- 6. CONNECT STABILIZER BAR (See page SA-43)**
- 7. CONNECT NO. 2 INTERMEDIATE SHAFT ASSEMBLY**
 - (a) Put the dust seal back to the engine compartment side.
 - (b) Remove the vinyl tape from the serrated part of the control valve shaft.
 - (c) Align the matchmarks on the No. 2 intermediate shaft assembly and control valve shaft.
 - (d) Install the bolt "B" and torque the bolt "A".
Torque: 35 N·m (360 kgf·cm, 22 ft-lbf)
- 8. CONNECT RH AND LH TIE ROD ENDS (See page SA-14)**
- 9. PLACE FRONT WHEELS FACING STRAIGHT AHEAD**

HINT:
Do it with the front of the vehicle jacked up.
- 10. CENTER SPIRAL CABLE (See page SR-14)**
- 11. INSTALL STEERING WHEEL**
 - (a) Align the matchmarks on the steering wheel and steering column main shaft.
 - (b) Temporarily tighten the steering wheel set nut.
- 12. CHECK STEERING WHEEL CENTER POINT**
- 13. TORQUE STEERING WHEEL SET NUT**
Torque: 50 N·m (510 kgf·cm, 37 ft-lbf)
- 14. INSTALL STEERING WHEEL PAD (See page SR-14)**
- 15. CHECK FRONT WHEEL ALIGNMENT**
- 16. PERFORM CALIBRATION OF TORQUE SENSOR ZERO POINT (See page DI-454)**

SRS AIRBAG

PRECAUTION

RS0JO-06

CAUTION:

- The PRIUS is equipped with SRS, which comprises a driver airbag, front passenger airbag and side airbag. Failure to carry out service operations in the correct sequence could cause the SRS to unexpectedly deploy during servicing, possibly leading to a serious accident. Further, if a mistake is made in servicing the SRS, it is possible that the SRS may fail to operate when required. Before performing servicing (including removal or installation of parts, inspection or replacement), be sure to read the following items carefully, then follow the correct procedures described in the repair manual.
- Work must be started 90 seconds after the ignition switch is turned to the "LOCK" position and the negative (–) terminal cable is disconnected from the battery.
(The SRS is equipped with a back-up power source so that if work is started within 90 seconds from disconnecting the negative (–) terminal cable of the battery, the SRS may be deployed.)
- Do not expose the steering wheel pad, front passenger airbag assembly, side airbag assembly, airbag sensor assembly, front airbag sensor or side airbag sensor assembly directly to hot air or flames.

NOTICE:

- Malfunction symptoms of the SRS are difficult to confirm, so the DTCs become the most important source of information when troubleshooting. When troubleshooting the SRS, always inspect the DTCs before disconnecting the battery.
- Even in cases of a minor collision where the SRS does not deploy, the steering wheel pad, front passenger airbag assembly, side airbag assembly, airbag sensor assembly, front airbag sensor and side airbag sensor assembly should be inspected.
(See page [RS-14](#), [RS-28](#), [RS-41](#), [RS-53](#), [RS-58](#) and [RS-63](#))
- Before repairs, remove the airbag sensor if shocks are likely to be applied to the sensor during repairs.
- Never use SRS parts from another vehicle. When replacing parts, replace them with new parts.
- Never disassemble and repair the steering wheel pad, front passenger airbag assembly, side airbag assembly, airbag sensor assembly, front airbag sensor or side airbag sensor assembly in order to reuse it.
- If the steering wheel pad, front passenger airbag assembly, side airbag assembly, airbag sensor assembly, front airbag sensor or side airbag sensor assembly has been dropped, or if there are cracks, dents or other defects in the case, bracket or connector, replace it with new one.
- Use a volt/ohmmeter with high impedance (10 k Ω /V minimum) for troubleshooting the system's electrical circuits.
- Information labels are attached to the periphery of the SRS components. Follow the instructions on the notices.
- After work on the SRS is completed, perform the SRS warning light check (See page [DI-497](#)).
- When the negative (–) terminal cable is disconnected from the battery, the memory of the clock and audio system will be canceled. So before starting work, make a record of the contents memorized in the audio memory system. When work is finished, reset the audio systems as they were before and adjust the clock. To avoid erasing the memory in each memory system, never use a back-up power supply from outside the vehicle.
- If the vehicle is equipped with a mobile communication system, refer to the precaution in the IN section.


cardiagn.com



OPERATION

1. STEERING WHEEL PAD (with AIRBAG)

The inflator and bag of the SRS are stored in the steering wheel pad and cannot be disassembled. The inflator contains a squib, igniter charge, gas generator, etc., and inflates the bag when instructed by the airbag sensor assembly.

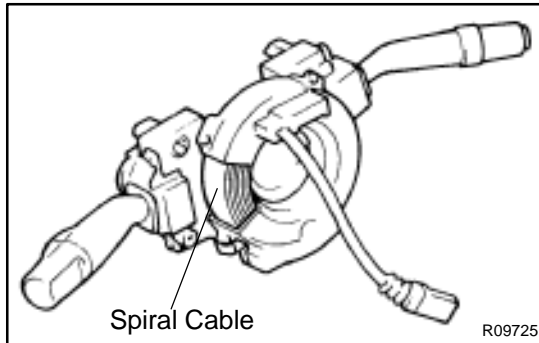

2. SPIRAL CABLE (in COMBINATION SWITCH)

A spiral cable is used as an electrical joint from the vehicle body side to the steering wheel.




3. FRONT PASSENGER AIRBAG ASSEMBLY

The inflator and bag of the SRS are stored in the front passenger airbag assembly and cannot be disassembled. The inflator contains a squib, igniter charge, gas generator, etc., and inflates the bag when instructed by the airbag sensor assembly.



4. SIDE AIRBAG ASSEMBLY

The inflator and bag of the SRS side airbag are stored in the side airbag assembly and cannot be disassembled. The inflator contains a squib, igniter charge, gas generator, etc., and inflates the bag when instructed by the side airbag sensor assembly.

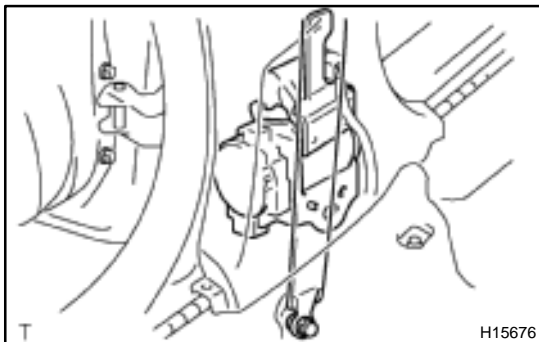


5. SEAT BELT PRETENSIONER

The seat belt pretensioner system is a component of the front seat outer belt. The pretensioner contains a squib, gas generator, wire, piston, etc., and operates in the event of a frontal collision. The seat belt pretensioner cannot be disassembled.




6. SRS WARNING LIGHT

The SRS warning light is located on the combination meter. It goes on to alert the driver of trouble in the system when a malfunction is detected in the airbag sensor assembly self-diagnosis. In normal operation conditions when the ignition switch is turned to the ON position, the light goes on for about 6 seconds and then goes off.

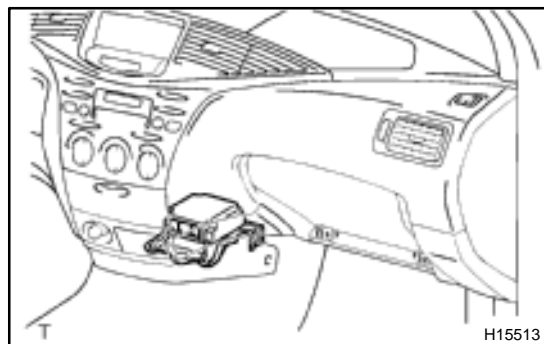


7. AIRBAG SENSOR ASSEMBLY

The airbag sensor assembly is mounted on the floor inside the lower center finish panel. The airbag sensor assembly consists of an airbag sensor, safing sensor, diagnosis circuit, ignition control, drive circuit, etc. It receives signals from the airbag sensor, front airbag sensor, side airbag sensor assembly and door side airbag assembly and judges whether the SRS must be activated or not. The airbag sensor assembly cannot be disassembled.

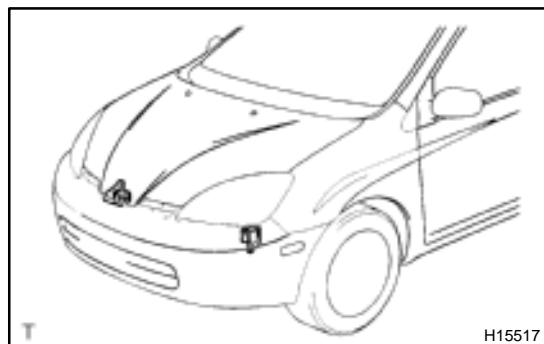

8. FRONT AIRBAG SENSOR

The front airbag sensor is mounted inside each of the side members. The sensor unit is a mechanical type. When the sensor detects deceleration force above a predetermined limit, contact is made in the sensor, sending a signal to the airbag sensor assembly. The front airbag sensor cannot be disassembled.

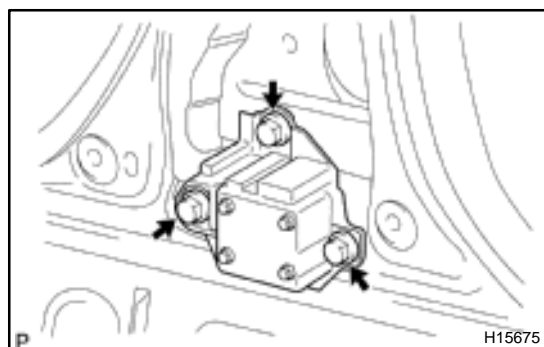


9. SIDE AIRBAG SENSOR ASSEMBLY

The side airbag sensor assembly is mounted in the LH and RH center pillars. The side airbag sensor assembly consists of a lateral deceleration sensor, safing sensor, diagnosis circuit, etc. It sends signals to the airbag sensor assembly to judge whether the SRS side airbag must be activated or not. The side airbag sensor assembly cannot be disassembled.


10. SRS CONNECTORS

HINT:
SRS connectors are located as shown in the following illustration.

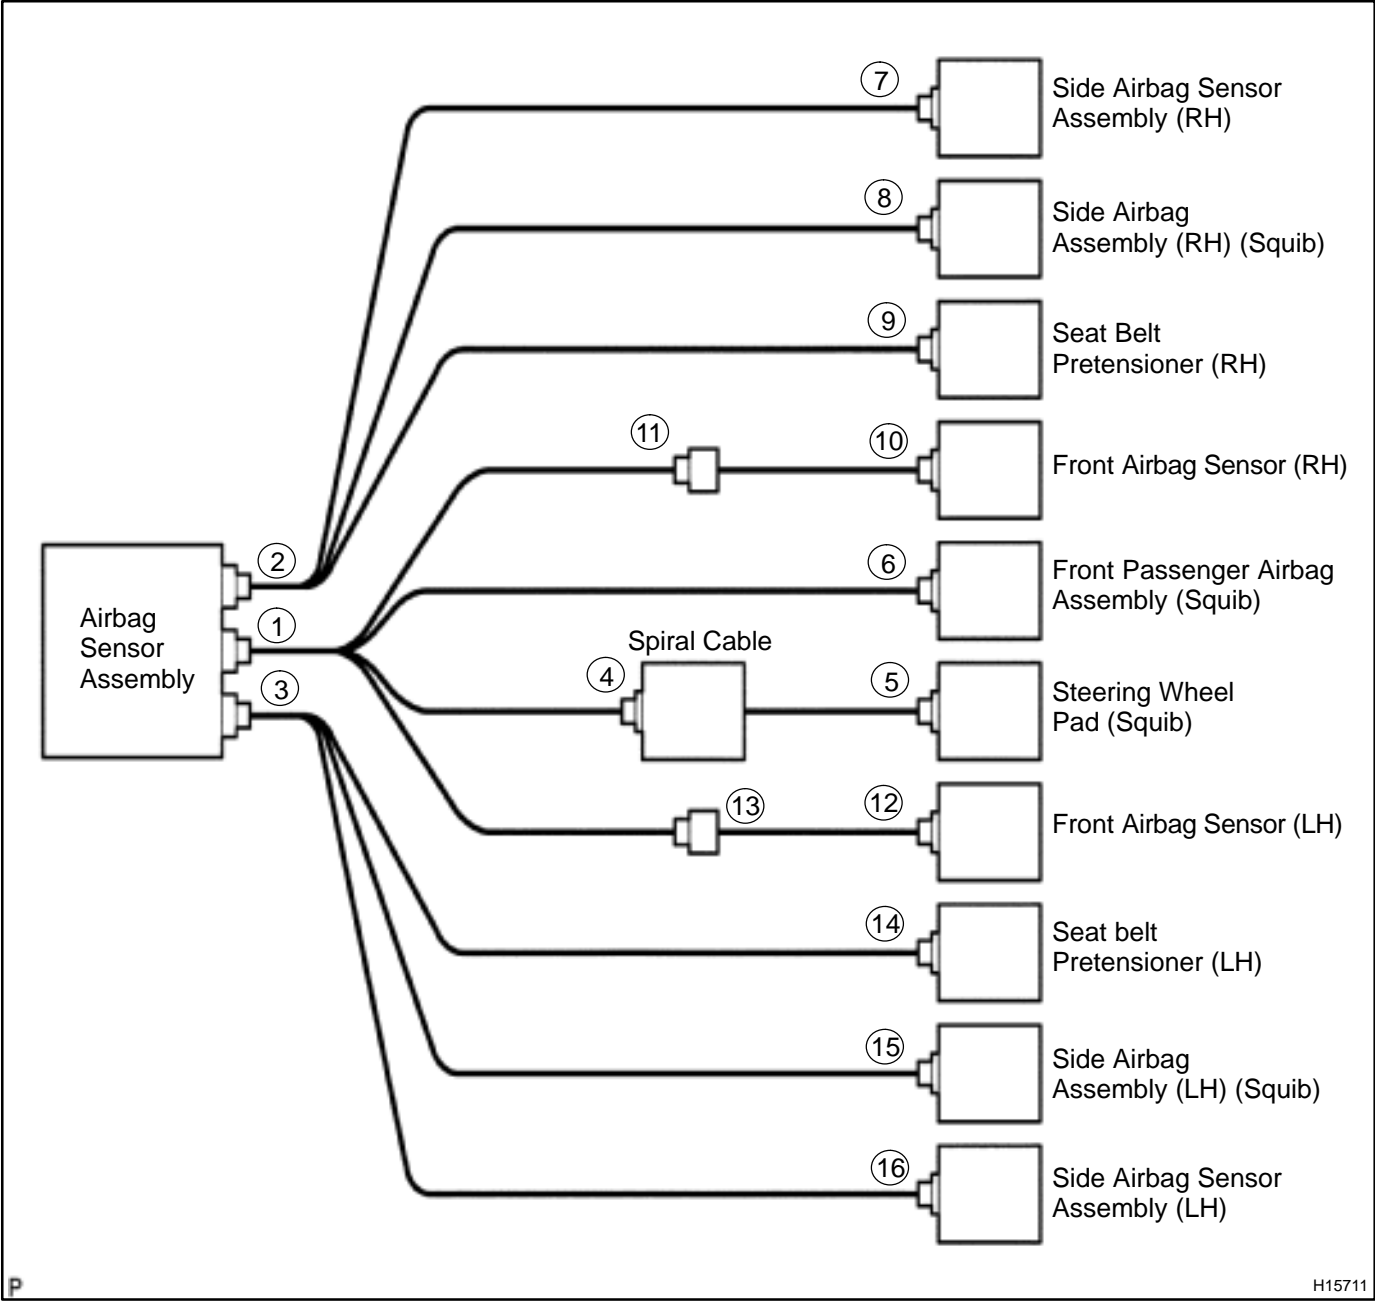


No.	Item	Application
(1)	Terminal Twin-Lock Mechanism	Connectors 1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14, 15, 16
(2)	Airbag Activation Prevention Mechanism	Connectors 1, 2, 3, 4, 5, 6, 8, 9, 14, 15
(3)	Electrical Connection Check Mechanism	Connectors 1, 2, 3

- (a) All connectors in the SRS are colored in yellow to distinguish them from other connectors. Connectors having special functions and specifically designed for the SRS are used in the locations shown on the previous page to ensure high reliability. These connectors use durable gold-plated terminals.

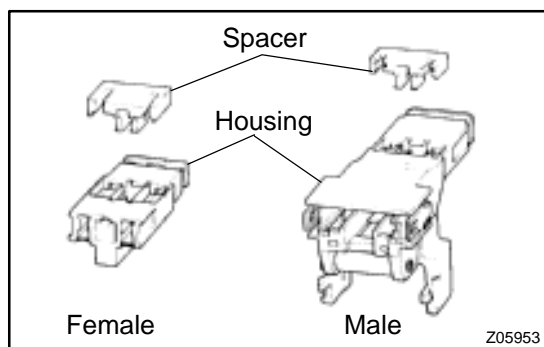


- (1) **Terminal Twin-Lock Mechanism**
Each connector has a two-piece component consisting of a housing and a spacer. This design enables the terminal to be locked securely by two locking devices (the retainer and the lance) to prevent terminals from coming out.
- (2) **Airbag Activation Prevention Mechanism**
Each connector contains a short spring plate. When the connector is disconnected, the short spring plate automatically connects positive (+) terminal and negative (-) terminal of the squib.

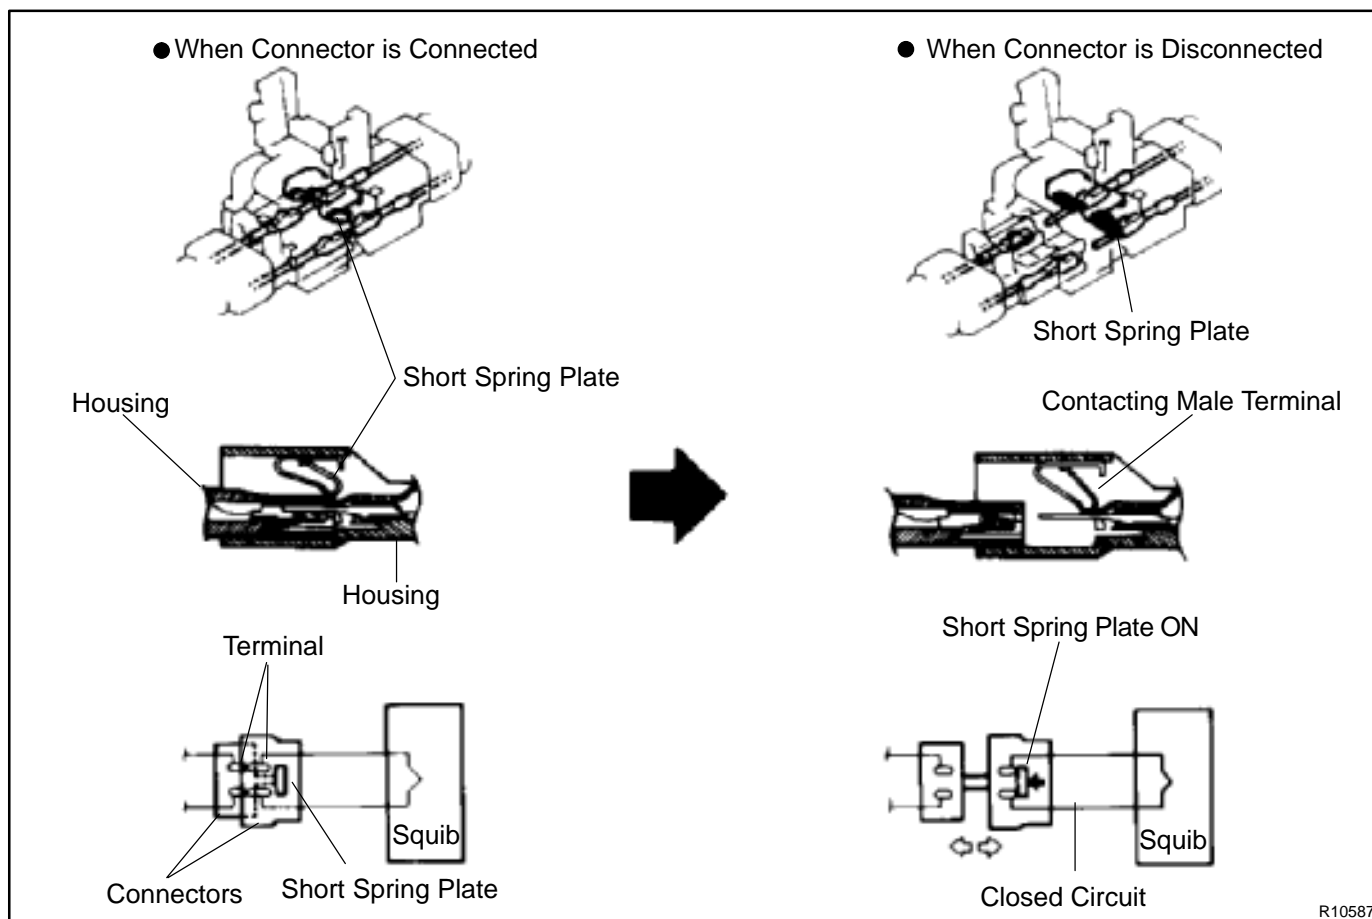


HINT:

The type of connector is shown in the diagram on the previous page.

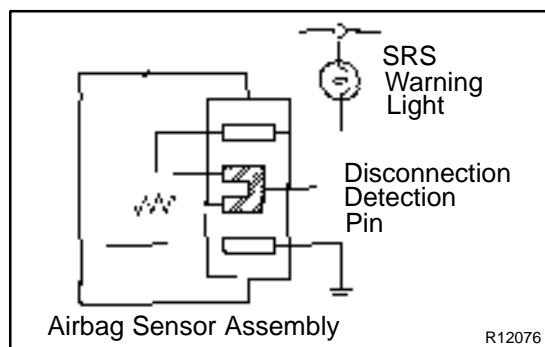


- (3) **Electrical Connection Check Mechanism**
This mechanism electrically checks that connectors are connected correctly and completely. The electrical connection check mechanism is designed so that the disconnection detection pin connects with the diagnosis terminals when the connector housing lock is locked.

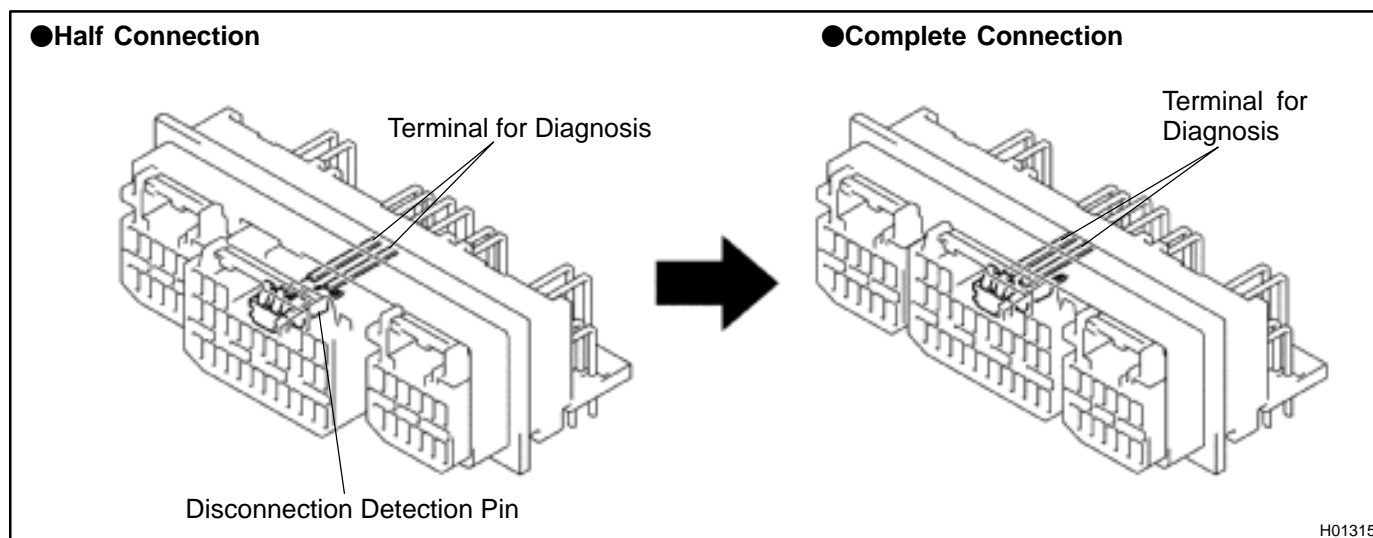


HINT:

The illustration shows connectors "1", "2" and "3" in step 11.

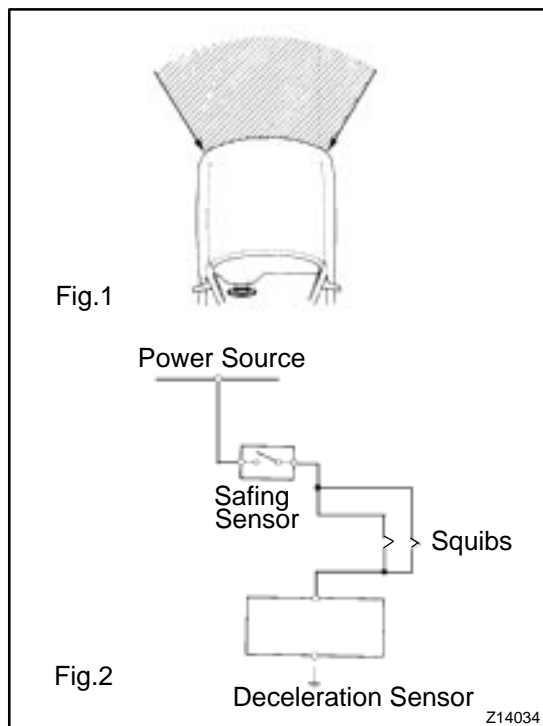

- (b) When the vehicle is involved in a frontal collision in the hatched area (Fig. 1) and the shock is larger than the pre-determined level, the SRS is activated automatically. A safing sensor is designed to go on at a smaller deceleration rate than the airbag sensor. As illustrated in Fig. 2, ignition is caused when current flows to the squib, which happens when a safing sensor and the deceleration sensor go on simultaneously. When a deceleration force acts on the sensors, 2 squibs in the driver airbag and front passenger airbag ignite and generate gas. The gas discharging into the driver airbag and front passenger airbag rapidly increases the pressure inside the bags, breaking open the steering wheel pad and instrument panel. Bag inflation then ends, and the bags deflate as the gas is discharged through discharge holes at the bag's rear or side.

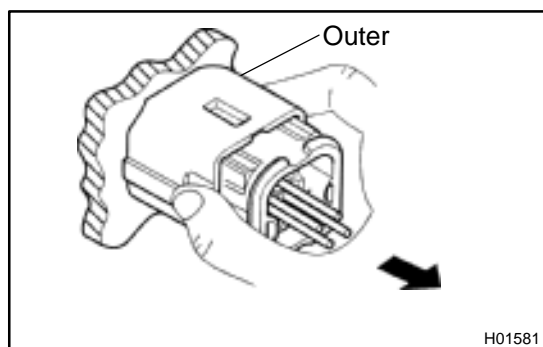


11. DISCONNECTION OF CONNECTORS FOR FRONT AIRBAG SENSOR AND SIDE AIRBAG SENSOR


- (a) While holding both flank sides of the outer, slide the outer to the direction shown by an arrow.
 (b) Lock of the connectors is released, then disconnect the connectors.

HINT:

Be sure to hold both flank sides of the outer. If holding the top and bottom sides, it will obstruct disconnection.

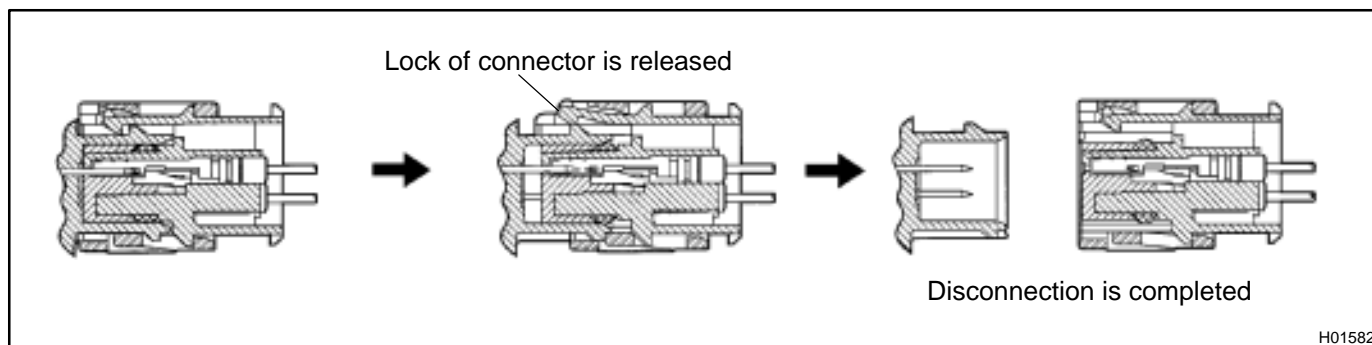

12. CONNECTION OF CONNECTORS FOR FRONT AIRBAG SENSOR AND SIDE AIRBAG SENSOR

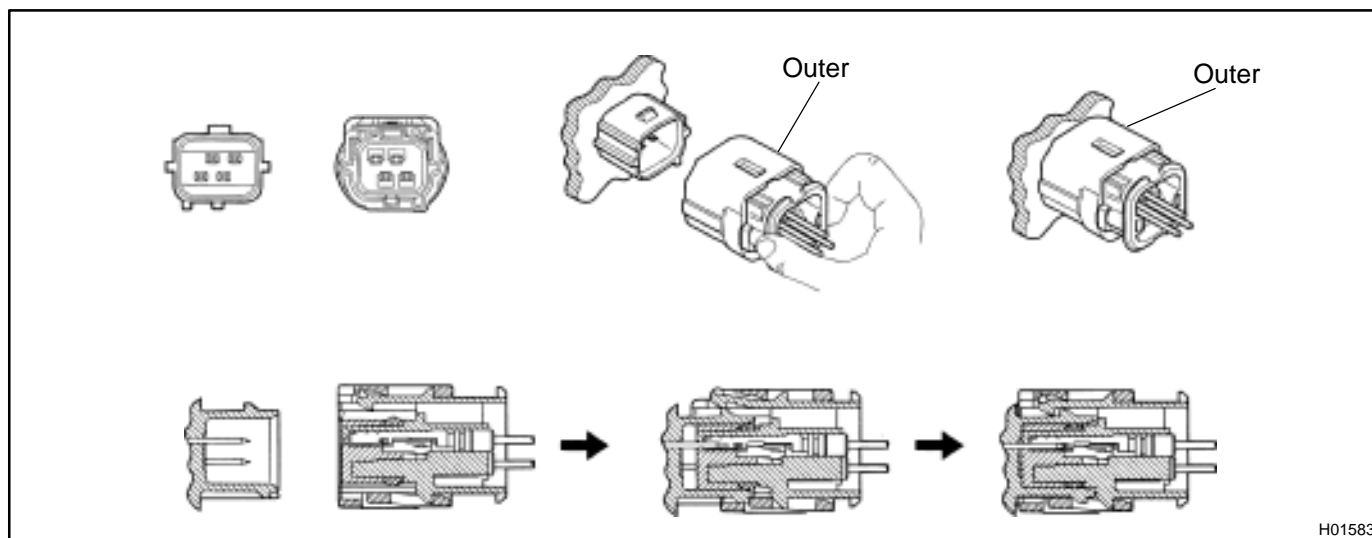



- Align the male connector (of the side of sensor) and female connector in the same direction as shown in the illustration and fit in them without rubbing.
- As they are fitted in, the outer slides rearward. Press it until the outer returns to its original position again.
If fitting stops half way, connectors will separate.
- Be sure to insert until they are locked. After fitting in, pull them slightly to check that they are locked. (When locked, make sure that the outer returns to its original position and sound at the time of fitting in can be heard.)

HINT:

- Do not fit in while holding the outer.
- When fitting in, the outer slides. Do not touch it.

13. DISCONNECTION OF SIDE AIRBAG CONNECTOR

- (a) Place a finger on the slider.
- (b) Slide the slider to release lock.
- (c) Disconnect the connector.

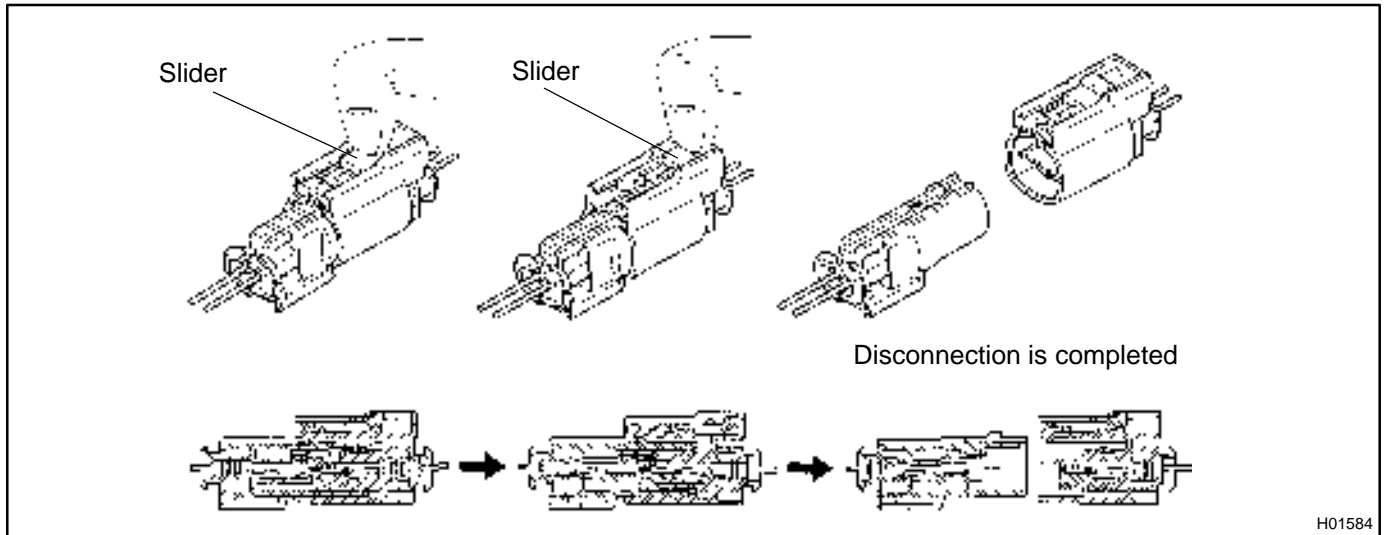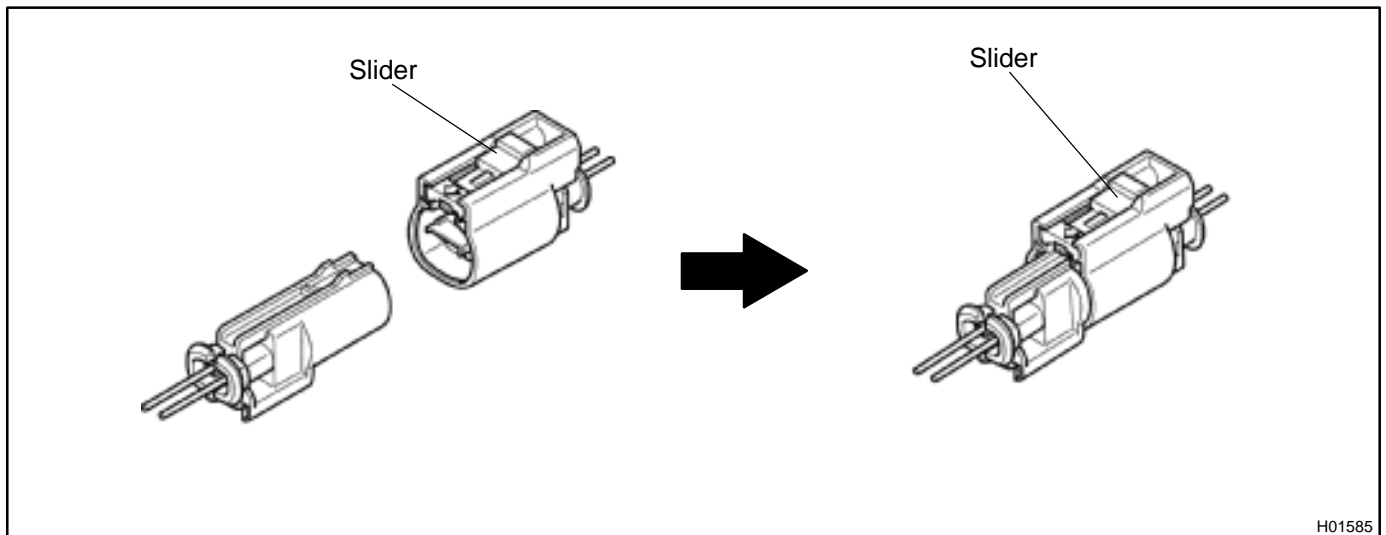**14. CONNECTION OF SIDE AIRBAG CONNECTOR**


- (a) Align a lock part of male connector and a slider of female connector in the same direction as shown in the illustration, fit in them without rubbing.
- (b) Be sure to insert until they are locked. After fitting in pull them slightly to check that they are locked. (When locked, make sure that the outer returns to its original position and sound at the time of fitting in can be heard.)

HINT:

- As the slider slides, do not touch it.
- Be careful not to deform the release board. If the release board is deformed, replace it with a new one.

15. DISCONNECTION OF CONNECTORS FOR STEERING WHEEL PAD (with AIRBAG) AND FRONT PASSENGER AIRBAG ASSEMBLY

- (a) Place a finger on the slider.
- (b) Slide the slider to release lock.
- (c) Disconnect the connector.

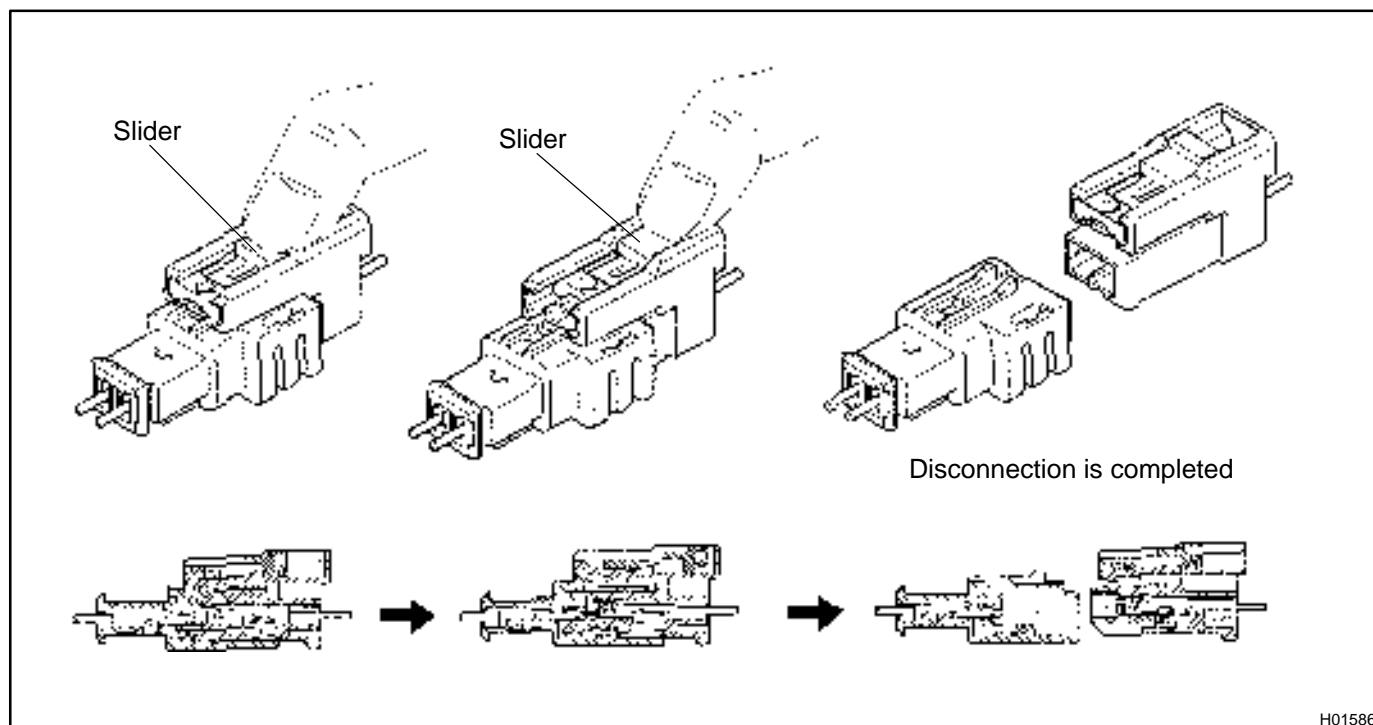


16. CONNECTION OF CONNECTORS FOR STEERING WHEEL PAD (with AIRBAG) AND FRONT PASSENGER AIRBAG ASSEMBLY

- (a) Align a lock part of male connector and a slider of female connector in the same direction as shown in the illustration, fit in them without rubbing.
- (b) Be sure to insert until they are locked. After fitting in pull them slightly to check that they are locked. (When locked, make sure that the outer returns to its original position and sound at the time of fitting in can be heard.)

HINT:

- As the slider slides, do not touch it.
- Be careful not to deform the release board. If the release board is deformed, replace it with a new one.

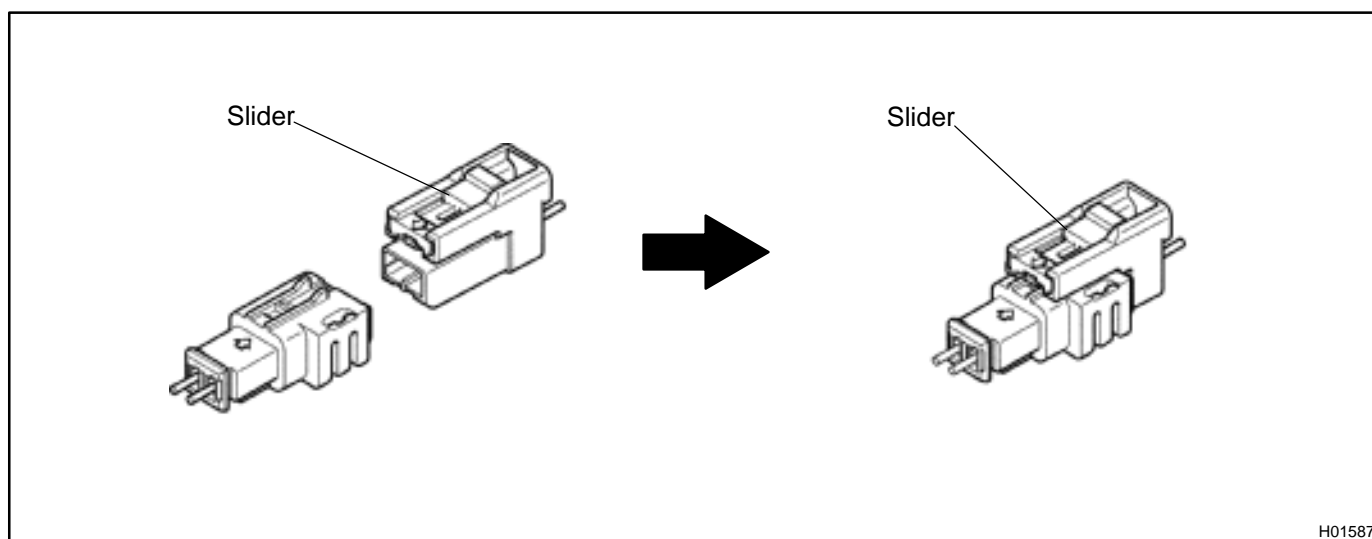

H01587



INSPECTION

1. Vehicle not involved in collision:

INSPECT SUPPLEMENTAL RESTRAINT SYSTEM

- (a) Do a diagnostic system check (See page [DI-497](#)).
- (b) Do a visual check which includes the following item with the steering wheel pad (with airbag) installed in the vehicle.

Check cuts, minute cracks or marked discoloration on the steering wheel pad top surface and in the grooved portion.

2. Vehicle involved in collision and airbag is not deployed:


INSPECT SUPPLEMENTAL RESTRAINT SYSTEM

- (a) Do a diagnostic system check (See page [DI-497](#)).



- (b) Do a visual check which includes the following items with the steering wheel pad (with airbag) removed from the vehicle.

- Check cuts, minute cracks or marked discoloration on the steering wheel pad top surface and in the grooved portion.
- Check cuts and cracks in wire harness, and chipping in connectors.

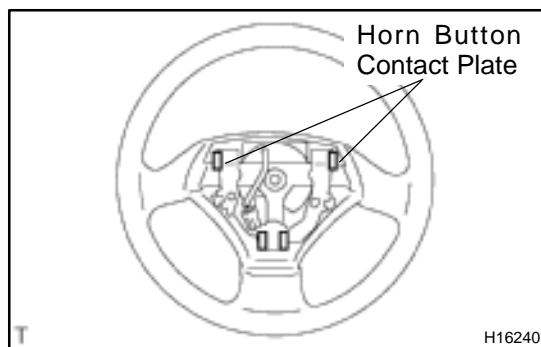


- Check the deformation of the horn button contact plate of the steering wheel.

CAUTION:

For removal and installation of the steering wheel pad, see page [SR-6](#) and [SR-14](#), be sure to follow the correct procedure.


HINT:

- If the horn button contact plate of the steering wheel is deformed, never repair it. Always replace the steering wheel assembly with a new one.
- There should be no interference between the steering wheel pad and steering wheel, and the clearance should be uniform all the way around when the new steering wheel pad is installed on the steering wheel.

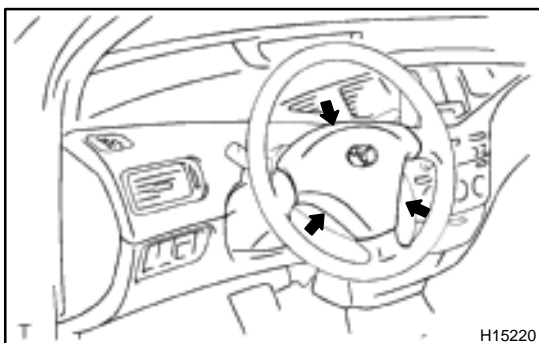

**3. Vehicle involved in collision and airbag is deployed:
INSPECT SUPPLEMENTAL RESTRAINT SYSTEM**

- (a) Do a diagnostic system check (See page [DI-497](#)).

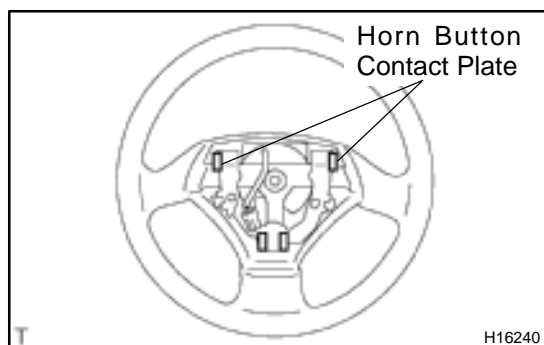

- (b) Do a visual check which includes the following items with the steering wheel pad (with airbag) removed from the vehicle.


- Check the deformation on the horn button contact plate of the steering wheel.
- Check the damage on the spiral cable connector and wire harness.

CAUTION:

For removal and installation of the steering wheel pad, see page [SR-6](#) and [SR-14](#), and be sure to follow the correct procedure.

HINT:

- If the horn button contact plate of the steering wheel is deformed, never repair it. Always replace the steering wheel assembly with a new one.
- There should be no interference between the steering wheel pad and steering wheel, and the clearance should be uniform all the way around when the new steering wheel pad is installed on the steering wheel.

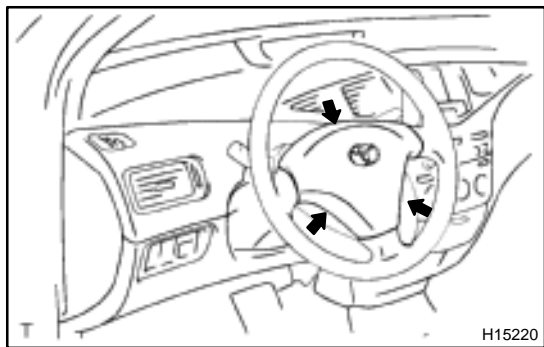

DISPOSAL

HINT:


When scrapping vehicle equipped with an SRS or disposing of a steering wheel pad (with airbag), always first deploy the airbag in accordance with the procedure described below. If any abnormality occurs with the airbag deployment, contact the SERVICE DEPT. of TOYOTA MOTOR SALES, U.S.A., INC.

CAUTION:

- **Never dispose of a steering wheel pad which has an undeployed airbag.**
- **The airbag produces a sizeable exploding sound when it deploys, so perform the operation out-of-doors and where it will not create a nuisance to nearby residents.**



- **When deploying the airbag, always use the specified SST (SRS Airbag Deployment Tool). Perform the operation in a place away from electrical noise.**
SST 09082-00700
- **When deploying an airbag, perform the operation at least 10 m (33 ft) away from the steering wheel pad.**
- **The steering wheel pad is very hot when the airbag is deployed, so leave it alone for at least 30 minutes after deployment.**
- **Use gloves and safety glasses when handling a steering wheel pad with the deployed airbag.**
- **Always wash your hands with water after completing the operation.**
- **Do not apply water, etc. to a steering wheel pad with the deployed airbag.**

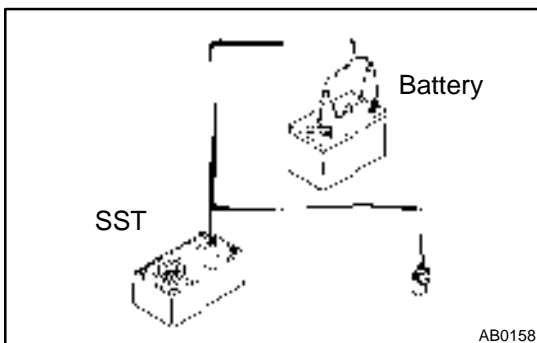

1. AIRBAG DEPLOYMENT WHEN SCRAPPING VEHICLE

HINT:

Have a battery ready as the power source to deploy the airbag.




(a) Check functioning of the SST.

CAUTION:

When deploying the airbag, always use the specified SST: SRS Airbag Deployment Tool.


SST 09082-00700

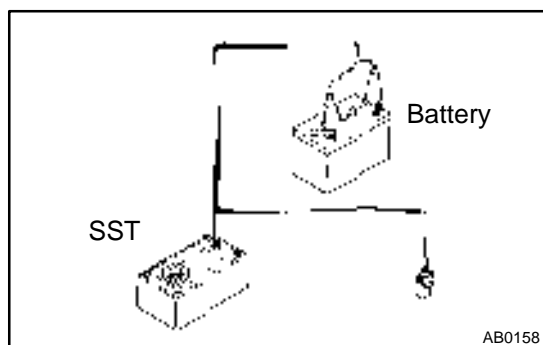

- (1) Connect the red clip of the SST to the battery positive (+) terminal and the black clip to the battery negative (–) terminal.

HINT:

Do not connect the yellow connector which will be connected with the supplemental restraint system.

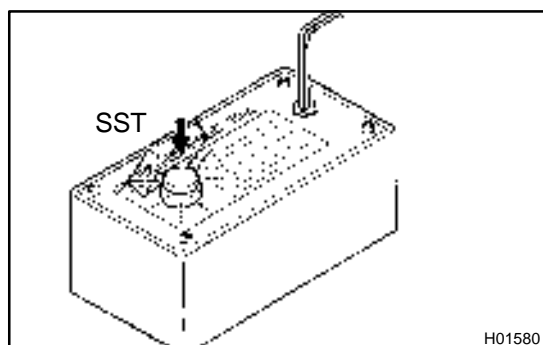


- (2) Press the SST activation switch, and check that the LED of the SST activation switch lights up.

CAUTION:

If the LED lights up when the activation switch is not being pressed, SST malfunction is probable, so definitely do not use the SST.

- (3) Disconnect the SST from the battery.

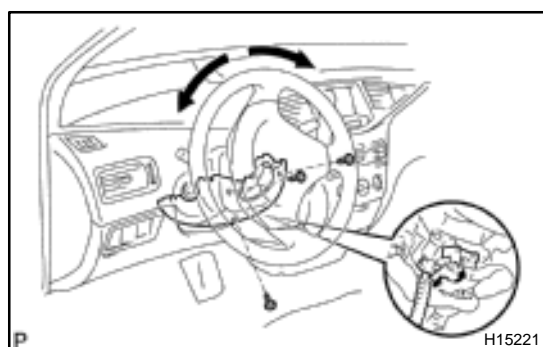


(b) Install the SST.

CAUTION:

Check that there is no looseness in the steering wheel and steering wheel pad.

- (1) While turning the steering wheel right / left, remove the 3 screws and column lower cover.
- (2) Disconnect the airbag connector of the spiral cable.

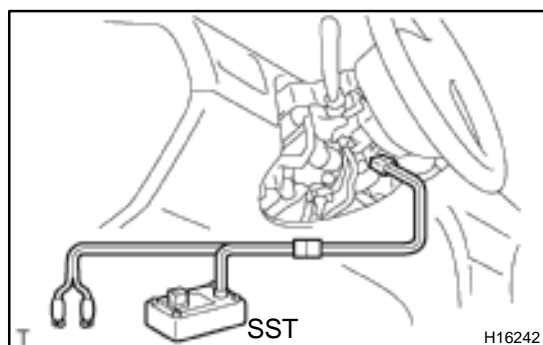


- (3) Connect the connectors of the 2 SST to the airbag connector of the spiral cable.

SST 09082-00700, 09082-00760

NOTICE:

To avoid damaging the connector of the SST and wire harness, do not lock the secondary lock of the twin lock.

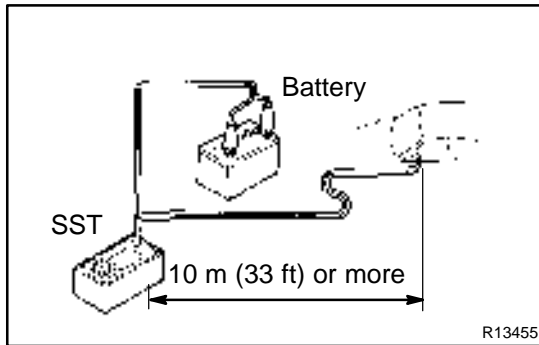


- (4) Move the SST at least 10 m (33 ft) away from the front of the vehicle.
- (5) Close all the doors and windows of the vehicle.

NOTICE:

Take care not to damage the SST wire harness.

- (6) Connect the SST red clip to the battery positive (+) terminal and the black clip to the negative (–) terminal.

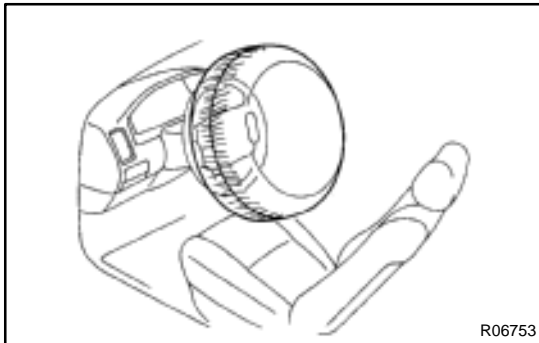

- (c) Deploy the airbag.
 - (1) Check that no one is inside the vehicle or within 10 m (33 ft) area around the vehicle.
 - (2) Press the SST activation switch and deploy the airbag.

CAUTION:

- The steering wheel pad is very hot when the airbag is deployed, so leave it alone for at least 30 minutes after deployment.
- Use gloves and safety glasses when handling a steering wheel pad with the deployed airbag.
- Always wash your hands with water after completing the operation.
- Do not apply water, etc. to a steering wheel pad with the deployed airbag.
- When scrapping a vehicle, deploy the airbag and scrap the vehicle with the steering wheel pad still installed.
- When moving a vehicle for scrapping which has a steering wheel pad with deployed airbag, use gloves and safety glasses.

HINT:

The airbag deploys simultaneously as the LED of the SST activation switch lights up.

2. DEPLOYMENT WHEN DISPOSING OF STEERING WHEEL PAD ONLY

NOTICE:

- When disposing of the steering wheel pad (with airbag) only, never use the customers vehicle to deploy the airbag.
- Be sure to follow the procedure given below when deploying the airbag.


HINT:

Have a battery ready as the power source to deploy the airbag.

- (a) Remove the steering wheel pad (See page [SR-6](#)).

CAUTION:

- When removing the steering wheel pad, work must be started 90 seconds after the ignition switch is turned to the "LOCK" position and the negative (–) terminal cable is disconnected from the battery.
- When storing the steering wheel pad, keep the upper surface of the pad facing upward.

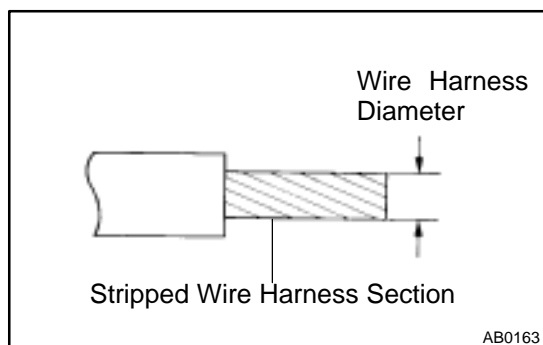

- (b) Using a service-purpose wire harness tie down the steering wheel pad to the disc wheel.

Wire harness: Stripped wire harness section
1.25 mm² or more (0.0019 in.² or more)


CAUTION:

If a wire harness which is too thin or some other thing is used to tie down the steering wheel pad, it may be snapped by the shock when the airbag is deployed. This is highly dangerous. Always use a wire harness for vehicle use which is at least 1.25 mm² (0.0019 in.²).

HINT:

To calculate the square of the stripped wire harness section:

$$\text{Square} = 3.14 \times (\text{Diameter})^2 \text{ divided by } 4$$

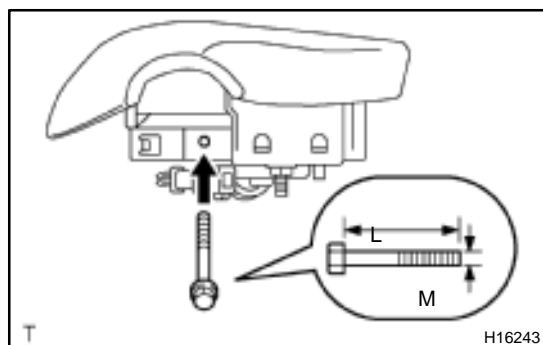

- (1) Install the 2 bolts with washers in the 2 bolt holes in the steering wheel pad.

Bolt:


L: 35. mm (1.387 in.)

M: 6.0 mm (0.236 in.)

Pitch: 1.0 mm (0.039 in.)

NOTICE:


- Tighten the bolts by hand until the bolts become difficult to turn.
- Do not tighten the bolts too much.

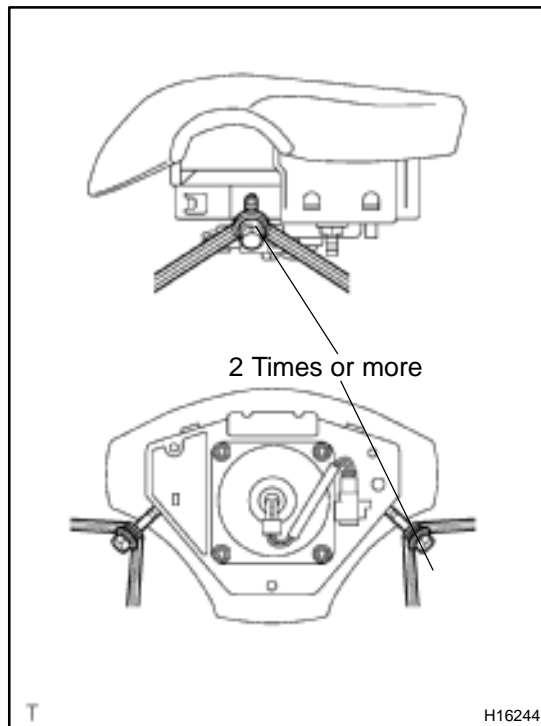

- (2) Using 3 wire harness, wind the wire harness at least 2 times each around the bolts installed on the left and right sides of the steering wheel pad.

CAUTION:

- **Tightly wind the wire harness around the bolts so that there is no slack.**
- **If there is slackness in the wire harness, the steering wheel pad may come loose due to the shock when the airbag is deployed. This is highly dangerous.**

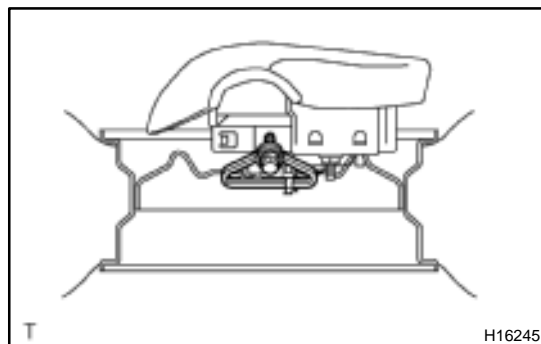

- (3) Face the upper surface of the steering wheel pad upward. Separately tie the left and right sides of the steering wheel pad to the disc wheel through the hub nut holes. Position the steering wheel pad connector so that it hangs downward through a hub hole in the disc wheel.

CAUTION:


- **Make sure that the wire harness is tight. It is very dangerous when looseness in the wire harness results in the steering wheel pad coming free due to the shock from the airbag deploying.**
- **Always tie down the steering wheel pad with the pad side facing upward. It is very dangerous if the steering wheel pad is tied down with the metal surface facing upward as the wire harness will be cut by the shock from the airbag deploying and the steering wheel pad will be thrown into the air.**


NOTICE:

The disc wheel will be marked by airbag deployment, so when disposing of the airbag use a redundant disc wheel.

- (c) Check functioning of the SST (See step 1–(a)).

SST 09082–00700

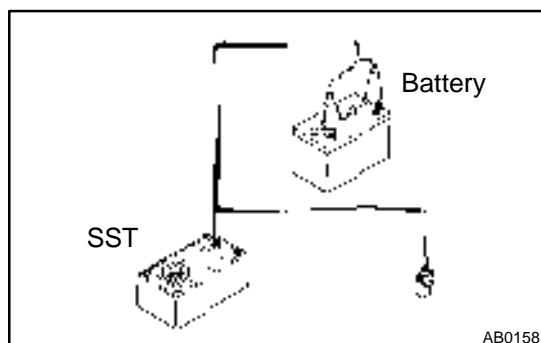

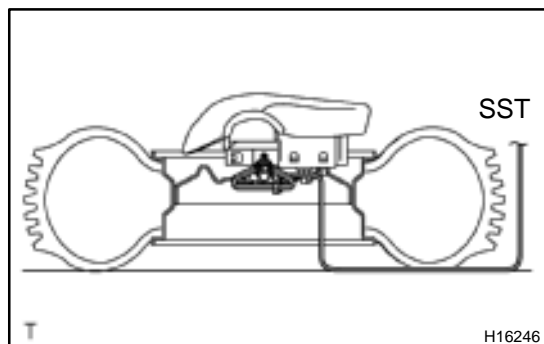

(d) Install the SST.

CAUTION:


Place the disc wheel on the level ground.

- (1) Connect the connectors of the 2 SST to the steering wheel pad connector.


SST 09082-00700, 09082-00760

NOTICE:

To avoid damaging the SST connector and wire harness, do not lock the secondary lock of the twin lock. Also, secure some slack for the SST wire harness inside the disc wheel.

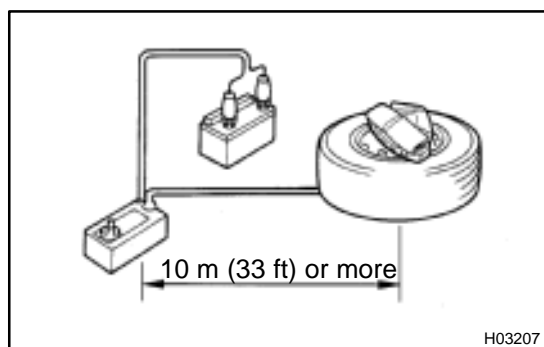

- (2) Move the SST to at least 10 m (33 ft) away from the steering wheel pad tied down on the disc wheel.

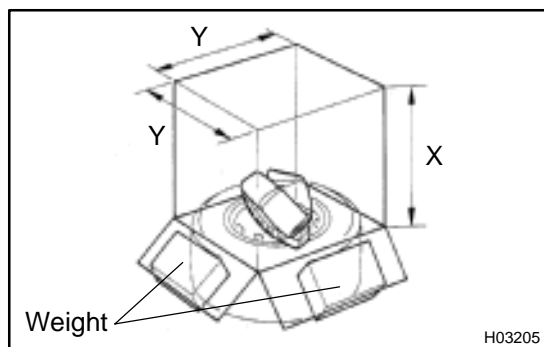

- (e) Cover the steering wheel pad with a cardboard box or tires.

- Covering method using a cardboard box:
Cover the steering wheel pad with the cardboard box and weight the cardboard box down in 4 places with at least 190 N (20 kg, 44 lb).

Size of cardboard box:


Must exceed the following dimensions:

X = 460 mm (18.11 in.)

Y = 650 mm (25.59 in.)

NOTICE:

- When dimension Y of the cardboard box exceeds the diameter of the disc wheel with tire to which the steering wheel pad is tied, X should be the following size.
X = 460 mm (18.11 in.) + width of tire
- If a cardboard box smaller than the specified size is used, the cardboard box will be broken by the shock from the airbag deployment.

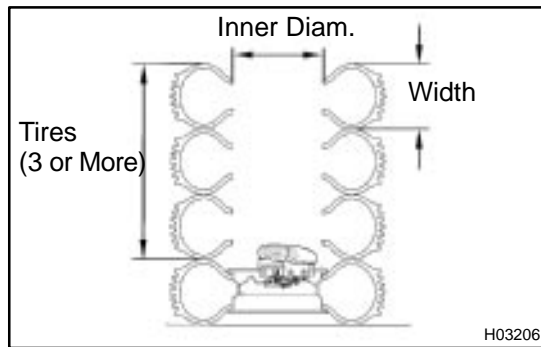

- Covering method using tires:
Place at least 3 tires without disc wheel on top of the disc wheel with tire to which the steering wheel pad is tied.

Tire size: Must exceed the following dimensions–

Width: 185 mm (7.87 in.)

Inner diameter: 360 mm (14.17 in.)

CAUTION:


Do not use tires with disc wheels.

NOTICE:

The tires may be marked by the airbag deployment, so use the redundant tires.

(f) Deploy the airbag.

- (1) Connect the SST red clip to the battery positive (+) terminal and the black clip to the battery negative (–) terminal.

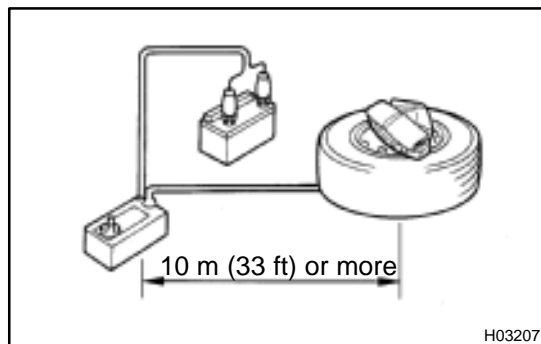

- (2) Check that no one is within 10 m (33 ft) area around the disc wheel which the steering wheel pad is tied to.
- (3) Press the SST activation switch and deploy the airbag.

HINT:

The airbag deploys simultaneously as the LED of the SST activation switch lights up.



(g) Dispose of the steering wheel pad (with airbag).

CAUTION:

- The steering wheel pad is very hot when the airbag is deployed, so leave it alone for at least 30 minutes after deployment.
 - Use gloves and safety glasses when handling a steering wheel pad with the deployed airbag.
 - Always wash your hands with water after completing the operation.
 - Do not apply water, etc. to a steering wheel pad with the deployed airbag.
- (1) Remove the steering wheel pad from the disc wheel.
 - (2) Place the steering wheel pad in a vinyl bag, tie the end tightly and dispose of it in the same way as other general parts disposal.



3. DEPLOYMENT WHEN DISPOSING OF STEERING WHEEL PAD WITH AIRBAG DEPLOYED IN COLLISION

Dispose of the steering wheel pad (with airbag).

CAUTION:

- The steering wheel pad is very hot when the airbag is deployed, so leave it alone for at least 30 minutes after deployment.
 - When moving a vehicle for scrapping which has a steering wheel pad with the deployed airbag, use gloves and safety glasses.
 - Use gloves and safety glasses when handling a steering wheel pad with deployed airbag.
 - Always wash your hands with water after completing the operation.
 - Do not apply water, etc. to a steering wheel pad with deployed airbag.
- (1) Remove the steering wheel pad from the steering wheel (See page [SR-6](#)).
 - (2) Place the steering wheel pad in a vinyl bag, tie the end tightly and dispose of it in the same way as other general parts disposal.



INSPECTION

1. Vehicles not involved in collision:

INSPECT SUPPLEMENTAL RESTRAINT SYSTEM


- (a) Do a diagnostic system check (See page [DI-497](#)).
- (b) Do a visual check which includes the following item with the front passenger airbag assembly installed in the vehicle.

Check cuts, minute cracks or marked discoloration on the front passenger airbag assembly and instrument panel.

2. Vehicle involved in a collision and airbag is not deployed:

INSPECT SUPPLEMENTAL RESTRAINT SYSTEM

- (a) Do a diagnostic system check (See page [DI-497](#)).

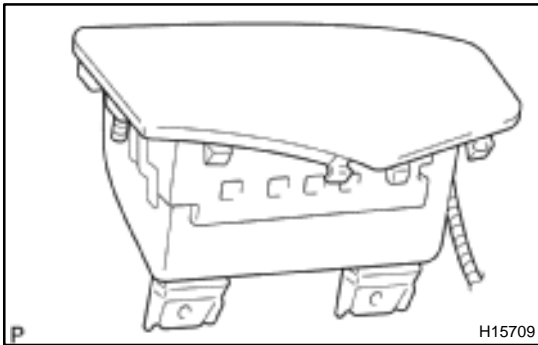

- (b) Do a visual check which includes the following items with the front passenger airbag assembly removed from the vehicle.

- Check cuts, minute cracks or marked discoloration on the front passenger airbag assembly.
- Check cuts and cracks in wire harness, and for chipping in connectors.
- Check the deformation or cracks on the instrument panel and instrument panel reinforcement.

CAUTION:

For removal and installation of the front passenger airbag assembly, see page [RS-27](#) and [RS-38](#), and be sure to follow the correct procedure.

HINT:

If the instrument panel or instrument panel reinforcement is deformed or cracked, never repair it. Always replace it with a new one.

3. Vehicle involved in a collision and airbag is deployed:

INSPECT SUPPLEMENTAL RESTRAINT SYSTEM

- (a) Do a diagnostic system check (See page [DI-497](#)).
- (b) Do a visual check which includes the following items with the front passenger airbag assembly removed from the vehicle.
 - Check the deformation or cracks on the instrument panel and instrument panel reinforcement.
 - Check the damage on the connector and wire harness.

CAUTION:

For removal and installation of the front passenger airbag assembly, see page [SR-6](#) and [SR-14](#), and be sure to follow the correct procedure.

HINT:

If the instrument panel or instrument panel reinforcement is deformed or cracked, never repair it. Always replace it with a new one.


DISPOSAL

HINT:


When scrapping vehicle equipped with an SRS or disposing of a front passenger airbag assembly, always first deploy the airbag in accordance with the procedure described below. If any abnormality occurs with the airbag deployment, contact the SERVICE DEPT. of TOYOTA MOTOR SALES, U.S.A., INC.

CAUTION:

- **Never dispose of a front passenger airbag assembly which has an undeployed airbag.**
- **The airbag produces a sizeable exploding sound when it deploys, so perform the operation out-of-doors and where it will not create a nuisance to nearby residents.**

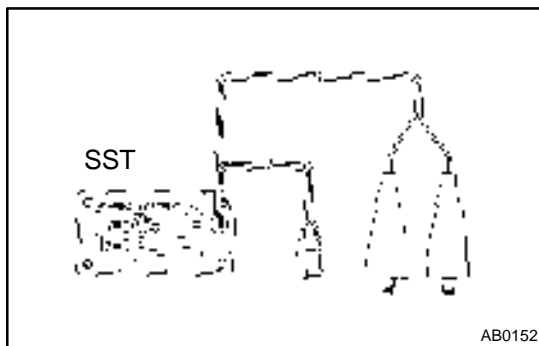

- **When deploying the airbag, always use the specified SST (SRS Airbag Deployment Tool). Perform the operation in a place away from electrical noise.**
SST 09082-00700
- **When deploying an airbag, perform the operation at least 10 m (33 ft) away from the front passenger airbag assembly.**
- **The front passenger airbag assembly is very hot when the airbag is deployed, so leave it alone for at least 30 minutes after deployment.**
- **Use gloves and safety glasses when handling a front passenger airbag assembly with the deployed airbag.**
- **Always wash your hands with water after completing the operation.**
- **Do not apply water, etc. to a front passenger airbag assembly with the deployed airbag.**

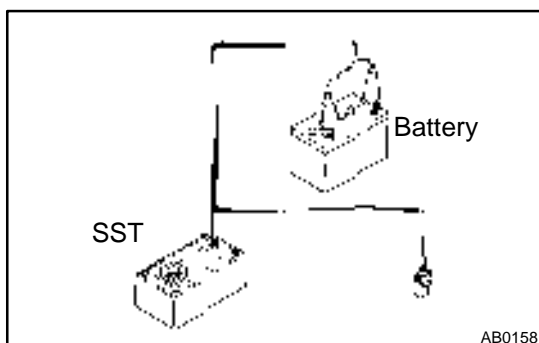


1. AIRBAG DEPLOYMENT WHEN SCRAPPING VEHICLE

HINT:

Have a battery ready as the power source to deploy the airbag.

- (a) Check functioning of the SST (See step 1-(a) on page [RS-16](#)).

SST 09082-00700

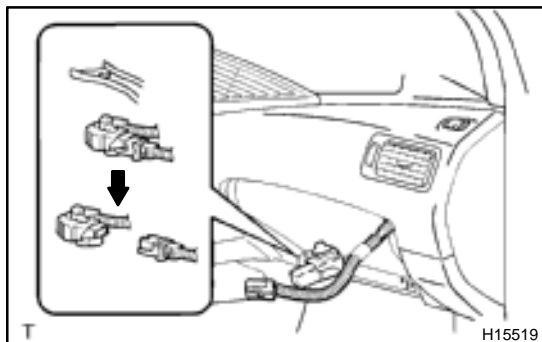

- (b) Disconnect the airbag connector.
- (1) Using a screwdriver, pry out the glove compartment door finish plate inside the lower panel.

HINT:


Tape the screwdriver tip before use.

- (2) Remove the connector from the glove compartment door finish plate.

NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

- (3) Disconnect the airbag connector.

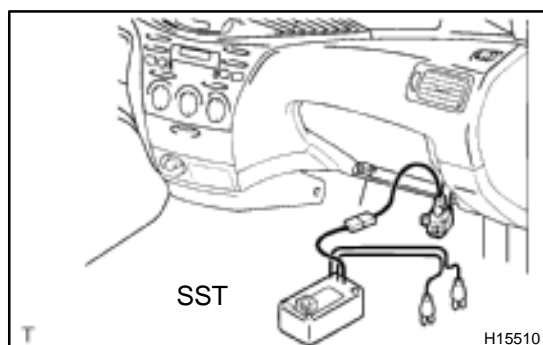


- (c) Install the SST.
- (1) Connect the connectors of the 2 SST to the front passenger airbag assembly connector.

SST 09082-00700, 09082-00760

NOTICE:

To avoid damaging the SST connector and wire harness, do not lock the secondary lock of the twin lock.

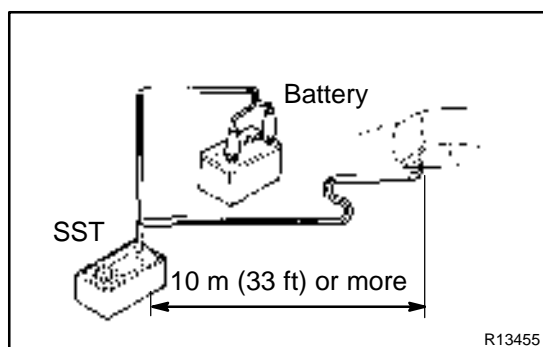


- (2) Move the SST to at least 10 m (33 ft) away from the front of the vehicle.
- (3) Close all the doors and windows of the vehicle.

NOTICE:

Take care not to damage the SST wire harness.

- (4) Connect the SST red clip to the battery positive (+) terminal and the black clip to the negative (-) terminal.

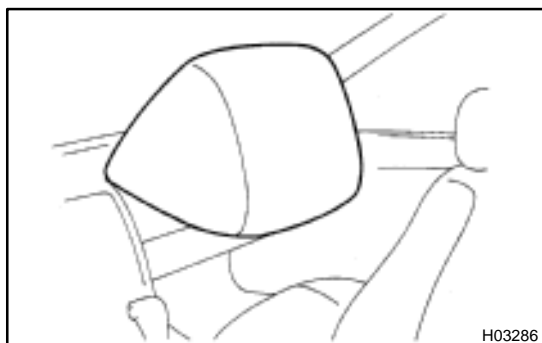

- (d) Deploy the airbag.
- (1) Check that no one is inside the vehicle or within 10 m (33 ft) area around the vehicle.
 - (2) Press the SST activation switch and deploy the airbag.

CAUTION:

- The front passenger airbag assembly is very hot when the airbag is deployed, so leave it alone for at least 30 minutes after deployment.
- Use gloves and safety glasses when handling the front passenger airbag assembly with the deployed airbag.
- Always wash your hands with water after completing the operation.
- Do not apply water, etc. to the front passenger airbag assembly with the deployed airbag.
- When scrapping a vehicle, deploy the airbag and scrap the vehicle with the front passenger airbag assembly still installed.
- When moving a vehicle for scrapping which has the front passenger airbag assembly with the deployed airbag, use gloves and safety glasses.

HINT:

The airbag deploys simultaneously as the LED of the SST activation switch lights up.

2. DEPLOYMENT WHEN DISPOSING OF FRONT PASSENGER AIRBAG ASSEMBLY ONLY**NOTICE:**

- When disposing of the front passenger airbag assembly only, never use the customer's vehicle to deploy the airbag.
- Be sure to follow the procedure given below when deploying the airbag.


HINT:


Have a battery ready as the power source to deploy the airbag.

- (a) Remove the front passenger airbag assembly (See page [RS-27](#)).

CAUTION:

- When removing the front passenger airbag assembly, work must be started 90 seconds after the ignition switch is turned to the "LOCK" position and the negative (–) terminal cable is disconnected from the battery.
- When storing the front passenger airbag assembly, keep the upper surface of the airbag deployment side facing upward.

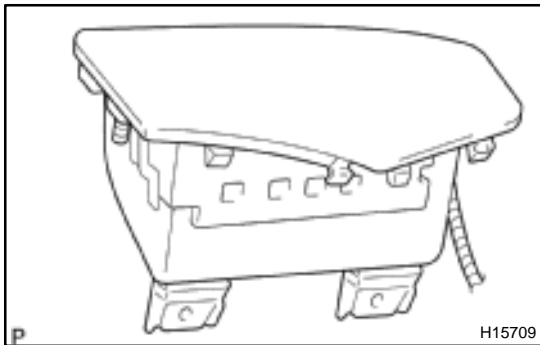

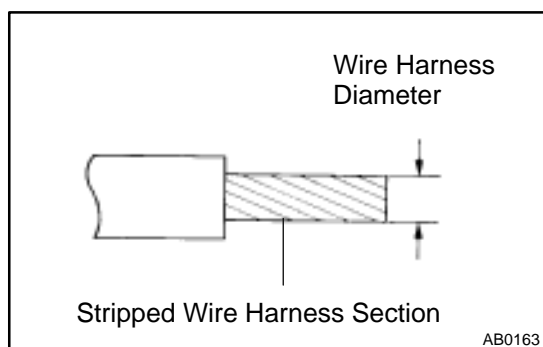

- (b) Using a service-purpose wire harness, tie down the front passenger airbag assembly to the tire.

Wire harness: Stripped wire harness section
1.25 mm² or more (0.0019 in.² or more)


CAUTION:

If the front passenger airbag assembly is tied down with too thin wire harness, it may snap. This is highly dangerous. Always use a wire harness which is at least 1.25 mm² (0.0019 in.²).


HINT:

To calculate the square of the stripped wire harness section:


$$\text{Square} = 3.14 \times (\text{Diameter})^2 \text{ divided by } 4$$

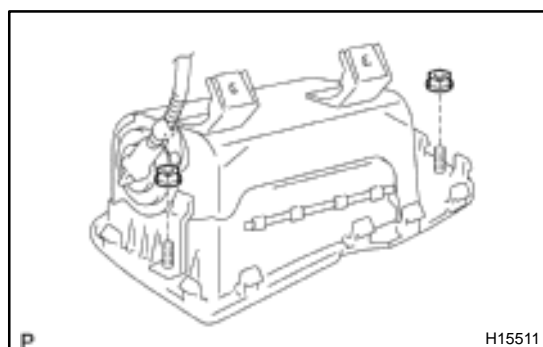

- (1) Install the 2 nuts on the front passenger airbag assembly.

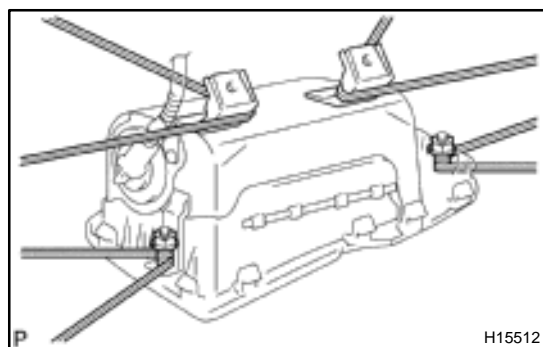

- (2) Wind the wire harness around the bolts, and pass the wire harness through the installation holes.

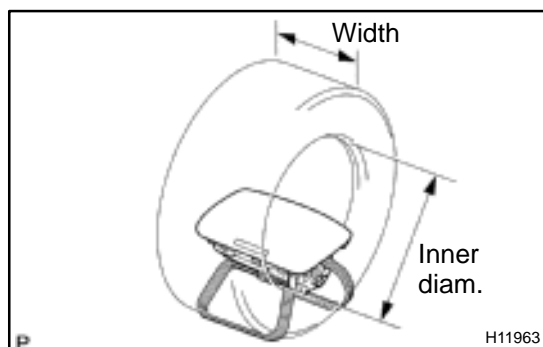

- (3) Position the front passenger airbag assembly inside the tire with the airbag deployment side facing inside.

Tire size: Must exceed the following dimensions–

Width: 185 mm (7.28 in.)


Inner diameter: 360 mm (14.17 in.)

CAUTION:

- Make sure that the wire harness is tight. It is very dangerous if looseness in the wire harness results in the front passenger airbag assembly coming free due to the shock from the airbag deploying.
- Always tie down the front passenger airbag assembly with the airbag deployment side facing inside.


NOTICE:

The tire will be marked by the airbag deployment, so when disposing of the airbag use a redundant tire.

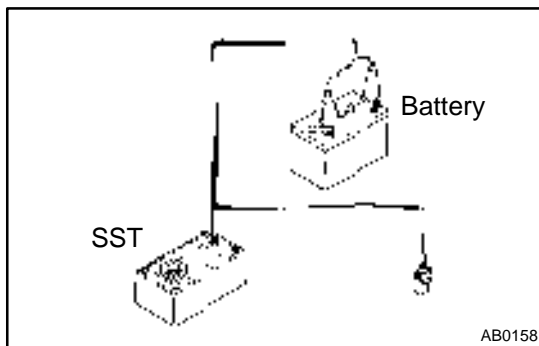


- (c) Check functioning of the SST (See step 1–(a) on page [RS-16](#)).

SST 09082-00700

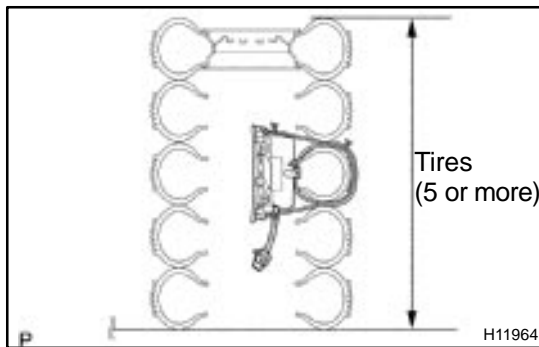

- (d) Place the tires.
- (1) Place at least 2 tires under the tire to which the front passenger airbag assembly is tied.
 - (2) Place at least 2 tires over the tire to which the front passenger airbag assembly is tied. The top tire should have the wheel installed.

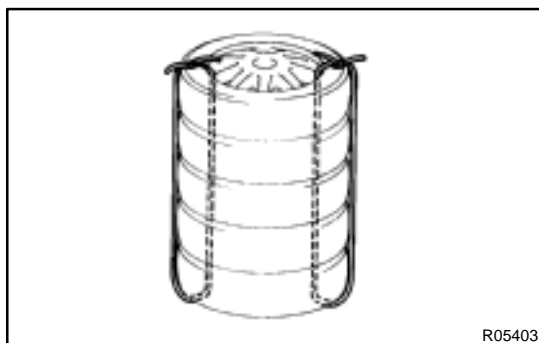


- (3) Tie the tires together with 2 wire harness.

CAUTION:

Make sure that the wire harness is tight. It is very dangerous if loose wire harnesses result in the tires coming free due to the shock from the airbag deploying.

HINT:

Place the SST connector and wire harness inside tires. Provide at least 1 m (3 ft) of slack for the wire harness.

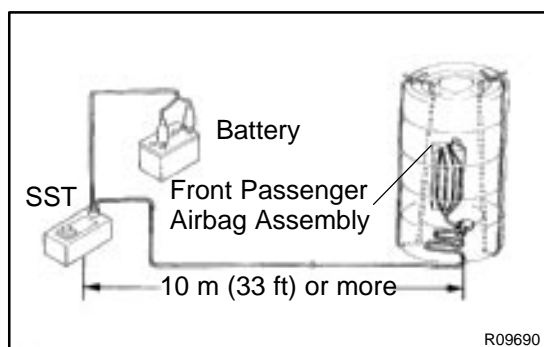

- (e) Install the SST.
Connect the connectors of the 2 SST to the front passenger airbag assembly connector.
SST 09082-00700, 09082-00760

NOTICE:

To avoid damaging the SST connector and wire harness, do not lock the secondary lock of the twin lock. Also, secure some slack for the SST wire harness inside the tires.

- (f) Deploy the airbag.
- (1) Connect the SST red clip to the battery positive (+) terminal and the black clip to the battery negative (–) terminal.
 - (2) Check that no one is within 10 m (33 ft) area around the tire which the front passenger airbag assembly is tied to.
 - (3) Press the SST activation switch and deploy the airbag.

HINT:

The airbag deploys simultaneously as the LED of the SST activation switch lights up.

- (g) Dispose of the front passenger airbag assembly.

CAUTION:

- **The front passenger airbag assembly is very hot when the airbag is deployed, so leave it alone for at least 30 minutes after deployment.**
 - **Use gloves and safety glasses when handling a front passenger airbag assembly with the deployed airbag.**
 - **Always wash your hands with water after completing the operation.**
 - **Do not apply water, etc. to a front passenger airbag assembly with the deployed airbag.**
- (1) Remove the front passenger airbag assembly from the tire.
 - (2) Place the front passenger airbag assembly in a vinyl bag, tie the end tightly and dispose of it in the same way as other general parts disposal.



3. DEPLOYMENT WHEN DISPOSING OF FRONT PASSENGER AIRBAG ASSEMBLY WITH AIRBAG DEPLOYED IN COLLISION

Dispose of the front passenger airbag assembly.

CAUTION:

- **The front passenger airbag assembly is very hot when the airbag is deployed, so leave it alone for at least 30 minutes after deployment.**
- **Use gloves and safety glasses when handling a front passenger airbag assembly with the deployed airbag.**
- **Always wash your hands with water after completing the operation.**
- **Do not apply water, etc. to a front passenger airbag assembly with the deployed airbag.**
 - (1) Remove the front passenger airbag assembly from the instrument panel (See page [RS-27](#)).
 - (2) Place the front passenger airbag assembly in a vinyl bag, tie the end tightly and dispose of it in the same way so as other general parts disposal.

DISPOSAL

HINT:


When scrapping vehicles equipped with an SRS or disposing of the side airbag assembly always first deploy the airbag in accordance with the procedure described below. If any abnormality occurs with the airbag deployment, contact the SERVICE DEPT. of TOYOTA MOTOR SALES, U.S.A., INC.

CAUTION:

- **Never dispose of a side airbag assembly which has an undeployed airbag.**
- **The airbag produces a sizeable exploding sound when it deploys, so perform the operation out-of-doors and where it will not create a nuisance to nearby residents.**



- **When deploying the airbag, always use the specified SST (SRS Airbag Deployment Tool), perform the operation in a place away from electrical noise.**
SST 09082-00700
- **When deploying an airbag, perform the operation at least 10 m (33 ft) away from the airbag assembly.**
- **The side airbag assembly is very hot when the airbag is deployed, so leave it alone for at least 30 minutes after deployment.**
- **Use gloves and safety glasses when handling side airbag assembly with the deployed airbag.**
- **Always wash your hands with water after completing the operation.**
- **Do not apply water, etc. to a side airbag assembly with the deployed airbag.**

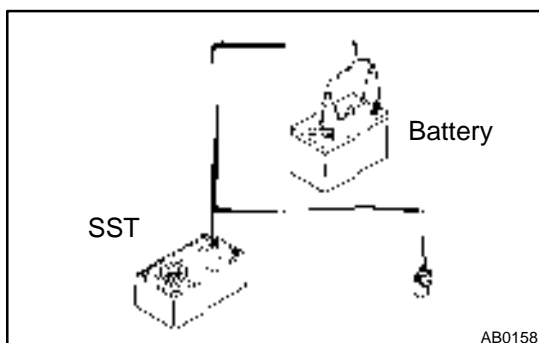

1. AIRBAG DEPLOYMENT WHEN SCRAPPING VEHICLE

HINT:

Have a battery ready as the power source to deploy the airbag.

- (a) Check functioning of the SST (See step 1-(a) on page [RS-16](#)).


SST 09082-00700



(b) Disconnect the side airbag connector.

NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

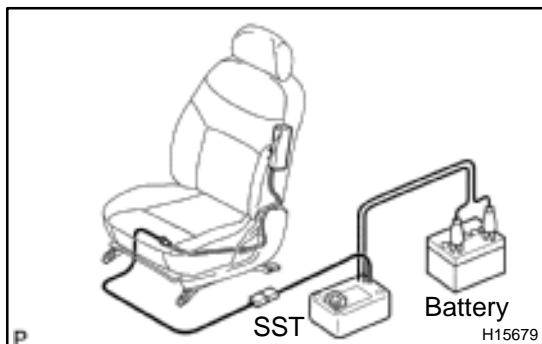


(c) Install the SST.

(1) Connect the connectors of the 2 SST to the airbag connector.

SST 09082-00700, 09082-00750

NOTICE:

To avoid damaging the SST connector and wire harness, do not lock the secondary lock of the twin lock.

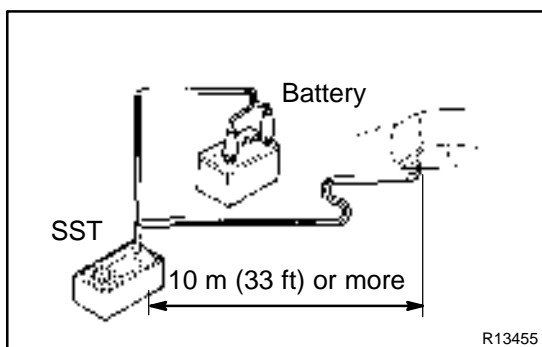

(2) Move the SST at least 10 m (33 ft) away from the front of the vehicle.

(3) Close all the doors and windows of the vehicle.

NOTICE:

Take care not to damage the SST wire harness.

(4) Connect the SST red clip to the battery positive (+) terminal and the black clip to the battery negative (–) terminal.



(d) Deploy the airbag.

(1) Check that no one is inside the vehicle or within 10 m (33 ft) area around the vehicle.

(2) Press the SST activation switch and deploy the airbag.

CAUTION:

- The side airbag assembly is very hot when the airbag is deployed, so leave it alone for at least 30 minutes after deployment.
- Use gloves and safety glasses when handling the side airbag assembly with the deployed airbag.
- Do not apply water, etc. to the side airbag assembly with the deployed airbag.
- Always wash your hands with water after completing the operation.
- When scrapping a vehicle, deploy the airbag and scrap the vehicle with the side airbag assembly still installed.

HINT:

The airbag deploys simultaneously as the LED of SST activation switch lights up.

2. DEPLOYMENT WHEN DISPOSING OF SIDE AIRBAG ASSEMBLY


NOTICE:

- When disposing of the side airbag assembly only, never use the customer's vehicle to deploy the airbag.
- Be sure to follow the procedure given below when deploying the airbag.


HINT:

Have a battery ready as the power source to deploy the airbag.

- (a) Remove the seatback assembly (See page RS-40).

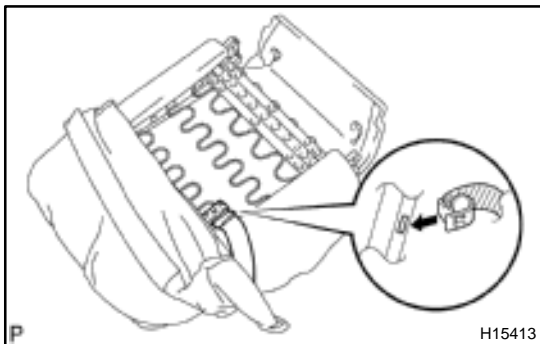


- (b) Disengage the hook of the seatback cover as shown in the illustration.

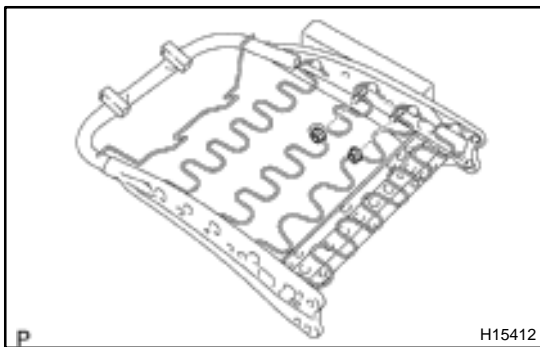

- (c) Remove the 2 nuts and side airbag assembly from the seatback assembly.

CAUTION:

When storing the side airbag assembly, keep the upper surface of the airbag deployment side facing upward.

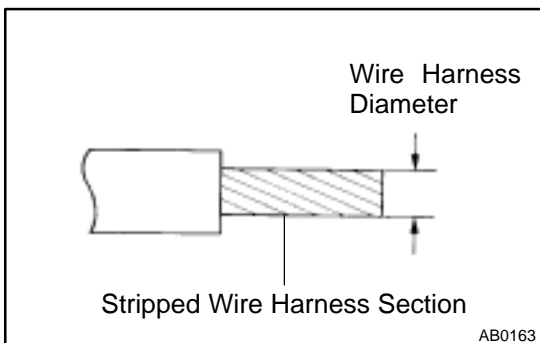

- (d) Using a service-purpose wire harness, tie down the side airbag assembly to the tire.

Wire harness: Stripped wire harness section
1.25 mm² or more (0.0019 in². or more)


CAUTION:

If a wire harness which is too thin or some other thing is used to tie down the side airbag assembly, it may be snapped by the shock when the airbag is deployed. This is highly dangerous. Always use a wire harness for vehicle use which is at least 1.25 mm² (0.0019 in².).


HINT:

To calculate the square of the stripped wire harness section–


$$\text{Square} = 3.14 \times (\text{Diameter})^2 \text{ divided by } 4$$

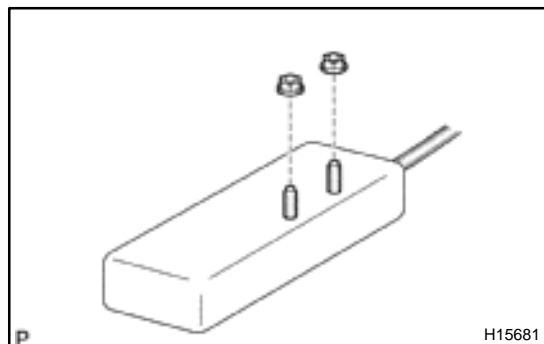

- (1) Install the 2 nuts to the side airbag assembly.

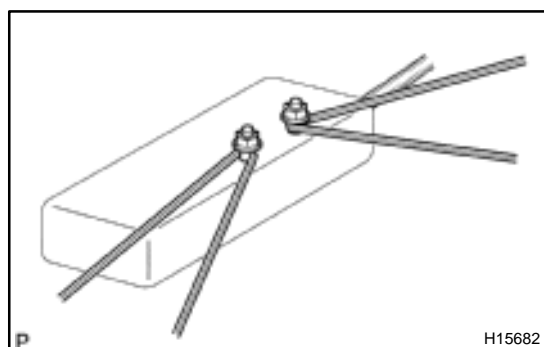

- (2) Wind the wire harness around the stud bolts of the side airbag assembly as shown in the illustration.

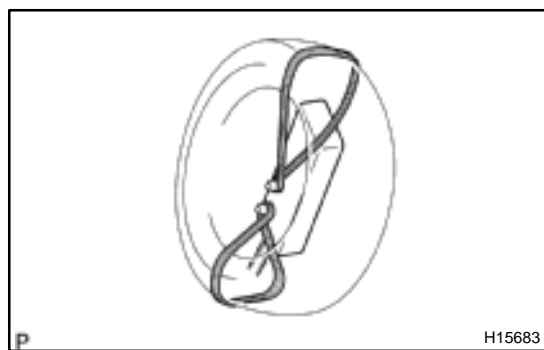

- (3) Position the side airbag assembly inside the tire with the airbag deployment direction facing inside.

Tire size: Must exceed the following dimensions–

Width: 185 mm (7.28 in.)


Inner diameter: 360 mm (14.17 in.)

CAUTION:


- Make sure the wire harness is tight. It is very dangerous when a loose wire harness results in the side airbag assembly coming free due to the shock from the airbag deploying.
- Always tie down the side airbag assembly with the airbag deployment side facing inside.

NOTICE:


The tire will be marked by the airbag deployment, so when disposing of the airbag use a redundant tire.

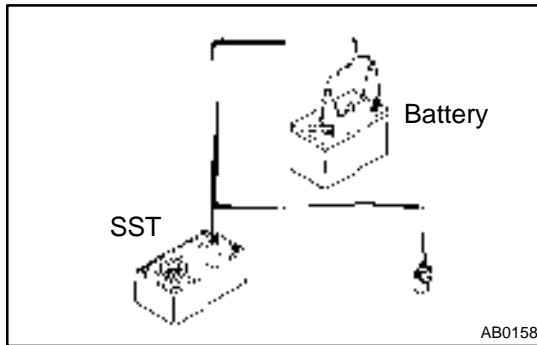

- (e) Check functioning of the SST (See step 1–(a) on page RS-16).
SST 09082-00700

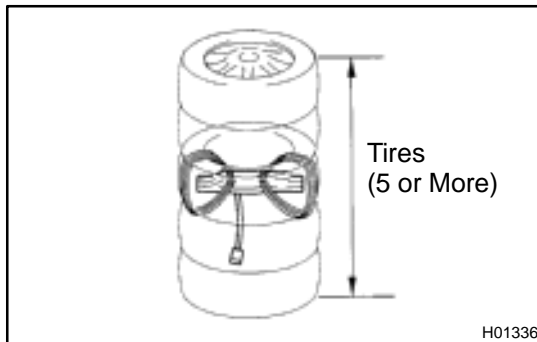

- (f) Place the tires.
- (1) Place at least 2 tires under the tire to which the side airbag assembly is tied.
 - (2) Place at least 2 tires over the tire to which the side airbag assembly is tied. The top tire should have the wheel installed.

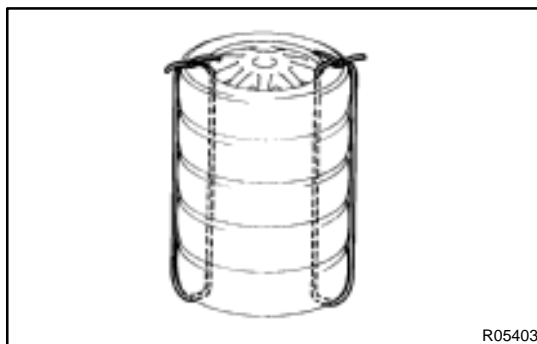


- (3) Tie the tires together with 2 wire harness.

CAUTION:

Make sure that the wire harness are tight. It is very dangerous when loose wire harness results in the tires coming free due to the shock from the airbag deploying.

HINT:

Place the SST connector and wire harness inside tires. Secure at least 1 m (3 ft) of slack for the wire harness.

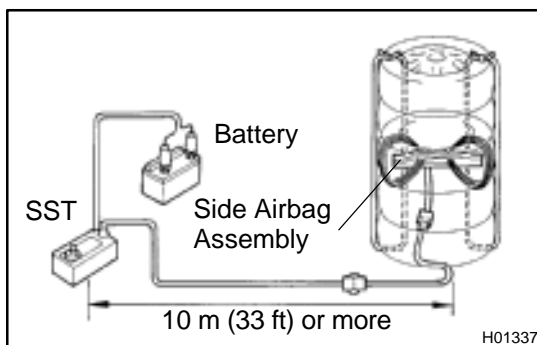

- (g) Install the SST.
Connect the connectors of the 2 SST to the side airbag assembly connector.
SST 09082-00700, 09082-00750

NOTICE:

To avoid damaging the SST connector and wire harness, do not lock the secondary lock of the twin lock. Also, secure some slack for the SST wire harness inside the tire.

- (h) Deploy the airbag.
- (1) Connect the SST red clip to the battery positive (+) terminal and the black clip to the battery negative (–) terminal.
 - (2) Check that no one is within 10 m (33 ft) area around the tire which the side airbag assembly is tied to.
 - (3) Press the SST activation switch and deploy the airbag.

HINT:

The airbag deploys simultaneously as the LED of the SST activation switch lights up.



(i) Dispose of the side airbag assembly.

CAUTION:

- The side airbag assembly is very hot when the airbag is deployed, so leave it alone for at least 30 minutes after deployment.
 - Use gloves and safety glasses when handling a side airbag assembly with the deployed airbag.
 - Do not apply water etc. to a side airbag assembly with the deployed airbag.
 - Always wash your hands with water after completing the operation.
- (1) Remove the side airbag assembly from the tire.
 - (2) Place the side airbag assembly in a vinyl bag, tie the end tightly and dispose of it in the same way as other general parts disposal.



3. DEPLOYMENT WHEN DISPOSING OF SIDE AIRBAG ASSEMBLY WITH AIRBAG DEPLOYED IN COLLISION

Dispose of the side airbag assembly.


CAUTION:

- The side airbag assembly is very hot when the airbag is deployed, so leave it alone for at least 30 minutes after deployment.
 - Use gloves and safety glasses when handling a side airbag assembly with the deployed airbag.
 - Do not apply water etc. to a side airbag assembly with the deployed airbag.
 - Always wash your hands with water after completing the operation.
- (1) Remove the side airbag assembly from the seat (See page RS-40 and see step 2).
 - (2) Place the side airbag assembly in a vinyl bag, tie the end tightly and dispose of it in the same way as other general parts disposal.

INSTALLATION

NOTICE:


Never use airbag parts from another vehicle. When replacing parts, replace them with new parts.

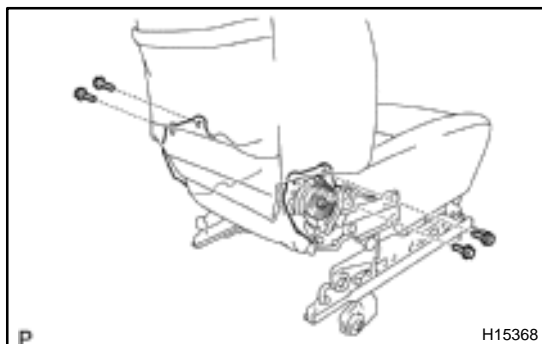

1. INSTALL SEATBACK ASSEMBLY

- (a) Install the seatback assembly to the seat adjuster with the 4 bolts.


Torque: 43 N·m (440 kgf-cm, 32 ft-lbf)

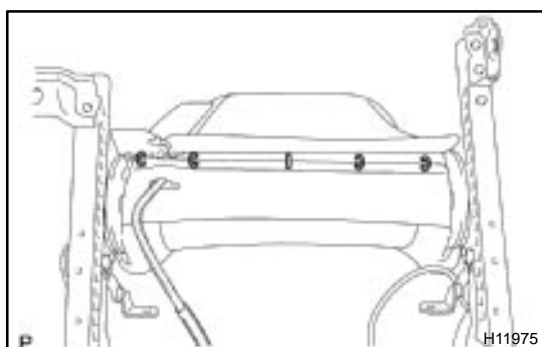

- (b) Install 5 new hog rings.

HINT:

When installing the hog rings, take care to prevent wrinkles as little as possible.

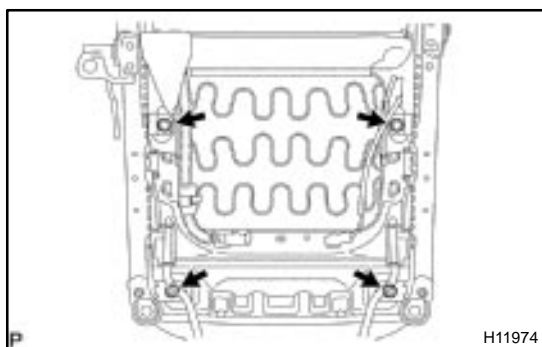

2. INSTALL SEAT CUSHION ASSEMBLY

Install the seat cushion assembly.



3. INSTALL FRONT SEAT CUSHION SHIELDS

- (a) Install the inner front seat cushion shield with the 2 screws.
 (b) Employ the same manner described above to the other side.

4. INSTALL RECLINING ADJUSTER RELEASE HANDLE



5. INSTALL FRONT SEAT

NOTICE:

When mounting the seat to the vehicle, take care not to damage the airbag wire harness.

- (a) Connect the side airbag connector.
- (b) Slide the front seat to the most front position.

NOTICE:

Make sure that seat adjuster locks.

- (c) Without holding the seat track handle, mount the seat to the vehicle.

HINT:

If holding the seat track handle, the adjusted rearmost position slip off.

- (d) Tighten the bolts on the front side temporarily, from the bolt on the inner side tighten them completely.

Torque: 37 N·m (375 kgf-cm, 27 ft-lbf)

- (e) Slide the seat to the most front position to install the bolts on the rear side.

Torque: 37 N·m (375 kgf-cm, 27 ft-lbf)

- (f) Install the 2 seat track covers.

BODY ELECTRICAL SYSTEM

PRECAUTION

BE00M-08

HINT:

Take care to observe the following precautions when performing inspections or removal and replacement of body electrical related parts.

1. HEADLIGHT SYSTEM

Halogen bulbs have pressurized gas inside and require special handling. They can burst if scratched or dropped. Hold a bulb only by its plastic or metal case.

Don't touch the glass part of a bulb with bare hands.

2. SRS (SUPPLEMENTAL RESTRAINT SYSTEM)

The PRIUS is equipped with an SRS (Supplemental Restraint System) such as the driver airbag, side airbag and front passenger airbag. Failure to carry out service operation in the correct sequence could cause the SRS to unexpectedly deploy during servicing, possibly leading to a serious accident. Before servicing (including removal or installation of parts, inspection or replacement), be sure to read the precautionary notices in the RS section.

TROUBLESHOOTING

PROBLEM SYMPTOMS TABLE

BE16S-02

IGNITION SWITCH:

This system uses the multiplex communication system, so check diagnosis system of the multiplex communication system before you proceed with troubleshooting.

Symptom	Suspect Area	See page
Ignition switch is not set to each position.	3. Ignition switch 4. Power source circuit	BE-17 –

KEY UNLOCK WARNING SWITCH:

This system uses the multiplex communication system, so check diagnosis system of the multiplex communication system before you proceed with troubleshooting.

Symptom	Suspect Area	See page
Key unlock warning system does not operate. (The buzzer sounds when the ignition key is ACC or ON)	1. Ignition Switch 2. Key Unlock Warning Switch 3. Wire Harness 4. Body ECU 5. Combination Meter	BE-17 BE-17 – – –

HEADLIGHT AND TAILLIGHT SYSTEM:

This system uses the multiplex communication system, so check diagnosis system of the multiplex communication system before you proceed with troubleshooting.

Symptom	Suspect Area	See page
Auto turn-off system does not operate when the driver's door is opened.	1. Drivers Door Courtesy Switch 2. Body ECU	BE-27 DI-678
Auto turn-off system: Headlight and taillight do not come on.	1. Body ECU 2. Wire Harness	DI-678 –
Auto turn-off system: Headlight and taillight stay on.	1. Body ECU 2. Wire Harness	DI-678 –

w/o Daytime Running Light System:

Symptom	Suspect Area	See page
Only one headlight comes on.	1. Bulb 2. Wire Harness	– –
"LO-Beam" does not light (All).	1. Headlight Control Relay 2. Wire Harness	BE-20 –
"LO-Beam" does not light (One side).	1. Bulb 2. HEAD LH Fuse 3. HEAD RH Fuse 4. Wire Harness	– BE-12 BE-12 –
"HI-Beam" does not light (All).	1. Headlight Dimmer Switch 2. Wire Harness	BE-20 –
"HI-Beam" does not light (One side).	1. Bulb 2. HEAD LH Fuse 3. HEAD RH Fuse 4. Wire Harness	– BE-12 BE-12 –
"Flash" does not light.	1. HEAD LH Fuse 2. HEAD RH Fuse 3. Headlight Dimmer Switch 4. Wire Harness	BE-12 BE-12 BE-20 –
"Flash" does not light.	1. Bulb 2. Wire Harness	– –

BODY ELECTRICAL – TROUBLESHOOTING

Headlight does not come on.	1. Headlight Control Relay 2. Wire Harness	BE-20 —
Headlight does not come on.	1. Bulb 2. Wire Harness	— —
Headlight flickers.	1. Bulb 2. Wire Harness	— —
Headlight is dark.	1. Bulb 2. Wire Harness	— —
Only one taillight comes on.	1. Bulb 2. Wire Harness	— —
Taillight does not come on. (Headlight is normal)	1. TAIL Fuse 2. Taillight Control Relay 3. Light Control Switch 4. Wire Harness	BE-12 BE-42 BE-20 —
Taillight does not come on. (Headlight does not light)	1. Light Control Switch 2. Wire Harness	BE-20 —

w/ Daytime Running Light System:

Symptom	Suspect Area	See page
Only one headlight comes on.	1. Daytime Running Light Relay 2. Daytime Running Light Main Relay 3. Bulb 4. Wire Harness	BE-20 BE-20 — —
"LO-Beam" does not light (All).	1. Headlight Control Relay 2. Wire Harness	BE-20 —
"LO-Beam" does not light (One side).	1. Bulb 2. HEAD LO (LH) Fuse 3. HEAD LO (RH) Fuse 4. Wire Harness	— BE-12 BE-12 —
"HI-Beam" does not light (All).	1. Headlight Dimmer Switch 2. Daytime Running Light Main Relay 3. Combination Meter	BE-20 BE-20 —
"HI-Beam" does not light (One side).	1. Bulb 2. HEAD HI (LH) Fuse 3. HEAD HI (RH) Fuse 4. Daytime Running Light No.2 Relay 5. Wire Harness	— BE-12 BE-12 BE-20 —
"Flash" does not light.	1. Headlight Dimmer Switch 2. Daytime Running Light Main Relay 3. Wire Harness	BE-20 BE-20 —
Headlight does not come on.	1. Headlight Control Relay 2. Daytime Running Light Main Relay 3. Daytime Running Light No.2 Relay 4. Headlight Dimmer Switch 5. Light Control Switch 6. Body ECU 7. Wire Harness 8. Bulb	BE-20 BE-20 BE-20 BE-20 BE-20 DI-678 — —
Headlight does not come on with light control switch in HEAD.	1. Light Control Switch 2. Body ECU 3. Wire Harness	BE-20 DI-678 —
Headlight does not go out with light control switch in OFF.	1. Headlight Control Relay 2. Body ECU 3. Wire Harness	BE-20 DI-678 —

Headlight flickers.	1. Bulb 2. Wire Harness	– –
Headlight is dark.	1. Bulb 2. Wire Harness	– –
Taillight does not come on with light control switch in TAIL.	1. Taillight Control Relay 2. Wire Harness	BE-20 –
Taillight does not go out with light control switch in OFF.	1. Taillight Control Relay 2. Wire Harness	BE-20 –
Headlight does not come on with engine running and light control switch in OFF.	1. ECU-B Fuse 2. GAUGE Fuse 3. Daytime Running Light Main Relay 4. Daytime Running Light Relay 5. Alternator L Terminal 6. Body ECU 7. Parking Brake Switch 8. Wire Harness	BE-12 BE-12 BE-20 BE-20 – DI-678 BE-42 –

TURN SIGNAL AND HAZARD WARNING SYSTEM

Symptom	Suspect Area	See page
"Hazard" and "Turn" do not light up.	1. GAUGE Fuse 2. TURN HAZ Fuse 3. Ignition Switch 4. Turn Signal Flasher Relay 5. Wire Harness	BE-12 BE-12 BE-17 BE-25 –
Hazard warning light does not light up. (Turn is normal)	1. Hazard Warning Switch 2. Wire Harness	BE-25 –
Turn signal does not light up. (Hazard is normal)	1. Turn Signal Switch 2. Wire Harness	BE-25 –
Turn signal does not light up in one direction.	1. Turn Signal Switch 2. Wire Harness	BE-25 –
Only one bulb does not light up.	1. Bulb 2. Wire Harness	– –

INTERIOR LIGHT SYSTEM

This system uses the multiplex communication system, so check diagnosis system of the multiplex communication system before you proceed with troubleshooting.

Symptom	Suspect Area	See page
All the lights do not come ON.	DOME Fuse	BE-12
The driver door courtesy light does not come ON when the driver's door is opened.	1. Driver's Door Courtesy Switch 2. Wire Harness 3. Body ECU	BE-27 – –
The passenger door courtesy light does not come ON when the passenger's door is opened.	1. Passenger's Door Courtesy Switch 2. Wire Harness 3. Body ECU	BE-27 – DI-678
The room light does not come on when the rear-right door is opened.	1. Rear-Right Door Courtesy Switch 2. Wire Harness 3. Body ECU 4. Room Light	BE-27 – DI-678 –
The room light does not come on when the rear-left door is opened.	1. Rear-Left Door Courtesy Switch 2. Wire Harness 3. Body ECU 4. Room Light	BE-27 – DI-678 –
Only one of the bulbs comes ON.	Bulb	–

BODY ELECTRICAL – TROUBLESHOOTING

The illumination does not fade out when all the doors are closed.	1. Courtesy Switch 2. Wire Harness 3. Body ECU	BE-27 – DI-678
The illumination does not fade out immediately when the ignition switch is turned to ACC or ON within 15 seconds after all the doors are closed.	1. Ignition Switch 2. ECU-B Fuse 3. GAUGE Fuse 4. Wire Harness 5. Body ECU	BE-17 BE-12 BE-12 – DI-678
The illumination does not fade out immediately when all the doors are locked within 15 seconds after they are closed.	1. Door Unlock Detection Switch 2. Wire Harness 3. Body ECU	BE-62 – DI-678
Interior light does not light up. (in front personal light)	1. Bulb 2. Personal Light 3. Wire Harness	– BE-27 –
Front personal light does not light up.	1. Bulb 2. Personal Light 3. Wire Harness	– BE-27 –
Rear personal light does not light up.	1. Bulb 2. Interior Light 3. Wire Harness	– BE-27 –
Luggage compartment light does not light up.	1. Bulb 2. Luggage Compartment Door Courtesy Switch 3. Wire Harness	– BE-27 –
Courtesy light does not light up.	1. Bulb 2. Door Courtesy Switch 3. Wire Harness 4. Body ECU	– BE-27 – DI-678

BACK-UP LIGHT SYSTEM

Symptom	Suspect Area	See page
Back-Up Light does not light up.	1. GAUGE Fuse 2. Ignition Switch 3. Back-up Light Relay 4. Wire Harness 5. Bulb	BE-12 BE-17 BE-30 – –
Back-Up Light remains always on.	1. Bulb 2. Wire Harness	– –
Only one light does not light up.	1. Bulb 2. Wire Harness	– –

STOP LIGHT SYSTEM

Symptom	Suspect Area	See page
Stop light does not light up.	1. STOP Fuse 2. Stop Light Switch 3. Wire Harness	BE-12 BE-32 –
Stop light always lights up.	1. Stop Light Switch 2. Wire Harness	BE-32 –
Only one light always lights up.	Wire Harness	–
Only one light does not light up.	1. Bulb 2. Wire Harness	– –

WIPER AND WASHER SYSTEM

Symptom	Suspect Area	See page
Wipers and washer do not operate.	1. WIPER Fuse 2. Wiper Switch 3. Wiper Motor 4. Wire Harness	BE-12 BE-34 BE-34 –
Wipers do not operate in LO, HI or MIST.	1. Wiper Switch 2. Wiper Motor 3. Wire Harness	BE-34 BE-34 –
Wipers do not operate in INT.	1. Wiper Switch 2. Wiper Motor 3. Wire Harness	BE-34 BE-34 –
Washer motor does not operate.	1. WASHER Fuse 2. Washer Switch 3. Washer Motor 4. Wire Harness	BE-12 BE-34 BE-34 –
Wipers do not operate when washer switch ON.	1. WASHER Fuse 2. Washer Switch 3. Wiper Motor 4. Wire Harness	BE-12 BE-34 BE-34 –
Washer fluid does not operate.	Washer Hose and Nozzle	–
<ul style="list-style-type: none"> When wiper switch is in HI position, the wiper blade is in contact with the body. When the wiper switch is OFF, the wiper blade does not retract or the retract position is wrong. 	1. Wiper Motor *1 2. Wire harness *1	BE-34 –

*1: Inspect wiper arm and blade set positions.

Meter Gauges and Illumination:**COMBINATION METER**

Symptom	Suspect Area	See page
Fuel Gauge and Water Temperature Gauge does not operate.	1. GAUGE Fuse 2. Meter Circuit Plate 3. Wire Harness	– BE-39 –
Speedometer does not operate.	1. Vehicle Speed Sensor 2. Meter Circuit Plate 3. Wire Harness	BE-42 BE-39 –
Tachometer does not operate.	1. Igniter 2. Engine and ECU 3. Meter Circuit Plate 4. Wire Harness	– – BE-39 –
Fuel Gauge does not operate or abnormal operation.	1. Fuel Tank Assembly 2. Wire Harness	– –
All illumination lights do not light up.	1. TAIL Fuse 2. Meter Circuit Plate 3. Wire Harness	– BE-42 –
Only one illumination light does not light up.	1. Bulb 2. Wire Harness	– –

Warning Lights: COMBINATION METER

Symptom	Suspect Area	See page
Warning light do not light up. (Except Discharge, Open Door and SRS)	1. GAUGE Fuse 2. Meter Circuit Plate 3. DC/DC converter 4. Wire Harness	– BE-39 – –
Fuel Level warning light does not light up.	1. Bulb 2. Meter Circuit Plate 3. Fuel Tank Assembly 4. Wire Harness	– BE-39 – –
Low Oil Pressure warning light does not light up.	1. Bulb 2. Low Oil Pressure Warning Switch 3. Meter Circuit Plate 4. Wire Harness	– BE-42 BE-39 –
ABS warning light does not light up.	1. Bulb 2. ABS ECU 3. Wire Harness	– DI-351 –
Seat Belt warning light does not light up.	1. Bulb 2. Buckle Switch 3. Meter Circuit 4. Wire Harness	– BE-42 BE-42 –
Brake warning light does not light up.	1. Bulb 2. Parking Brake Switch 3. Brake Fluid Level Warning Switch 4. Meter Circuit Plate 5. Wire Harness	– BE-42 BE-42 BE-39 –
SRS Warning light does not light up.	1. Bulb 2. Airbag Sensor Assembly 3. Meter Circuit Plate 4. Wire Harness	– DI-495 BE-39 –
Open Door warning light does not light up.	1. DOME Fuse 2. Bulb 3. Door Courtesy Switch 4. Meter Circuit Plate 5. Wire Harness	– – BE-27 BE-39 –

Indicator Lights: COMBINATION METER

Symptom	Suspect Area	See page
High beam indicator light does not light up.	1. Bulb 2. Meter Circuit Plate 3. Wire Harness 4. Headlight System	– BE-39 – BE-20
Turn indicator light does not light up.	1. Bulb 2. Meter Circuit Plate 3. Wire Harness 4. Turn Signal and Hazard Warning System	– BE-39 – BE-25
Malfunction indicator light does not light up.	1. Bulb 2. ECM 3. Meter Circuit Plate 4. Wire Harness	– – BE-39 –
Indicator lights do not light up. (Except Turn, Hi-beam and security)	1. GAUGE Fuse 2. Wire Harness	– –

Shift position indicator light does not light up.	<ol style="list-style-type: none"> 1. ECM 2. Shift Position Sensor 3. HV ECU 4. Meter Circuit Plate 5. Wire Harness 	<p>–</p> <p>HT-54</p> <p>–</p> <p>BE-39</p> <p>–</p>
CRUISE indicator light does not light up.	<ol style="list-style-type: none"> 1. Bulb 2. HV ECU 3. Meter Circuit Plate 4. Wire Harness 	<p>–</p> <p>–</p> <p>BE-39</p> <p>–</p>

DEFOGGER SYSTEM

This system uses the multiplex communication system, so check diagnosis system of the multiplex communication system before you proceed with troubleshooting.

Symptom	Suspect Area	See page
Rear window defogger does not operate.	<ol style="list-style-type: none"> 1. DEF M-Fuse 2. Defogger Relay 3. Defogger Switch (in A/C Amplifier) 4. Defogger Wire 5. Wire Harness 6. Body ECU 7. Noise Filter 8. A/C ECU 	<p>BE-12</p> <p>BE-49</p> <p>DI-864</p> <p>BE-49</p> <p>–</p> <p>DI-678</p> <p>–</p> <p>DI-864</p>
Mirror heater does not operate.	<ol style="list-style-type: none"> 1. M-HTR Fuse (Passenger Side J/B) 2. Mirror Heater Relay 3. Mirror Heater 4. Wire Harness 	<p>BE-12</p> <p>BE-49</p> <p>BE-49</p> <p>–</p>

POWER WINDOW CONTROL SYSTEM

This system uses the multiplex communication system, so check diagnosis system of the multiplex communication system before you proceed with troubleshooting.

Symptom	Suspect Area	See page
Power window does not operate.	<ol style="list-style-type: none"> 1. ECU B Fuse 2. GAUGE Fuse 3. Power Main Relay 4. Ignition Switch 5. Power Window Master Switch 6. Body ECU 7. Wire Harness 	<p>BE-12</p> <p>BE-12</p> <p>BE-56</p> <p>BE-17</p> <p>BE-56</p> <p>DI-678</p> <p>–</p>
Only the driver's window does not operate.	<ol style="list-style-type: none"> 1. Power Window Master Switch 2. Power Window Switch 3. Power Window Motor 4. Wire Harness 	<p>BE-56</p> <p>BE-56</p> <p>BE-56</p> <p>–</p>
"Window lock function" does not operate.	Power Window Master Switch	BE-56
Illumination does not light up.	Power Window Master Switch	BE-56

POWER DOOR LOCK CONTROL SYSTEM

This system uses the multiplex communication system, so check diagnosis system of the multiplex communication system before you proceed with troubleshooting.

Symptom	Suspect Area	See page
All the doors cannot be locked or unlocked. (Power Window Control System is normal.)	1. Door Lock Control Switch 2. Body ECU 3. Wire Harness	BE-62 DI-678 –
Only one side door lock control does not operate.	1. Door Lock Motor 2. Wire Harness	BE-62 –
Door key related function does not operate.	1. Door Key Lock and Unlock Switch 2. Body ECU 3. Wire Harness	BE-62 DI-678 –
Key confinement prevention function does not operate.	1. Key Unlock Warning Switch 2. Door Courtesy Switch 3. Body ECU 4. Wire Harness	BE-17 BE-27 DI-678 –

THEFT DETERRENT SYSTEM

This system uses the multiplex communication system, so check diagnosis system of the multiplex communication system before you proceed with troubleshooting.

HINT:

Troubleshooting of the theft deterrent system is based on the premise that the door lock control system is operating normally. Accordingly, before troubleshooting the theft deterrent system, first make certain that the door lock control system is operating normally.

Symptom	Suspect Area	See page
The theft deterrent system cannot be set	1. Indicator light circuit 2. ECU power source circuit 3. Key unlock warning switch circuit 4. Door key lock and unlock switch circuit 5. Door courtesy switch circuit 6. Door unlock detection switch circuit 7. Engine hood courtesy switch circuit	DI-704 DI-685 DI-695 DI-724 DI-714 DI-710 DI-720
The indicator light does not blink when system is set.	Indicator light circuit	DI-704
When the system is set (The system does not operate when the rear door is unlocked).	Door unlock detection switch circuit	DI-710
When the system is set (The system does not operate when the luggage compartment door is opened by a method other than the key).	Luggage compartment door courtesy switch circuit	DI-722
When the system is set (The system does not operate when the engine hood is lifted).	Engine hood courtesy switch circuit	DI-720
While the system is in warning operation (Horns do not sound).	Horn relay circuit	DI-697
While the system is in warning operation (Headlights do not flash).	Headlight control relay circuit	DI-693
While the system is in warning operation (Taillights do not flash).	Taillight control relay circuit	DI-691
While the system is in warning operation (The door lock is not locked).	Door unlock detection switch circuit	DI-710
System is still set even when a rear door is open	Door courtesy switch circuit	DI-714
Even when the system is not set (Horns sound).	Horn relay circuit	DI-697

Even when the system is not set (Headlights stay on).	Headlight control relay circuit	DI-697
Even when the system is not set (Taillights stay on).	Taillight control relay circuit	DI-691

WIRELESS DOOR LOCK CONTROL SYSTEM

This system uses the multiplex communication system, so check diagnosis system of the multiplex communication system before you proceed with troubleshooting.

HINT:

- Troubleshooting of the wireless door lock control system is based on the premise that the door lock control system is operating normally. Accordingly, before troubleshooting the wireless door lock control system, first make certain that the door lock control system is operating normally.
- If the trouble still reappears even though there are no abnormalities in any of the other circuits, then check and replace the Wireless Door Lock Control Receiver as the last step.

Symptom	Suspect Area	See page
All functions of wireless door lock control system do not operate.	1. Transmitter 2. Wireless Door Lock Control Receiver 3. Wire Harness 4. Body ECU	BE-83 BE-83 – DI-678

POWER MIRROR CONTROL SYSTEM

Symptom	Suspect Area	See page
Both right and left mirrors do not operate.	1. ACC Fuse 2. ACC Relay 3. Mirror Switch 4. Wire Harness	BE-12 BE-12 BE-93 –
Only one side of mirror does not operate.	1. Mirror Motor 2. Wire Harness	BE-93 –

AUDIO SYSTEM

Symptom	Suspect Area	See page
Audio system abnormal operation.	TROUBLESHOOTING	BE-97

CLOCK SYSTEM

Symptom	Suspect Area	See page
Clock will not operate.	TROUBLESHOOTING NO.1	BE-102
Clock loses or gains time.	TROUBLESHOOTING NO.2	BE-102

HYBRID BEHICLE IMMOBILIZER SYSTEM


Symptom	Suspect Area	See page
Hybrid vehicle immobilizer system does not operate.	Pre-check	BE-111

HORN SYSTEM


Symptom	Suspect Area	See page
Horn system does not operate.	1. HORN Fuse 2. Horn Relay 3. Horn Switch 4. Horn 5. Wire Harness	BE-12 BE-117 BE-117 BE-117 –
Horns blow all the time.	1. Horn Relay 2. Horn Switch 3. Wire Harness	BE-117 BE-117 –
One horn operates but the other horn does not operate.	1. Horn 2. Wire Harness	BE-117 –
Horns operate abnormally.	1. Horn Relay 2. Horn 3. Wire Harness	BE-117 BE-117 –

POWER SOURCE LOCATION

BE1UY-02

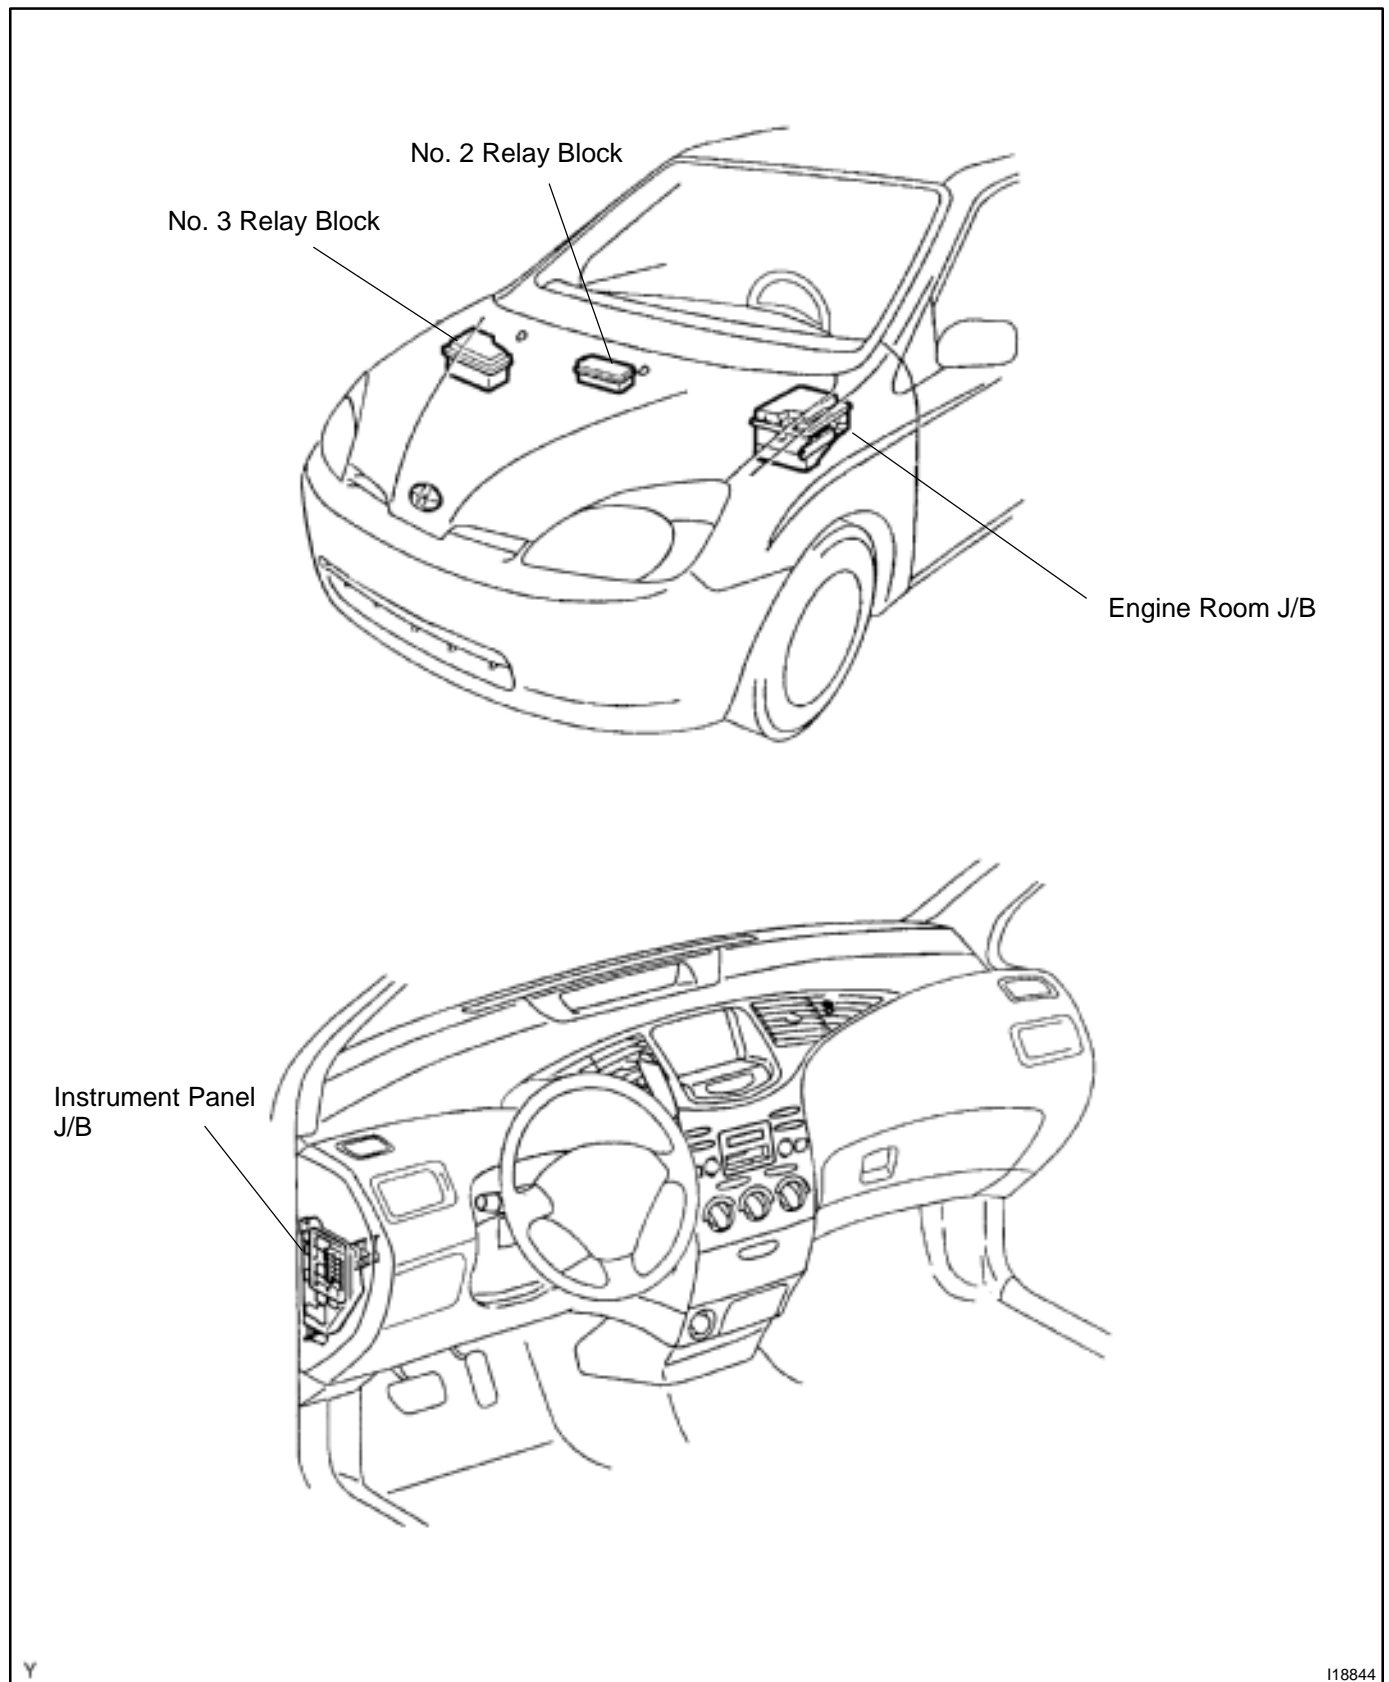

cardiagn.com

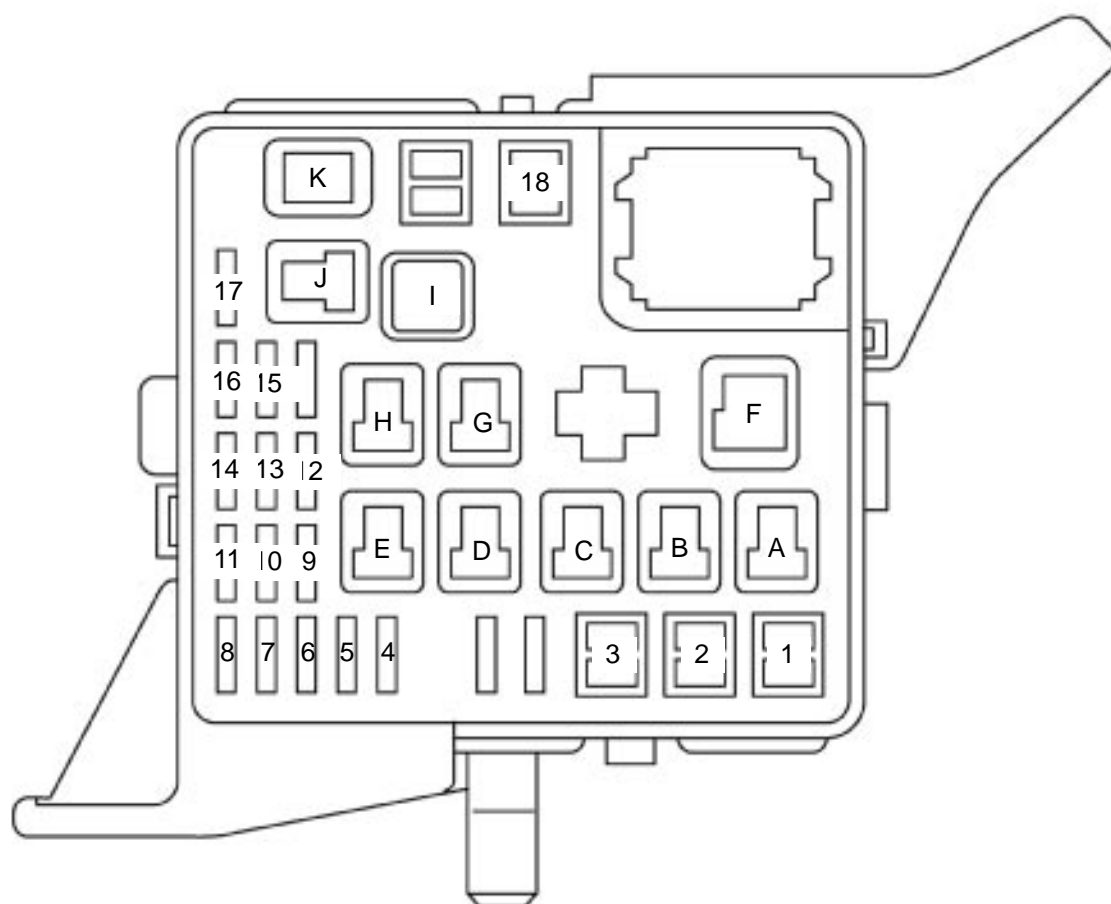
Engine room J/B:**Fuses:**

- | | |
|-------------------|--------------------------|
| 1. HTR Fuse | 11. DOME Fuse |
| 2. RDI Fuse | 12. HEAD HI (RH) Fuse *1 |
| 3. ABS No. 2 Fuse | 13. HEAD HI (LH) Fuse *1 |
| 4. CDS FAN Fuse | 14. HEAD LO (LH) *1 |
| 5. HORN Fuse | HEAD (LH) *2 |
| 6. THRO Fuse | 15. HEAD LO (RH) *1 |
| 7. ABS No. 3 Fuse | HEAD (RH) *2 |
| 8. TURN-HAZ Fuse | 16. EFI Fuse |
| 9. AM2 Fuse | 17. HEV Fuse |
| 10. BATT FAN | 18. HEAD Fuse *1 |

*1: w/ Daytime Running Light
 *2: w/o Daytime Running Light

Relays:


- | |
|--------------------|
| A. FAN NO. 1 Relay |
| B. FAN NO. 2 Relay |
| C. FAN NO. 3 Relay |
| D. IG2 Relay |
| E. HORN Relay |
| F. HTR Relay |
| G. EFI Relay |
| H. CLR MG Relay |
| I. HEAD Relay |
| J. CIR OPN Relay |
| K. DIM Relay *1 |

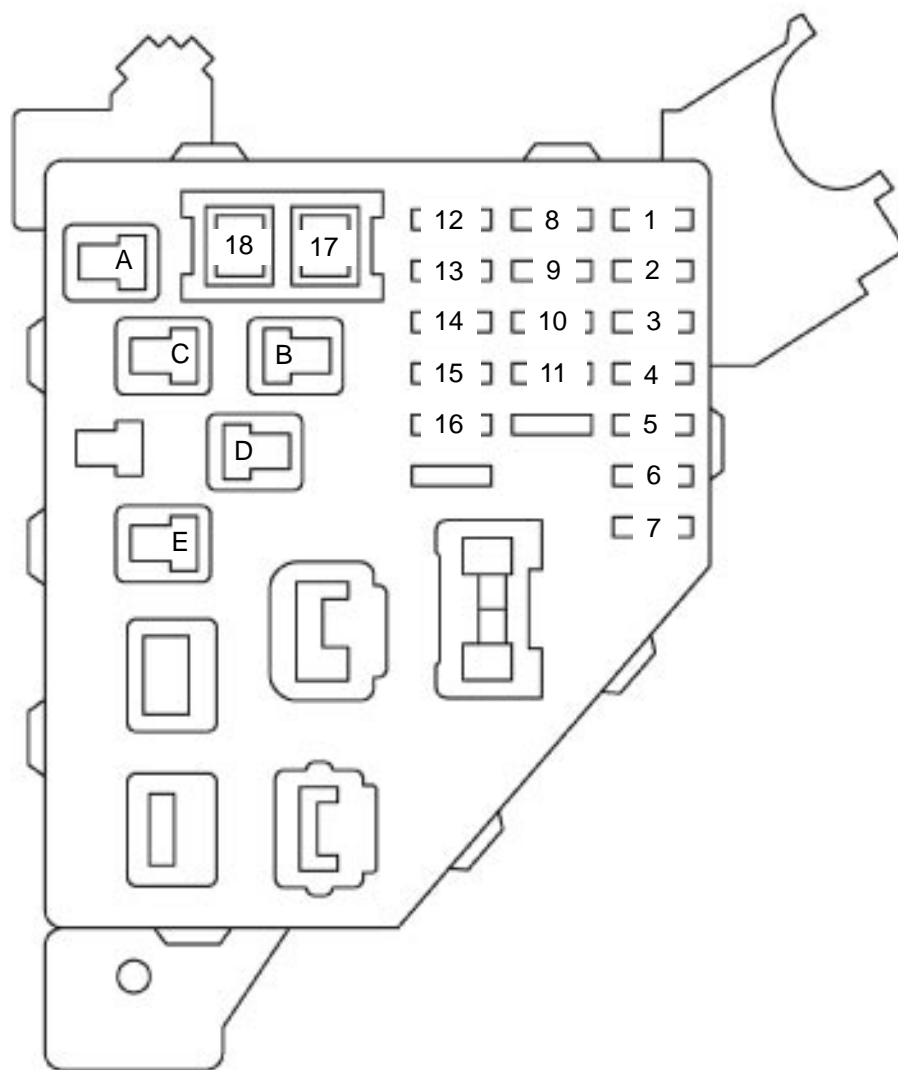Instrument Panel J/B:**Fuses:**

- | | | |
|---------------|-----------------|------------------|
| 1. HTR Fuse | 8. GAUGE Fuse | 15. CIG Fuse |
| 2. STOP Fuse | 9. ECU-IG Fuse | 16. SRS ACC Fuse |
| 3. ECU-B Fuse | 10. WIPER Fuse | 17. PWR Fuse |
| 4. DOOR Fuse | 11. WASHER Fuse | 18. DEF Fuse |
| 5. OBDII Fuse | 12. PANEL Fuse | |
| 6. PWR1 Fuse | 13. TAIL Fuse | |
| 7. AM1 Fuse | 14. ACC Fuse | |

Relays:


- | |
|----------------|
| A. IG1 Relay |
| B. ACC Relay |
| C. TAIL Relay |
| D. POWER Relay |
| E. DEF Relay |

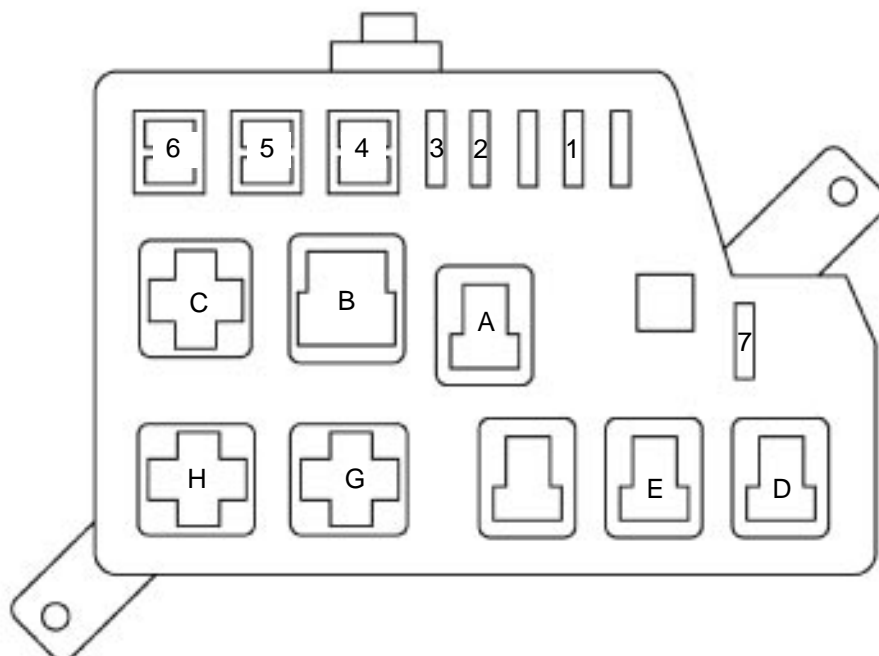Engine Room R/B No. 3:**Fuses:**


- | | |
|-------------------|--------------|
| 1. HTR2 Fuse | 5. EMPS Fuse |
| 2. HTR1 Fuse | 6. HTR3 Fuse |
| 3. ABS No. 4 Fuse | 7. DRL Fuse |
| 4. ABS No. 1 Fuse | |

Relays:

- | | |
|------------------|---------------|
| A. A/C W/P Relay | E. HTR1 Relay |
| B. ABS SOL Relay | G. HTR3 Relay |
| C. DRL Relay | H. EPMS Relay |
| D. HTR2 Relay | |

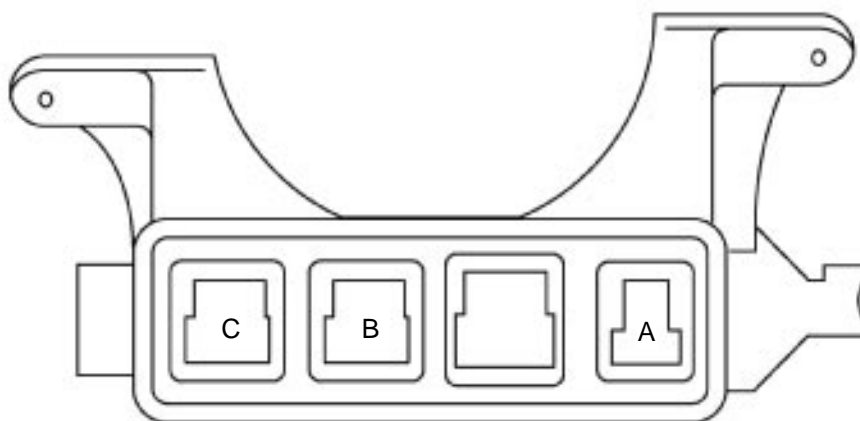Engine Room R/B No. 2:**Relays:**

- | |
|--------------------------|
| A. IGCT Relay |
| B. HYDRO MTR No. 2 Relay |
| C. HYDRO MTR No. 1 Relay |

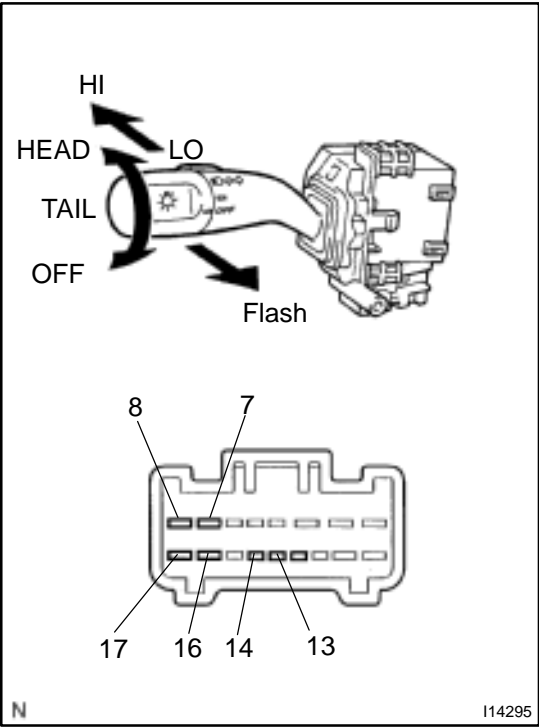

INSPECTION

1. INSPECT LIGHT CONTROL SWITCH CONTINUITY


Switch position	Tester connection	Specified condition
OFF	–	No continuity
TAIL	14 – 16	Continuity
HEAD	13 – 14 – 16	Continuity

If continuity is not as specified, replace the switch.

2. INSPECT HEADLIGHT DIMMER SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
Low beam	16 – 17	Continuity
High beam	7 – 16	Continuity
Flash	7 – 8 – 16	Continuity


If continuity is not as specified, replace the switch.

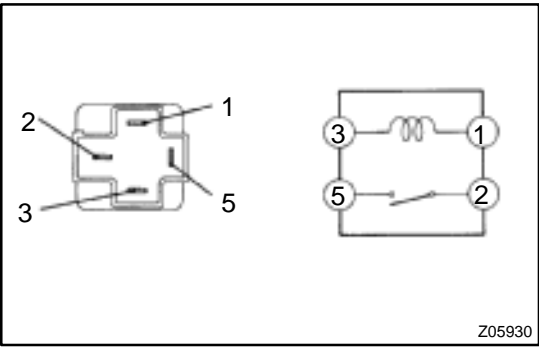

3. INSPECT HEADLIGHT CONTROL RELAY CONTINUITY

Condition	Tester connection	Specified condition
Constant	1 – 3	Continuity
Apply B+ between terminals 1 and 2.	2 – 5	Continuity


If continuity is not as specified, replace the relay.

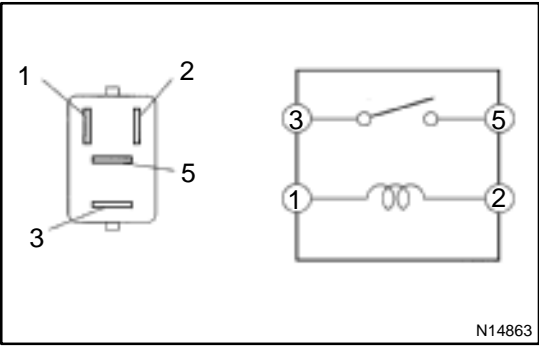

4. INSPECT TAILLIGHT CONTROL RELAY CONTINUITY

Condition	Tester connection	Specified condition
Constant	1 – 2	Continuity
Apply B+ between terminals 1 and 2.	3 – 5	Continuity


If continuity is not as specified, replace the relay.

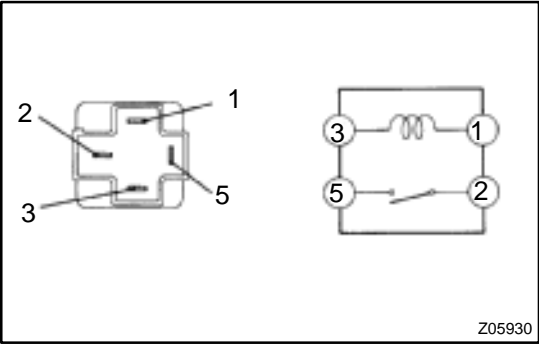

5. INSPECT DRL RELAY CONTINUITY

Condition	Tester connection	Specified condition
Constant	1 – 3	Continuity
Apply B+ between terminals 1 and 2.	2 – 5	Continuity

If continuity is not as specified, replace the relay.

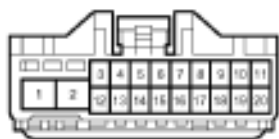Wire Harness Side

h10-1-A

I17862

6. INSPECT DAYTIME RUNNING LIGHT MAIN RELAY CIRCUIT


Disconnect the connector from the relay and inspect the connector on the wire harness side.


Tester connection	Condition	Specified condition
2 – Ground	Constant	Continuity
3 – Ground	Constant	Battery voltage
4 – Ground	Terminal 5 ground	Battery voltage
6 – Ground	Constant	Battery voltage
7 – Ground	Light control switch OFF or TAIL	No continuity
7 – Ground	Light control switch HEAD	Continuity
8 – Ground	Headlight dimmer switch FLASH or HI	Continuity
9 – Ground	Engine running	Battery voltage
12 – Ground	Ignition switch OFF	No voltage
12 – Ground	Ignition switch ON	Battery voltage

If circuit is specified, try replacing the relay with a new one.

If circuit is not as specified, inspect the circuits connected to other parts.

ADJUSTMENT

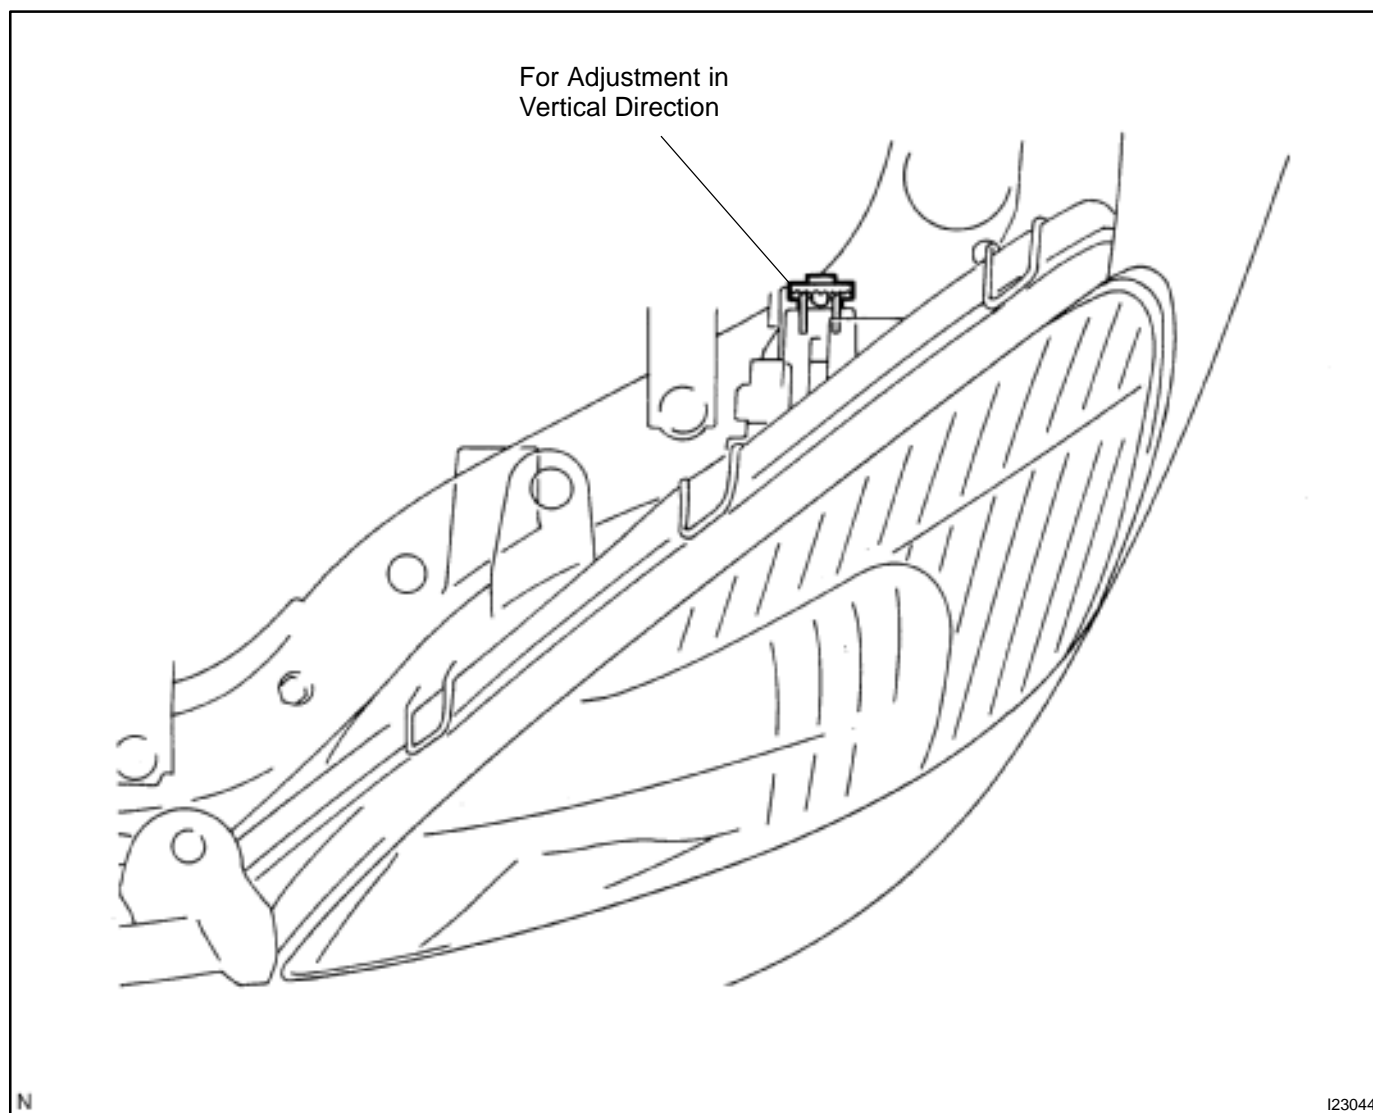

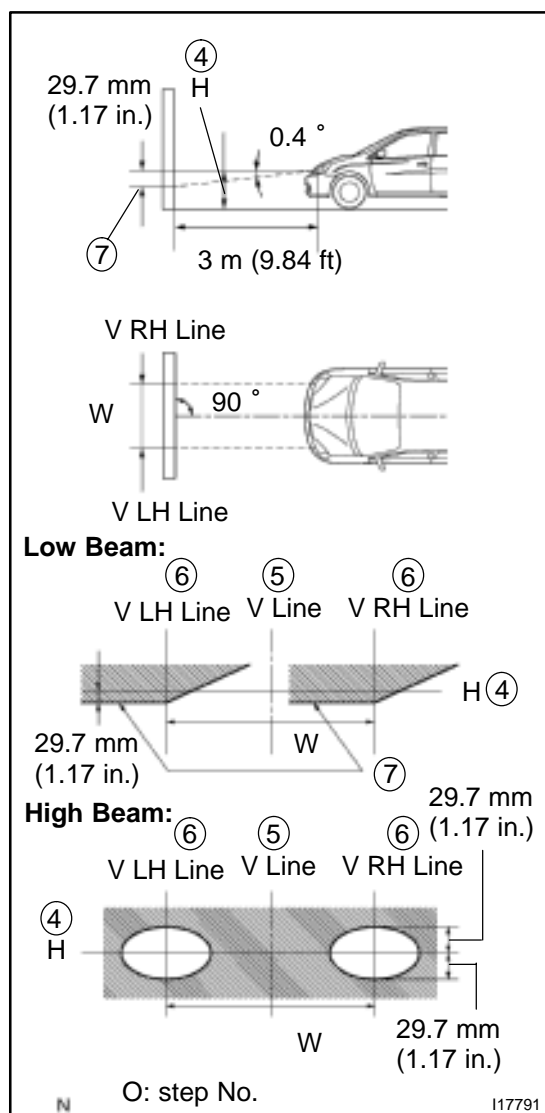**ADJUST HEADLIGHT AIM ONLY**


- (a) Place the vehicle in the following conditions.
 - The area around the headlight is not deformed.
 - The vehicle is parked on a level surface.
 - Tire inflation pressure is the specified value.
 - A driver is in the driver's seat and the vehicle is in a state ready for driving (with a tank full).
 - The vehicle has been bounced several times.
- (b) Check the headlight aiming.
 - (1) Prepare a thick white paper.
 - (2) Stand the paper perpendicular to the ground at the position 9.84 ft away from the headlights.
 - (3) Ensure that the center line of the vehicle and the paper face forms a 90-degree angle as shown in the illustration.
 - (4) Draw a horizontal line (H line) on the paper, showing where the headlights should strike.
 - (5) Draw a vertical line (V line) to where the center line of the vehicle is to be.
 - (6) Draw 2 vertical lines (by connecting the low and high beam center marks) to where the both headlights should strike (V RH and V LH lines).
 - (7) Draw a horizontal line (by connecting the both low beam center marks) to where the headlights should strike (H RH and H LH lines).
 - (8) Start the engine.
 - (9) Turn the headlights ON.
 - (10) Check that the headlights properly strike the position shown in the illustration.
 - (11) If not, adjust the lights in the vertical direction.

HINT:

As shown in the illustration, adjust each aim of the RH and LH lights.

- (c) When adjusting it in the vertical direction:

Using adjusting bolt, adjust the headlight aim to within the specified range.

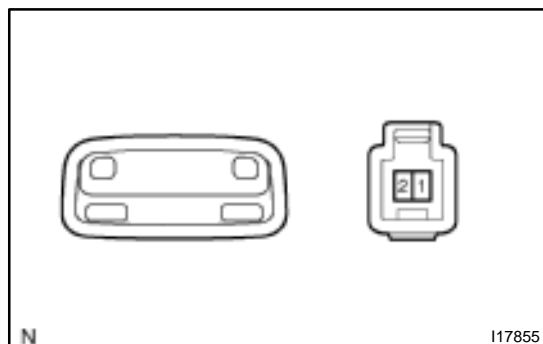


INSPECTION

1. INSPECT FRONT PERSONAL LIGHT CONTINUITY

Using an ohmmeter, check that continuity exists between terminals.

If continuity is not as specified, replace the light assembly or bulb.

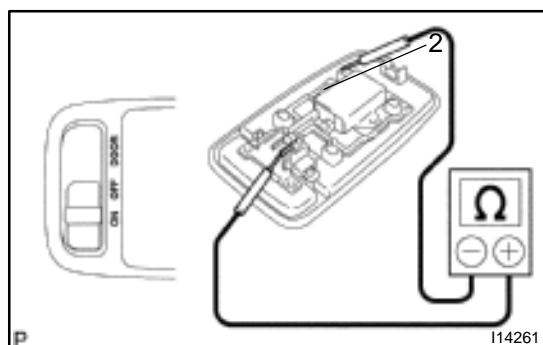


2. INSPECT INTERIOR LIGHT CONTINUITY

(a) Disconnect the connector from the room light.

(b) Turn the room light switch ON, check that continuity exists between terminal 1 and body ground.

If continuity is not as specified, replace the light assembly or bulb.

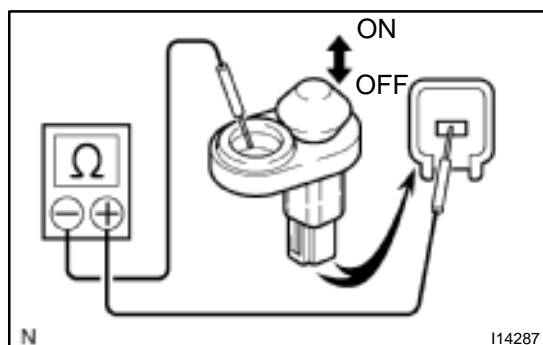


3. INSPECT DOOR COURTESY SWITCH CONTINUITY

(a) Check that continuity exists between terminals and the switch body with the switch ON (Switch pin released: opened door).

(b) Check that no continuity exists between terminals and the switch body with the switch OFF (Switch pin pushed in: closed door).


If operation is not as specified, replace the switch.

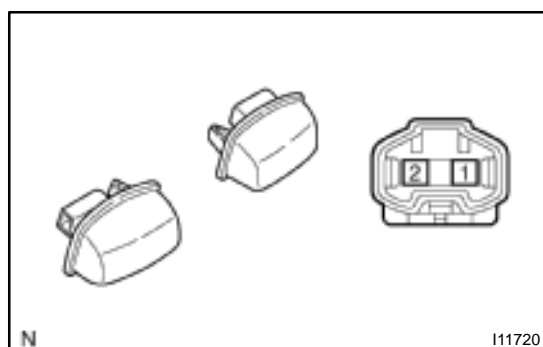

4. INSPECT LICENCE PLATE LIGHT CONTINUITY

Using an ohmmeter, check that continuity exists between terminals.

If continuity is not as specified, replace the light assembly or bulb.

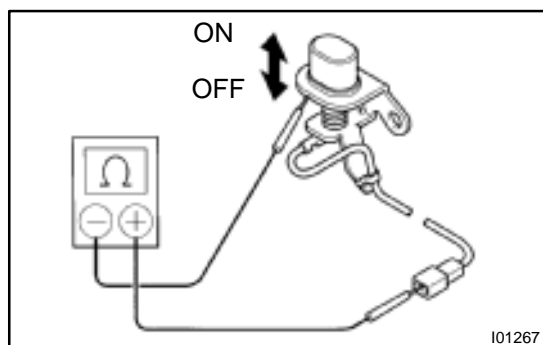


5. INSPECT LUGGAGE COMPARTMENT DOOR COURTESY SWITCH CONTINUITY

(a) Check that continuity exists between terminals and the switch body with the switch ON (Switch pin released: opened door).

(b) Check that no continuity exists between terminals and the switch body with the switch OFF (Switch pin pushed in: closed door).


If operation is not as specified, replace the switch.

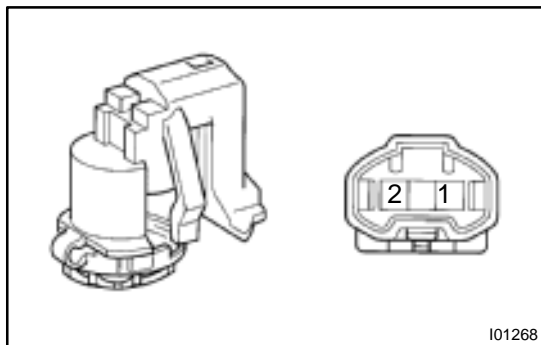

6. INSPECT LUGGAGE COMPARTMENT LIGHT CONTINUITY

Using an ohmmeter, check that continuity exists between terminals.

If continuity is not as specified, replace the light assembly or bulb.

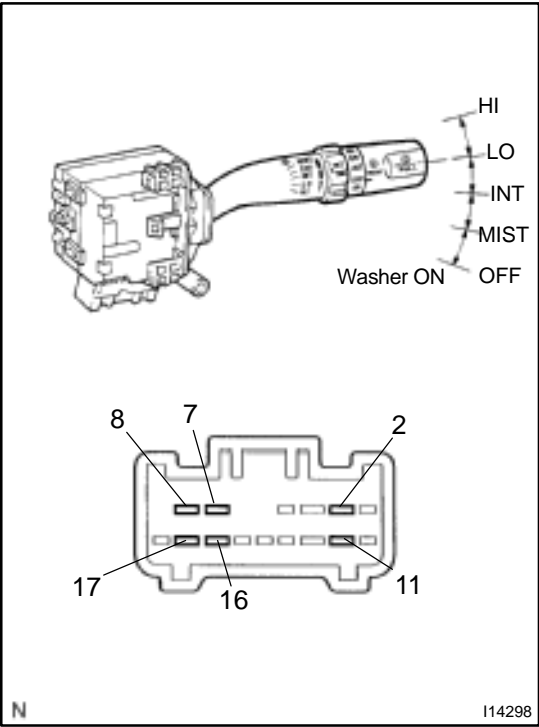


INSPECTION

1. INSPECT FRONT WIPER AND WASHER SWITCH CONTINUITY


Switch position	Tester connection	Specified condition
OFF	7 – 16	Continuity
INT	7 – 16	Continuity
LO	7 – 17	Continuity
HI	8 – 17	Continuity
Washer ON	2 – 11	Continuity

If continuity is not as specified, replace the switch.

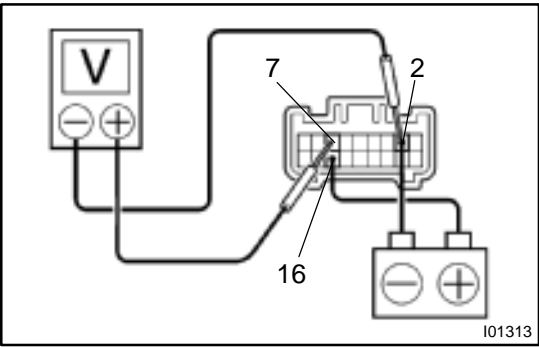

2. INSPECT FRONT WIPER INTERMITTENT OPERATION


- (a) Turn the wiper switch to INT position.
- (b) Turn the intermittent time control switch to FAST position.
- (c) Connect the positive (+) lead from the battery to terminal 16 and the negative (–) lead to terminal 2.
- (d) Connect the positive (+) lead from the voltmeter to terminal 7 and the negative (–) lead to terminal 2, check that the meter needle indicates battery voltage.

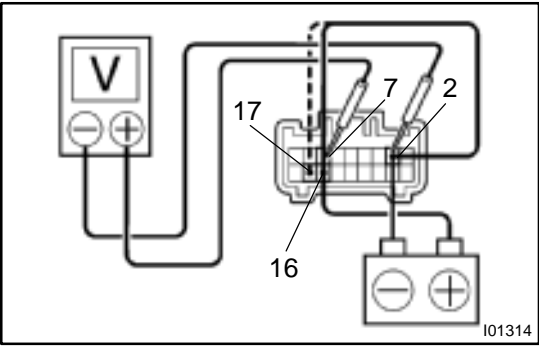

- (e) After connecting terminal 16 to terminal 17, connect to terminal 2 to terminal 17, check the voltage rises from 0 volts to battery voltage with in the times, as shown in the table.


INT time control switch position	Voltage
FAST	Approx. 1 ~ 3 sec. ← Battery voltage ← 0 Volt
SLOW	Approx. 10 ~ 15 secs. ← Battery voltage ← 0 Volt

If operation is not as specified, replace the wiper and washer switch.

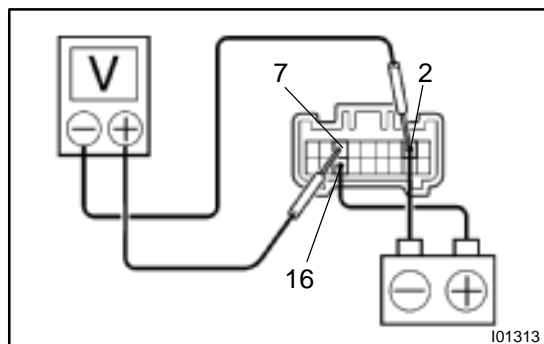


3. INSPECT FRONT WASHER LINKED OPERATION

- Connect the positive (+) lead from the battery to terminal 16 and the negative (-) lead to terminal 2.
- Connect the positive (+) lead from the voltmeter to terminal 7 and the negative (-) lead to terminal 2.
- Push in the washer switch, and check that the voltage changes, as shown in the table.

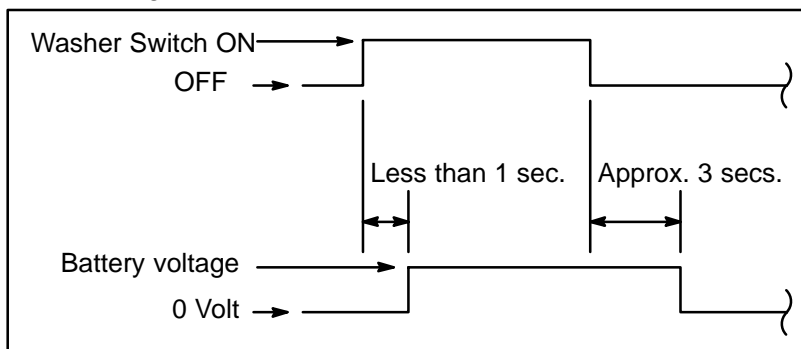

If operation is not as specified, replace the wiper and washer switch.

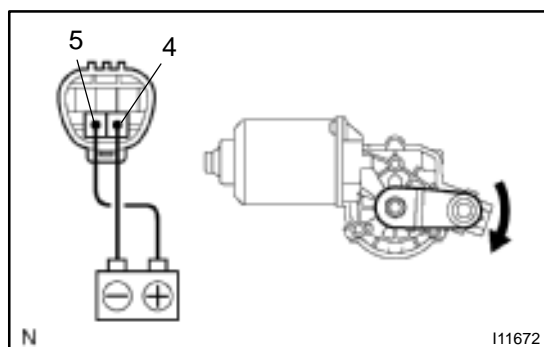


4. Low Speed:

INSPECT FRONT WIPER MOTOR OPERATION

Connect the positive (+) lead from the battery to terminal 5 and the negative (-) lead to terminal 4, check that the motor operates at low speed.

If operation is not as specified, replace the motor.

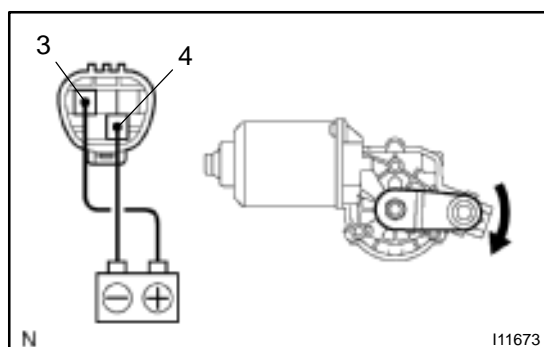


5. High Speed:

INSPECT FRONT WIPER MOTOR OPERATION

Connect the positive (+) lead from the battery to terminal 3 and the negative (-) lead to terminal 4, check that the motor operates at high speed.


If operation is not as specified, replace the motor.

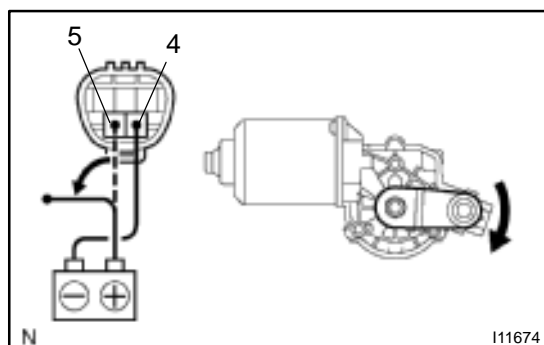

6. Stopping at Stop Position:

INSPECT FRONT WIPER MOTOR OPERATION

- Operate the motor at low speed and stop the motor operation anywhere except at the stop position by disconnecting positive (+) lead from terminal 5.

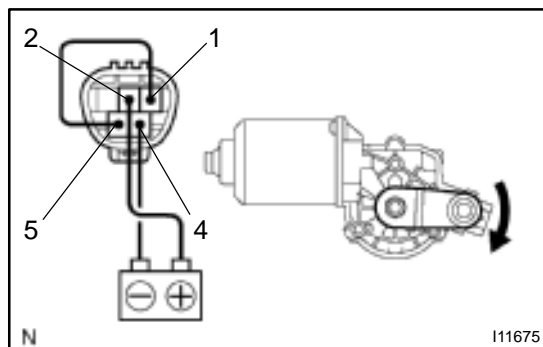



- (b) Connect terminals 1 and 5.
- (c) Connect the positive (+) lead from the battery to terminal 2 and negative (–) lead to terminal 4, check that the motor stops running at the stop position after the motor operates again.

If operation is not as specified, replace the motor.


COMBINATION METER LOCATION


BE1VS-02

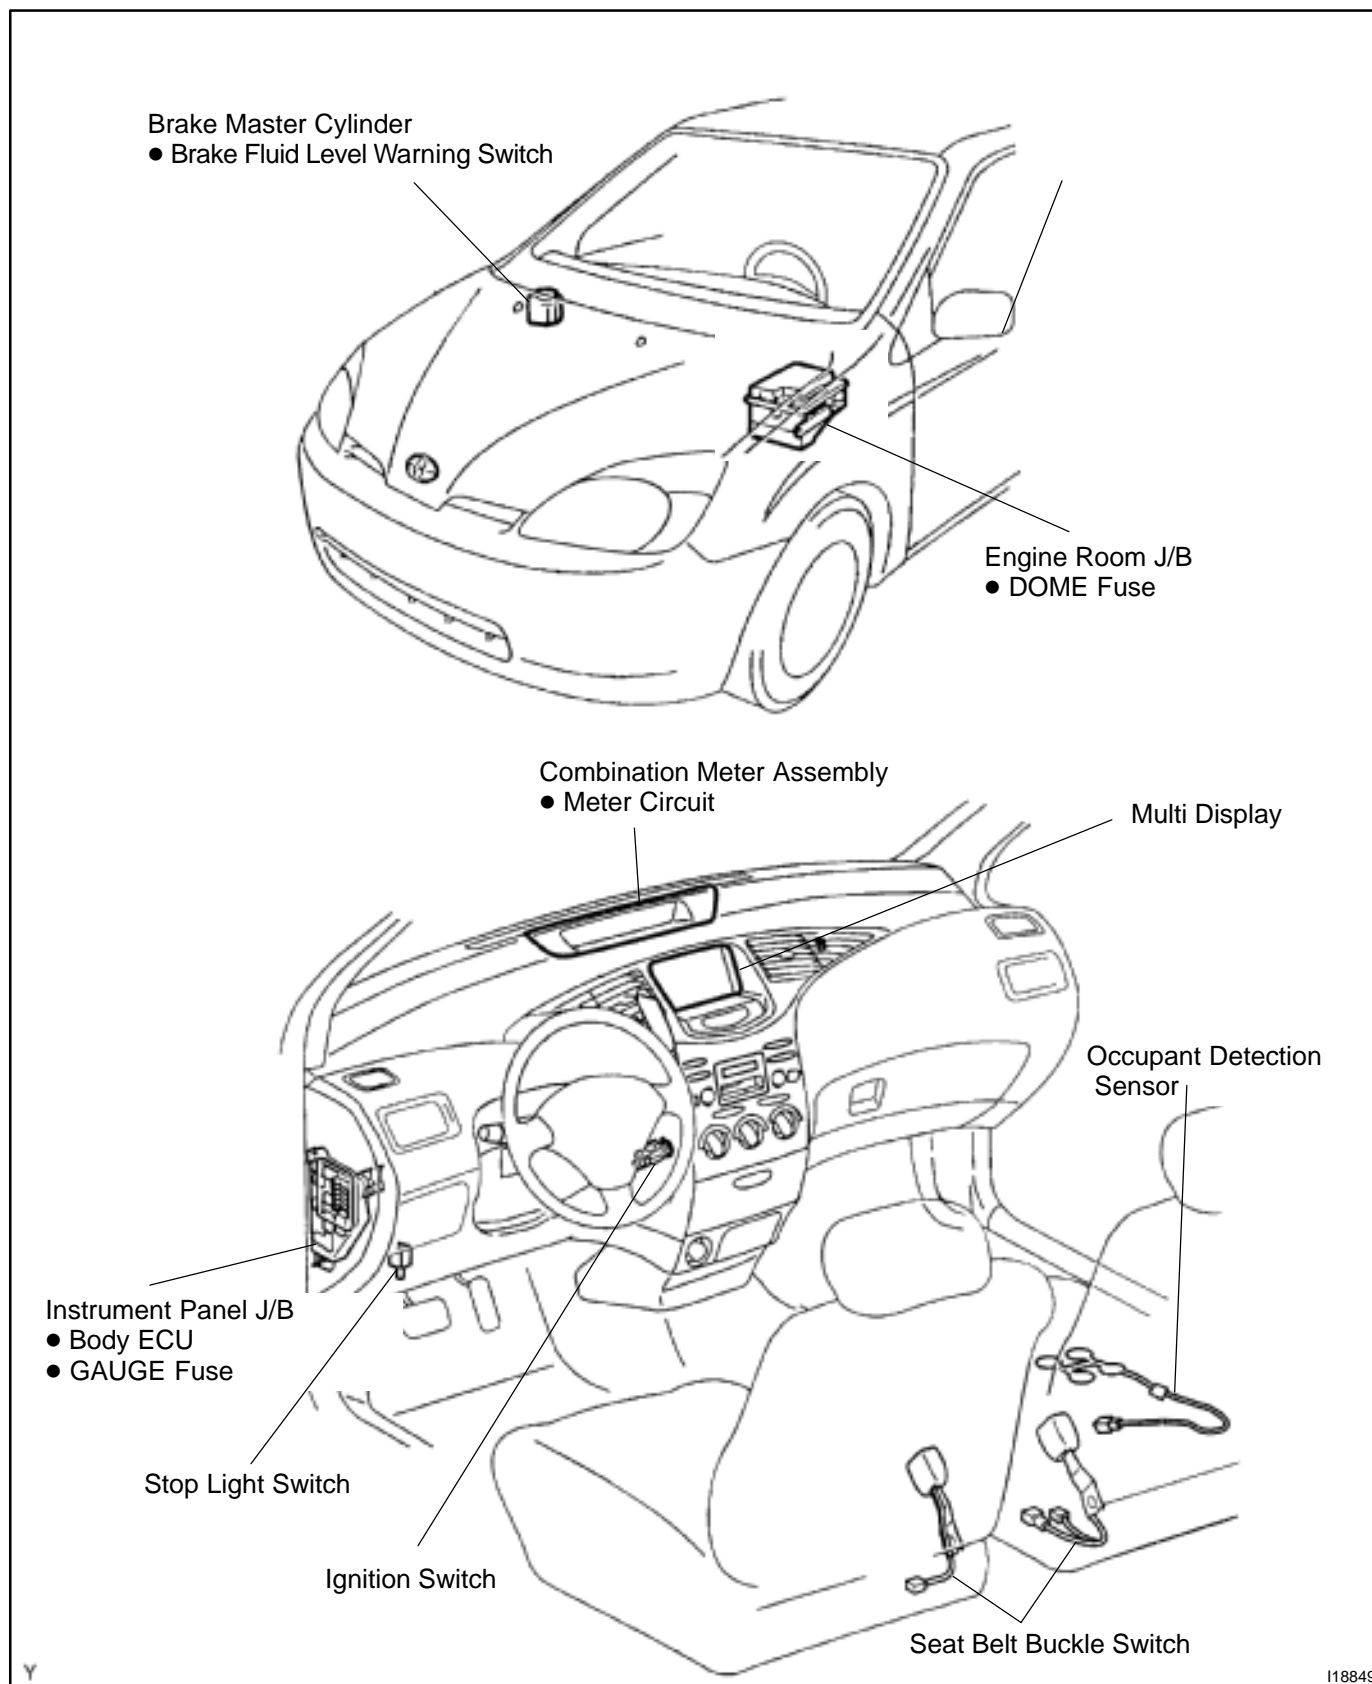

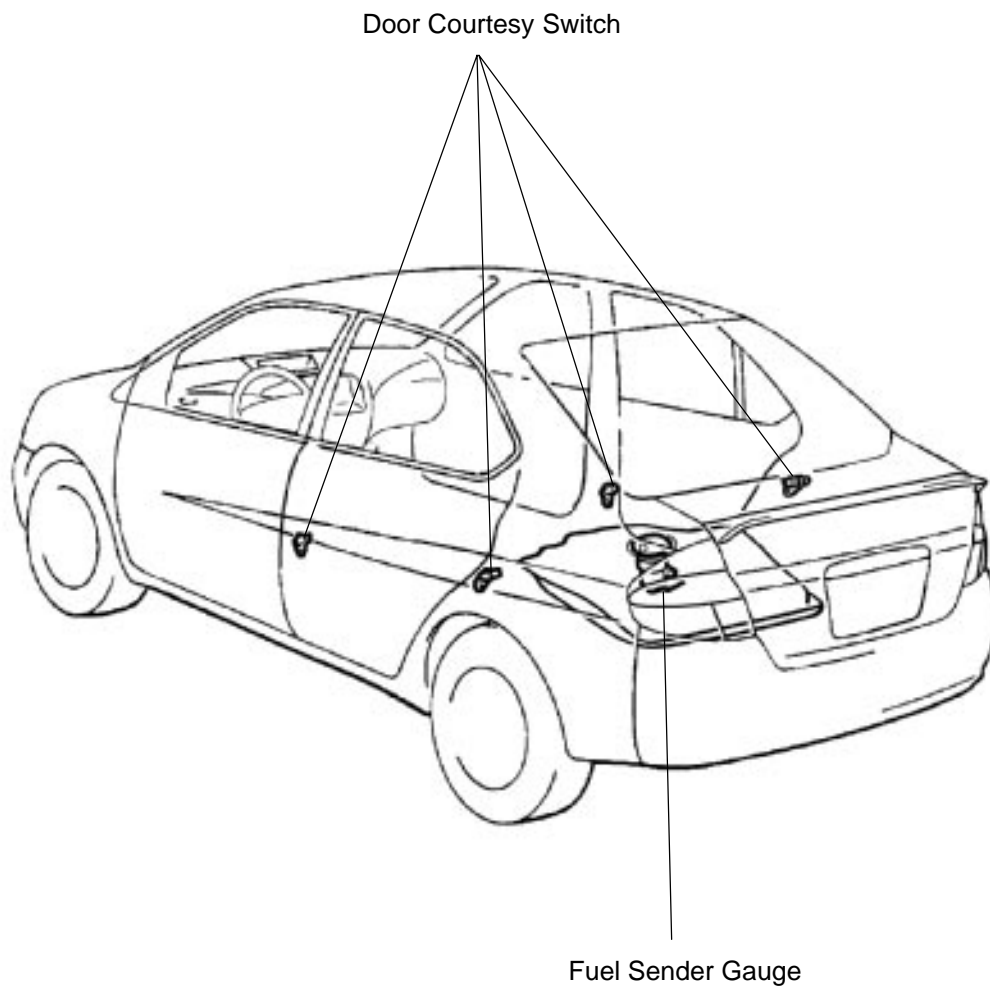

CIRCUIT

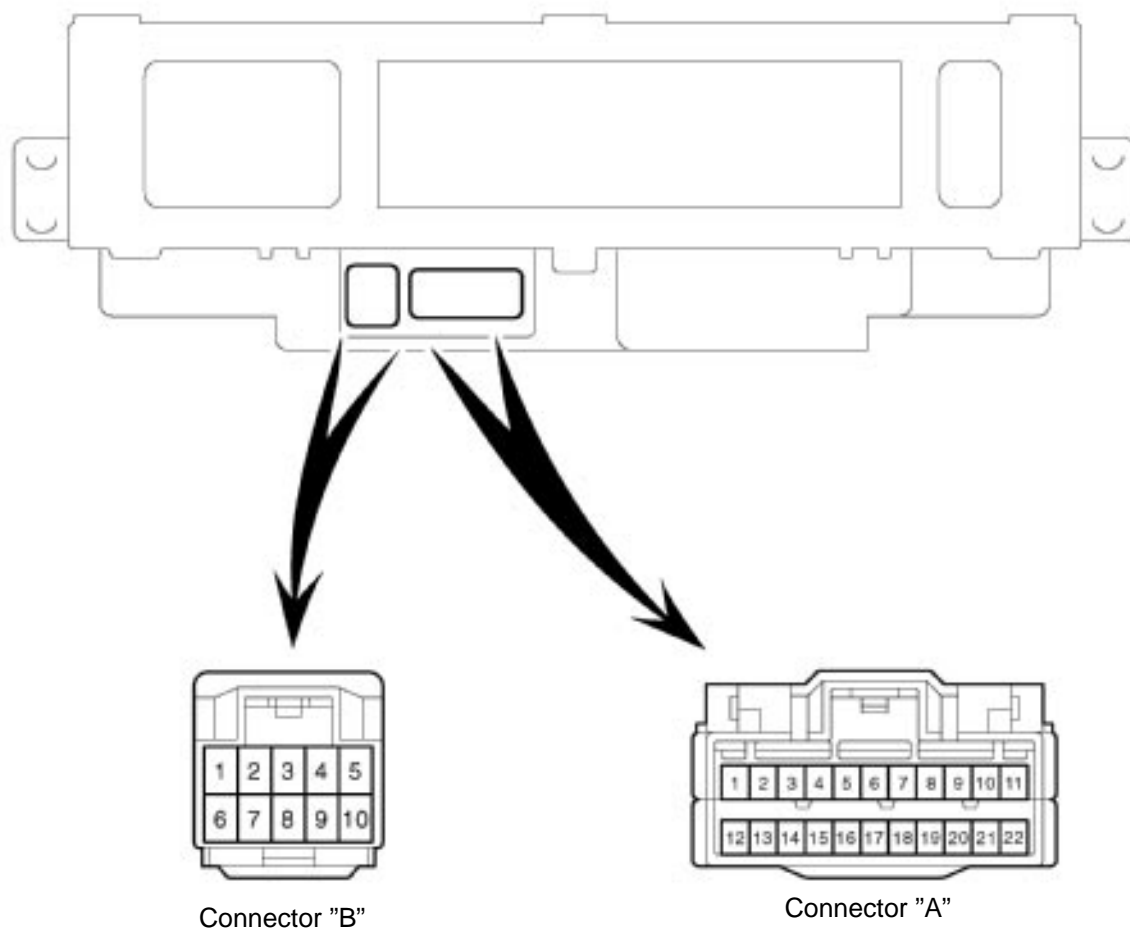

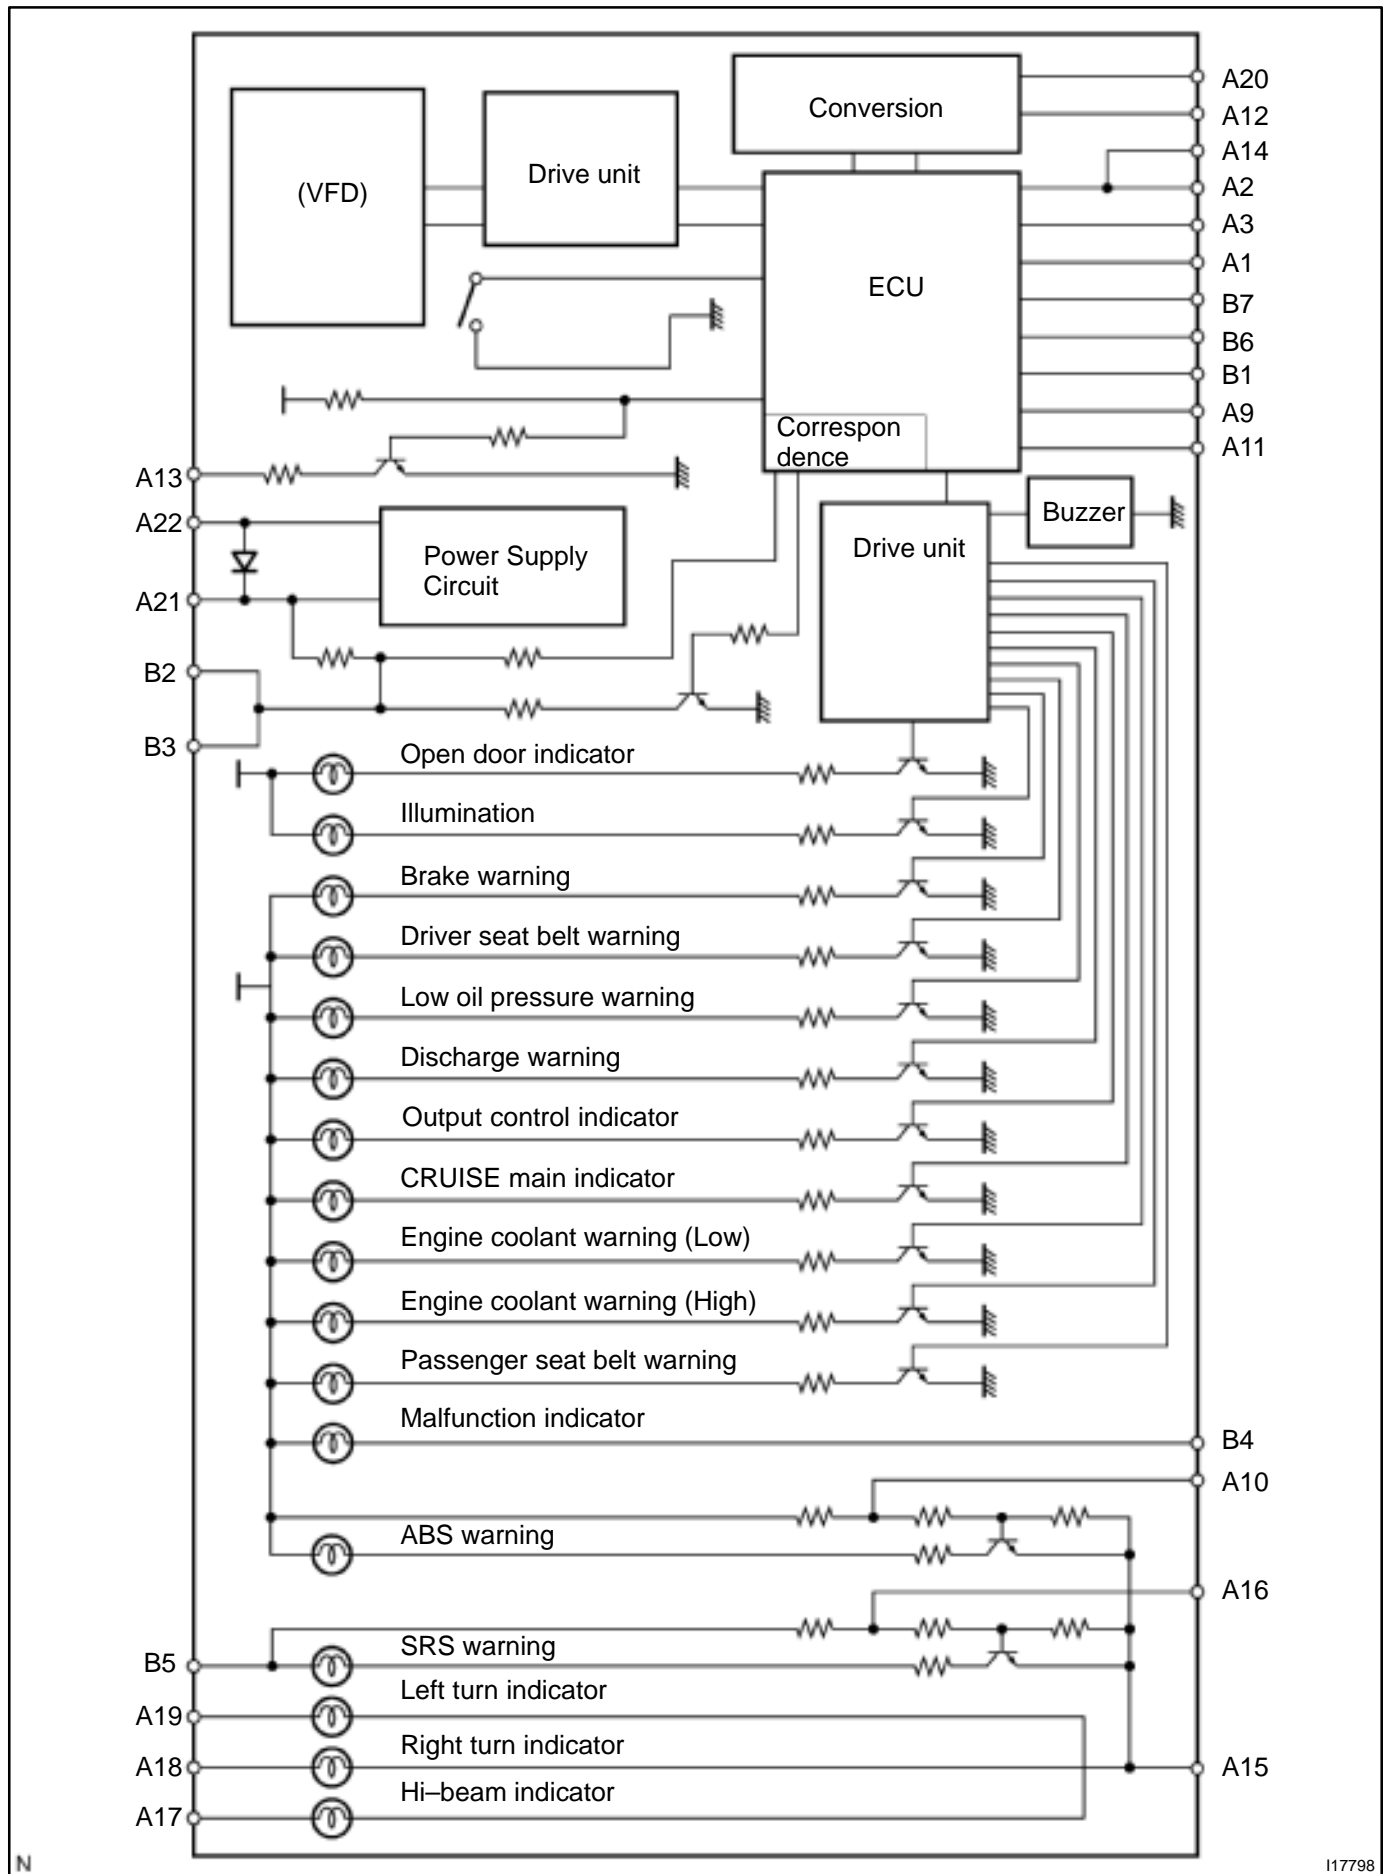


No.	Wiring connector side	
A	1	ODO/TRIP switch (TC)
	2	ODO/TRIP switch (E)
	3	ODO/TRIP switch (ODO)
	9	ABS ECU (SI)
	10	ABS ECU (ABS)
	11	EMPS ECU
	12	Fuel tank temperature (+)
	13	Hybrid vehicle control ECU (4P)
	14	Ground
	15	Ground
	16	Center airbag sensor assembly
	17	Headlight dimmer switch
	18	Turn signal switch (Right)
	19	Turn signal switch (Left)
B	20	Fuel tank temperature (–)
	21	DOME Fuse
	22	GAUGE Fuse
	1	Back-up light relay
	2	Body ECU
	3	Body ECU
	4	Engine ECM
	5	ACC Fuse
	6	Light control rheostat (TC)
	7	Light control rheostat (TR)

INSPECTION

1. INSPECT COMBINATION METER CIRCUIT

Disconnect connector "A" and "B" from the combination meter and inspect the connectors on the wire harness side as shown in the table.

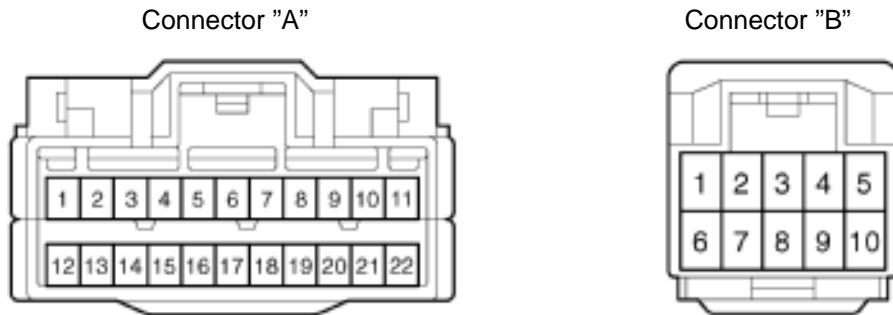

N

I17803

Tester connection	Condition	Specified condition
A1 – Ground (ILL – Body ground)	Ignition switch ON and tail cancel switch ON or OFF	Below 1V or 4.5 – 5.5 V
A2 – Ground (E – Body ground)	Constant	Continuity
A3 – Ground (OPO – Body ground)	Ignition switch ON and trip reset switch ON or OFF	Below 1V or 4.5 – 5.5 V
A9 – Ground (SI – Body ground)	Ignition switch ON and slowly turn drive wheel	Below 1V or 10 – 14 V
A10 – Ground (LP – Body ground)	Ignition switch ON and ABS indicator ON or OFF	Below 1V or 10 – 14 V
A11 – Ground (L – Body ground)	Ignition switch ON	Pulse generation
A13 – Ground (+S – Body ground)	Ignition switch ON and slowly turn drive wheel	Below 1V or 10 – 14 V
		Below 1V or 4.5 – 5.5 V
A14 – Ground (ES – Body ground)	Constant	Continuity
A15 – Ground (EP – Body ground)	Constant	Continuity
A16 – Ground (SW – Body ground)	Ignition switch ON and air bag indicator light ON or OFF	Below 1V or 10 – 14 V
A17 – Ground (S – Body ground)	Headlight dimmer switch Hi or Low	Below 1V or 10 – 14 V
A18 – Ground (B – Body ground)	Ignition switch ON and turn signal switch right	Below 1V or 10 – 14 V
A19 – Ground (B – Body ground)	Ignition switch ON and turn signal switch left	Below 1V or 10 – 14 V
A21 – Ground (B – Body ground)	Constant	10 – 14 V

A22 – Ground (IG – Body ground)	Ignition switch OFF or ON	Below 1V or 10 – 14 V
B1 – Ground (ROUT – Body ground)	Ignition switch ON and shift lever position is "R" or except "R"	Below 1V or 10 – 14 V
B2 – Ground (MPX+ – Body ground)	Ignition switch ON	Pulse generation
B3 – Ground (MPX – Body ground)	Ignition switch ON	Pulse generation
B5 – Ground (ACC – Body ground)	Ignition switch ACC	10 – 14 V

2. INSPECT SPEEDOMETER ON-VEHICLE


Using a speedometer tester, inspect the speedometer for allowable indication error and check the operation of the odometer.

HINT:

Tire wear and tire over or under inflation will increase the indication error.

If error is excessive, replace the speedometer.

(mph)		(km/h)	
Standard indication	Allowable range	Standard indication	Allowable range
20	18 – 22	20	18 – 22
40	38 – 42	40	38 – 42
60	59 – 63	60	58 – 62
80	79 – 83	80	78 – 82
100	99 – 104	100	97 – 103
120	119 – 125	120	117 – 123
		140	137 – 143
		160	157 – 163

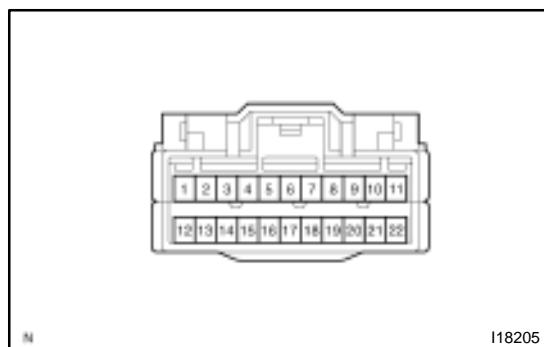


3. INSPECT INPUT SPEED SIGNAL

While driving the vehicle at 10 km/h, measure the voltage between connector terminals A9 and A14 of the combination meter.

Standard: Change between Hi and LO is repeated 7 time for 1 second.

HINT:

Check it the ignition switch ON and the connector connected.

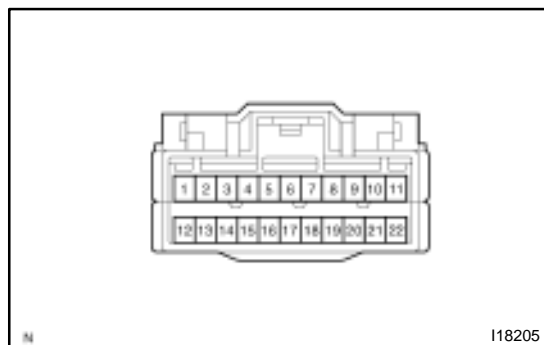

4. INSPECT OUTPUT SPEED SIGNAL

While driving the vehicle at 10 km/h, measure the voltage between connector terminal A13 and A14 of the combination meter.

Standard: Change between Hi and LO is repeated 7 time for 1 second.

HINT:

Check it the ignition switch ON and the connector connected.

Fuel Sender Gauge Connector



N

I17865

5. INSPECT FUEL SENDER GAUGE VOLTAGE

Measure the voltage between terminals 1 and 6 for each fuel level.

HINT:

The fuel sender gauge cannot be removed.

As the resistance value changes according to the remaining fuel amount, refer to the above standard value.

Fuel level	Resistance (Ω)
Full	Approx. 430
Half	Approx. 1000 – 2000
Empty	Approx. 5000

If resistance value is not as specified, replace the fuel tank.

If resistance value is as specified, replace the combination meter.

Fuel Sender Gauge Connector



N


I17865

6. INSPECT TEMPERATURE SENDER RESISTANCE

Measure the resistance between terminal 4 and 8

If the resistance value is not in the following area, replace fuel tank.

1.5 – 100 (Ω) at 0 – 30°C

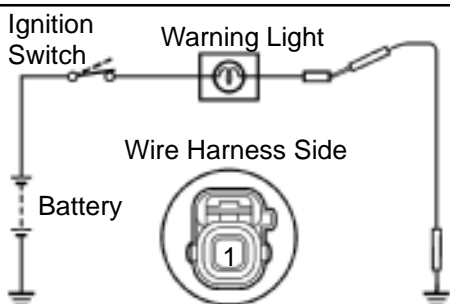

I01277

7. INSPECT LOW OIL PRESSURE WARNING LIGHT

- Disconnect the connector from the warning switch and ground terminal of the wire harness side connector.
- Turn the ignition switch ON, check that the warning light lights up.

If the warning light does not light up, test the bulb or inspect wire harness.


8. INSPECT LOW OIL PRESSURE SWITCH CONTINUITY

- Check that continuity exists between terminal and ground with the engine stopped.
- Check that no continuity exists between terminal and ground with the engine running.


HINT:

Oil pressure should be over 24.5 kPa (0.25 kgf/cm², 3.55 psi)

If operation is not as specified, replace the switch.

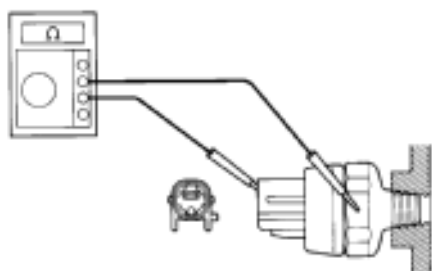


I01278

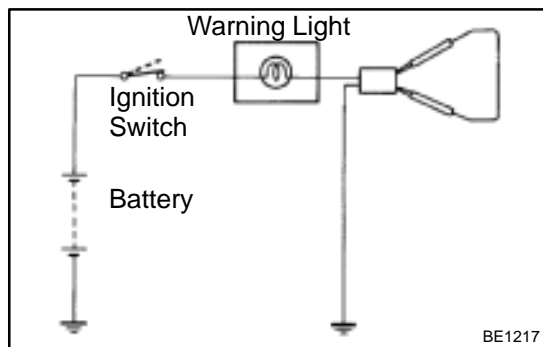


9. INSPECT BRAKE WARNING SYSTEM LIGHT

- Disconnect the connector from the brake fluid warning switch.
- Connect terminals of the wire harness side of the level warning switch connector.
- Start the engine, check that the warning light lights up. If the warning light does not light up, test the bulb or wire harness.

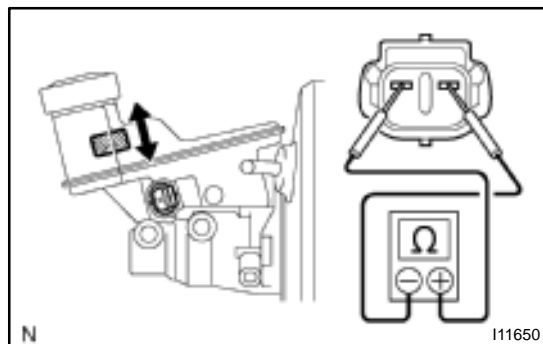


10. INSPECT BRAKE FLUID LEVEL WARNING SWITCH CONTINUITY

- Remove the reservoir tank cap and strainer.
 - Disconnect the connector.
 - Check that no continuity exists between terminals with the switch OFF (float up).
 - Use syphon, etc. to take fluid out of the reservoir tank.
 - Check that continuity exists between terminals with the switch ON (float down).
 - Pour the fluid back in the reservoir tank.
- If operation is not as specified, replace the switch.

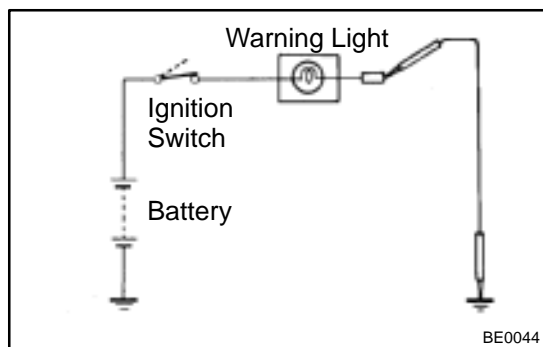


11. INSPECT PARKING BRAKE WARNING LIGHT

- Disconnect the connector from the parking brake switch.
- Ground terminal of the wire harness side connector.
- Start the engine, check that the warning light lights up. If the warning light does not light up, test the bulb or inspect wire harness.

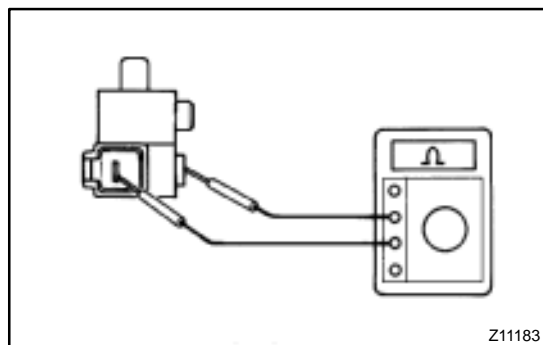


12. INSPECT PARKING BRAKE SWITCH CONTINUITY

- Check that continuity exists between terminal and switch body with the switch ON (switch pin released).
 - Check that no continuity exists between terminal and switch body with the switch OFF (switch pin pushed in).
- If operation is not as specified, replace the switch or inspect ground point.

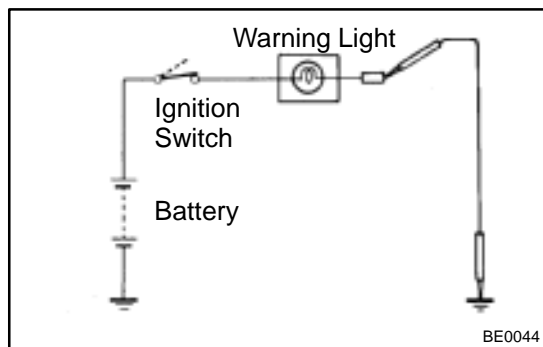**13. INSPECT OPEN DOOR WARNING LIGHT**

Disconnect the connector from the door courtesy switch, and ground terminal 1 of the wire harness side connector and check that the warning light lights up.

If the warning light does not light up, inspect the bulb or wire harness.

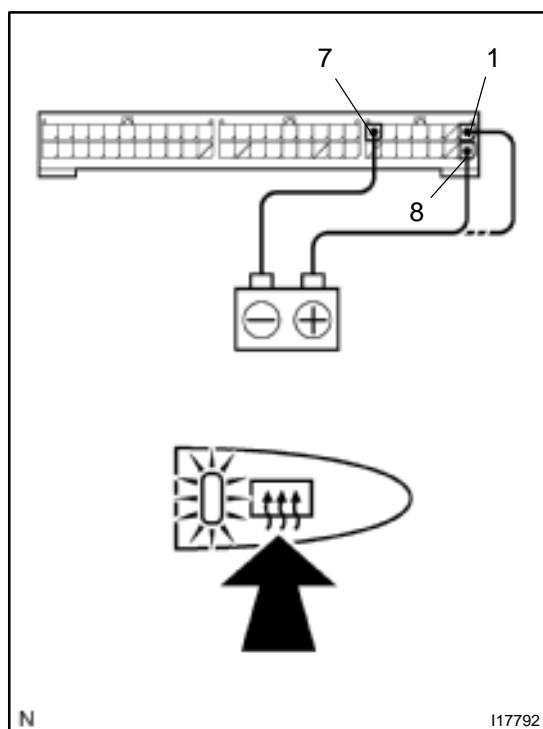


INSPECTION

1. INSPECT DEFOGGER TIMER OPERATION

- Connect the positive (+) lead from the battery to terminal 1, 8 and negative (-) lead to terminal 7.
- Connect the positive (+) lead from the battery to terminal 5 through a 3.4 W test bulb.
- Turn the defogger switch ON and check that the indicator light and test bulb light up for 12 for 18 minutes, then the indicator light and test bulb lights go out.

If operation is not as specified, inspect the A/C amplifier.

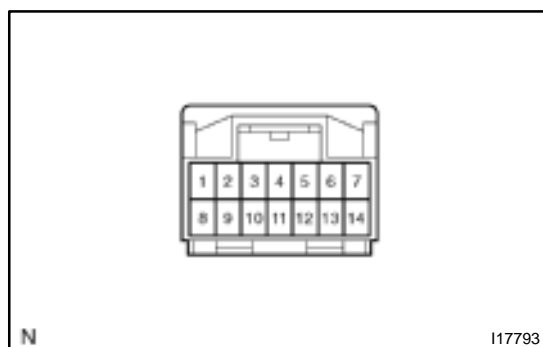


2. INSPECT DEFOGGER SWITCH CIRCUIT

Connector disconnected:

Disconnect the connector from the switch and inspect the connector on wire harness side, as shown in the chart.

Tester connection	Condition	Specified condition
1 – Ground	Ignition switch LOCK or ACC	No voltage
1 – Ground	Ignition switch ON	Battery positive voltage
7 – Ground	Constant	Continuity
8 – Ground	Constant	Battery positive voltage




If the circuit is not as specified, replace the switch.

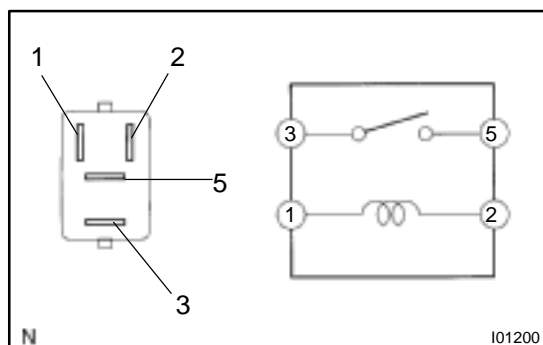

3. INSPECT DEFOGGER RELAY CONTINUITY

Condition	Tester connection	Specified condition
Constant	1 – 2	Continuity
Apply B+ between terminals 1 and 2.	3 – 5	Continuity

If continuity is not as specified, replace the relay.

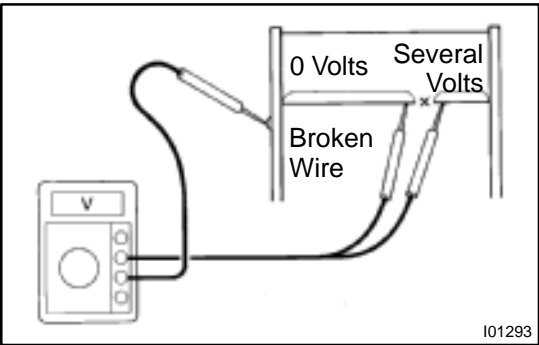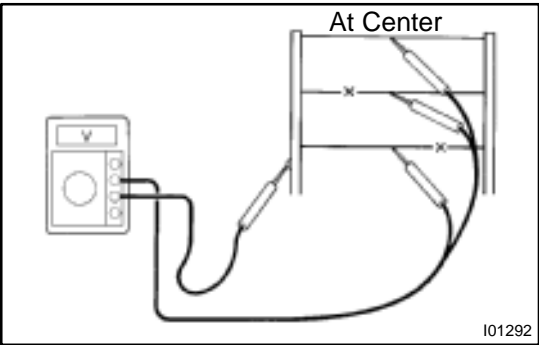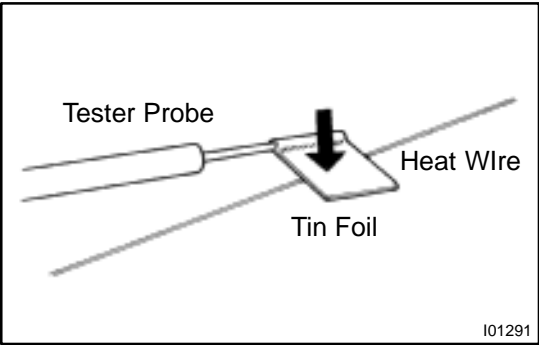

4. INSPECT DEFOGGER WIRE

NOTICE:

- When cleaning the glass, use a soft, dry cloth, and wipe the glass in the direction of the wire. Take care not to damage the wires.
- Do not use detergents or glass cleaners with abrasive ingredients.
- When measuring voltage, wind a piece of tin foil around the top of the negative probe and press the foil against the wire with your finger, as shown.

- (a) Turn the ignition switch ON.
- (b) Turn the defogger switch ON.
- (c) Inspect the voltage at the center of each heat wire, as shown.

Voltage	Criteria
Approx. 5V	Okay (No break in wire)
Approx. 10V or 0V	Broken wire

HINT:

If there is approximately 10 V, the wire is broken between the center of the wire and the positive (+) end. If there is no voltage, the wire is broken between the center of the wire and ground.

- (d) Place the voltmeter positive (+) lead against the defogger positive (+) terminal.
- (e) Place the voltmeter negative (–) lead with the foil strip against the heat wire at the positive (+) terminal end and slide it toward the negative (–) terminal end.
- (f) The point where the voltmeter deflects from zero to several V is the place where the heat wire is broken.



HINT:

If the heat wire is not broken, the voltmeter indicates 0 V at the positive (+) end of the heat wire but gradually increases to about 12 V as the meter probe is moved to the other end.

POWER WINDOW CONTROL SYSTEM

TROUBLESHOOTING

Power Window Master Switch

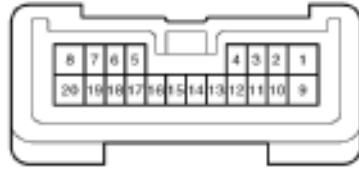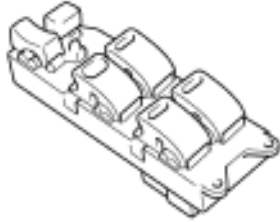

I17845


1 One touch power window does not move up and down.

After turning the ignition switch ON and power window master switch UP or DOWN on the drivers side, check that the master switch AUTO light blinks.


- Error is classified into the following 3 types according to the way of blinking.




① Limit switch error

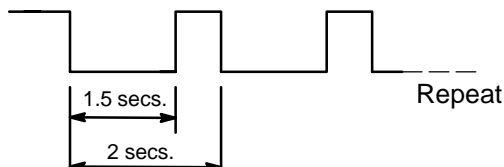

② Pulse sensor error

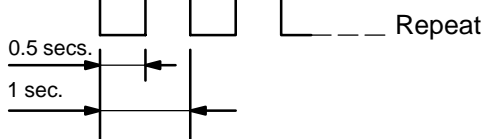

③ Limit switch/Pulse sensor synchronize error

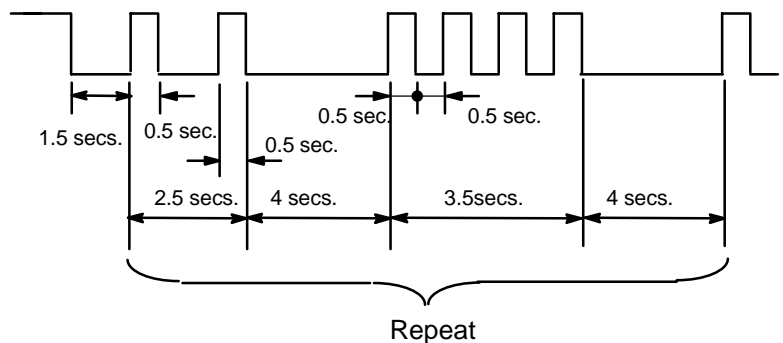

- < Reference >
- When the ignition switch is turned OFF after the AUTO light starts blinking, the blinking will stop 43 sec. later.
 - When the ignition switch is turned ON after that, the AUTO light will start blinking again.

Blinks in the ① way

No


Remove the master switch.
(Connector connection condition)


Master switch defective


Blinks in the ② or ③ way


CONTINUED ON NEXT PAGE

CONTINUED ON NEXT PAGE

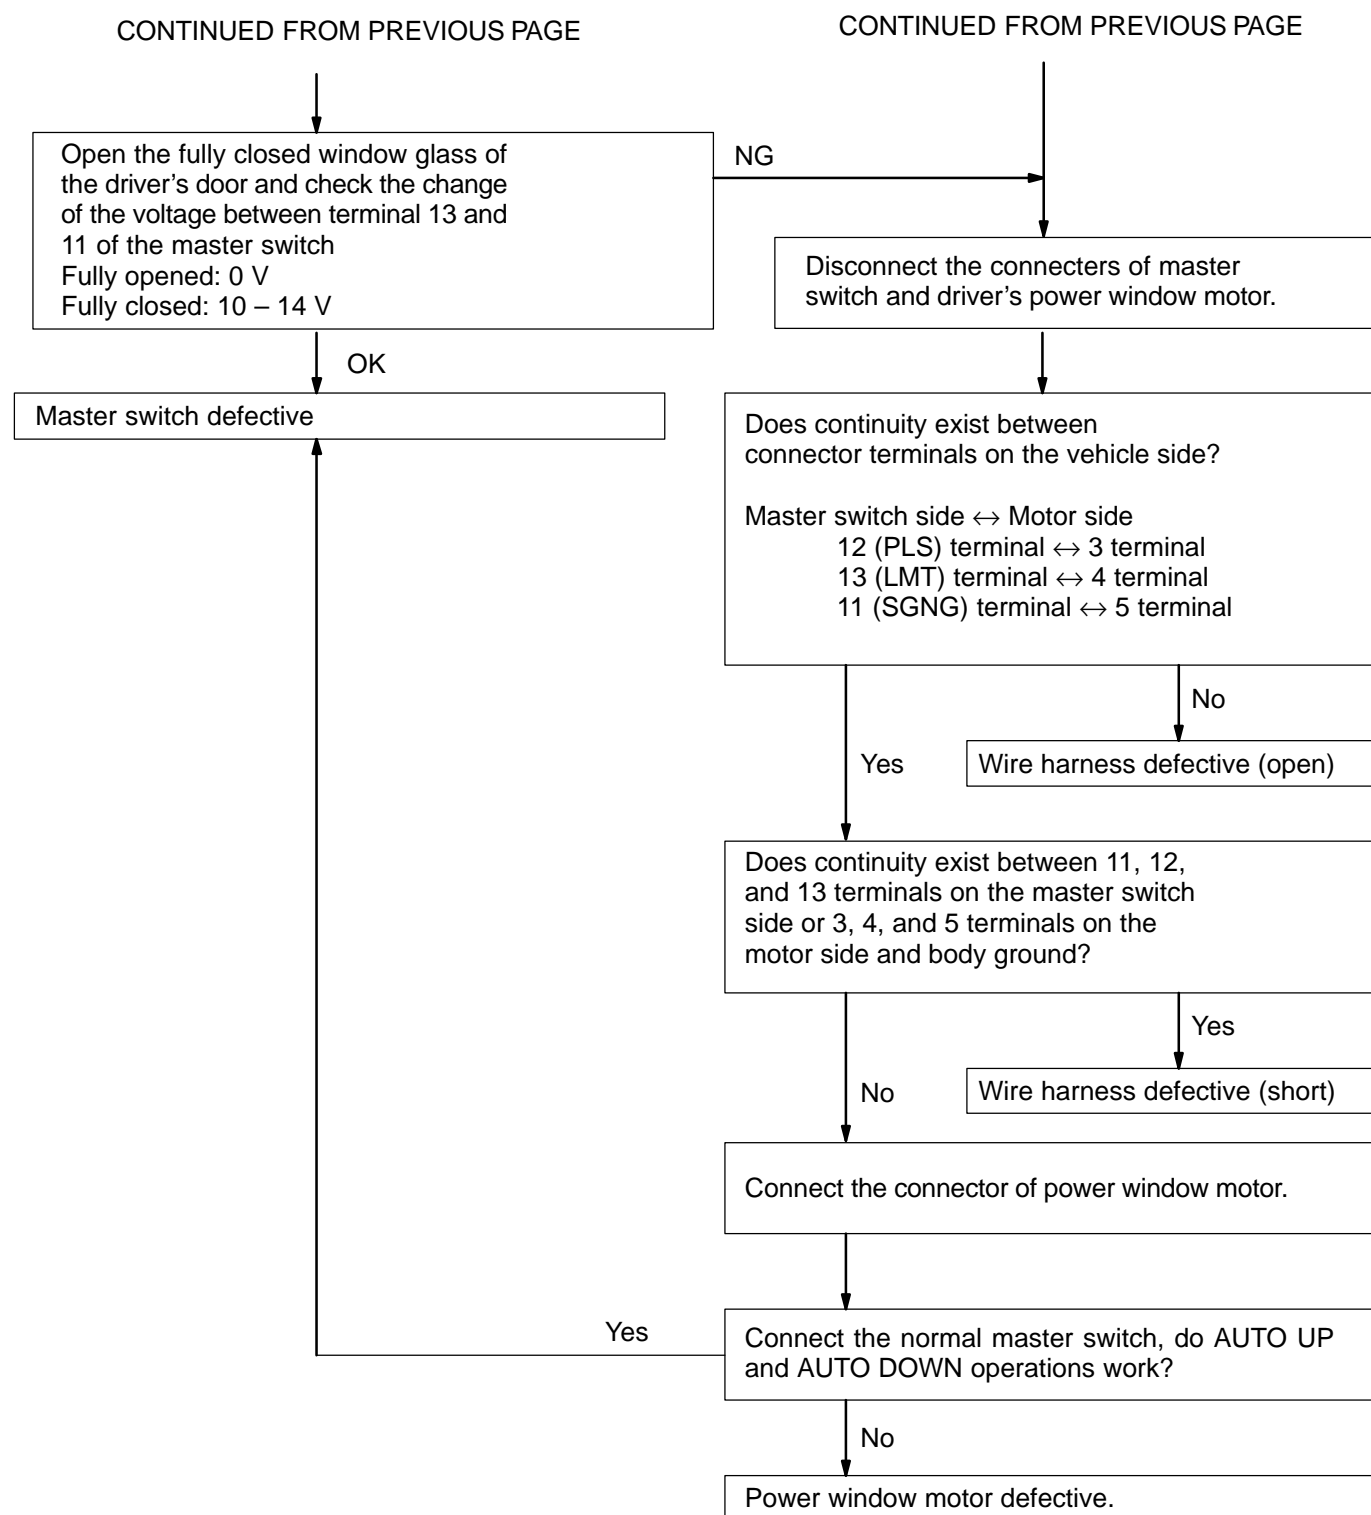

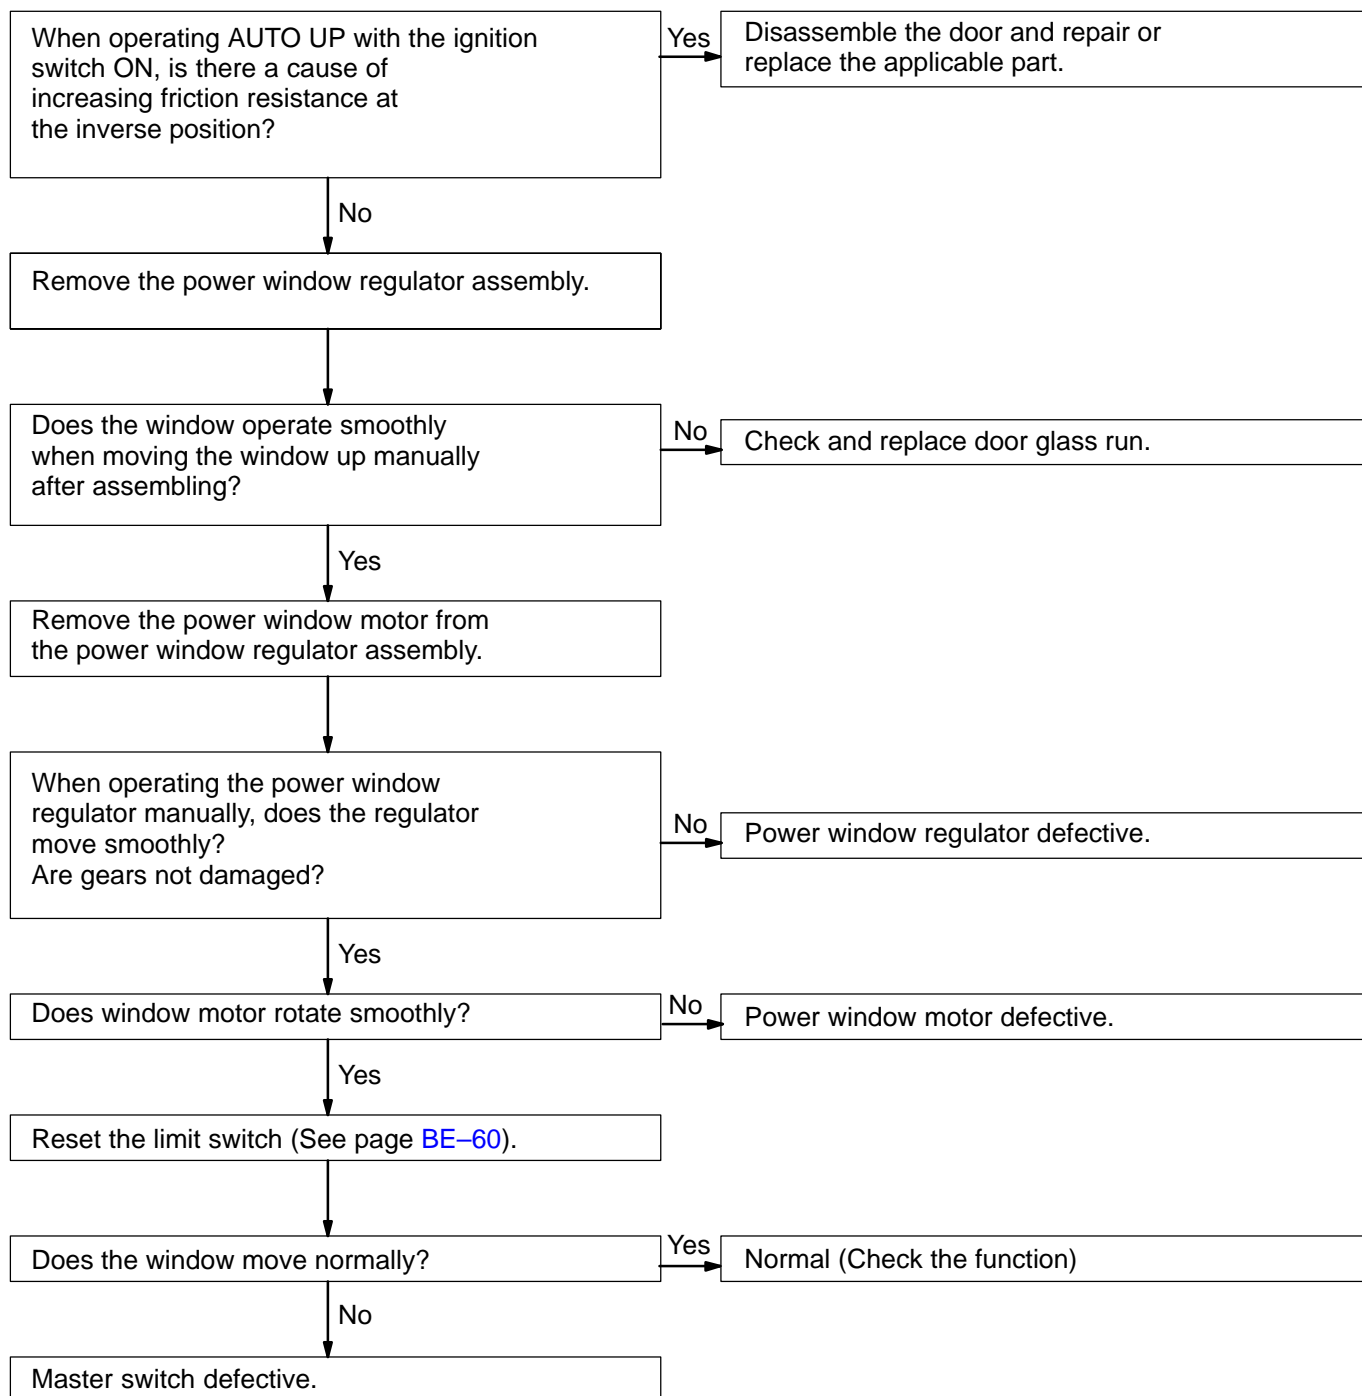2 During AUTO UP operation, the power window moves down.

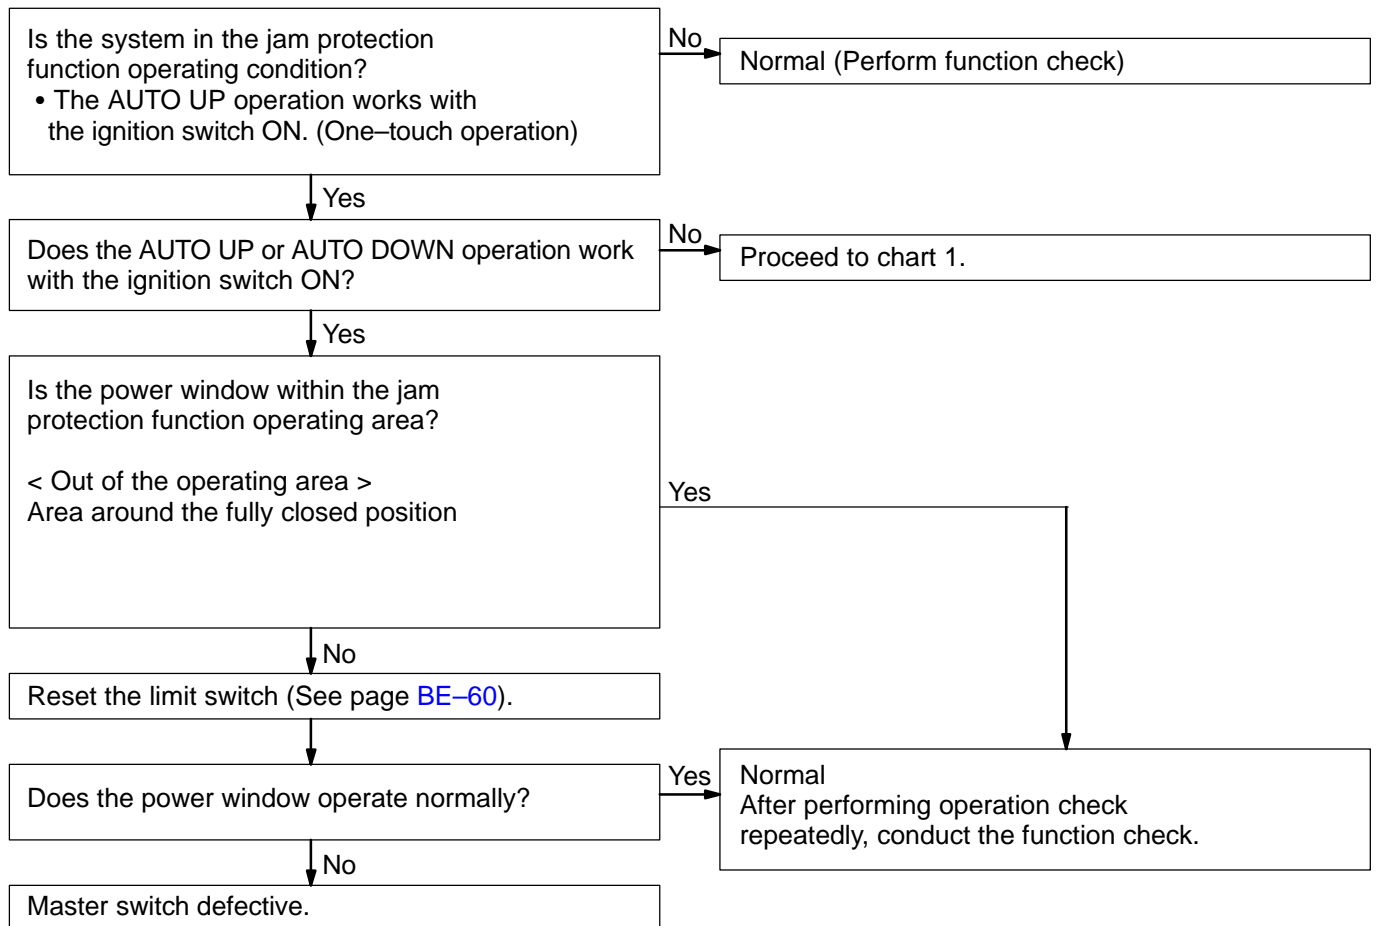
3 The DOWN function does not work though some other objects are caught in the power window glass.

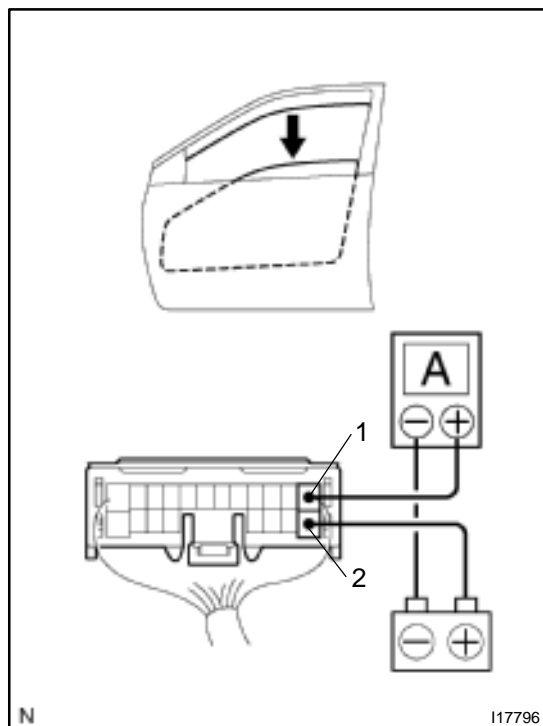


INSPECTION


1. INSPECT ONE TOUCH POWER WINDOW SYSTEM/ CURRENT OF CIRCUIT (Using an ammeter)

- Disconnect the connector from the master switch.
- Connect the positive (+) lead from the ammeter to terminal 1 on the wire harness side connector and the negative (-) lead to negative (-) terminal of the battery.
- Connect the positive (+) lead from the battery to terminal 2 on the wire harness side connector.
- As the window goes down, check that the current flow is approximately 7 A.
- Check that the current increases up to approximately 14.5 A or more when the window stops going down.

HINT:

The PTC opens some 4 – 90 seconds after the window stops going down, so that check must be made before the PTC operates.

If the operation is as specified, replace the master switch.

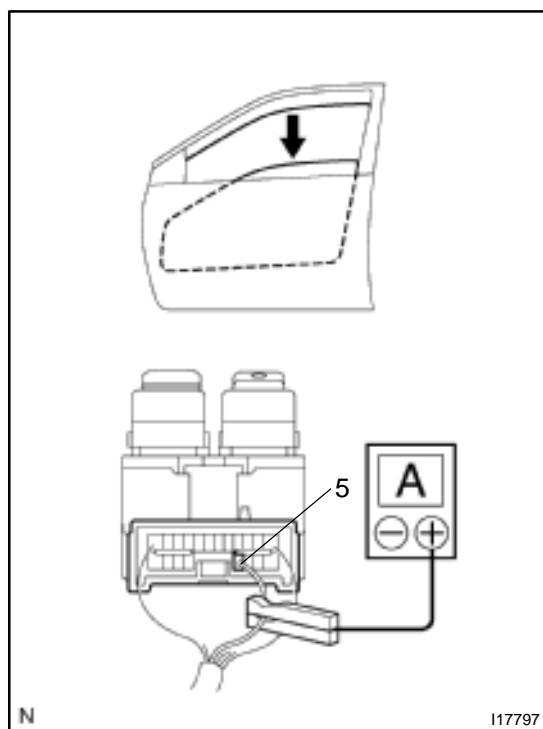


2. INSPECT ONE TOUCH POWER WINDOW SYSTEM/ CURRENT OF CIRCUIT (Using an ammeter with a current-measuring probe)

- Remove the driver door ECU with connectors connected.
- Attach a current-measuring probe to terminal 5 of the wire harness.
- Turn the ignition switch ON and set the power window switch in the down position.
- As the window goes down, check that the current flow is approximately 7 A.
- Check that the current increases up to approximately 14.5 A or more when the window stops going down.

HINT:

The PTC opens some 4 – 90 seconds after the window stops going down, so that check must be made before the PTC operates.

If operation is as specified, replace the driver door ECU.

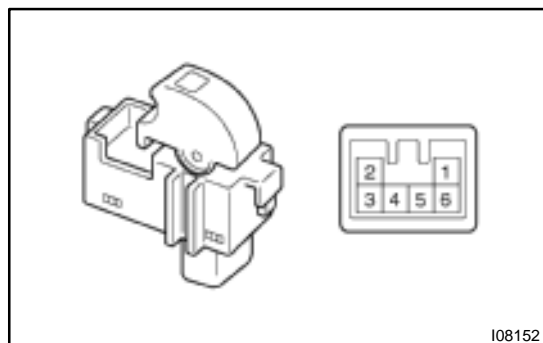


3. INSPECT POWER WINDOW SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
UP	2 – 3, 4 – 5	Continuity
OFF	2 – 3 – 5	No continuity
DOWN	2 – 4, 3 – 5	Continuity

If continuity is not as specified, replace the switch.


4. INSPECT POWER WINDOW SWITCH CIRCUIT (See page DI-726)

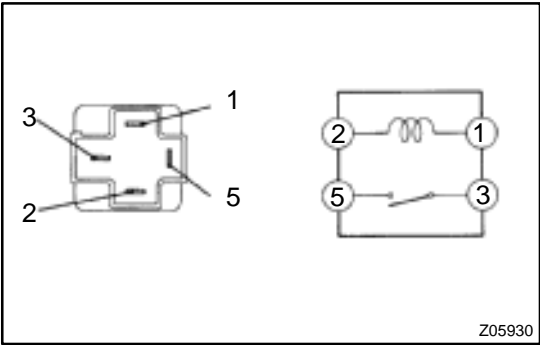

5. INSPECT POWER MAIN RELAY CONTINUITY

Condition	Tester connection	Specified condition
Constant	1 – 2	Continuity
Apply B+ between terminals 1 and 2.	3 – 5	Continuity


If continuity is not as specified, replace the relay.

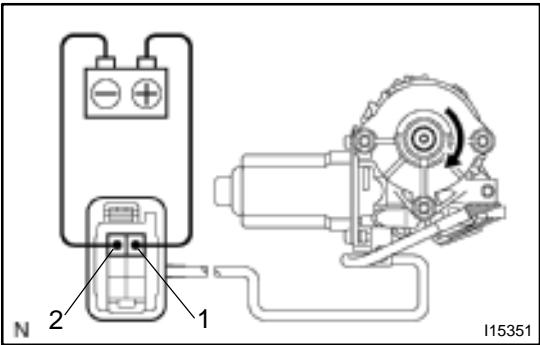

6. Driver's door:

INSPECT POWER WINDOW MOTOR OPERATION

- (a) Connect the positive (+) lead from the battery to terminal 1 and the negative (-) lead to terminal 2, check that the motor turns clockwise.

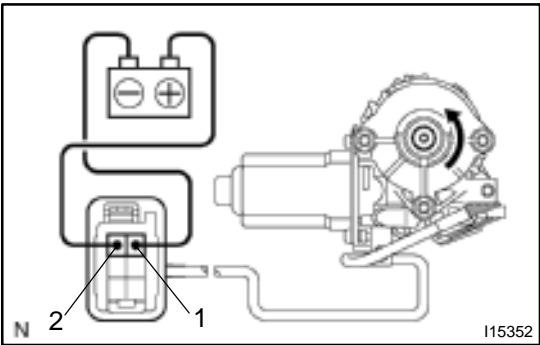


- (b) Reverse the polarity, check that the motor turns counter-clockwise.

If operation is not as specified, replace the motor.

NOTICE:


Since the jam protection may not work properly be sure to conduct procedures described in "HOW TO RESET POWER MOTOR (RESET AND PULSE SWITCH)" after this inspection.

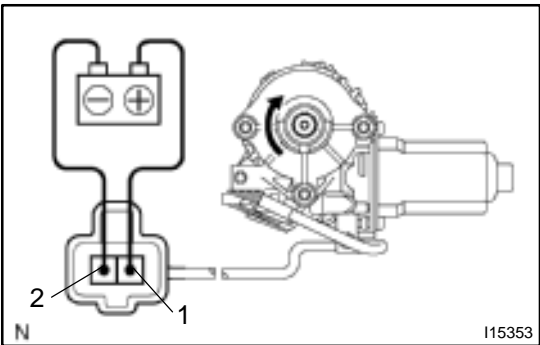

7. Passenger's door and rear right door:


INSPECT POWER WINDOW MOTOR OPERATION

- (a) Connect the positive (+) lead from the battery to terminal 1 and the negative (-) lead to terminal 2, check that the motor turns clockwise.

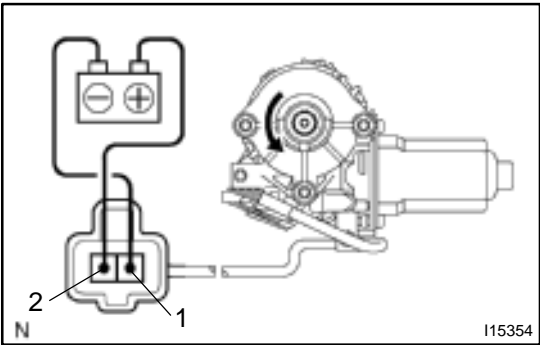


- (b) Reverse the polarity, check that the motor turns counter-clockwise.

If operation is not as specified, replace the motor.

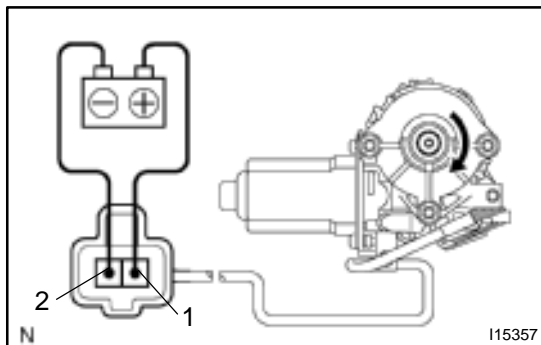
**8. Rear left door:****INSPECT POWER WINDOW MOTOR OPERATION**

- (a) Connect the positive (+) lead from the battery to terminal 1 and the negative (–) lead to terminal 2, check that the motor turns clockwise.

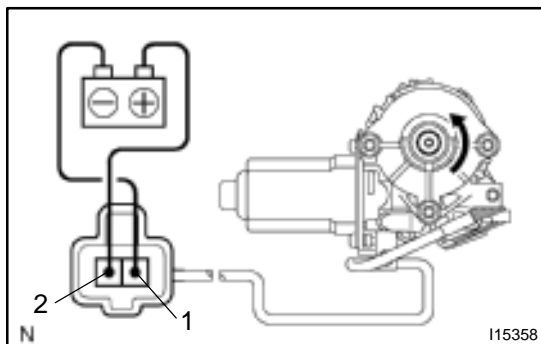



- (b) Reverse the polarity, check that the motor turns counter-clockwise.

If operation is not as specified, replace the motor.

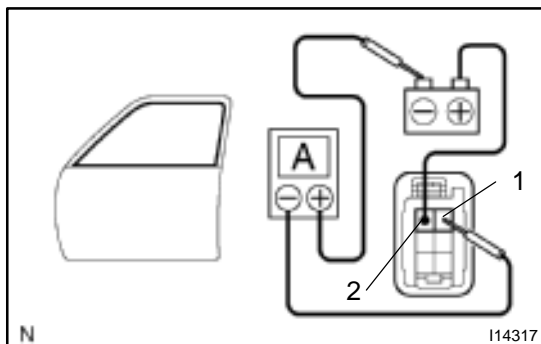
**9. Driver's door:****INSPECT PTC OPERATION**

- (a) Disconnect the connector from the window motor.
 (b) Connect the positive (+) lead from the ammeter to terminal 1 of the wire harness side connector and the negative (–) lead to negative terminal of the battery.
 (c) Connect the positive (+) lead from the battery to terminal 2 of the wire harness side connector, and raise the window to the fully closed position.
 (d) Continue to apply voltage, check that the current changes from approximately 14 A to less than 1 A within 4 to 90 seconds.
 (e) Disconnect the leads from terminals.
 (f) Approximately 90 seconds later, connect the positive (+) lead from the battery to terminal 1 and negative (–) lead to terminal 2, check that the window begins to descend.

If operation is not as specified, replace the motor.

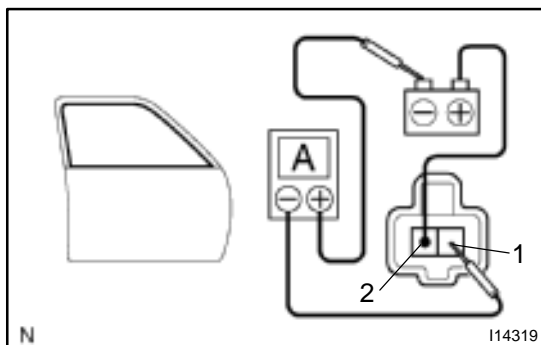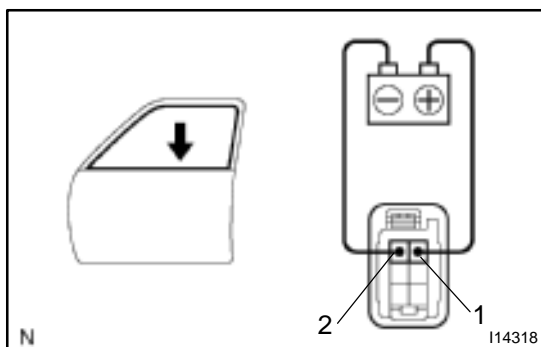**10. Except driver's door:****INSPECT PTC OPERATION**

- (a) Disconnect the connector from the power window switch.
 (b) Connect the positive (+) lead from the ammeter to terminal 1 of the wire harness side connector and the negative (–) lead to negative terminal of the battery.
 (c) Connect the positive (+) lead from the battery to terminal 2 of the wire harness side connector, and raise the window to the fully closed position.

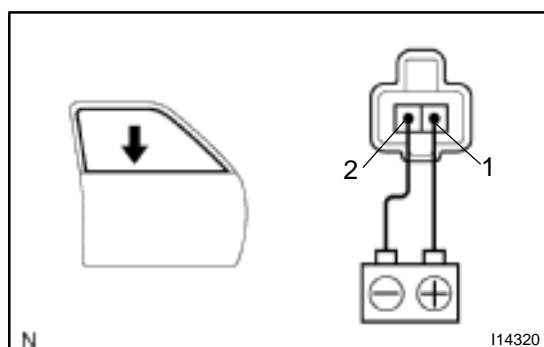

- (d) Continue to apply voltage, check that the current changes from approximately 14 A to less than 1 A within 4 to 90 seconds.
- (e) Disconnect the leads from terminals.
- (f) Approximately 90 seconds later, connect the positive (+) lead from the battery to terminal 1 and the negative (-) lead to terminal 2, check that the window begins to descend.

If operation is not as specified, replace the motor.

11. INSPECT JAM PROTECTION FUNCTION

NOTICE:

Never, ever be caught any part of your body when checking.

HINT:


In case of performing resetting of the limit switch, do checking after repeating up and down of the glass with automatic operation.

- (a) Confirmation of AUTO up operation:
Confirm that the window will be fully close with AUTO up operation.
- (b) Checking of the operation of the jam protection function:
 - (1) Move up the window with AUTO up operation and check that the window will go down when it touches the handle of the hammer studded.
 - (2) Confirm that the window will then stop going down about 200 mm.

HINT:

In case of removing the glass, glass guide, regulator and etc. be sure to perform checking of the jam protection function.

If the jam protection is not function properly, adjust power window motor reset switch and pulse switch.

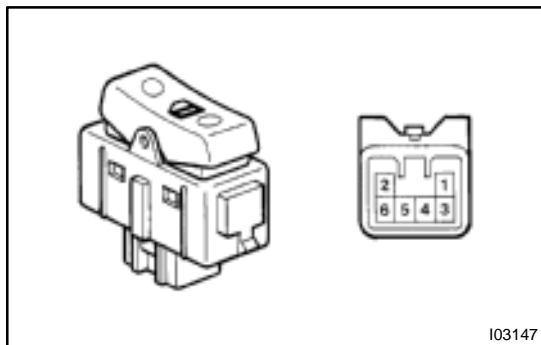


INSPECTION

1. INSPECT DOOR LOCK CONTROL SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
LOCK	3 – 6	Continuity
OFF	–	No continuity
UNLOCK	3 – 5	Continuity


If continuity is not as specified, replace the switch.

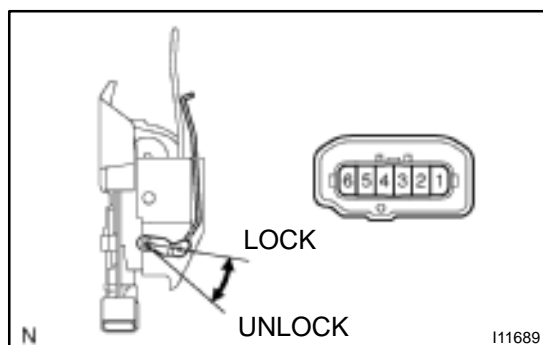

2. Driver's door: INSPECT DOOR KEY LOCK AND UNLOCK SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
LOCK	3 – 5	Continuity
OFF	–	No continuity
UNLOCK	3 – 6	Continuity


If continuity is not as specified, replace the switch.

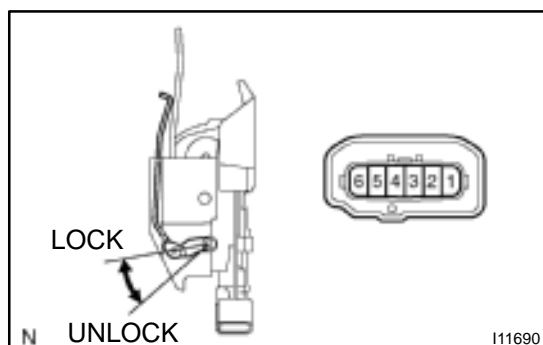

3. Passenger's door: INSPECT DOOR KEY LOCK AND UNLOCK SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
LOCK	2 – 4	Continuity
OFF	–	No continuity
UNLOCK	1 – 4	Continuity


If continuity is not as specified, replace the switch.

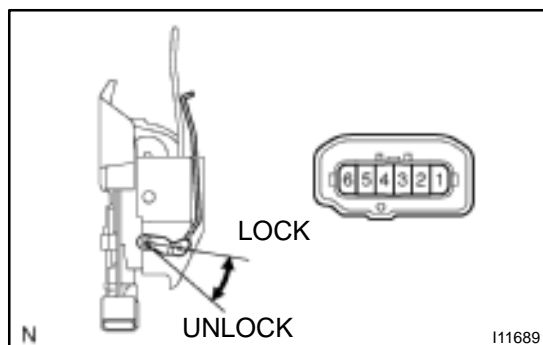

4. Driver's door: INSPECT DOOR UNLOCK DETECTION SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
OFF (Door Lock set to LOCK)	–	No continuity
ON (Door Lock set to UNLOCK)	3 – 4	Continuity


If continuity is not as specified, replace the switch.

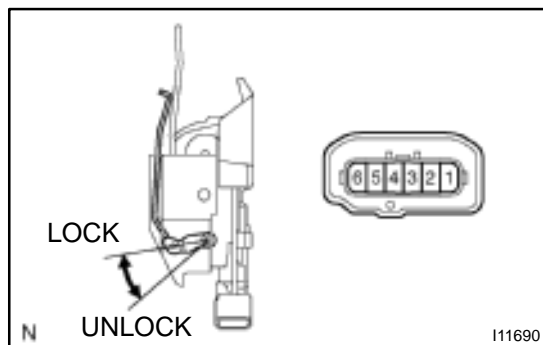

5. Passenger's door: INSPECT DOOR UNLOCK DETECTION SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
OFF (Door Lock set to LOCK)	–	No continuity
ON (Door Lock set to UNLOCK)	3 – 4	Continuity


If continuity is not as specified, replace the switch.

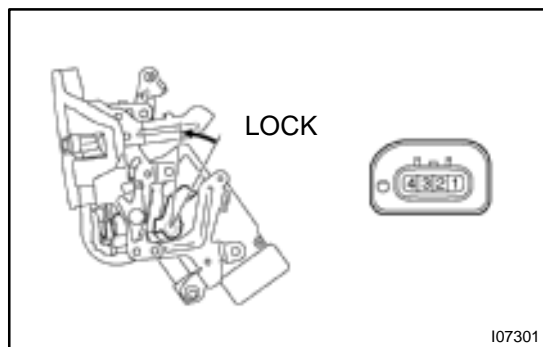

**6. Rear left door:
INSPECT DOOR UNLOCK DETECTION SWITCH CONTINUITY**

Switch position	Tester connection	Specified condition
OFF	–	No continuity
ON	1 – 2	Continuity


If continuity is not as specified, replace the switch.

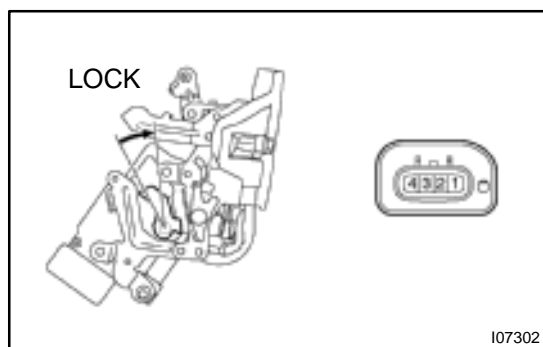

**7. Rear right door:
INSPECT DOOR UNLOCK DETECTION SWITCH CONTINUITY**

Switch position	Tester connection	Specified condition
OFF	–	No continuity
ON	3 – 4	Continuity


If continuity is not as specified, replace the switch.

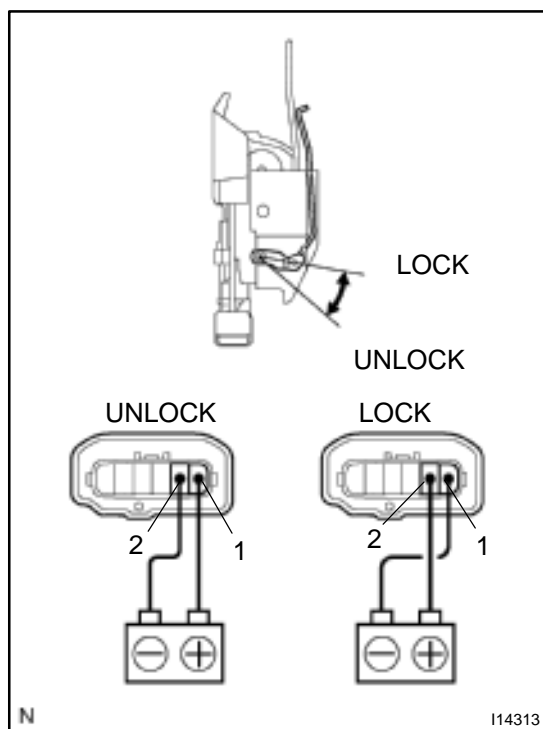

**8. Driver's door:
INSPECT DOOR LOCK MOTOR OPERATION**


- Connect the positive (+) lead from the battery to terminal 1 and the negative (–) lead to terminal 2, and check that the door lock link moves to UNLOCK position.
- Reverse the polarity and check that the door lock link moves to LOCK position.

If operation is not as specified, replace the door lock assembly.

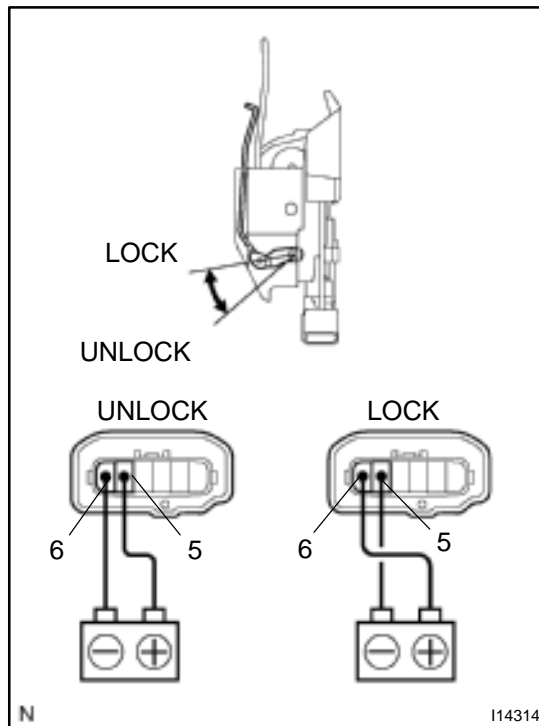**9. Passenger's door:****INSPECT DOOR LOCK MOTOR OPERATION**


- Connect the positive (+) lead from the battery to terminal 5 and the negative (-) lead to terminal 6, and check that the door lock link moves to UNLOCK position.
- Reverse the polarity and check that the door lock link moves to LOCK position.

If operation is not as specified, replace the door lock assembly.

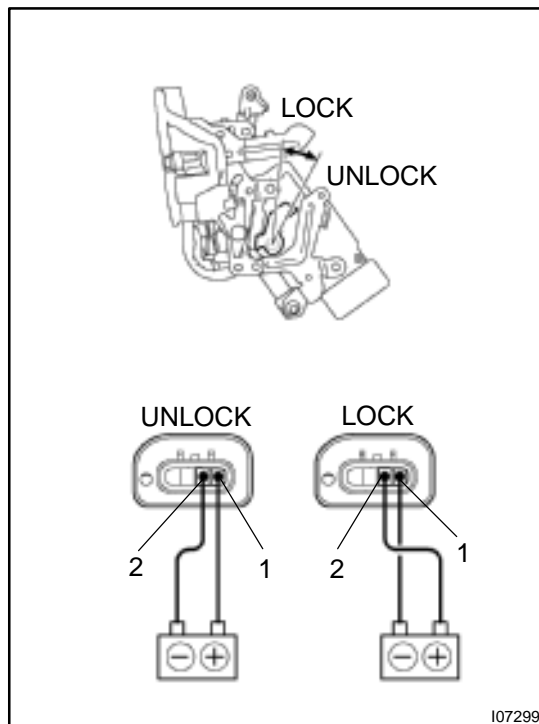**10. Rear left door:****INSPECT DOOR LOCK MOTOR OPERATION**

- Connect the positive (+) lead from the battery to terminal 1 and the negative (-) lead to terminal 2, and check that the door lock link moves to UNLOCK position.
- Reverse the polarity and check that the door lock link moves to LOCK position.

If operation is not as specified, replace the door lock assembly.

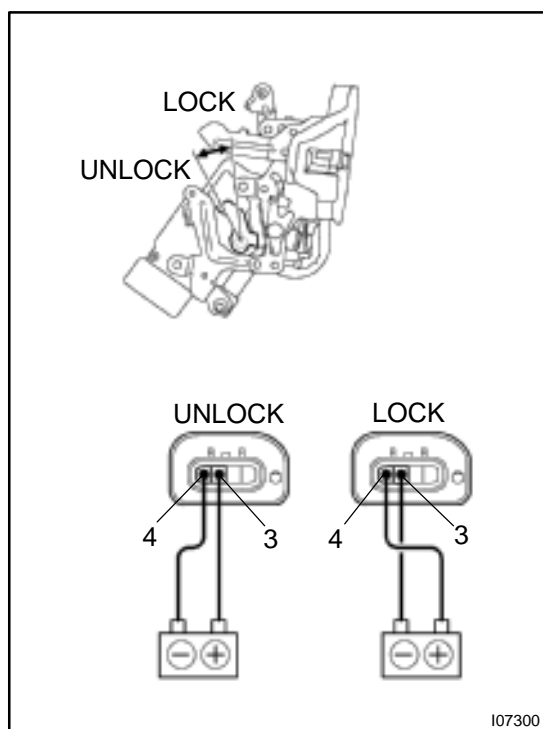**11. Rear right door:****INSPECT DOOR LOCK MOTOR OPERATION**

- (a) Connect the positive (+) lead from the battery to terminal 3 and the negative (-) lead to terminal 4, and check that the door lock link moves to UNLOCK position.
- (b) Reverse the polarity and check that the door lock link moves to LOCK position.

If operation is not as specified, replace the door lock assembly.

PRE-CHECK

1. OUT LINE OF THEFT DETERRENT SYSTEM

When the theft deterrent system detects any theft, it informs people around with flashing lights and sound.

This system is designed to be upgraded by featuring an optional glass break sensor.

All initial setting are performed in active mode. It can be switched to passive mode by specified operation. (See step 3. CHANGING METHOD OF PASSIVE MODE)

HINT:

There are 4 conditions in this system which are disarmed state, arming preparation, armed state and alarm sounding.

- (1) Disarmed state
 - When the alarming function does not operate.
 - When theft deterrent function is not performed.
- (2) Arming preparation
 - Time until transferring to armed state.
 - Theft deterrent function is not performed.
- (3) Armed state

When theft deterrent function is possible.
- (4) Alarm sounding:

In this condition, once theft is detected, it is informed using light and sound to people around the vehicle.

Refer to the table for alarming method or time.


Alarming method	Horn
	Security horn
	Headlight
	Taillight
	Hazard
	Interior light
Alarming time	60 seconds
Alarming output	Continuous 0.4 secs. (ON) 0.4 secs. (OFF)

HINT:

Alarming output for hazard is same as the one for the hazard on the vehicle.

In the arming condition when either of doors is unlocked with key not in the key cylinder, force lock signal is output.

2. ACTIVE ARMING MODE

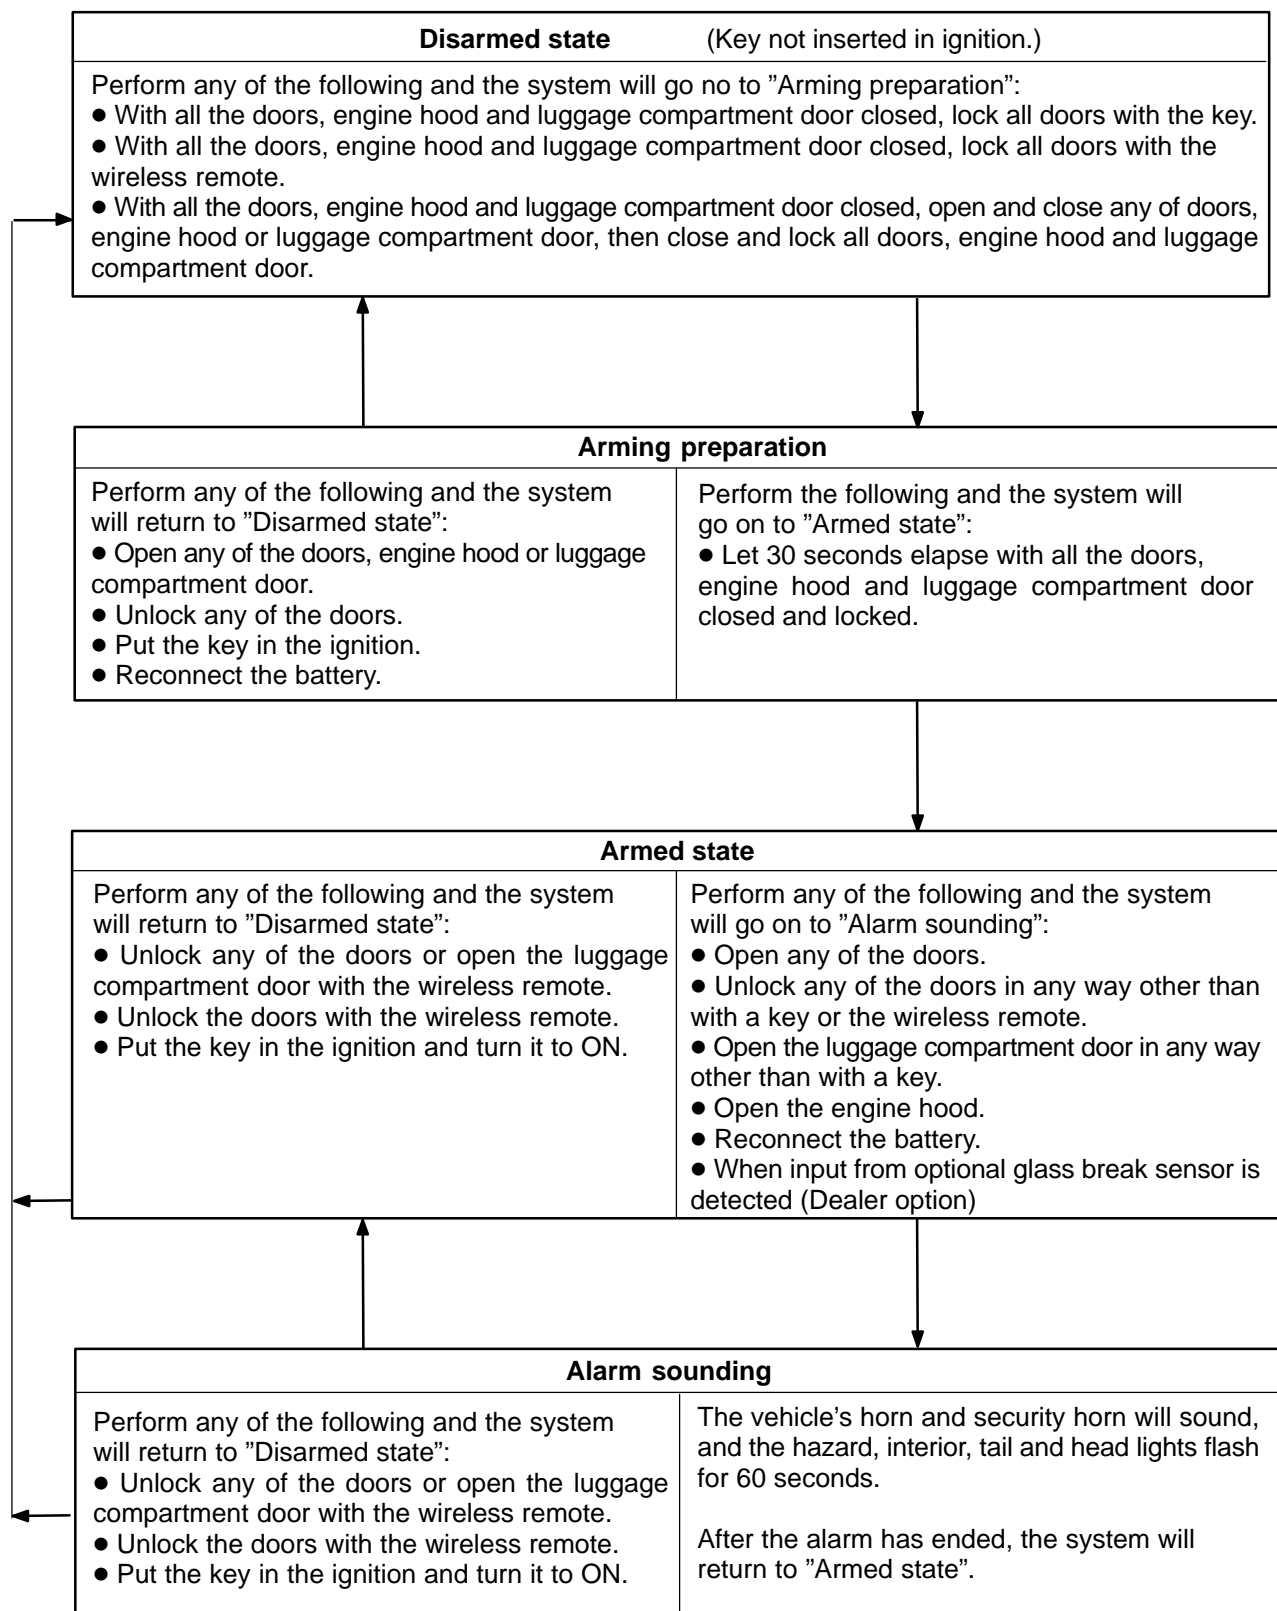

Indicator light output:

Condition	Indicator light
Disarmed state	OFF
Arming preparation	ON
Armed state	OFF
Alarm sounding	ON

HINT:

Even in disarmed state, the indicator light flash. (Due to the signal output from immobilizer system). The indicator always flashes receiving the signal from the immobilizer system at any time in the armed state.

Flashing frequency:

0.2 seconds (ON)

1.8 seconds (OFF)


Answer back:


The hazard lights flash as answer back under the following conditions.

- (1) When the system is set.
When arming preparation is set from disarmed state using the wireless door lock, the hazard lights flash once.
- (2) When the system is released.
When disarmed state is set from either arming preparation, armed state or alarm sounding using the wireless door lock, the hazard lights flash twice.

3. PASSIVE ARMING MODE

- This mode can be switched according to the specified operation.
- All initially set modes (when shipped from factory) are active mode. (No passive mode)

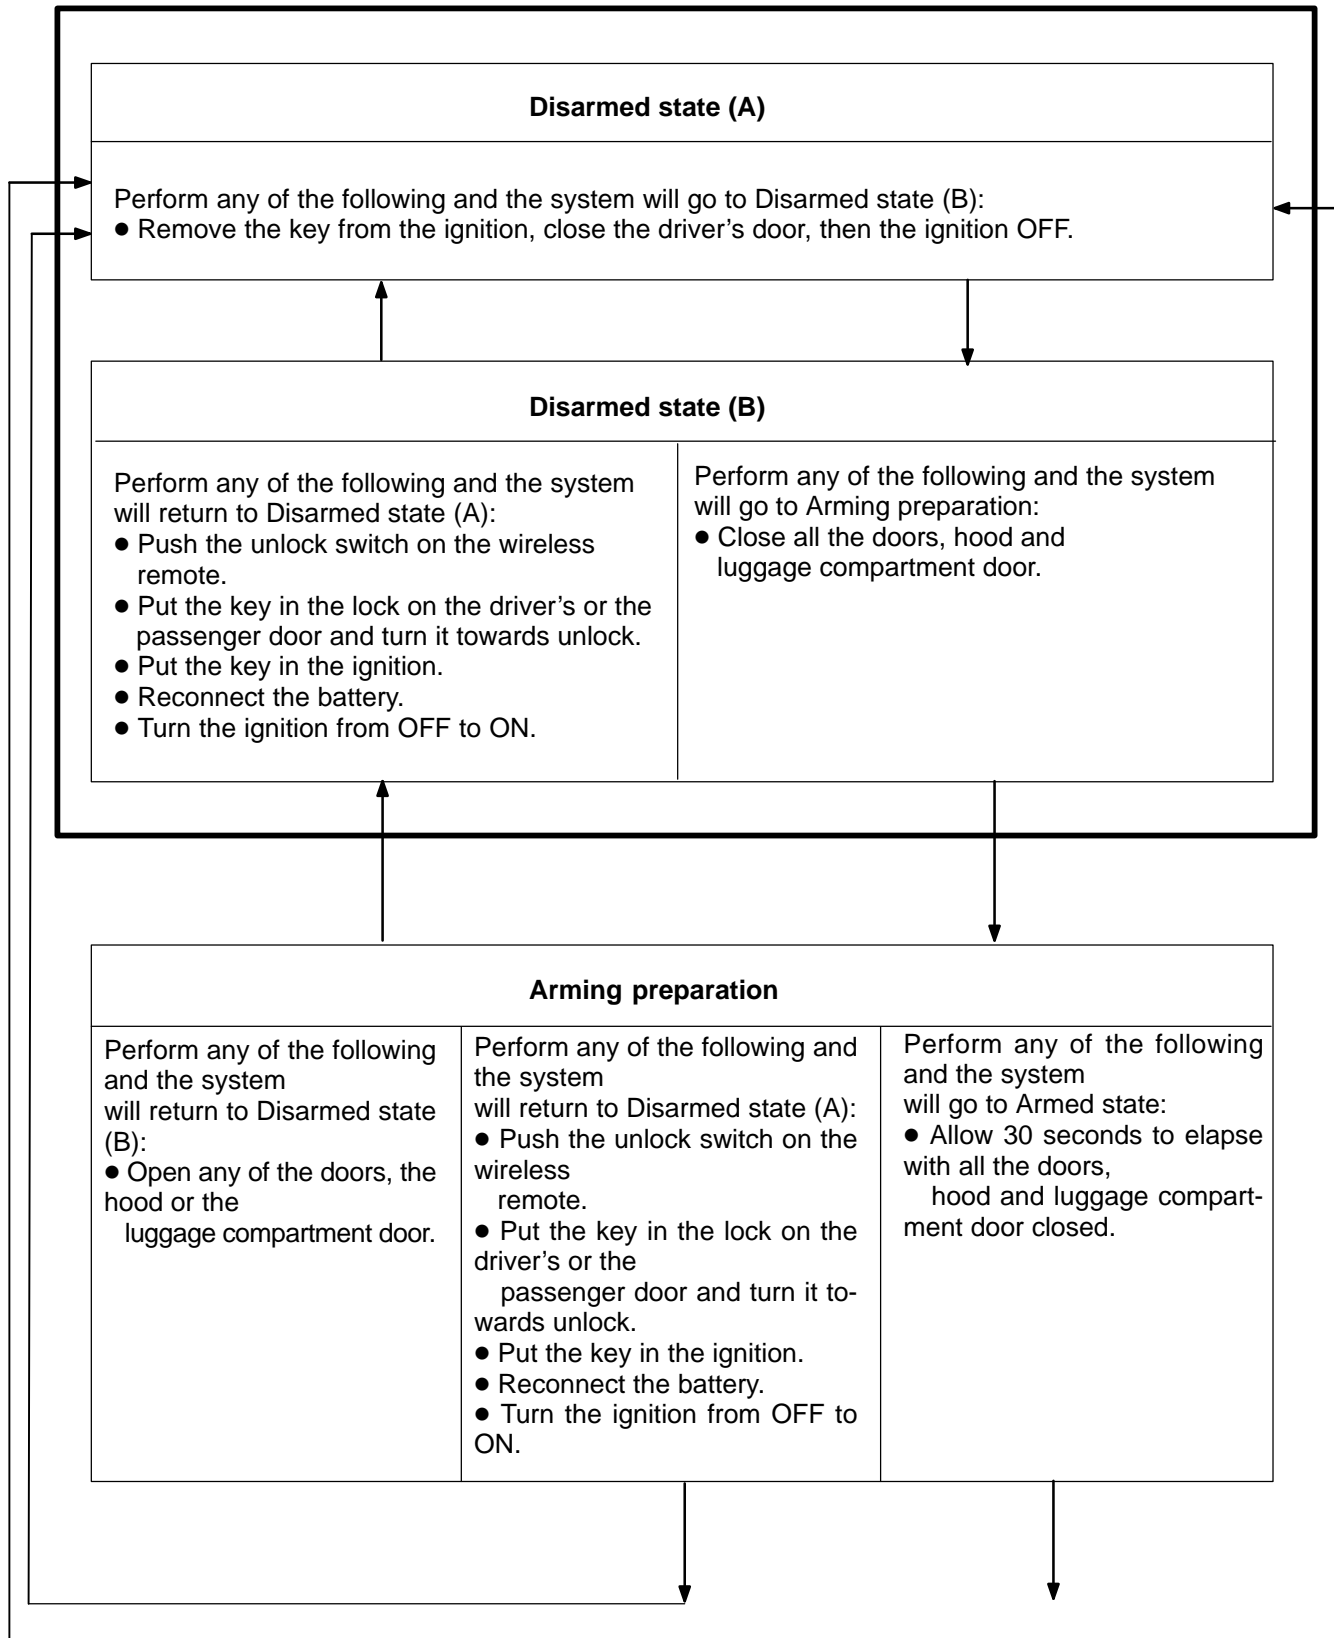

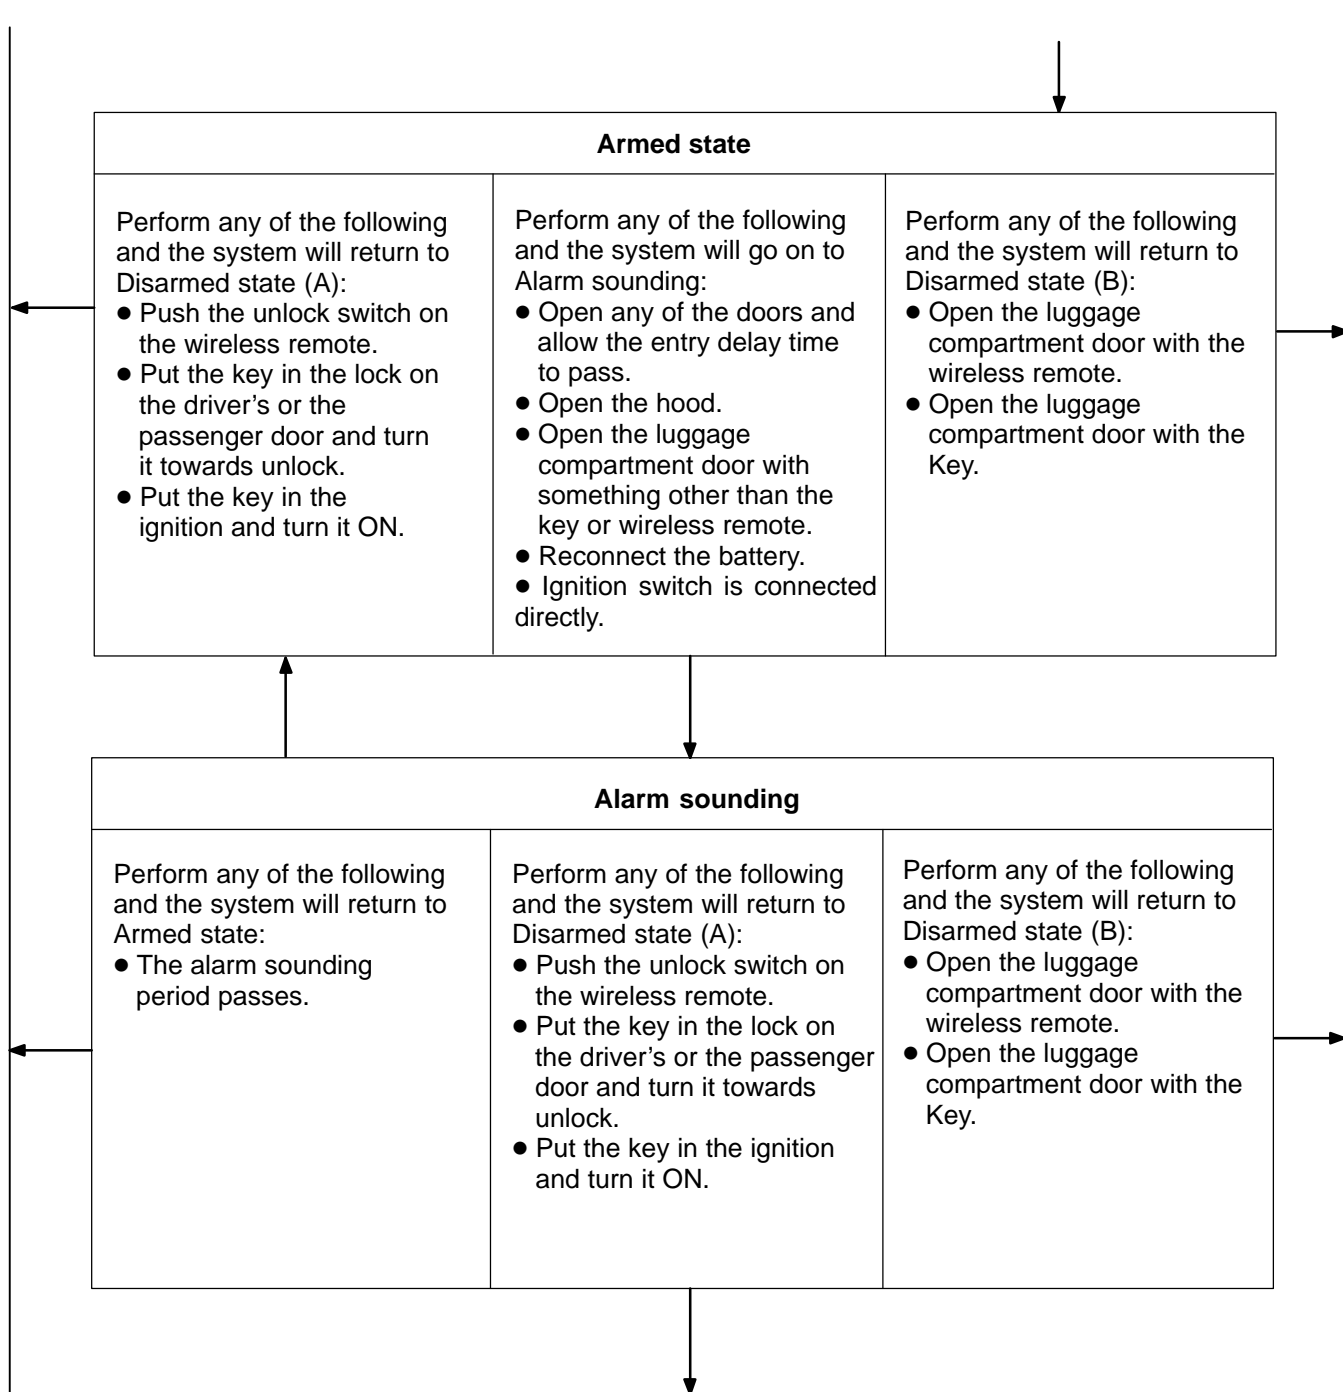


HINT:

In armed state either closed door is opened, entry delay occurs. (15 secs.)

During this time, the mode transfers to disarmed state when the condition described above * is met.

When the condition is not met, the system judges theft occurs, the mode transfers to alarm sounding.

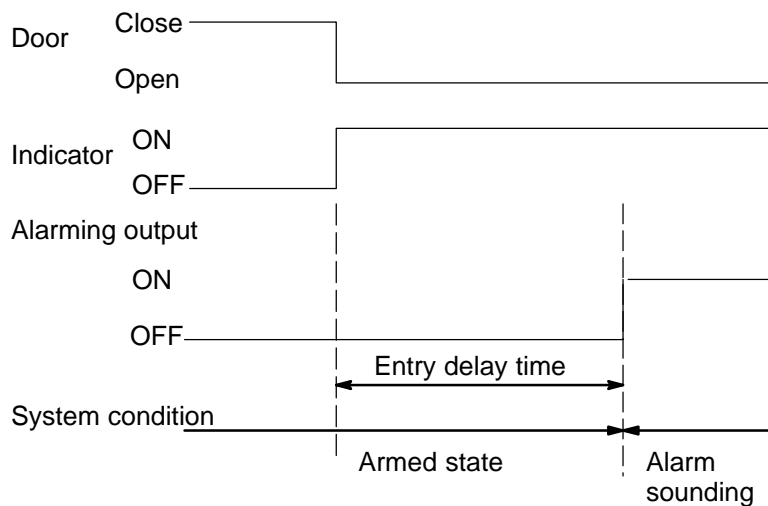

Indicator light output:

Condition	Indicator light
Disarmed state	OFF
Arming preparation	ON
Armed state (Entry delay time)	OFF (ON)
Alarm sounding	ON

HINT:

Even in disarmed state, the indicator light flash. (Due to the signal output from immobilizer system). The indicator always flashes receiving the signal from the immobilizer system at any time in the arming condition.

Flashing frequency:

- 0.2 seconds (ON)
- 1.8 seconds (OFF)

(a) Transfer to active mode:

In each passive mode, when "disarmed state of active mode → arming preparation transfer condition" is met, the active mode transfers to each condition. In this case, active mode continues till disarmed state.


Passive mode when transfer condition is met.	Active mode transfer condition
Disarmed state	Arming preparation condition
Arming preparation condition	Arming preparation condition
Armed state (During entry delay time)	Arming condition (After alarming time has elapsed, arming condition)
Alarm sounding	After alarming time has elapsed, arming condition

(b) Answer back:

The hazard lights flush as answer back under the following conditions.


- (1) When the system is set.
When arming preparation is set from disarmed state using the wireless door lock, the hazard lights flush once.
- (2) When the system is released.
When disarmed state is set from either arming preparation, armed state or alarm sounding using the wireless door lock, the hazard lights flush twice.

4. CHANGING METHOD OF PASSIVE MODE (ON or OFF)

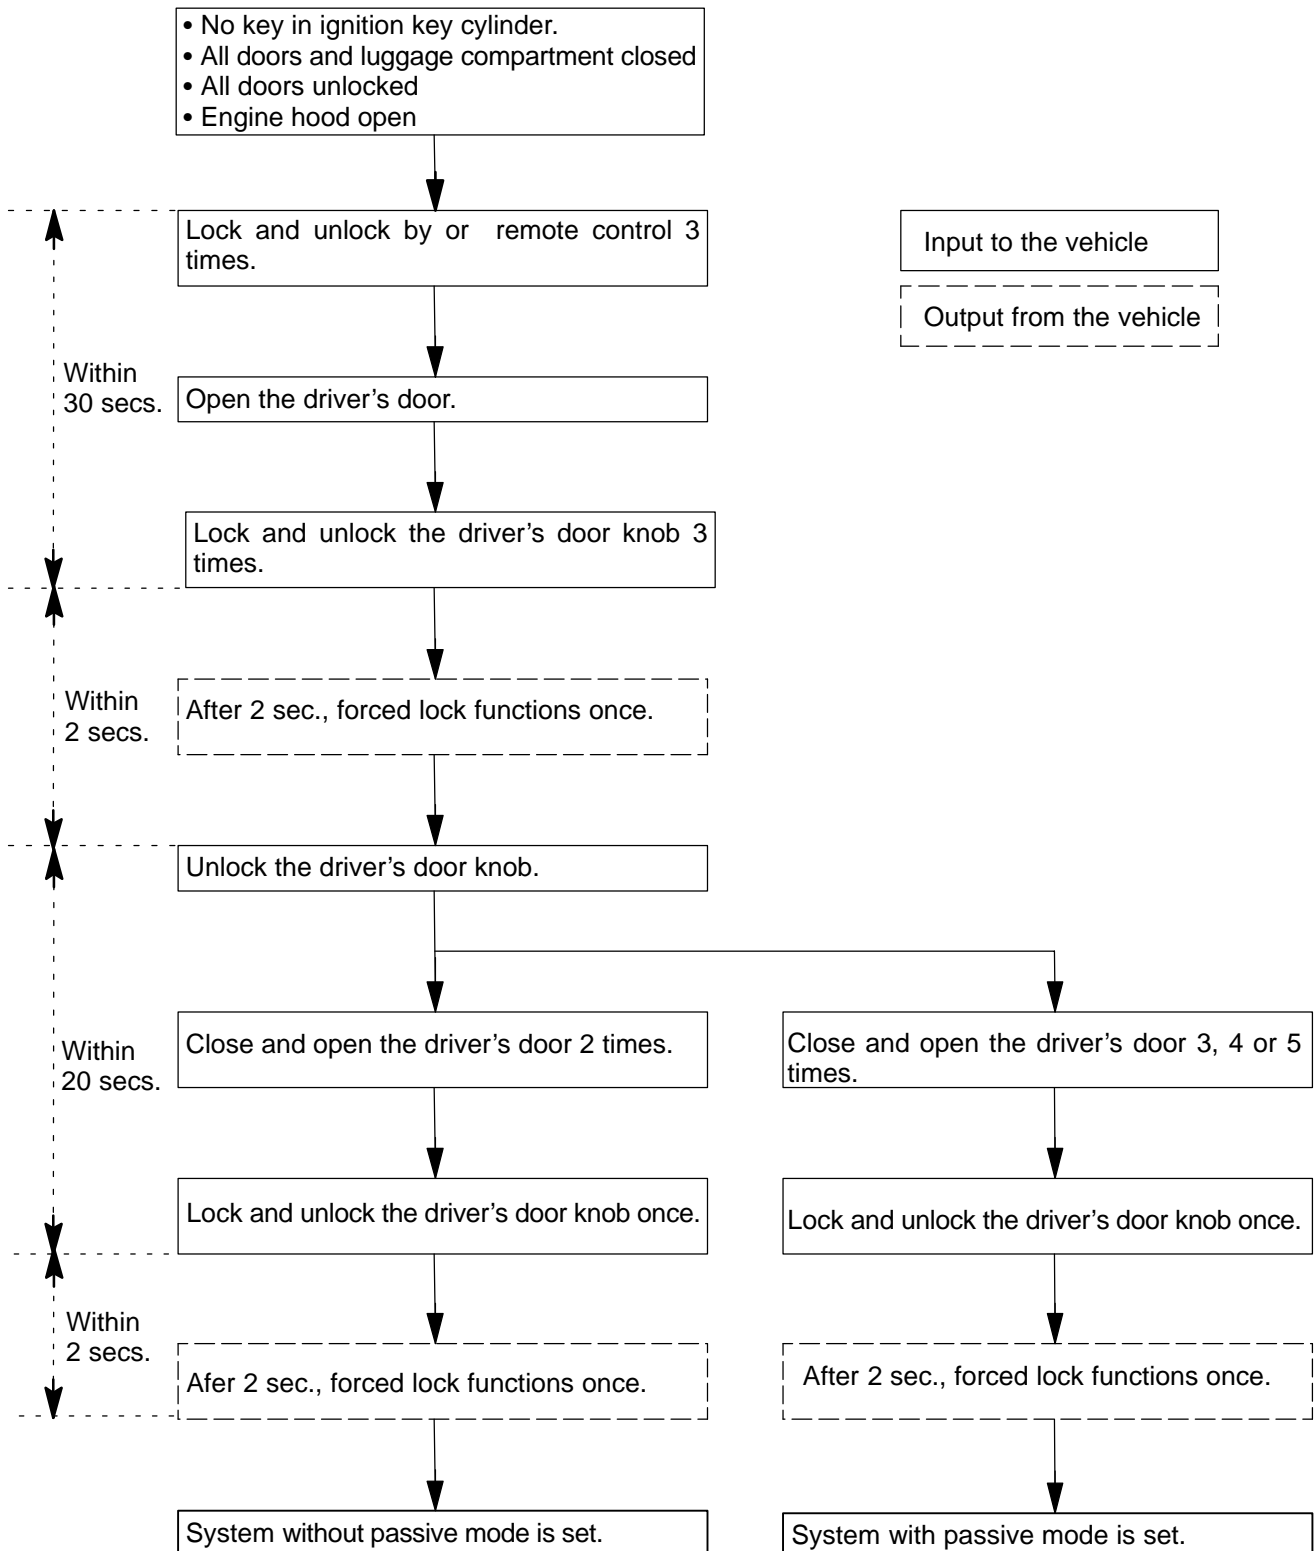

HINT:

- Initially (when shipping), system without passive mode is set..
- Any input or output other than the above shall be regarded as invalid.(Start again from the beginning).

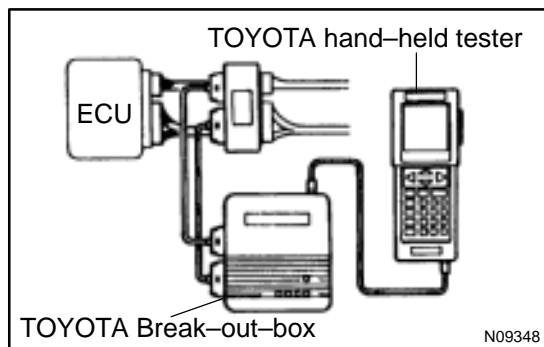

5. ECU TERMINAL VALUES MEASUREMENT BY USING TOYOTA BREAK-OUT-BOX AND TOYOTA HAND-HELD TESTER

- (a) Hook up the TOYOTA break-out-box and TOYOTA hand-held tester to the vehicle.
- (b) Read the ECU input/output values by following the prompts on the tester screen.
- (c) Please refer to the TOYOTA hand-held tester has a "Snapshot" function. This records the measured data and is effective in the diagnosis of intermittent problems.

PRE-CHECK

Only wireless function (Remote control) will not operate.
(If a new transmitter or a transmitter of the same type that works properly with the vehicle is not available.)

Make the vehicle in the initialized condition:

The initialized condition is the condition when the following conditions are satisfied.

- (1) Key plate has not been inserted in the ignition key cylinder.
- (2) All the doors are closed. (Door warning light is off.)
- (3) All the doors are locked.

Basic function check:

Under the standard operation, when repeating the operation of UNLOCK and LOCK switch 3 times or more alternately, check the UNLOCK-LOCK operation from 3rd time onward.

● Following procedures are standard operation.

- (1) Keep about 1 M away to the right direction from the outside handle of a driver's seat.
- (2) Face the transmitter toward the vehicle and press one of transmitter switches for about 1 sec.


Yes


Normal


<Reference>


- Operative distance may differ according to an operator, the way of holding the transmitter or position.
- Because weak electric wave is used, when there is strong wave or noise in the used frequency, operation distance might be shortened.

No

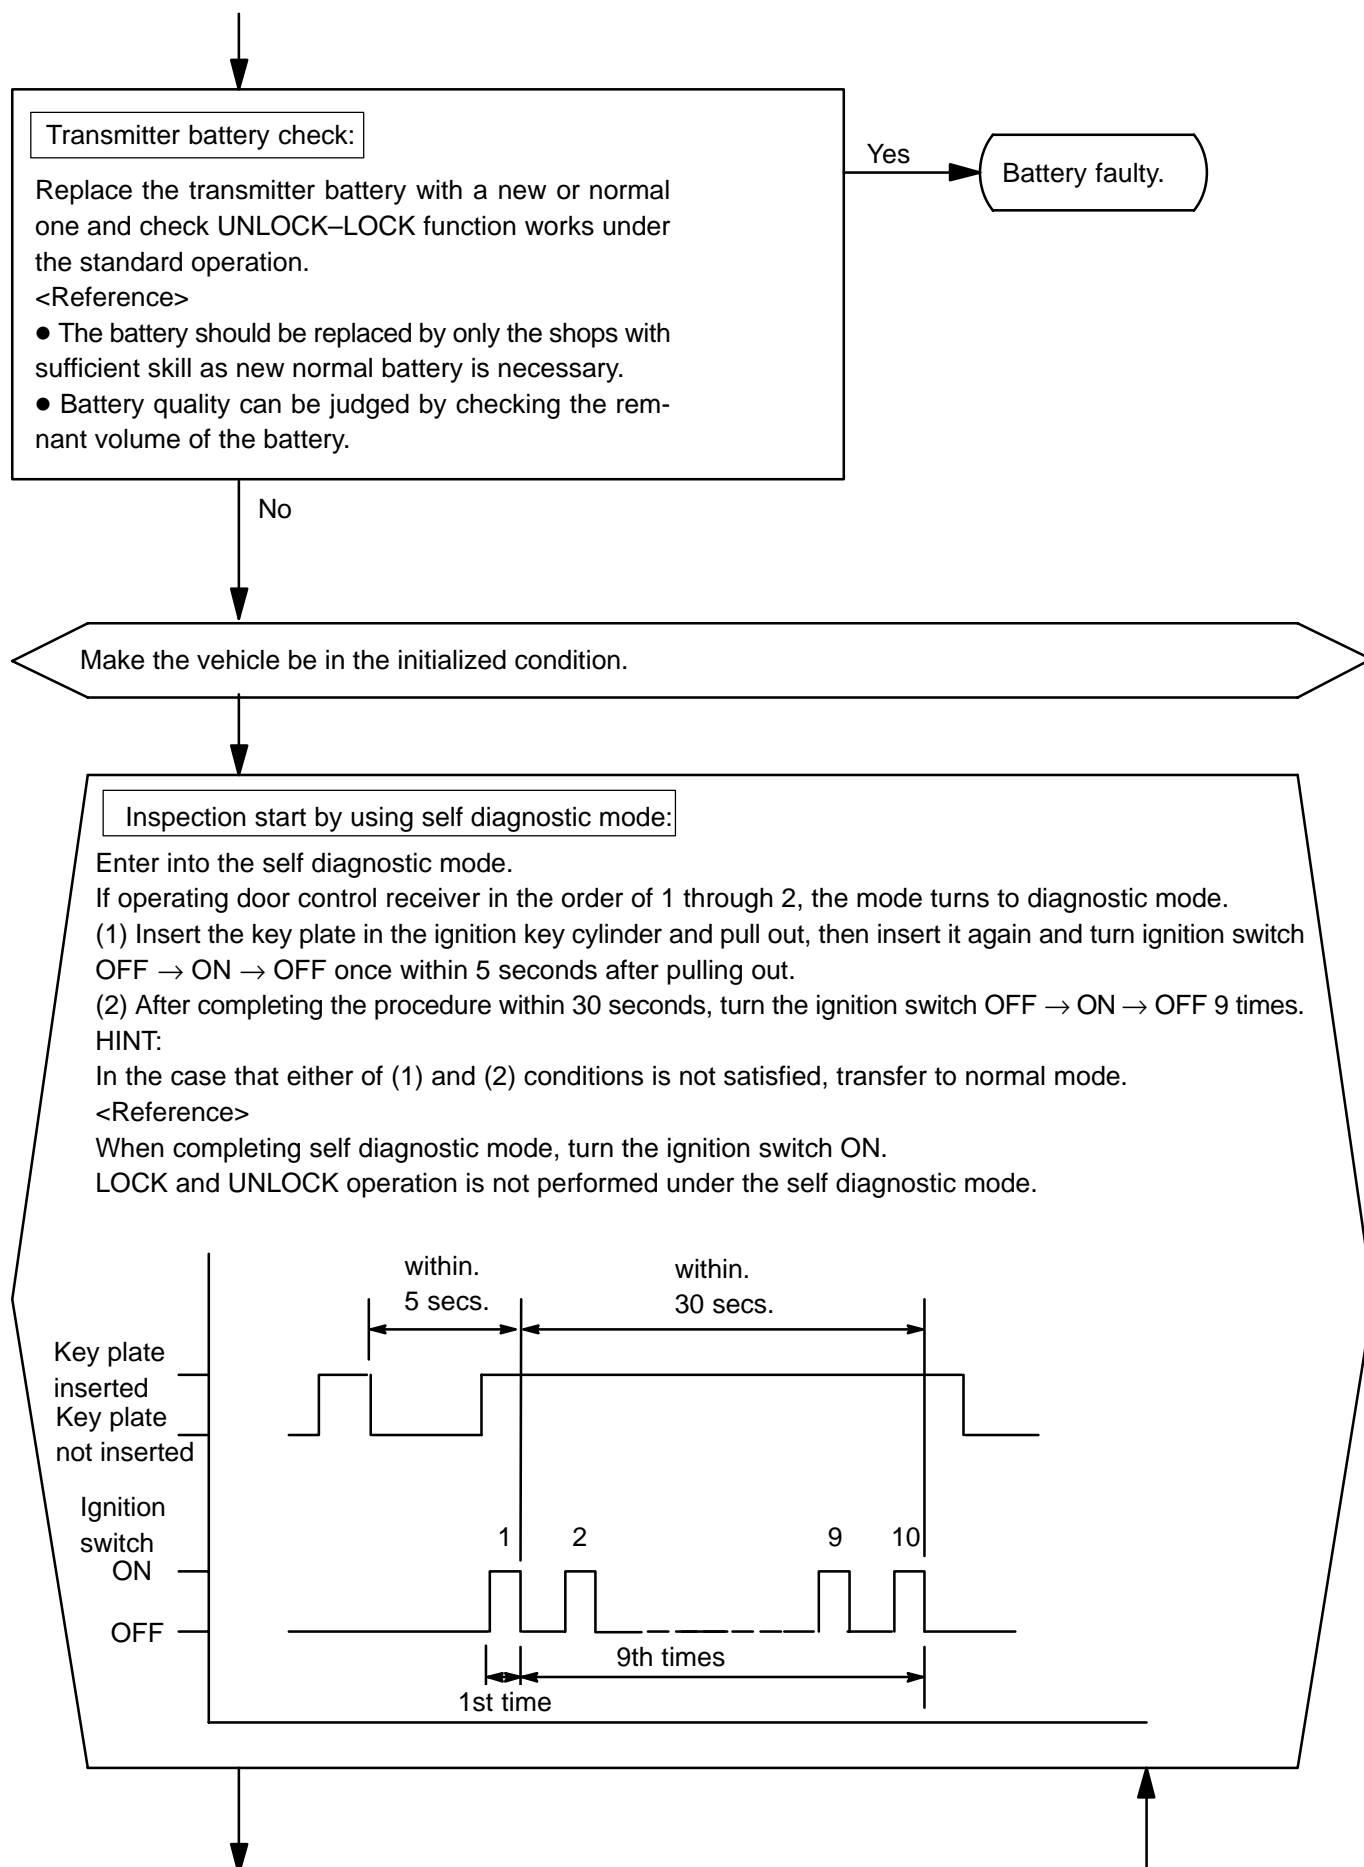

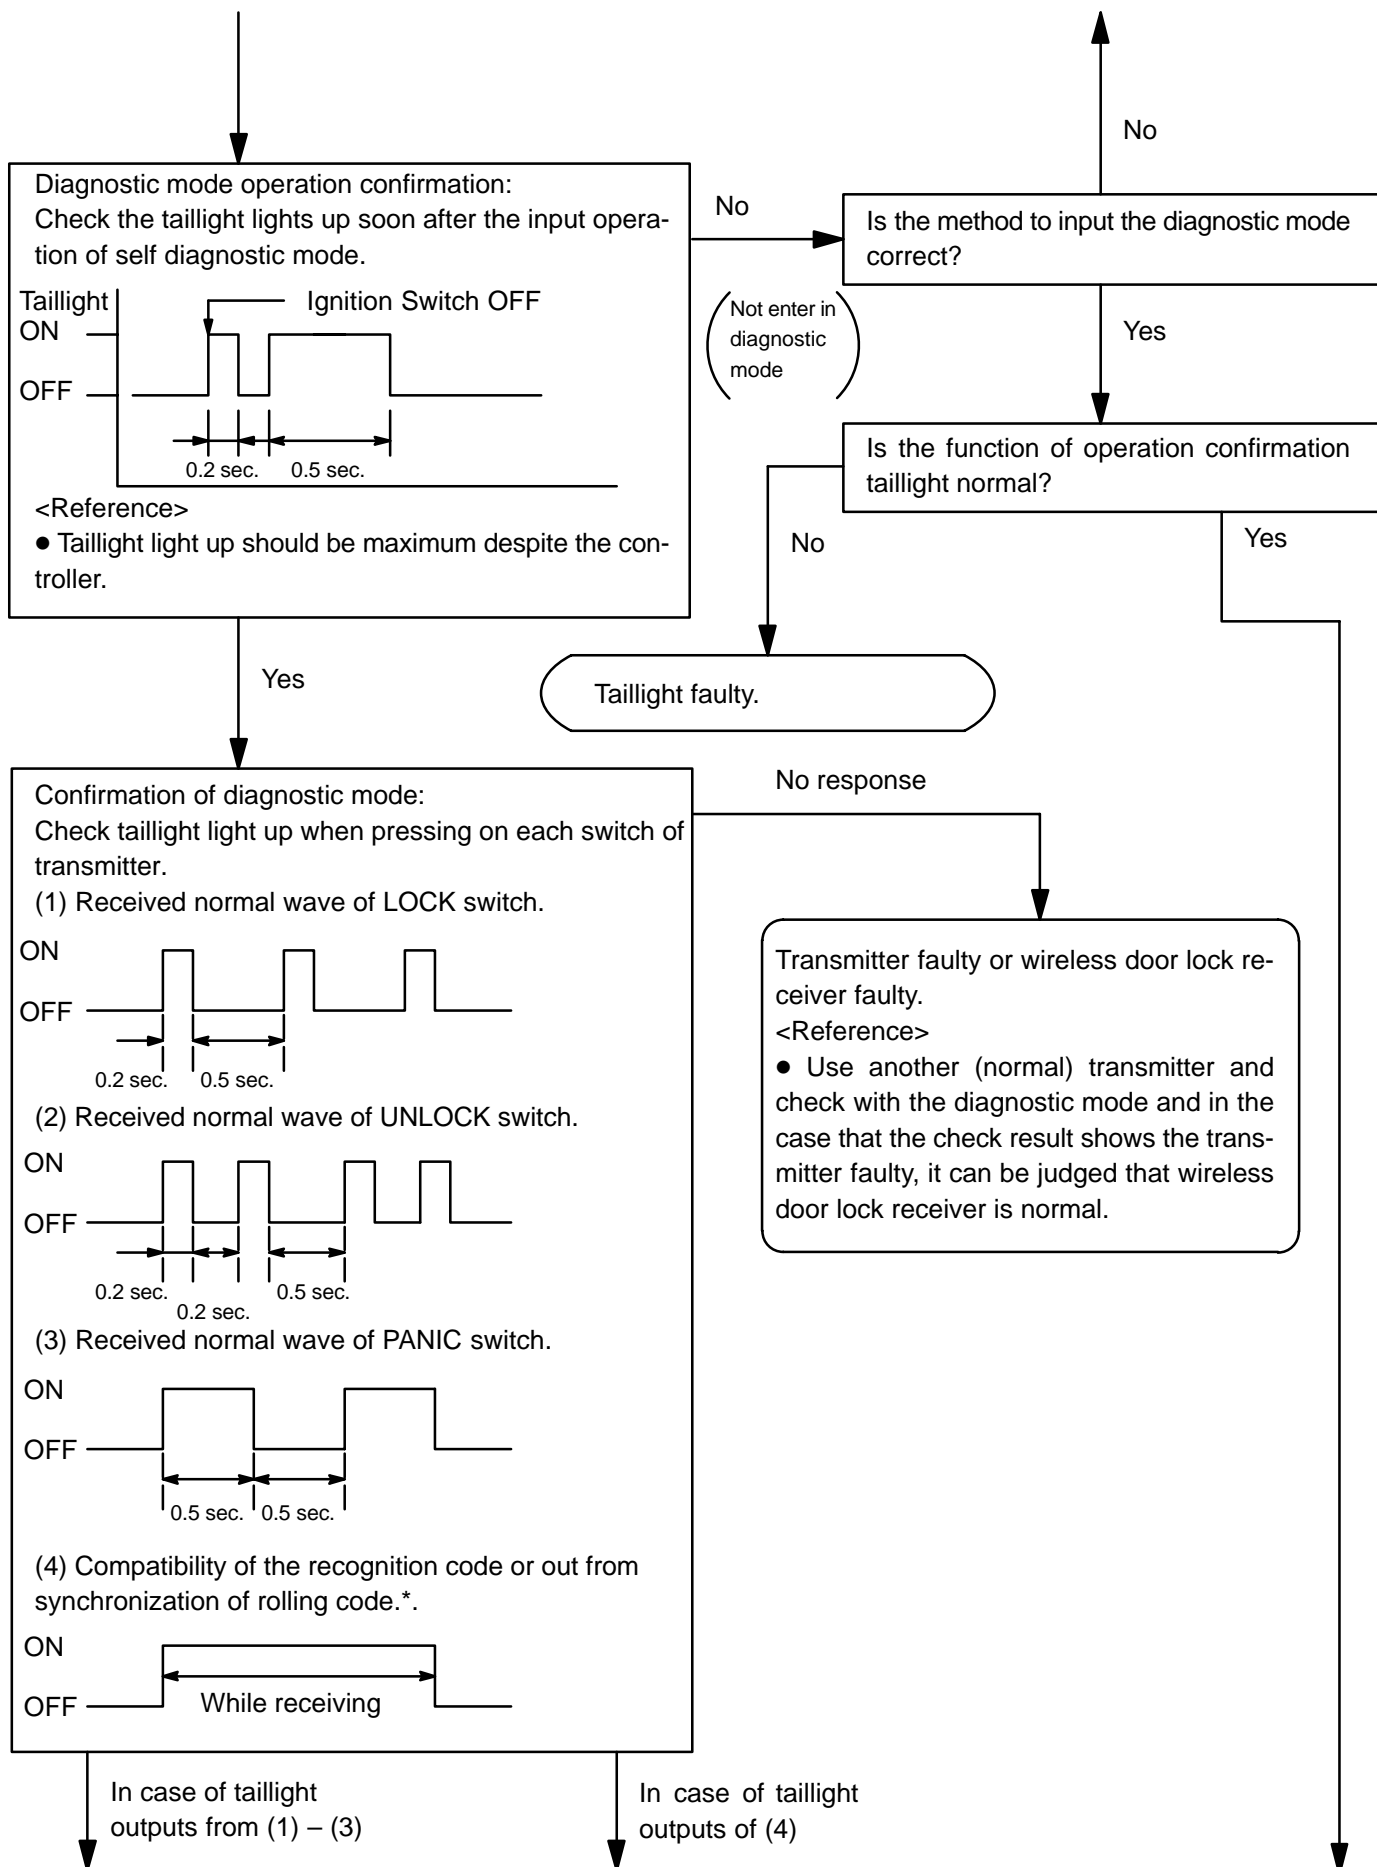

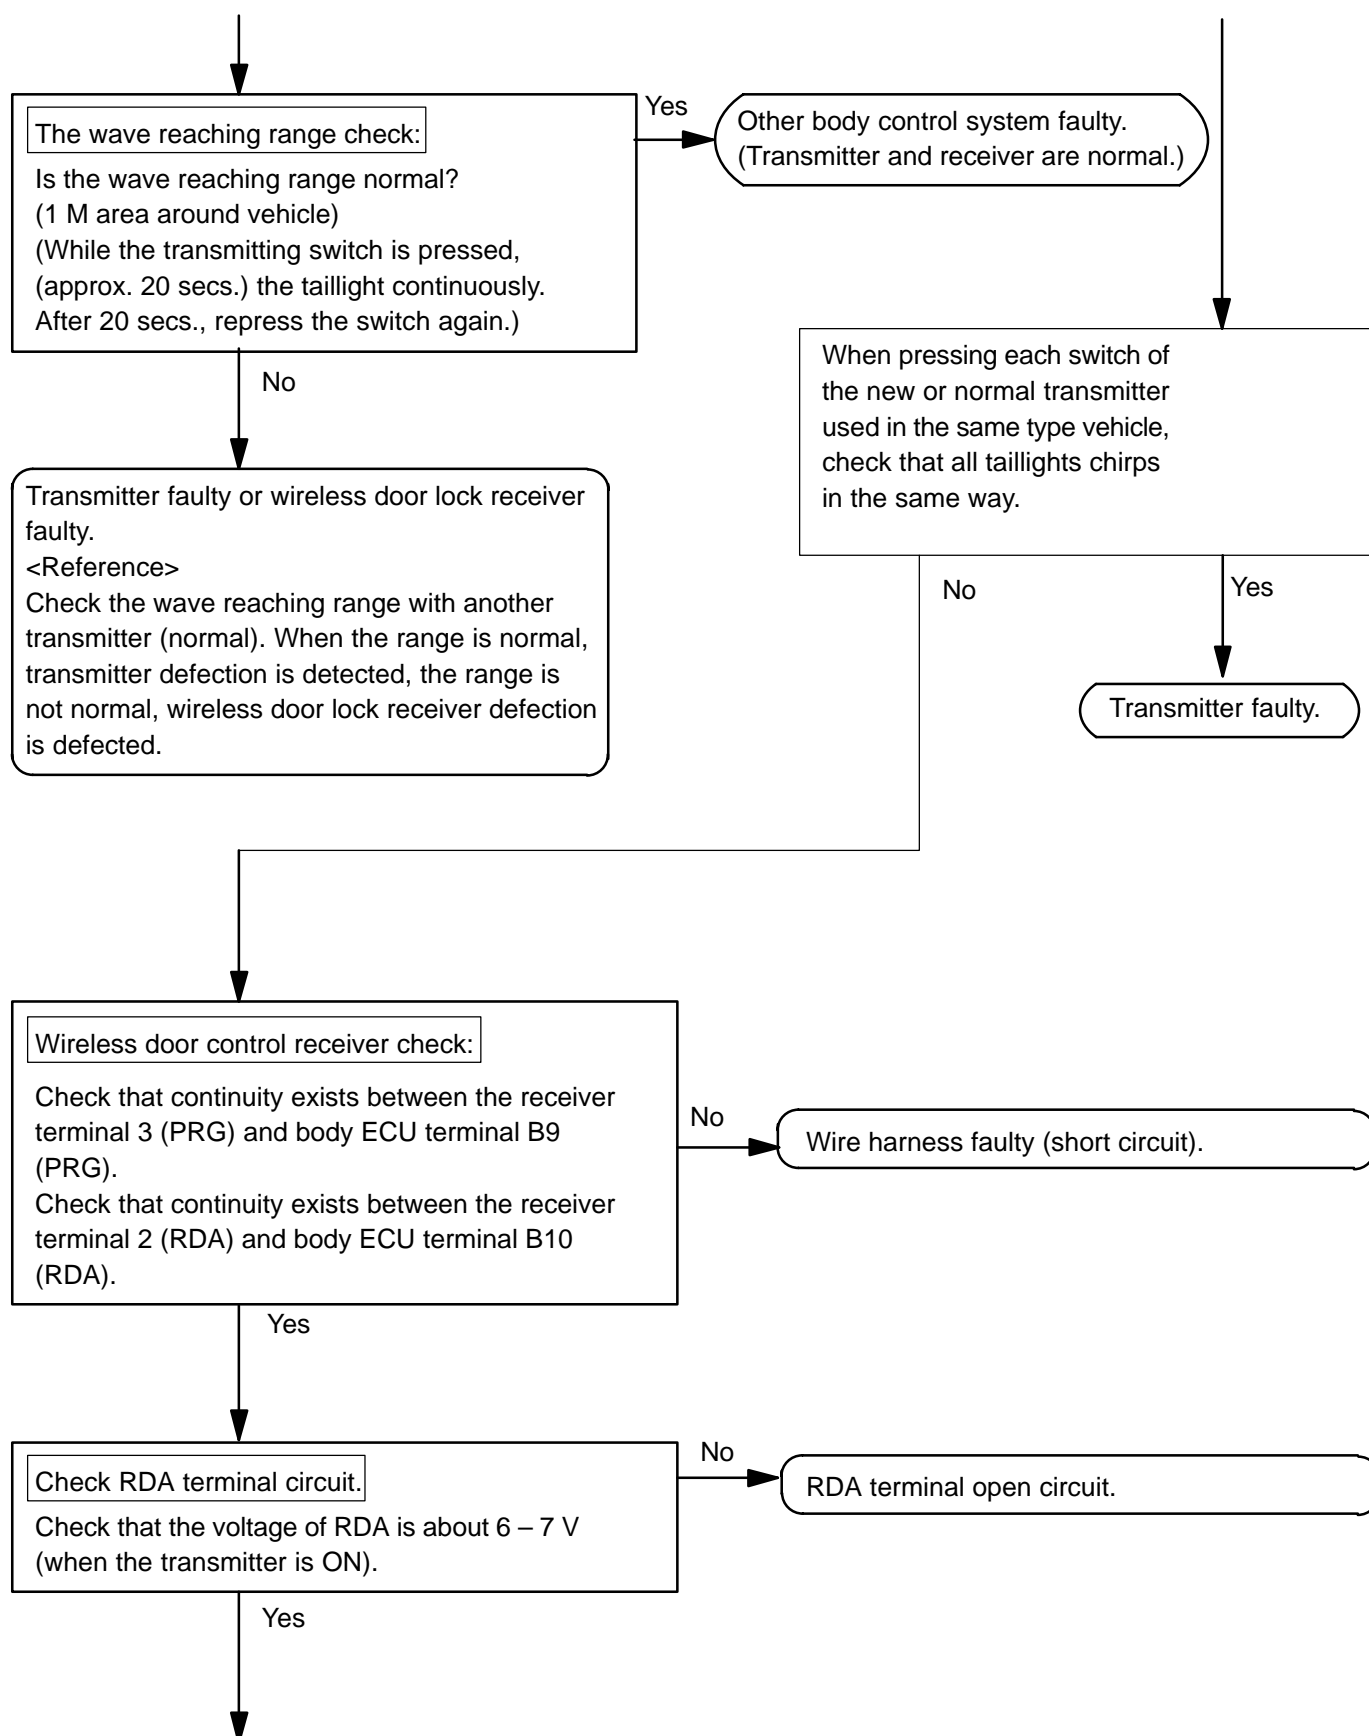

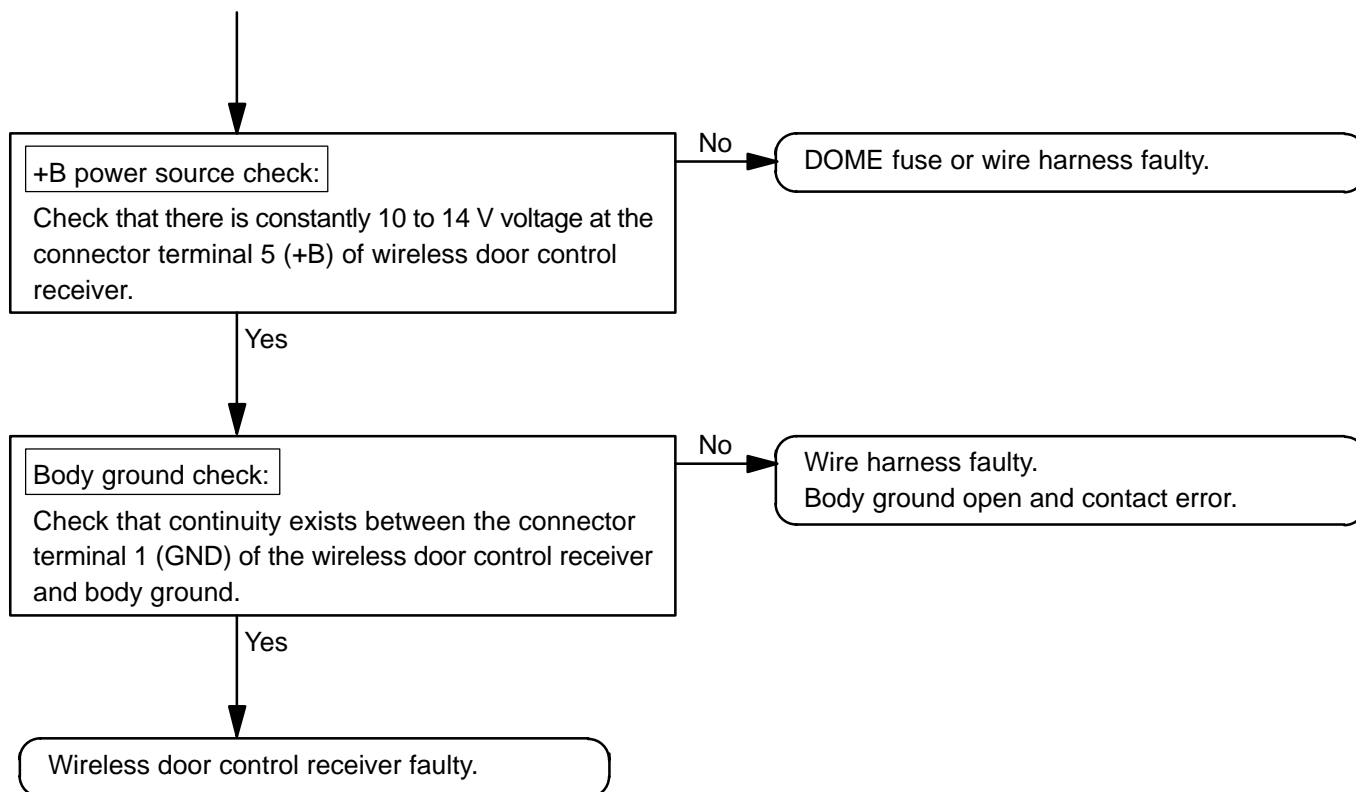


INSPECTION

1. INSPECT WIRELESS DOOR LOCK TRANSMITTER OPERATION

HINT:

Refer to "Wireless door lock control receiver and transmitter replacement" on page [BE-87](#).

- (a) Using a screwdriver, remove and cover.
- (b) Remove the battery (lithium battery).

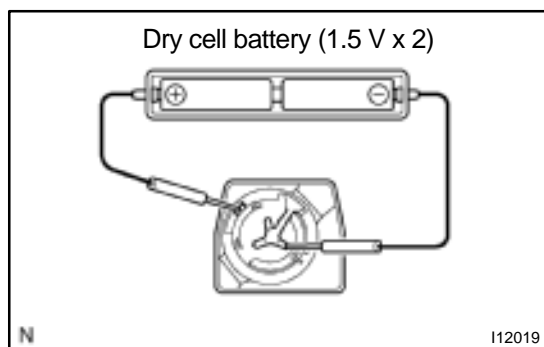

- (c) Install a new or normal battery (lithium battery).

HINT:

When a new or normal battery can not be obtained, connect 2 new 1.5 V batteries in series, connect the battery (+) to the battery receptacle side terminal and battery (-) to the bottom terminal, then apply 3 V voltage to the transmitter.

- (d) In the location where is approx. 1 M away from driver's outside handle in the right direction, and check the transmitter operation when pressing transmission switch on the surface of the transmitter body.

Standard:

Remote control of vehicle door lock can be operated.

HINT:


- The minimum operation distance differs according to operator, the way of holding, and location.
 - As weak wave is used, operation distance might be shortened when noise is detected in strong wave or used frequency.
- (e) Install the battery (lithium battery).
 - (f) Install a cover so that rubber cover is not distorted or slipped off.

2. CHECK BATTERY CAPACITY


HINT:

- Make sure to use the TOYOTA electrical tester.
- With the battery unloaded, judge can not be made whether the battery is available or not on the test.
- When the transmitter is faulty, the energy amount left in the battery might not be checked correctly.
- On the lithium battery used for the transmitter, the voltage more than 2.5 V with the battery unloaded is shown on the tester until the energy is completely consumed.

Accordingly when inspecting the energy amount left in the battery, it is necessary to measure the voltage when the battery is loaded. (1.2 k Ω).

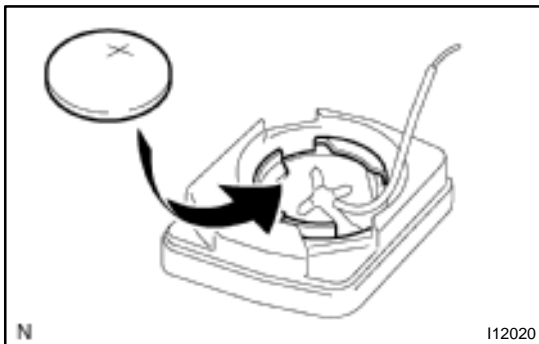

- Remove the cover using a (–) driver.
- Remove the battery (lithium battery) from the transmitter.
- Connect the lead to the (–) terminal of the transmitter and install the battery.

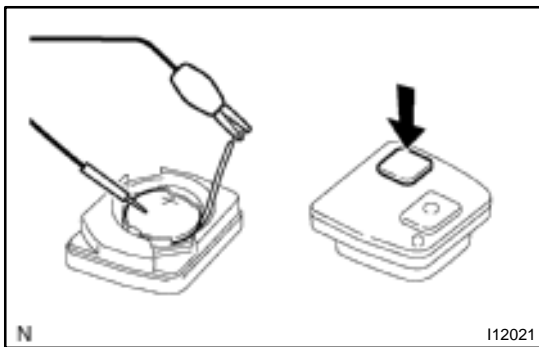


- Connect the (+) tester to the (+) battery (lithium battery), and (–) tester to the lead respectively.
- Press one of the transmitting switches on the transmitter for approx. 1 second.
- Press the transmitting switch on the transmitter again to check the voltage.

Standard: 2.1 V or more

HINT:

- When the temperature of the battery is low, the judge can not be made correctly.
When the outcome of the test is less than 2.1 V, conduct the test again after leaving the battery in the place at 18 °C for more than 30 minutes.
 - By auto power off function, the voltage becomes no load voltage (more than 2.5 V) condition after 20 seconds from the switch was pressed.
Make sure to read the voltage before of it.
 - High voltage might be shown 1 to 2 times after leaving the battery, judge should be made with the voltage shown at the 3rd time or later.
- (g) Disconnect the lead.
- (h) Set the battery (lithium battery) in the transmitter.
- (i) Install the cover, so that the rubber cover is not distorted or slipped off.

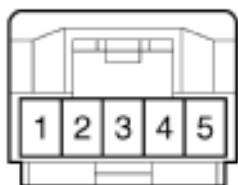Wire harness side:

N


I12038

3. INSPECT WIRELESS DOOR LOCK CONTROL RECEIVER CIRCUIT

- (a) Disconnect the connector from the receiver and inspect the connector on the wire harness side, as shown below.

Tester connection	Condition	Specified condition
1 – Ground	Constant	Continuity
5 – Ground	Constant	Battery voltage

If the circuit is not as specified, inspect the circuit connected to other parts.

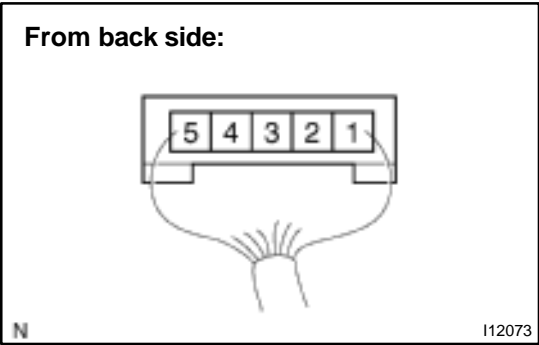

- (b) Connect the wire harness side connector to the receiver and inspect the wire harness side connector from the back side, as shown below.

Tester connection	Condition	Specified condition
3 – Ground	Normal mode	10 – 14 V
2 – Ground	Ignition switch position OFF Key removed Transmitter ON	About 6 – 7 V

If circuit is as specified, replace the receiver.
If the circuit is not as specified, inspect the circuit connected to other parts.


cardiagn.com

REPLACEMENT

1. REPLACE TRANSMITTER (LITHIUM) BATTERY

NOTICE:

Special caution should be taken for handling each component as they are precision electronic components.

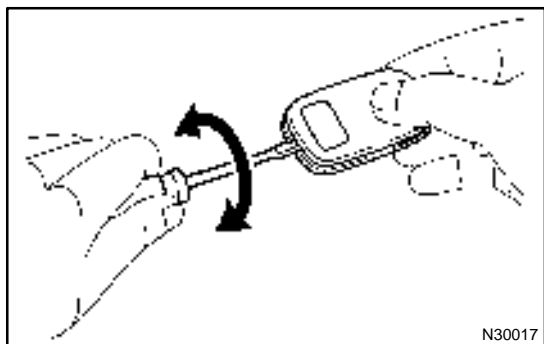

(a) Using a screwdriver, remove the cover.

NOTICE:

Do not pry out the cover forcibly.

HINT:


Push the cover with a finger as shown in the illustration, so that there becomes clearance, then pry out the cover from that clearance.

(b) Remove the transmitter.

(c) Remove the battery (lithium battery).

NOTICE:

- **Do not push the terminals with a finger.**
- **If prying up the battery (lithium battery) forcibly to remove, the terminals are deformed.**

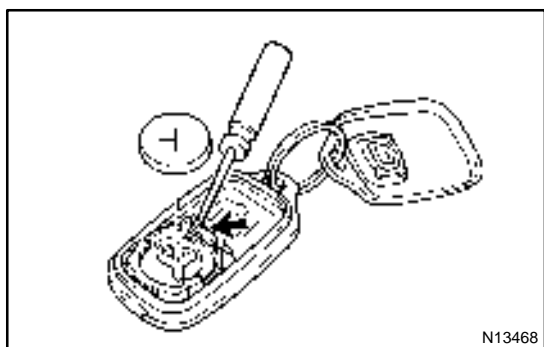

(d) Install a battery (lithium battery) as shown in the illustration.

NOTICE:

Face the battery upward. Take care not to deform the terminals.

(e) Check that the rubber is not distorted or slipped off, and install the cover.

2. REPLACE DOOR CONTROL RECEIVER AND TRANSMITTER

NOTICE:

When replacing the door control receiver and transmitter, registration of recognition code is necessary because they are provided as single components.


- (a) Select which operation mode should be performed from the following modes.
- Add mode
 - Rewrite mode
 - Prohibition mode
 - Confirmation mode


HINT:


- The add mode is used to retain codes already registered while you register new recognition codes. This mode is used when adding a transmitter. However, if the number of registered codes exceeds 4 codes, previously registered codes are correspondingly erased in order, starting from the first registered code.
 - The rewrite mode is used to erase all previously registered codes and register only new recognition codes.
 - The prohibition mode is used to erase all registered codes and cancels the wireless door lock function. Use this mode when the transmitter is lost.
 - The confirmation mode is for confirming how many recognition codes are already registered before you register additional recognition codes.
- (b) Follow the chart on the following pages to register the transmitter recognition code at the wireless door lock control receiver.


HINT:

- When procedure is out of the specified, the operation returns to normal operation.
- Maximum 4 recognition codes can be registered.

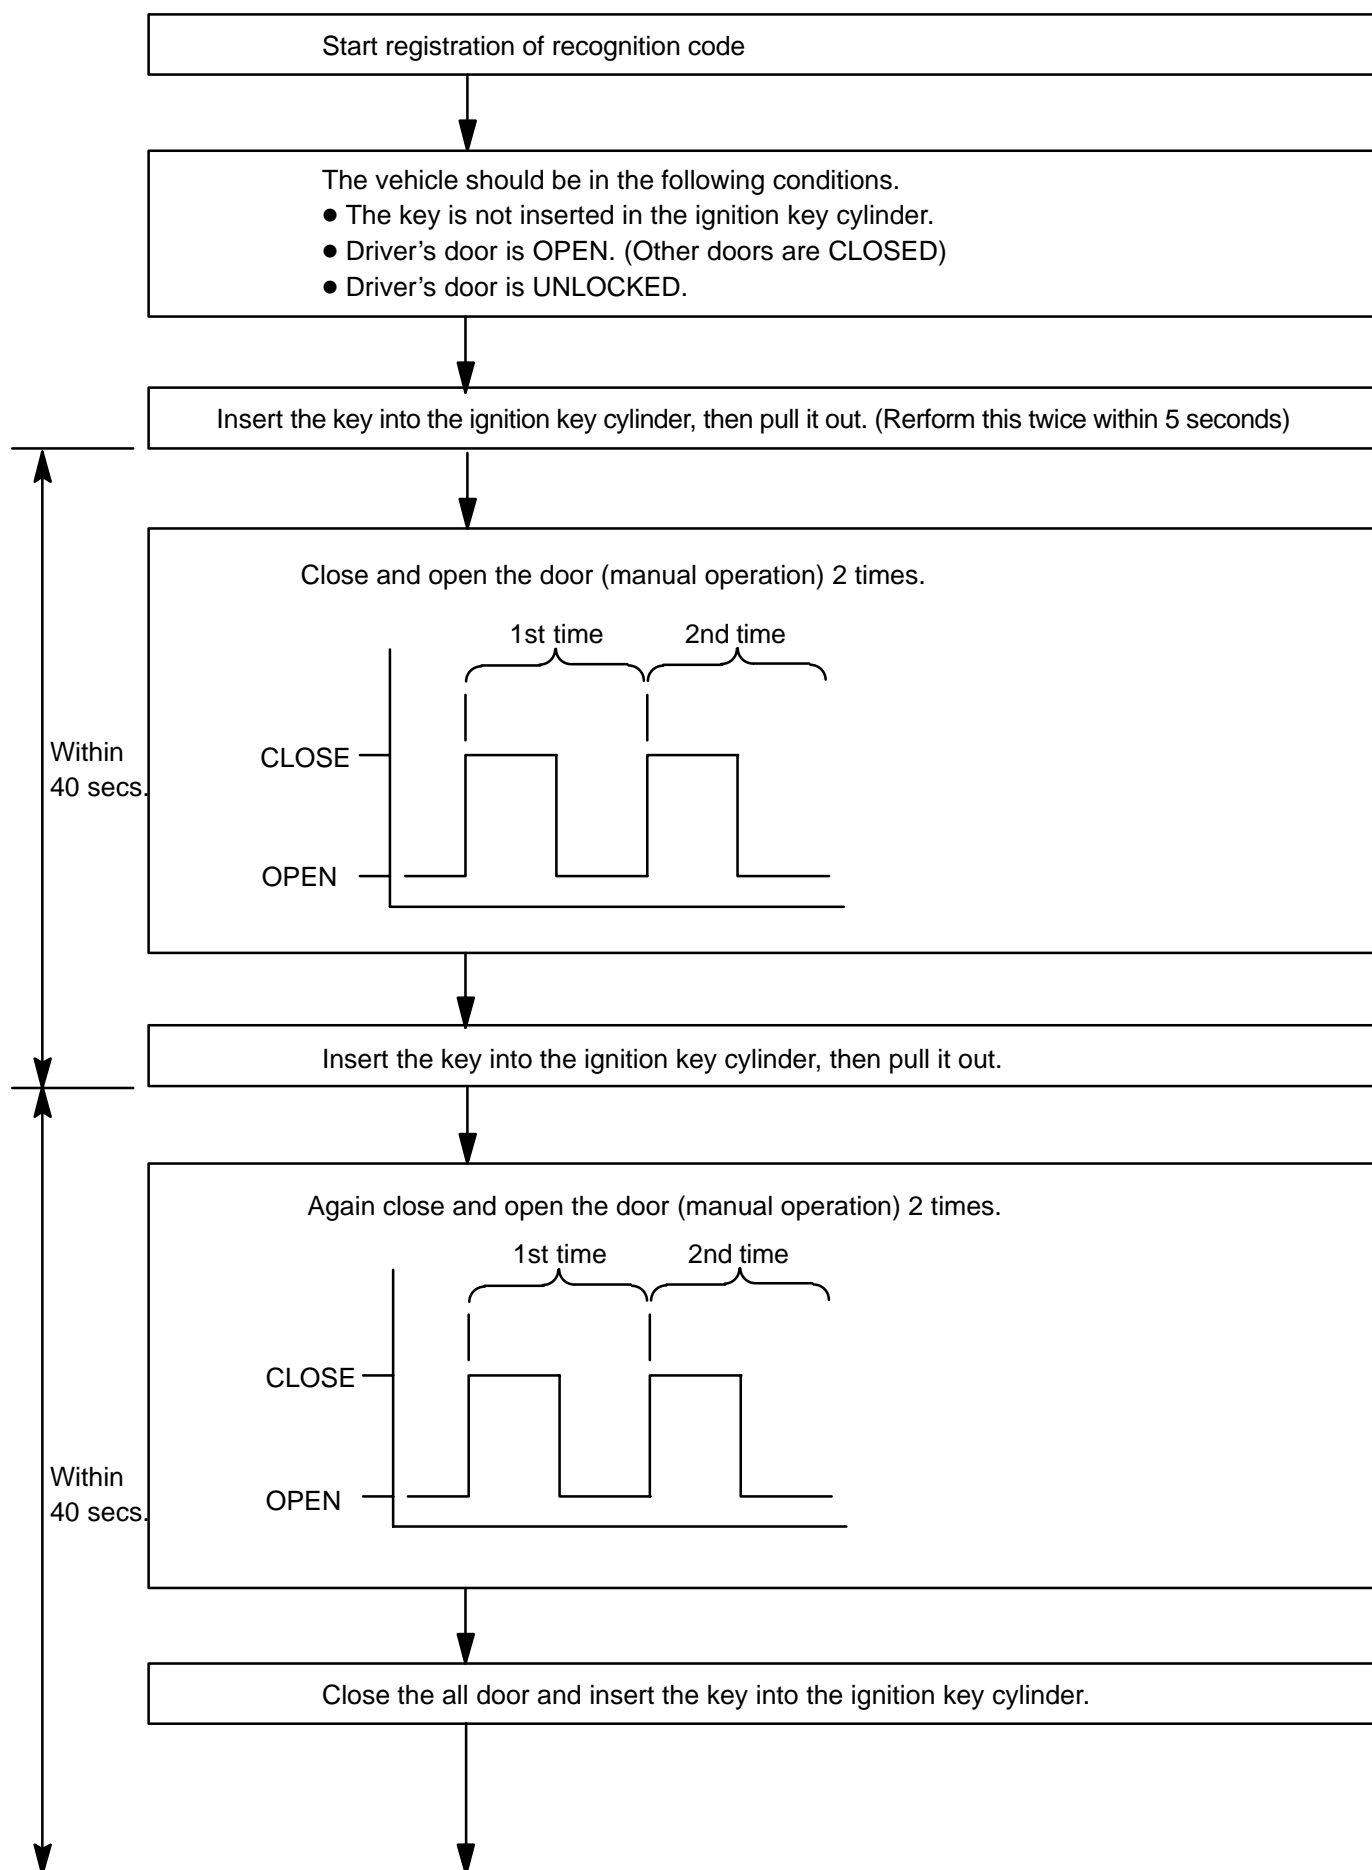

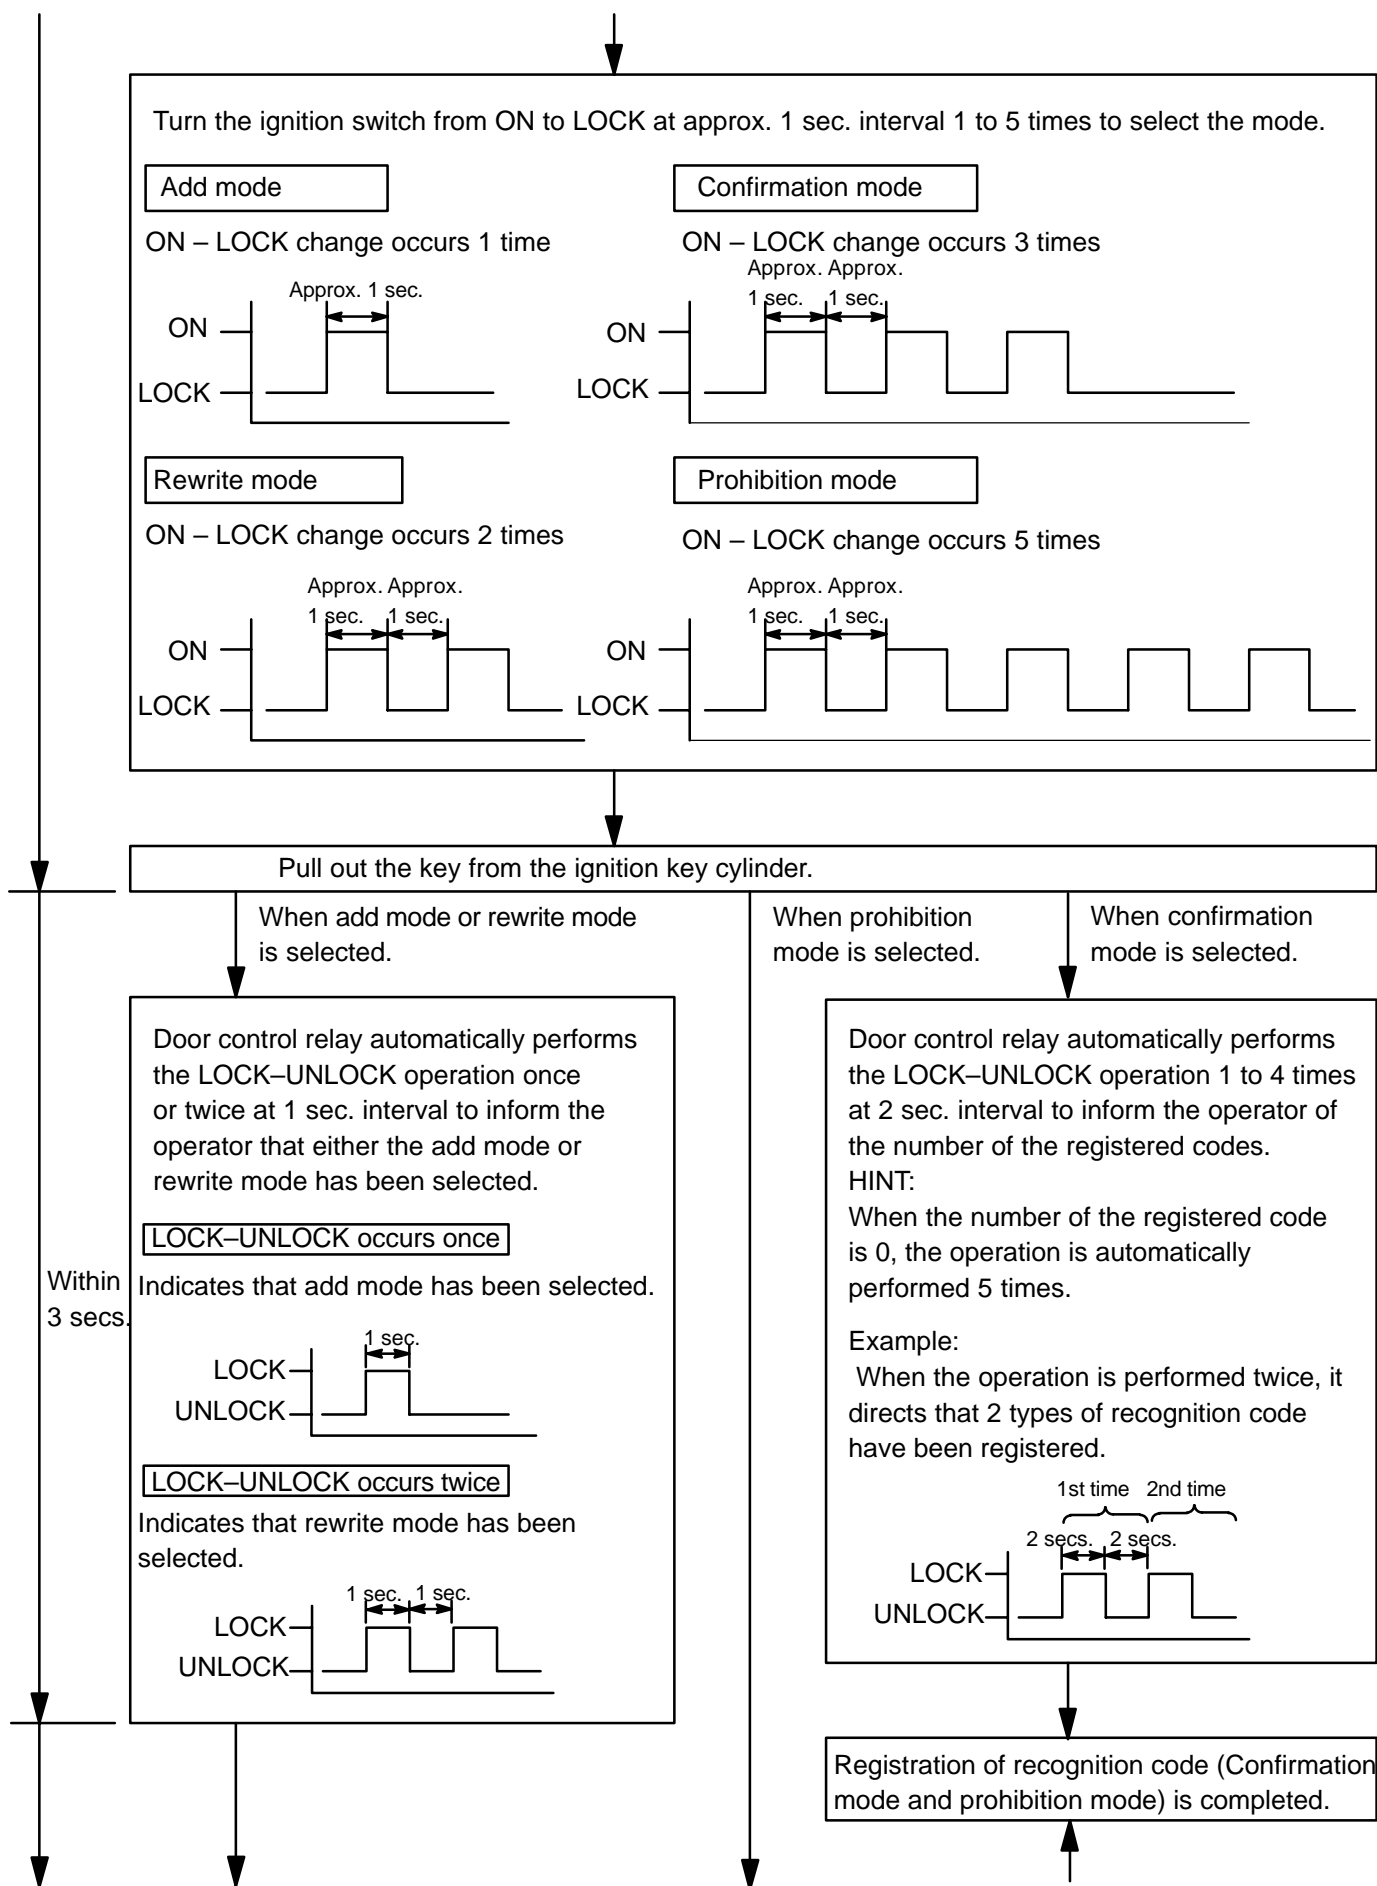

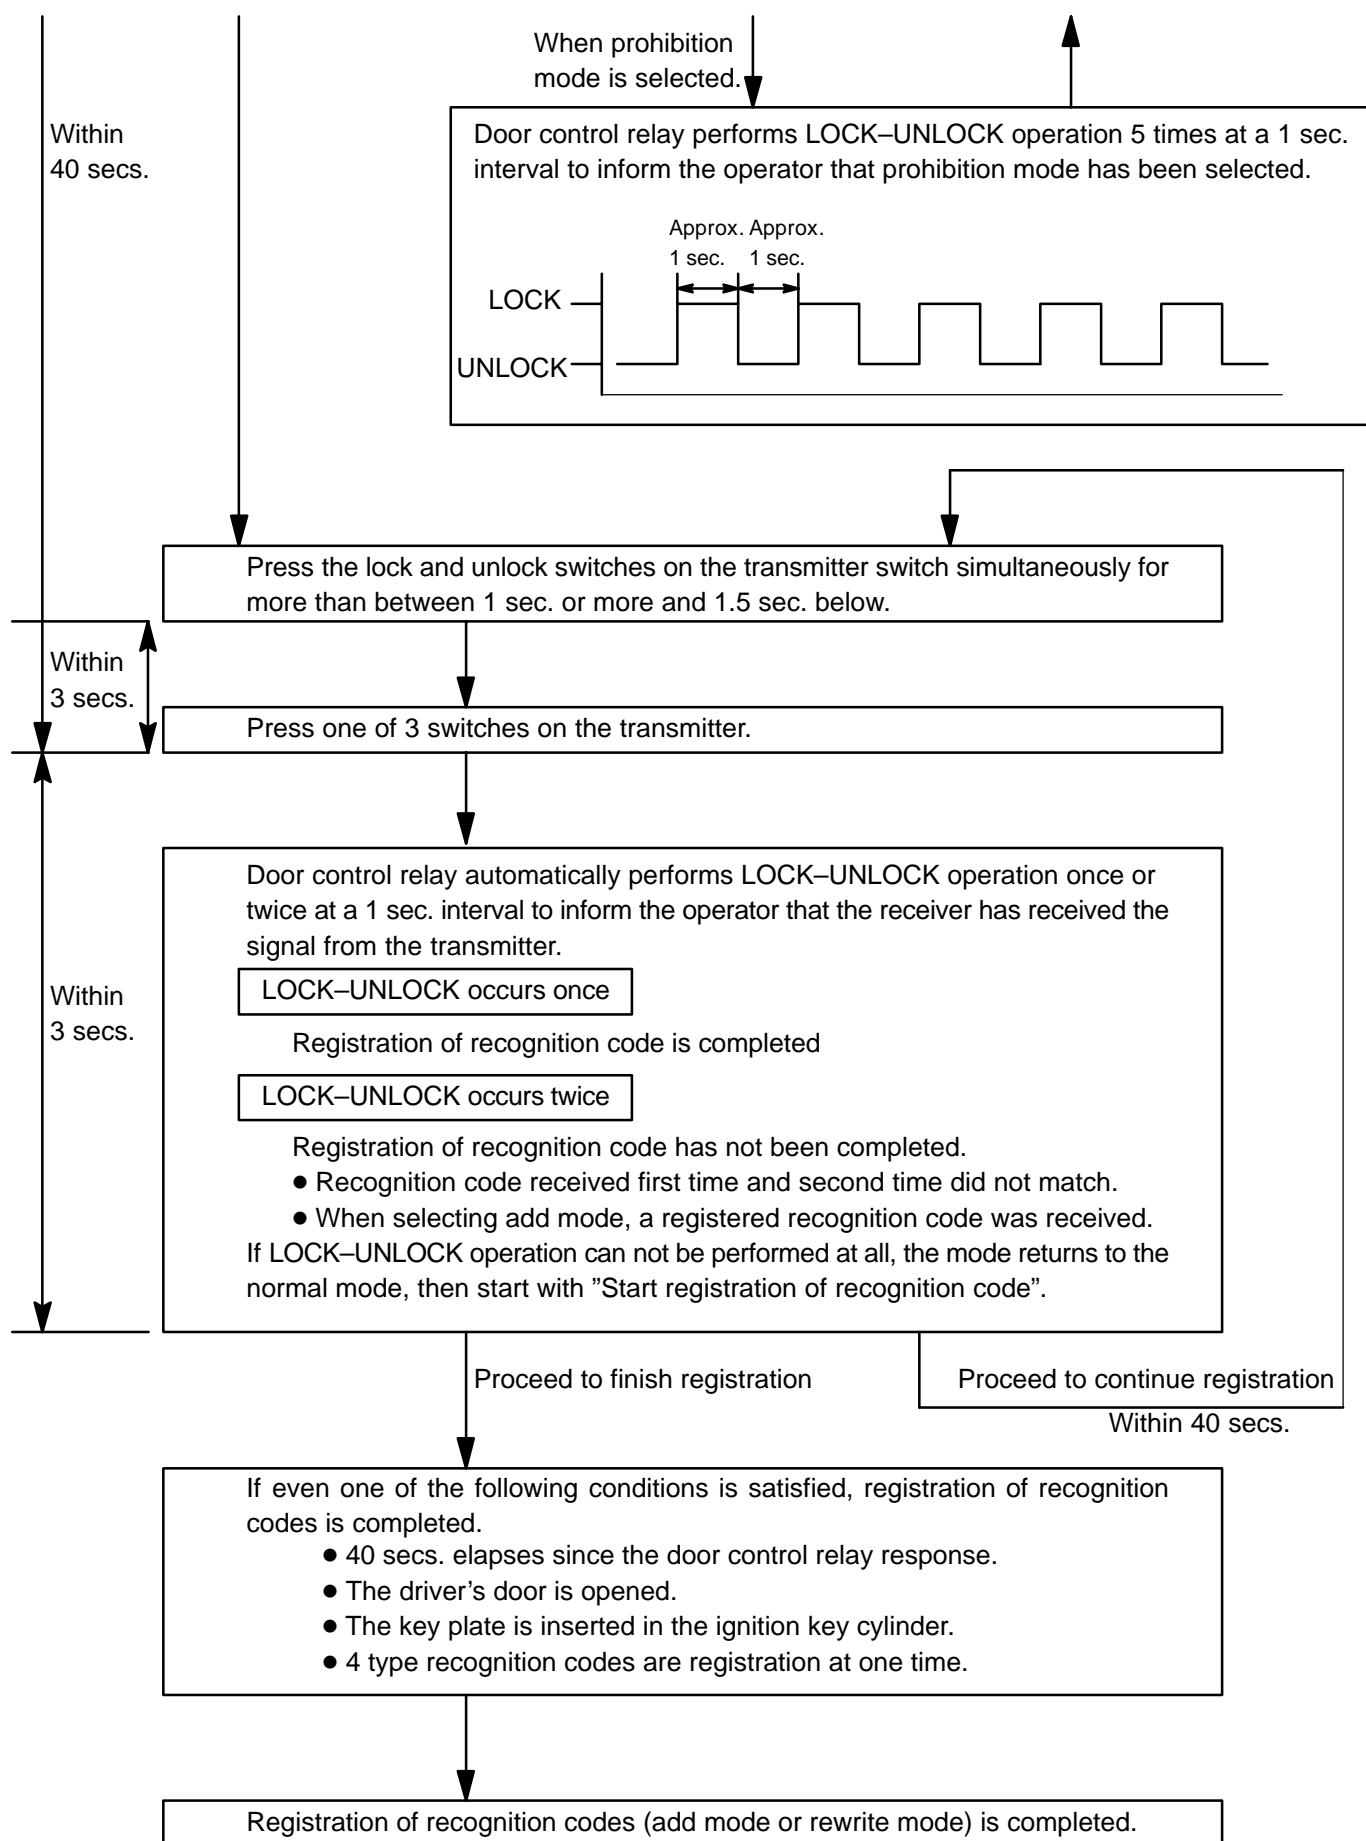

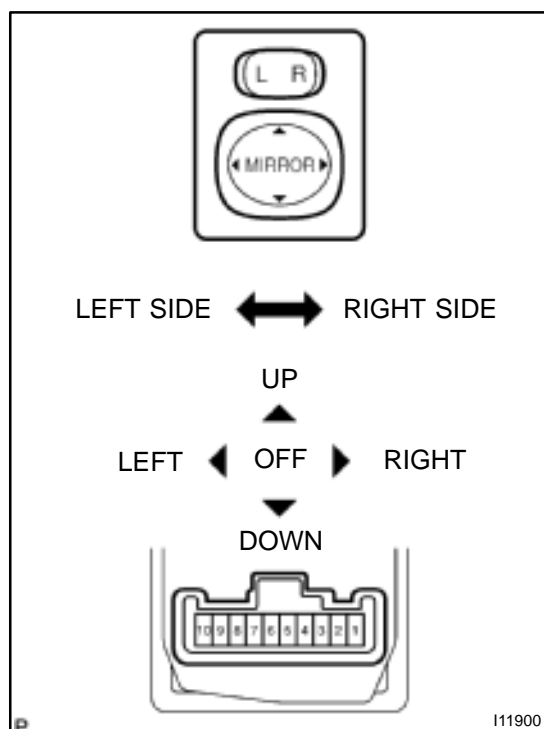

INSPECTION

1. INSPECT LEFT SIDE MIRROR SWITCH CONTINUITY


Switch position	Tester connection	Specified condition
OFF	–	No continuity
UP	4 – 8 6 – 7	Continuity
DOWN	4 – 7 6 – 8	Continuity
LEFT	5 – 8 6 – 7	Continuity
RIGHT	5 – 7 6 – 8	Continuity

2. INSPECT RIGHT SIDE MIRROR SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
OFF	–	No continuity
UP	3 – 8 6 – 7	Continuity
DOWN	3 – 7 6 – 8	Continuity
LEFT	5 – 8 6 – 7	Continuity
RIGHT	2 – 7 6 – 8	Continuity

If continuity is not as specified, replace the switch.

If continuity is as specified, inspect the switch circuit.

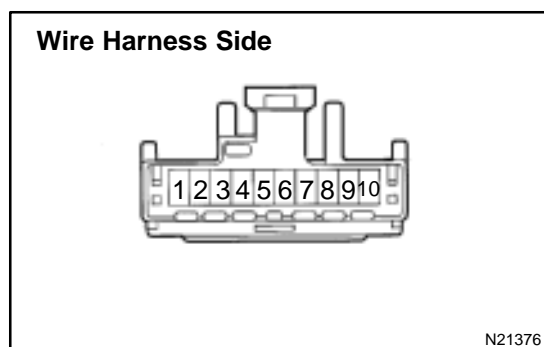


3. INSPECT MIRROR SWITCH CIRCUIT

Disconnect the connector from the switch and inspect the connector on the wire harness side.


Tester connection	Condition	Specified condition
7 – Ground	Constant	Continuity
8 – Ground	Ignition switch position LOCK	No voltage
8 – Ground	Ignition switch position ACC or ON	Battery voltage

If the circuit is not as specified, inspect the circuits connected to other parts.

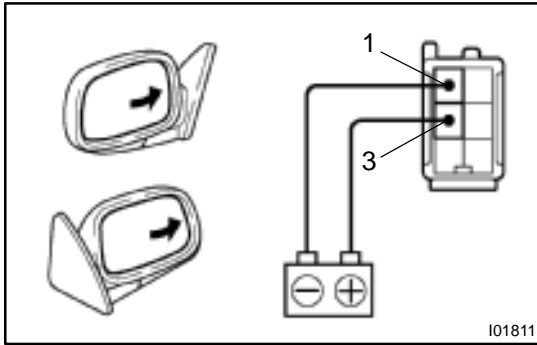


4. INSPECT MIRROR MOTOR OPERATION


- (a) Connect the positive (+) lead from the battery to terminal 3 and the negative (–) lead to terminal 1, and check that the mirror turns right side.

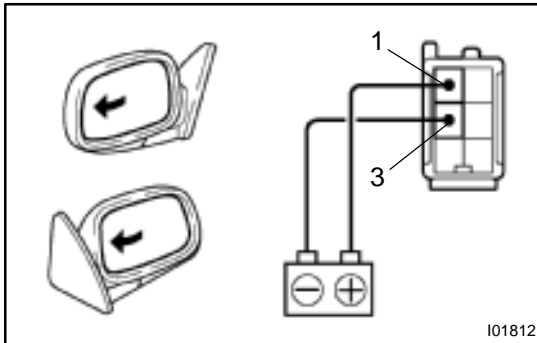

- (b) Reverse the polarity, and check that the mirror turns left side.

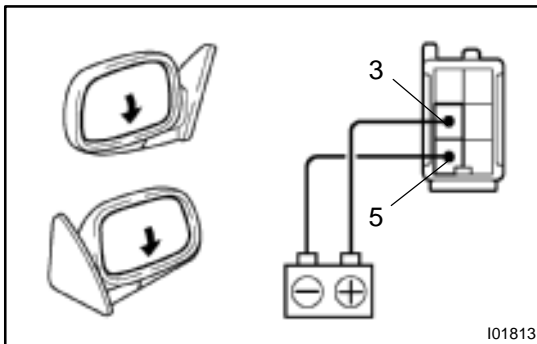

- (c) Connect the positive (+) lead from the battery to terminal 3 and the negative (–) lead to terminal 5, and check that the mirror turns to the downward.

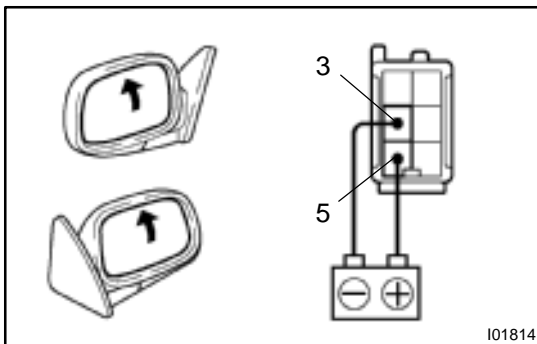

- (d) Reverse the polarity, and check that the mirror turns to the upward.
If operation is not as specified, replace the mirror assembly.

AUDIO SYSTEM

DESCRIPTION


BE1UU-01

1. RADIO WAVE BAND

The radio wave bands used in radio broadcasting are as follows:

Frequency	30 kHz	300 kHz	3 MHz	30 MHz	300 MHz
Designation	LF	MF	HF	VHF	
Radio wave		AM ↔		FM ↔	
Modulation method	Amplitude modulation			Frequency modulation	

LF: Low frequency MF: Medium Frequency HF: High Frequency VHF: Very High Frequency

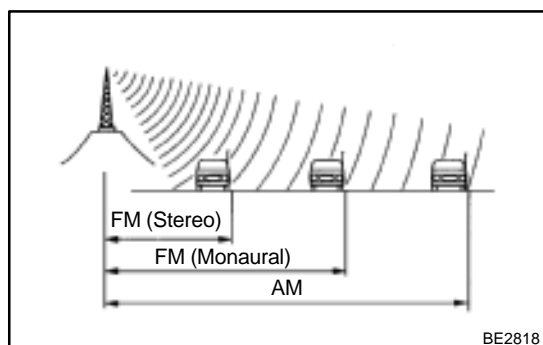


2. SERVICE AREA

There are great differences in the size of the service area for AM and FM monaural. Sometimes FM stereo broadcasts cannot be received even though AM comes in very clearly.





Not only does FM stereo have the smallest service area, but it also picks up static and other types of interference ("noise") easily.

3. RECEPTION PROBLEMS

Besides the problem of static, there are also the problems called "fading", "multipath" and "fade out". These problems are caused not by electrical noise but by the nature of the radio waves themselves.

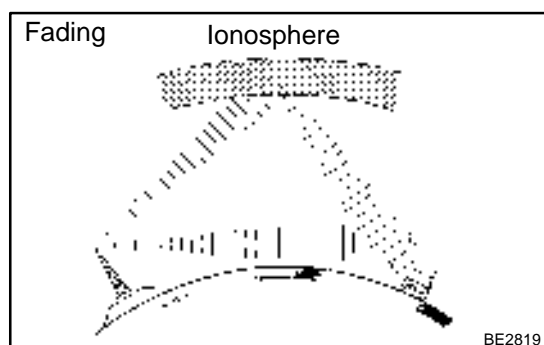

- Fading**
 Besides electrical interference, AM broadcasts are also susceptible to other types of interference, especially at night. This is because AM radio waves bounce off the ionosphere at night. These radio waves then interfere with the signals from the same transmitter that reach the vehicle's antenna directly. This type of interference is called "fading".

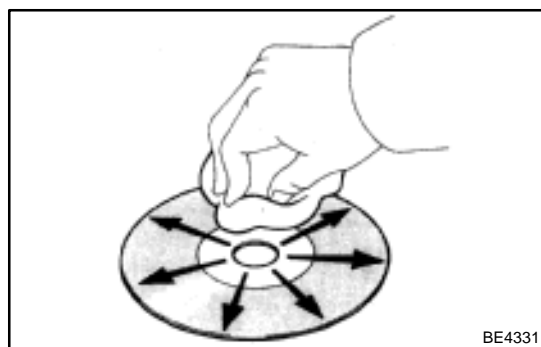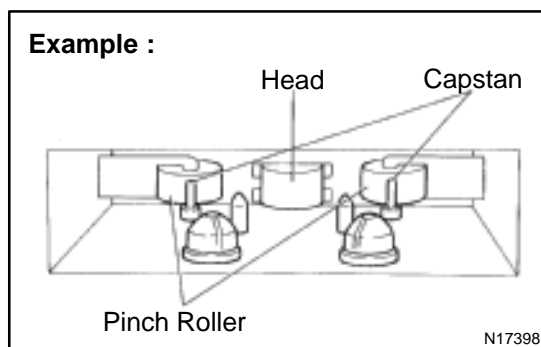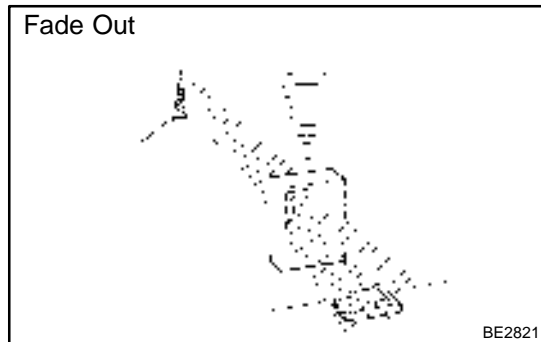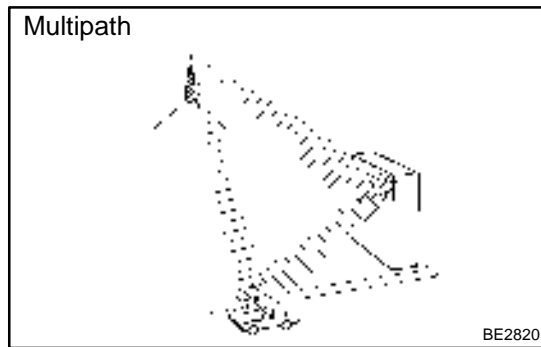

- **Multipath**
One type of interference caused by bouncing of radio waves off obstructions is called "multipath". Multipath occurs when a signal from the broadcast transmitter antenna bounces off buildings and mountains and interferes with the signal that is received directly.
- **Fade Out**
Because FM radio waves are of higher frequencies than AM radio waves, they bounce off buildings, mountains, and other obstructions. For this reason, FM signals often seem to gradually disappear or fade away as the vehicle goes behind a building or other obstructions. This is called "fade out".

4. Tape Player/Head Cleaning: MAINTENANCE

- Raise the cassette door with your finger. Next, using a pencil or similar object, push in the guide.
- Using a cleaning pen or cotton applicator soaked in cleaner, clean the head surface, pinch rollers and capstans.

5. CD Player/Disc Cleaning: MAINTENANCE

If the disc gets dirty, clean the disc by wiping the surface from the center to outside in the radial directions with a soft cloth.

NOTICE:

Do not use a conventional record cleaner or anti-static preservative.


TROUBLESHOOTING

1. DIAGNOSIS SYSTEM MODE (w/o Navigation system)

HINT:


Diagnosis System Mode is operated as follows.

In case of a vehicle without navigation system, there is no navigation check mode. However, other modes except for this are same as a vehicle with navigation system.

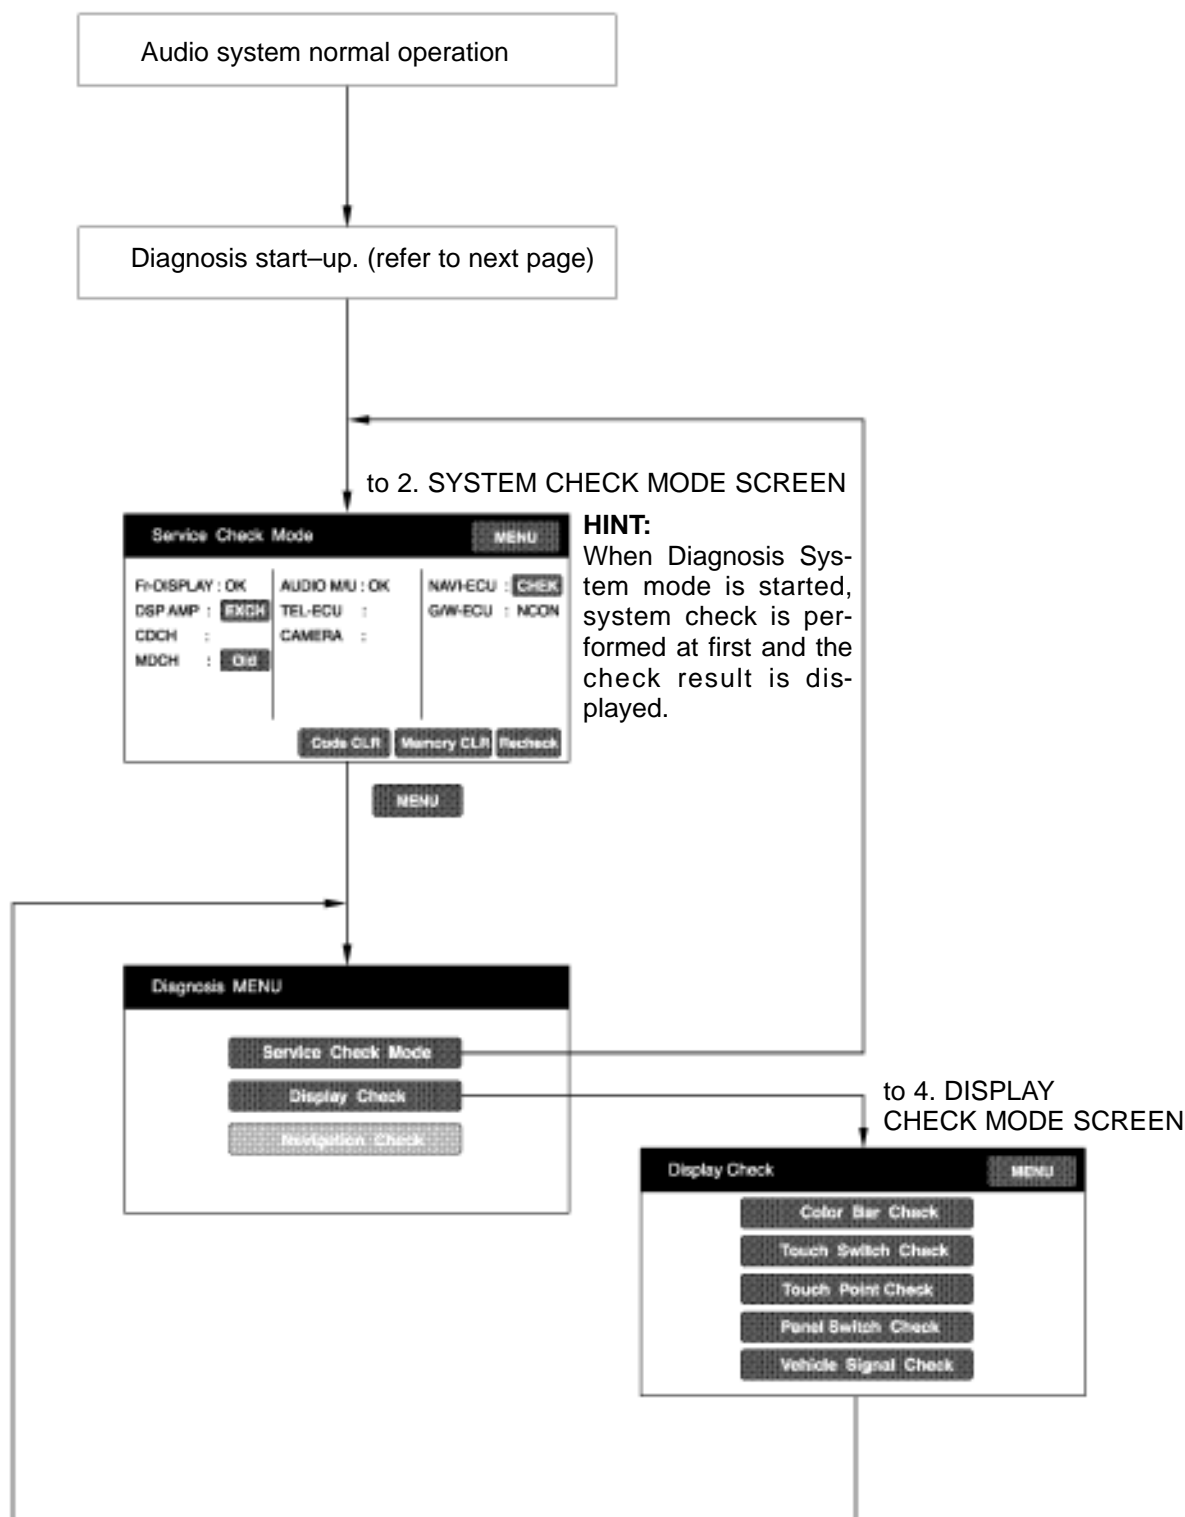


(a) DIAGNOSIS START-UP

To start the diagnosis menu, there are 2 ways: using a diagnosis check wire and using a switch.

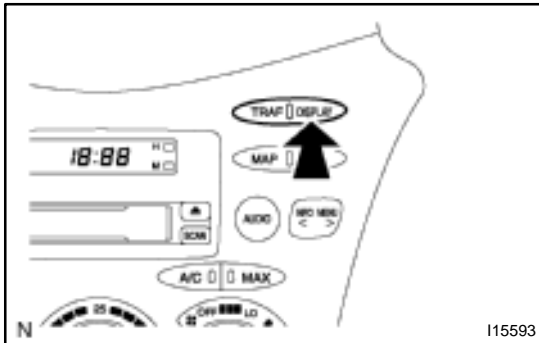

(b) START-UP BY SWITCH OPERATION

- (1) Vehicle speed is 0 km/h (0 mph).
- (2) Parking brake switch is pressed.
- (3) Press the Display switch to display the Screen Adjustment screen.

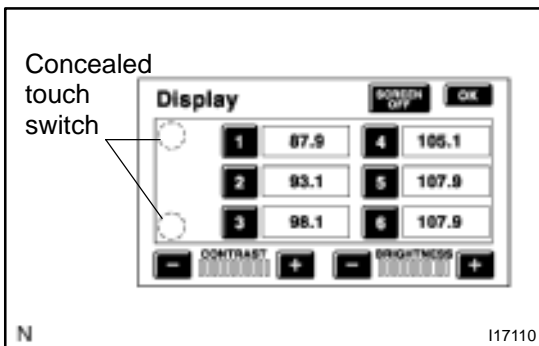

- (4) Repeatedly touch the upper and lower bottom parts of the left end of the screen 3 times.

(c) FINISHING DIAGNOSIS SYSTEM MODE

Turn the ignition switch from ACC to OFF to finish the mode. If it is started by switch operation.

2. DIAGNOSIS SYSTEM MODE (w/ Navigation system)

(See page [DI-789](#))

CLOCK

TROUBLESHOOTING

BE1UT-01

HINT:
Troubleshoot the clock according to the table below.

Troubleshooting	No.
Clock will not operate	1
Clock loses or gains time	2

± 1.5 seconds / day

Connector:

Clock Side:

Wire Harness Side:

I01856

1. TROUBLESHOOTING No.1

1	CLOCK WILL NOT OPERATE
---	------------------------


Clock Side:

Wire Harness Side:

e-4-2-D e-4-1-D


I01857

- (a) Check that the battery positive voltage is 10 – 16 V. If voltage is not as specified, replace the battery.
 - (b) Check that the DOME fuse is not blown. If the fuse is blown, replace the fuse and check for short.
 - (c) Troubleshoot the clock as follows.
- HINT:
Inspect the connector on the wire harness side.

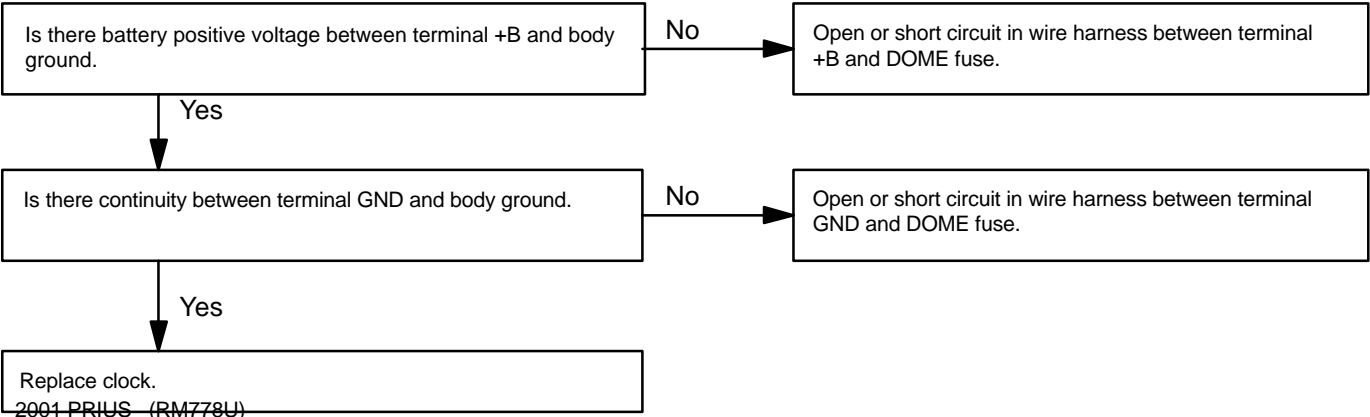

2. TROUBLESHOOTING NO.2

2 CLOCK LOSES OR GAINS TIME

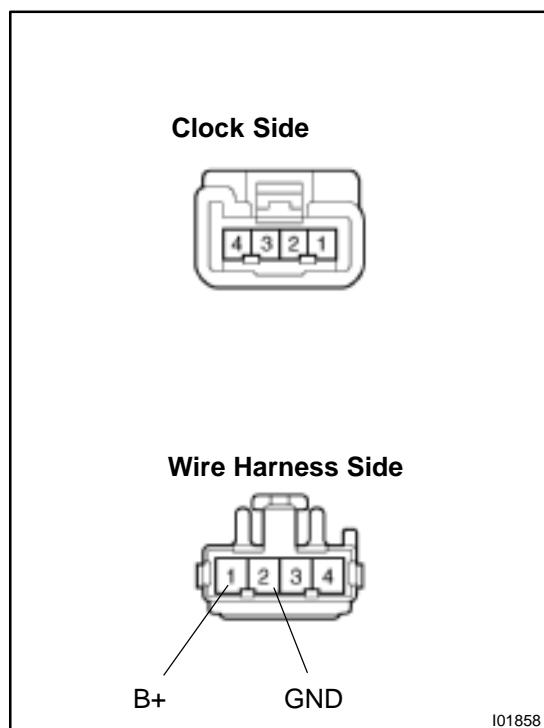

(a) Check that the battery positive voltage is 10 – 16 V. If voltage is not as specified, replace the battery.

(b) Inspect the error of the clock.

Allowable error (per day): ± 1.5 seconds

If the error exceeds the allowable error, replace the clock.


(c) Check that the clock adjusting button is sticking in position and has failed to return.

If the error exceeds the allowable error, replace the clock.

(d) Troubleshoot the clock as follows.

HINT:

Inspect the connector on the wire harness side.

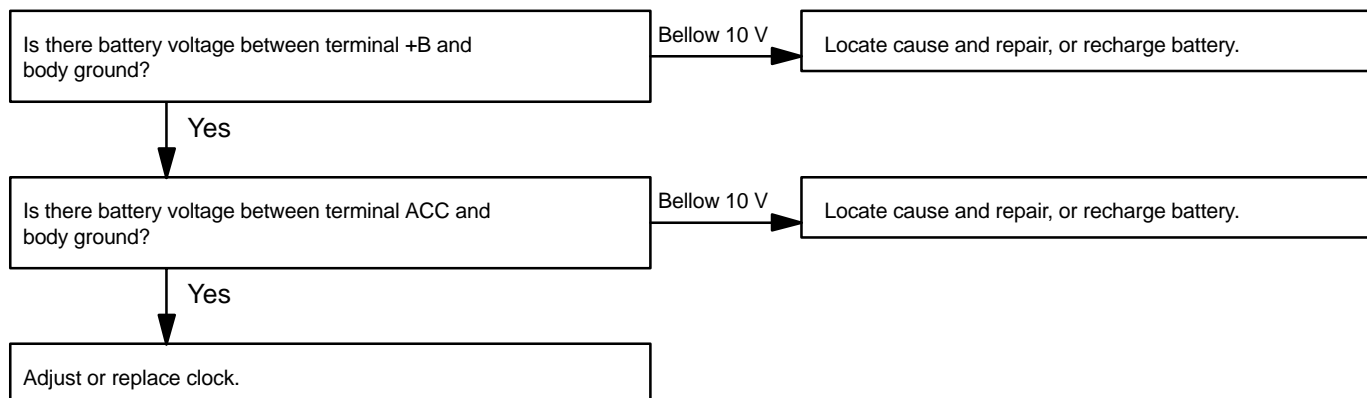

HYBRID VEHICLE IMMOBILISER SYSTEM

REGISTRATION PROCEDURE

1. THE COMMUNICATION BETWEEN THE HYBRID VEHICLE CONTROL ECU AND THE TRANSPONDER KEY ECU IS AS FOLLOWS

- (a) When the ignition is turned ON, the transponder key ECU checks if the key is pre-registered or not and sends the check result to the hybrid vehicle control ECU.
- (b) When the hybrid vehicle control ECU confirms that the key is pre-registered, it transmits its own ID (random numbers) to the transponder key ECU.
- (c) Receiving the ID, the transponder key ECU calculates internally and sends the calculated result back to the hybrid vehicle control ECU.
- (d) The hybrid vehicle control ECU rechecks the calculation inside the ECU.
When the calculation result corresponds to its own ID, this enables the engine to start.

2. PLEASE DO THE FOLLOWING PROCEDURES WHEN YOU EXCHANGE TRANSPONDER KEY ECU

HINT:

When replacing the transponder key ECU or hybrid vehicle control ECU, start the engine after leaving it for more than 30 minutes with the ignition switch ON position.

- (a) (Case 1):
Replace the transponder key ECU. →Register the new transponder key codes. →Leave more than 30 minutes with the ignition switch ON. →Start the engine.
- (b) (Case 2):
Replace the hybrid vehicle control ECU. →Leave more than 30 minutes with the ignition switch ON. →Start the engine.
- (c) (Case 3):
Replace the transponder key ECU and hybrid vehicle control ECU. →Register the new transponder key codes. →Start the engine.

3. IF ALL KEYS ARE LOST, OBSERVE THE FOLLOWING

- (a) Purchase a new transponder key ECU and a new key.
- (b) Replace the transponder key ECU with new one.
- (c) Insert a new key into the key cylinder, turn the ignition switch ON and leave it as it is for 30 min.

4. SETTING HYBRID VEHICLE IMMOBILISER SYSTEM

- (a) Removing a key from the key cylinder sets hybrid vehicle immobiliser system.
- (b) When 20 sec is elapsed after the key is turned from ignition switch ON to ACC or LOCK, the hybrid vehicle immobiliser is set.

5. UNSETTING HYBRID VEHICLE IMMOBILISER SYSTEM

Insert a key into the key cylinder

(Under this condition, transponder key ECU starts communication with the transponder chip built in the key. When the ID code in the chip coincides with that registered in ECU consecutively 2 times, the hybrid vehicle immobiliser system is reset).


6. KEY REGISTRATION IN AUTOMATIC REGISTRATION MODE

(a) Registration of a new transponder key.

HINT:


- This must be done when you install a new transponder key ECU.
- It is possible to register up to 2 master key codes and a sub key code.
- In the automatic registration mode, the last key registered becomes sub-key.

(b) Initial condition: Battery connected, no key in key cylinder.

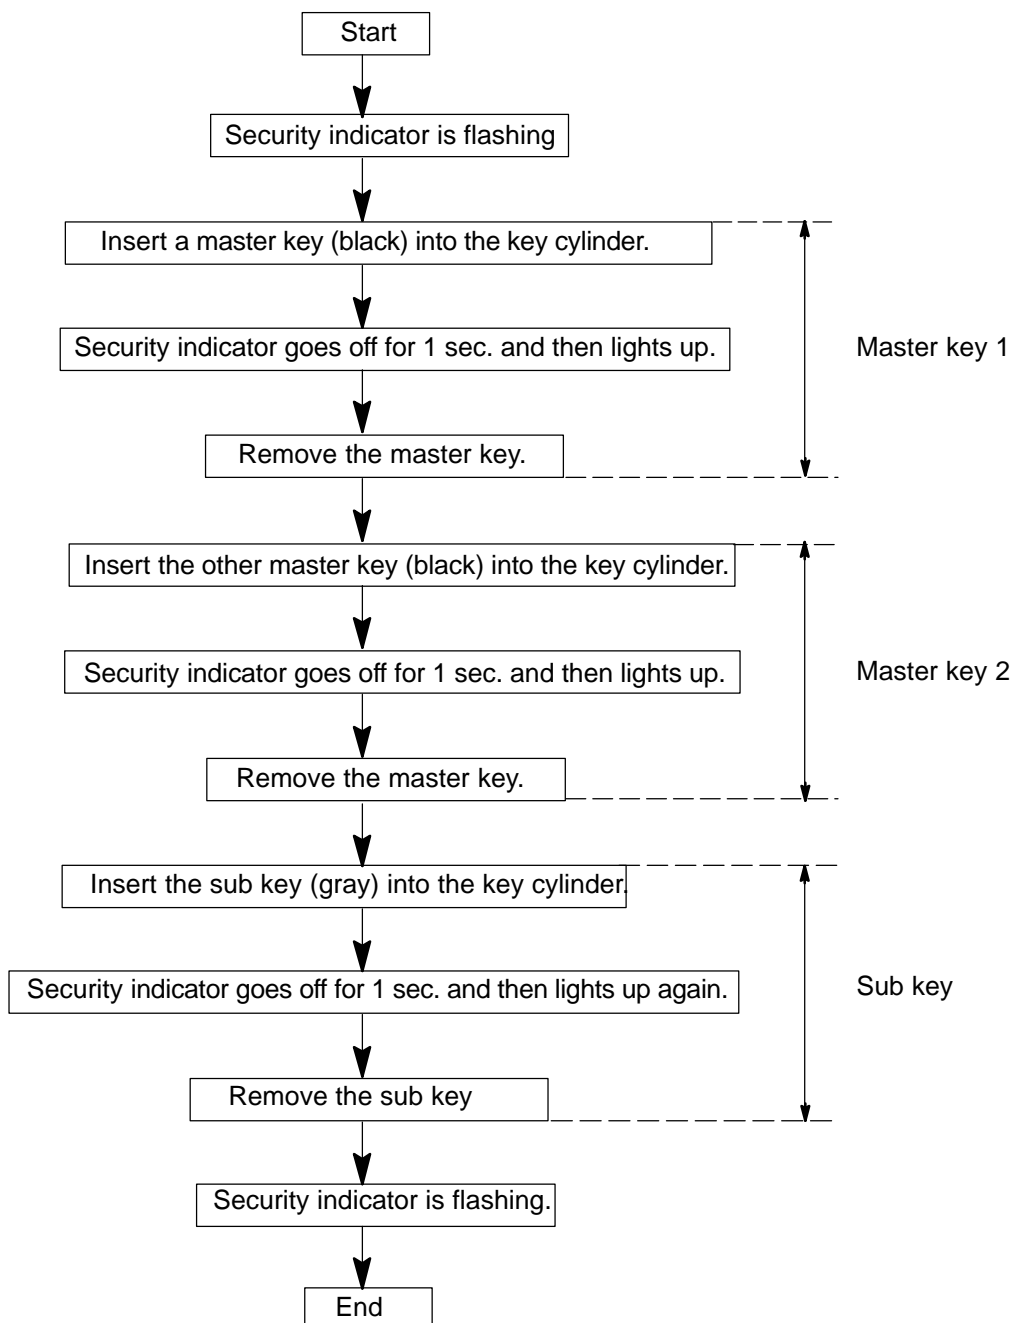

HINT:

- When a key is not inserted in the key cylinder on the automatic registration mode, the security indicator always lights on.
- When the immobiliser system operates normally and the key is pull out, the security indicator blinks.
- When key code registration could not be performed on the automatic registration mode, code 2-1 is output from the security indicator and when inserting the already registered key, code 2-2 is output.

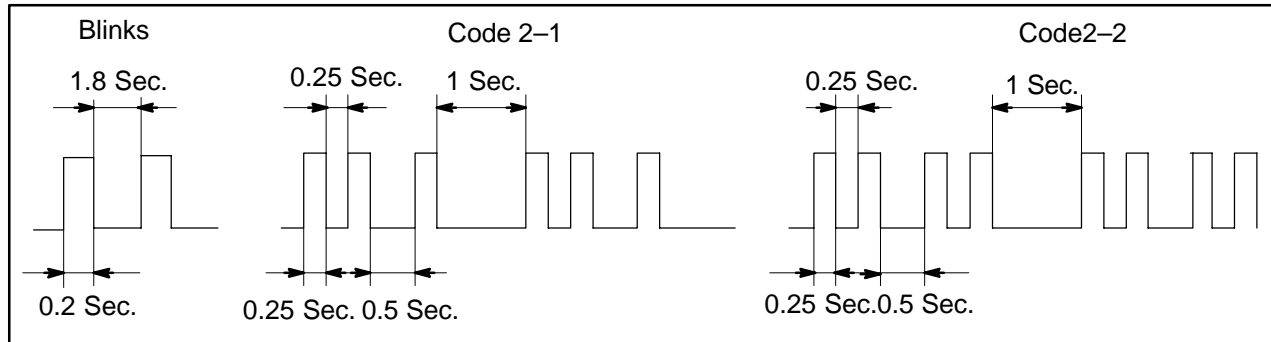


(c) Automatic registration mode completion

If completing the mode forcibly when more than 1 key code have been registered on the automatic registration mode, perform the following procedures.

After 1 more key code have been registered with master key, turn the ignition switch from LOCK to ON 5 times within 10 secs. after inserting the already registered key or without pulling the key out.

7. REGISTERING MASTER KEY

Initial condition: All doors closed, not key in cylinder.

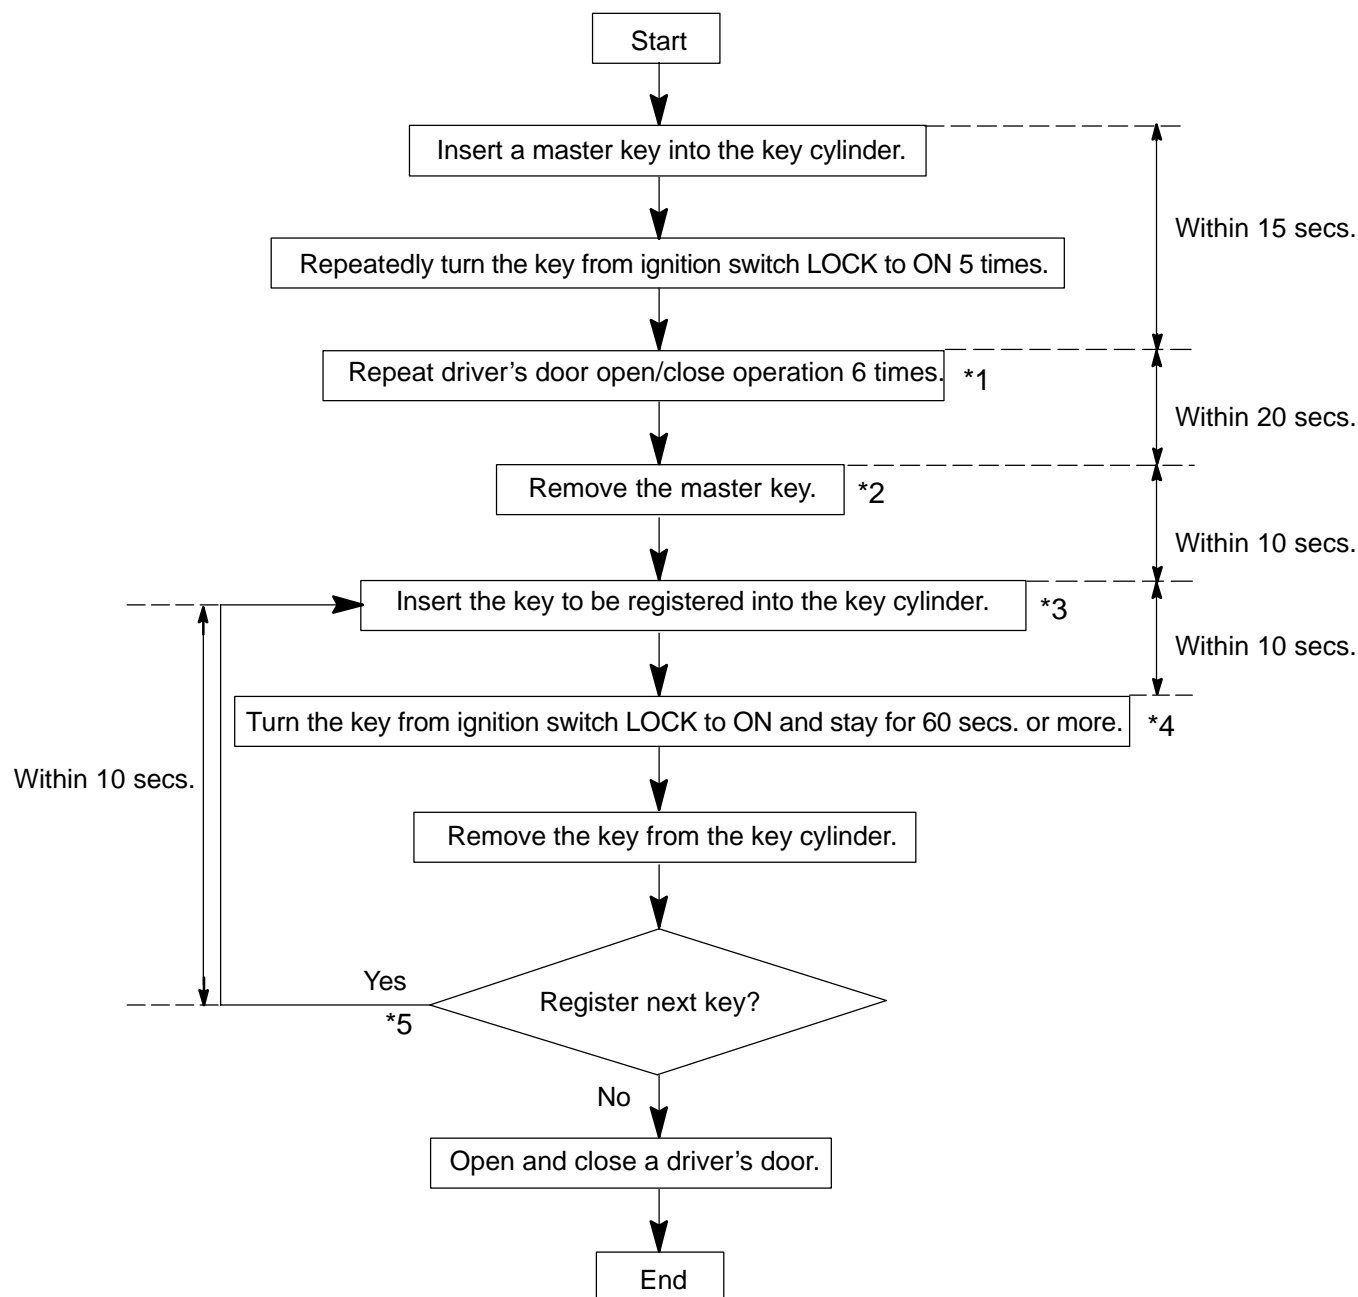

*1: The 1st door's open/close operation should be within 15 sec after key insertion.

*2: Remove the key within 20 sec. after the 1st door's open/close operation.


*3: Insert the key within 10 sec. after preceding key removal.

*4: Turn the key from ignition switch LOCK to ON within 10 sec. after key insertion.

*5: If registering the other key, insert it into the key cylinder within 10 sec.

8. REGISTERING SUB-KEY

Initial condition: All doors closed, not key in cylinder.

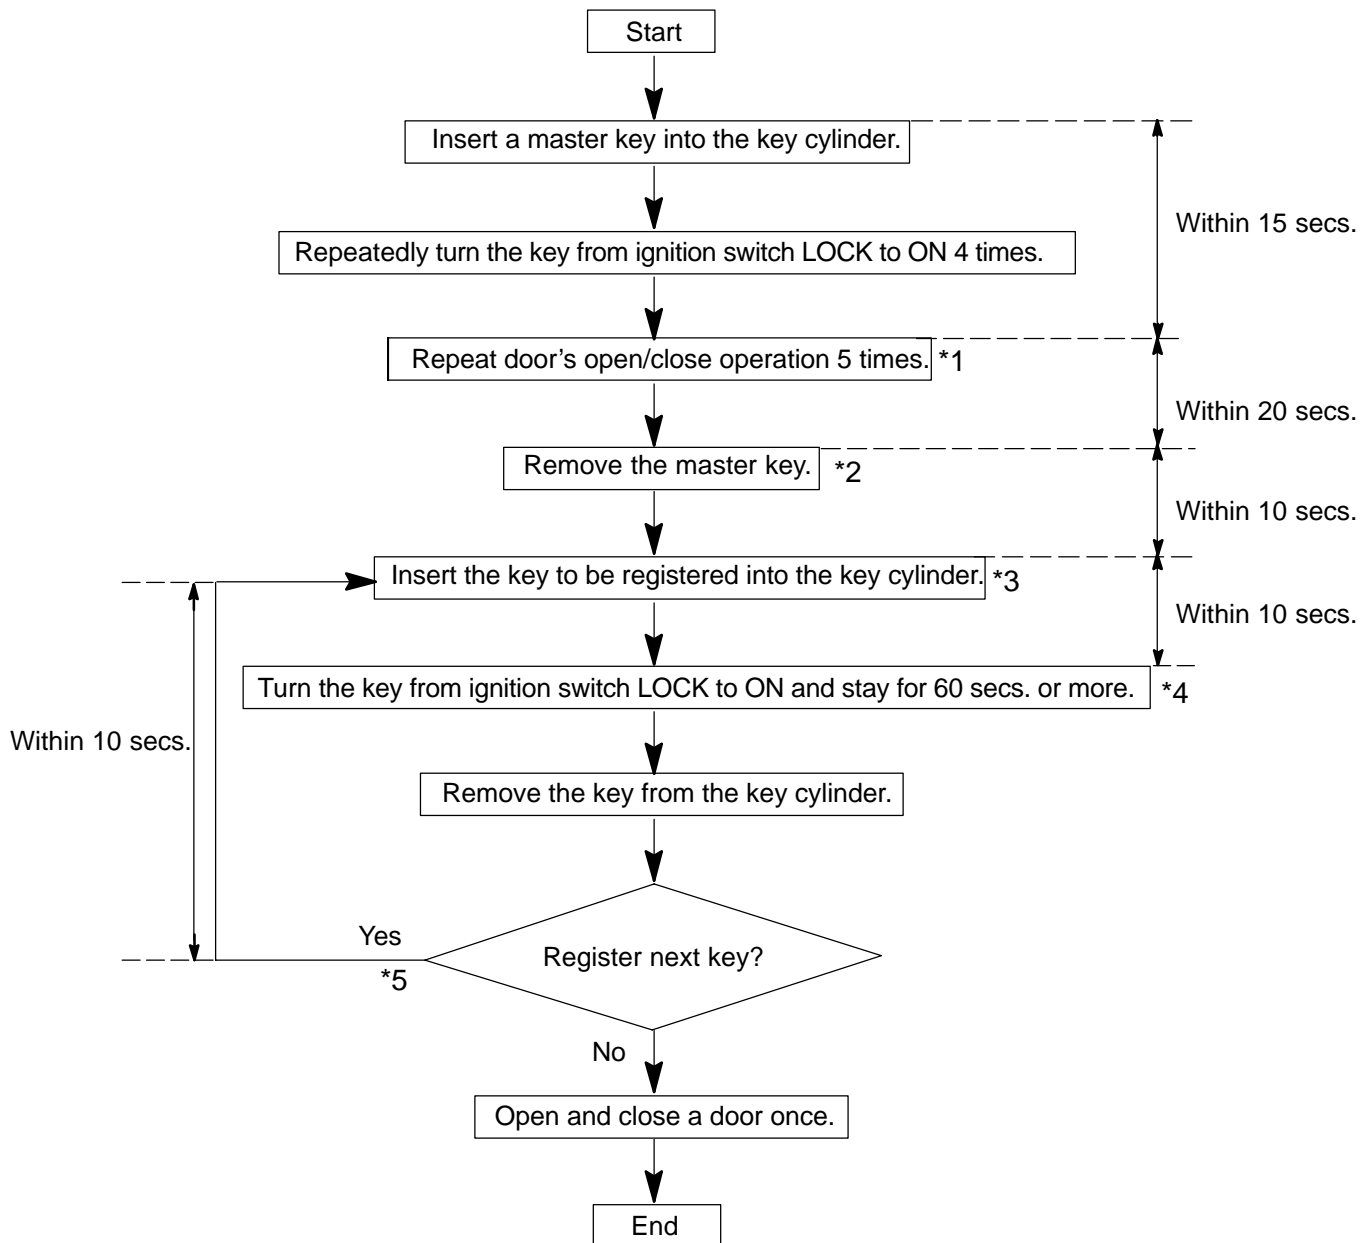

*1: The 1st door's open/close operation should be within 15 sec after key insertion.

*2: Remove the key within 20 sec. after the 1st door's open/close operation.

*3: Insert the key within 10 sec. after preceding key removal.

*4: Turn the key from ignition switch LOCK to ON within 10 sec. after key insertion.

*5: If registering the other key, insert it into the key cylinder within 10 sec.


9. ERASURE OF TRANSPONDER KEY CODE

(a) Do this operation to erase transponder key registration from the transponder key ECU.

HINT:


Delete all other master and sub-key codes leaving the master key code to use the operation. When using the key which was used before deletion, it is necessary to register the code again.

(b) Initial condition: All doors closed, not key in cylinder.

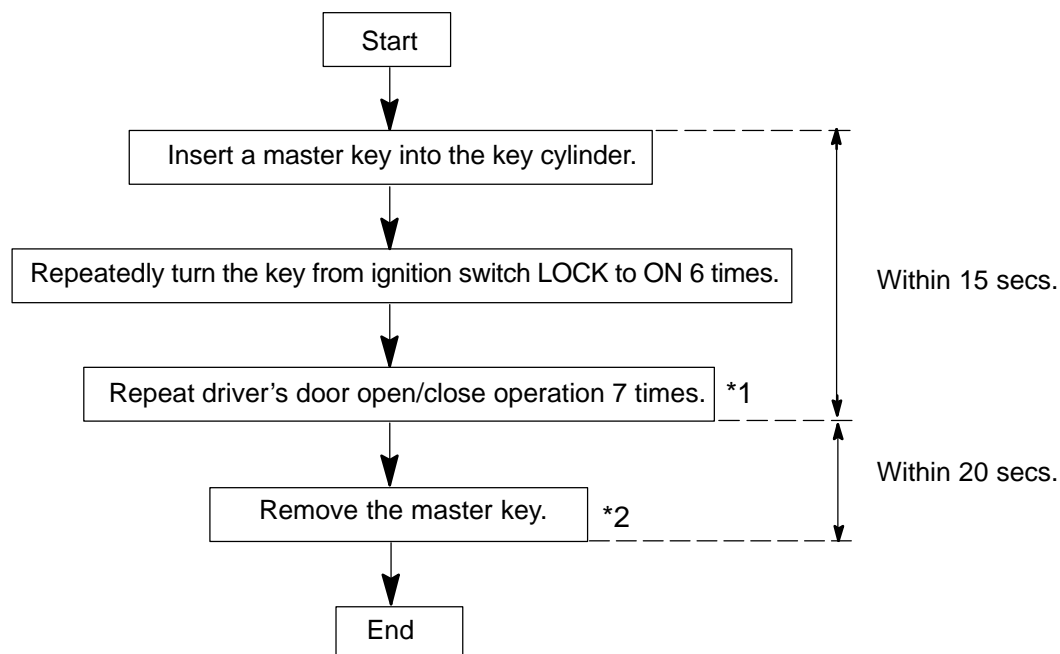

*1: The 1 st door's open/close operation should be done within 15 sec after key insertion.

*2: Remove the key within 20 sec. after the 1 st door's open/close operation.

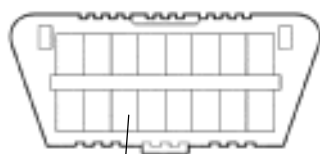
Check Connector

OP1

I17846

PRE-CHECK**1. TRANSPONDER KEY ECU INPUT CONDITION DISPLAY READ CODE**

- (a) Connect the positive (+) lead from the volt meter (Analog Type) to OP1 of the check connector and the negative (–) lead to E1 of the check connector.

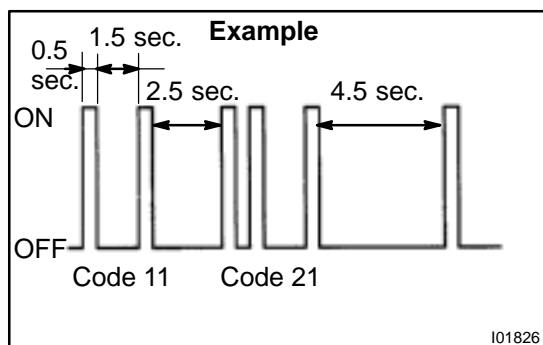

- (b) Insert the ignition key in the key cylinder.
(c) Read the code from the movement of the tester needle.
If no code is output, turn the ignition switch ON.

If a code is now output, check if the DOME fuse is blown.

HINT:

- The code can be read using a luminous diode (Recommend activation current 10 – 20 mA) instead of a tester.
- A digital tester can also be used.

Display condition:

- When there are multiple codes, they are output in order starting from the lowest code.
- After all the codes are output, Lo is displayed for 4.5 secs., then all the code are output again starting from the lowest code.
- If the situation changes during code output, Lo is output for 4.5 secs. after output of the current code ceases, then the codes are output again starting from the lowest code. E.g. while 11 (out of 11 and 21) is being output, conditions change and 12 is added. So after 11 is output, Lo is output for 4.5 secs., then 11, 12 and 21 are output.

2. TRANSPONDER KEY ECU INPUT CONDITION DISPLAY CODE LIST


Code	Output condition
11	Key unlock warning switch ON (Ignition key inserted)
12	Any door is open. (Door courtesy switch ON)
13	Ignition switch at ON position
21	Master key is inserted in key cylinder and the immobiliser system is OFF.
22	Sub key is inserted in key cylinder and immobiliser system is OFF.
31	Key code recorded in transponder key ECU differs from code of key inserted in key cylinder.
32	Transponder key code cannot be read.
33	Key code cannot be read because format of chip inside key is wrong.
34	Transponder key ECU has no memory space to register key code.
52	Hybrid vehicle control ECU is unlocked.

53	Hibrid vehicle control ECU code is error.
54	Hibrid vehicle control ECU is check-sum error.
55	Hibrid vehicle control ECU is factory code initialling.
58	No response from hibrid vehicle control ECU


3. TRANSPONDER KEY ECU INPUT CONDITION DISPLAY MALFUNCTION LIST

Symptom	Cause
No code is output.	1. DOME Fuse 2. Wire harness or connector 3. Transponder key ECU
Even when key is inserted in key cylinder, Code 11 is not output.	1. Key unlock warning switch 2. Wire harness or connector 3. Transponder key ECU
Code 12 is not output when the door is open.	1. Door courtesy switch 2. Wire harness or connector 3. Transponder key ECU
Code 13 is not output when ignition switch ON.	1. IGN Fuse 2. Wire harness or connector 3. Transponder key ECU
Code 31 is not output when key is inserted in key cylinder.	Key code is not registered.
Code 32 is output.	1. Transponder key coil 2. Transponder key ECU 3. Wire harness or connector
Code 33 is output.	Transponder key ECU
Code 34 is output.	Transponder key ECU has no memory space to register key code.
Code 51–58 is output.	1. Hibrid vehicle control ECU 2. Transponder key ECU


4. TROUBLE SHOOTING

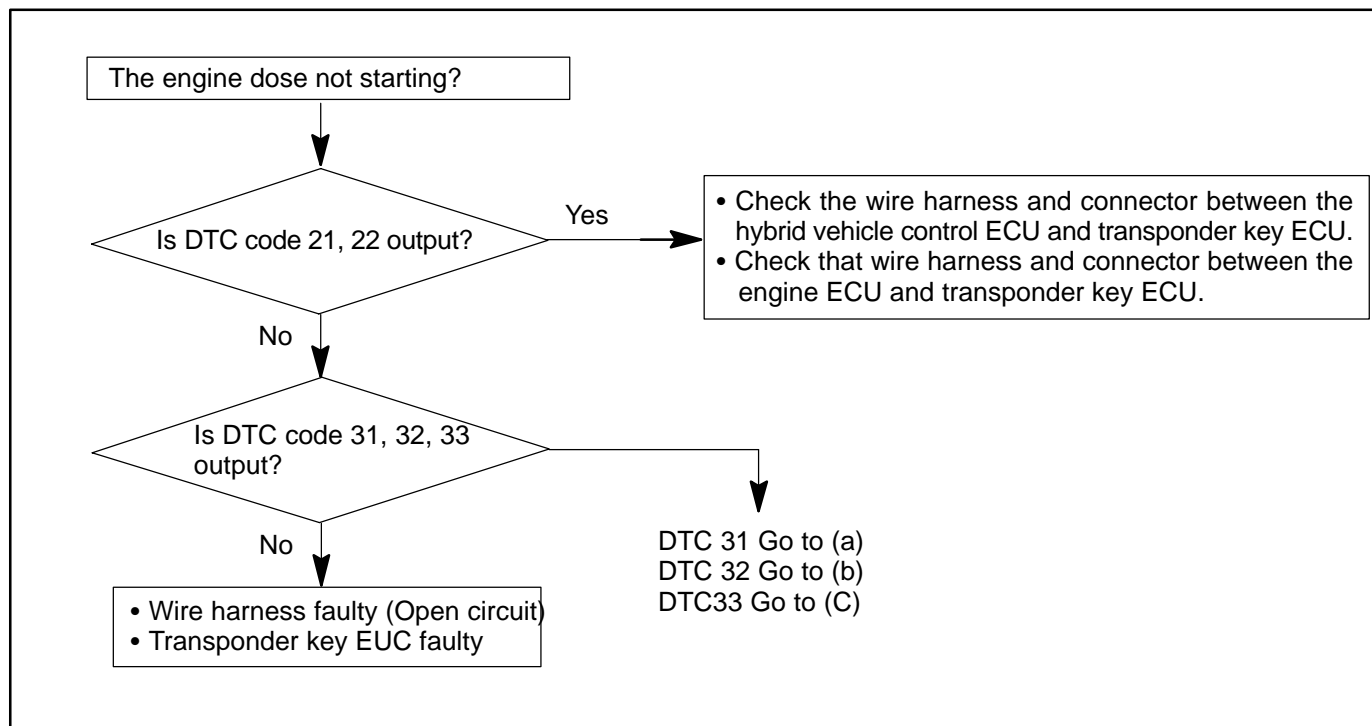


- If code 31 is output, troubleshoot according to this flow chart.

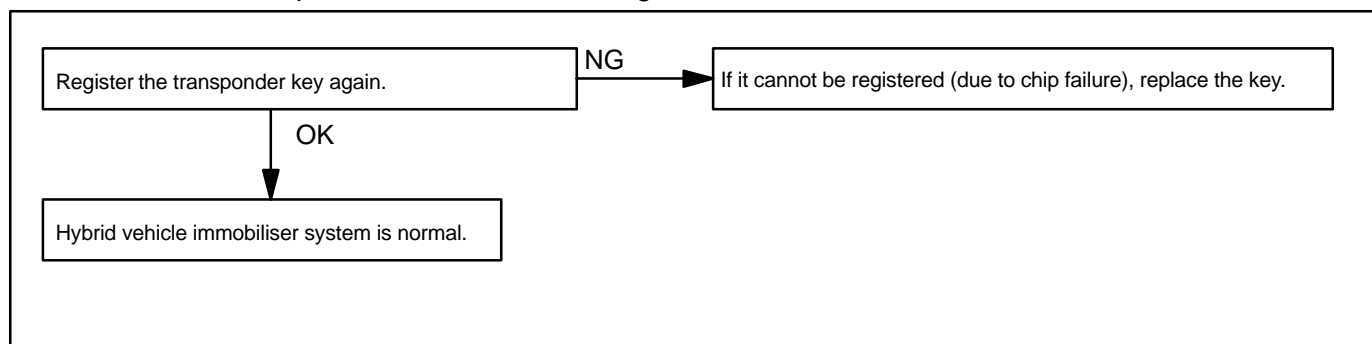

- If code 32 is output, troubleshoot according to this flow chart.

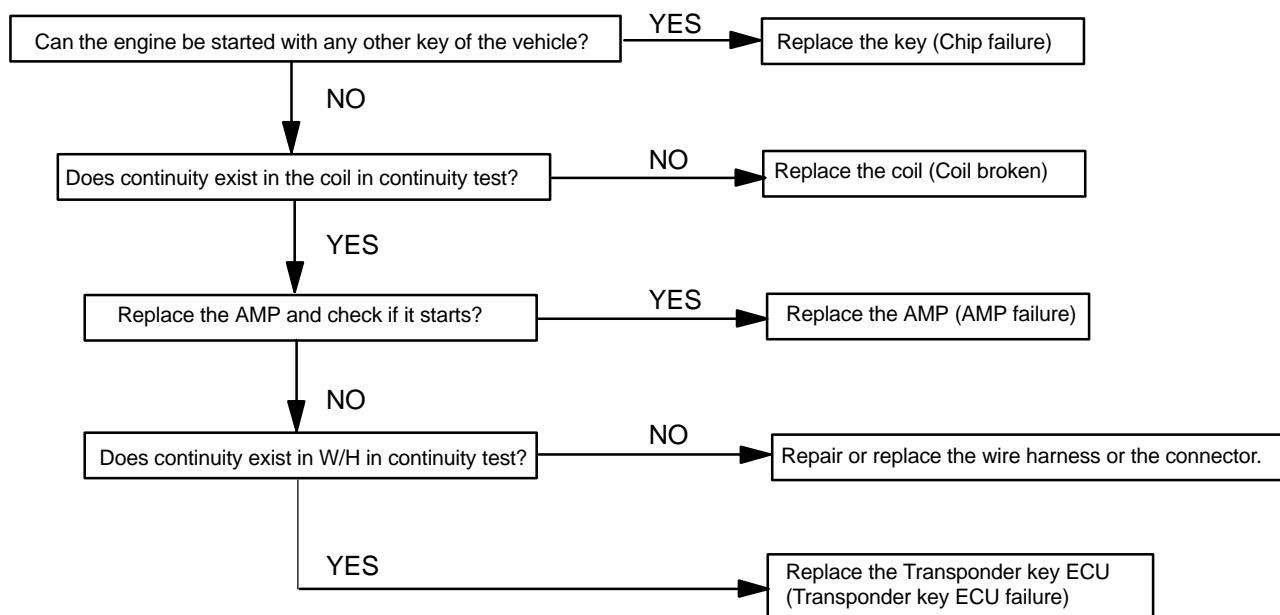

- If code 33 is output, troubleshoot according to this flow chart.

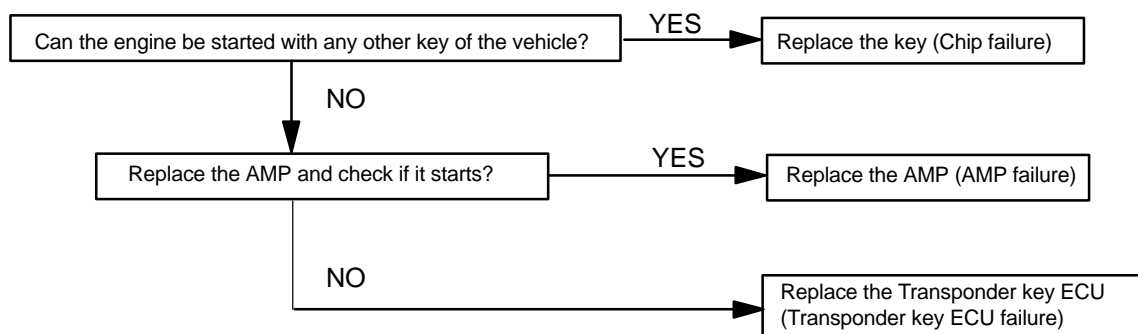



INSPECTION


1. INSPECT HORN SWITCH

- Disconnect the negative (–) terminal from the battery.
- Remove the left and right covers from the steering wheel.
- Using a torx socket wrench, loosen the 2 bolts.
- Pull up the horn pad and place it on the steering column, as shown.

HINT:

Do not disconnect the connector from the horn pad.

- Disconnect the connector from the slip ring.

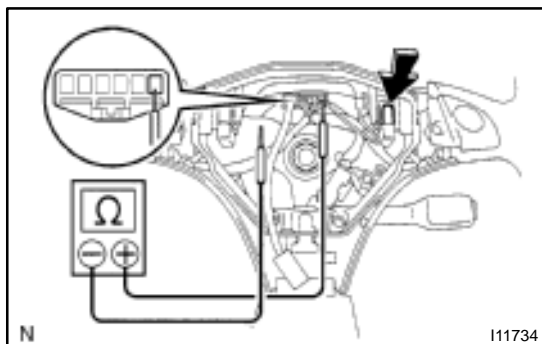


- Check that no continuity exists between terminal 6 of the connector and body ground.
- Check that continuity exists between terminal 6 of the connector and body ground when the horn contact plate is pressed against the steering spoke assembly.

If continuity is not as specified, repair or replace the steering wheel or wire harness as necessary.

- Install the horn pad in place and using a torx socket wrench, torque the 2 bolts.

Torque: 7.1 N·m (72 kgf·cm, 62 in.-lbf)


- Install the left and right covers.
- Connect the negative (–) terminal to the battery.

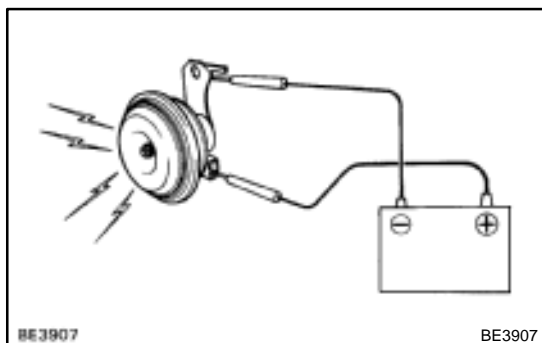

2. INSPECT HORN OPERATION

Connect the positive (+) lead from the battery to the terminal and negative (–) lead to the horn body and check that the horn blows.

If operation is not as specified, replace the horn.

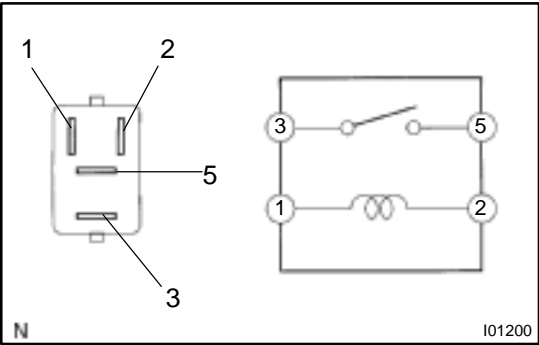

3. INSPECT HORN RELAY CONTINUITY

Condition	Tester connection	Specified condition
Constant	1 – 2	Continuity
Apply B+ between terminals 1 and 2.	3 – 5	Continuity

If continuity is not as specified, replace the relay.







CLIP
REPLACEMENT

BO020-06


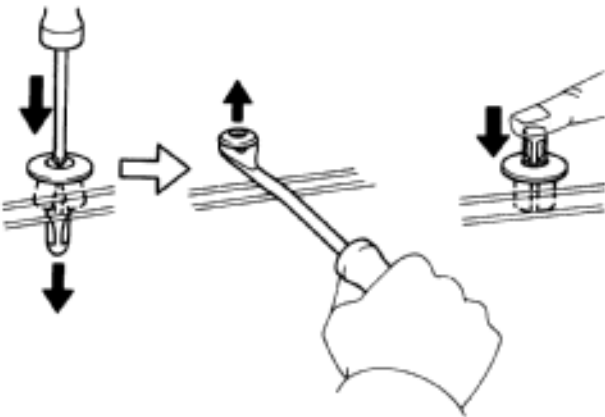
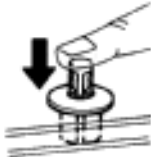

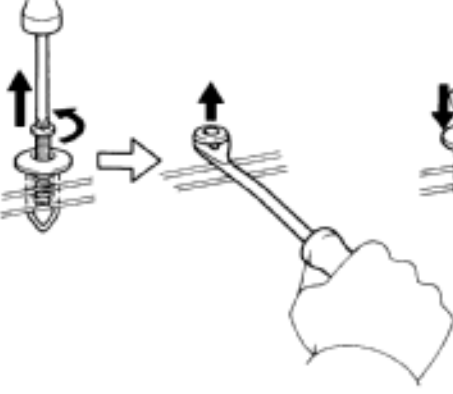

The removal and installation methods of typical clips used in body parts are shown in the table below.

HINT:

If the clip is damaged during the operation, always replace it with a new clip.

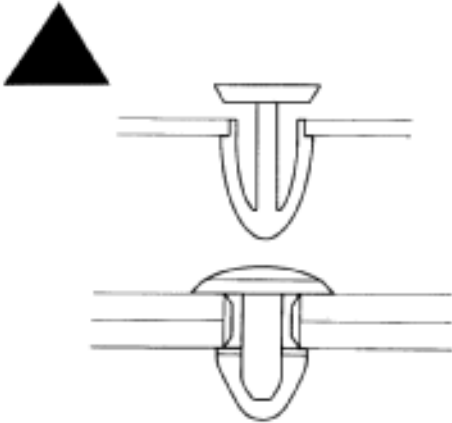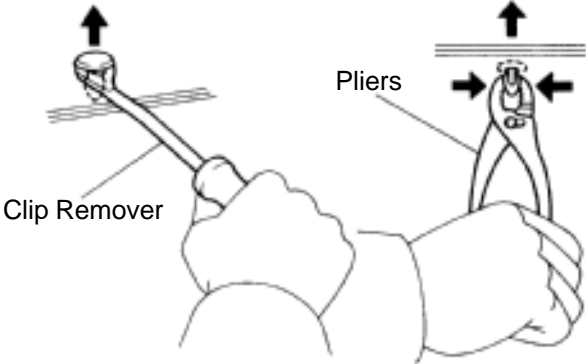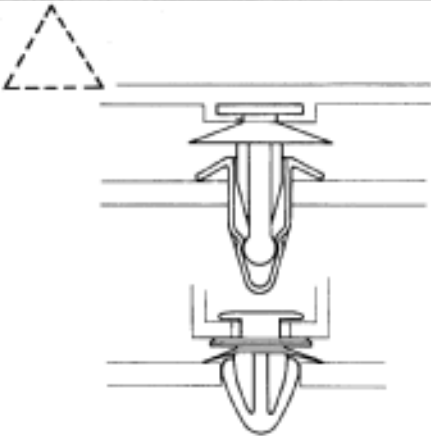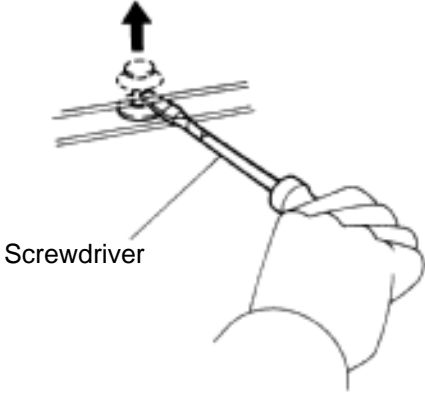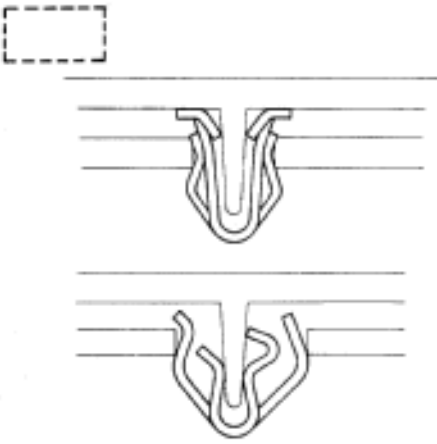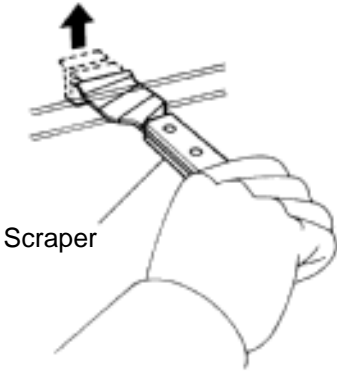Shape (Example)	Removal/Installation
	 <p>Clip Remover</p> <p>Pliers</p>
	 <p>Screwdriver</p>
	 <p>Scraper</p>

V00005

Shape (Example)	Removal/Installation
	<div>Removal</div>  <div>Installation</div> 
	<div>Removal</div>  <div>Installation</div> 

V00012

cardiagn.com


SRS AIRBAG

PRECAUTION

B00XI-05

The PRIUS is equipped with an SRS (Supplemental Restraint System) such as the driver airbag, front passenger airbag and side airbag. Failure to carry out service operation in the correct sequence could cause the SRS to unexpectedly deploy during servicing, possibly leading to a serious accident. Before servicing (including removal or installation of parts, inspection or replacement), be sure to read the precautionary notices in the RS section.

cardiagn.com

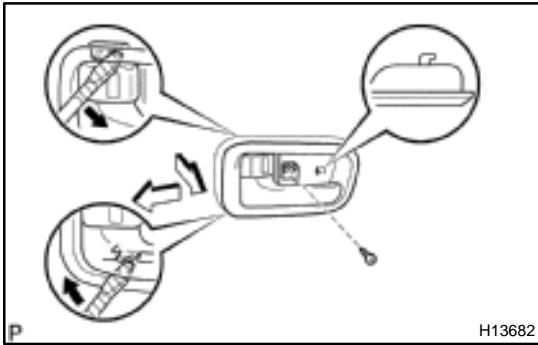

DISASSEMBLY

1. REMOVE INSIDE HANDLE BEZEL

- (a) Using a screwdriver, open the screw cap.

HINT:


Tape the screwdriver tip before use.

- (b) Remove the screw.

- (c) Using a screwdriver, remove the inside handle bezel as shown in the illustration.

HINT:

Tape the screwdriver tip before use.

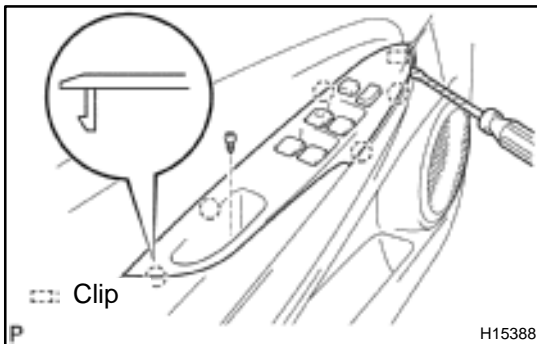

2. REMOVE POWER WINDOW SWITCH


- (a) Remove the screw.

- (b) Using a screwdriver, remove the power window switch.

HINT:

Tape the screwdriver tip before use.

- (c) Disconnect the connectors.

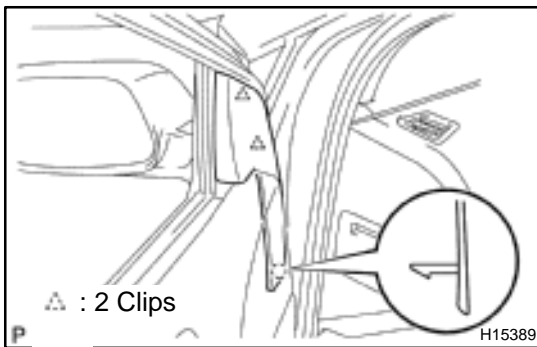


3. REMOVE LOWER FRAME BRACKET GARNISH

- (a) Using a screwdriver, remove the lower frame bracket garnish.

HINT:

Tape the screwdriver tip before use.

- (b) Remove the front flame cover.

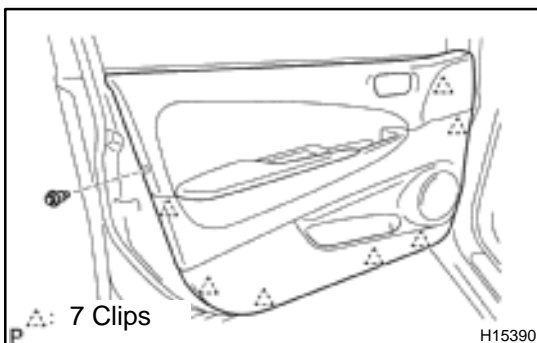

4. REMOVE DOOR TRIM

- (a) Remove the clip.

- (b) Insert a screwdriver between the door panel and door trim to pry the trim out.


NOTICE:

Be careful not damage the door panel and trim.

HINT:


Tape the screwdriver tip before use.

- (c) Pull the door trim upward to remove it.

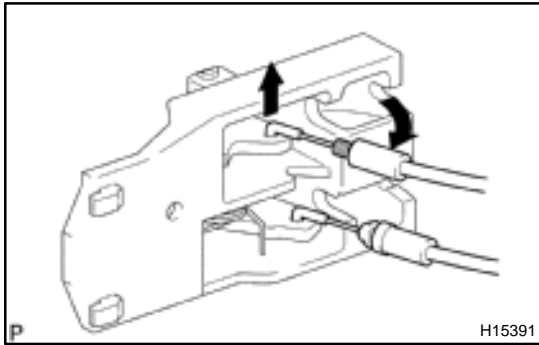

5. REMOVE INSIDE HANDLE

Remove the screw and inside handle, disconnect the 2 cables from the inside handle as shown in the illustration.

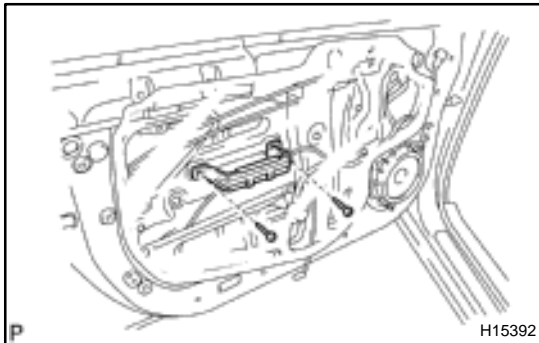

6. REMOVE SERVICE HOLE COVER


- Remove the 2 screws and door trim No. 1 bracket.
- Remove the 2 grommets.
- Remove the service hole cover.

NOTICE:

Do not tear the cover.

HINT:

- At the time of reassembly, please refer to the following item.
- Bring out the 2 control cables and wire harness through the service hole cover.

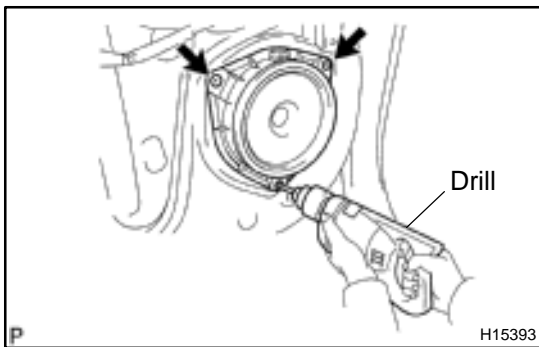


7. REMOVE SPEAKER


- Disconnect the connector.
- Using a drill of less than $\varnothing 4$ mm (0.16 in), drill out the rivet heads and remove the speaker.
- Gently and vertically put the drill to the rivet, and cut the rivet flanges.

NOTICE:

- Prizing the hole with a drill can lead to damage to the rivet hole or breaking the drill.**
 - Take care as the cut rivet is hot.**
- Even if flange is taken off, continue drilling and push out remaining fragments with the drill.
 - Using a vacuum cleaner, remove the drilled rivet and their dust from the inside of the door.

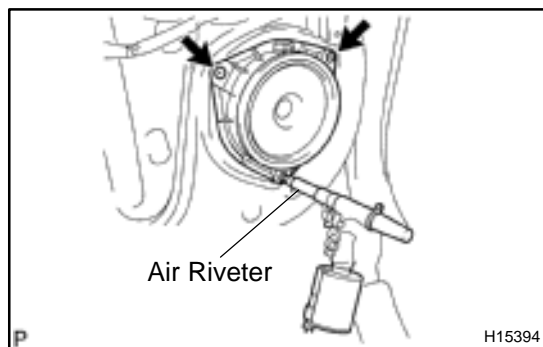**HINT:**

At the time of reassembly, please refer to the following item.
Using an air riveter and nose piece No.1, strike rivets into the door panel to install the speaker to the door panel.

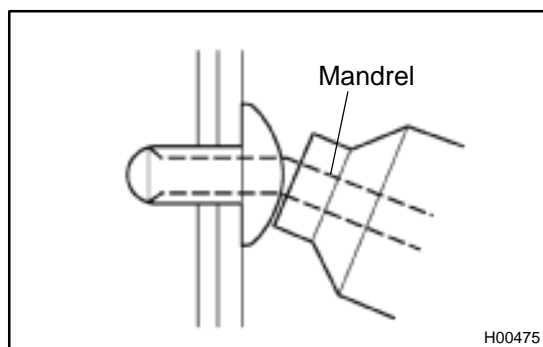**NOTICE:**

At the time of reassembly, please refer to the following item.

If the rivet is not positioned perpendicularly it will bend the mandrel. When the trigger is then pulled, it may damage the air riveter.

8. REMOVE OUTSIDE VIEW MIRROR

- (a) Disconnect the connector.
- (b) Remove the 3 nuts and out side view mirror.



Torque: 7.8 N·m (80 kgf·cm, 69 in.-lbf)

9. REMOVE DOOR BELT MOULDING


Using a scraper, remove the door belt moulding.

HINT:

Tape the scraper tip before use.

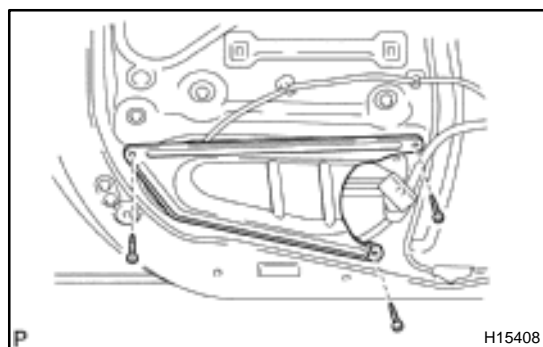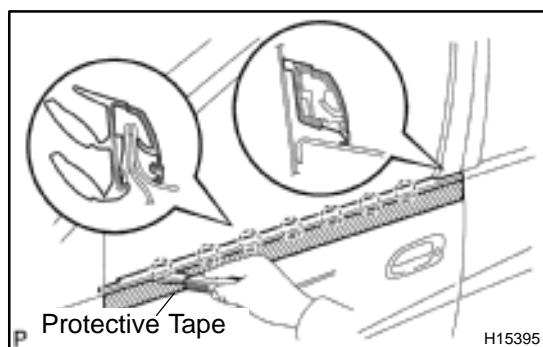10. REMOVE DOOR LOCK SILENCER**11. REMOVE DOOR GLASS**

- (a) Remove the 3 bolts and reinforce inside extension.

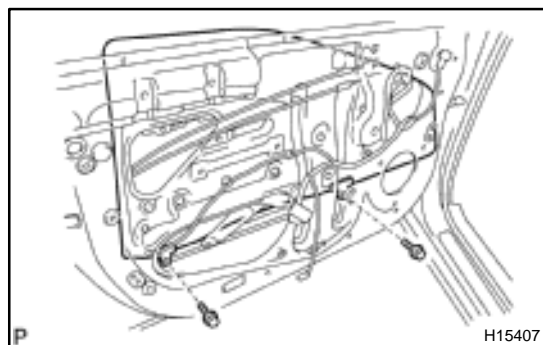

- (b) Open the door glass until the door belts appear in the service hole.
- (c) Remove the 2 bolts.

NOTICE:

Be careful not to drop the door glass.


- (d) Pull the door glass upward to remove it.

12. REMOVE DOOR GLASS RUN**13. REMOVE LOWER FLAME**

Remove the 2 nuts, plate and lower flame.

14. REMOVE WINDOW REGULATOR

- (a) Disconnect the connector.

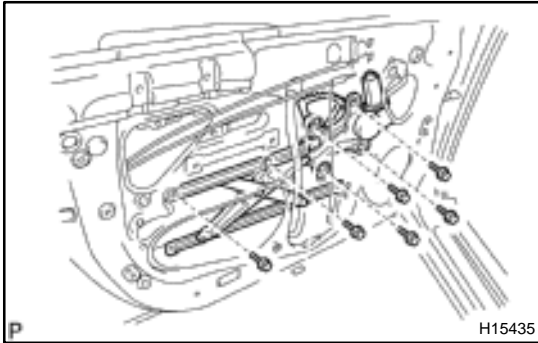

- (b) Remove the 2 bolts from the window regulator.

Torque: 4.9 N·m (50 kgf·cm, 43 in.-lbf)

- (c) Remove the 4 bolts and window regulator.

Torque: 8.3 N·m (85 kgf·cm, 74 in.-lbf)


HINT:

At the time of reassembly, please refer to the following item.
Apply MP grease to the window regulator.

NOTICE:

At the time of reassembly, please refer to the following item.

Do not apply grease to the spring of the window regulator.

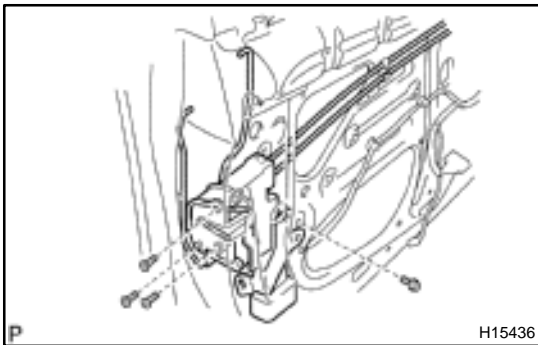**15. REMOVE DOOR LOCK**

- (a) Disconnect the control cable from the clamp.
(b) Disconnect the 2 links from the outside handle and key cylinder.

- (c) Disconnect the connector.

- (d) Remove the bolt.

Torque: 4.9 N·m (50 kgf·cm, 43 in.-lbf)

- (e) Remove the 3 screws and door lock.


Torque: 4.9 N·m (50 kgf·cm, 43 in.-lbf)

HINT:


At the time of reassembly, please refer to the following item.

- Apply adhesive to the 3 screws.

Part No. 08833-00070, THREE BOND 1324 or equivalent

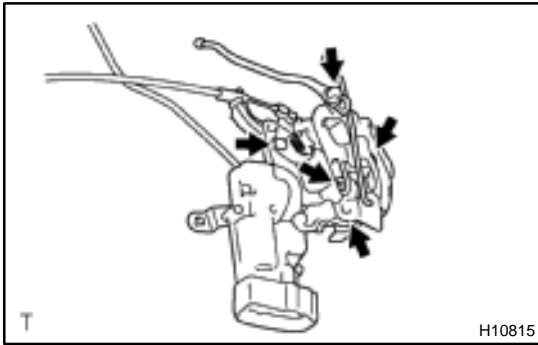

- Apply MP grease to the sliding and rotating parts of the door lock.
- 16. REMOVE OUTSIDE HANDLE**
- (a) Remove the 2 bolts and outside handle.
Torque: 5.4 N·m (55 kgf·cm, 48 in.·lbf)
 - (b) Remove the key cylinder from the handle.

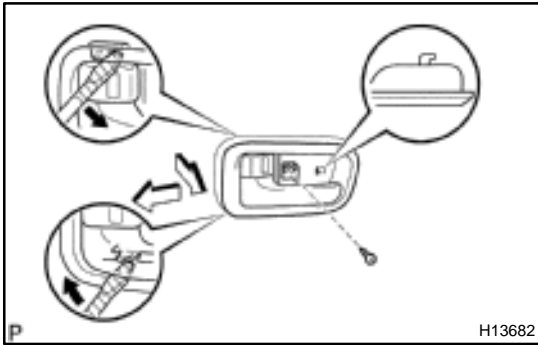

DISASSEMBLY

1. REMOVE INSIDE HANDLE BEZEL

- (a) Using a screwdriver, open the screw cap.

HINT:


Tape the screwdriver tip before use.

- (b) Remove the screw.

- (c) Using a screwdriver, remove the inside handle bezel as shown in the illustration.

HINT:

Tape the screwdriver tip before use.

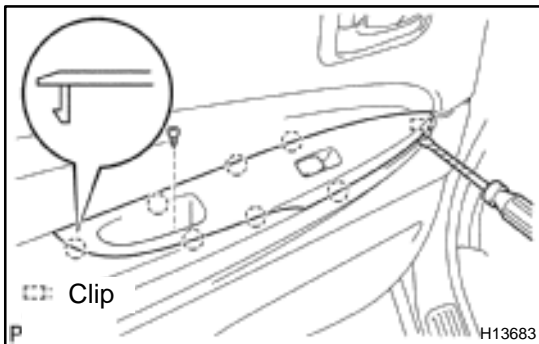

2. REMOVE POWER WINDOW SWITCH


- (a) Remove the screw.

- (b) Using a screwdriver, remove the power window switch.

HINT:

Tape the screwdriver tip before use.

- (c) Disconnect the connector.

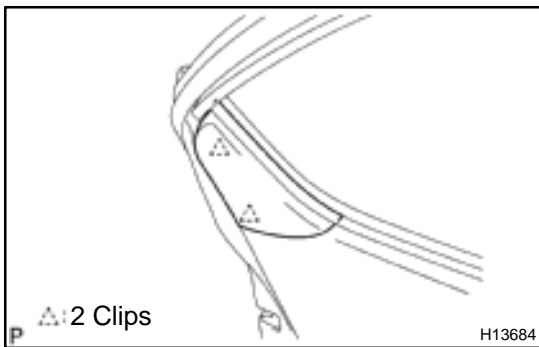


3. REMOVE REAR DOOR LOWER BRACKET GARNISH

Using a screwdriver, remove the rear door lower bracket garnish.

HINT:

Tape the screwdriver tip before use.

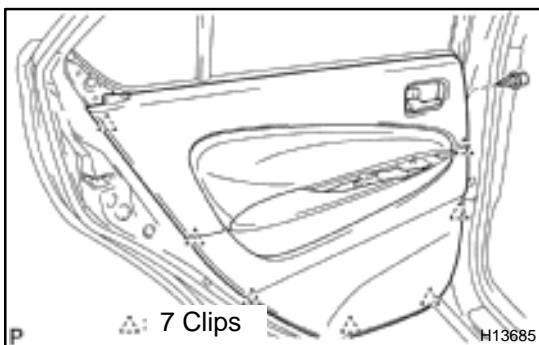

4. REMOVE DOOR TRIM

- (a) Remove the clip.

- (b) Insert a screwdriver between the door panel and door trim to pry the trim out.


NOTICE:

Be careful not to damage the door panel and trim.

HINT:

Tape the screwdriver tip before use.


- (c) Pull the trim upward to remove it.

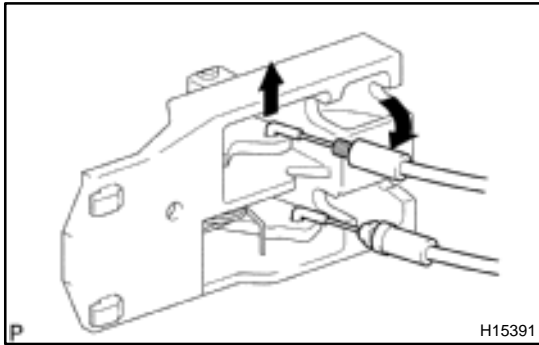**5. REMOVE INSIDE HANDLE**

Remove the screw and inside handle, disconnect the 2 cables from the inside handle as shown in the illustration.

6. REMOVE DOOR TRIM BRACKET NO. 1

Remove the 2 screws and door trim bracket, then remove the 2 grommets.

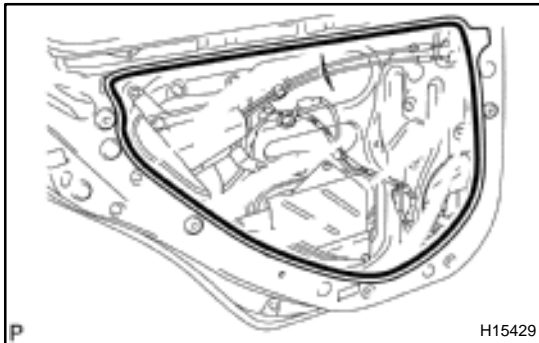**7. REMOVE SERVICE HOLE COVER**


Remove the service hole cover.

NOTICE:

Do not tear the cover.

HINT:


At the time of reassembly, please refer to the following item. Bring out the 2 control cables and wire harness through the service hole cover.

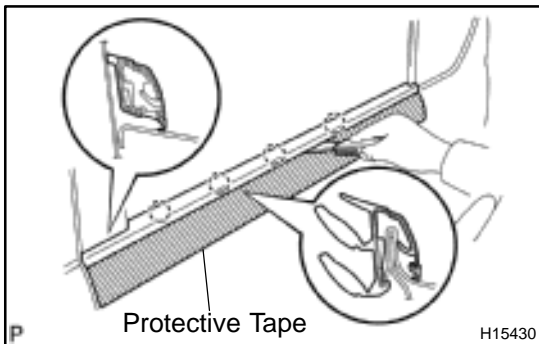**8. REMOVE DOOR BELT MOULDING**


Using a scraper, remove the door belt moulding.

HINT:

Tape the scraper tip before use.

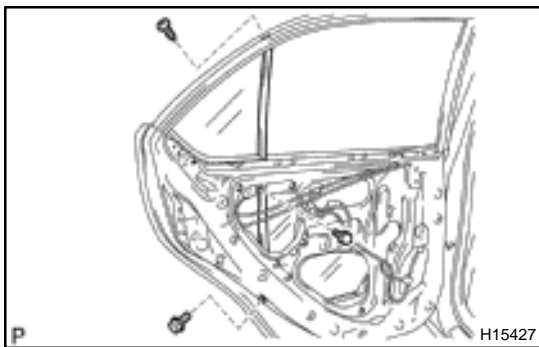9. REMOVE DOOR LOCK LINK SILENCER**10. REMOVE DOOR GLASS RUN****11. REMOVE WEATHERSTRIP****12. REMOVE DIVISION BAR**


- (a) Remove the 2 bolts and screw.
- (b) Pull the division bar forward.

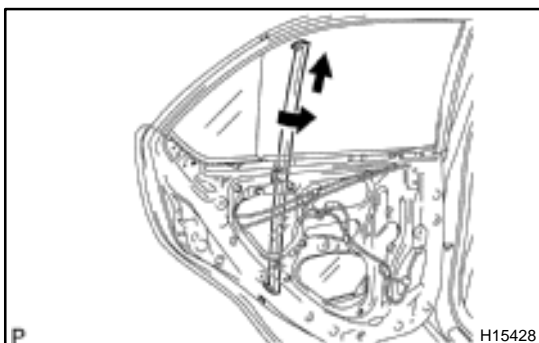

- (c) Rotate the division bar 90° and pull it upward as shown in the illustration.

13. REMOVE QUARTER WINDOW GLASS

- (a) Remove the quarter window glass with the weatherstrip.
- (b) Remove the weatherstrip from the quarter window glass.

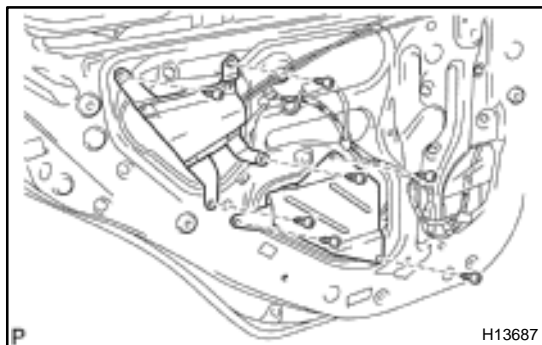**14. REMOVE INSIDE PANEL PLATE**

Remove the 3 screws and inside panel plate.

15. REMOVE INSIDE PANEL REINFORCEMENT

Remove the 4 screws and inside panel plate.


16. REMOVE DOOR GLASS

(a) Side out the door glass from the window regulator.

NOTICE:

Be careful not to drop the door glass.

(b) Pull the door glass upward to remove it.

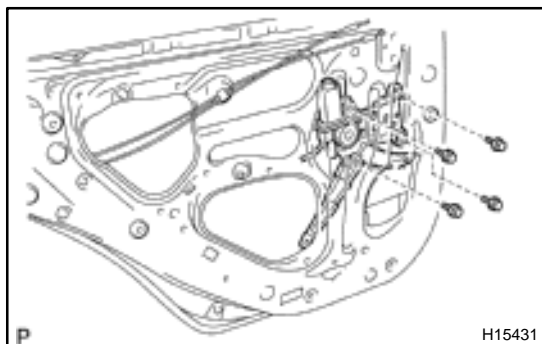
**17. REMOVE WINDOW REGULATOR**

Disconnect the connector, then remove the 4 bolts and window regulator.


Torque: 5.4 N·m (55 kgf·cm, 48 in.-lbf)

HINT:

Remove the regulator through the service hole.

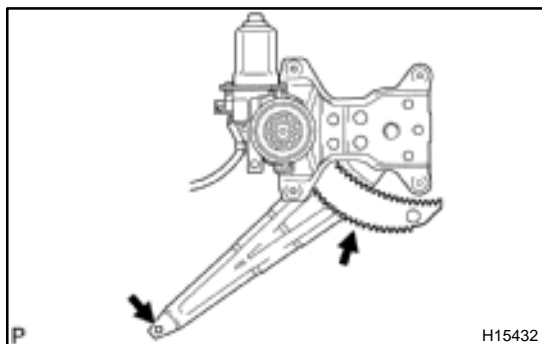**HINT:**

At the time of reassembly, please refer to the following item.
Apply MP grease to the window regulator.

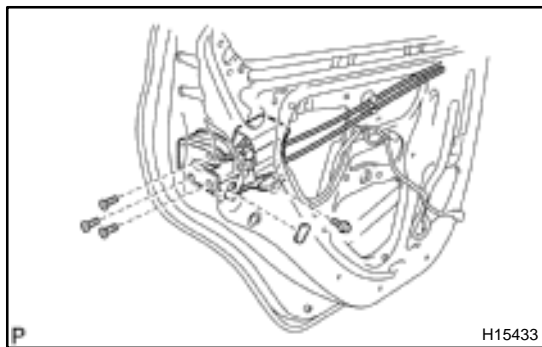**18. REMOVE DOOR LOCK**

(a) Remove the child protection cover.

(b) Disconnect the connector.

(c) Using a screwdriver, remove the door lock link guide and clamp.

HINT:

Tape the screwdriver tip before use.

(d) Remove the 3 screws.

Torque: 4.9 N·m (50 kgf·cm, 43 in.-lbf)


HINT:

At the time of reassembly, please refer to the following item.
Apply adhesive to the 3 screws.

Part No. 08833-00070, THREE BOND 1324 or equivalent

(e) Remove the bolts.

(f) Remove the door lock through the service hole.

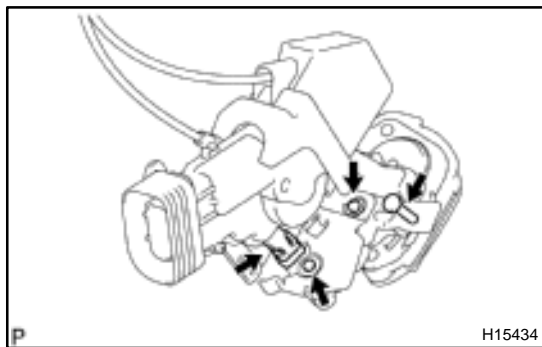**HINT:**


At the time of reassembly, please refer to the following item.
Apply MP grease to the sliding and rotating parts of the door lock.

19. REMOVE OUTSIDE HANDLE

- (a) Remove the 2 bolts.

Torque: 5.4 N·m (55 kgf·cm, 48 in.-lbf)

- (b) Remove the outside handle and key cylinder.

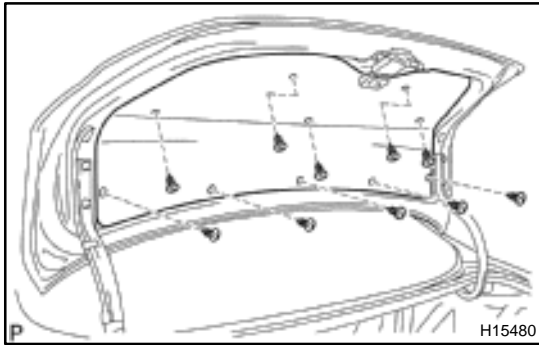

REMOVAL

1. REMOVE LUGGAGE COMPARTMENT DOOR TRIM

Remove the 10 clips and luggage compartment door trim.

2. REMOVE LUGGAGE COMPARTMENT DOOR LOCK

(a) Remove the 2 bolts and luggage compartment door lock.


Torque: 5.4 N·m (55 kgf·cm, 48 in.-lbf)

(b) Disconnect the link and cable from the lock.

3. REMOVE LUGGAGE COMPARTMENT DOOR OUTER GARNISH

(a) Remove the 4 nuts.

(b) Remove the luggage compartment door outer garnish and key cylinder.

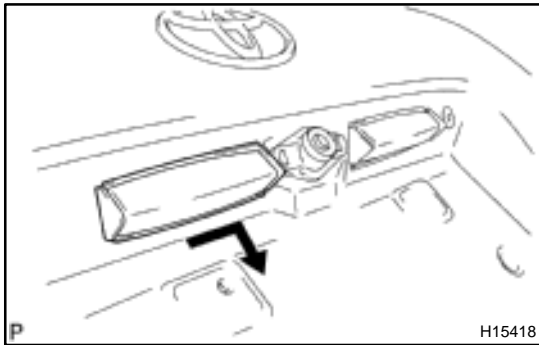


4. REMOVE LICENCE PLATE LIGHT

(a) Disconnect the connector.

(b) Remove the licence plate light as shown in the illustration.

(c) Employ the same manner described above to the other side.


(d) Using a clip remover, remove the clamps.

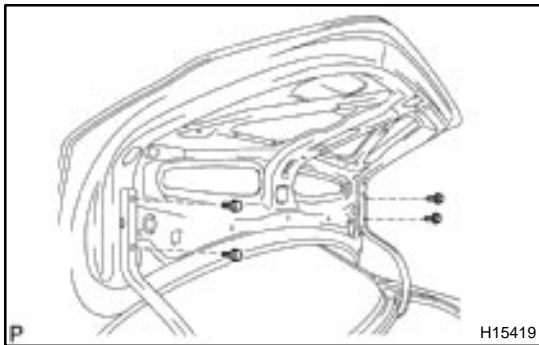

5. REMOVE LUGGAGE COMPARTMENT DOOR

Remove the 4 bolts luggage compartment door.

Torque: 8.3 N·m (85 kgf·cm, 74 in.-lbf)

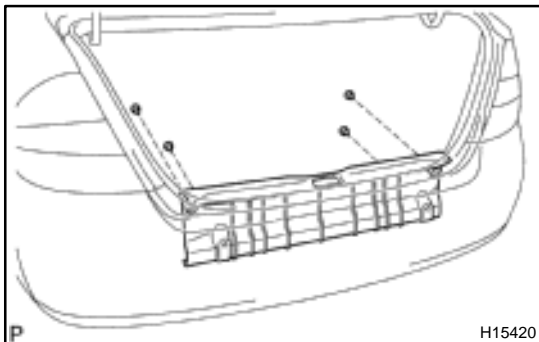


6. REMOVE LUGGAGE REAR FLOOR FINISH PLATE

(a) Using a clip remover, remove the 4 clips.

(b) Remove the rear floor finish plate.

7. REMOVE LUGGAGE COMPARTMENT DOOR WEATHERSTRIP

- 8. REMOVE LUGGAGE COMPARTMENT SIDE TRIM COVER LH AND RH**
 - (a) Remove the 3 clips and lower side luggage compartment cover.
 - (b) Remove the clip and warning reflector holder.
 - (c) Remove the warning reflector box.
 - (d) Remove the 4 clips and luggage compartment side trim cover LH and RH.
- 9. REMOVE REAR SEAT CUSHION (See page BO-83)**
- 10. REMOVE REAR SEATBACK (See page BO-83)**
- 11. REMOVE LUGGAGE TRIM NO. 2 COVER**
- 12. REMOVE LUGGAGE COMPARTMENT TRIM COVER**
- 13. REMOVE UPPER PART OF REAR DOOR OPENING TRIMS**

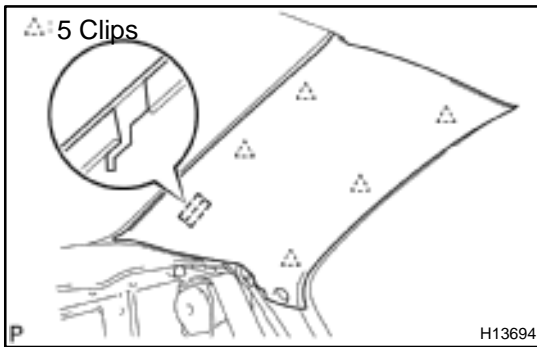

14. REMOVE ROOF SIDE INNER GARNISH

- (a) Using a screwdriver, disengage the clips.

HINT:


Tape the screwdriver tip before use.

- (b) Pull the garnish upward to remove it.
- (c) Employ the same manner described above to the other side.

15. REMOVE CRS TETHER ANCHOR

Remove the 3 CRS tether anchor covers and 3 CRS tether anchor brackets.

Torque: 20 N·m (200 kgf-cm, 14 ft-lbf)

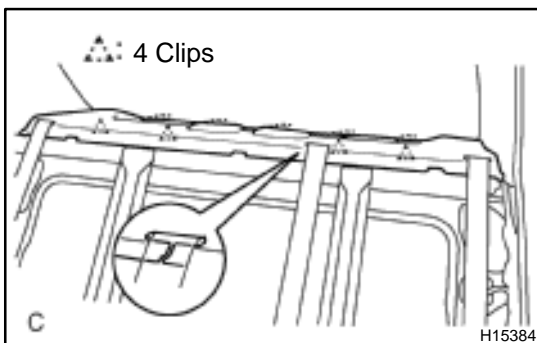

16. REMOVE PACKAGE TRAY TRIM PANEL


- (a) Pull the package tray trim panel upward to disengage the clips.
- (b) Remove the rear seat outer belts through the cut out on the package tray trim.
- (c) Pull the package tray trim panel forward to remove it.

17. REMOVE SILENCER PAD


18. REMOVE ROOM PARTITION PANEL

19. REMOVE TORSION BAR


- (a) Remove the torsion bars from center bracket.

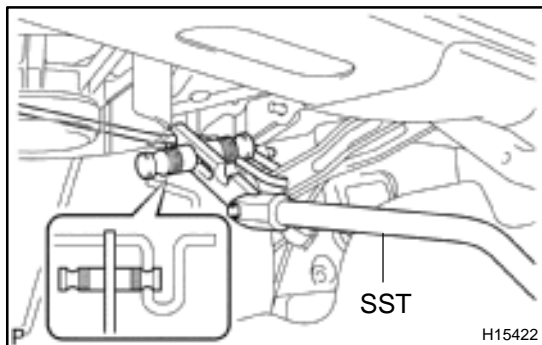

- (b) Install SST to the torsion bar on the hinge side.
SST 09804-24010

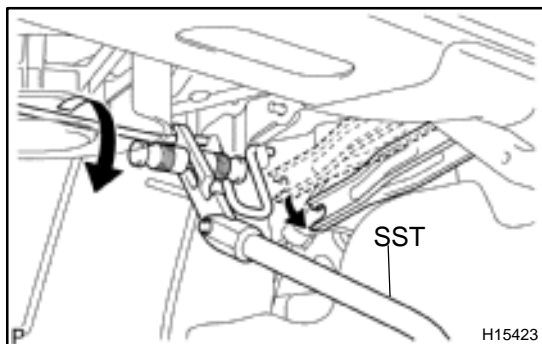

- (c) Push down on SST, and pull the luggage compartment door hinge from the torsion bar.
(d) Slowly lift SST, and remove the torsion bar from the torsion bar bracket with SST.

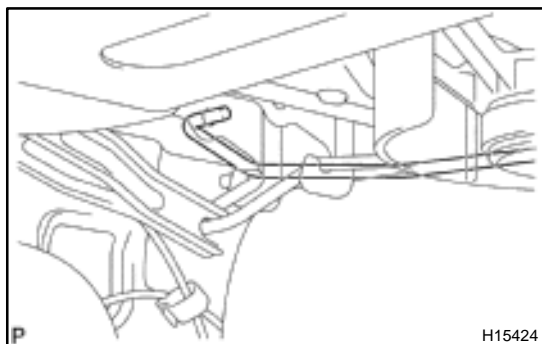

- (e) Disconnect the torsion bar from the bracket.
(f) Employ the same manner described above to the other side.

20. REMOVE LUGGAGE COMPARTMENT DOOR HINGE

Remove the pin and luggage compartment door hinge.

INSTALLATION

1. INSTALL WASHER NOZZLES


- (a) Install the washer nozzles to the hood.
- (b) Connect the washer hoses.

2. INSTALL OUTER FRONT COWL TOP PANEL

- (a) Install the outer front cowl top panel with 6 bolts.
Torque: 5.4 N·m (55 kgf·cm, 48 in.-lbf)
- (b) Push in the wiper motor wire harness with the grommet.


3. INSTALL ABS RELAY BLOCK

Install the ABS relay block with the 2 bolts.

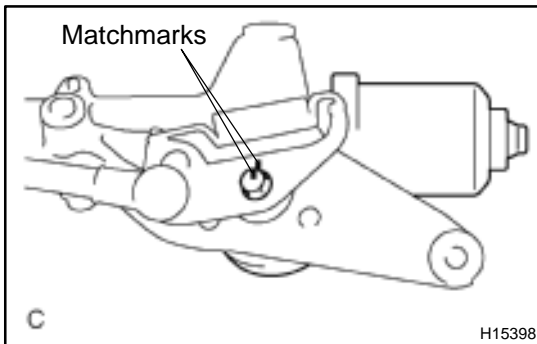

4. INSTALL WIPER MOTOR

- (a) Install the wiper motor with the 3 bolts to the wiper link.
Torque: 5.4 N·m (55 kgf·cm, 48 in.-lbf)
- (b) Align the matchmarks on the wiper link and wiper motor, then install the washer and nut.
Torque: 17 N·m (175 kgf·cm, 13 ft-lbf)
- (c) Install the wiper motor cover.

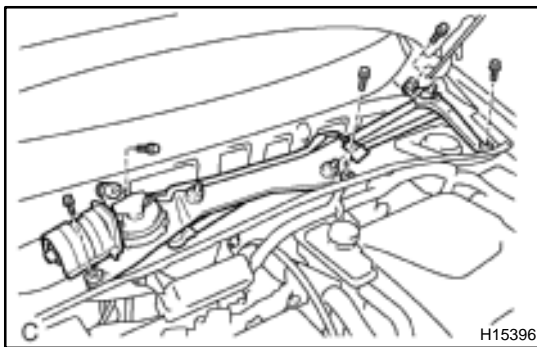

5. INSTALL WIPER LINK ASSEMBLY

- (a) Install the wiper link assembly with 5 bolts.
Torque: 7.4 N·m (75 kgf·cm, 65 in.-lbf)
- (b) Connect the connector.


6. INSTALL COWL TOP VENTILATOR LOUVERS

Install the cowl top ventilator louver LH and RH, then install the 2 screws.

7. INSTALL HOOD TO COWL TOP SEAL

8. INSTALL WIPER ARMS

- (a) Operate the wiper motor once and turn the wiper switch OFF.
- (b) Install the wiper arms and tighten nuts by hand.

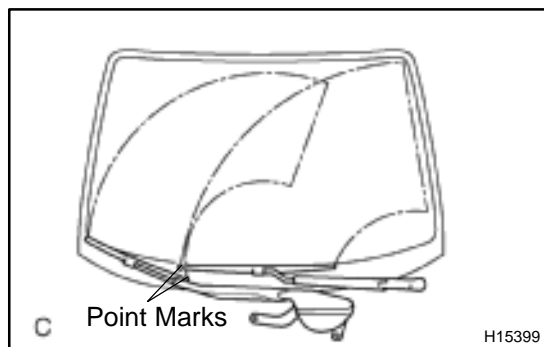

- (c) Adjust the installation position of the arms to the positions as shown in the illustration.
- (d) Torque the 3 nuts.
Torque: 26 N·m (270 kgf-cm, 20 ft-lbf)
- (e) Install the wiper arm head cap.

INSTALLATION

1. CLEAN CONTACT SURFACE OF BODY

- (a) Using a heat light, heat the moulding surface to 40 – 60 °C (104 – 140 °F).

NOTICE:

Do not heat the body excessively.

- (b) Using a knife, cut away any rough areas on the body.

NOTICE:

Be careful not to damage the body.

- (c) Wipe off stains with cleaner.

2. CLEAN MOULDING

If reusing the moulding.

- (a) Using a heat light, heat the moulding surface to 20 – 30 °C (68 – 86 °F).

NOTICE:


Do not heat the moulding excessively.

- (b) Using a knife, cut the remaining adhesive from the moulding.

NOTICE:

Be careful not to damage the moulding.

- (c) Wipe off stains with cleaner.

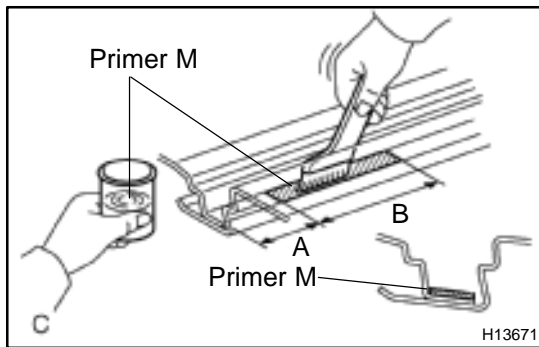

3. COAT CONTACT SURFACE OF BODY WITH PRIMER "M"

Using a brush, coat the contact surface on the body with Primer M as shown in the illustration.

Front end:

A: 24.9 mm (0.980 in.)

B: 47.5 mm (1.870 in.)


Rear end:

A: 23.2 mm (0.913 in.)

B: 57.5 mm (2.264 in.)

NOTICE:

- Let the primer coating dry for 3 minutes or more.
- Do not coat the adhesive.
- Do not keep any of the opened Primer M for later use.

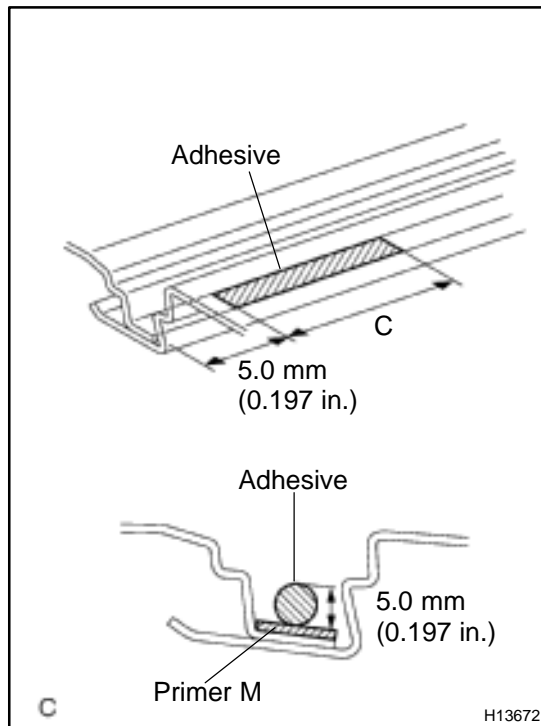

4. APPLY ADHESIVE

- (a) Cut off the tip of the cartridge nozzle.

Part No. 08850-00801 or equivalent

HINT:

After cutting off the tip, use all adhesive within the time described in the chart below.

Temperature	Tackfree time
35 °C (95 °F)	15 minutes
20 °C (68 °F)	100 minutes
5 °C (41 °F)	8 hours

- (b) Load the cartridge into the sealer gun.
 (c) Apply adhesive to the hatched area in the illustration for both front and rear of the vehicle.

C: 20 mm (0.79 in.)

HINT:

When removing the moulding, apply adhesive well to the part where the body sealer is removed.


5. INSTALL MOULDING

Push the moulding to the body.

NOTICE:

- **Make sure that the body and moulding are heated to the proper temperature.**
- **Do not depress the adhesive coated parts excessively but just hold them down with your thumb.**
- **Scrape off any overflowing adhesive with a plastic spatula and clean the surface with a dry rag.**
- **Take care not to drive the vehicle during the time described in the chart below.**

Temperature	Minimum time prior to driving the vehicle
35 °C (95 °F)	1.5 hours
20 °C (68 °F)	5 hours
5 °C (41 °F)	24 hours

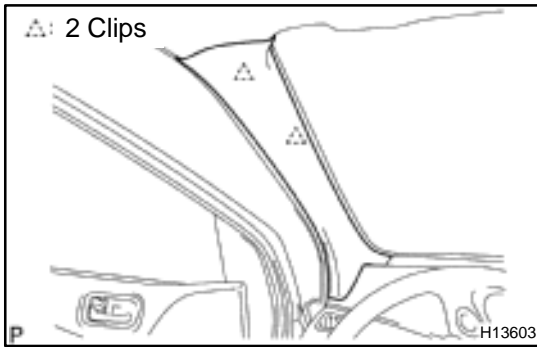

REMOVAL


1. REMOVE FRONT PILLAR GARNISH AND NO. 1 FRONT PILLAR SPACERS

- (a) Using a screwdriver, remove the front pillar garnish.

HINT:


Tape the screwdriver tip before use.

- (b) Remove the 4 screws and 2 No. 1 front pillar spacers.
(c) Employ the same manner described above to the other side.

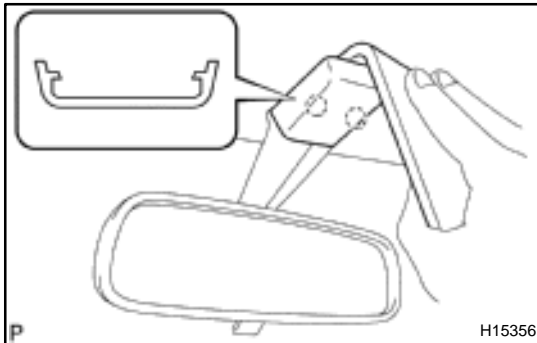

2. REMOVE INNER REAR VIEW MIRROR

- (a) Using a moulding remover, remove the cover as shown in the illustration.

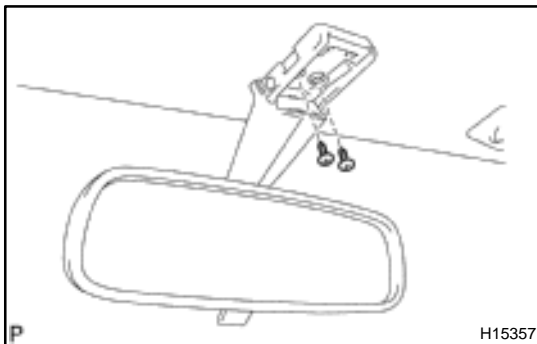

- (b) Remove the 2 screws and inner rear view mirror.

3. REMOVE MAP LAMP

- (a) Using a screwdriver, remove the map lamp.
(b) Disconnect the connector.

4. REMOVE SUN VISORS

Remove the 4 screws and pull the 2 sun visors downward.

5. REMOVE SUN VISOR HOLDERS

Remove the 2 screws and 2 holders.

6. REMOVE ASSIST GRIP

- (a) Using a screwdriver, remove the caps.

HINT:

Tape the screwdriver tip before use.

- (b) Remove the 2 screws and assist grip.

7. PULL DOWN FRONT PART OF ROOF HEADLINING


8. REMOVE WIPER ARMS

Remove the wiper arm head cap, 3 nuts and 2 wiper arms.

9. REMOVE HOOD TO COWL TOP SEAL

10. REMOVE COWL TOP VENTILATOR LOVERS

Remove the 2 screws, then pull out the cowl top ventilator louver RH and LH.

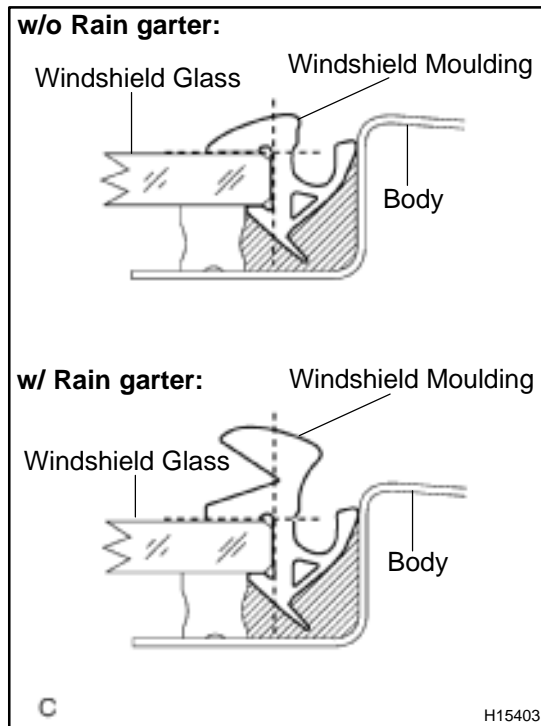
**11. REMOVE WINDSHIELD MOULDING**

- (a) Using a knife, cut off the moulding as shown.

NOTICE:

Do not damage the body with the knife.

- (b) Remove the remaining moulding.

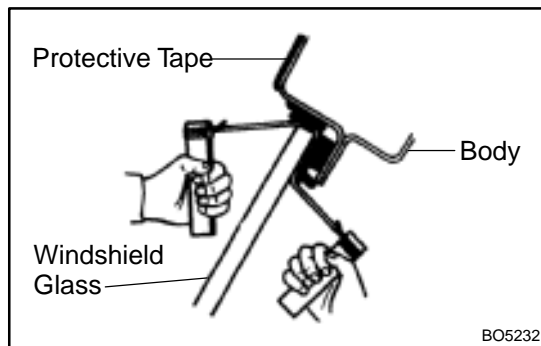
**12. REMOVE WINDSHIELD GLASS**

- (a) Push piano wire through between the body and glass from the interior.


- (b) Tie both wire ends to wooden blocks or similar object.

HINT:

Apply protective tape to the outer surface to keep the surface from being scratched.

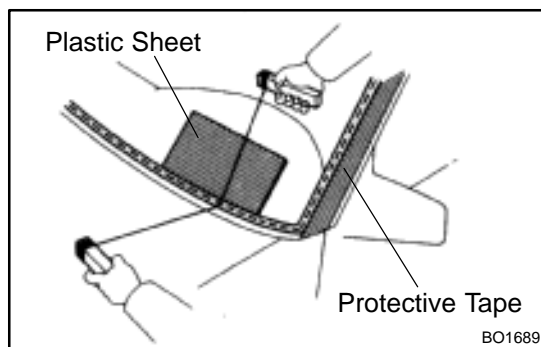**NOTICE:**

When separating the glass, be careful not to damage the paint and interior and exterior ornaments. To prevent scratching the safety pad when removing the windshield, place a plastic sheet between the piano wire and safety pad.

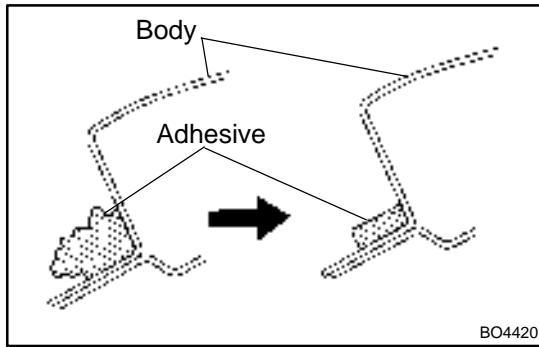

INSTALLATION

1. CLEAN AND SHAPE CONTACT SURFACE OF BODY

- (a) Using a knife, cut away any rough areas on the body.


HINT:

Leave as much of the adhesive on the body as possible.

- (b) Clean the cutting surface of the adhesive with a shop rag saturated in cleaner.

HINT:

Even if all the adhesive has been removed, clean the body.

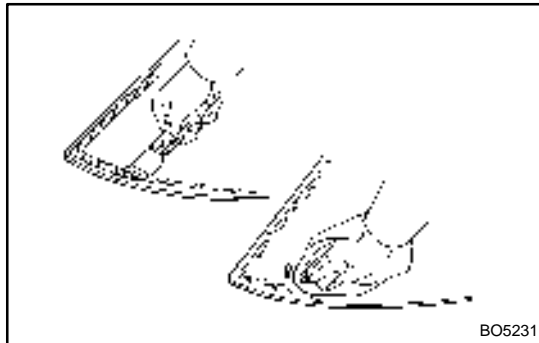


2. CLEAN REMOVED GLASS

- (a) Using a scraper, remove the damaged stoppers, dam and adhesive sticking to the glass.

- (b) Clean the glass with cleaner.

NOTICE:


- Do not touch the glass face after cleaning it.
- Be careful not to damage the glass.

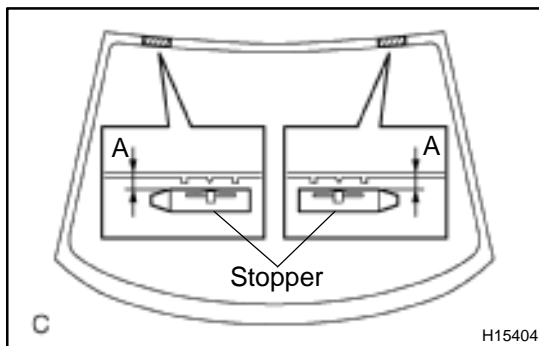

3. INSTALL NEW STOPPERS

Install new stoppers onto the glass.


A: 9.5 mm (0.374 in.)

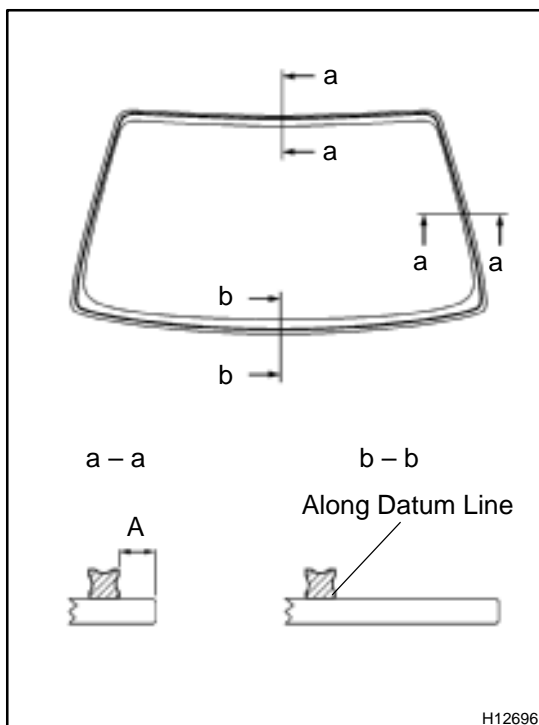

4. INSTALL NEW DAM


Install a new dam with adhesive tape as shown in the illustration.

A: 7.0 mm (0.276 in.)

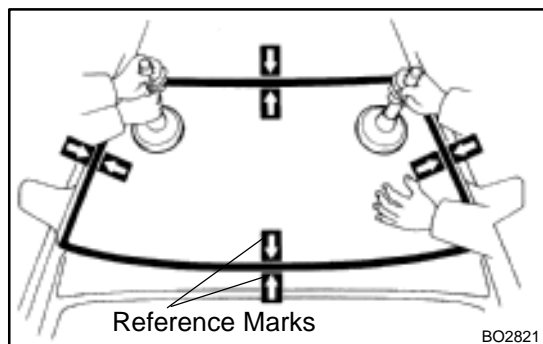

5. POSITION GLASS

- Using a suction rubber, place the glass in the correct position.
- Check that all contacting parts of the glass rim are perfectly even.
- Place reference marks between the glass and body.
- Remove the glass.

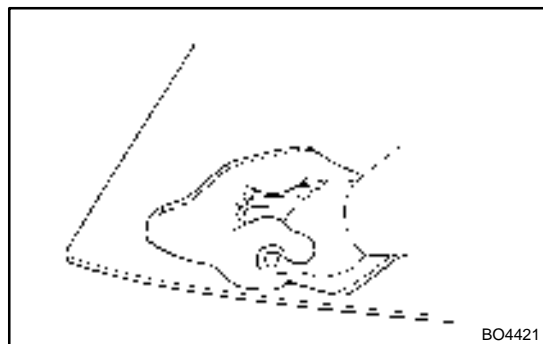


6. CLEAN CONTACT SURFACE OF GLASS

Using a cleaner, clean the contact surface which is black-colored area around the entire glass rim.

NOTICE:

Do not touch the glass face after cleaning it.

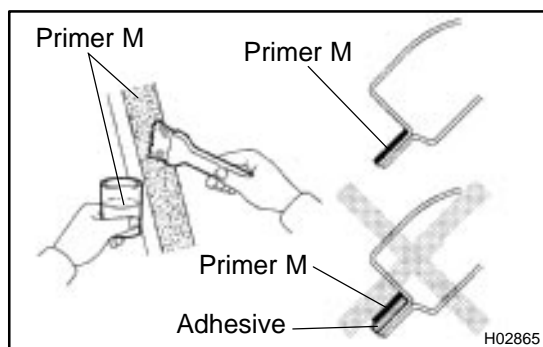


7. COAT CONTACT SURFACE OF BODY WITH PRIMER "M"

Using a brush, coat Primer M to the exposed part of body on the vehicle side.

NOTICE:

- Let the primer coating dry for 3 minutes or more.
- Do not coat Primer M to the adhesive.
- Do not keep any of the opened Primer M for later use.

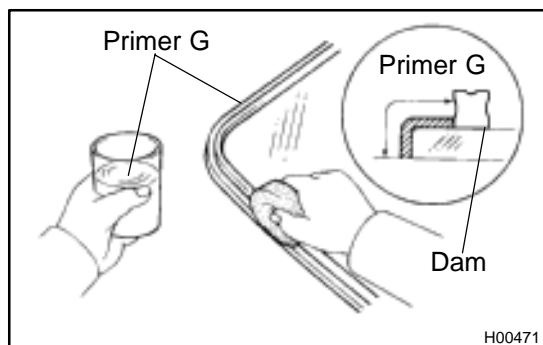

8. COAT CONTACT SURFACE OF GLASS WITH PRIMER "G"

- Using a brush or sponge, coat the edge of the glass and the contact surface with Primer G.
- When the primer is coated wrongly to the area other than the specified, wipe it off with a clean shop rag before the primer dries.

NOTICE:

- Let the primer coating dry for 3 minutes or more.
- Do not keep any of the opened Primer G for later use.

9. APPLY ADHESIVE


- Cut off the tip of the cartridge nozzle.
Part No. 08850-00801 or equivalent

HINT:

After cutting off the tip, use all adhesive within the time described in the table below.

Temperature	Tackfree time
35 °C (95 °F)	15 minutes
20 °C (68 °F)	100 minutes
5 °C (41 °F)	8 hours


(b) Load the cartridge into the sealer gun.

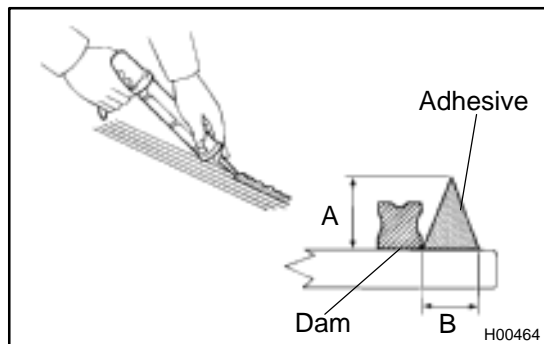

(c) Coat the glass with adhesive as shown.

A: 12 mm (0.47 in.)

B: 8 mm (0.31 in.)

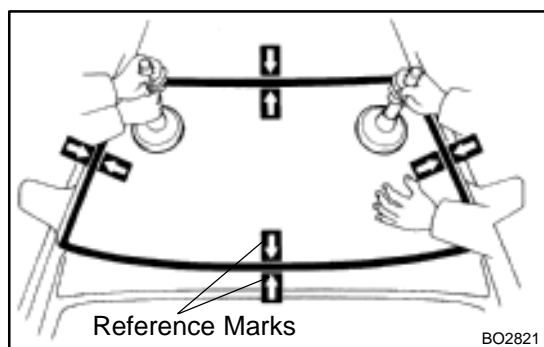


10. INSTALL WINDSHIELD GLASS AND MOULDING

(a) Install the glass, aligning the reference marks using a suction rubber.

HINT:

Check to see that the stoppers are attached to the body correctly.


(b) Lightly press the glass front surface for close contact.

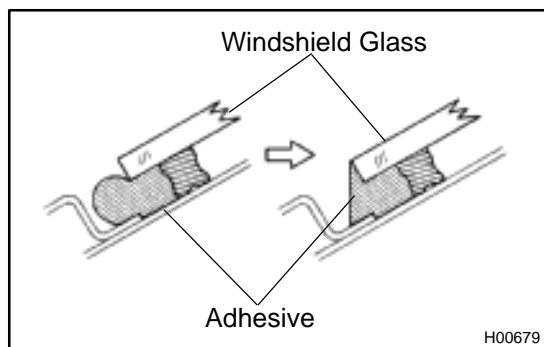

(c) Correct insufficient or protruded adhesive agent using a spatula.

HINT:

Apply the adhesive agent up to the windshield glass edge.

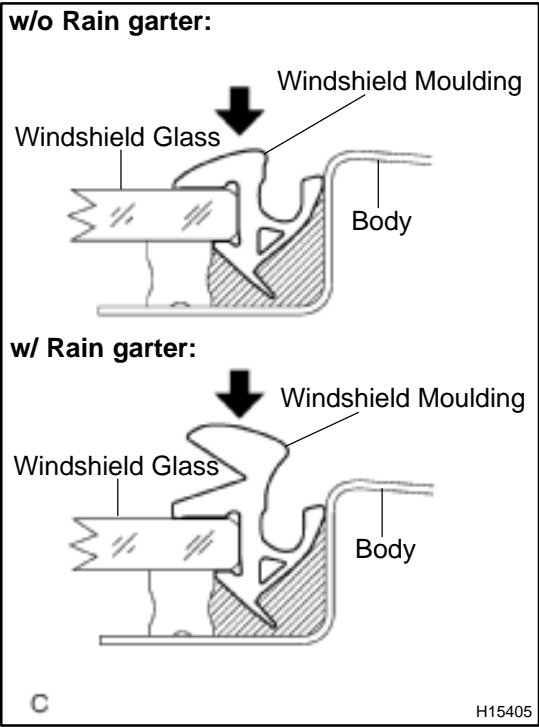


- (d) Install a new windshield moulding to the windshield glass before the adhesive agent hardens.
- HINT:**
Install the moulding, aligning the center of moulding with the center of body.
- (e) Remove any excessive adhesive agent before it hardens.
- (f) Hold the glass and moulding in place securely with a protective tape or equivalent until the adhesive hardenes.


NOTICE:
Take care not to drive the vehicle during the time described in the table below.

Temperature	Minimum time prior to driving the vehicle
35 °C (95 °F)	1.5 hours
20 °C (68 °F)	5 hours
5 °C (41 °F)	24 hours


- 11. INSPECT FOR LEAK AND REPAIR**
- NOTICE:**
Conduct a leak test after the hardening time has elapsed.
- 12. INSTALL COWL TOP VENTILATOR LOUVERS**
Install the cowl top ventilator louver LH and RH, then install the 2 screws.
- 13. INSTALL HOOD TO COWL TOP SEAL**
- 14. INSTALL WIPER ARMS**
- (a) Operate the wiper motor once and turn the wiper switch OFF.
- (b) Install the wiper arms and tighten nuts by hand.

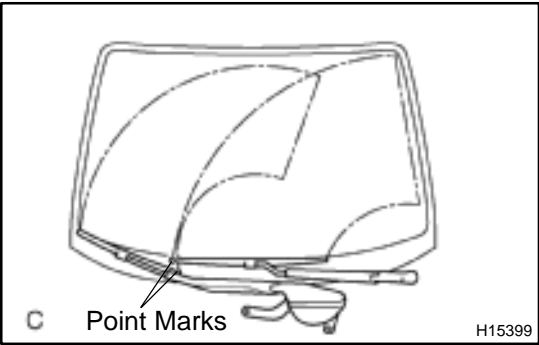

- (c) Adjust the installation positions of the wiper arms to the positions as shown in the illustration.
- (d) Torque the 3 nuts.
Torque: 26 N·m (270 kgf·cm, 20 ft·lbf)
- (e) Install the wiper arm head cap.
- 15. INSTALL FRONT SIDE OF ROOF HEADLINING**
- 16. INSTALL ASSIST GRIP**
- (a) Install the assist grip with the 2 screws.
- (b) Install the caps.
- 17. INSTALL SUN VISOR HOLDERS**
Install the 2 sun visor holders with the 2 screws.
- 18. INSTALL SUN VISORS**
Install the 2 sun visors with the 4 screws.
- 19. INSTALL MAP LAMP**
- (a) Connect the connector.
- (b) Install the map lamp.

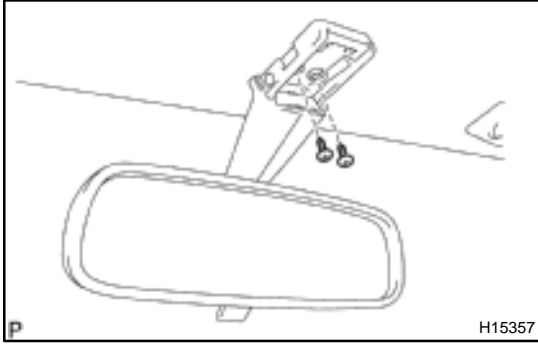**20. INSTALL INNER REAR VIEW MIRROR**


- (a) Install the inner rear view mirror with the 2 screws.
Torque: 2.9 N·m (30 kgf·cm, 26 in.-lbf)
- (b) Install the cover.

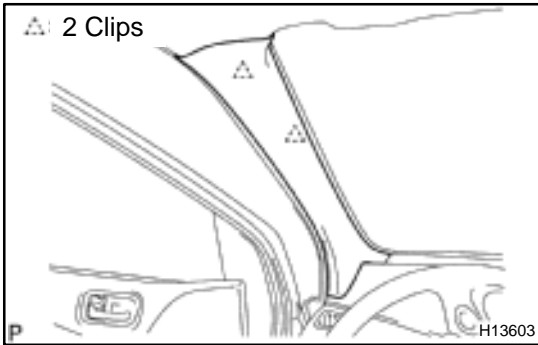**21. INSTALL FRONT PILLAR GARNISH AND NO. 1 FRONT PILLAR SPACERS**

- (a) Install the 2 No. 1 front pillar spacers and 4 screws.
- (b) Install the front pillar garnish to the body.
- (c) Employ the same manner described above to the other side.

REMOVAL

1. REMOVE REAR SEAT CUSHION (See page [BO-83](#))
2. REMOVE REAR SEATBACK (See page [BO-83](#))
3. REMOVE UPPER PART OF REAR DOOR OPENING TRIMS

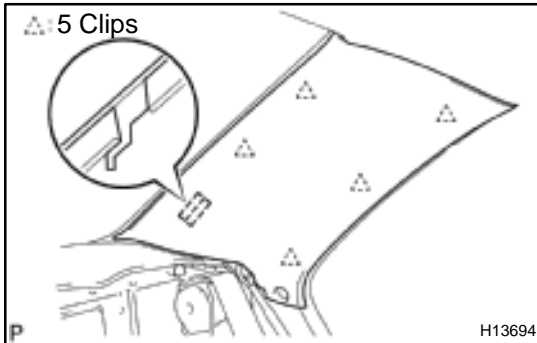


4. REMOVE ROOF SIDE INNER GARNISH

- (a) Using a screwdriver, disengage the clips.

HINT:

Tape the screwdriver tip before use.

- (b) Pull the garnish upward to remove it.
- (c) Employ the same manner described above to the other side.

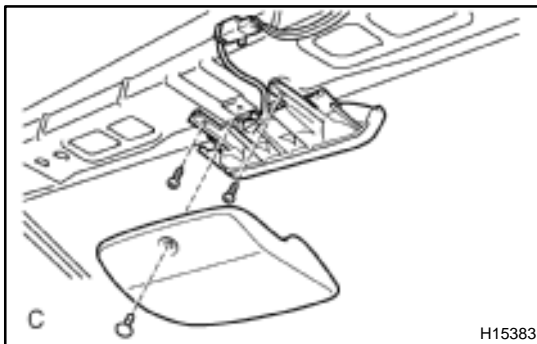


5. REMOVE HIGH-MOUNTED STOP LIGHT

- (a) Remove the clip, then pull the high-mounted stop light cover.
- (b) Disconnect the connector.
- (c) Remove the 2 screws and high-mounted stop light.

6. REMOVE CRS TETHER ANCHORS

Remove the 3 CRS tether anchor covers and 3 CRS tether anchor brackets.

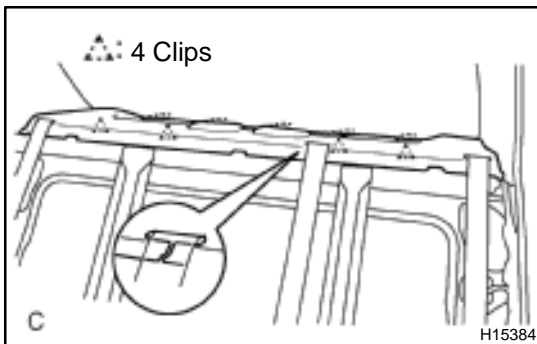

7. REMOVE PACKAGE TRAY TRIM PANEL

- (a) Pull the package tray trim panel upward to disengage the clips.
- (b) Remove the rear seat outer belts through the cutout on the package tray trim.
- (c) Pull the package tray trim panel forward to remove it.

8. REMOVE SILENCER PAD

9. REMOVE REAR ASSIST GRIPS

- (a) Using a screwdriver, remove the caps.


HINT:

Tape the screwdriver tip before use.

- (b) Remove the 4 screws and 2 rear assist grips.

10. PULL DOWN REAR PART OF ROOF HEADLINING

Remove the 2 clips.

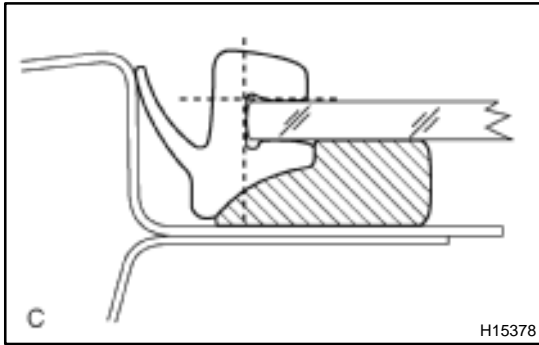
**11. REMOVE BACK WINDOW OUTSIDE MOULDING**

- (a) Using a knife, cut off the moulding as shown in the illustration.

NOTICE:

Do not damage the body with the knife.

- (b) Remove the remaining moulding.

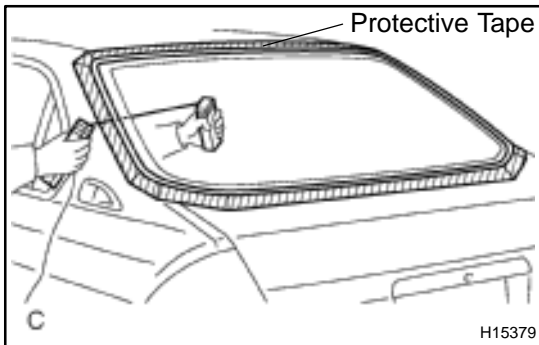**12. REMOVE BACK WINDOW GLASS**

- (a) Disconnect the connector.
 (b) Push piano wire through from the interior.
 (c) Tie both wire ends to wooden blocks or similar objects

HINT:

Apply protective tape to the outer surface to keep the surface from being scratched.



NOTICE:

When separating the glass, take care not to damage the paint and exterior.

- (d) Cut the adhesive by pulling the piano wire around it.

HINT:


Cut the adhesive areas as shown in the illustration, leaving the adhesive where the stoppers are.

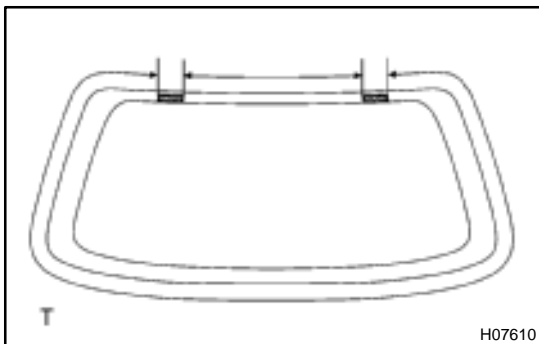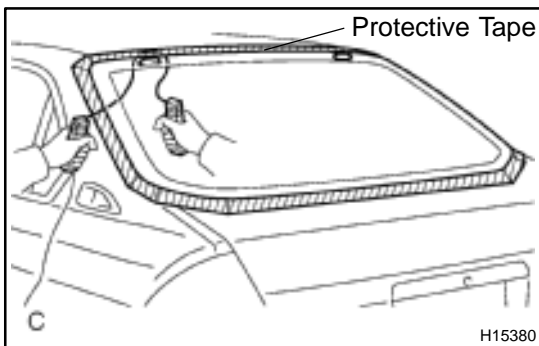

- (e) Let the piano wire pass as shown in the illustration, cut off the adhesive sticking to the stoppers.

NOTICE:

- **Do not damage the glass stoppers.**
- **Leave as much of the adhesive on the body as possible when cutting off the glass.**

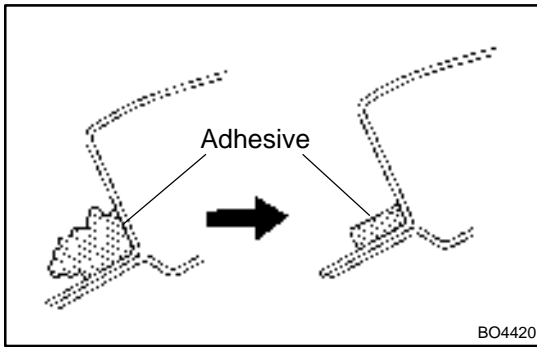

INSTALLATION

1. CLEAN AND SHAPE CONTACT SURFACE OF BODY

- (a) Using a knife, cut away any rough areas on the body.


HINT:

Leave as much of the adhesive on the body as possible.

- (b) Clean the cutting surface of the adhesive with a piece of shop rag saturated in cleaner.

HINT:

Even if all the adhesive has been removed, clean the body.

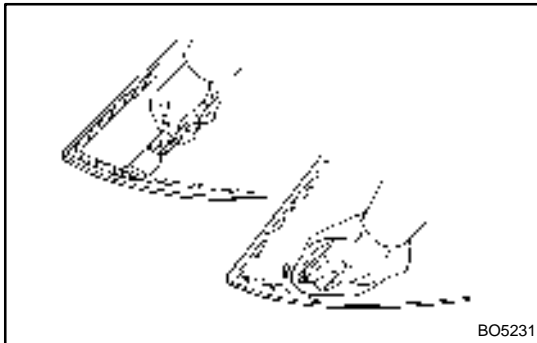


2. CLEAN REMOVED GLASS

- (a) Using a scraper, remove the adhesive sticking to the glass.

- (b) Clean the glass with cleaner.

NOTICE:


- Be careful not to damage the glass.
- Do not touch the glass face after cleaning it.

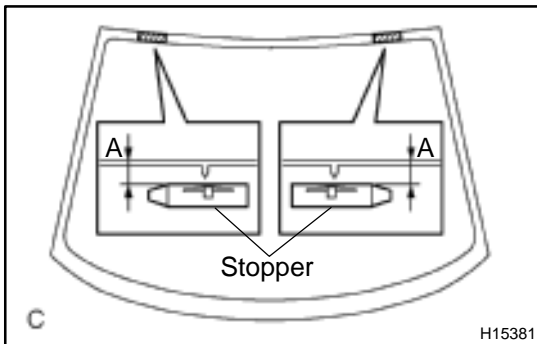

3. INSTALL NEW STOPPERS

Install new stoppers onto the glass.

A: 7.0 mm (0.276 in.)

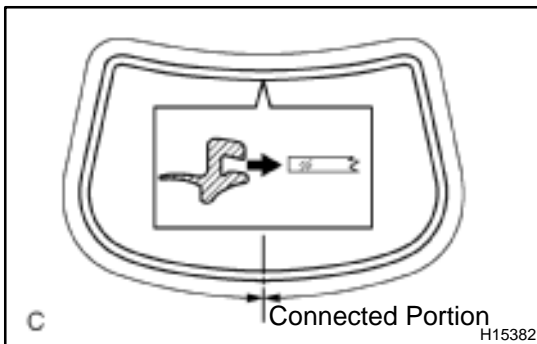


4. INSTALL NEW BACK WINDOW OUTSIDE MOULDING

Install new back window outside moulding to the back window glass as shown in the illustration.


HINT:

- Install the back window outside moulding from the center of the glass at the lower side of the vehicle.
- When installing the back window outside moulding, do not stretch it.

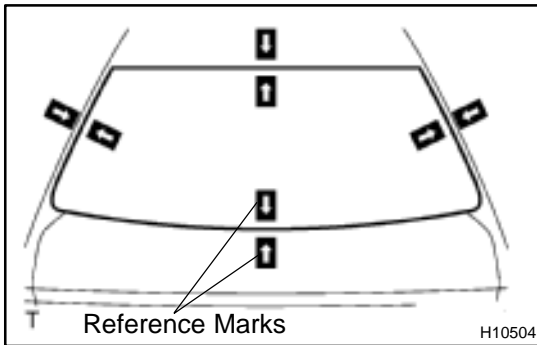

5. POSITION GLASS

- Place the glass in the correct position.
- Check that all contacting parts of the glass rim are perfectly even.
- Place reference marks between the glass and body.
- Remove the glass.

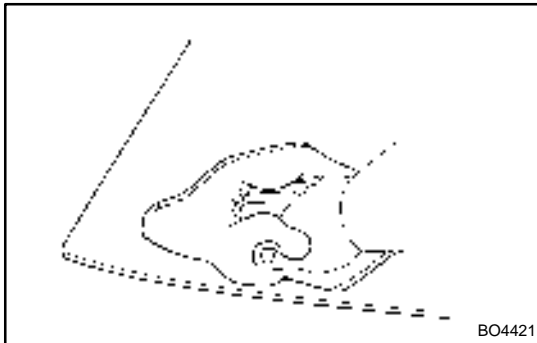


6. CLEAN CONTACT SURFACE OF GLASS

Using a cleaner, clean the contact surface which is black-colored area around the entire glass rim.

NOTICE:

Do not touch the glass face after cleaning it.

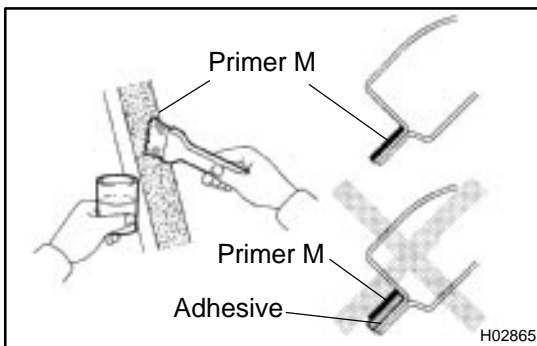


7. COAT CONTACT SURFACE OF BODY WITH PRIMER "M"

Using a brush, coat Primer M to the exposed part of body on the vehicle side.

NOTICE:

- Let the primer coating dry for 3 minutes or more.
- Do not coat Primer M to the adhesive.
- Do not keep any of the opened Primer M for later use.

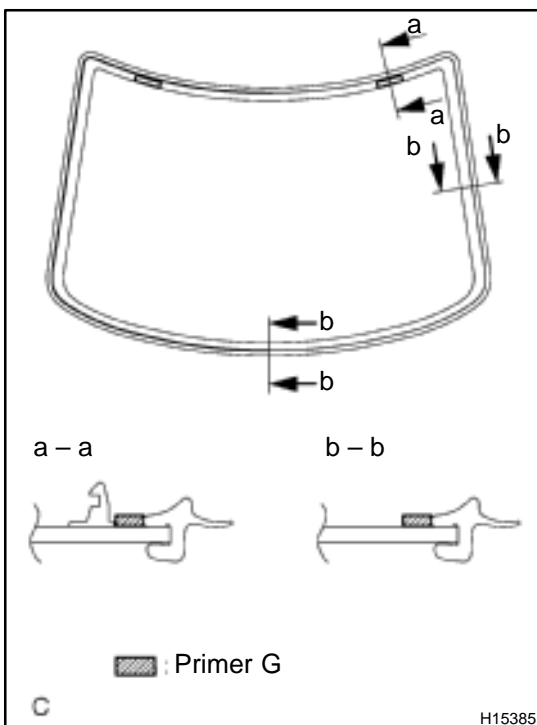


8. COAT CONTACT SURFACE OF GLASS WITH PRIMER "G"

- Using a brush or sponge, coat the edge of the glass and the contact surface with Primer G as shown in the illustration.
- When the primer is coated wrongly to the area other than the specified, wipe it off with a clean shop rag before the primer dries.

NOTICE:

- Let the primer coating dry for 3 minutes or more.
- Do not keep any of the opened Primer G for later use.

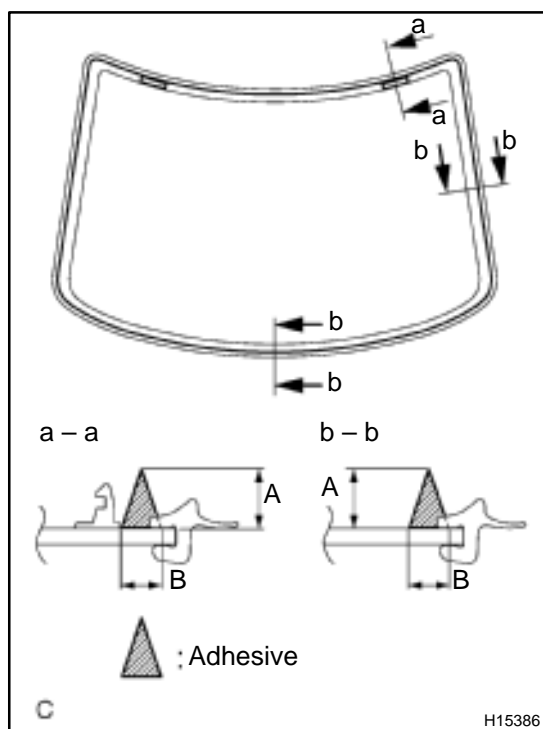

9. APPLY ADHESIVE

- (a) Cut off the tip of the cartridge nozzle.


Part No. 08850-00801 or equivalent

HINT:

After cutting off the tip, use all adhesive within the time described in the table below.


Temperature	Tackfree time
35°C (95°F)	15 minutes
20°C (68°F)	100 minutes
5°C (41°F)	8 hours

- (b) Load the cartridge into the sealer gun.
 (c) Coat the glass with adhesive as shown in the illustration.
A: 12 mm (0.47 in.)
B: 8 mm (0.31 in.)

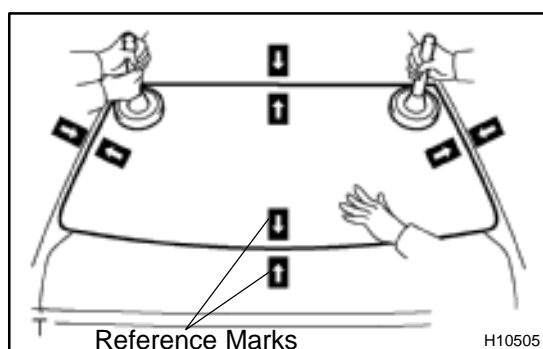

10. INSTALL GLASS

- (a) Position the glass so that the reference marks are lined up, and press in gently along the rim.

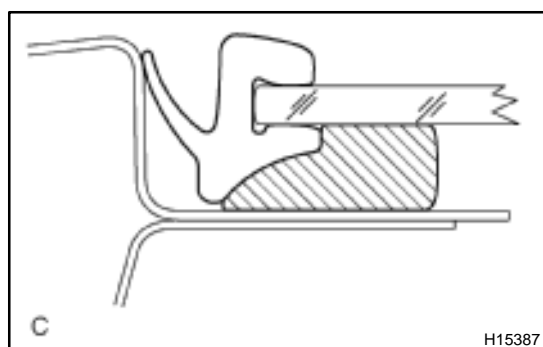

HINT:

Confirm that the moulding is attached to the body panel as shown in the illustration.

- (b) Hold the back window glass in place securely with a protective tape or equivalent until the adhesive hardens.

NOTICE:

Take care not to drive the vehicle during the time described in the table below.

Temperature	Minimum time prior to driving the vehicle
35°C (95°F)	1.5 hours
20°C (68°F)	5 hours
5°C (41°F)	24 hours

11. INSPECT FOR LEAK AND REPAIR

- (a) Conduct a leak test after the hardening time has elapsed.
 (b) Seal any leak with sealant.


Part No. 08833-00030 or equivalent

12. INSTALL REAR PART OF ROOF HEADLINING

Install the 2 clips.

13. INSTALL REAR ASSIST GRIPS

- (a) Install the 2 rear assist grips with the 4 screws.
- (b) Install the caps.

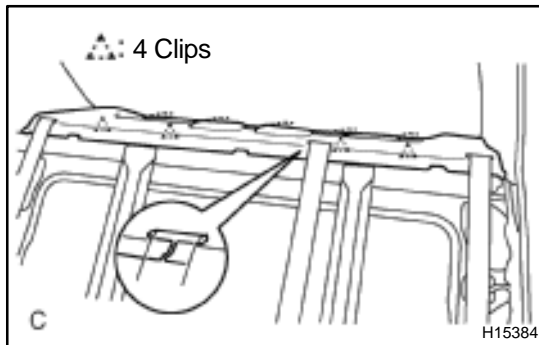14. INSTALL SILENCER PAD**15. INSTALL PACKAGE TRAY TRIM PANEL**


- (a) Install the seat belt through the cutout of the package tray trim.
- (b) Install the package tray trim as shown in the illustration.

16. INSTALL CRS TETHER ANCHORS


- (a) Install the 3 CRS tether anchor brackets.

Torque: 20 N·m (200 kgf·cm, 14 ft·lbf)

- (b) Install the CRS tether anchor covers.

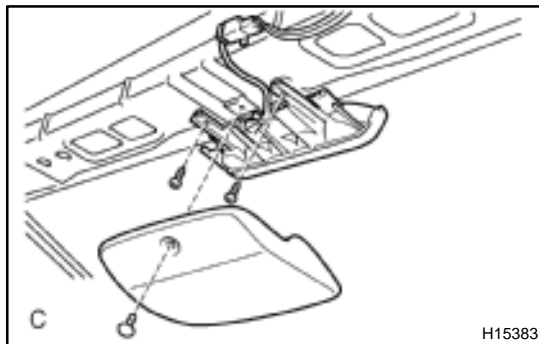**17. INSTALL HIGH-MOUNTED STOP LIGHT**

- (a) Install the high-mounted stop light with the 2 screws.
- (b) Connect the connector.
- (c) Install the high-mounted stop light cover, then install the clip.

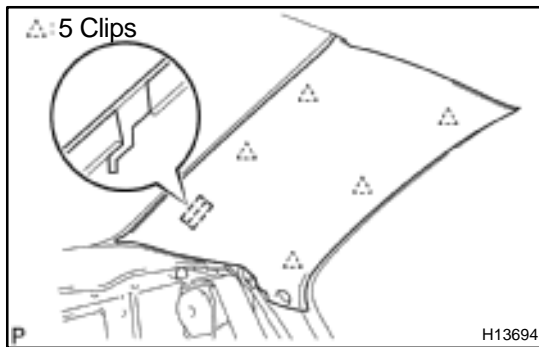
**18. INSTALL ROOF SIDE INNER GARNISH**


- (a) Install the roof side inner garnish as shown in the illustration.
- (b) Employ the same manner described above to the other side.

19. INSTALL UPPER PART OF REAR DOOR OPENING TRIMS**20. INSTALL REAR SEATBACK (See page BO-86)****21. INSTALL REAR SEAT CUSHION (See page BO-86)**

INSTRUMENT PANEL COMPONENTS

BO3TB-01




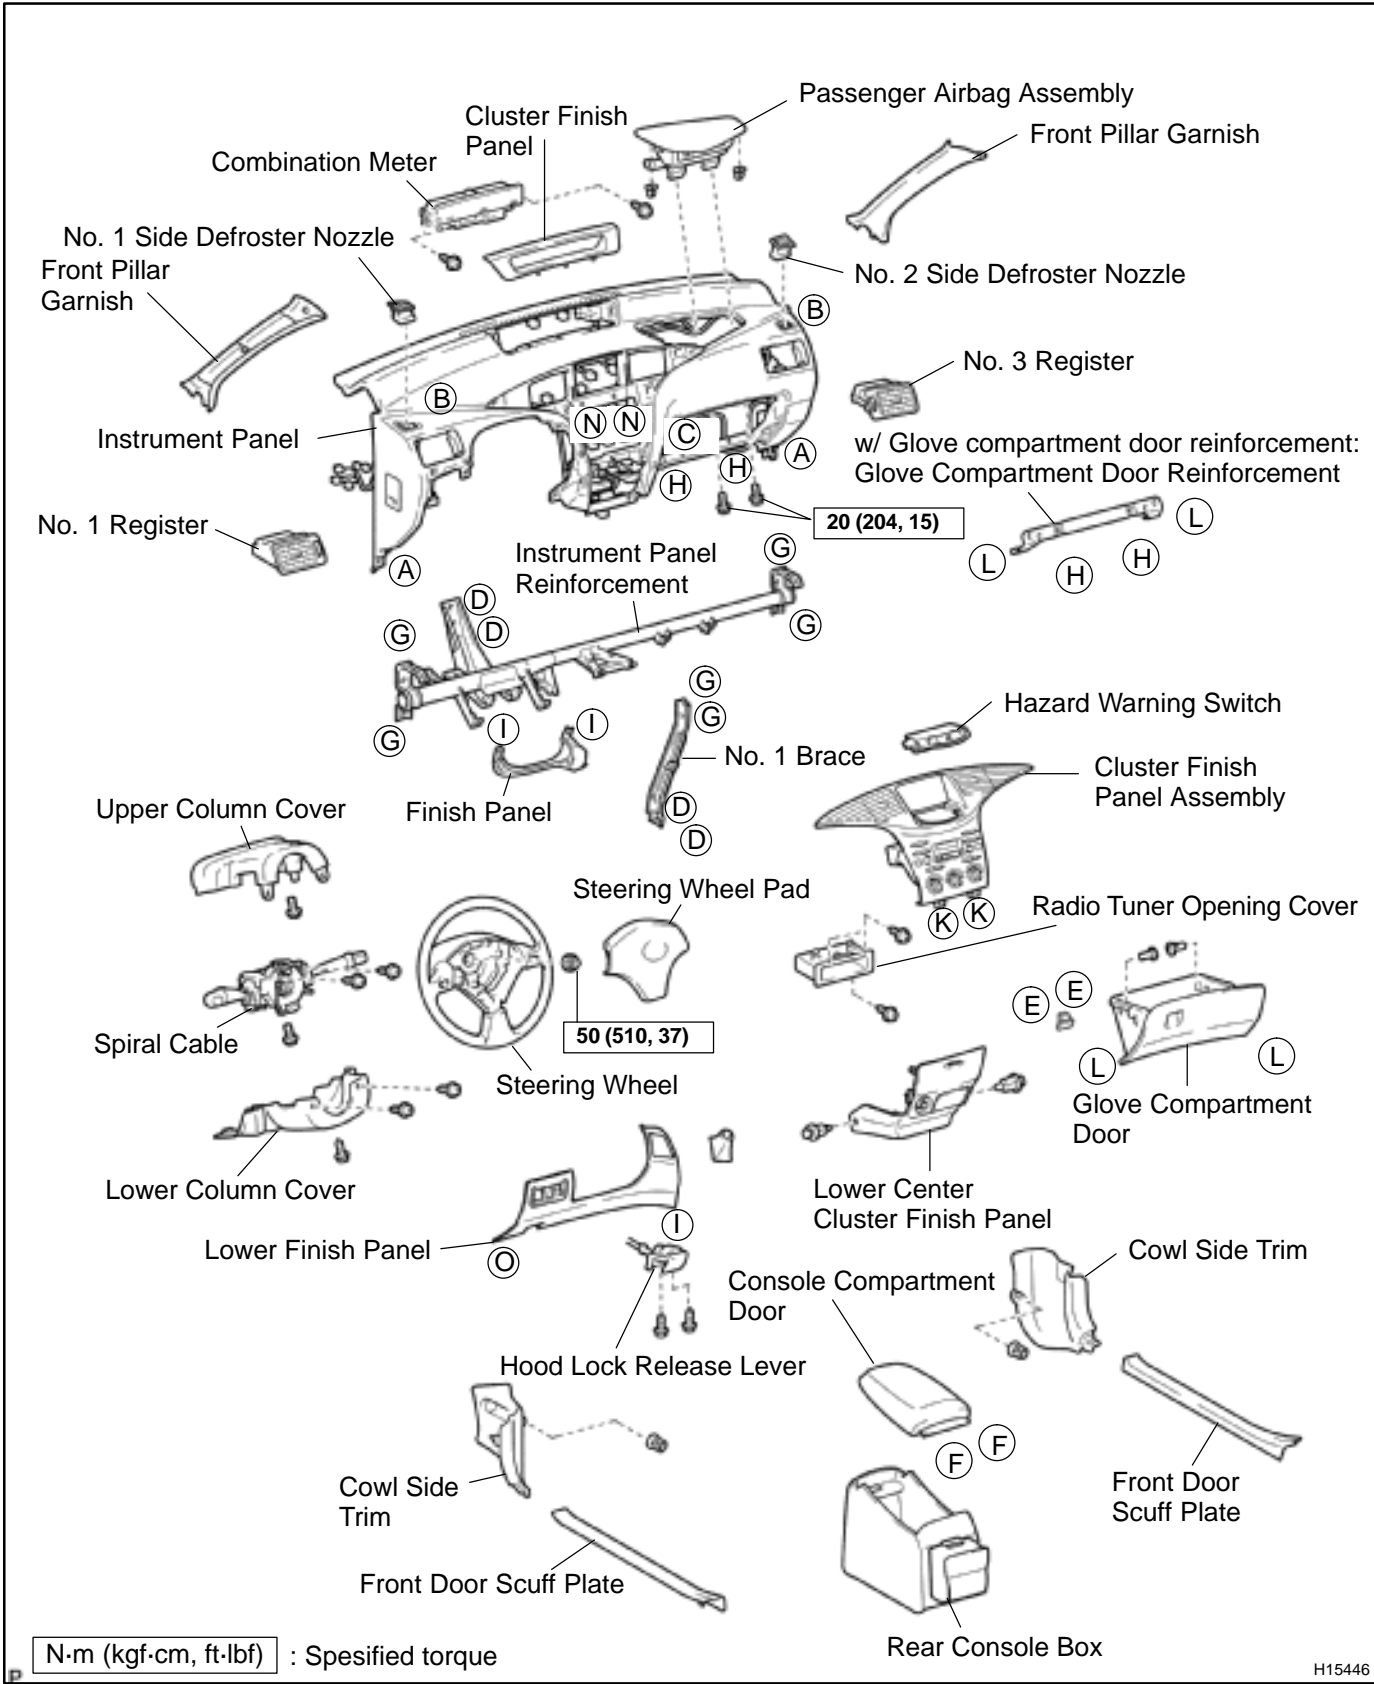

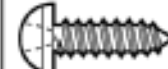





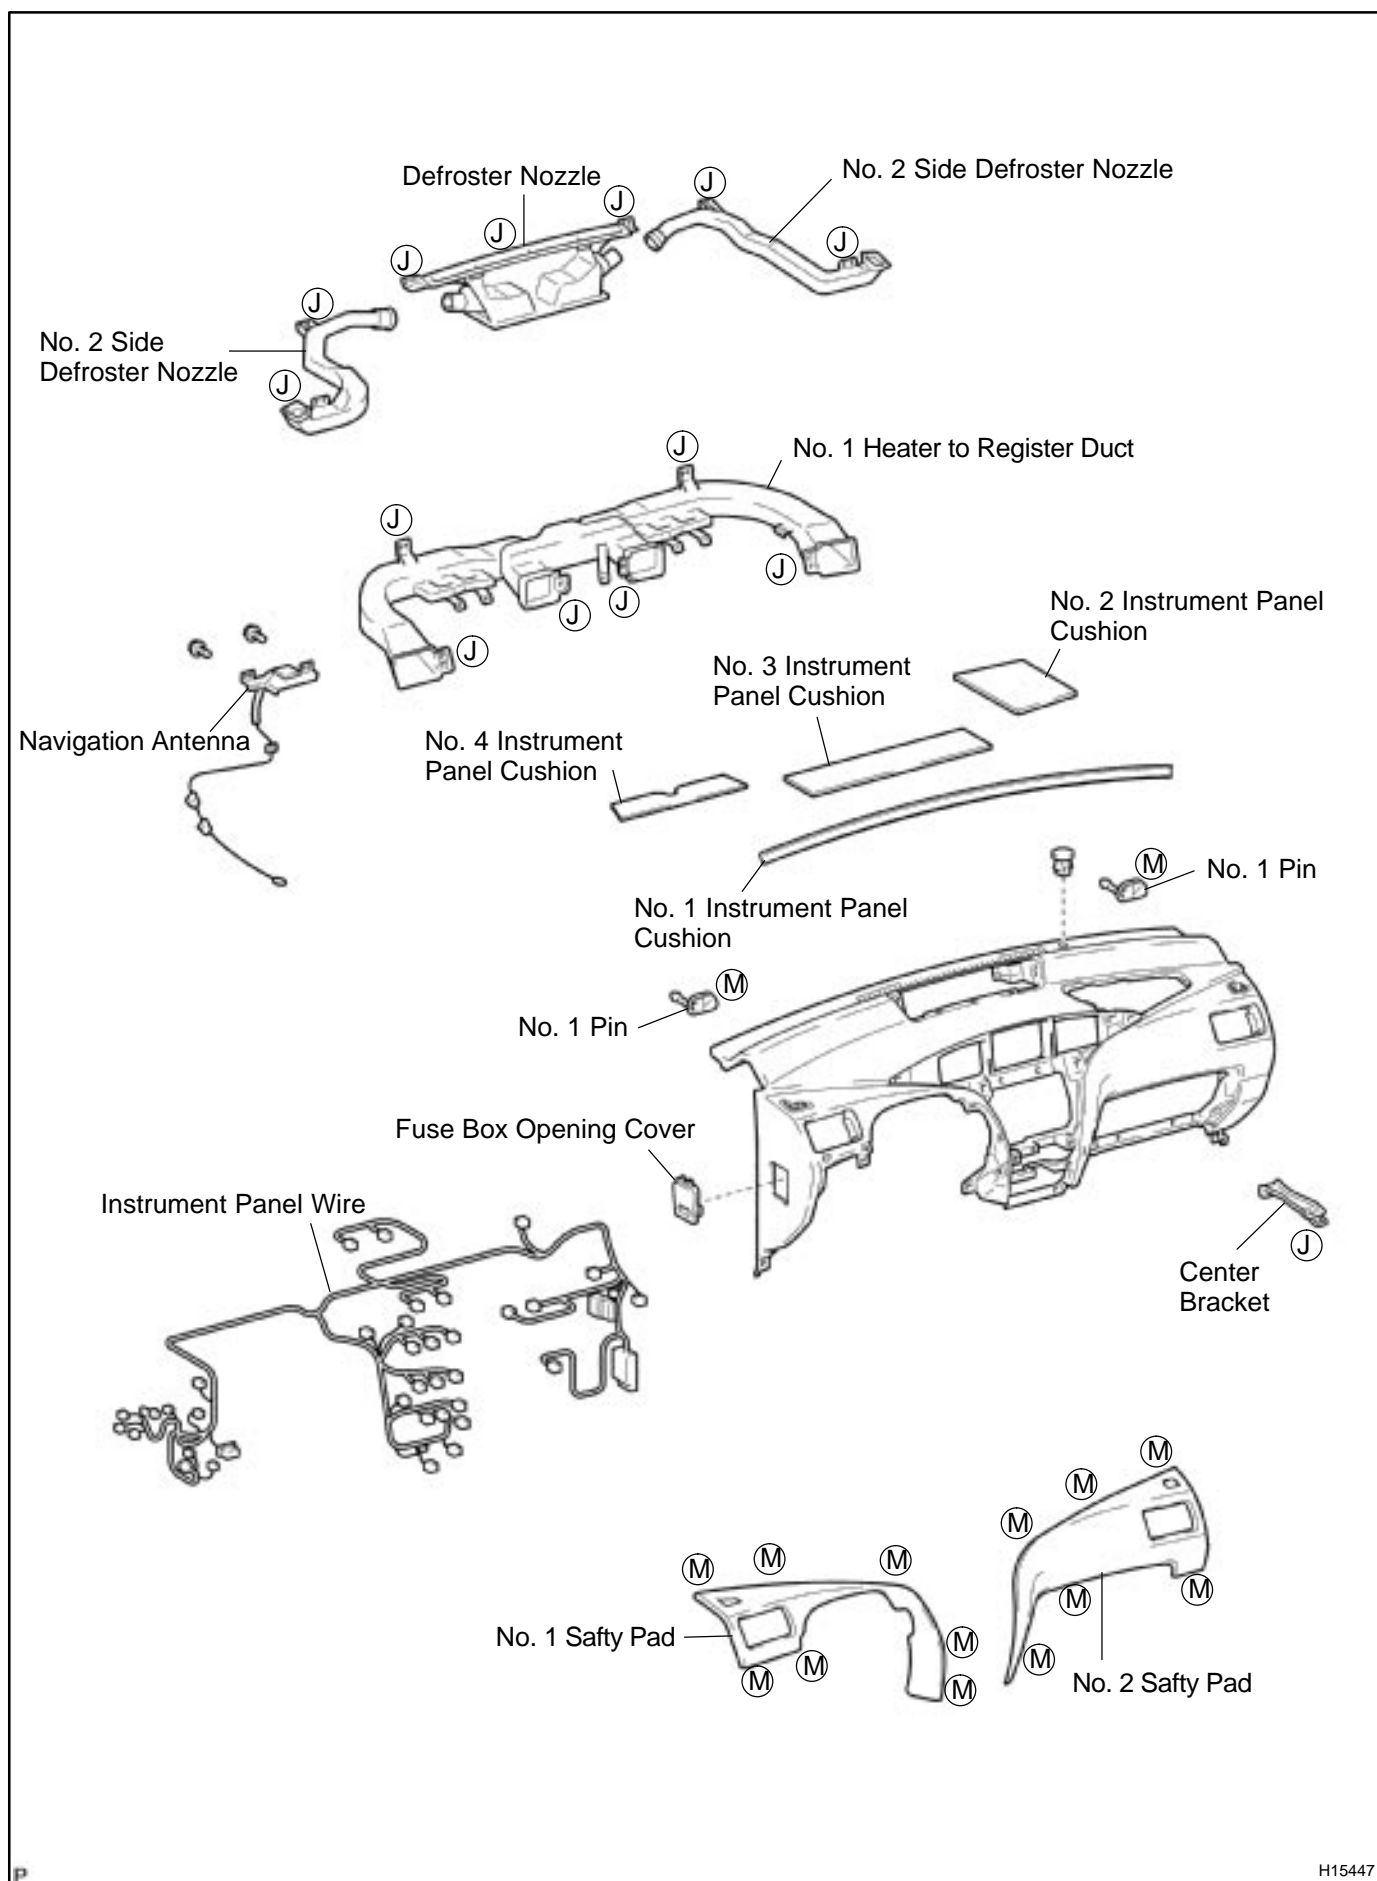







HINT:

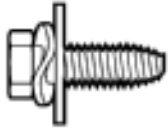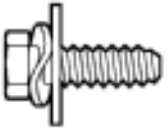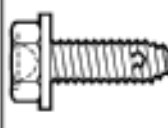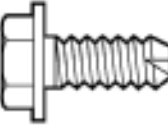Screw shapes and sizes are indicated in the table below. The codes ("A" – "O") correspond to those indicated on the previous pages.

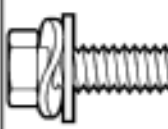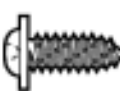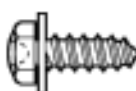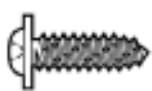mm (in.)

	Shape	Size		Shape	Size		Shape	Size
(A)		$\varnothing = 6$ (0.24) L = 20 (0.79)	(B)		$\varnothing = 6$ (0.24) L = 20 (0.79)	(C)		$\varnothing = 6$ (0.24) L = 20 (0.79)
(D)		$\varnothing = 8$ (0.31) L = 20 (0.79)	(E)		$\varnothing = 4$ (0.16) L = 13 (0.51)	(F)		$\varnothing = 6$ (0.24) L = 20 (0.79)
(G)		$\varnothing = 8$ (0.31)	(H)		$\varnothing = 5.22$ (0.2055) L = 16 (0.63)	(I)		$\varnothing = 6$ (0.24) L = 22 (0.87)
(J)		$\varnothing = 5$ (0.20) L = 14 (0.55)	(K)		$\varnothing = 5$ (0.20) L = 16 (0.63)	(L)		$\varnothing = 5$ (0.20) L = 18 (0.71)
(M)		$\varnothing = 5$ (0.20) L = 14 (0.55)	(N)		$\varnothing = 6$ (0.24)	(O)		$\varnothing = 5$ (0.20) L = 14 (0.55)


T

H15475


cardiagn.com

REMOVAL

1. REMOVE STEERING WHEEL PAD AND STEERING WHEEL (See page [SR-4](#))
2. REMOVE FRONT DOOR SCUFF PLATES
3. REMOVE COWL SIDE TRIMS
4. REMOVE FRONT PILLAR GARNISHES

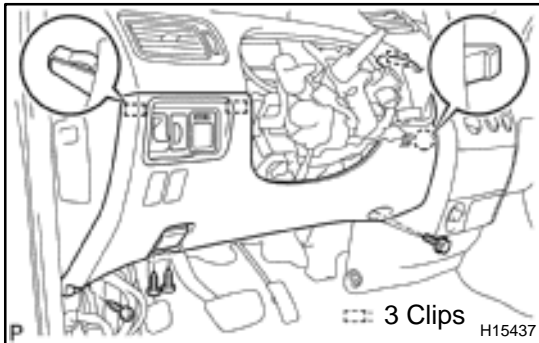

5. REMOVE LOWER FINISH PANEL
 - (a) Remove the 2 screws and hood lock release lever.
 - (b) Zip the shifting hole cover open.
 - (c) Remove the bolt and screw.
 - (d) Using a screwdriver, remove the lower finish panel, then disconnect the connectors and DLC3.
 - (e) Remove the shifting hole cover from the lower finish panel.
6. REMOVE FINISH PANEL
7. REMOVE COLUMN COVERS (See page [SR-4](#))
8. REMOVE SPIRAL CABLE (See page [SR-4](#))
9. REMOVE GLOVE COMPARTMENT DOOR
 - (a) Rotate the stoppers of the glove compartment door to 90° and pull them out inward.
 - (b) Remove the 2 screws and glove compartment door.
 - (c) Remove the 2 screws and glove compartment door lock from the glove compartment door.

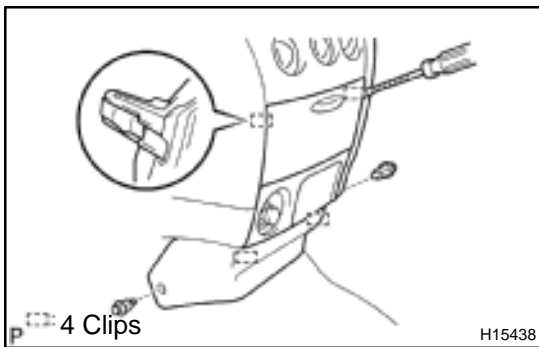


10. REMOVE LOWER CENTER CLUSTER FINISH PANEL
 - (a) Remove the 2 clips.
 - (b) Using a screwdriver, remove the lower center cluster finish panel.

HINT:

Tape the screwdriver tip before use.

- (c) Disconnect the connector.

11. **w/ Glove compartment door reinforcement:**
REMOVE GLOVE COMPARTMENT DOOR REINFORCEMENT

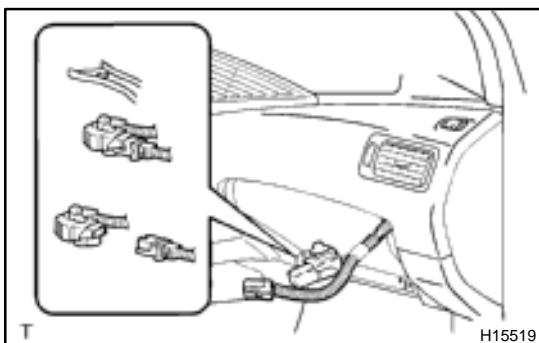


12. DISCONNECT PASSENGER AIRBAG CONNECTOR

- (a) Disconnect the passenger airbag connector.

NOTICE:

When disconnecting the airbag connector, take care not to damage the airbag wire harness.


- (b) Disengage the airbag connector clamp from the center bracket.

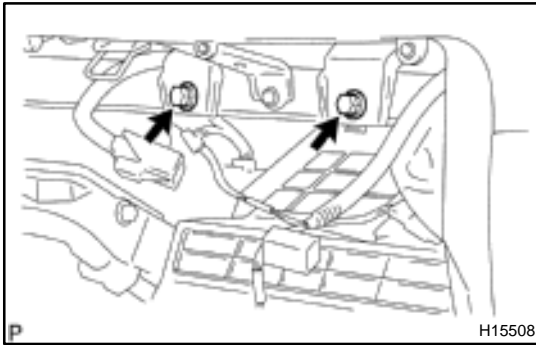

13. REMOVE PASSENGER AIRBAG ASSEMBLY

- (a) Remove the 2 bolts.

Torque: 20 N·m (204 kgf-cm, 15 ft-lbf)

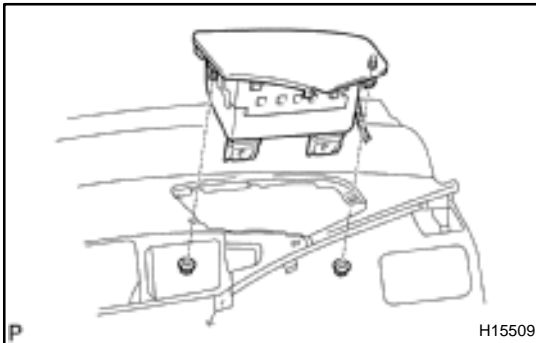


- (b) Remove the 2 nuts and passenger airbag assembly.

CAUTION:

- Do not store the passenger airbag assembly with the airbag deployment side facing down.
- Never disassemble the passenger airbag assembly.

NOTICE:

When removing the passenger airbag assembly, take care not to damage the wire harness.

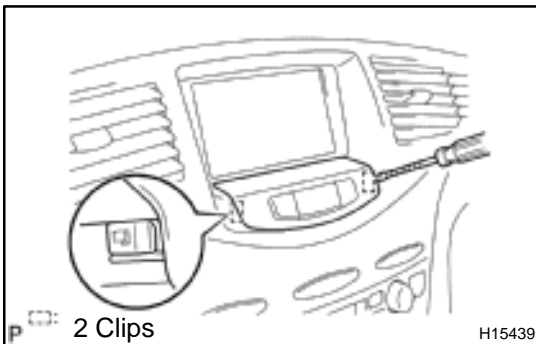


14. REMOVE HAZARD WARNING SWITCH

- (a) Using a screwdriver, remove the hazard warning switch.

HINT:

Tape the screwdriver tip before use.

- (b) Disconnect the connectors.

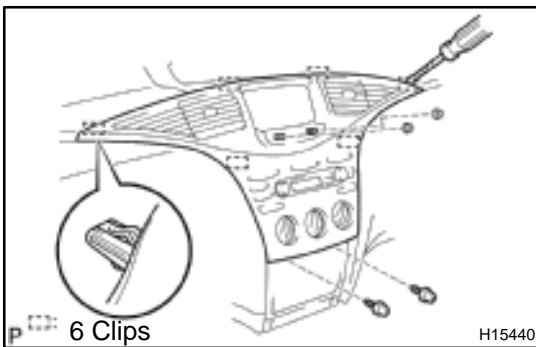


15. REMOVE CLUSTER FINISH PANEL ASSEMBLY

- (a) Remove the 2 screws.

- (b) Using a screwdriver, remove the cluster finish panel assembly.

- (c) Disconnect the connectors.

16. REMOVE RADIO OR RADIO TUNER OPENING COVER

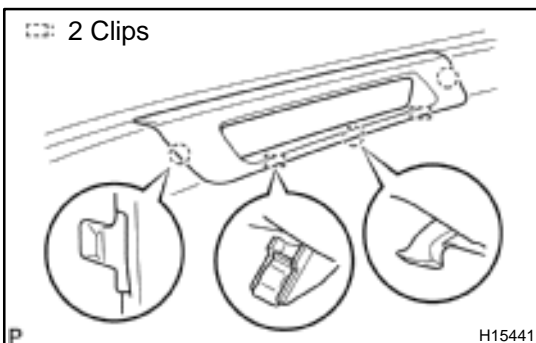

17. REMOVE COMBINATION METER


- (a) Using a screwdriver, remove the cluster finish panel.

HINT:

Tape the screwdriver tip before use.

- (b) Remove the 3 screws and combination meter.

- (c) Disconnect the connector.

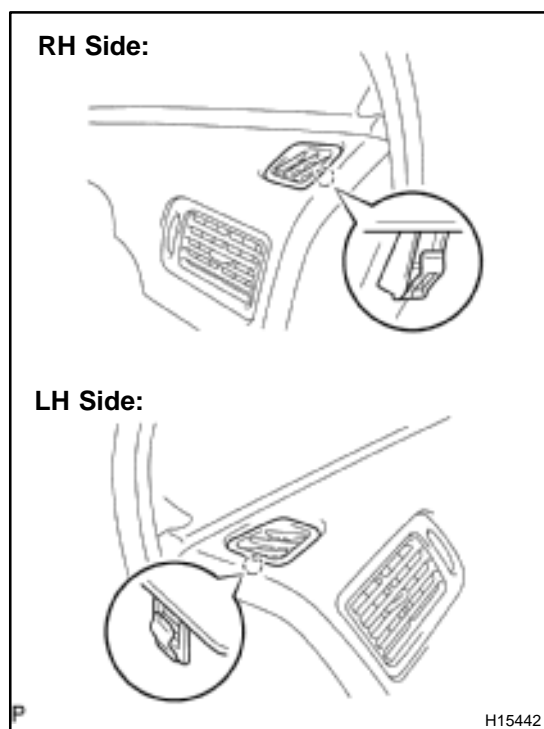


18. REMOVE NO. 1 AND NO. 2 SIDE DEFROSTER NOZZLES

Using a screwdriver, remove the No. 1 and No. 2 side defroster nozzles.

HINT:

Tape the screwdriver tip before use.

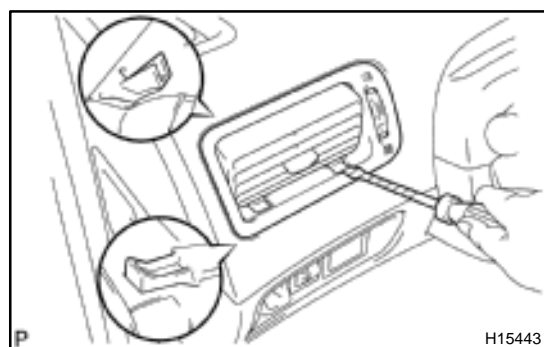

19. REMOVE NO. 1 AND NO. 3 REGISTERS

Using a screwdriver, remove the No. 1 and No. 3 registers as shown in the illustration.


HINT:

Tape the screwdriver tip before use.

20. REMOVE STEERING COLUMN (See page [SR-4](#))

21. REMOVE INSTRUMENT PANEL

- Disconnect the connectors.
- Disengage the wire harness clamps.
- Remove the 4 bolts, 3 screws and instrument panel.

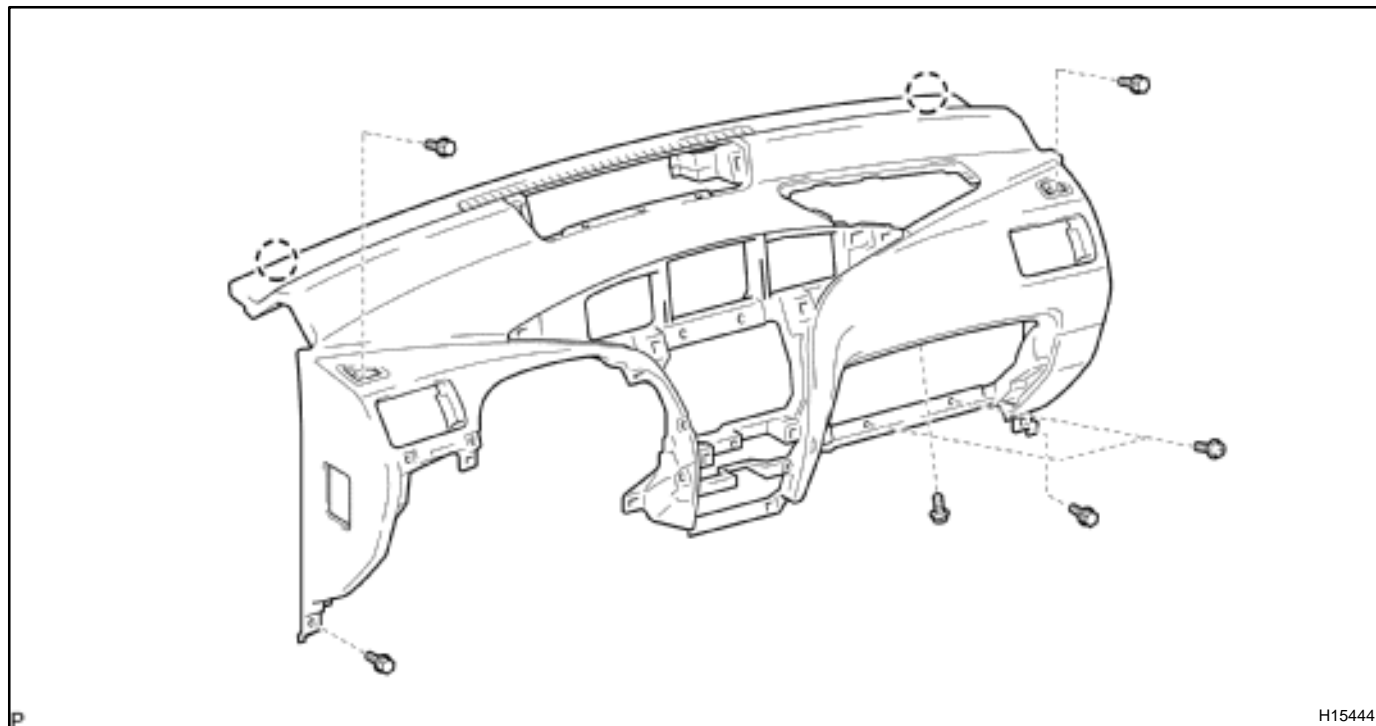

22. REMOVE NO. 1 BRACE**23. REMOVE INSTRUMENT PANEL REINFORCEMENT**


Remove the 2 bolts, 4 nuts and instrument panel reinforcement.

24. REMOVE REAR CONSOLE BOX

- (a) Remove the 3 bolts and rear console box.
- (b) Remove the 2 screws and console compartment door from the rear console box.

REMOVAL

1. REMOVE REAR SEAT CUSHION (See page [BO-83](#))
2. REMOVE REAR SEATBACK (See page [BO-83](#))

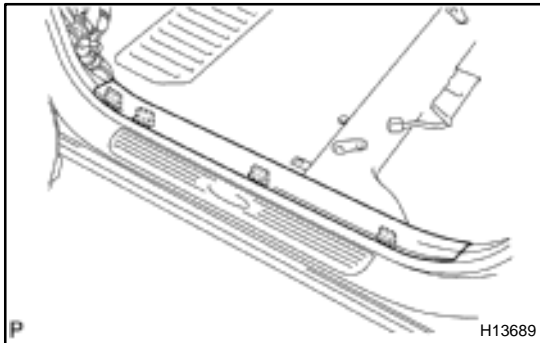


3. REMOVE FRONT DOOR INSIDE SCUFF PLATE

- (a) Using a screwdriver, remove the front door inside scuff plate.

HINT:

Tape the screwdriver tip before use.

- (b) Employ the same manner described above to the other side.

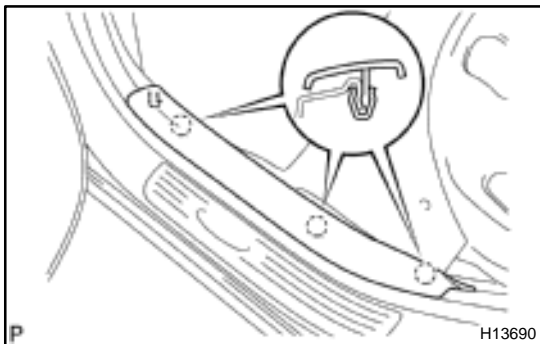


4. REMOVE REAR DOOR INSIDE SCUFF PLATE

- (a) Using a screwdriver, remove the rear door inside scuff plate.

HINT:

Tape the screwdriver tip before use.

- (b) Employ the same manner described above to the other side.

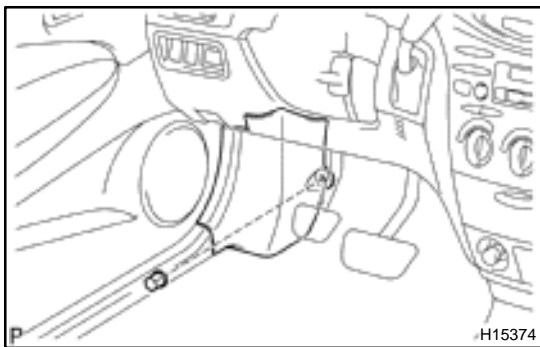


5. REMOVE COWL SIDE TRIM

- (a) Remove the clip and cowl side trim.
- (b) Employ the same manner described above to the other side.

6. REMOVE FRONT DOOR OPENING TRIMS

7. REMOVE REAR DOOR OPENING TRIMS

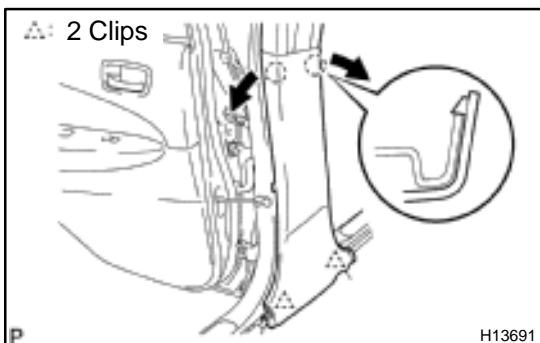


8. REMOVE CENTER PILLAR LOWER GARNISH

- (a) Using a screwdriver, remove the center pillar lower garnish.

HINT:

Tape the screwdriver tip before use.

- (b) Employ the same manner described above to the other side.

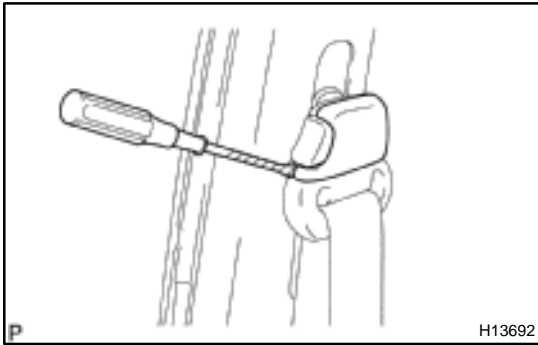

9. REMOVE FRONT SEAT OUTER BELT SHOULDER ANCHOR

- (a) Using a screwdriver, remove the anchor cover cap.


HINT:

Tape the screwdriver tip before use.

- (b) Remove the bolt and front seat outer belt shoulder anchor.

Torque: 42 N·m (430 kgf-cm, 31 ft-lbf)

- (c) Employ the same manner described above to the other side.

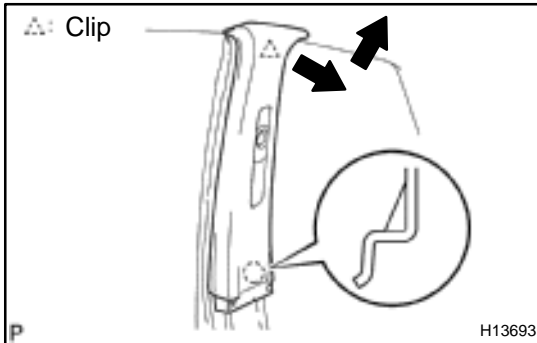


10. REMOVE CENTER PILLAR GARNISH

- (a) Using a screwdriver, remove the center pillar garnish.

HINT:

Tape the screwdriver tip before use.

- (b) Employ the same manner described above to the other side.

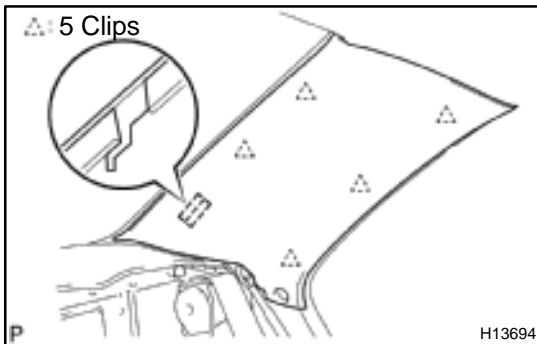


11. REMOVE ROOF SIDE INNER GARNISH

- (a) Using a screwdriver, remove the roof side inner garnish.

HINT:

Tape the screwdriver tip before use.

- (b) Employ the same manner described above to the other side.

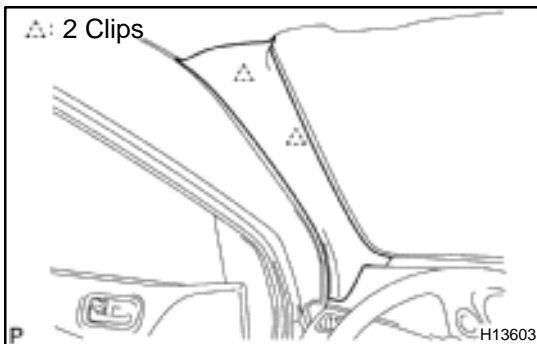

12. REMOVE FRONT PILLAR GARNISH AND NO. 1 FRONT PILLAR SPACERS


- (a) Using a screwdriver, remove the front pillar garnish.

HINT:

Tape the screwdriver tip before use.

- (b) Remove the 4 screws and 2 No. 1 front pillar spacers.

- (c) Employ the same manner described above to the other side.

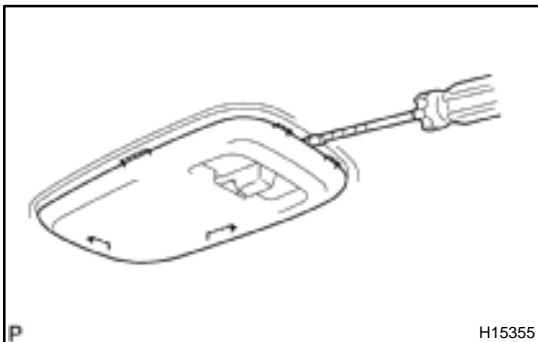

13. REMOVE ROOM LIGHT ASSEMBLY


- (a) Using a screwdriver, remove the lens.

HINT:


Tape the screwdriver tip before use.

- (b) Remove the 2 screws and room light assembly.

- (c) Disconnect the connector.

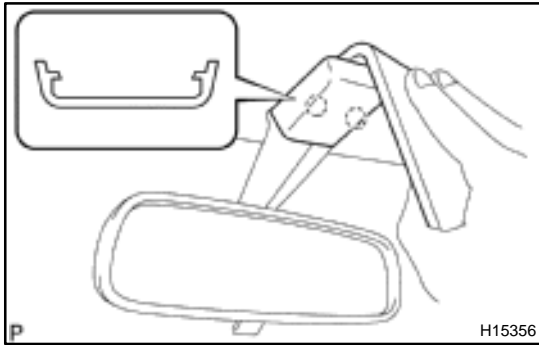**14. REMOVE INNER REAR VIEW MIRROR**

- (a) Using a moulding remover, remove the cover as shown in the illustration.

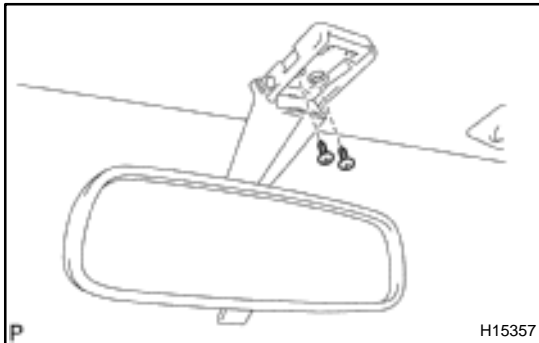

- (b) Remove the 2 screws and inner rear view mirror.

Torque: 2.9 N·m (30 kgf·cm, 26 in.-lbf)

15. REMOVE MAP LAMP

- (a) Using a screwdriver, remove the map lamp.
 (b) Disconnect the map lamp connector.

16. REMOVE ASSIST GRIPS

- (a) Using a screwdriver, remove the caps.

HINT:

Tape the screwdriver tip before use.

- (b) Remove the 6 bolts and 3 assist grips.

17. REMOVE HIGH-MOUNTED STOP LIGHT

- (a) Remove the clip then pull the high-mounted stoplight cover.
 (b) Disconnect the connector.
 (c) Remove the 2 screws and high-mounted stop light.

18. REMOVE SUN VISORS




- (a) Remove the 4 screws and pull the sun visors downward.
 (b) Disconnect the connectors.

19. REMOVE SUN VISOR HOLDERS

Remove the 2 screws and 2 holders.

20. REMOVE ROOF HEADLINING

- (a) Remove the 2 clips.
 (b) Pull the roof headlining downward to remove it.

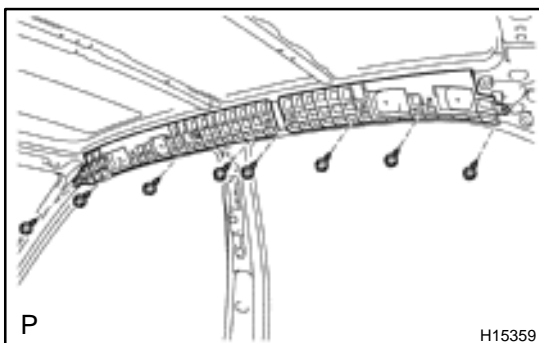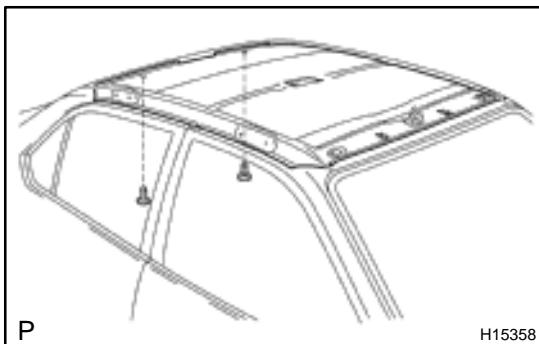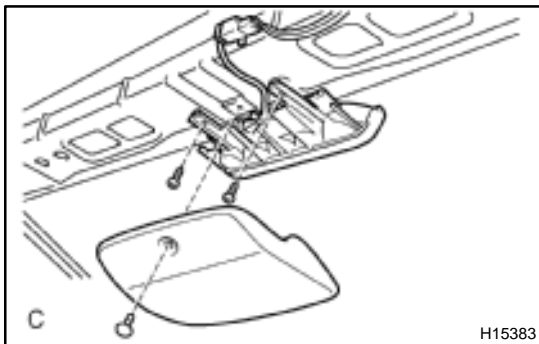**21. REMOVE FRONT AND REAR SIDE RAIL SPACER**

- (a) Remove the 4 screws and front side rail spacer.
 (b) Remove the 4 screws and rear side rail spacer.
 (c) Employ the same manner described above to the other side.


DISASSEMBLY

CAUTION:

- When storing the seatback frame with the side airbag assembly, do not face down the airbag deployment side.
- Never disassemble the side airbag assembly.

1. REMOVE HEADREST

2. REMOVE RECLINING RELEASE HANDLE

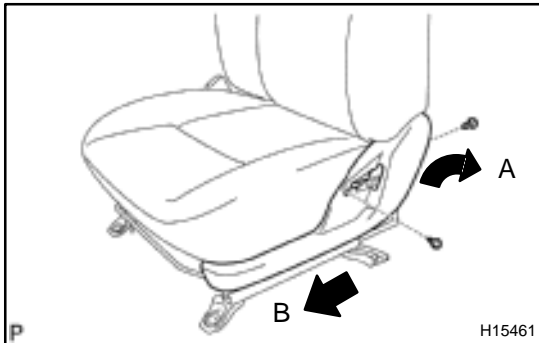

3. REMOVE SEAT CUSHION SHIELD

Remove the 2 screws and seat cushion shield as shown in the illustration.

HINT:


Remove the seat cushion shield in order A, B as shown in the illustration.

4. REMOVE FRONT SEAT INNER BELT

Remove the bolt and front seat inner belt.

5. REMOVE SEAT CUSHION INNER SHIELD


Remove the 2 screws and seat cushion inner shield.

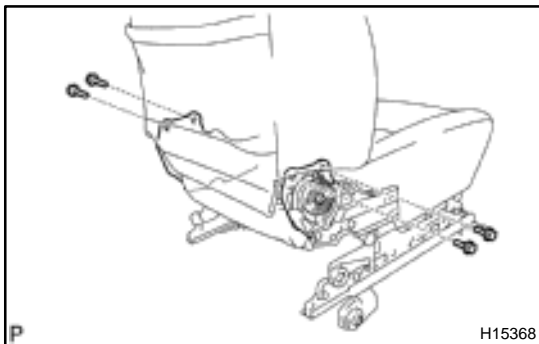

6. w/o Side airbag:

REMOVE SEATBACK ASSEMBLY


Remove the 4 bolts and seatback assembly.

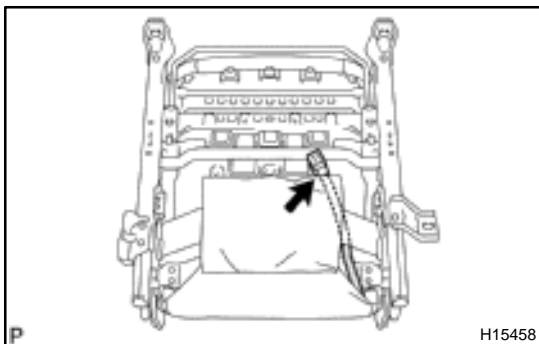

7. w/ Side airbag:

REMOVE SEATBACK ASSEMBLY


- Remove the clamp from wire harness of side airbag installed under the seat, then pull out the wire harness.
- Remove the side airbag connector from the under the seat.
- Remove the 4 bolts and seatback assembly.

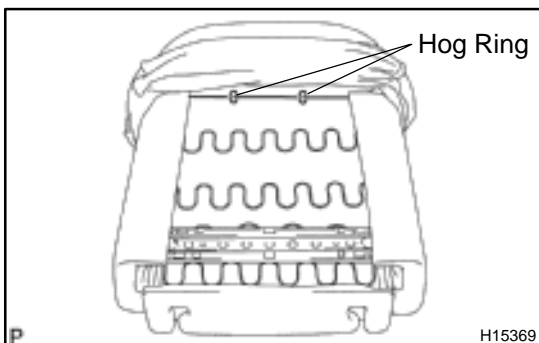


8. w/o Side airbag:

REMOVE SEATBACK COVER

- Remove the hog rings.
- Remove the headrest supports.
- Remove the seatback cover with pad from the seatback frame.
- Remove the seatback cover from the seatback pad.

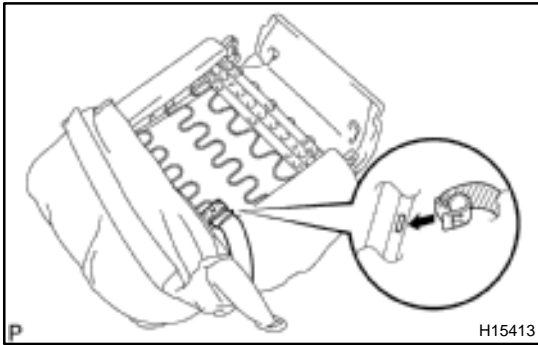**9. w/ Side airbag:****REMOVE SEATBACK COVER**


- (a) Remove the hog rings.
- (b) Remove seatback cover hook.
- (c) Remove the headrest supports.
- (d) Remove the seat back cover with pad from the seatback frame.
- (e) Remove the seatback cover from the seatback pad.

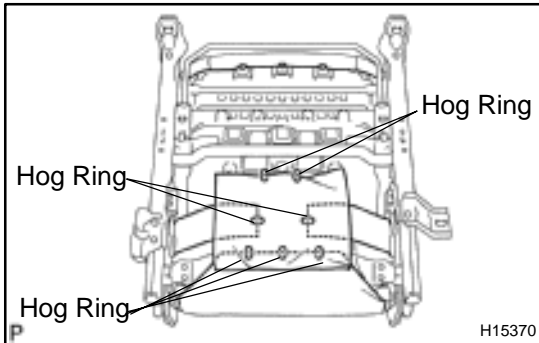**10. REMOVE SEAT CUSHION COVER WITH PAD**

- (a) Remove the hog rings.
- (b) Disengage the seat cushion cover hooks and remove the seat cushion cover with pad from the seat cushion frame.

11. REMOVE SEAT CUSHION COVER

- (a) Remove the hog rings.
- (b) Remove the seat cushion cover from the seat cushion pad.

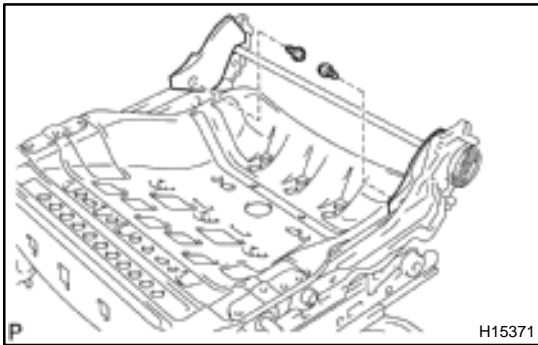**12. REMOVE RECLINING ADJUSTER INSIDE COVERS**


Remove the 2 screws and 2 reclining adjuster inside covers.

13. REMOVE SEAT TRACK HANDLE

REASSEMBLY

NOTICE:

If the seatback frame with the side airbag assembly has been dropped, or there are cracks, dents or other defects in the case or connector of the side airbag assembly, replace the seatback frame with a new one.

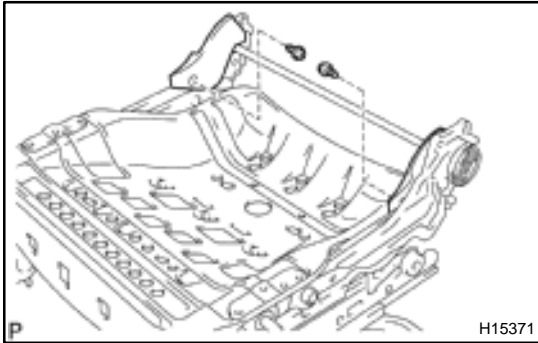

1. INSTALL SET TRACK HANDLE

2. INSTALL RECLINING ADJUSTER INSIDE COVERS


Install the 2 screws and 2 reclining adjuster inside covers.

3. INSTALL SEAT CUSHION COVER

Install the seat cushion cover with new hog rings to seat cushion pad.

HINT:

When installing hog rings, take care to prevent wrinkles as little as possible.

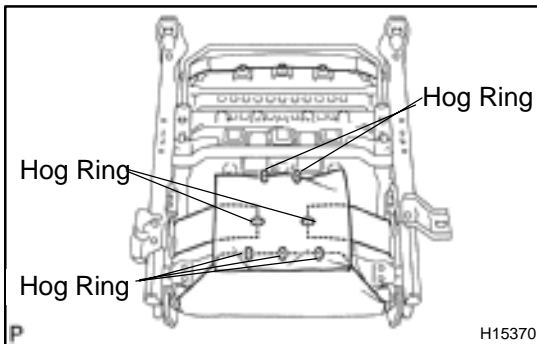


4. INSTALL SEAT CUSHION COVER WITH PAD

Install the seat cushion cover with pad to the seat cushion frame with new hog rings.

HINT:


When installing hog rings, take care to prevent wrinkles as little as possible.

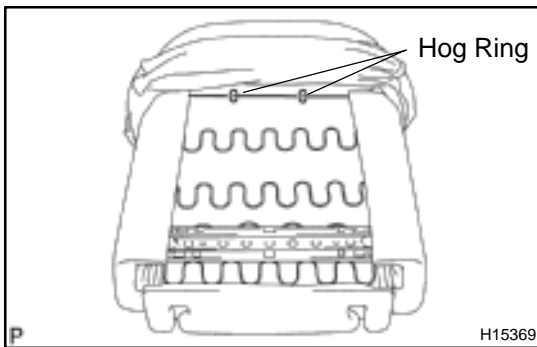

5. w/o Side airbag:

INSTALL SEATBACK COVER

- Install the seatback cover with new hog rings to the seatback pad.
- Install the seatback cover with pad to the seatback frame with new hog ring.
- Install the headrest supports.

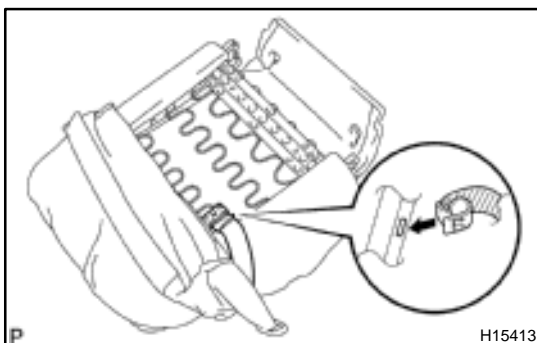

6. w/ Side airbag:


INSTALL SEATBACK COVER

- Install the seatback cover with new hog rings to the seatback pad.
- Install the seatback cover with pad to the seatback frame with new hog rings.
- Install the seatback cover hook.

CAUTION:

Take care to hung the hook securely. Otherwise the seat cover slides, it might cause incorrect deploying.


- (d) Install the headrest supports.

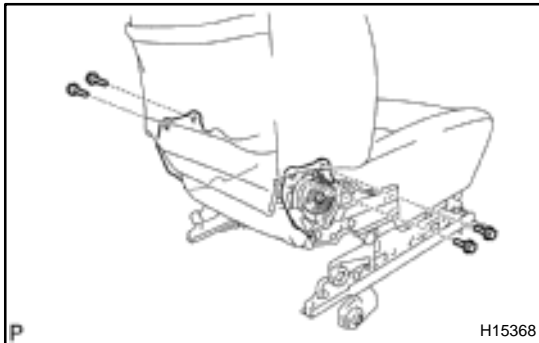

**7. w/o Side airbag:
INSTALL SEATBACK ASSEMBLY**

Install seatback assembly with 4 bolts.

Torque: 43 N·m (440 kgf-cm, 32 ft-lbf)

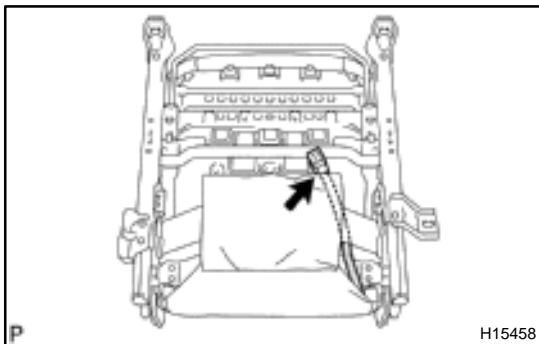

**8. w/ Side airbag:
INSTALL SEATBACK ASSEMBLY**

- Install the 4 bolts and seatback assembly.
- Install the side airbag connector from the under the seat.
- Install the clamp from wire harness of side airbag removed under the seat.

9. INSTALL SEAT CUSHION INNER SHIELD

10. INSTALL FRONT SEAT INNER BELT

Install the front seat inner belt with the bolt.

Torque: 41 N·m (420 kgf-cm, 30 ft-lbf)

11. INSTALL SEAT CUSHION SHIELD


Install the 2 screws and seat cushion shield as shown in the illustration.

HINT:

Install the seat cushion shield in order A, B as shown in the illustration.

12. INSTALL RECLINING RELEASE HANDLE

13. INSTALL HEADREST

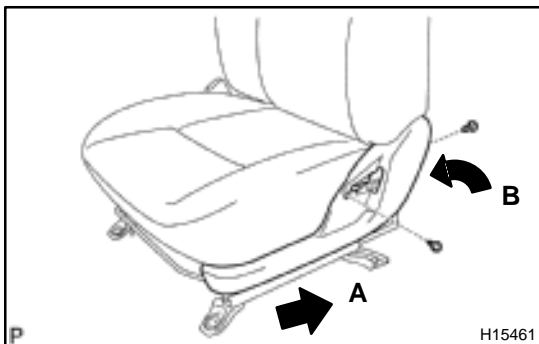


INSPECTION

CAUTION:

Replace the seat belt assembly (outer belt, inner belt, bolts, nuts or sill-bar) if it has been used in a severe impact. The entire assembly should be replaced even if damage is not obvious.

1. RUNNING TEST (IN SAFE AREA)

- (a) Fasten the front seat belts.
- (b) Drive the car at 10 mph (16 km/h) and slam on the brakes. Check that the belt locks and cannot be extended at this time.

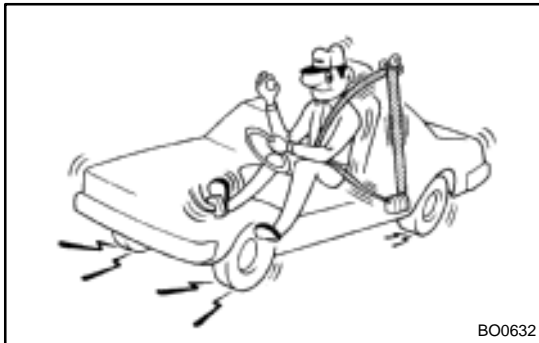


HINT:

Conduct this test in a safe area. If the belt does not lock, remove the belt mechanism assembly and conduct the following static check. Also, whenever installing a new belt assembly, verify the proper operation before installation.

2. Driver's seat belt (ELR): STATIC TEST

- (a) Make sure that the belt locks when pulled out quickly.
- (b) Remove the locking retractor assembly.
- (c) Tilt the retractor slowly.

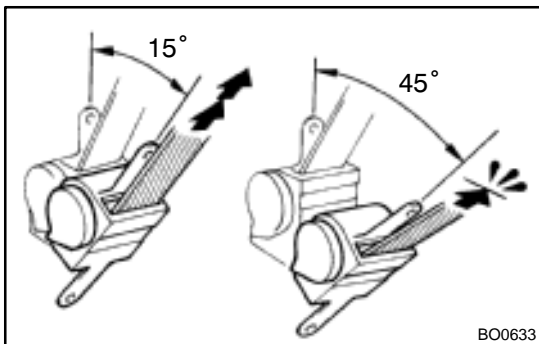

- (d) Make sure that belt can be pulled out at a tilt of 15 degrees or less, and cannot be pulled out over 45 degrees of tilt. If a problem is found, replace the assembly.


3. Except driver's seat belt (ALR/ELR): STATIC TEST

- (a) Make sure that the belt locks when pulled out quickly.
- (b) Remove the locking retractor assembly.
- (c) Pull out the whole belt and measure the length of the whole belt.


Then retract the belt slightly and pull it out again.

- (d) Make sure that the belt cannot be extended further. If a problem is found, replace the assembly.

BODY – SEAT BELT

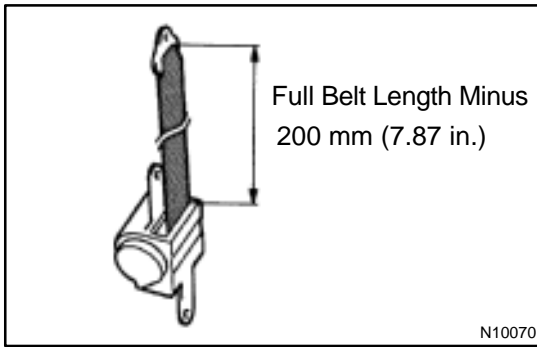

- (e) Retract whole belt, then pull out the belt until 200 mm (7.87 in.) of belt remains retracted.
- (f) Tilt the retractor slowly.

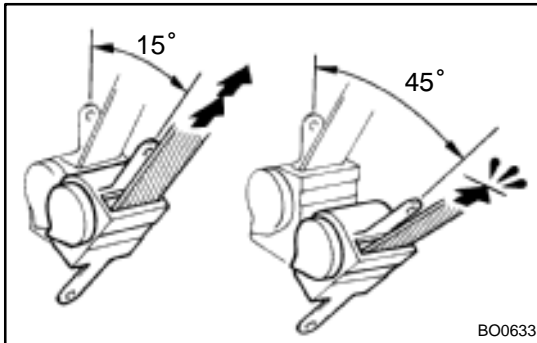

- (g) Make sure that the belt can be pulled out at a tilt of 15 degrees or less, and cannot be pulled out at over 45 degrees of tilt.


If problem is found, replace the assembly.

SEAT BELT PRETENSIONER REMOVAL

B03T6-01

NOTICE:

- If the wiring connector of the seat belt pretensioner is disconnected with the ignition switch at ON or ACC, diagnostic trouble codes will be recorded.
- Never use seat belt pretensioner from another vehicle. When replacing parts, replace them with new parts.

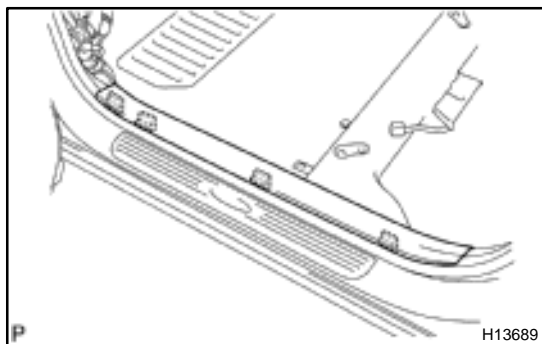


1. REMOVE FRONT DOOR INSIDE SCUFF PLATE

Using a screwdriver, remove the front door inside scuff plate.

HINT:

Tape the screwdriver tip before use.

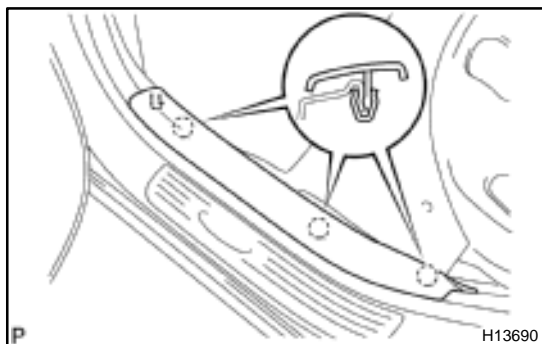

2. REMOVE REAR DOOR INSIDE SCUFF PLATE


Using a screwdriver, remove the rear door inside scuff plate.

HINT:

Tape the screwdriver tip before use.


3. REMOVE FRONT DOOR OPENING TRIM

4. REMOVE REAR DOOR OPENING TRIM

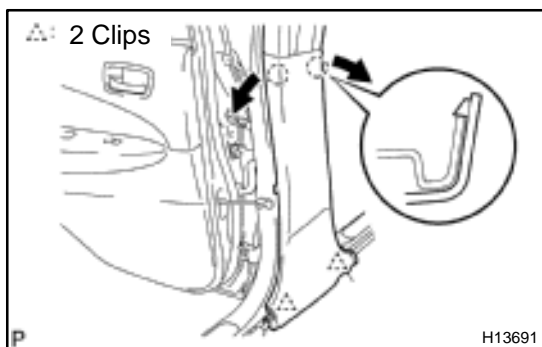

5. REMOVE CENTER PILLAR LOWER GARNISH

Remove the center pillar lower garnish as shown in the illustration.

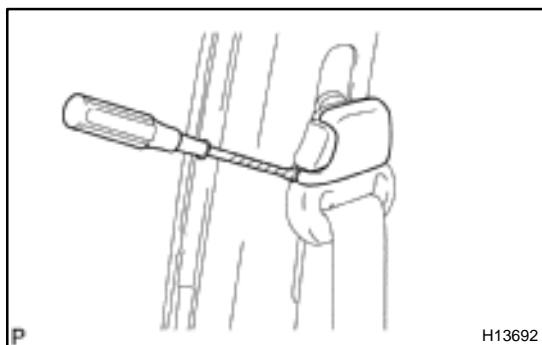

6. REMOVE FRONT SEAT OUTER BELT

(a) Using a screwdriver, remove the shoulder anchor cover.

HINT:

Tape the screwdriver tip before use.

(b) Remove the bolt and shoulder anchor.

(c) Using a screwdriver, remove the floor anchor cover.

HINT:

Tape the screwdriver tip before use.

(d) Remove the bolt and floor anchor.

(e) Driver's side:


Remove the retractor of front seat outer belt.

CAUTION:

Never disassemble the front seat outer belt.

NOTICE:

When removing the retractor of front seat outer belt, take care not to pull the seat belt pretensioner wire harness.

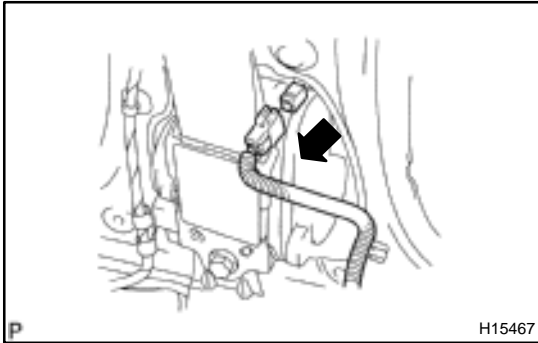

(1) Disconnect the pretensioner connector as shown in the illustration.

(2) Disconnect the tension reducer connector.

CAUTION:

When removing the seat belt pretensioner, work must be started 90 seconds after the ignition switch is turned to the "LOCK" position and the negative (-) terminal cable is disconnected from the battery.

NOTICE:

When handling the pretensioner connector and tensionreducer, take care not to damage the harness.

(3) Remove the bolts and retractor of front seat outer belt.

(f) Except driver's side:

Remove the retractor of front seat outer belt.

CAUTION:

Never disassemble the front seat outer belt.

NOTICE:

When removing the retractor of front seat outer belt, take care not to pull the seat belt pretensioner wire harness.



(1) Disconnect the pretensioner connector as shown in the illustration.

CAUTION:

When removing the seat belt pretensioner, work must be started 90 seconds after the ignition switch is turned to the "LOCK" position and the negative (-) terminal cable is disconnected from the battery.

NOTICE:

When handling the pretensioner connector and tensionreducer, take care not to damage the harness.

(2) Remove the bolts and retractor of front seat outer belt.


DISPOSAL

HINT:


When scrapping vehicles equipped with a seat belt pretensioner or disposing of a front seat outer belt (with seat belt pretensioner) always first activate the seat belt pretensioner in accordance with the procedure described below. If any abnormality occurs in the seat belt pretensioner operation, contact the SERVICE DEPT. of the TOYOTA MOTOR SALES, USA, INC.

CAUTION:

- **Never dispose of the front seat outer belt which has an inactivated pretensioner.**
- **The seat belt pretensioner produces a sizeable exploding sound when it activates, so perform the operation out-of-door and where it will not create a nuisance to nearby residents.**

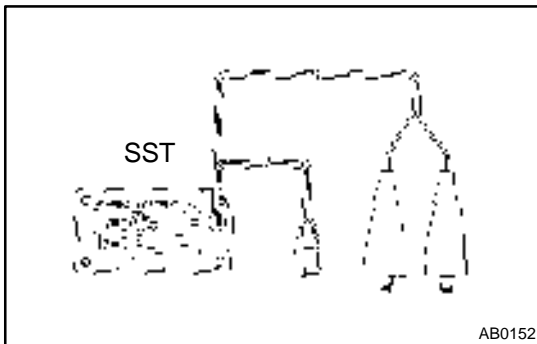


- **When activating the seat belt pretensioner, always use the specified SST. (SRS Airbag Deployment Tool) Perform the operation in a place away from electrical noise.**
SST 09082-00700
- **When activating a front seat outer belt (with seat belt pretensioner), perform the operation at least 10 m (33 ft) away from the front seat outer belt.**
- **The front seat outer belt (with seat belt pretensioner) is very hot when the pretensioner is deployed, so leave it alone for at least 30 minutes after deployment.**
- **Use gloves and safety glasses when handling a front seat outer belt with activated pretensioner.**
- **Always wash your hands with water after completing the operation.**
- **Do not apply water, etc. to a front seat outer belt with the activated pretensioner.**

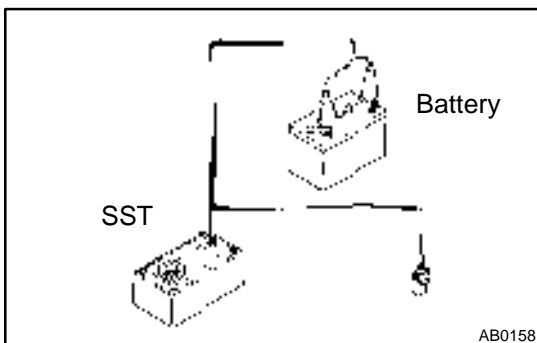

1. SEAT BELT PRETENSIONER ACTIVATION WHEN SCRAPPING VEHICLE

HINT:

Have a battery ready as the power source to activate the seat belt pretensioner.

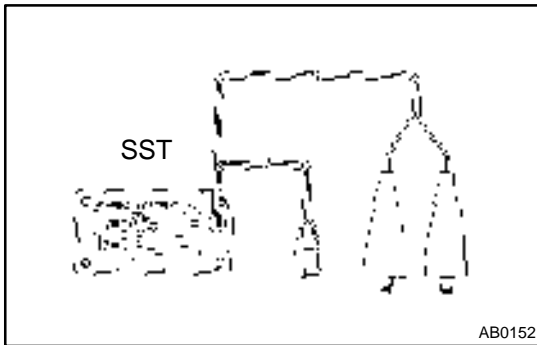

(a) Check the functioning of SST.


CAUTION:

When activating the seat belt pretensioner, always use the specified SST: SRS Airbag Deployment Tool.

SST

Driver's side: 09082-00700, 09082-00730


Except driver's side: 09082-00700, 09082-00740

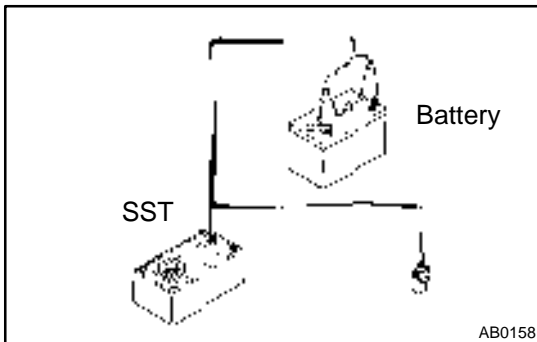

- (1) Connect the SST to the battery.
Connect the red clip of the SST to the battery positive (+) terminal and the black clip to the battery negative (-) terminal.

HINT:

Do not connect the yellow connector which will be connected with the seat belt pretensioner.

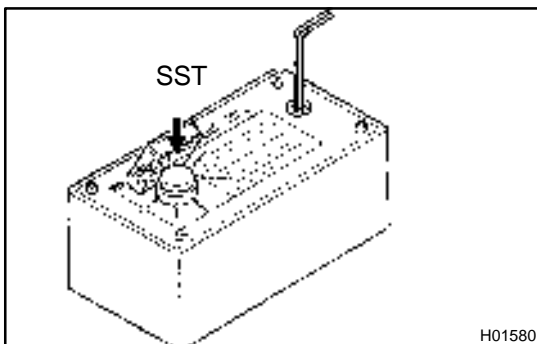


- (2) Press the SST activation switch, and check the LED of the SST activation switch lights up.

CAUTION:

If the LED lights up when the activation switch is not being pressed, SST malfunction is probable, so definitely do not use the SST.

- (3) Disconnect the SST from the battery.


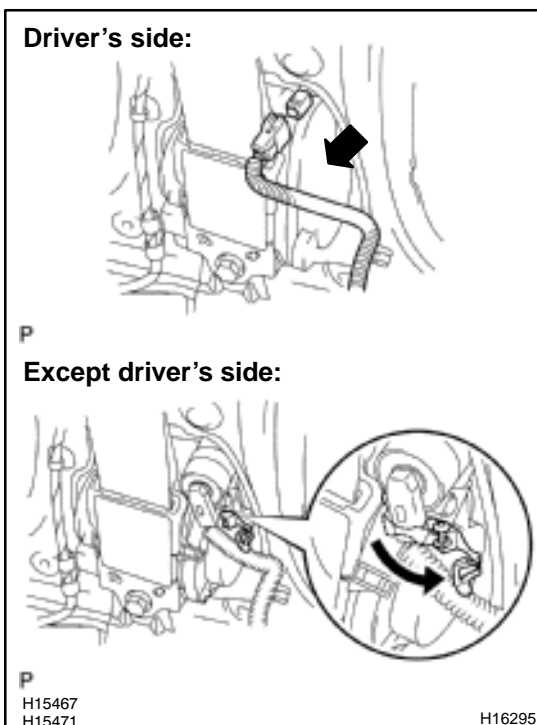


- (b) Disconnect the pretensioner connector.
Disconnect the pretensioner connector as shown in the illustration.

NOTICE:

When handling the pretensioner connector, take care not to damage the wire harness.

- (c) Install the SST.
 - (1) Buckle the front seat belt and check that there is no looseness and slack in the front seat inner belt and front seat outer belt.

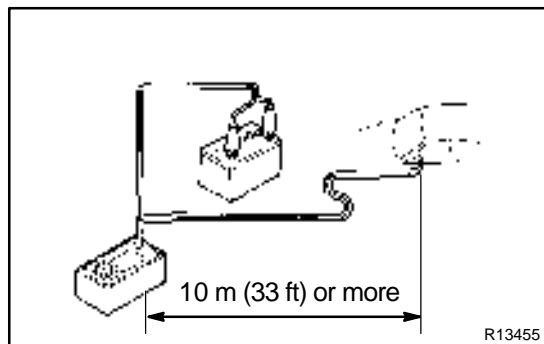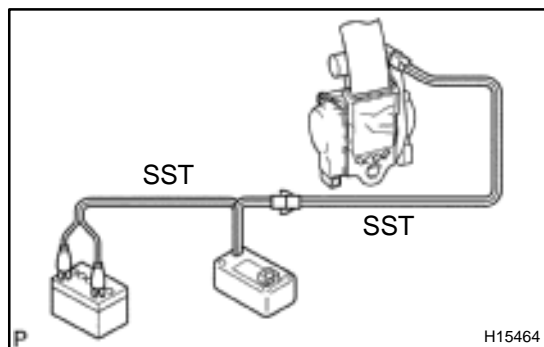

- (2) Connect the 2 SST, then connect them to the seat belt pretensioner.

SST

Driver's side: 09082-00700, 09082-00730

Except driver's side: 09082-00700, 09082-00740

NOTICE:

To avoid damaging the SST connector and wire harness.

- (3) Move the SST to at least 10 m (33 ft) away from the front of the vehicle.

- (4) Close all the doors and windows of the vehicle.

NOTICE:

Take care not to damage the SST wire harness.

- (5) Connect the SST red clip to the battery positive (+) terminal and the black clip to the negative (-) terminal.

- (d) Activate the seat belt pretensioner.

- (1) Confirm that no one is inside the vehicle or within 10 m (33 ft) area around the vehicle.

- (2) Press the SST activation switch and activate the seat belt pretensioner.

HINT:

The seat belt pretensioner operates simultaneously as the LED of the SST activation switch lights up.

- (e) Dispose of the front seat outer belt (with seat belt pretensioner).

CAUTION:

- The front seat outer belt is very hot when the seat belt pretensioner is activated, so leave it alone for at least 30 minutes after activation.
- Use gloves and safety glasses when handling a front seat outer belt with the activated seat belt pretensioner.
- Always wash your hands with water after completing the operation.
- Do not apply water, etc. to a front seat outer belt with the activated seat belt pretensioner.

HINT:

When scrapping a vehicle, activate the seat belt pretensioner and scrap the vehicle with the activated front seat outer belt still installed.

2. ACTIVATION WHEN DISPOSING OF FRONT SEAT OUTER BELT ONLY

NOTICE:

- When disposing of the front seat outer belt (with seat belt pretensioner) only, never use the customer's vehicle to activate the seat belt pretensioner.

- **Be sure to follow the procedure given on the next page when activating the seat belt pretensioner.**


HINT:

Have a battery ready as the power source when activating the seat belt pretensioner.

- (a) Remove the front seat outer belt (See page [BO-90](#)).

HINT:

Cut the belt near the seat belt retractor.

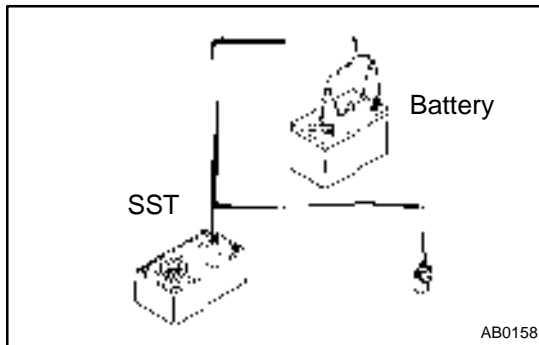


- (b) Check the functioning of SST.

(See step 1-(a))

SST

Driver's side: 09082-00700, 09082-00730

Except driver's side: 09082-00700, 09082-00740

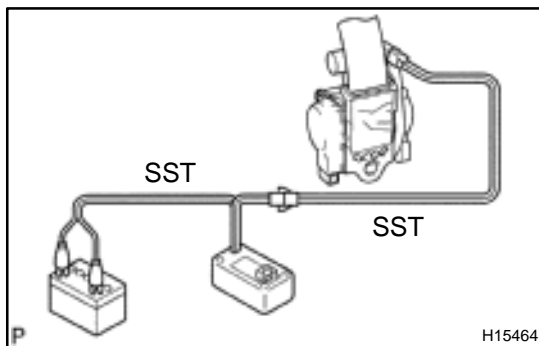

- (c) Install the SST.

- (1) Connect the 2 SST, then connect them to the seat belt pretensioner.


SST

Driver's side: 09082-00700, 09082-00730

Except driver's side: 09082-00700, 09082-00740

NOTICE:

To avoid damaging the SST connector and wire harness.

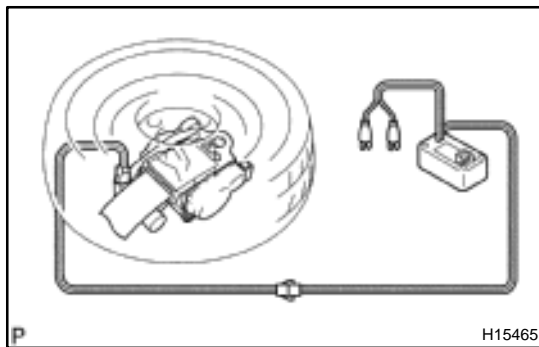

- (2) Place the front seat outer belt on the ground and cover it with the disc wheel with tire.

NOTICE:

Place the front seat outer belt as shown in the illustration. Also, secure some slack for the SST wire harness inside the tire.

- (3) Move the SST at least 10 m (33 ft) away from the disc wheel.

NOTICE:


Take care not to damage the SST wire harness.

- (d) Activate the seat belt pretensioner.

- (1) Connect the SST red clip to the battery positive (+) terminal and black clip to the battery negative (-) terminal.
- (2) Check that no one is within 10 m (33 ft) area around the disc wheel.
- (3) Press the SST activation switch and activate the seat belt pretensioner.

HINT:

The seat belt pretensioner operates simultaneously as the LED of the SST activation switch lights up.

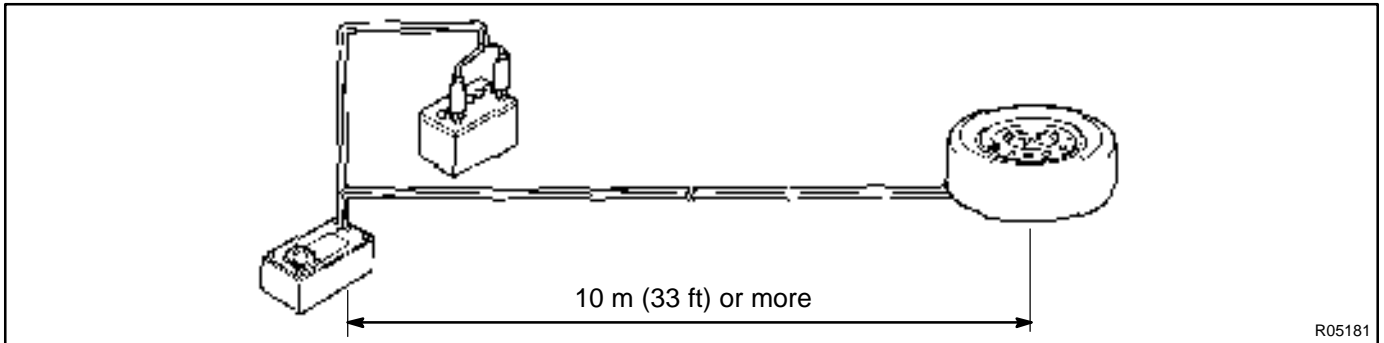

- (e) Dispose of the front seat outer belt (with seat belt pretensioner).


CAUTION:

- The front seat outer belt is very hot when the seat belt pretensioner is activated, so leave it alone for at least 30 minutes after activation.
- Use gloves and safety glasses when handling a front seat outer belt with the activated seat belt pretensioner.
- Always wash your hands with water after completing the operation.
- Do not apply water, etc. to a front seat outer belt with the activated seat belt pretensioner.
 - (1) Remove the disc wheel and SST.
 - (2) Place the front seat outer belt in a vinyl bag, tie the end tightly and dispose of it in the same way as other general parts dispose.

INSTALLATION

NOTICE:

- **Never use seat belt pretensioner from another vehicle. When replacing parts, replace them with new parts.**
- **Make sure that the front seat outer belt is installed with the specified torque.**
- **If the front seat outer belt has been dropped, or there are cracks, dents or other defects in the case or connector, replace the front seat outer belt with a new one.**
- **When installing the front seat outer belt, take care that the wiring does not interfere with other parts and is not pinched between other parts.**

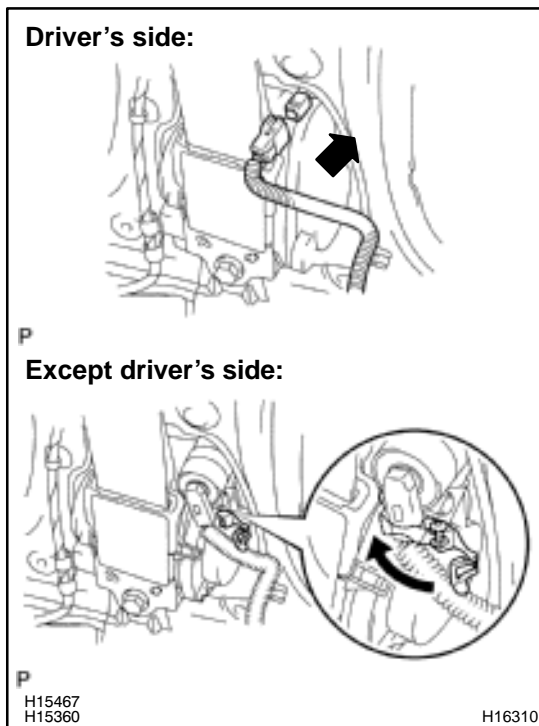

1. INSTALL FRONT SEAT OUTER BELT

- Install the retractor of front seat outer belt.
 - Install the retractor of front seat outer belt with the bolt.


Torque: 4.9 N·m (50 kgf·cm, 43 in.-lbf)

- Connect the pretensioner connector as shown in the illustration.
- Connect the tension reducer connector.


NOTICE:

When handling the pretensioner connector and tensionreducer, take care not to damage the wire harness.


- Install the floor anchor with the bolt.
- Torque: 42 N·m (430 kgf·cm, 31 ft-lbf)**
- Install the floor anchor cover.

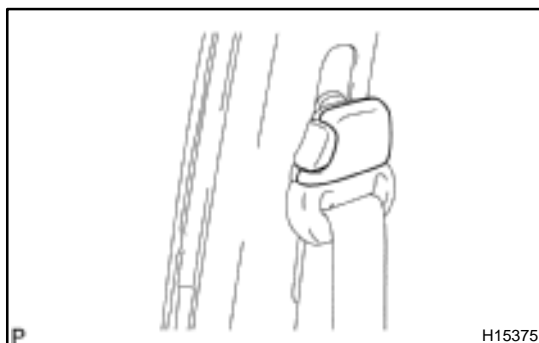


- Install the shoulder anchor with the bolt.
- Torque: 42 N·m (430 kgf·cm, 31 ft-lbf)**
- Install the shoulder anchor cover.

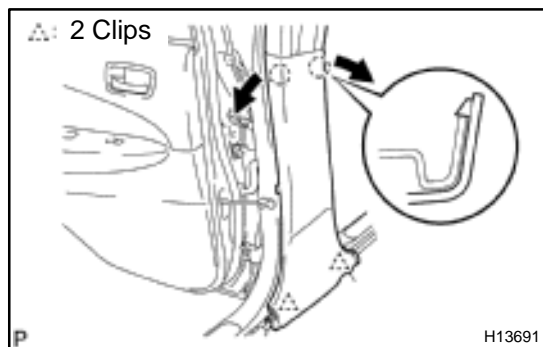**2. INSTALL CENTER PILLAR LOWER GARNISH**


Install the center pillar lower garnish to the body.

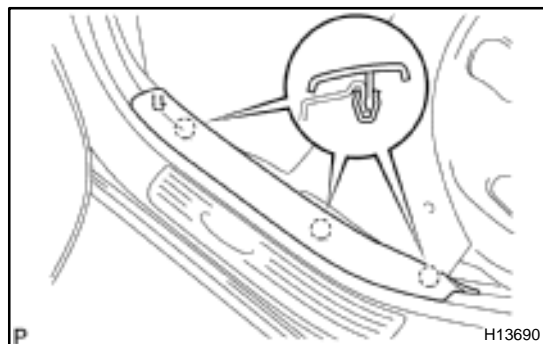3. INSTALL FRONT DOOR OPENING TRIM**4. INSTALL REAR DOOR OPENING TRIM****5. INSTALL REAR DOOR INSIDE SCUFF PLATE**

Install the rear door inside scuff plate to the body.

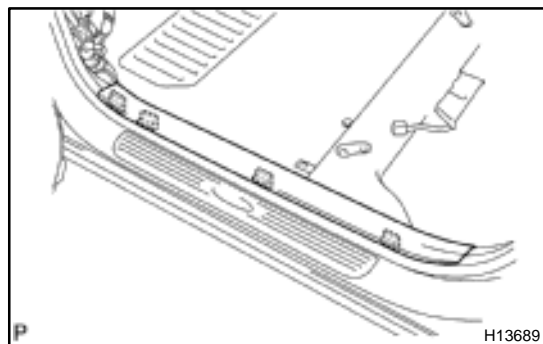**6. INSTALL FRONT DOOR INSIDE SCUFF PLATE**


Install the front door inside scuff plate to the body.

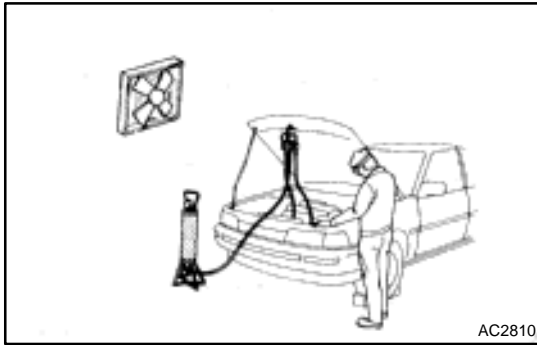

AIR CONDITIONING SYSTEM PRECAUTION

AC0Y9-05

1. **DO NOT HANDLE REFRIGERANT IN AN ENCLOSED AREA OR WEAR A NAKED FLAME**
2. **ALWAYS WEAR EYE PROTECTION**

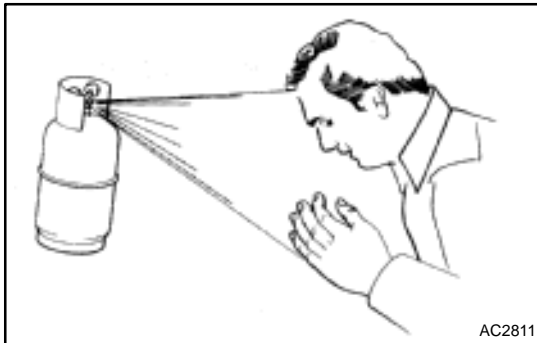

3. **BE CAREFUL NOT TO GET LIQUID REFRIGERANT IN YOUR EYES OR ON YOUR SKIN**

If liquid refrigerant gets in your eyes or on your skin.


- (a) Wash the area with lots of cool water.

CAUTION:

Do not rub your eyes or skin.

- (b) Apply clean petroleum jelly to the skin.
- (c) Go immediately to a physician or hospital for professional treatment.

4. **NEVER HEAT CONTAINER OR EXPOSE IT TO NAKED FLAME**
5. **BE CAREFUL NOT TO DROP CONTAINER AND NOT TO APPLY PHYSICAL SHOCKS TO IT**

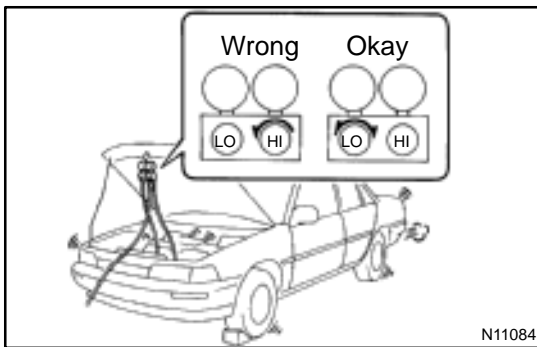

6. **DO NOT OPERATE COMPRESSOR WITHOUT ENOUGH REFRIGERANT IN REFRIGERATION SYSTEM**

If there is not enough refrigerant in the refrigerant system oil lubrication will be insufficient and compressor burnout may occur, so that care to avoid this, necessary care should be taken.

7. **DO NOT OPEN PRESSURE MANIFOLD VALVE WHILE COMPRESSOR IS OPERATE**


If the high pressure valve is opened, refrigerant flows in the reverse direction and could cause the charging cylinder to rupture, so open and close the only low pressure valve.

8. **BE CAREFUL NOT TO OVERCHARGE SYSTEM WITH REFRIGERANT**

If refrigerant is overcharged, it causes problems such as insufficient cooling, poor fuel economy, engine overheating etc.

9. SUPPLEMENTAL RESTRAINT SYSTEM (SRS)

The PRIUS is equipped with an SRS (Supplemental Restraint System) such as the driver, front passenger and side airbag. Failure to carry out service operation in the correct sequence could cause the SRS to unexpectedly deploy during servicing, possibly leading to a serious accident. Before servicing (including removal or installation of parts, inspection or replacement), be sure to read the precautionary notices in the RS section.

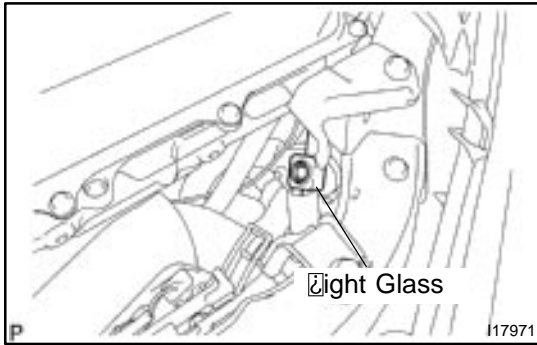

ON-VEHICLE INSPECTION

1. INSPECT REFRIGERANT VOLUME

Observe the sight glass on the liquid tube.

Test conditions:

- MAX. switch ON
- Blower speed control set at "HI"
- Temperature control set at "MAX. COOL"
- Running engine at 1,500 rpm
- Fully open the doors

Item	Symptom	Amount of refrigerant	Remedy
1	Bubbles present in sight glass	Insufficient*	(1) Check for gas leakage with gas leak detector and repair if necessary (2) Add refrigerant until bubbles disappear
2	No bubbles present in sight glass	None, sufficient or too much	Refer item 3 and 4
3	No temperature difference between compressor inlet and outlet	Empty or nearly empty	(1) Check for gas leakage with gas leak detector and repair if necessary (2) Add refrigerant until bubbles disappear
4	Temperature between compressor inlet and outlet is noticeably different	Correct or too much	Refer to items 5 and 6
5	Immediately after air conditioning is turned off, refrigerant in sight glass stays clear	Too much	(1) Discharge refrigerant (2) Evacuate air and charge proper amount of purified refrigerant
6	When air conditioning is turned off, refrigerant foams and then stays clear	Correct	–

*: Bubbles in the sight glass with ambient temperatures higher than usual can be considered normal if cooling is sufficient.

2. INSPECT REFRIGERANT PRESSURE WITH MANIFOLD GAUGE SET


This is a method in which the trouble is located by using a manifold gauge set. Read the manifold gauge pressure when the these conditions are established.

Test conditions:

- Temperature at the air inlet with the switch set at RECIRC is 30 – 35 °C (86 – 95 °F)
- Engine running at 1500 rpm
- Blower speed control switch at "HI" position
- Temperature control dial on "COOL" position

HINT:

It should be noted that the gauge indications may vary slightly due to ambient temperature conditions.

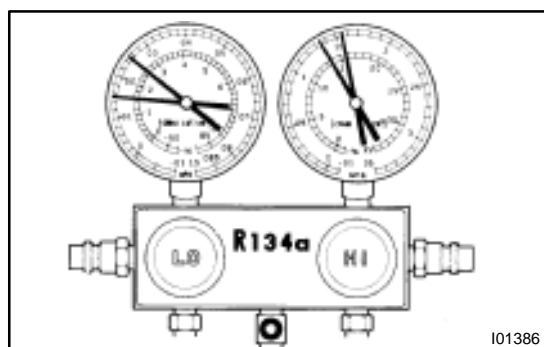

(1) Normally functioning refrigeration system.

Gauge reading:

Low pressure side:


0.15 – 0.25 MPa (1.5 – 2.5 kgf/cm²)

High pressure side:

1.37 – 1.57 MPa (14 – 16 kgf/cm²)

(2) Moisture present in refrigeration system.

Condition : Periodically cools and then fails to cool

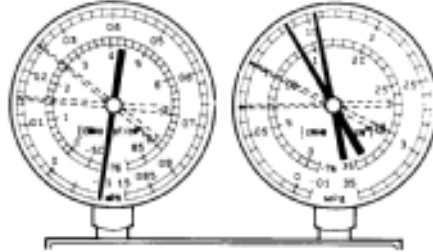


I01387

Symptom seen in refrigeration system	Probable cause	Diagnosis	Remedy
During operation, pressure on low pressure side sometimes become a vacuum and sometime normal	Moisture entered in refrigeration system freezes at expansion valve orifice and temporarily stops cycle, by normal state is restored after a time when the ice melts	<ul style="list-style-type: none"> • Drier oversaturated state • Moisture in refrigeration system freezes at expansion valve orifice and blocks circulation of refrigerant 	(1) Replace condenser (2) Remove moisture in cycle through repeatedly evacuating air (3) Charge proper amount of new refrigerant

(3) Insufficient cooling

Condition: Insufficient cooling

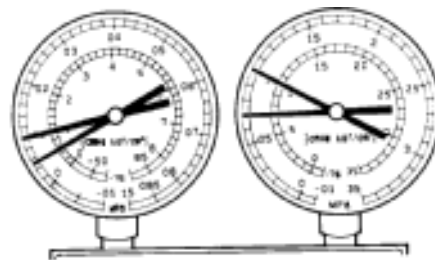


I01388

Symptom seen in refrigeration system	Probable cause	Diagnosis	Remedy
<ul style="list-style-type: none"> • Pressure low on both low and high pressure sides • Bubbles seen in sight glass continuously • Insufficient cooling performance 	Gas leakage at some place in refrigeration system	<ul style="list-style-type: none"> • Insufficient refrigerant in system • Refrigerant leaking 	(1) Check for gas leakage with gas leak detector and repair if necessary (2) Charge proper amount of refrigerant (3) If indicated pressure value is near 0 when connected to gauge, create the vacuum after inspecting and repairing the location of the leak

(4) Poor circulation of refrigerant

Condition: Insufficient cooling

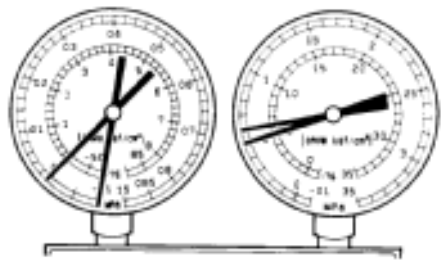


I01389

Symptom seen in refrigeration system	Probable cause	Diagnosis	Remedy
<ul style="list-style-type: none">• Pressure low in both low and high pressure sides• Frost on tube from receiver to unit	Refrigerant flow obstructed by dirt in receiver	Receiver clogged	Replace condenser

(5) Refrigerant does not circulate

Condition: Does not cool (Cools from time to time in some cases)

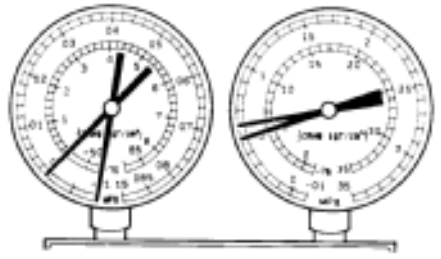


I01449

Symptom seen in refrigeration system	Probable cause	Diagnosis	Remedy
<ul style="list-style-type: none">• Vacuum indicated on low pressure side, very low pressure indicated on high pressure side• Frost or dew seen on piping before and after condenser/ drier or expansion valve	<ul style="list-style-type: none">• Refrigerant flow obstructed by moisture or dirt in refrigeration system• Refrigerant flow obstructed by gas leakage from expansion valve	Refrigerant does not circulate	<ul style="list-style-type: none">(1) Check expansion valve(2) Clean out dirt in expansion valve by blowing with air(3) Replace condenser(4) Evacuate air and charge new refrigerant to proper amount(5) For gas leakage from expansion valve, replace expansion valve

(6) Refrigerant overcharged or insufficient cooling of condenser

Condition: Insufficient cooling

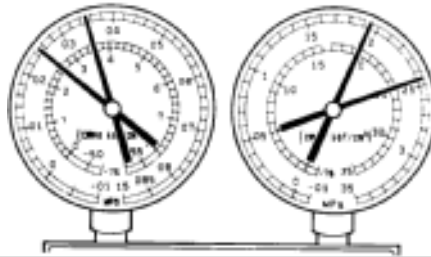


I01390

Symptom seen in refrigeration system	Probable cause	Diagnosis	Remedy
<ul style="list-style-type: none"> Pressure too high on both low and high pressure sides No air bubbles seen through the sight glass even when the engine rpm is lowered 	<ul style="list-style-type: none"> Unable to develop sufficient performance due to excessive refrigeration system Insufficient cooling of condenser 	<ul style="list-style-type: none"> Excessive refrigerant in cycle → refrigerant over charged Condenser cooling → condenser fins clogged of condenser fan faulty 	<ol style="list-style-type: none"> Clean condenser Check condenser fan motor operation If (1) and (2) are in normal state, check amount of refrigerant Charge proper amount of refrigerant

(7) Air present in refrigeration system

Condition: Insufficient cooling

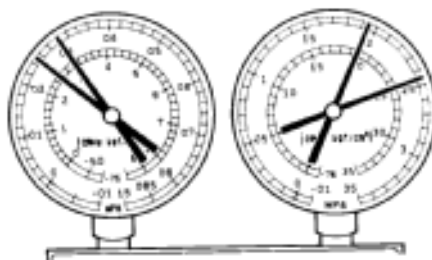


NOTE : These gauge indications are shown when the refrigeration system has been opened and the refrigerant charged without vacuum purging.

I01392

Symptom seen in refrigeration system	Probable cause	Diagnosis	Remedy
<ul style="list-style-type: none"> Pressure too high on both low and high pressure sides The low pressure piping hot to touch Bubbles seen in sight glass 	Air entered in refrigeration system	<ul style="list-style-type: none"> Air present in refrigeration system Insufficient vacuum purging 	<ol style="list-style-type: none"> Check compressor oil to see if it is dirty or insufficient Evacuate air and charge new refrigerant

(8) Expansion valve improperly

Condition: Insufficient cooling

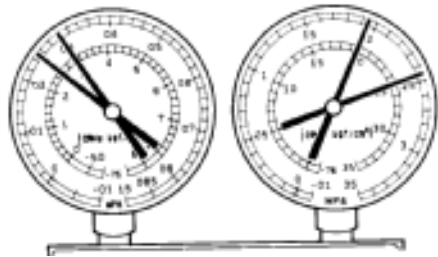


I01450

Symptom seen in refrigeration system	Probable cause	Diagnosis	Remedy
<ul style="list-style-type: none">• Pressure too high on both low and high pressure sides• Frost or large amount of dew on piping on low pressure side	Trouble in expansion valve	<ul style="list-style-type: none">• Excessive refrigerant in low pressure piping• Expansion valve opened too wide	<p>Check expansion valve</p> <p>Replace if defective</p>

(9) Defective compression compressor

Condition : Does not cool

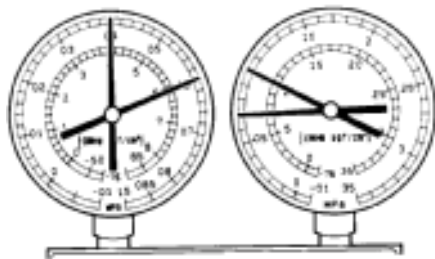


I01393

Symptom seen in refrigeration system	Probable cause	Diagnosis	Remedy
<ul style="list-style-type: none">• Pressure too high on low and high pressure sides• Pressure too low on high pressure side	Internal leak in compressor	<ul style="list-style-type: none">• Compression defective• Valve leaking or broken sliding parts	Repair or replace compressor

3. INSPECT FOR LEAKAGE OF REFRIGERANT**(a) Perform in these conditions:**

- Stop engine.
- Secure good ventilation (If the gas leak detector may not react to volatile gases which are not refrigerant, such as evaporated gasoline and exhaust gas.)
- Repeat the test 2 or 3 times.
- Make sure that there is some refrigerant remaining in the refrigeration system.

When compressor is OFF: approx. 392 – 588 kPa
(4 – 6 kgf/cm², 57 – 85 psi)

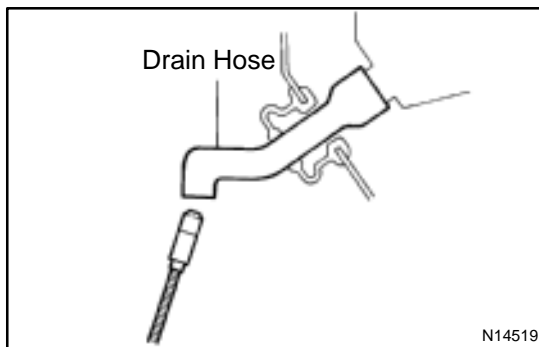**(b) Bring the gas leak detector close to the drain hose before performing the test.****HINT:**

- After the blower motor has stopped, leave the cooling unit for more than 15 minutes.
- Expose the gas leak detector sensor under the drain hose.
- When bring the gas leak detector close to the drain hose, make sure that the gas leak detector does not react to the volatile gases.

If such reaction is unavoidable, the vehicle must be lifted up.

- (c) If gas leak is not detected on the drain hose, remove the blower resistor from the cooling unit. Then insert the gas leak detector sensor into the unit and perform the test.
- (d) Disconnect the connector and leave the pressure switch for approx. 20 minutes. Then bring the gas leak detector close to the pressure switch and perform the test.
- (e) Bring the gas leak detector close to the refrigerant lines and perform the test.

4. INSPECT IDLE-UP SPEED


- (a) Activate inspection mode (See page [IN-10](#)).
- (b) Inspect idle-up speed when the these conditions are established.

Test conditions:

- Idle speed set correctly.
- Steering wheel straight ahead
- Blower speed control dial at HI
- A/C switch ON

Magnetic clutch condition	Idle speed
Magnetic clutch not engaged	1,000 ±50 rpm
Magnetic clutch engaged	1,000 ±50 rpm

If idle speed is not as specified, check the engine ECU and throttle body.

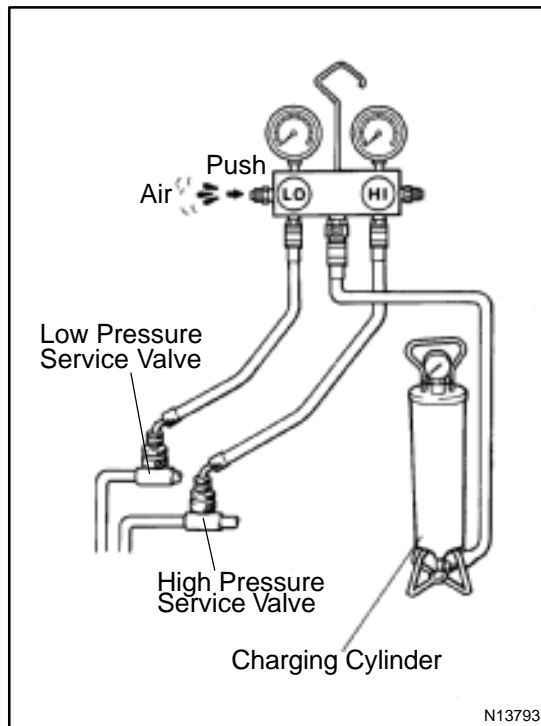

CHARGING

1. INSTALL CHARGING CYLINDER

HINT:


When handling the charging cylinder, always follow the directions given in the instruction manual.

- Charge the proper amount of refrigerant into the charging cylinder.
- Connect the center hose to the charging cylinder.

CAUTION:

Do not open both high and low hand valves of manifold gauge set.

- Open the valve of charging cylinder.
- Press the valve core on the side of manifold gauge and expel the air inside of the center hose.

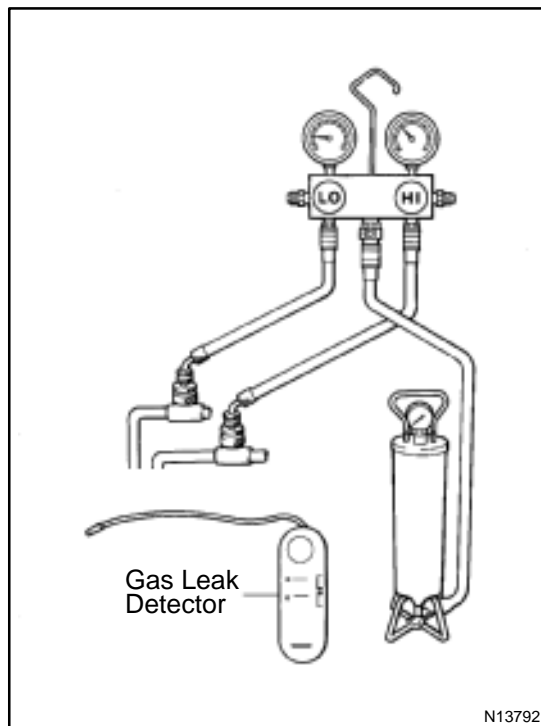


2. INSPECT REFRIGERATION SYSTEM FOR LEAKS

- Open the high pressure hand valve and charge refrigerant.
- When the low pressure gauge indicates 98 kPa (1 kgf/cm², 14 psi) close the high pressure hand valve.
- Using a gas leak detector, check the system for leakage. If leak is found, repair the faulty component or connection.

CAUTION:

Use the refrigerant recovery/ recycling machine to recover the refrigerant whenever replacing parts.

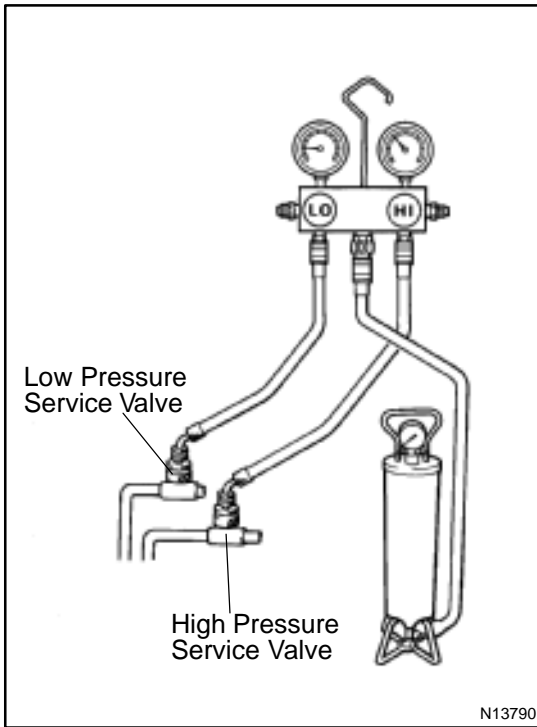

3. CHARGE REFRIGERANT INTO REFRIGERANT SYSTEM

If there is no leak after refrigerant leak check, charge the proper amount of refrigerant into refrigeration system.

CAUTION:

- **Never run the engine when charging the system through the high pressure side.**
- **Do not open the low pressure hand valve when the system is being charged with liquid refrigerant.**

(a) Open the high pressure hand valve fully.

(b) Charge specified amount of refrigerant, then close the high pressure hand valve.

HINT:

A fully charged system is indicated by the sight glass being free of any bubbles.

(c) Charge partially refrigeration system with refrigerant.


(1) Set vehicle in these conditions:

- MAX. switch ON
- Blower speed control set at "HI"
- Temperature control set at "MAX. COOL"
- Air inlet control set at "RECIRC"
- Running engine at 1,500 rpm
- Fully open doors

(2) Open the low pressure hand valve.

CAUTION:

Do not open the high pressure hand valve.

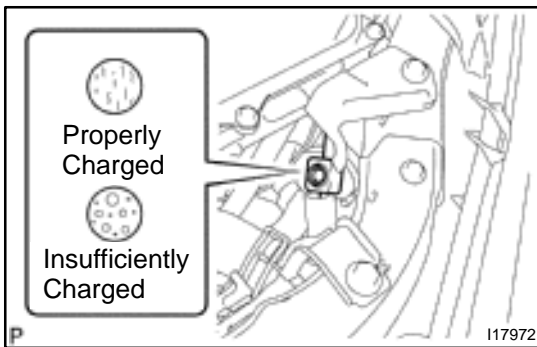



(d) Charge refrigerant until bubbles disappear and check the pressure on the gauge through the sight glass.

(e) Replenishment to be 100 ± 50 g after bubbles disappear.

AIR CONDITIONING UNIT COMPONENTS

AC37J-01

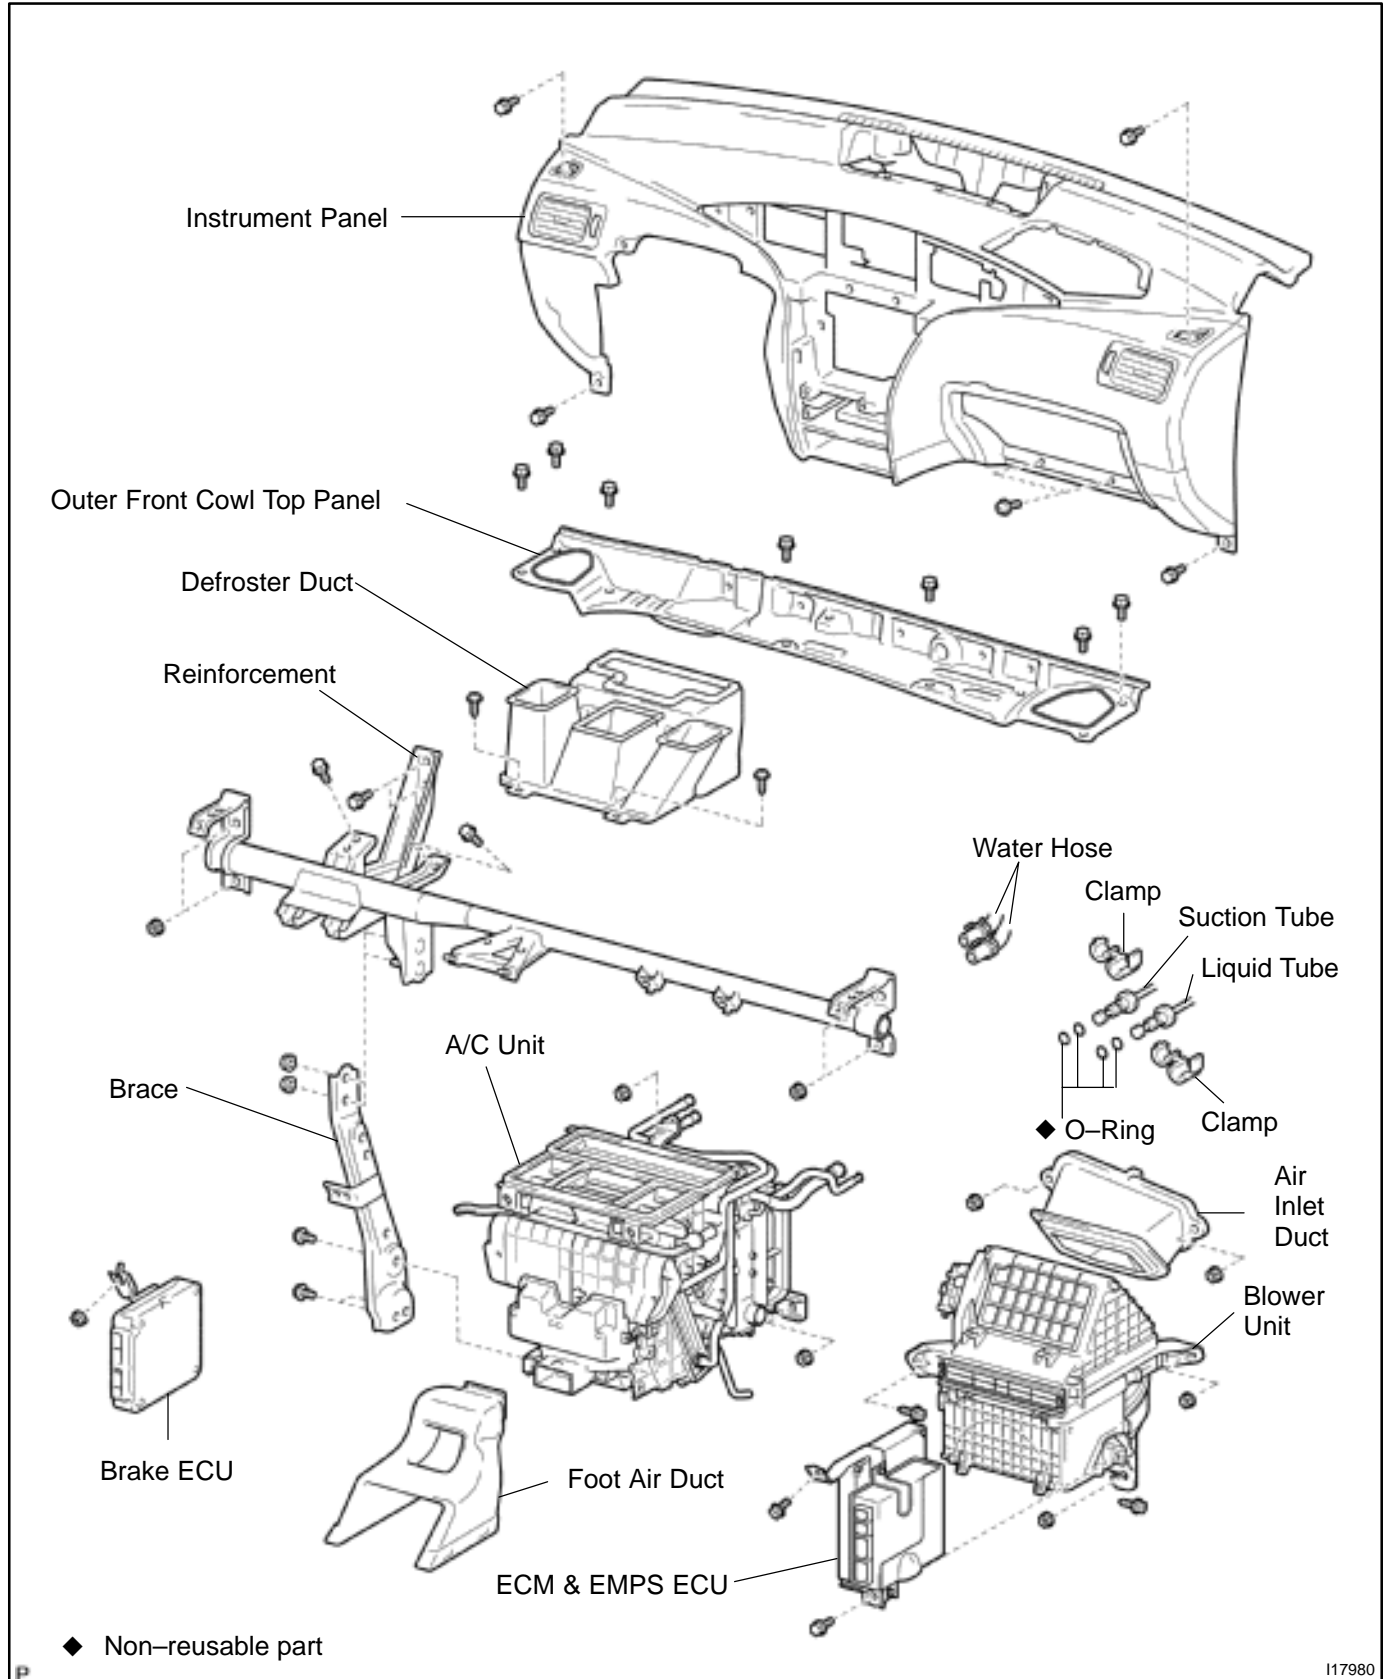

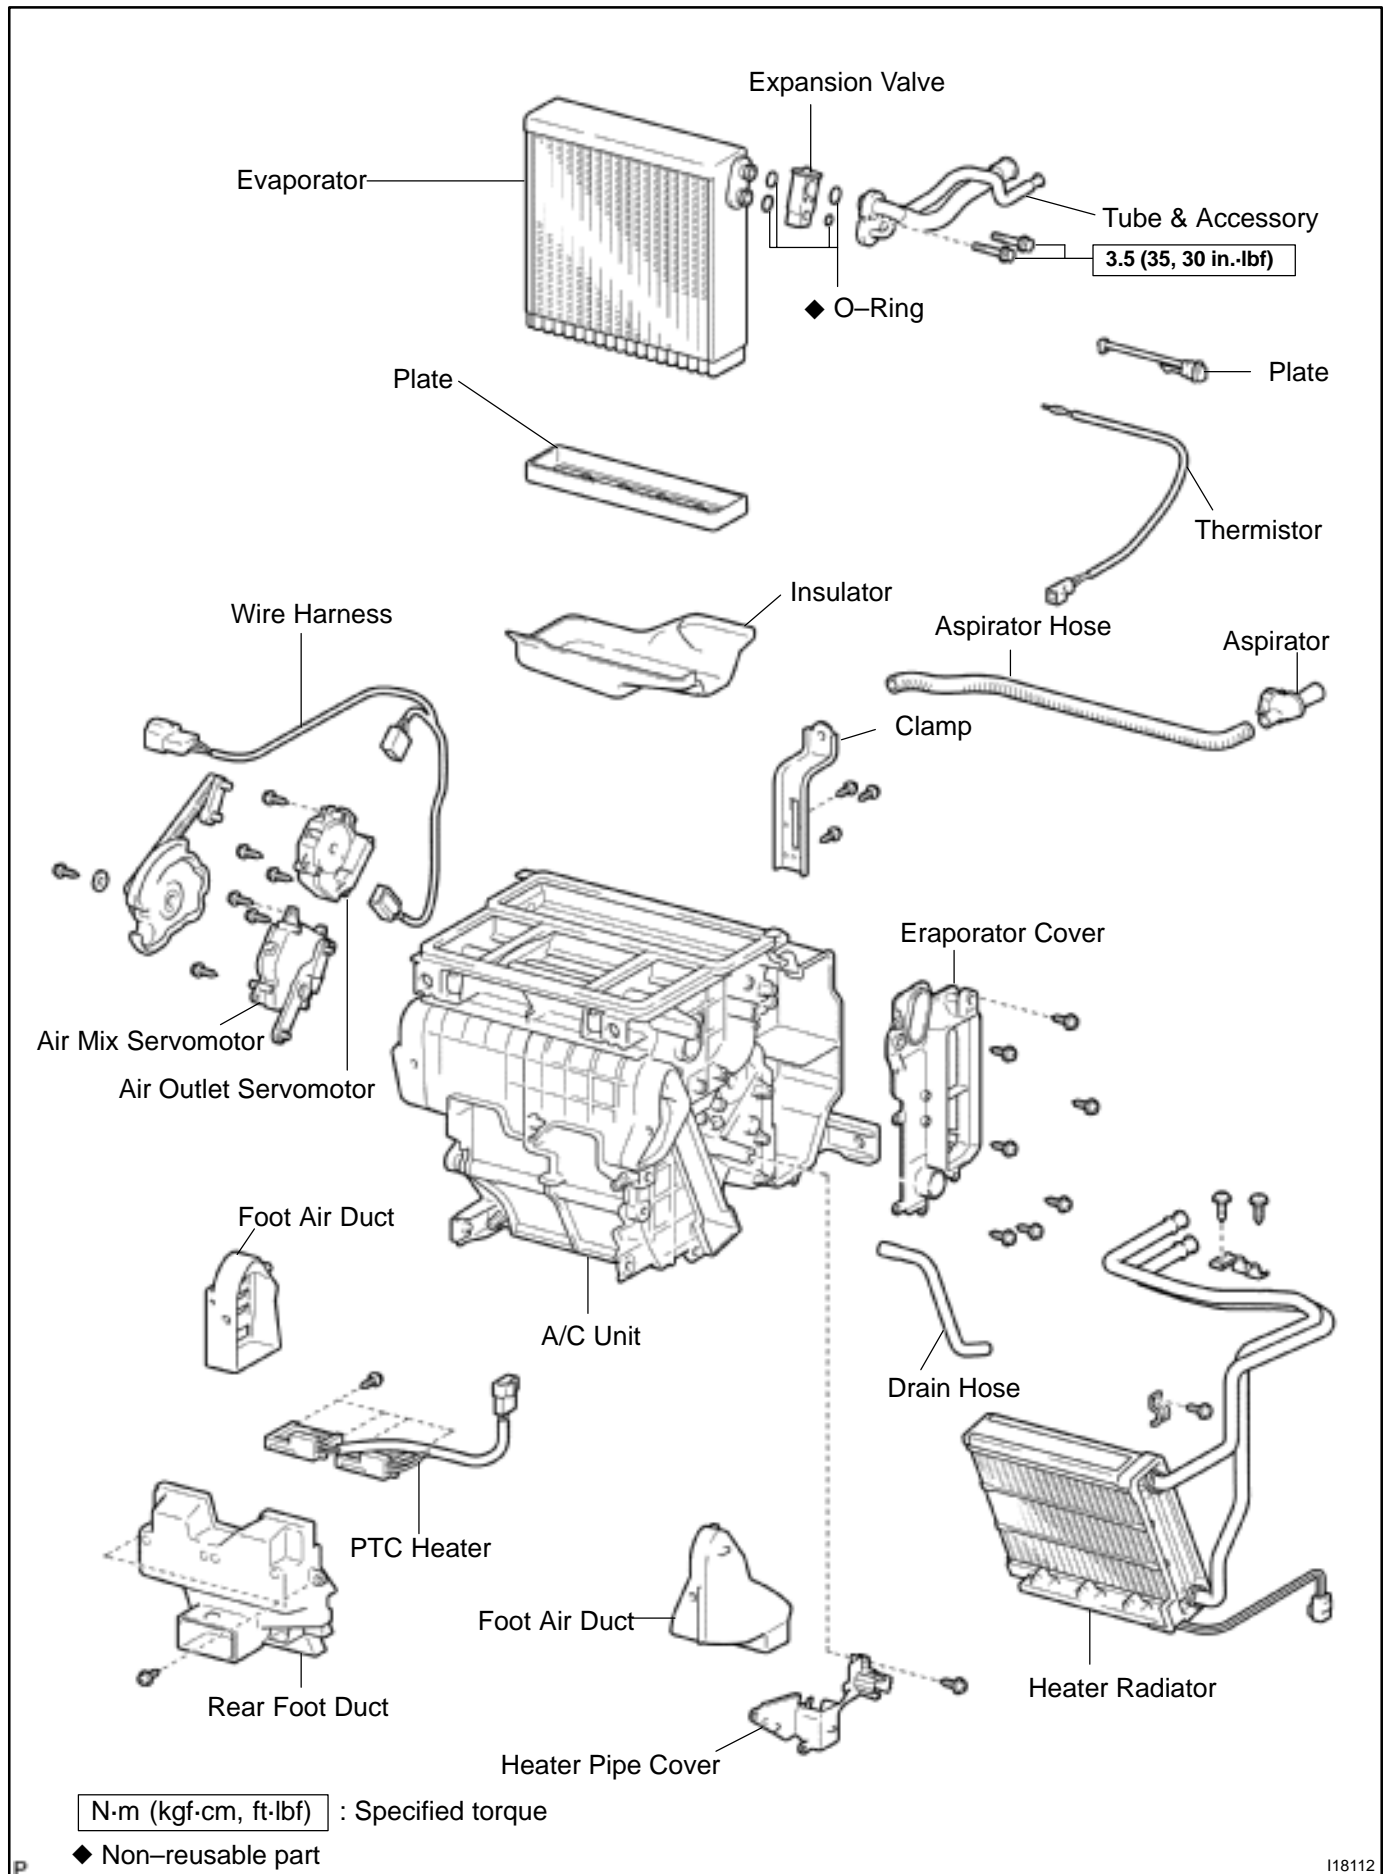

REMOVAL

1. REMOVE FRONT WIPER AND OUTER FRONT COWL TOP PANEL (See page [BO-32](#))
2. DISCHARGE REFRIGERANT FROM REFRIGERATION SYSTEM

HINT:

At the time of installation, please refer to the following item.
Evacuate air from refrigeration system.


Charge system with refrigerant and inspect for leakage of refrigerant.

Specified amount: 500 ± 50 g (17.64 ± 1.76 oz.)

3. DRAIN ENGINE COOLANT FROM RADIATOR

HINT:

It is not necessary to drain out all coolant.

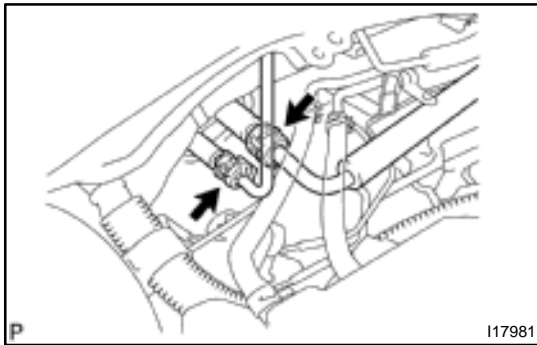


4. DISCONNECT LIQUID TUBE AND SUCTION HOSE

- (a) Using SST, remove the 2 piping clamps.

SST 09870-00015 (Suction tube)


09870-00025 (Liquid tube)

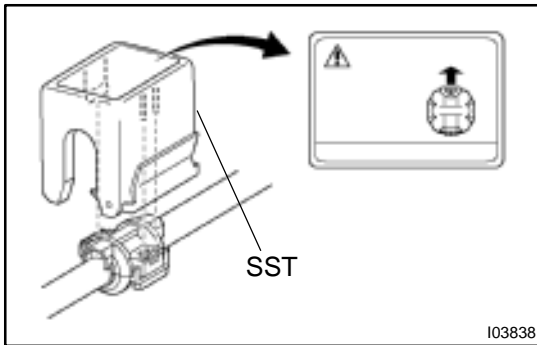

- (1) Insert SST to piping clamp.

HINT:

Confirm the direction of the piping clamp claw and SST using the illustration showing on the caution label.

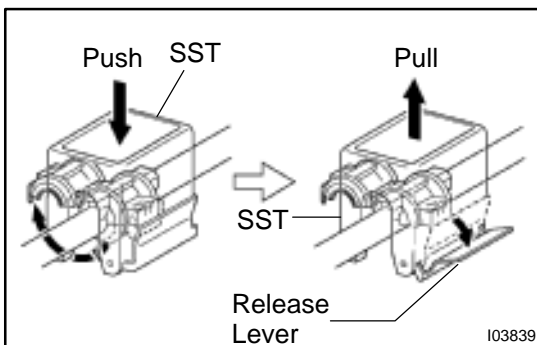


- (2) Push down SST and release the clamp lock.

NOTICE:

Be careful not to deform the tubes, when pushing SST.


- (3) Pull SST slightly and push the release lever, then remove the piping clamp with SST.
- (4) Remove the piping clamp from SST.
- (b) Disconnect the both tubes.

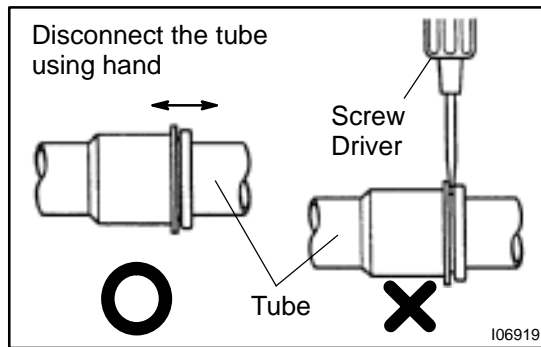**NOTICE:**


- Do not use tools like screwdriver to remove the tube.
- Cap the open fittings immediately to keep moisture or dirt out of the system.

HINT:


At the time of reassembly, please refer to the following item. Lubricate 4 new O-rings with compressor oil and install them to the valve.

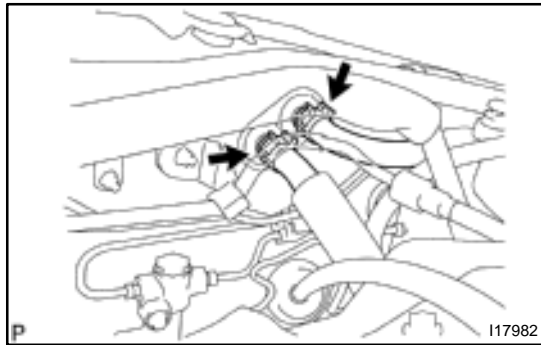**5. DISCONNECT WATER HOSES FROM HEATER RADIATOR PIPES**


- Using pliers, grip the claw of the hose clip and slide the hose clip along the hose.
- Disconnect the heater hoses.

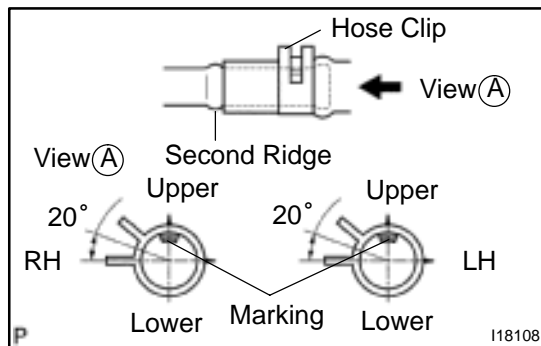**HINT:**


At the time of installation, please refer to the following item. Push the water hose onto the heater radiator pipe as far as second ridge on the pipe and install the hose clip.

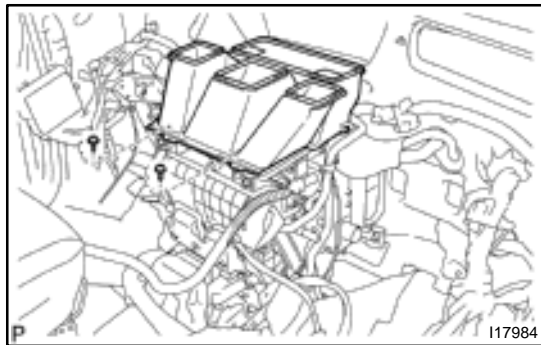6. REMOVE INSTRUMENT PANEL AND REINFORCEMENT (See page [BO-62](#))**7. REMOVE BLOWER UNIT (See page [AC-32](#))****8. REMOVE A/C UNIT**

- Remove the 2 screws and defroster duct.
- Remove the foot air duct.

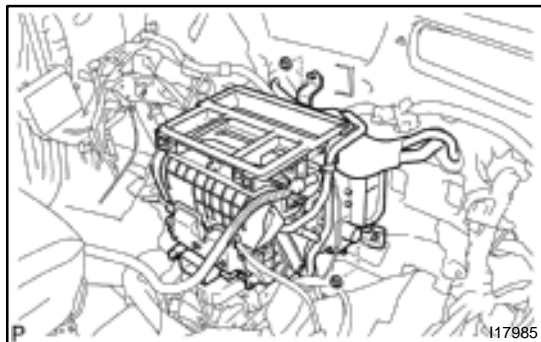


- Disconnect the connectors.
- Remove the 2 nuts and A/C unit.

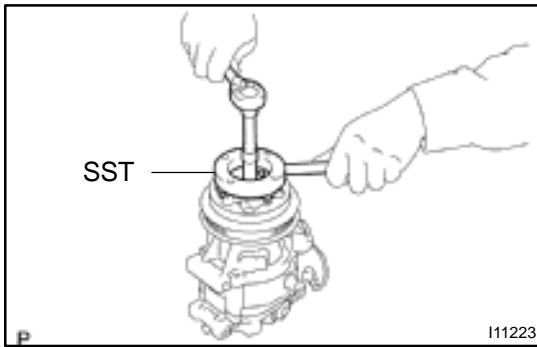


DISASSEMBLY

1. REMOVE PRESSURE PLATE

- (a) Using SST and a socket wrench, remove the shaft bolt.
 SST 07112-76050
Torque: 13.2 N·m (135 kgf-cm, 9 ft-lbf)

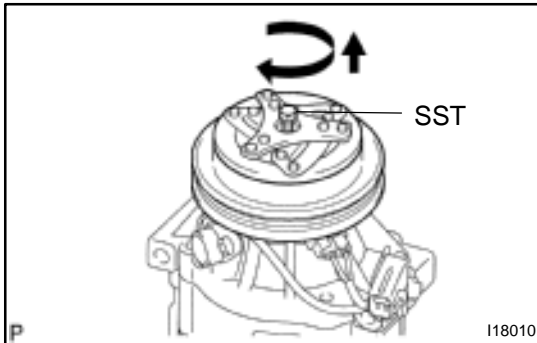


- (b) Install SST to the pressure plate.
 SST 07112-66040
 (c) Using SST and a socket wrench, remove the pressure plate.
 SST 07112-76050, 07112-66040
 (d) Remove the shims from the shaft.

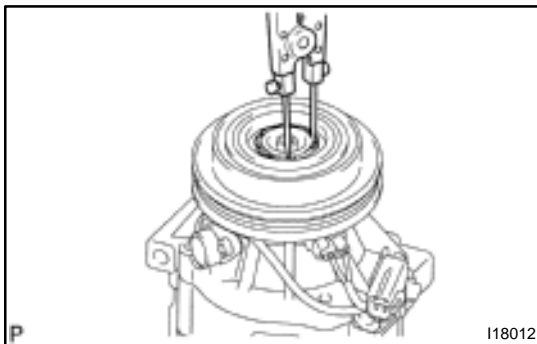

2. REMOVE ROTOR


- (a) Remove the snap ring.

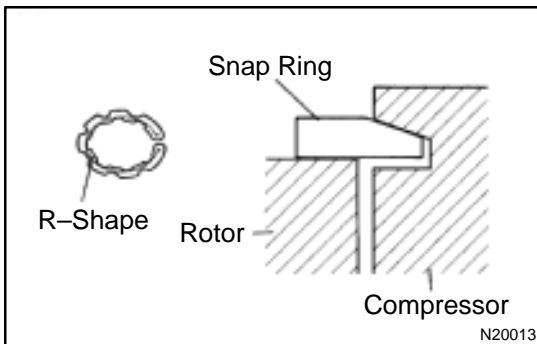

NOTICE:

At the time of reassembly, please refer to the following item.


The snap ring should be installed so that its beveled side faces up.

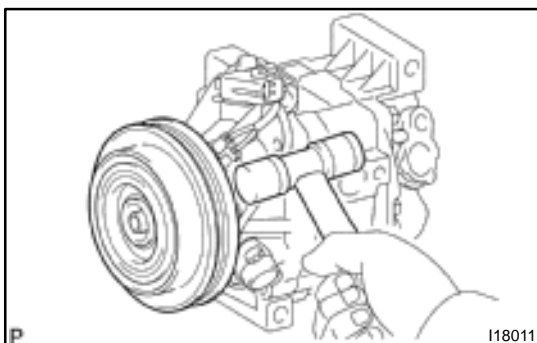

- (b) Using a plastic hammer, tap the rotor off the shaft.


NOTICE:

Be careful not to damage the pulley when tapping on the rotor.

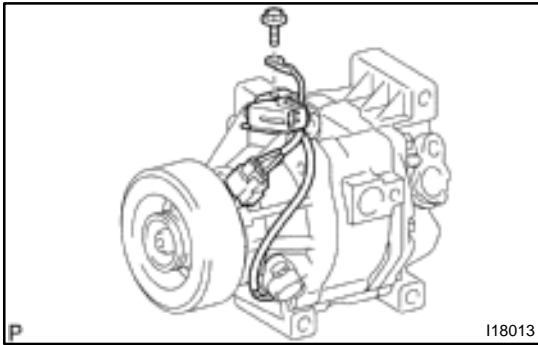


3. REMOVE STATOR

- (a) Disconnect the connector from the stator.
- (b) Remove the screw and stator lead wire.

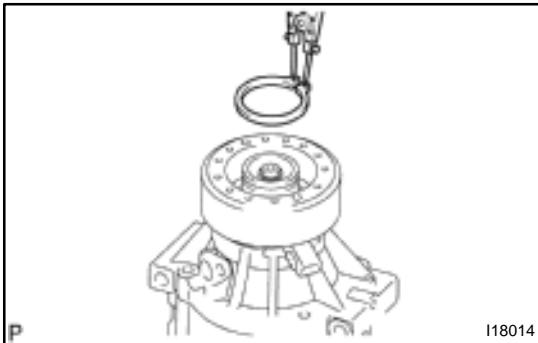


- (c) Remove the snap ring.

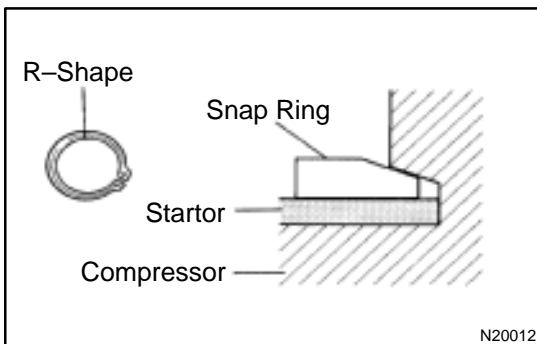

NOTICE:


At the time of reassembly, please refer to the following item.

The snap ring should be installed so that its beveled side faces up.

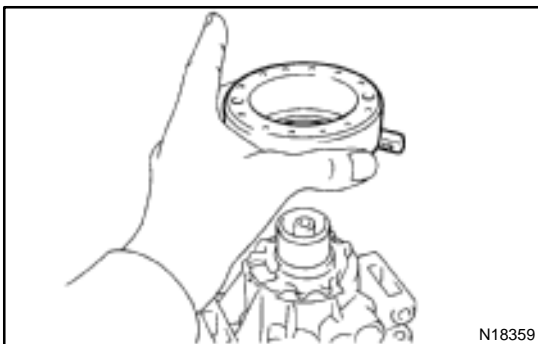


- (d) Remove the stator.

COMPONENTS

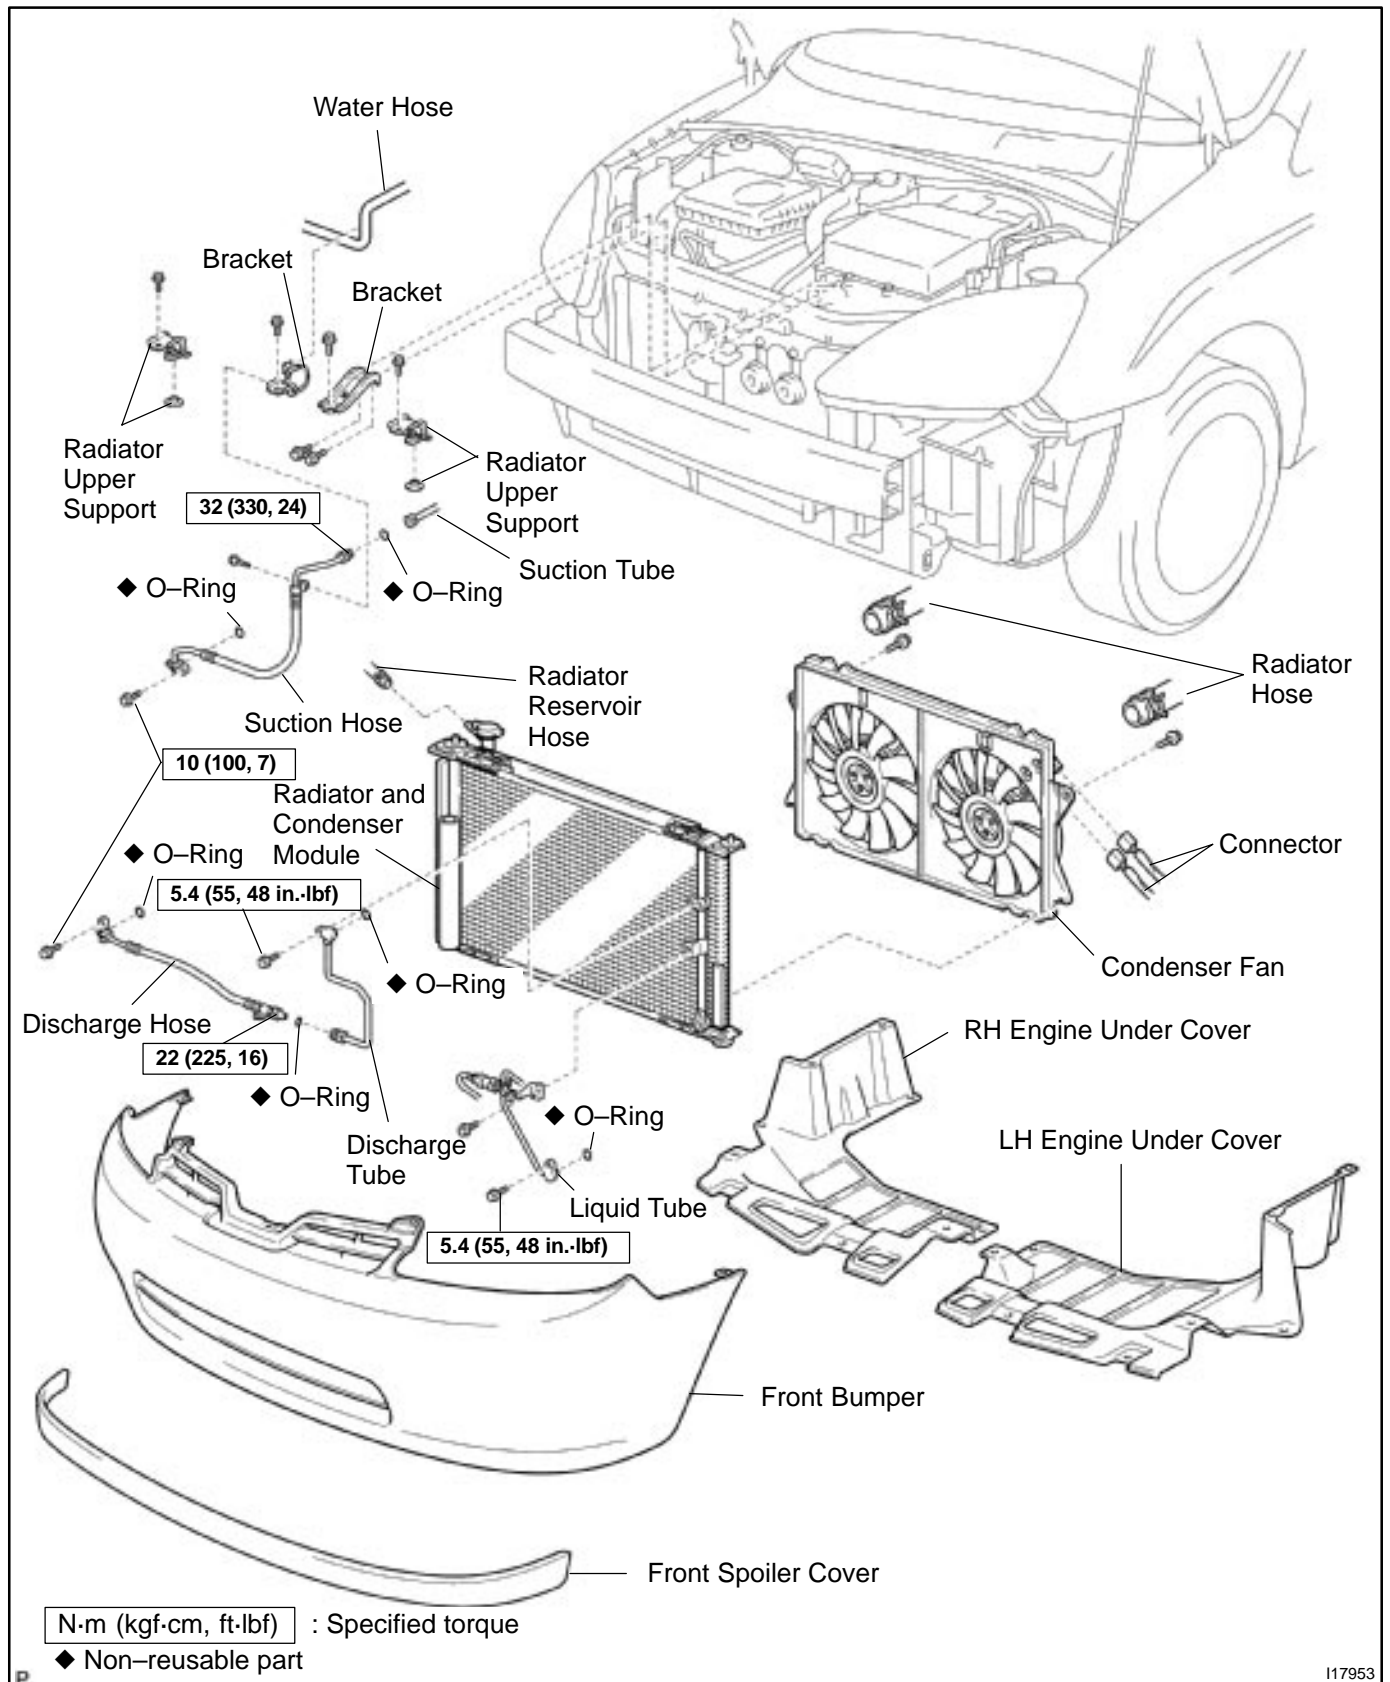

cardiagn.com

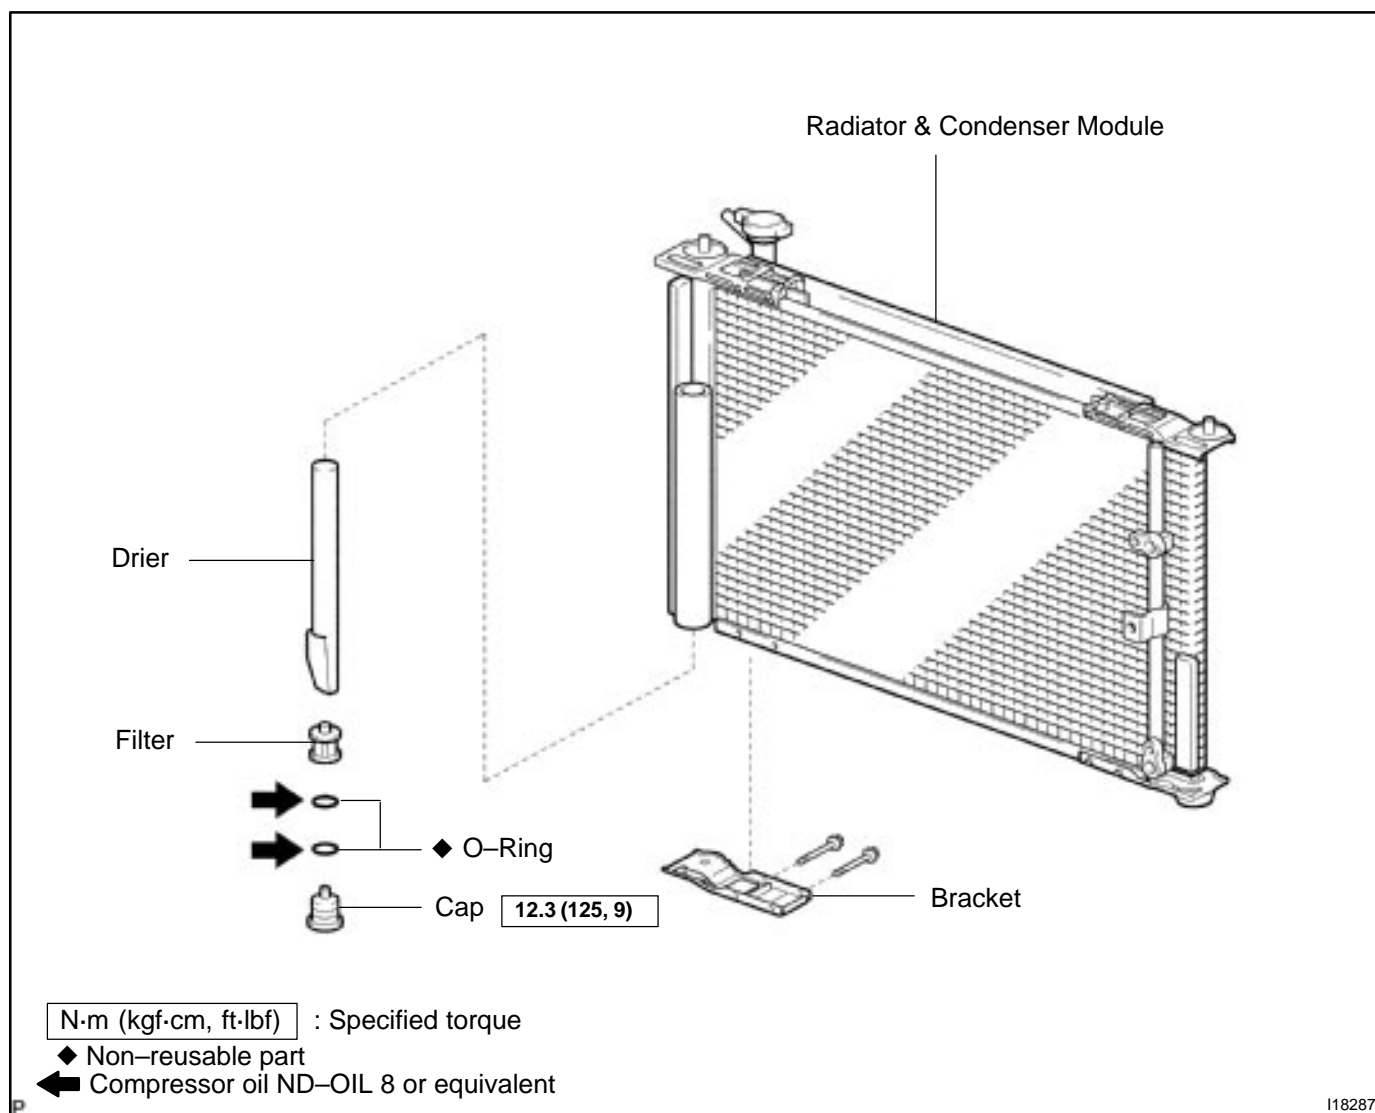

REMOVAL

1. DISCHARGE REFRIGERANT FROM REFRIGERATION SYSTEM

HINT:

At the time of installation, please refer to the following item.

Evacuate air from refrigeration system.

Charge system with refrigerant and inspect for leakage of refrigerant.

Specified amount: 500 ± 50 g (17.64 ± 1.76 oz.)

2. DRAIN ENGINE COOLANT FROM RADIATOR

HINT:


It is not necessary to drain out all the coolant.

3. REMOVE CONDENSER FAN ASSEMBLY

(See Page [AC-69](#))

4. REMOVE FRONT BUMPER (See Page [BO-4](#))

5. REMOVE RADIATOR RESERVOIR HOSE

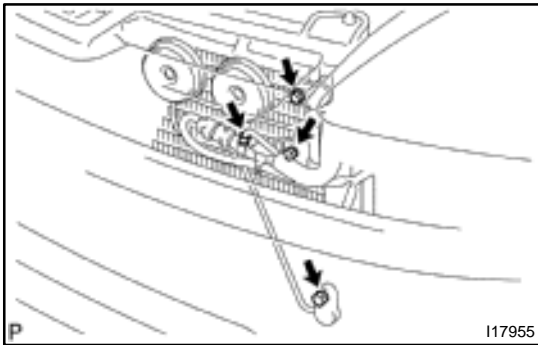

6. DISCONNECT DISCHARGE AND LIQUID TUBE

- (a) Remove the 2 bolts and disconnect discharge and liquid tube.

Torque: 5.4 N·m (55 kgf·cm, 48 in.-lbf)

NOTICE:

Cap open the fittings immediately to keep moisture or dirt out of the system.


HINT:

At the time of installation, please refer to the following item.

Lubricate 2 new O-rings with compressor oil and install them to the tubes.


- (b) Remove the bolt.

- (c) Disconnect the liquid tube and remove the bracket.

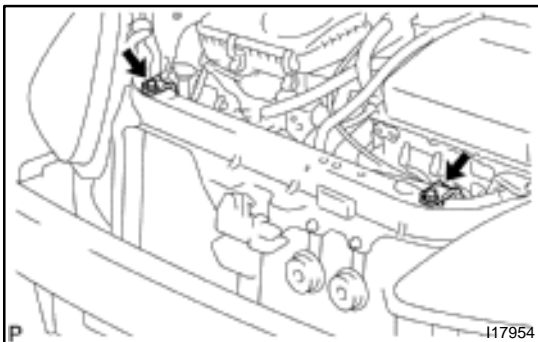


7. REMOVE RADIATOR UPPER SUPPORT

Remove the 2 bolts and 2 radiator upper supports.

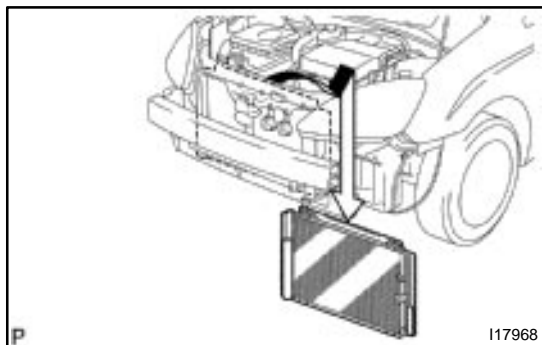**8. REMOVE RADIATOR & CONDENSER MODULE**

- (a) Push the radiator & condenser module toward engine.
- (b) Pull up the radiator until the lower radiator support is removed.
- (c) Pull it downward to remove it.

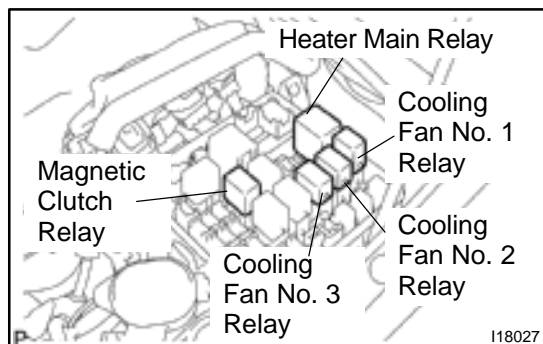


RELAY INSPECTION


AC360-01

1. REMOVE RELAY

- (a) Remove the relay from the engine room J/B.

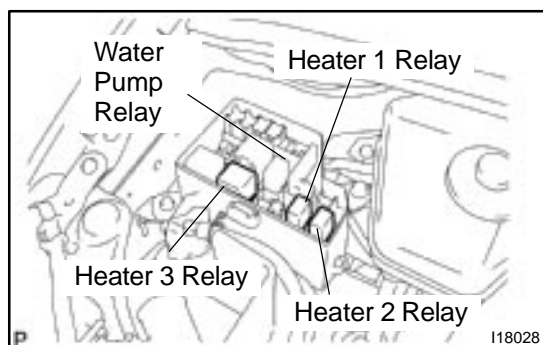


- (b) Remove the relay from the engine room R/B No. 3.

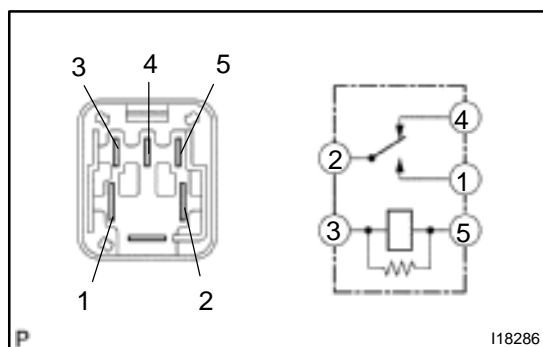

2. INSPECT HEATER MAIN RELAY CONTINUITY

Condition	Tester connection	Specified condition
Constant	3 – 5 2 – 4	Continuity
Apply B+ between terminals 5 and 3.	1 – 2	Continuity


If continuity is not as specified, replace the relay.

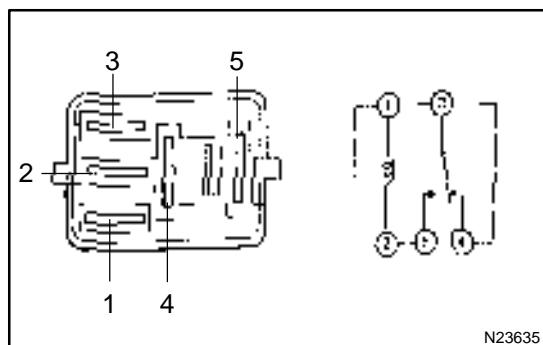

3. INSPECT COOLING FAN NO. 2 RELAY CONTINUITY

Condition	Tester connection	Specified condition
Constant	1 – 2 3 – 4	Continuity
Apply B+ between terminals 1 and 2.	3 – 5	Continuity


If continuity is not as specified, replace the relay.

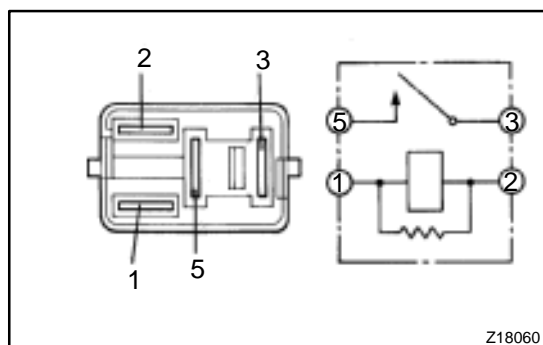

4. INSPECT MAGNETIC CLUTCH, COOLING FAN NO. 1, 3, HEATER 1, 2, WATER PUMP RELAY CONTINUITY

Condition	Tester connection	Specified condition
Constant	1 – 2	Continuity
Apply B+ between terminals 1 and 2.	3 – 5	Continuity

If continuity is not as specified, replace the relay.

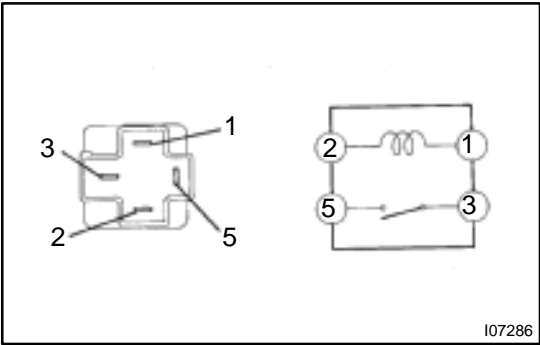

5. INSPECT HEATER 3 RELAY CONTINUITY

Condition	Tester connection	Specified condition
Constant	1 – 2	Continuity
Apply B+ between terminals 1 and 2.	3 – 5	Continuity

If continuity is not as specified, replace the relay.

REMOVAL

1. DISCHARGE REFRIGERANT FROM REFRIGERATION SYSTEM

HINT:

At the time of installation, please refer to the following item.

Evacuate air from refrigeration system.


Charge system with refrigerant and inspect for leakage of refrigerant.

Specified amount: 500 ± 50 g (17.64 ± 1.76 oz.)

2. DRAIN ENGINE COOLANT FROM RADIATOR


HINT:

It is not necessary to drain out all coolant.

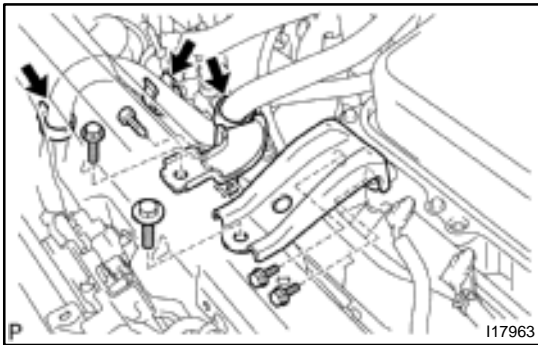

3. REMOVE BRACKETS

- (a) Remove the water hose from fan shroud.
- (b) Remove the 5 bolts and 2 brackets.

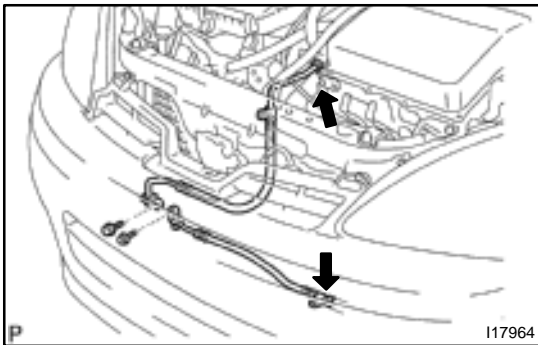

4. REMOVE SUCTION AND DISCHARGE HOSES

- (a) Remove the 2 bolts and disconnect the both hoses.

Torque: 10 N·m (100 kgf-cm, 7 ft-lbf)

HINT:

At the time of installation, please refer to the following item.

Lubricate 2 new O-rings with compressor oil and install them to the tubes.

- (b) Loosen the 2 nuts and remove the both hoses.

Torque:


Suction hose 32 N·m (330 kgf-cm, 24 ft-lbf)

Discharge hose 22 N·m (225 kgf-cm, 16 ft-lbf)


HINT:

At the time of installation, please refer to the following item.


Lubricate 2 new O-rings with compressor oil and install them to the tubes.

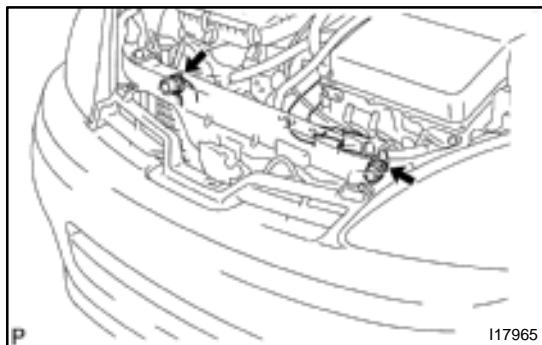**5. DISCONNECT RADIATOR HOSES FROM RADIATOR AND CONDENSER MODULE**


- (a) Using pliers, grip the claw of the hose clip and slide the clip along the hose.
- (b) Disconnect the radiator hoses.

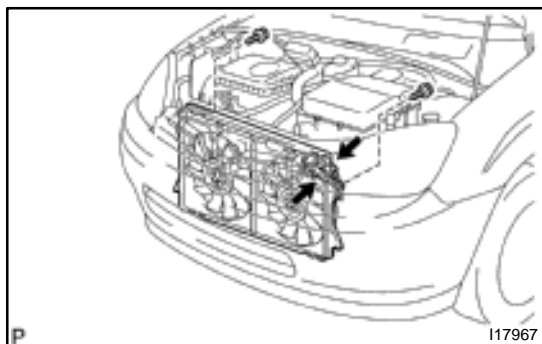**6. REMOVE CONDENSER FAN WITH FAN SHROUD**

- (a) Disconnect the 2 connectors.
- (b) Remove the 2 bolts.

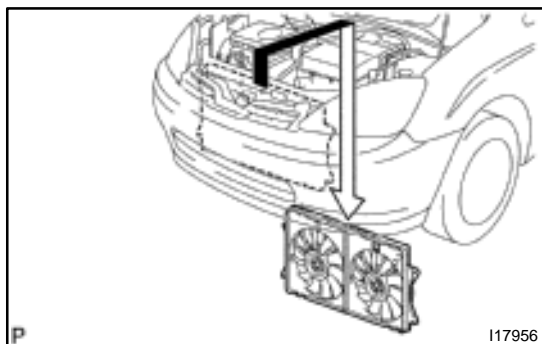


- (c) Pull up the condenser fan with fan shroud until it is removed from the radiator and condenser module.
- (d) Pull it downward to remove it.

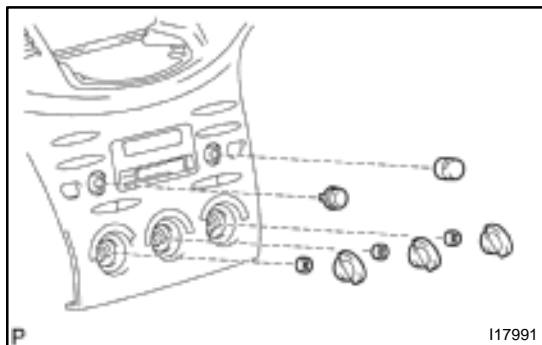

DISASSEMBLY


1. REMOVE CONTROL KNOBS

- (a) Pull out the 5 control knobs.
- (b) Remove the 3 nuts.

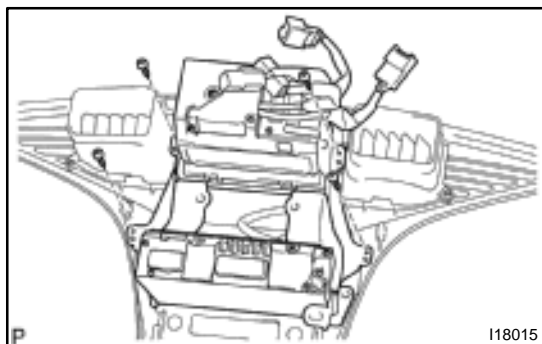


2. REMOVE MULTI DISPLAY & RADIO RECEIVER ASSEMBLY

Remove the 4 screws and multi display & radio receiver assembly.

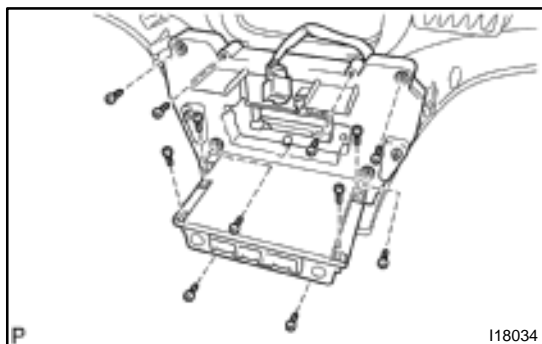


3. REMOVE A/C AMPLIFIER

- (a) Remove the 12 screws and cover.

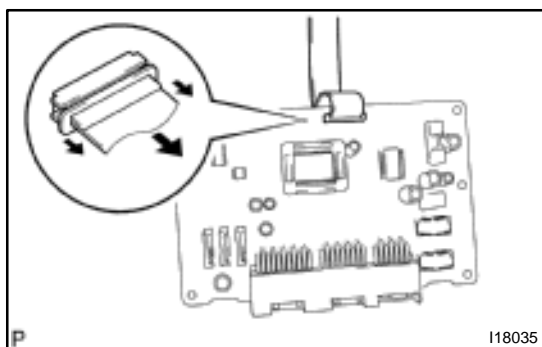


- (b) Unlock the connector lock and pull out the flat harness from center cluster module.

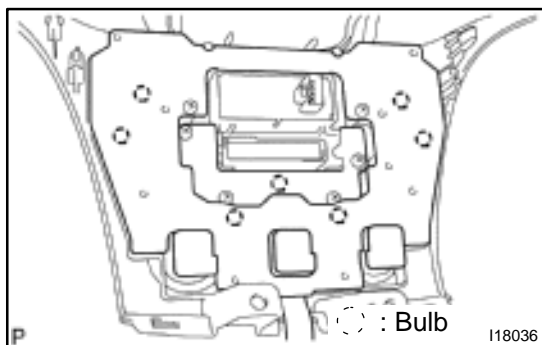


4. REMOVE BULBS

Using a screwdriver, turn the bulb to the left and pull out the bulb.

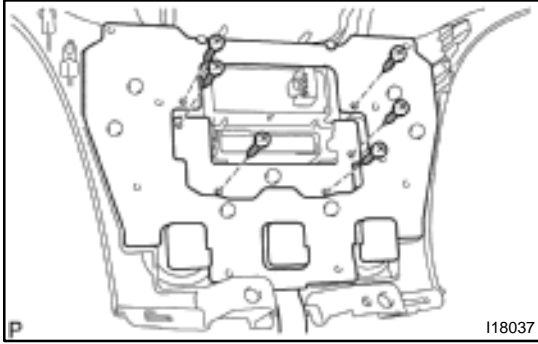**5. REMOVE CLUSTER MODULE CIRCUIT**

Remove the 6 screws and center cluster module.

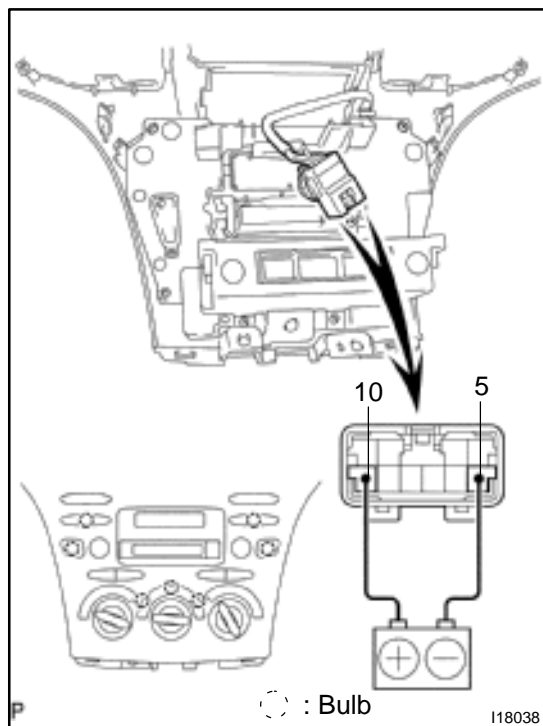


INSPECTION

1. INSPECT ILLUMINATION OPERATION

- (a) Connect the positive (+) lead from the battery to terminal 5 and negative (–) lead to terminal 10, then check that the illumination lights up.


If operation is not as specified, check the faulty bulb.

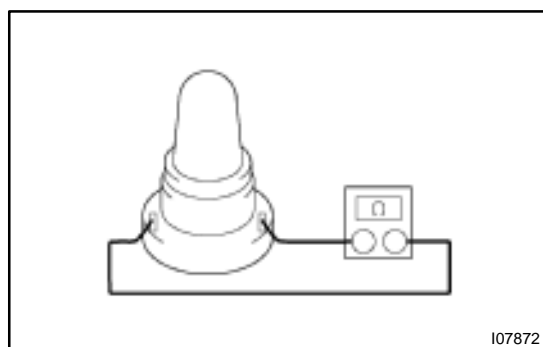

- (b) Apply the tester as shown in the illustration to the test for continuity.

If continuity exists, replace the heater control.


If no continuity exists, replace the bulb.

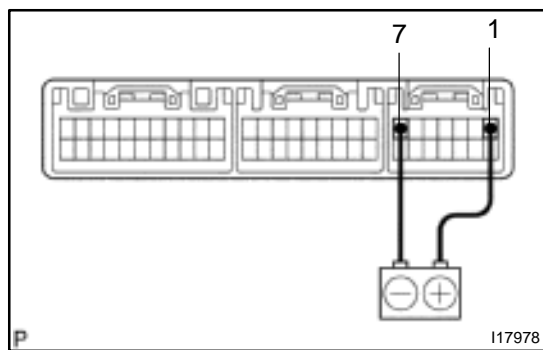

2. INSPECT INDICATOR OPERATION

Connect the positive (+) lead from the battery to terminal 1 and negative (–) lead to terminal 7, then check that the illumination light up.

If operation is not as specified, proceed next inspection.

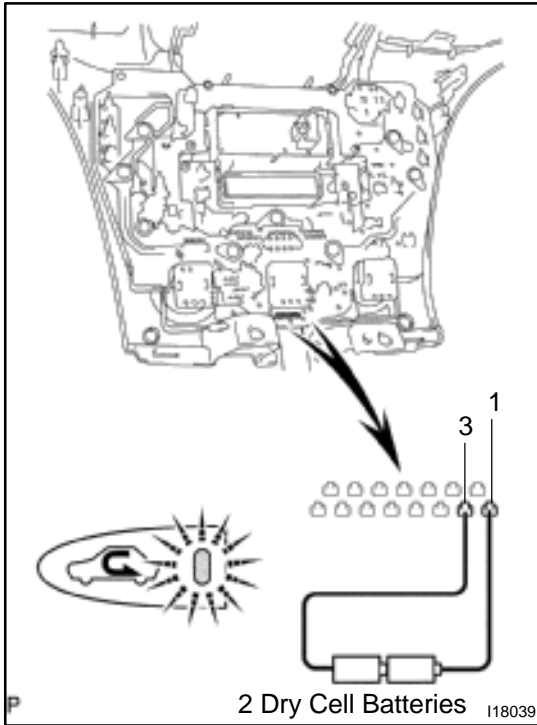


3. INSPECT F/R INDICATOR OPERATION

Connect the positive (+) lead from the two 1.5 V dry cell batteries to terminal 1 and negative (-) lead to terminal 3, then check that the F/R indicator lights up.

If operation is as specified, replace the A/C amplifier.

If operation is not as specified, replace the cluster module circuit.

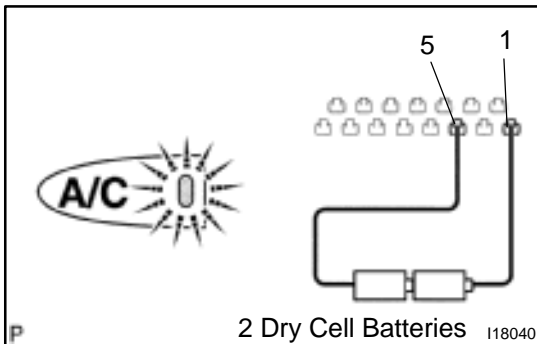


4. INSPECT A/C INDICATOR OPERATION

Connect the positive (+) lead from the two 1.5 V dry cell batteries to terminals 1 and negative (-) lead to terminal 5, then check that the A/C indicator lights up.

If operation is as specified, replace the A/C amplifier.

If operation is not as specified, replace the cluster module circuit.

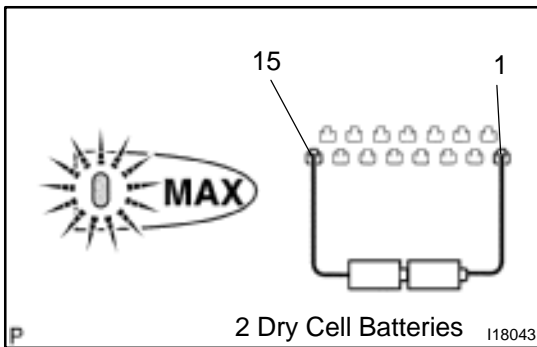


5. INSPECT MAX. A/C INDICATOR OPERATION

Connect the positive (+) lead from the two 1.5 V dry cell batteries to terminal 1 and negative (-) lead to terminal 15, then check that the MAX. A/C indicator lights up.

If operation is as specified, replace the A/C amplifier.

If operation is not as specified, replace the cluster module circuit.

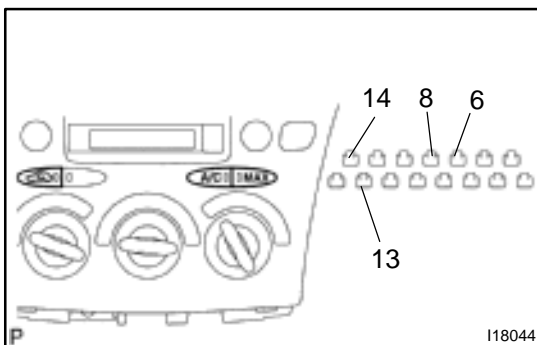


6. INSPECT SWITCH CONTINUITY

Check the continuity between terminals while switch is pressed, as shown in the chart.

Switch	Tester connection	Specified condition
F/R	6 - 13	Below 500 Ω
A/C	8 - 13	Below 500 Ω
MAX. A/C	13 - 14	Below 500 Ω

If operation is not as specified, replace the cluster module circuit.

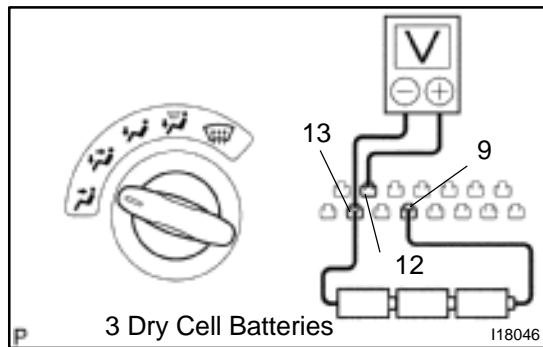


7. INSPECT MODE CONTROL DIAL OPERATION

- Check that the resistance between terminals 12 and 13 is approx. 3.0 k Ω .
- Connect the positive (+) lead from the three 1.5 V dry cell batteries to terminal 9 and negative (–) lead to terminal 13.
- Connect the positive (+) lead from the tester to terminal 12 and negative (–) lead to terminal 13, then check that the voltage at each dial position, as shown in the chart below.

Dial position	Specified condition
FACE → B/L	0.7 V
B/L → FOOT	2.0 V
FOOT → F/D	3.2 V
F/D → DEF	4.4 V


If operation is not as specified, replace the cluster module circuit.

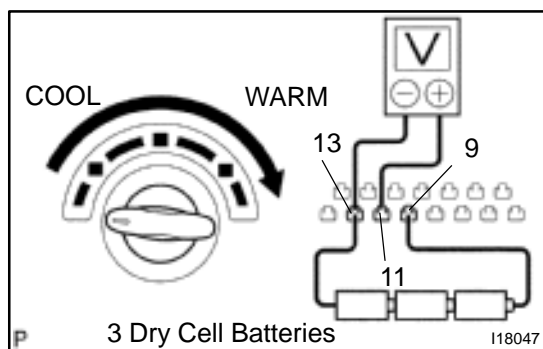

8. INSPECT TEMPERATURE CONTROL DIAL OPERATION

- Check that the resistance between terminals 11 and 13 is approx. 3.0 k Ω .
- Connect the positive (+) lead from the three 1.5 V dry cell batteries to terminal 9 and negative (–) lead to terminal 13.
- Connect the positive (+) lead from the tester to terminal 11 and negative (–) lead to terminal 13.
- Gradually turn the dial from "MAX. COOL" side to "MAX. WARM" side and check that the voltage increase from 4.5 to 0.4 V.

If operation is not as specified, replace the cluster module circuit.

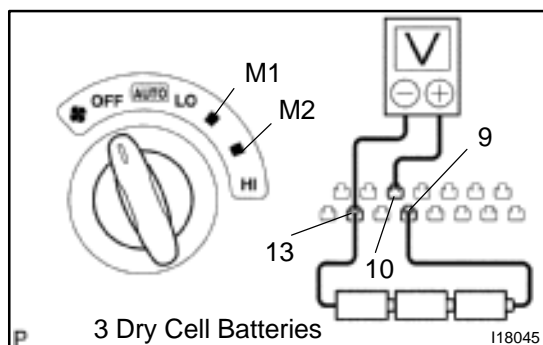

9. INSPECT BLOWER SPEED CONTROL DIAL OPERATION

- Check that the resistance between terminals 10 and 13 is approx. 3.0 k Ω .
- Connect the positive (+) lead from the three 1.5 V dry cell batteries to terminal 9 and negative (–) lead to terminal 13.

- (c) Connect the positive (+) lead from the tester to terminal 10 and negative (–) lead to terminal 13 then check that the voltage at each dial position, as shown in the chart below.

Dial position	Specified condition
OFF → AUTO	1.45 V
AUTO → LO	2.25 V
LO → M1	3.05 V
M1 → M2	3.85 V
M2 → H1	4.65 V

If operation is not as specified, replace the cluster module circuit.